
GEK-83850

DRIVE SYSTEM INSTRUCTIONS

# COLD START BATTERY MODULE

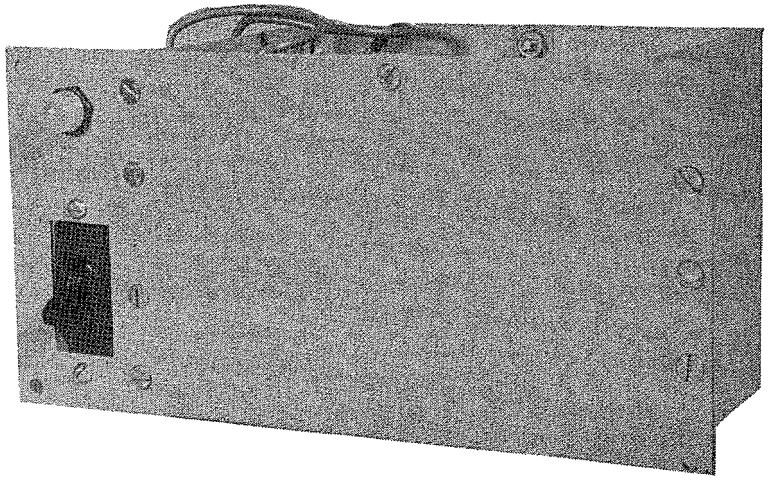

**DRIVE SYSTEMS OPERATIONS**
**SALEM, VIRGINIA 24153**

GENERAL ELECTRIC

# COLD START BATTERY MODULE

(GEK-83850)

## FUNCTION

The Cold Start Battery Module supplies the necessary governor power to start a generator engine and bring the engine to a self-sustaining idle speed. This module is mounted on the generator synchronizing panel door. Figure 1 is a schematic diagram of this module.

## THEORY OF OPERATION

The Cold Start Battery Module consists of a 12 volt (nominal) battery with a series 10 Ampere circuit breaker and terminal board connections for parallel connected engine governors. A "BATTERY" indicating light illuminates when the module breaker is on. The only time the circuit breaker (and therefore the battery) should be on is during engine starting or at rated engine speed. The circuit breaker should be off when the engines are not running. When the generator engine reaches idle speed, the governor integral supply sustains the governor power requirements and the battery's load is minimal. At rated engine speed the generators supply the necessary voltage to recharge the battery, provided the circuit breaker is on.

## REMOVAL AND REPLACEMENT PROCEDURES

### Removal

1. Remove all power to the panel and turn the module circuit breaker off.
2. See Figure 1 for electrical details. Disconnect the wires at the terminal board, noting their location to ensure proper reconnection.
3. Remove the four screws which hold the module in place and remove the module.

### Replacement

With all the power to the panel disconnected, replace the module by reversing the **above** removal procedure.

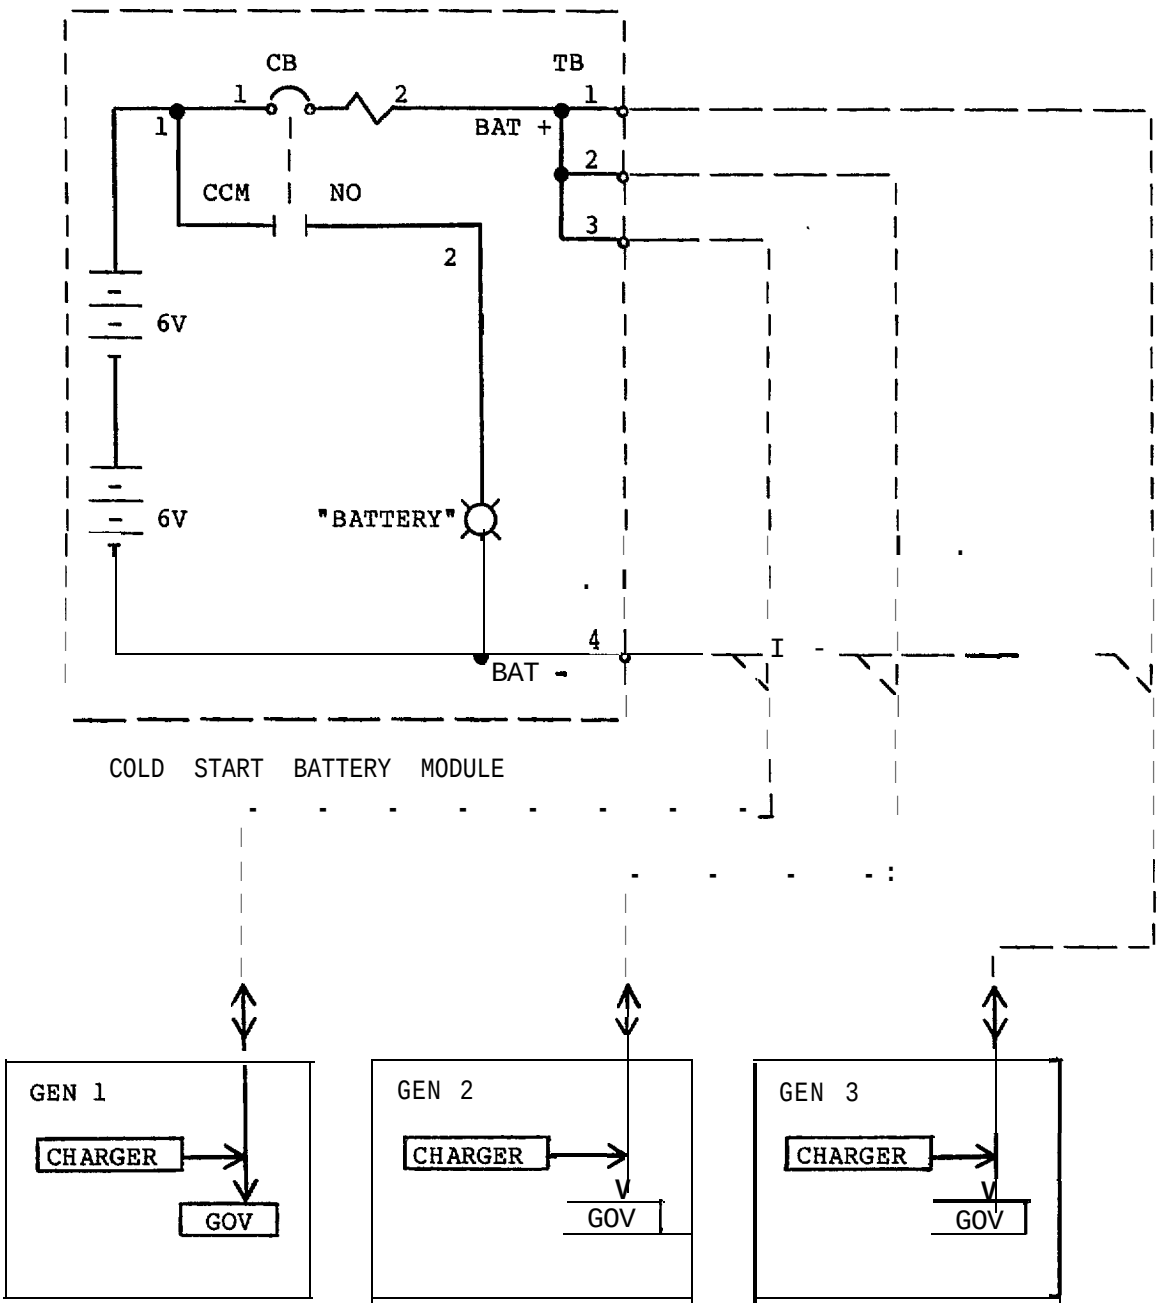



Figure 1 - Cold Start Battery Module Schematic Diagram


GENERAL ELECTRIC COMPANY . DRIVE SYSTEMS OPERATIONS
SALEM, VIRGINIA 24153

GENERAL ELECTRIC

GEK-83850

DRIVE SYSTEM INSTRUCTIONS

# COLD START BATTERY MODULE

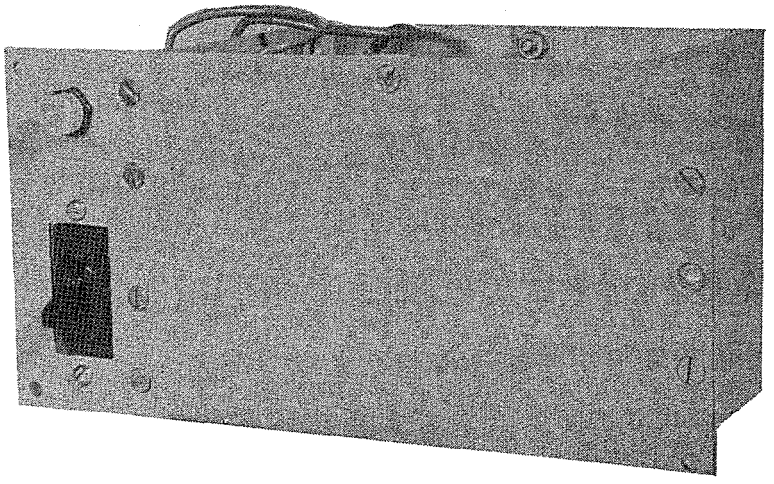

DRIVE SYSTEMS OPERATIONS
SALEM, VIRGINIA 24153

GENERAL ELECTRIC

# COLD START BATTERY MODULE

(GEK-83850)

## FUNCTION

The Cold Start Battery Module supplies the necessary governor power to start a generator engine and bring the engine to a self-sustaining idle speed. This module is mounted on the generator synchronizing panel door. Figure 1 is a schematic diagram of this module.

## THEORY OF OPERATION

The cold Start Battery Module consists of a 12 volt (nominal) battery with a series 10 Ampere circuit breaker and terminal board connections for parallel connected engine governors. A "BATTERY" indicating light illuminates when the module breaker is on. The only time the circuit breaker (and therefore the battery) should be on is during engine starting or at rated engine speed. The circuit breaker should be off when the engines are not running. When the generator engine reaches idle speed, the governor integral supply sustains the governor power requirements and the battery's load is minimal. At rated engine speed the generators supply the necessary voltage to recharge the battery, provided the circuit breaker is on.

## REMOVAL AND REPLACEMENT PROCEDURES

### Removal

1. Remove all power to the panel and turn the module circuit breaker off.
2. See Figure 1 for electrical details. Disconnect the wires at the terminal board, noting their location to ensure proper reconnection.
3. Remove the four screws which hold the module in place and remove the module.

### Replacement

With all the power to the panel disconnected, replace the module by reversing the above removal procedure.

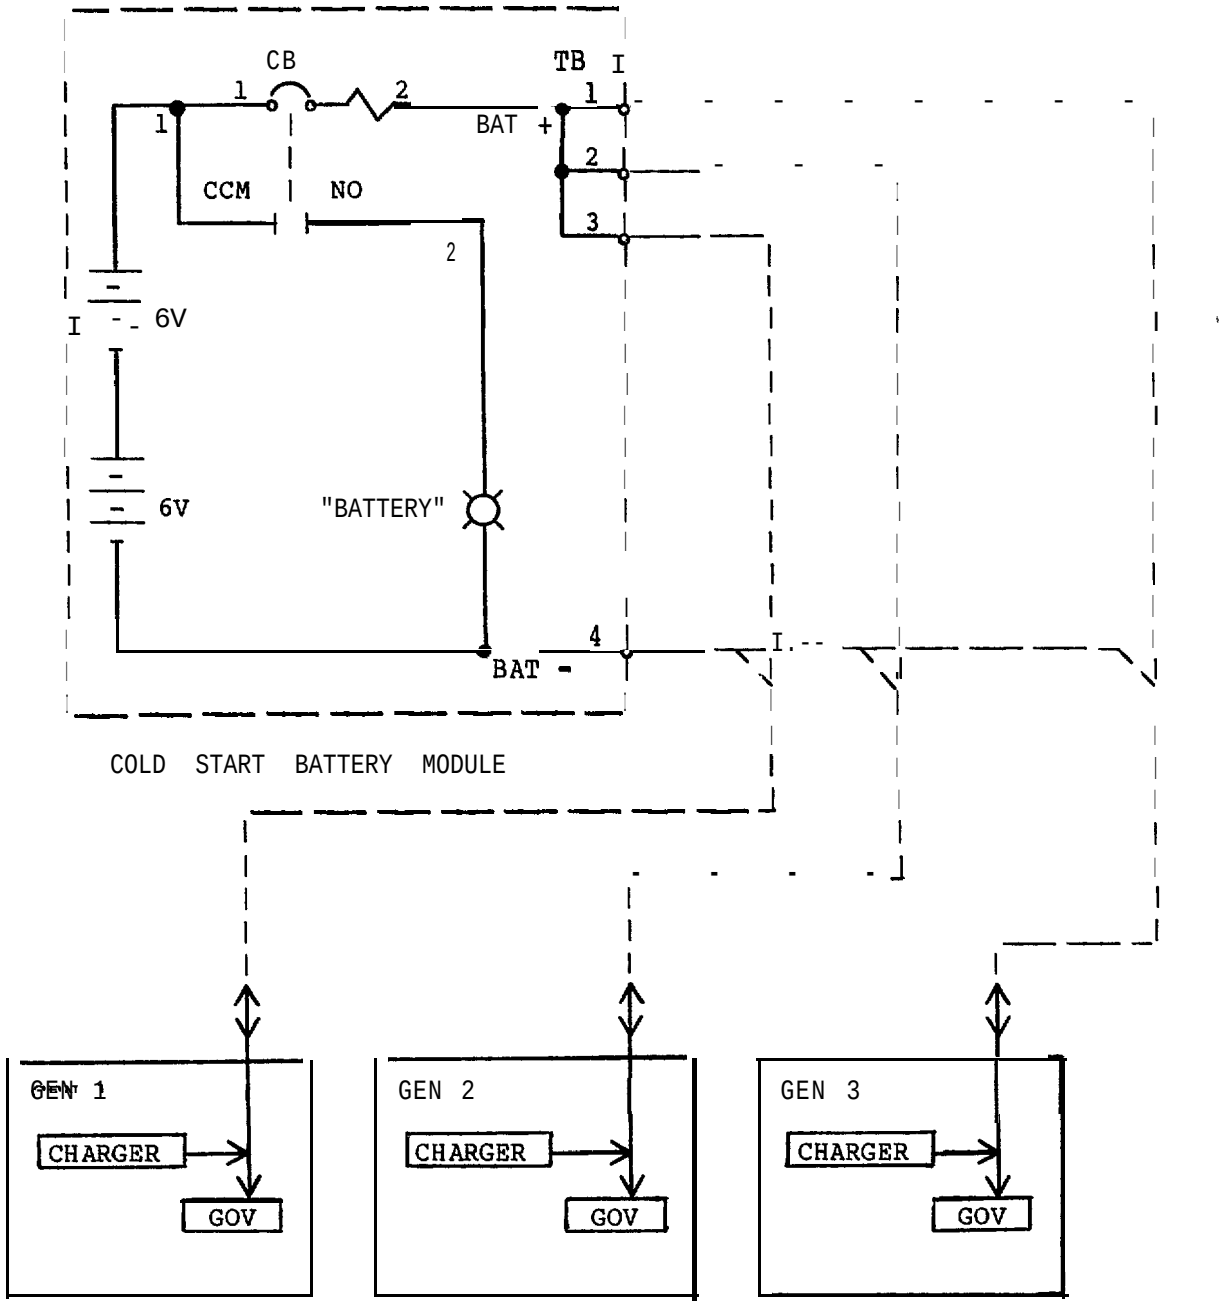



Figure 1 - Cold Start Battery Module Schematic Diagram


**GENERAL ELECTRIC COMPANY . DRIVE SYSTEMS OPERATIONS**
**SALEM, VIRGINIA 24153**

GENERAL ELECTRIC

GEK-83850

DRIVE SYSTEM INSTRUCTIONS

# COLD START BATTERY MODULE

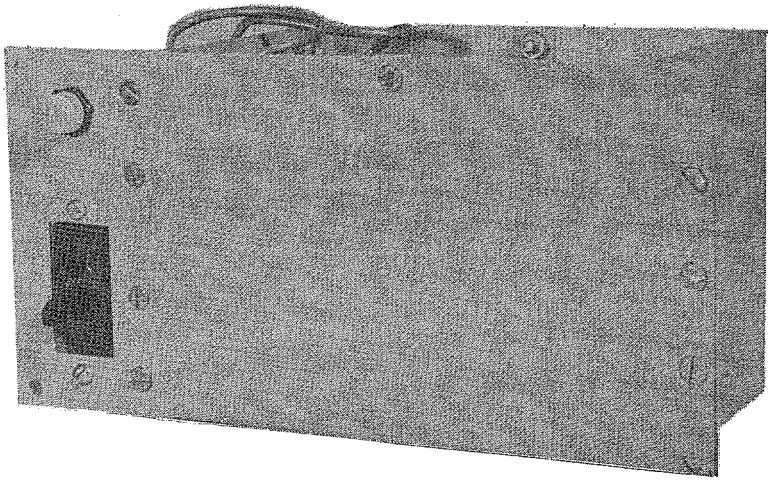

DRIVE SYSTEMS OPERATIONS
SALEM, VIRGINIA 241 53

GENERAL ELECTRIC

# COLD START BATTERY MODULE

(GEK-83850)

## FUNCTION

The Cold Start Battery Module supplies the necessary governor power to start a generator engine and bring the engine to a self-sustaining idle speed. This module is mounted on the generator synchronizing panel door. Figure 1 is a schematic diagram of this module.

## THEORY OF OPERATION

The Cold Start Battery Module consists of a 12 volt (nominal) battery with a series 10 Ampere circuit breaker and terminal board connections for parallel connected engine governors. A "BATTERY" indicating light illuminates when the module breaker is on. The only time the circuit breaker (and therefore the battery) should be on is during engine starting or at rated engine speed. The circuit breaker should be off when the engines are not running. When the generator engine reaches idle speed, the governor integral supply sustains the governor power requirements and the battery's load is minimal. At rated engine speed the generators supply the necessary voltage to recharge the battery, provided the circuit breaker is on.

## REMOVAL AND REPLACEMENT PROCEDURES

### Removal

1. Remove all power to the panel and turn the module circuit breaker off.
2. See Figure 1 for electrical details. Disconnect the wires at the terminal board, noting their location to ensure proper reconnection.
3. Remove the four screws which hold the module in place and remove the module.

### Replacement

With all the power to the panel disconnected, replace the module by reversing the above removal procedure.

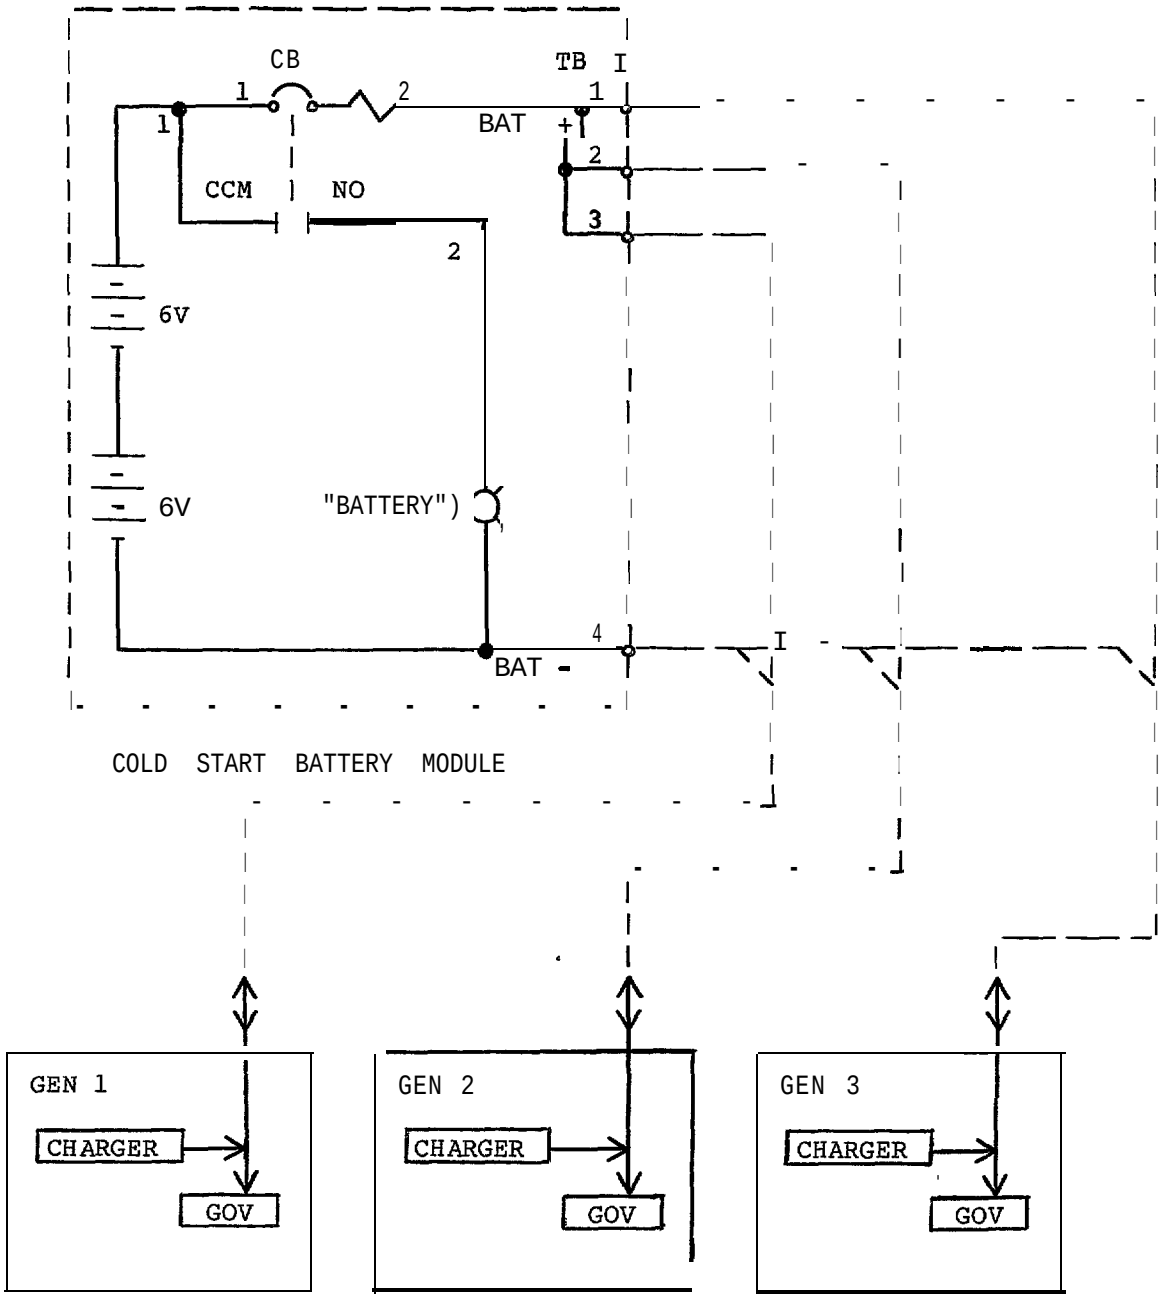



Figure 1 - Cold Start Battery Module Schematic Diagram

GENERAL ELECTRIC COMPANY . DRIVE SYSTEMS OPERATIONS
SALEM, VIRGINIA 24153

GENERAL ELECTRIC