GEK-8385

DRIVE SYSTEM INSTRUCTIONS

GROUND DETECTOR MODULE

DRIVE SYSTEMS OPERATIONS
SALEM, VIRGINIA 241 53

GENERAL@ ELECTRIC

GROUND DETECTOR MODULE

(GEK - 83855)

Copyright © 1985
by
General Electric Company

FUNCTION AND OPERATION

The Ground Detection Module (GDM) detects AC or DC line-to-ground faults and is generally located on the synchronizing generator panel door. The GDM contains five indicator lights and a test pushbutton. The top three lights indicate a ground fault on the incoming AC line. There is one light for each phase; if the light goes out, a ground fault has occurred on that phase. The bottom two lights indicate a ground fault on the SCR DC bus. In normal operation both lights should be out. If either the positive or negative DC bus of any SCR package becomes grounded, the appropriate light will come on. The test pushbutton allows you to check the operation of all five lights. Pressing the test pushbutton causes all lights to come on.

Figure 1 is a diagram of the Ground Detector Module circuitry.

REMOVAL AND REPLACEMENT PROCEDURES

REMOVAL:

1. Remove all power to the module by removing the fuses that feed the module.
2. see Figure 1 for electrical details.
3. Unplug the single Mate-N-Lock plug to the module and remove the four screws which hold the module in place. Remove the module.

REPLACEMENT: 1. With all power to the panel disconnected, replace the module by reversing the above removal procedure.

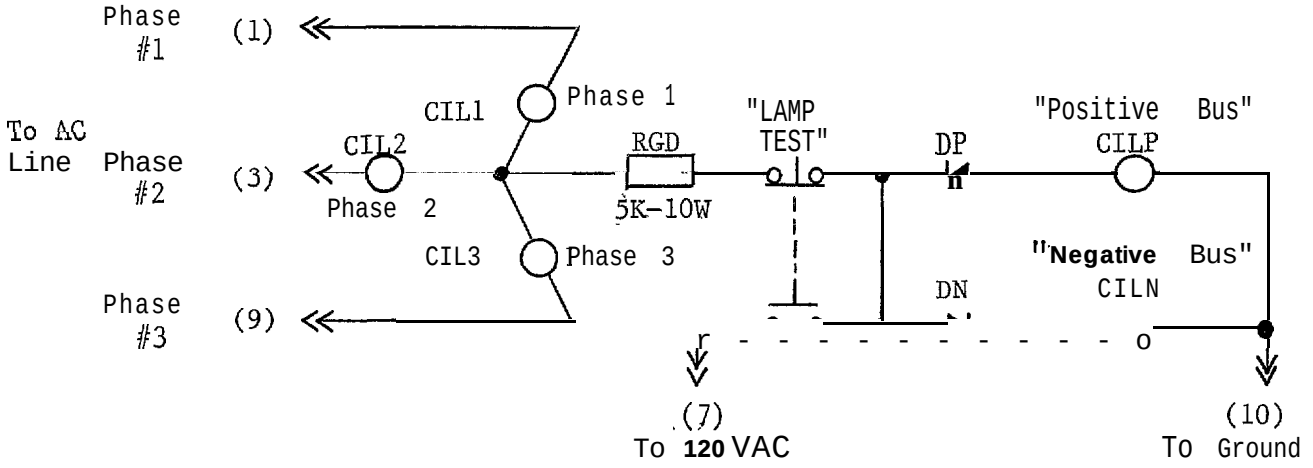


Figure 1: Ground Detector Module Circuitry

GENERAL ELECTRIC COMPANY • DRIVE SYSTEMS OPERATIONS
SALEM, VIRGINIA 24153

GENERAL ELECTRIC