GE Drive Systems

INSTRUCTIONS

"CORECOMM II" INSTALLATION AND OPERATION

WARNING - ELECTRICAL SHOCK HAZARD: You should never connect the drive to the PC while either device is powered on.

Equipment Requirements:

-- IBM PC or compatible.
-- A hard drive with at least 600K available in the C drive.
-- Serial Comm Port 1 available for use.
-- A serial cable to connect the PC to the drive.

INSTALLATION OF SOFTWARE

1. Insert the supplied disk into disk drive A.
2. Go to the "A" drive and type GO from the A:\ prompt.
   -- This will create two directories with the following programs on the C drive:
   CORECOM2 with the program corecom2.exe.
   COREDATA which will contain the drive software.

CABLE CONNECTIONS AND JUMPER SETTINGS

-- **If you have a 9 pin serial comm port,** pins 2, 3, and 5 of the 9 pin connector (PC end) need to be connected to pins 3, 2, and 7, respectively, of the 25 pin connector (drive end).
-- **If you have a 25 pin serial comm port,** pins 2, 3, and 7 of the 25 pin connector (PC end) need to be connected to pins 3, 2, and 7, respectively, of the 25 pin connector (drive end).

1. Connect Comm Port 1 of the PC to COMPL (25 pin connector) on 3TB of the drive.
   -- If communication problems occur, switch pins 2 and 3 on the 25 pin connector that attaches to the drive.
2. Place Main Control card Jumper 13 (JP13) in the 2-3 position in order to enable drive EEROM writing.

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to General Electric Company.

RUNNING THE SOFTWARE

The software is run from the CORECOM2 directory. Switch PC to ON and proceed as follows to run this software package.

1. Type in **cd corecom2** at the **C:** prompt.
   -- This will change the PC to the proper directory.
2. Type **in corecom2.**
   -- This will bring up the main menu as shown in Figure 1:
3. Switch the drive ON.
4. Load the drive with software from the PC as follows:
   a. Move the selection bar to the first selection, "A", which is EEROM Load and Verify, and press **ENTER.**
      -- The pick list will be shown (see Figure 3) if no communication errors occur.

   NOTE: *If the drive is not ON or not connected properly, a communication error message will appear (see Figure 2). Eliminate error conditions as follows:*
   -- *Turn drive ON (if this is the problem).*

   or

   -- *Turn PC and drive power OFF, recheck connections to eliminate error condition, turn PC power ON again, then perform "Running the Software" procedure again (beginning at step 1).*

   b. Use the **UP** and **DOWN** arrow keys to scroll through the pick list selections.
      -- If there are more selections than can fit on the screen, use the arrow keys to scroll the screen.
   c. Move the selection bar to the desired file and press **ENTER** key (see **NOTE** below).
      -- The EEROM loading screen should appear and drive EEROM loading should begin (see Figure 4):
      -- After a successful download the "Successful Download" screen will appear (see Figure 7):

   NOTE:
   -- *If Jumper 13 on the Main Control card is not set in the 2-3 position (EEROM write enabled), the "Jumper Error" screen will be displayed (see Figure 5).*
   -- *If the cable is disconnected, the drive reset, or the power turned OFF, the "Load Interrupt" screen will be displayed (see Figure 6).*

   If either of the two above conditions are displayed on the screen, proceed as follows:
   a. *Turn power to the PC and the drive OFF.*
   b. *Change the jumper or check the connections to correct the error condition as needed.*
   c. *Turn PC power ON and repeat the process.*
5. Refer to the appropriate Instruction Book (GEK) for operating information on the controller.

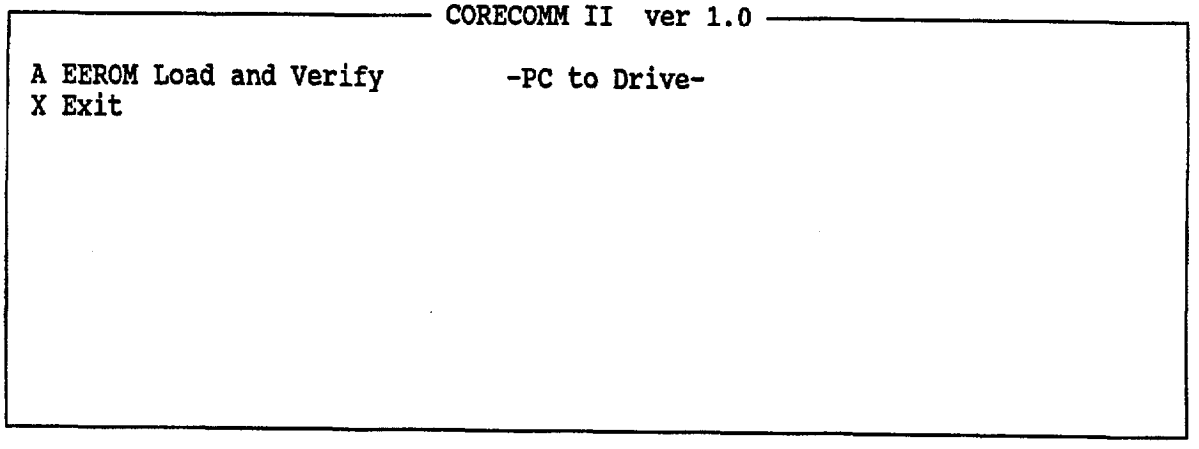


Figure 1. MAIN MENU SCREEN EXAMPLE

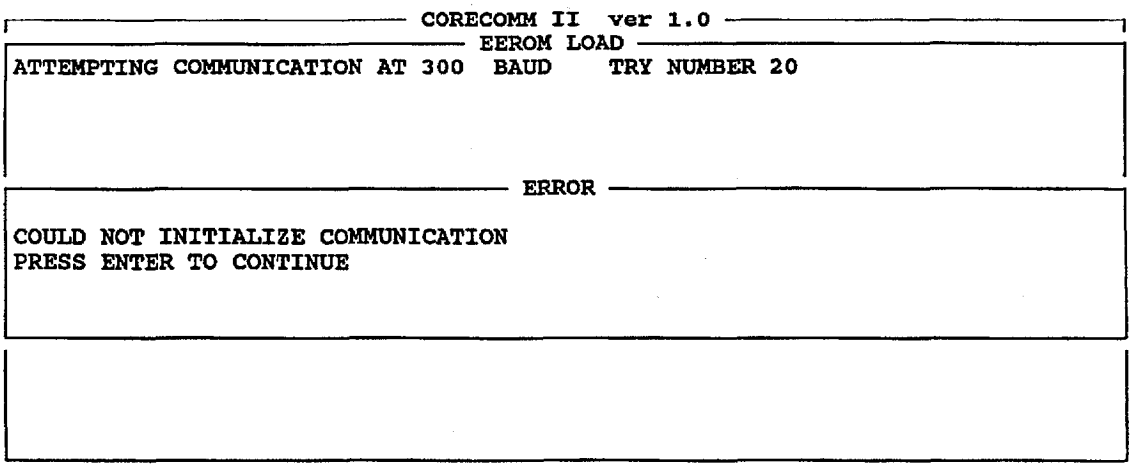


Figure 2. COMMUNICATION ERROR MESSAGE EXAMPLE

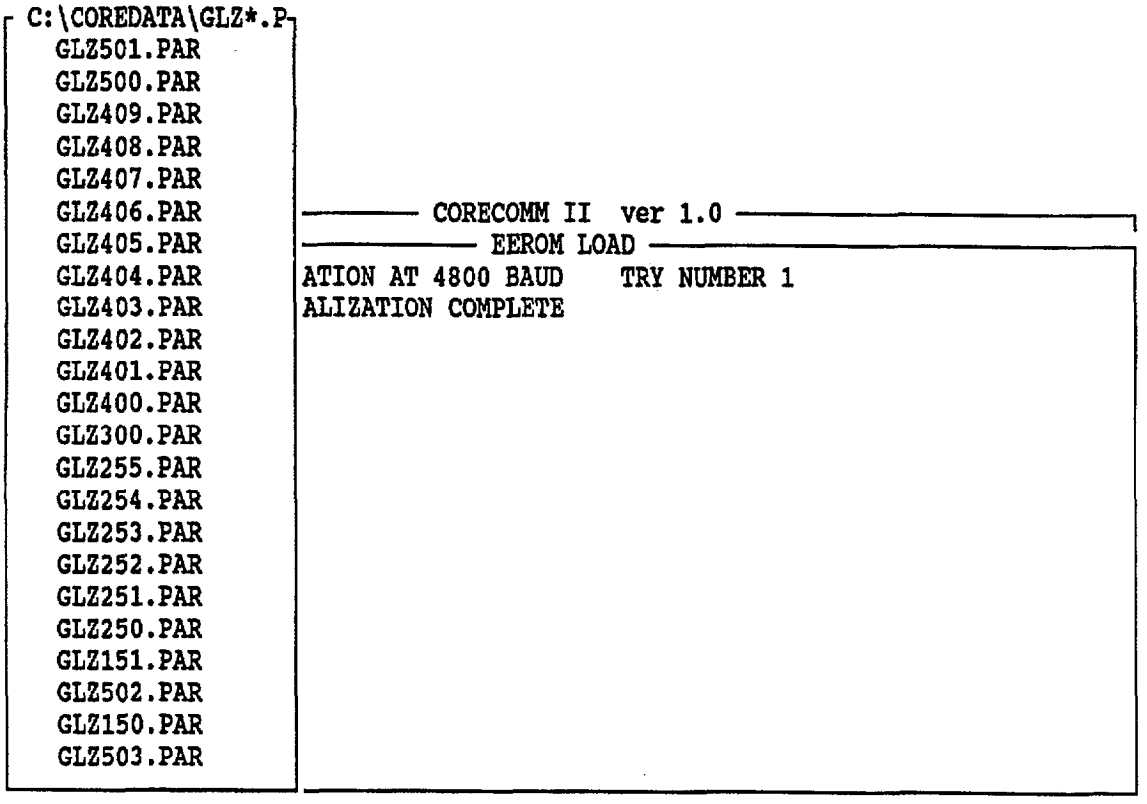


Figure 3. PICK LIST EXAMPLE

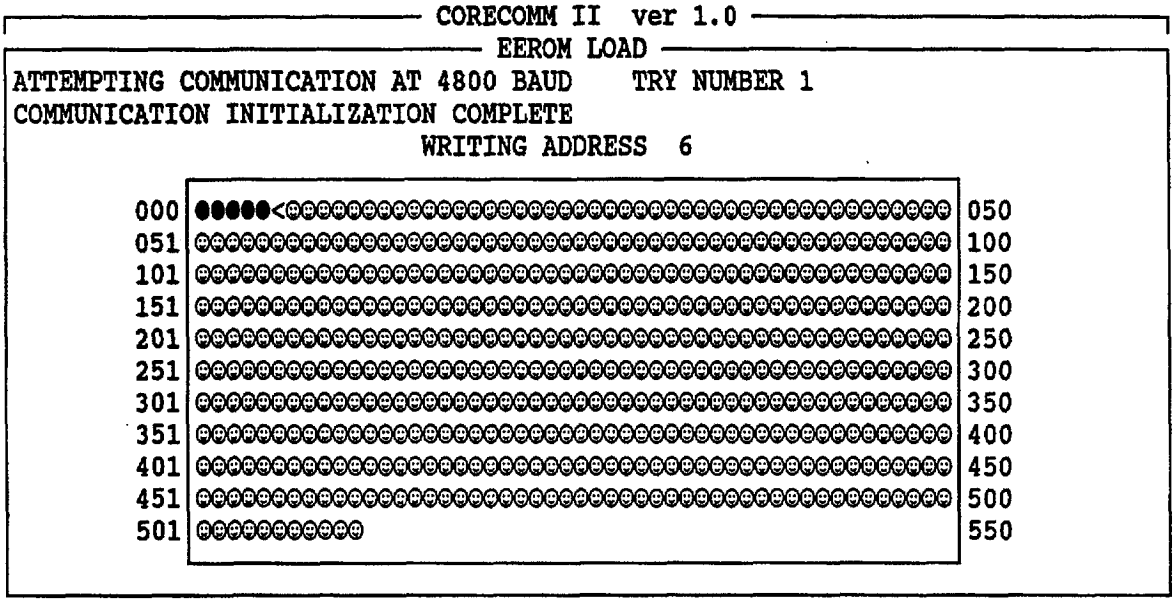


Figure 4. EEROM LOADING SCREEN EXAMPLE

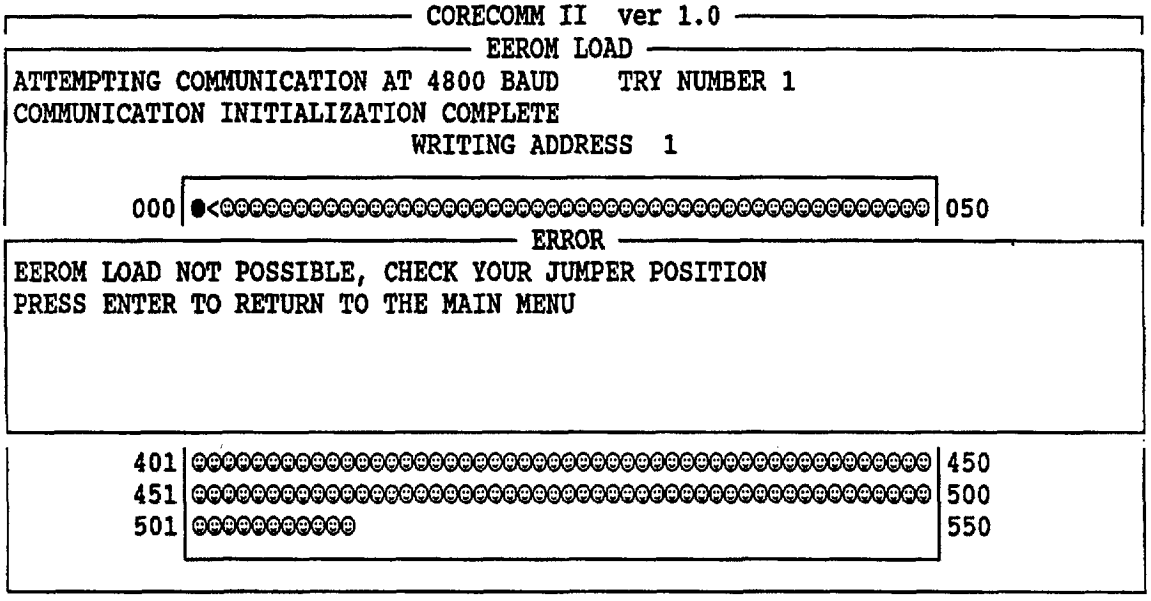


Figure 5. JUMPER ERROR SCREEN EXAMPLE

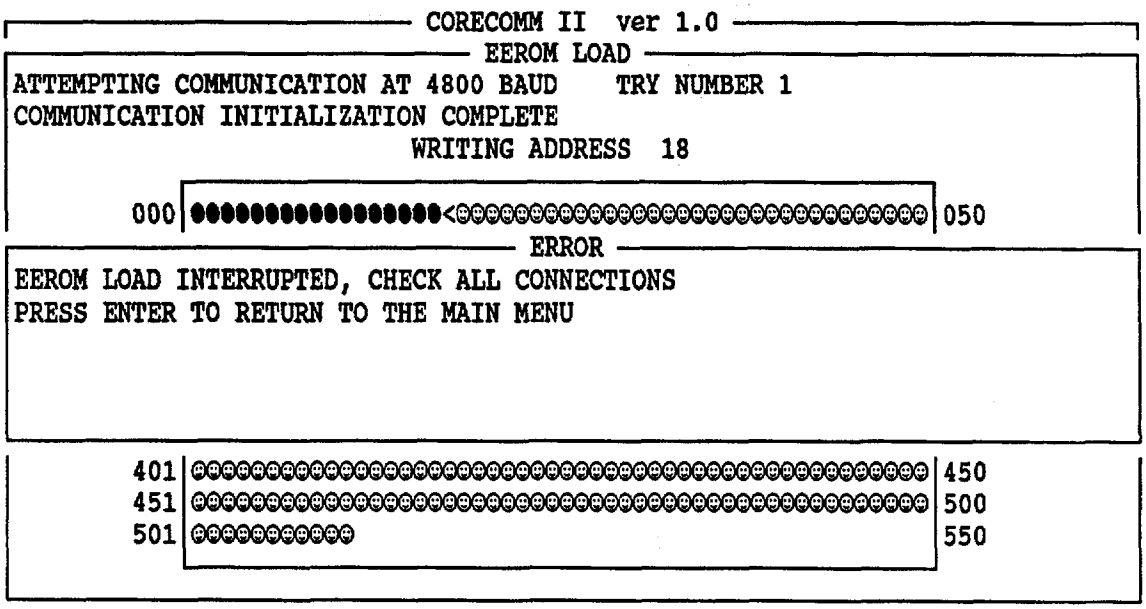


Figure 6. LOAD INTERRUPT SCREEN EXAMPLE

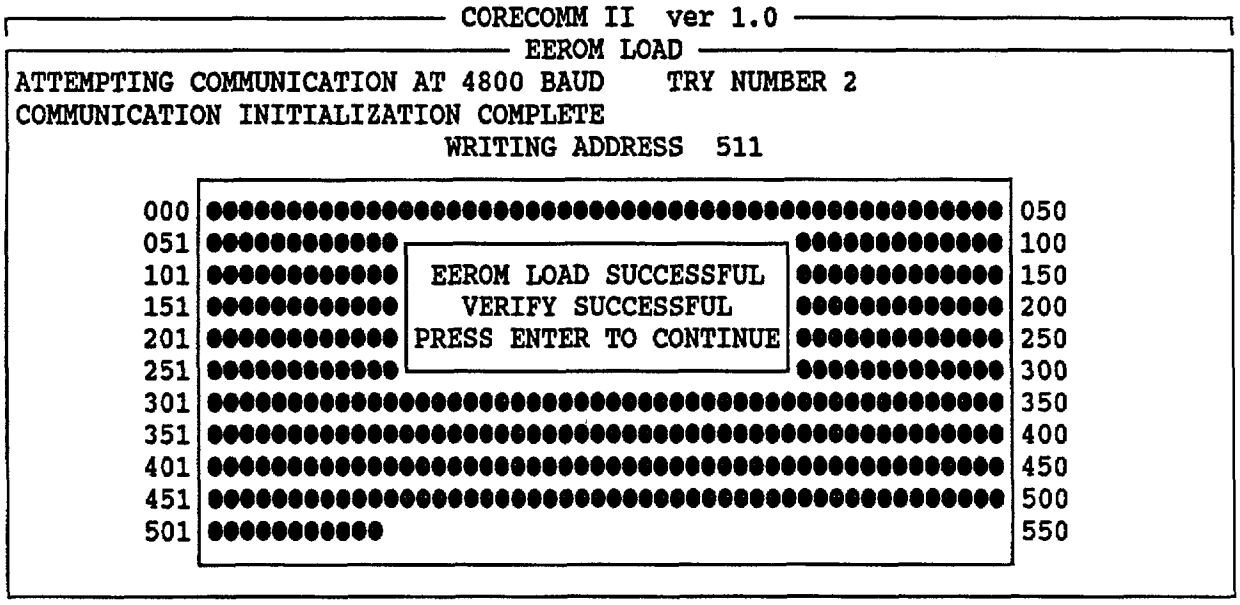


Figure 7. SUCCESSFUL DOWNLOAD SCREEN



GE Drive Systems

GEK-85734 (2/91)

General Electric Company
GE Drive Systems
1100 Lawrence Parkway
Erie, PA 16531