INSTRUCTIONS

GEK-8604B

HOW TO MOUNT POTENTIOMETERS

ON IC3012BH600 AND IC3012BH700 MASTER SWITCHES

Before any adjustments, servicing, parts replacement or any other act is performed requiring physical contact with the electrical working components or wiring of this equipment, DISCONNECT THE BATTERY AND DISCHARGE CAPACITOR 1C.

POTENTIOMETER MOUNTING BRACKET

The master switch potentiometer mounting bracket prevents rotation of the potentiometer during operation of the master switch while permitting free flexing of the potentiometer. Free flexing of the potentiometer body is necessary to maintain constant contact pressure on the resistance element and prevent unnecessary loading of the potentiometer bearings.

NOTE: It is recommended that at the time of potentiometer replacement, the potentiometer mounting bracket be replaced also.

MOUNTING PROCEDURE

Attach the potentiometer mounting bracket to the switch. Slide the potentiometer shaft through the potentiometer mounting bracket and the bearing housing. Insert the tab on the potentiometer into the hole provided in the potentiometer mounting bracket.

Position the potentiometer so that there is a 1/16-inch clearance between the threaded portion of the potentiometer shaft and the bearing bracket. Add the potentiometer drive gear, and adjust it electrically according to instructions GEK-8073.

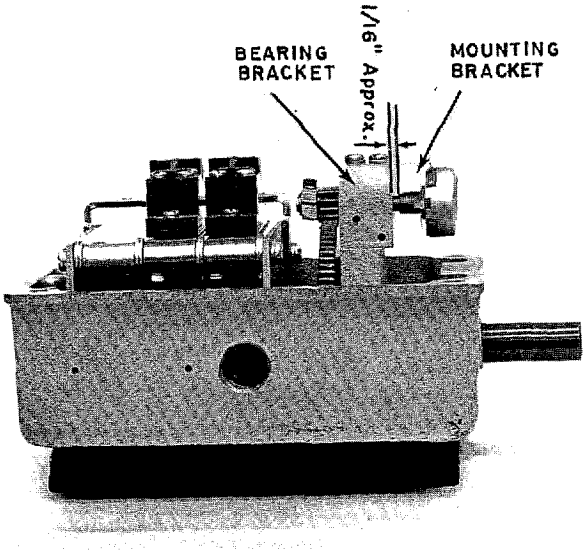


Fig. 1. Mounting the potentiometer on a IC3012BH600 master switch

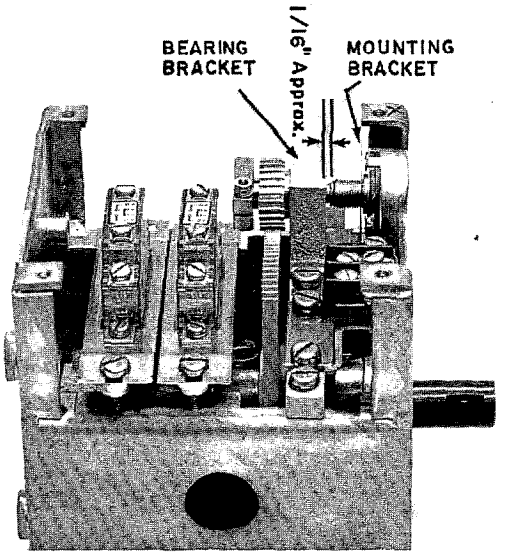


Fig. 2. Mounting the potentiometer on a IC3012BH700 master switch

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the General Electric Company.

GENERAL ELECTRIC COMPANY, INDUSTRY CONTROL PRODUCTS DEPARTMENT, SALEM, VA. 24153

10-71 (1M)

PRINTED IN U.S.A.