1A CURRENT HOLD-OFF CARD

IC4484A602-24-72 VOLTS

FUNCTION

The function of the 1A current hold-off card is to maintain truck operation in the SCR control mode, when maximum torque is required, until the truck starts to move and the current drops to a preset value. This minimizes the change in speed when 1A contactor is picked up and the motor is connected directly to the battery.

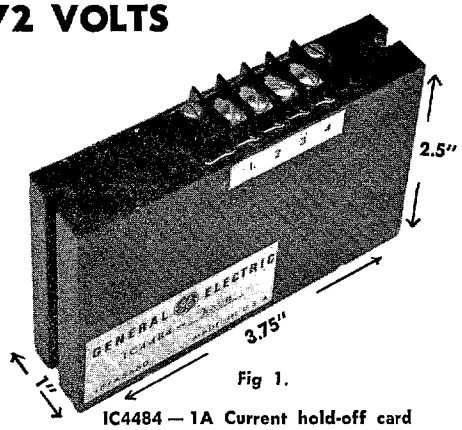


Fig 1.
IC4484 — 1A Current hold-off card

OPERATION

The 1A current hold-off card is connected in the circuit as shown in Fig. 2 and acts as a static mixer of the signal to the 1A timer card. The 1A hold-off card is current sensitive and derives its current signal by sensing the pulses across the main SCR (1 REC). When the current drops to a preset value, the hold-off card then feeds a signal to the 1A timer card (Card 1) which permits 1A contactor to operate and by-pass the SCR control. If the truck is already moving and the 1 REC current is below the preset value, the operation of the 1A by-pass contactor will be a function of time only, which is the same as when using the standard 1A timer system. This card is not compatible with anti-rollback cards (1C4484Y100K and 1C4484Y100S).

TESTING

Connect a shunt and ammeter in the battery circuit to read battery current. Next, set the current-limit potentiometer in Card 1 to the current value as recommended by truck manufacturer.


Place a jumper wire across the brake switch so that both the motor and brake can be operated together.

With the truck on the ground, first depress the brake fully, then depress the accelerator fully. The ammeter should read the current-limit value previously set.

Slowly release the brake allowing the truck to move. When the current drops to approximately 60 percent of the current-limit setting, the 1A contactor should pick up. The point at which the 1A contactor will pick up can be adjusted by slowly turning the potentiometer on Card 3. A clockwise adjustment will increase the level of current hold-off.

TROUBLE SHOOTING

If it is not possible to obtain the desired setting, disconnect terminal 1 and 2 on the 1A current hold-off card (Card 6) and check the 1A timer (Card 1) for normal time delay operation. If Card 1 functions properly, then replace the 1A current hold-off card.

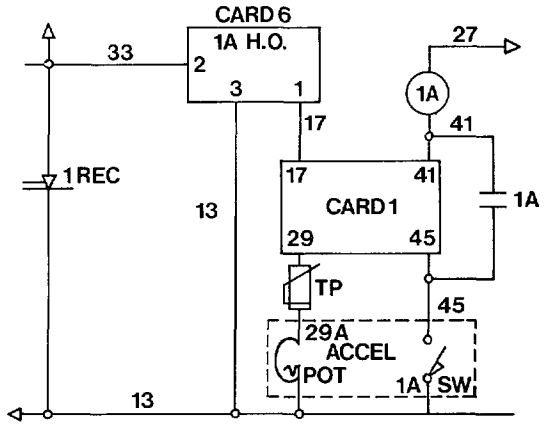

The information contained herein is intended to assist truck users and dealers in the servicing of control furnished by the General Electric Company. It does not purport to cover all details or variations in equipment or provide for every possible contingency to be met in connection with installation, operation or maintenance.

Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the truck manufacturer through his normal service channels, not directly to General Electric Company.

GENERAL ELECTRIC

(1-72)
2000

INDUSTRY CONTROL PRODUCTS DEPARTMENT SALEM, VA. 24153

Printed in U.S.A.