GE Drive Systems

IC5844K, L AND M PUSHBUTTON STATIONS

WARNING

Before any adjustments, servicing, parts replacement or any other act is performed requiring physical contact with the electrical working components or wiring of this equipment the POWER SUPPLY MUST BE DISCONNECTED.

DESCRIPTION

IC5844K, L and M pushbutton stations are wartertight units consisting of various element combinations of pushbuttons, indicating lights, and selector switches. The Type K is for one or two elements, the Type L, three, and the Type M, five elements. The elements are enclosed in a molded high-impact resistant glass filled polyester housing.

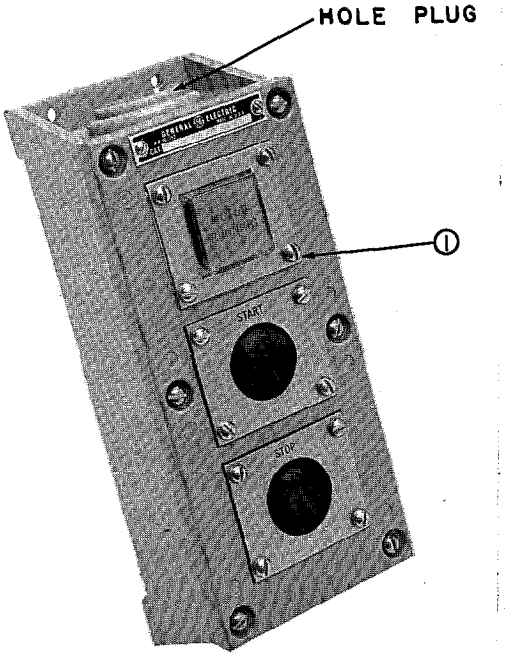


Fig. 1. IC5844L Pushbutton Station

INSTALLATION

The elements are mounted on the back of the cover as shown on Fig. 2. Remove entire front cover to wire. Connections should be made in accordance with the wiring diagram. Pushbutton elements are identified as Normally Open or Normally Closed. Use stuffing tube as specified. Use molded hole plug in unused opening, making sure that 'O' ring is in place. Replace covers carefully so that wires are not pinched, or gaskets damaged.

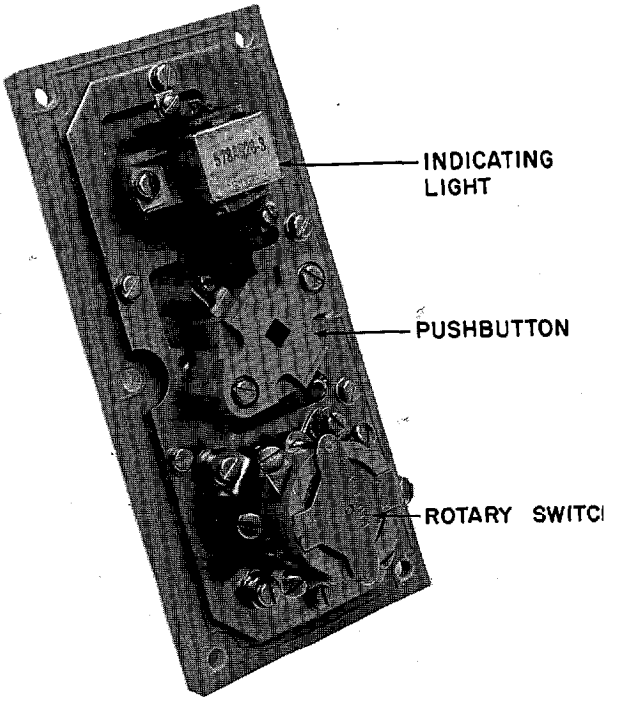


Fig. 2. IC5844L Pushbutton Station With Front Cover Removed

MAINTENANCE

To rebulb, remove 4 screws (Pt.1, Fig.1) around lens cap and change bulbs from front of case. Replacement pushbuttons or rotary switches are complete units. Remove entire front cover to replace.

These instructions do not purport to cover all details or variations in equipment, nor to provide for every possible contingency to be met during installation, operation, and maintenance. Should further information be desired or should particular problems arise that are not covered sufficiently for the purchaser's purpose, the matter should be referred to GE Drive Systems, Salem, Virginia, U.S.A.

CAGE 02989



GE Drive Systems

General Electric Company
1501 Roanoke Boulevard
Salem, Virginia 24153
(703) 387-7000