

User Manual

Yase for TestMaster



Yase – The Sequence Editor

Doc. No.: Yase_TM_HB_Sep_2018

Version: Sep 2018



S·E·A Science & Engineering
Applications Datentechnik
GmbH

Title: Yase for TestMaster
Type: User Manual
Version: Sep 2018
Date: 2018-09-13

Subject to modifications.

S.E.A. Datentechnik GmbH takes no responsibility for damage arising out of or related to this document or the information contained in it.

Product and company names listed are trademarks or trade names of their respective companies.

© Science & Engineering Applications Datentechnik GmbH

Contact

S.E.A. Datentechnik GmbH
Muelheimer Strasse 7
53840 Troisdorf
Germany

Phone: +49 2241 12737-0
Fax: +49 2241 12737-14
Email: service@sea-gmbh.com

Table of Contents

1	First of All	5
2	Introduction and General Definition	6
3	Installation.....	8
3.1	Setup Wizard.....	8
3.2	File Structure.....	9
3.3	System Configuration	10
3.4	Uninstall Yase.....	10
4	Starting Yase	11
5	The Yase Window – Panel Handling	12
6	Logging.....	14
7	Adaption	15
7.1	Import Statements.....	15
7.2	Preferences/Settings.....	17
7.2.1	“General” Settings	18
7.2.2	“GUI” Settings.....	22
7.2.3	(Default) “Printing” Settings	26
7.2.4	Yase > Setting	27
8	Toolbar	28
9	Menu	30
9.1	File Menu	30
9.2	Edit Menu	31
9.3	Sequence Menu	33
9.4	Window Menu	34
9.5	Tools Menu	35
9.6	Help Menu	35
10	Editor.....	39
10.1	Special Functions	43
10.1.1	Shrink.....	43
10.1.2	Resize Column.....	45
10.1.3	Check Function	45
10.1.4	Sequence Info	46

11	Perspectives and Views	48
12	Yase Perspective	50
12.1	Descriptions View	51
12.2	Problems View	51
12.3	Prototypes View or Statements View.....	54
12.4	Variables View for Editing	57
13	Tools.....	59
13.1	Undo-Manager	59
13.2	AutoCheck	59
13.3	AutoPrint	60
13.4	Print	62
14	Icons – Short Description.....	65
15	Abbreviations and Glossary	71

1 First of All ...

Before starting to work with the *Yase Sequence Editor* please read the complete user manual and the following information carefully.

This manual is delivered as a PDF-document with the possibility of full-text search. It is recommended to use the latest version of the *Adobe Reader*®, which you get here: <http://www.adobe.com/>

To make this manual more clearly specific structuring elements are used, which have the following meaning:

Element	Description
<i>Names</i>	are stressed by <i>italics</i> .
[Test]	Place holders are marked by squared brackets.
	Prompt
	Menu path or file path
	Definition
	The red marks highlight important notes or warnings.
	The blue marks highlight tips.
 Reference	Reference to other <i>TestMaster</i> volumes and chapters.
 Example	Example

We believe that all information in this manual is accurate. The document has been carefully reviewed for technical accuracy. In the event of technical or typographical errors, we reserve the right to make changes to subsequent editions of this document without prior notice to holders of this edition. The reader should consult the vendor if errors are suspected.

2 Introduction and General Definition

Yase is a tool, which allows to create and edit user programs, so called *sequences*. These enable the user to run and to repeat functions using predefined parameter sets. A sequence mainly consists of predefined so called statements.



- **Statement:**
Predefined command or function provided in the sequence editor to create sequences. Statements consist of input and output parameters, which can be set by user. Please note: The syntax definition of *Statements* is called *Prototypes*. From programmers view *Statements* and *Prototypes* are synonyms.
- **Sequence:**
Sequences are user definable programs, which allow to run and repeat tests with predefined parameters. Please note: The term *Sequence* designates the program created with *Yase*.
- **Process:**
Running sequences are called processes. Please note, that one sequence can be executed more then once, each one represents a process.

The sequence editor *Yase* can be used as stand-alone application or as module of other software environments – e.g. *TestMaster*, *SpaceMaster*, or *WTCS*.

The figure shows the *Yase* window, with *Yase* used as a stand-alone application. If *Yase* is part of an other software environment, the same window can be displayed by changing into another *Yase* perspective.



- **Perspective:**
A perspective is a predefined set of *Views* – configured for a special use case, e.g. creating sequences or debugging.
- **View:**
A function window, which is handled by separate menus.

The perspectives can be changed by the *Window* menu:



Window > Open Perspective > Other... > Yase

Yase includes:

- **Editor** – the kernel of Yase which contains the sequence. The editor includes a fixed area in the centre of the Yase window, a toolbar and some menus;
- **Views** – several supporting function windows with information, Views are handled by separate menus. The content of Views is linked to the editor window.
- **Tools** – functions, which are opened in separate windows and which have separate menus and toolbars;
- **General functions** – which allow to handle Yase. This includes functions as saving, handling of prototypes or settings.

i Please note, that Yase perspectives and views depend on the use case. Some of them are marked as optional in this menu.

Sequences may contain structures which are provided by special test environments (e.g. so called *subsequences*, used for *TestMaster* sequences). These elements depend on the test environment and are described in the respective user manual.

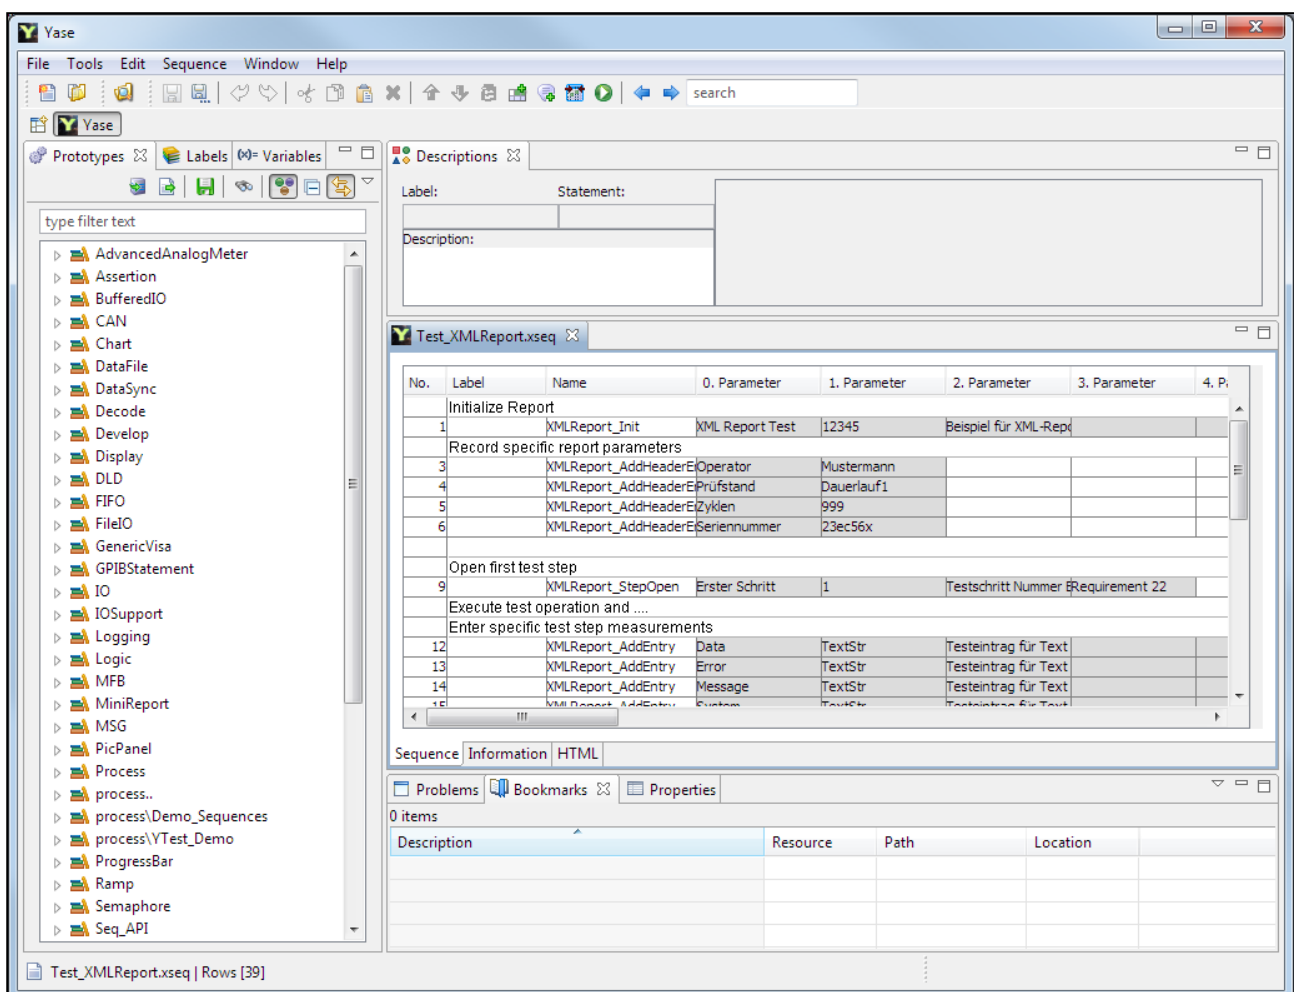


Fig. 1 Yase Working Areas – Default Perspective

3 Installation

If *Yase* is used as stand alone tool, it has to be installed by user. Therefore a wizard is provided. After installation no further configuration work is required. Changing the settings is optional and is only recommended for advanced users.

3.1 Setup Wizard

Start the installation process by mouse click on the *Yase Setup .exe* file on your installation data carrier. Please follow the instructions on the screen.

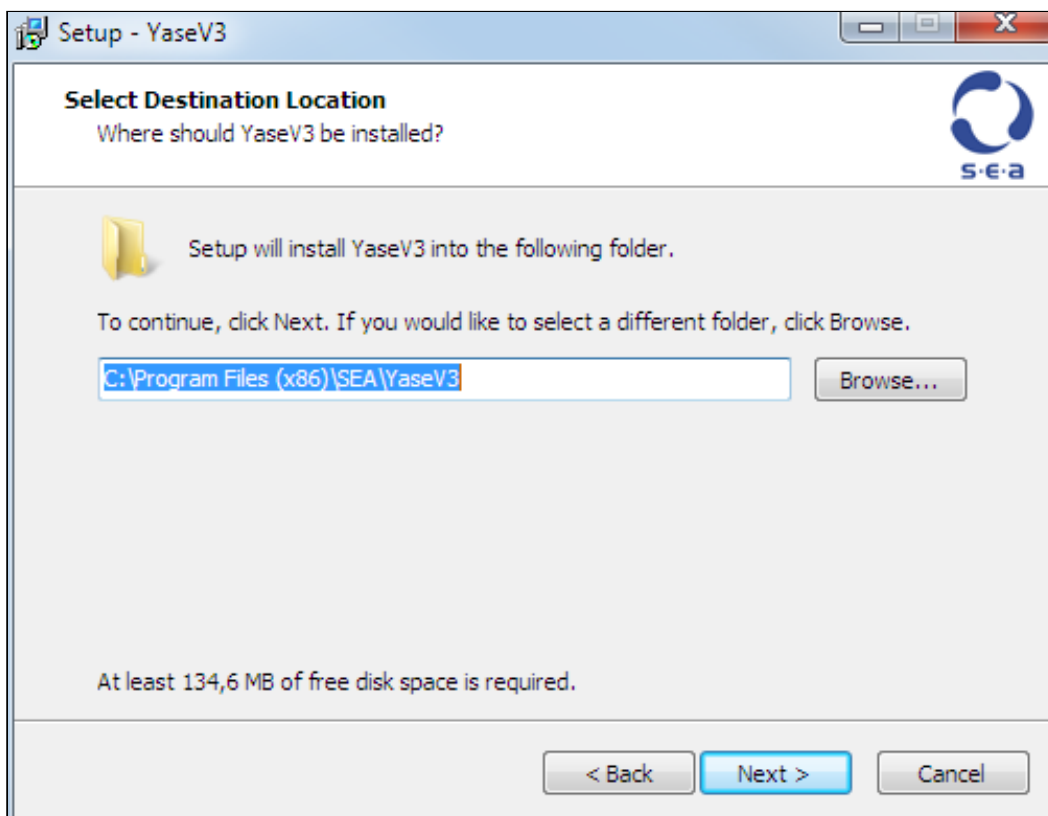


Fig. 2 Installation wizard

- Select or confirm the installation path by *Next*.
- Select the components to be installed: *Full installation*, *Compact installation* or *Custom installation* are provided. Besides you have the possibility to activate or deactivate the components manually. It is recommended to select *Full installation* with the default settings.

i Please note, that *Yase* requires a special Java version. This is installed in the *Yase* directory. Deselect the Java installation if the required version is already installed on your system.

- Select the start menu entry folder;
- select, if a desktop icon should be created;
- check your settings and start the installation process.

3.2 File Structure

Yase will by default be installed in the following directory:

 C:\\Programs\\SEA\\YaseV3

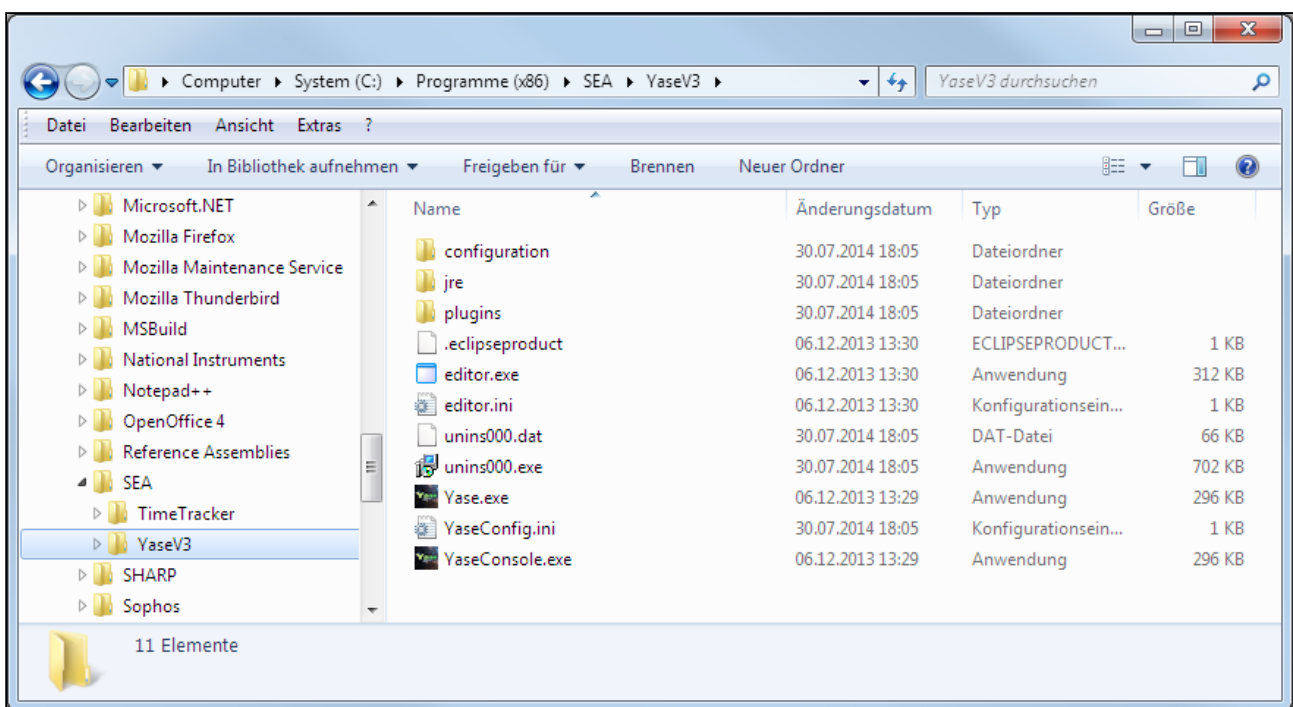


Fig. 3 File structure

The *Yase V3* directory contains three sub directories,

- *Configurations* – this directory includes the config.ini file for *Yase* configurations,
- *jre* – the folder includes the required *Java Runtime Environment*,
- *plugins* –the directory includes all required *Eclipse* plugins.

3.3 System Configuration

The *Yase* system has already been configured before delivery. It is not necessary to do any configuration work for startup.

⚠ Configuration files shall only be modified by the supplier or trained service personnel as errors may generate hazardous situations.

In case errors occur because of wrong configuration settings, please use the parameters described below or reload the configuration file from your installation data carrier.

Before starting the editor the possibility is provided to add some start parameters if *Yase* is started from the command shell.

 YaseMain [-c CONFIG_FILENAME]	By [CONFIG_FILENAME] a configuration-file can be named, which should be used by the editor.
 YaseMain -f file.xseq	The <i>-f</i> option opens the passed files after the editor has started.
 YaseMain -si	The <i>-si</i> (Single-Instance)-option checks if <i>Yase</i> is currently running. This option aborts the startup-process if a second <i>Yase</i> -instance is found. After starting the file <i>Yase</i> creates <i>YaseInstanceCheck.tmp</i> within the user <i>tmp</i> directory and deletes it when the program is closed. This options checks, if this file exists or not.
 YaseMain -help	Shows all command line options (not for <i>Yase.exe</i>).
 YaseMain -nosplash	The <i>-nosplash</i> the <i>Yase</i> - splash screen will not been shown during startup.

Tab. 1 YASE Start Parameter

3.4 Uninstall Yase

To uninstall *Yase* please use the Uninstall function provided by the *Windows Start* menu:

 Start > All Programs > SEA > Yase > Uninstall Yase

4 Starting Yase

- If used as a stand alone application, *Yase* can be started by a desktop icon or by the *Windows Start* menu.

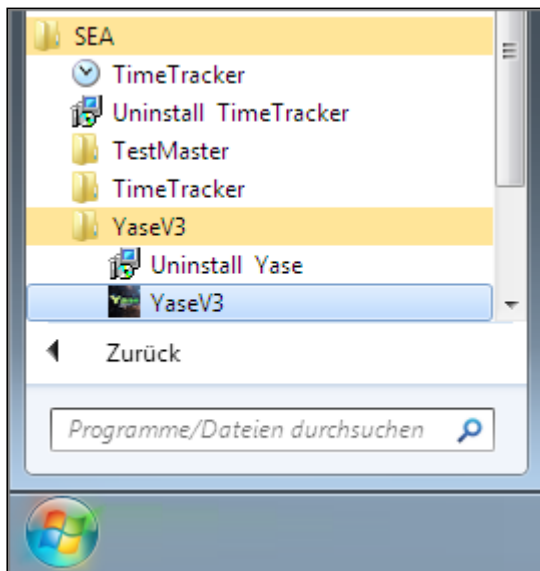


Fig. 4 YASE within Start Menu

- If started from a framework, the editor is opened from the *Sequence* menu or by one of the function buttons defined before.

5 The Yase Window – Panel Handling

The *Yase* window contains an *Editor* area and some *Views* with supporting functions. The *Editor* can not be hidden, the *Views* can be closed and reopened by the *Window > Show View* function.

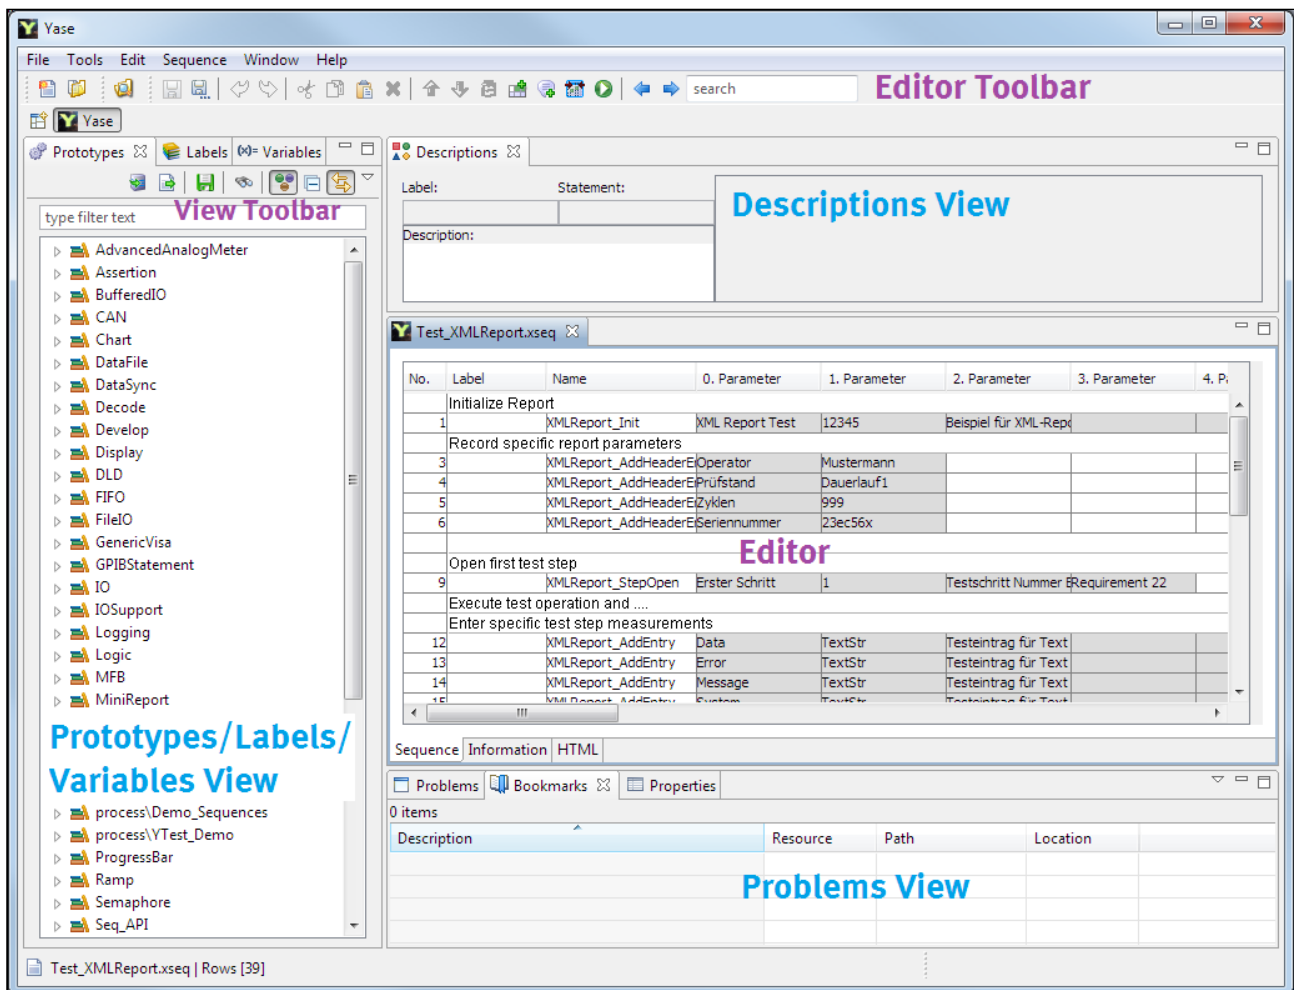


Fig. 5 Views

The position and size of each *View* can be changed; the editor position is fixed, the size is variable. The borders of all areas can be drawn by mouse to change the size.

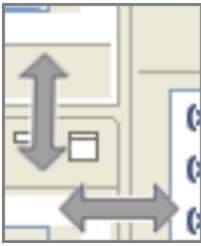


Fig. 6 Resize Elements

Each panel can be minimized , maximized , restored  and has a separate function menu .

The *Yase* window is divided into several parts. The basic part is the *Edit Field*, located in the center of the window, where the sequence is created and edited. The sequence is organized as a table. A statement is a line in the sequence tabular.

When working with several sequences at the same time all sequences are displayed in a tab pane at the top of the panel. The tabs show the sequence names. The active one is in the front, others can be brought to front by mouse click on the respective field of the tab pane. An asterisk * behind a sequence name indicates, that the sequence has been changed but not saved since opening.

A right mouse click on the tab produces a context menu with the possibility to close the active sequence, close other sequences or close all sequences. Additionally, the context menu provides functions for reorganizing the window arrangement.

The functions provided by the *Yase* tool bar, the *Sequence* menu, and the *Edit* menu only take effect on the editor.

The other components of the window are so called *Views*.

In Figure *Yase working areas – default perspective* of Chapter *Yase – The Sequence Editor* on the left hand side *Prototypes View*, the *Variables View*, *Labels* and the *Problems View* are shown in different tabs of one *View* area. The Figure *Views* above shows another configuration with any *View* occupying a separate area. Each of the *Views* can be drawn to other places in the window by mouse – e.g. as bottom display or to the right part of the panel – as shown in Figure *Views* above.

If one sequence line is selected in the *Edit Field*, detailed information about the statements and its parameters are displayed in the *Description View* above the edit field. Functions are accessed by the *Tool Bar* or the menu.

Supporting information in the *Views* as *Labels*, *Statements*, or *Errors* are connected with the information in the *Edit* area – if the *Show Data Type*  function is activated.

6 Logging

All activities done in the sequence editor are stored in a log file – default name is `logFile.txt`. This file reports all activities, e.g. for error handling and maintenance purposes. The log file contains information about the software environment, about program errors, about your activities as could be e.g. *Log in*, *Log out*, *Undo*, *Redo*, *Save* etc.

The log file is either stored in your user home directory in the *Yase* folder, if *Yase* is used as stand-alone application. If *Yase* is part of another software environment, the log messages are integrated into the log file of the software environment.

7 Adaption

7.1 Import Statements

Precondition to create *Yase* sequences is to have the respective statement list, depending on your project. This statement list can be imported from a server or loaded from a file. Therefore, the *Import from server* and *Import from file* functions are implemented.

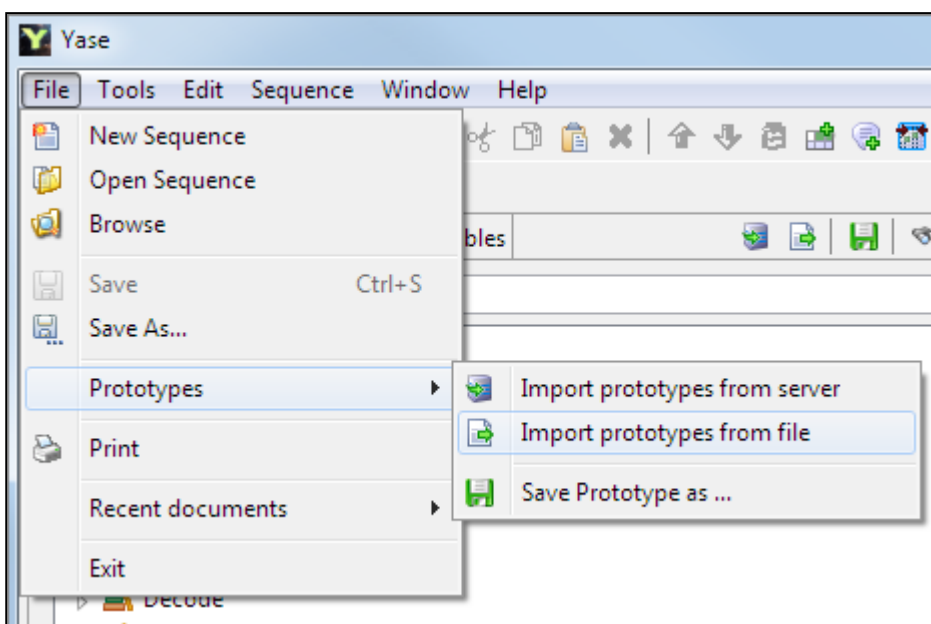


Fig. 7 Import of prototypes

The *Import from server* function imports a statement list from the system server. The statement list has to be generated before within the respective system (e.g. *SpaceMaster* or *TestMaster*).



Reference

For further information please refer to the user manual of your test system.

It is possible to generate as many statement files with various names as necessary, e.g. to work with several processes. Default file format is .xml.

Choosing *Import from server*, a window pops up where host and port have to be set. Please use 127.0.0.1 as default for the local host. The port is set in the xml_rpc.ini file.

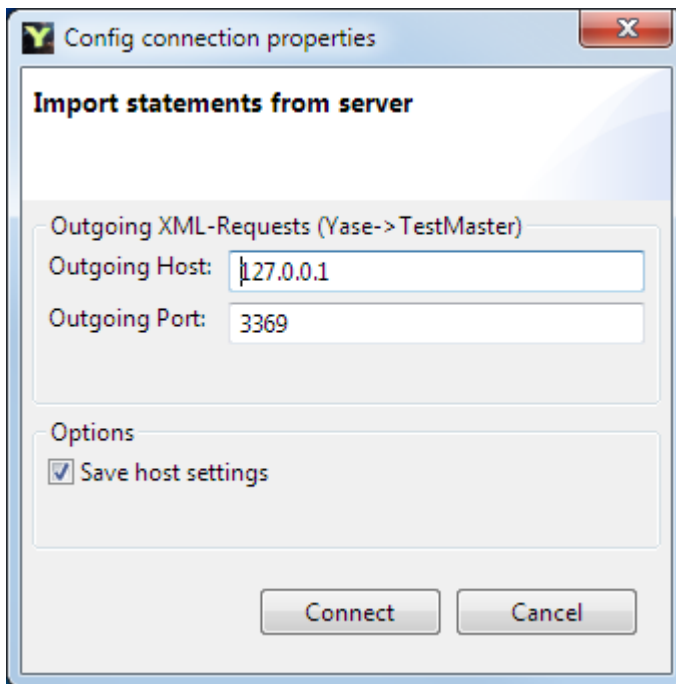


Fig. 8 Import statements from server

 #SM_Config#\xml_rpc.ini

The imported statement list can be stored as a .xml-file e.g. Prototypes_1.xml (default file name) in the sequence editor directory.

In case of incorrect configuration an Internet service may be reached which is not a system server. Then an error message is generated. Please check in the xml_rpc.ini file if the port is correct or – if a different service is using this port – choose another port number.

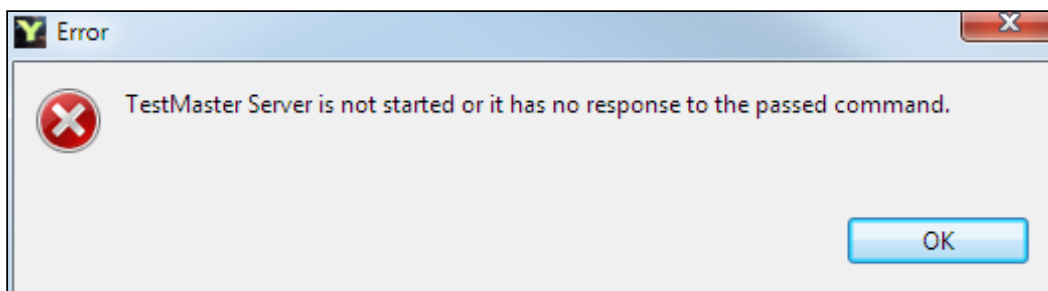


Fig. 9 Connection error

If port or host is incorrect, an error message is generated. Please check host address and port.

If this window is not shown, it might be set as invisible. Please refer to the host configuration dialog settings (refer to Section *Prototype Settings* of this Chapter *Installation*). After importing the file for the first time, starting the editor your statement list is automatically loaded from the .xml-file in the *SequenceEditor* directory. This default file .xml can be changed by settings. For more information, please refer to the Section about *Settings* below. If you select the *Import from file* function, you have the possibility to browse through your directories to choose another of the available statement files.

7.2 Preferences/Settings

The *Settings* function allows you to change colors, frame size, and other *Yase* layout parameters for your purpose. In addition, *General* functions, *Prototype*, and *Print* functions can be changed.

The *Settings* function can be reached by the *Yase Window* menu:

 Window > Preferences > Yase > Yase General Settings > Config...

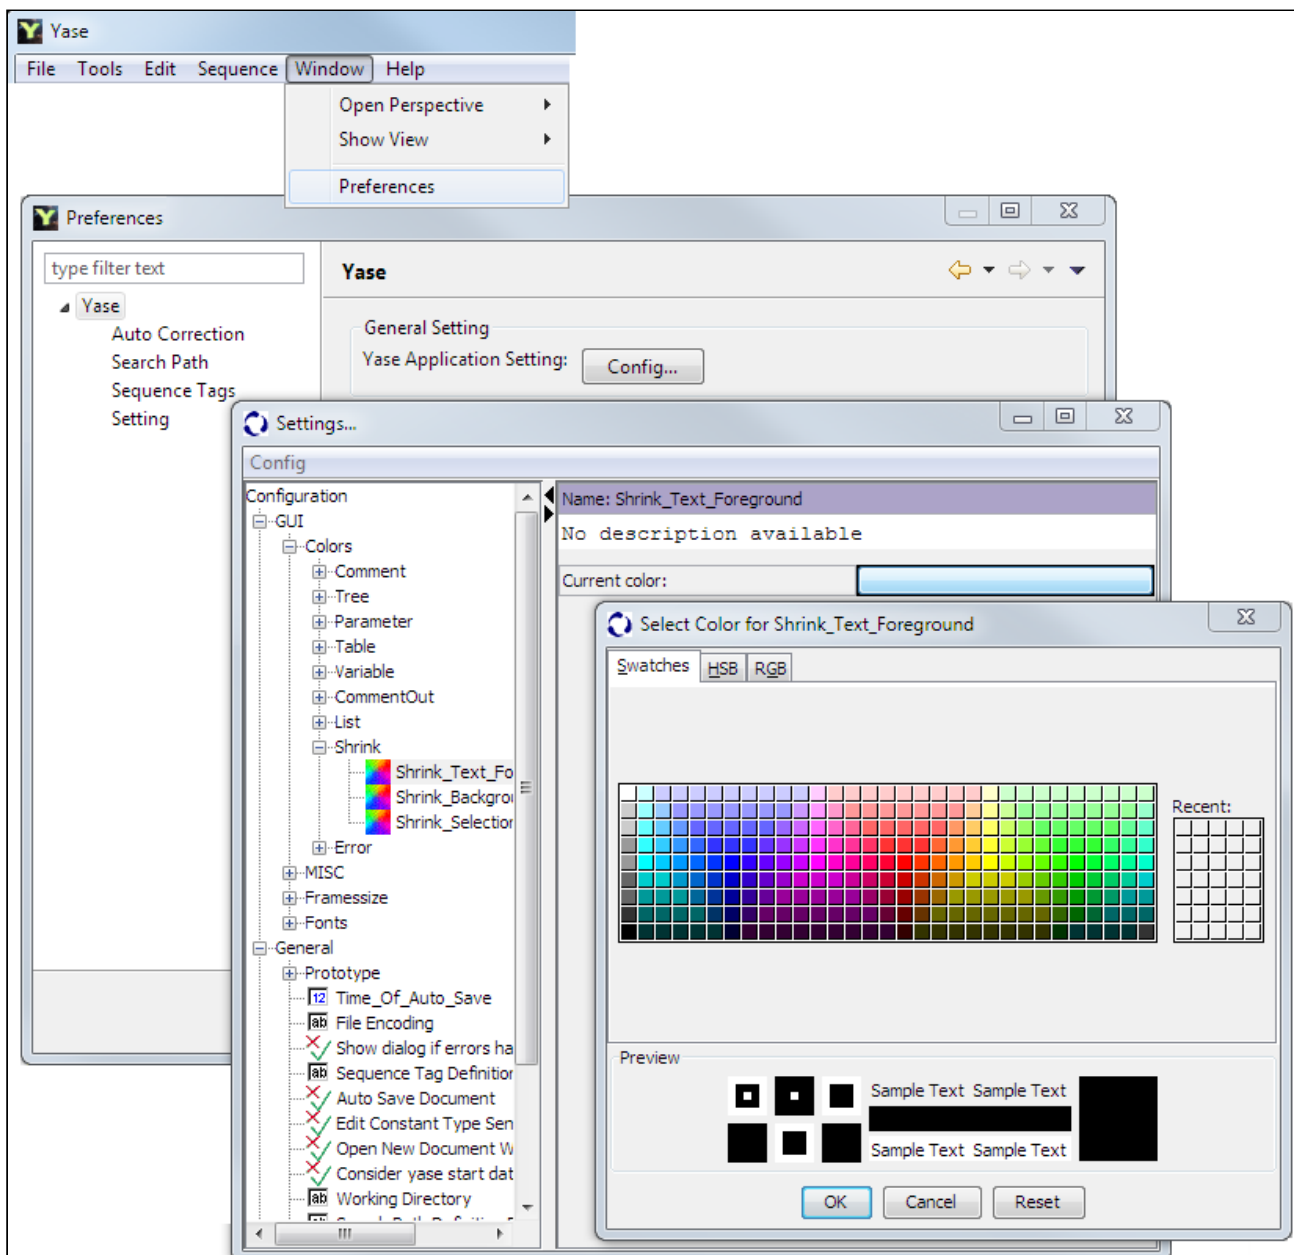


Fig. 10 YASE settings

Choose the parameter to be changed by mouse click in the tree and edit the parameter in the right part of the panel.

The settings become active by closing the *Settings* window. The settings are stored when closing *Yase*.

Some of the user settings that can be undone by the *Config* menu within the *Settings* panel: *Reset Colors* and *Reset Frame Bounds*.

❗ The *Reset all* function resets all your *GUI*, *General* and *Printing* settings and deletes the config file.

ℹ Please note, that only the *Yase* settings take effect on the *Yase* functions. All other settings are required for the *Eclipse* environment. The *Yase* settings can not be reached by the preferences filter function.

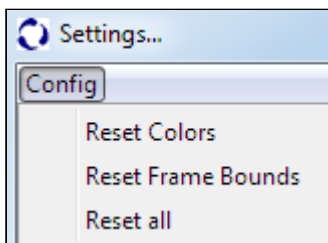


Fig. 11 Reset settings

7.2.1 “General” Settings

Before starting to work with *Yase*, some system parameters can be changed by the *Settings* function.

ℹ Please note, that your system is delivered already configured optimized for your project requirements. Before changing the general settings please ensure, that these match your *Yase* configuration.

In case the expected effect is not reach, switch back to the default value. The following settings can be changed after system start.

<i>Time_Of_AutoSave</i>	Enter the time period in minutes after which an auto save is performed. Default is 5 minutes.
<i>Edit Constant Type Sensitive</i>	Specifies, if the type of an entered constant is allowed for the specified parameter. • <i>TestMaster</i> = <i>True</i> • <i>SpaceMaster</i> = <i>False</i>

<i>Open New document Wizard</i>	If true, a <i>Wizard</i> supports you creating new documents of several types. Please note, that changing this settings does only make sense, if your system allows to generate other documents than sequences. Default = <i>False</i>
<i>Working Directory</i>	Enter the path to the working directory and apply the setting.  Default = C:/Documents and Settings/User name/ApplicationData/Yase
<i>Search Path Definition File</i>	Enter the search path for files and apply the settings.  Default = C:/Documents and Settings/User name/ApplicationData/Yase/.sequenceSearchPath.txt
<i>Auto Save Document</i>	Select, if the sequences should be auto saved (<i>True</i>) or not (<i>False</i>). Default = <i>True</i>
<i>Save Prototype File Path</i>	Select, if the file path of the <code>prototypes.xml</code> file is stored (<i>True</i>) or not. Default = <i>True</i>
<i>Default File System (URI)</i>	Enter the Default File System URI and apply the setting.  Use this feature very careful, because by changes may cause errors.
<i>Prototype Directory</i>	Select a directory to store the <code>prototypes.xml</code> file.

7.2.1.1 “Prototype” Settings

The following parameter settings can be performed for the import prototypes process:

<i>Prototype file name</i>	Change the name of the file you want to use as prototype file. Default: <code>.xml</code> Changes have to be applied by <i>Apply setting</i> button.
----------------------------	--

<i>Auto save prototype</i>	You can save the statement collection in different ways: • Always without asking for a file name • Always but use a <i>Save prototype</i> as dialog • Ask for save (default) • Never save prototype after import
<i>Auto import prototype</i>	Specifies from which source the prototype should be imported during start-up, please select: • <i>Import from default prototype file</i> • <i>Import from server</i> • <i>Import nothing</i>

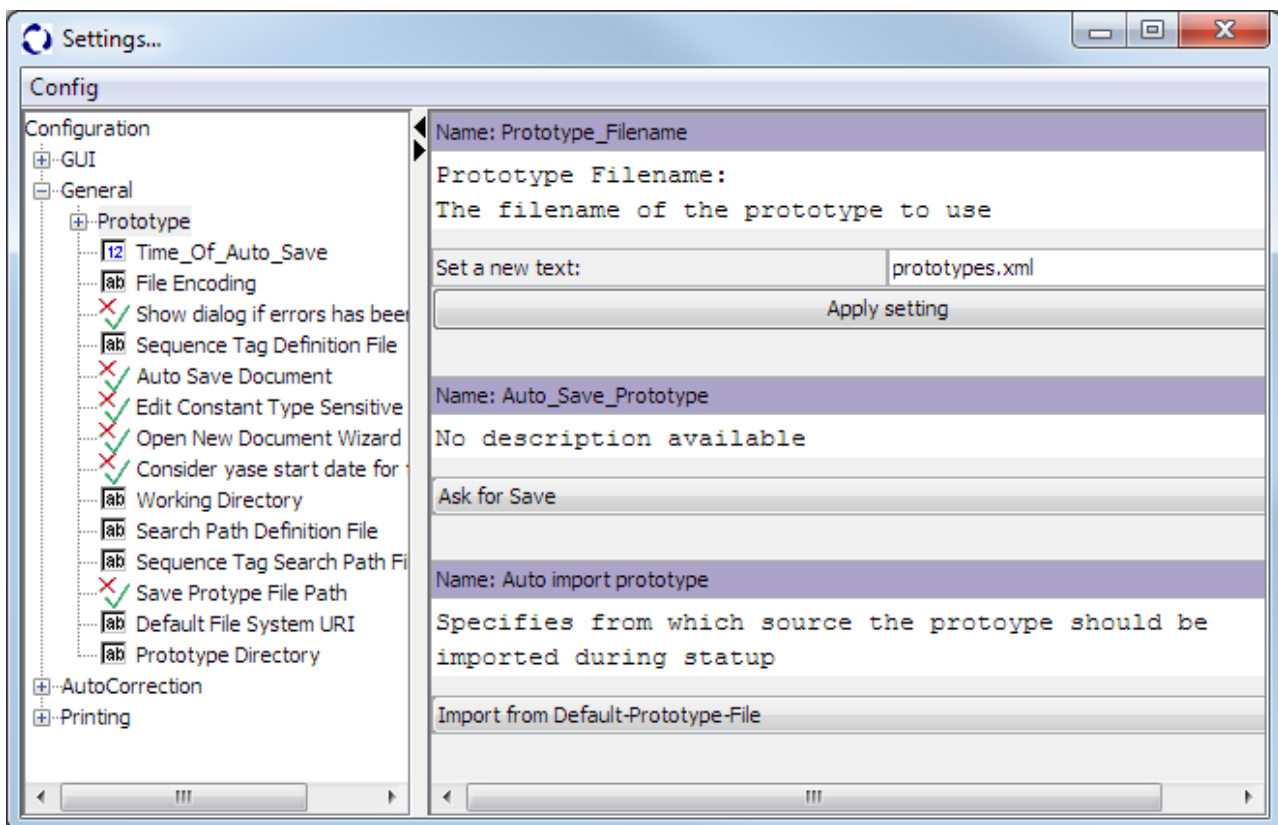


Fig. 12 General prototype

In case of errors the following parameter settings have to be checked, to enable to import the prototypes from server:

<i>Host address</i>	The host address has to be indicated to enable import of from server. Changes have to be applied by <i>Apply setting</i> button. Default: Host address of respective PC or 127.0.0.1 for local host.  Use this feature very carefully, because changes may cause errors.
<i>Server port</i>	The port has to be set to enable an import of statements from the server. Changes have to be applied by <i>Apply setting</i> button. Default: port of respective system port is set in:  ..\config\xml_rpc.ini  Use this feature very carefully, because changes may cause errors.
<i>Auto import prototype</i>	Prototypes can be imported automatically when starting the editor or by the <i>File Prototype</i> menu. <i>True</i>: Starting the system the statements are imported automatically (default). <i>False</i>: The statements have to be imported manually by the <i>File Prototype</i> menu.

7.2.2 “GUI” Settings

7.2.2.1 “Colors” Settings

For better clarity, the editor is working with several colors. Each display and edit field and each function has its own background and type color. The user is able to change this colors for his own purposes.

⚠ This manual is referencing to the default colors. These colors are carefully chosen for purposes of organization of work. If you change colors, please be sure about consistency.

After choosing a parameter from the *Colors* list, the bar with the actual color appears in the right part of the panel. A mouse click on the color bar activates a color palette with all available colors.

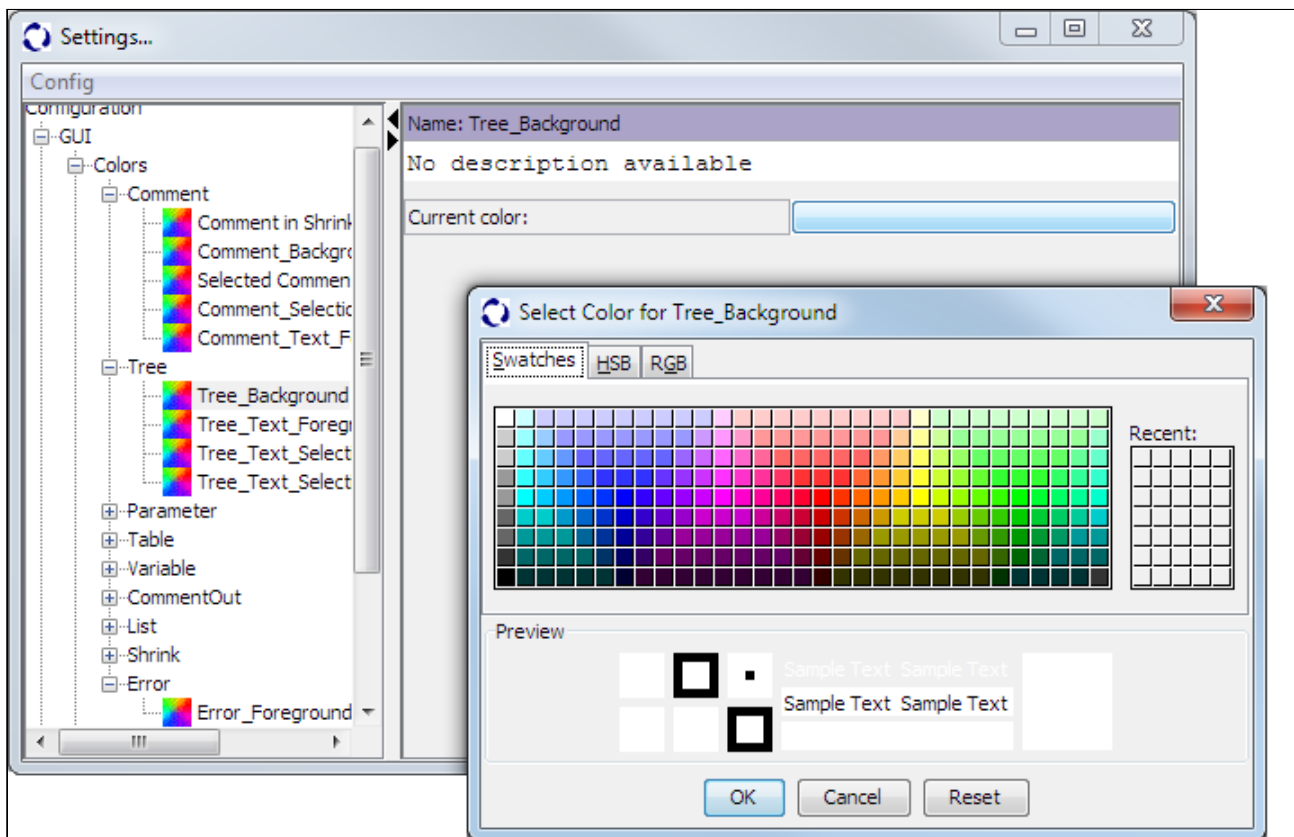


Fig. 13 Color configuration parameters with color palette

In the following the default colors are described:

Shrink background	yellow	Table selection background	violet
Shrink selection background	dark yellow	Variable list selection background	violet
Shrink text foreground	black	Variable foreground	blue
Output parameter background	green	Variable list background	white
Input parameter selection	light blue	Variable foreground unused	blue
Input parameter background	grey	Tree background	white
Output parameter selection	light blue	Tree text selection foreground	black
Comment background	beige	Tree text selection background	violet
Comment selection background	violet	Tree text foreground	black
Comment text foreground	black	List selection background	violet
Table background	white	List text foreground	black
Table text foreground	black	List background	white
Table text selection foreground	black	List text selection foreground	black

Tab. 2 Table of Colors

7.2.2.2 “MISC” Settings

The MISC entry allows to perform some general settings of the *Yase* GUI.

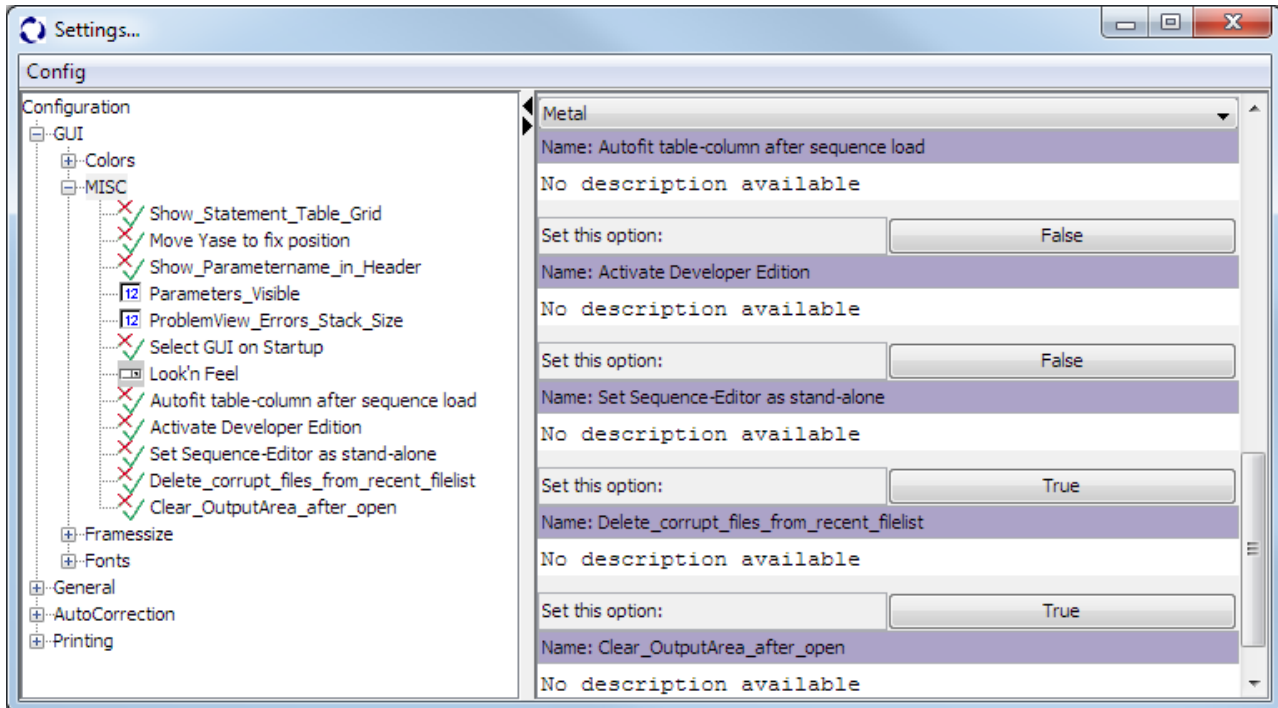


Fig. 14 GUI: Misc

i Please note, that your system is delivered already configured optimized for your project requirements.
Before changing the general settings please ensure, that these match your *Yase* configuration.

The default settings are described in the following:

<i>Show statement table grid</i>	<i>True</i> : Shows table grid (default); <i>False</i> : Shows table without grid.
<i>Move Yase to fix position</i>	<i>True</i> : Fits <i>Yase</i> into the frame of your test environment <i>False</i> : Makes <i>Yase</i> panel floating and independent from the test environment
<i>Show parameter name in header</i>	Allows to decide if the parameter name is shown in the header of parameter columns: <i>True</i> : Respective parameter name is shown (default) <i>False</i> : Columns are named <i>Parameter 0–Parameter n</i>

<i>Parameters visible</i>	Number of parameters, which are visible in the configuration table without scrolling. Default = 5 Changes have to be applied by <i>Apply setting</i> button.
<i>ProblemView _Errors _Stack_Size</i>	Set the error stack size. Default = 100
<i>Look and Feel</i>	Change Look and Feel of <i>Yase</i> : Plastic, Windows, Metal or Motif.
<i>Autofit table- column after sequence load</i>	<i>True</i>: Resizes parameter columns to optimal size automatically when opening a sequence. <i>False</i>: Leaves parameter columns in default size.
<i>Activate developer edition</i>	Enables you to work with the developer edition. Please note, that this version may not work stable. It is strongly recommended to leave this option disabled. <i>True</i>: Shows developer edition <i>False</i>: Shows standard edition (default) ⚠ The developer version may not work stable!
<i>Set Sequence editor as stand alone</i>	Detaches the editor window: <i>True</i>: Window is resizable and removable <i>False</i>: Window fits into software interface (default)
<i>Delete corrupt files from recent file list</i>	<i>True</i>: Shows only intact files in the recent file list (default) <i>False</i>: Shows each file
<i>Clear output area after opening</i>	Allows to clear the error message box after opening a new sequence: <i>True</i>: Message box is empty (default) <i>False</i>: Error messages are shown after start of sequence.

7.2.3 (Default) “Printing” Settings

The default print settings can be changed by using the *Yase Settings* function.

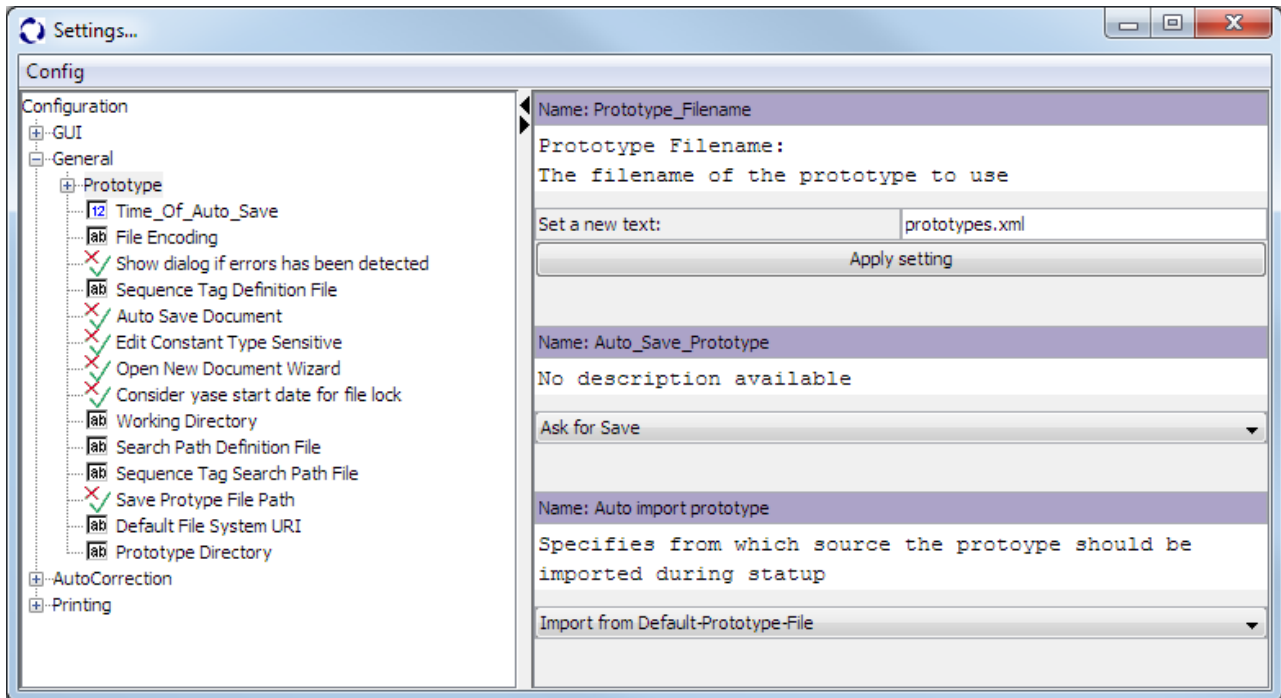


Fig. 15 Print Settings

To reach the print configuration select *Preferences* from the Windows Menu, select the *Yase* settings and open the settings dialog by the *General Settings Config* button. Then open the *Print* tree.



Window > Preferences > Yase Settings > General Settings/Config > Print

<i>Orientation Table</i>	Choose orientation of table pages: <i>Landscape</i> , <i>Portrait</i> or <i>Revers_Landscape</i> .
<i>Table Printsize (%)</i>	Enter print size of the <i>Table</i> pages in %.
<i>Orientation Cover</i>	Choose orientation of Cover pages: <i>Landscape</i> , <i>Portrait</i> , or <i>Revers_Landscape</i> .
<i>Print Labels</i>	Choose if <i>Labels</i> should be printed with the <i>Cover</i> pages; select <i>True</i> or <i>False</i> .
<i>Cover Print size (%)</i>	Enter print size of the <i>Cover</i> pages in %.
<i>Print Variables</i>	Choose if <i>Variables</i> should be printed with the <i>Cover</i> pages; select <i>True</i> or <i>False</i> .

7.2.4 Yase › Setting

In addition to *Base Info*, the "Yase › Setting" window contains:

- Server Connection Interface
- File System

Both allow to change the configuration (*Config...* button). If *Yase* is used as stand-alone application, the only available server connection interface is *Yase.XMLRPC* and the only available file system is *LocalFS*. If *Yase* is part of another software environment, other options may be available, depending on the environment.

8 Toolbar

The editor is operated by a menu bar. The functions are only activated, if the *Editor* is activated, otherwise they are grayed out.

The following functions are provided:



New sequence. Opens an empty sequence input area.



Open sequence from file.



Save sequence. The current sequence will be saved to the current path. Opens a file dialogue for saving a new sequence.



Save sequence as... Opens a file dialog to save the current sequence to a new destination. The saved file can be used for further editing operation.



Undo last step.



Redo last removed step.



Copies the selected lines to the clipboard and erases them from the sequence.



Copies the selected lines to the clipboard without erasing them.



Inserts the selected lines from the clipboard into the current sequence at the currently selected line.



Deletes the selected lines.



Shift selected lines up.



Shift selected lines down.



Create a *Shrink*. For details see *Shrink* function.



Inserts a statement before the selected line.



Inserts a comment line before selected line.



Resizes the table columns.



This function executes a sequence. A window appears, where consistency of host and port can be checked. Choose if the settings should be saved and if you want to see the window again. The window will automatically appear, if inconsistencies are noticed.

9 Menu

9.1 File Menu

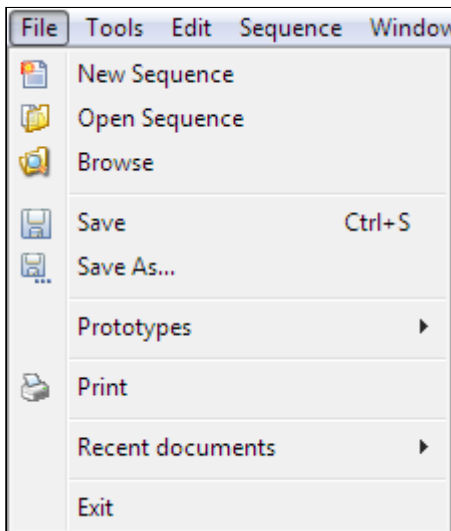


Fig. 16 File Menu

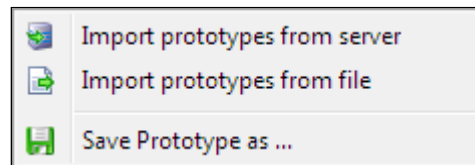


Fig. 17 File Menu – Prototypes

Besides the elements described in Chapter *Toolbar* the *File* menu provides the following functions:

<i>Clear</i>	Close the currently edited sequence without saving. A warning dialogue appears before the sequence is closed.
<i>Prototypes</i>	Allows to import prototypes either from server or from file. If server is selected, the server settings have to be defined before. Prototypes can also be saved in an .xml-file.
 <i>Print</i>	Opens the print preview. <i>Reference</i> Further information about the print preview is given in Section <i>Print</i> of Chapter <i>Tools</i>.
<i>Recent documents</i>	Displays a list of the last edited documents.
<i>Exit</i>	Close the sequence editor.

9.2 Edit Menu

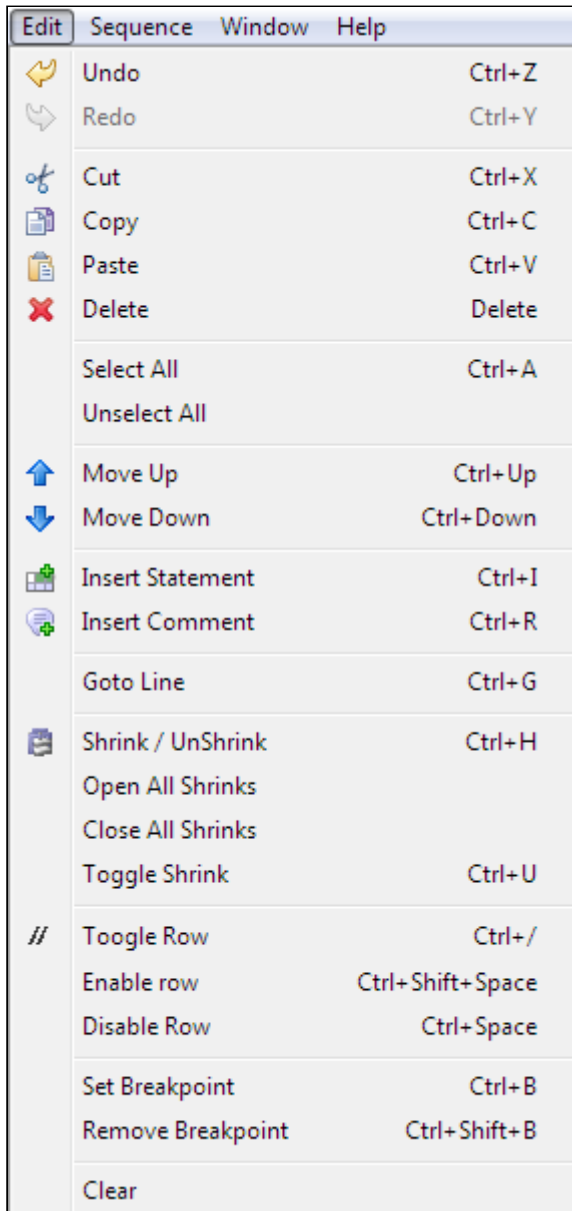


Fig. 18 Edit Menu

Besides the elements described in Chapter [Toolbar](#) the *Edit* menu provides the following functions:

<i>Select All</i>	Select all lines of the currently edited sequence.
<i>Unselect All</i>	Unselect all lines of a sequence.
<i>Goto Line</i>	A panel is opened, which enables you to choose a line number you want to jump to (see Figure <i>Goto Line Dialog</i> below).

<i>Open All Shrinks</i>	Open all <i>Shrink</i> areas in the currently selected sequence.
<i>Close all Shrinks</i>	Close all <i>Shrink</i> parts of the currently edited sequence.
<i>Enable Row</i>	If a line is marked as comment, this mark is removed. This function is also accessible by right mouse click on a sequence row.
<i>Disable Row</i>	Inserts a comment mark to the front of the line. This function is also reachable by right mouse click on a sequence row.
<i>Set Breakpoint</i>	Set a breakpoint for debugging (see Figure <i>Set breakpoint</i> below). This function is also accessible by right mouse click on a sequence row.
<i>Remove Breakpoint</i>	Remove breakpoint in the selected row. This function is also accessible by right mouse click on a sequence row.
<i>Clear</i>	Closes the currently edited sequence without saving. A warning dialog appears before the sequence is closed.

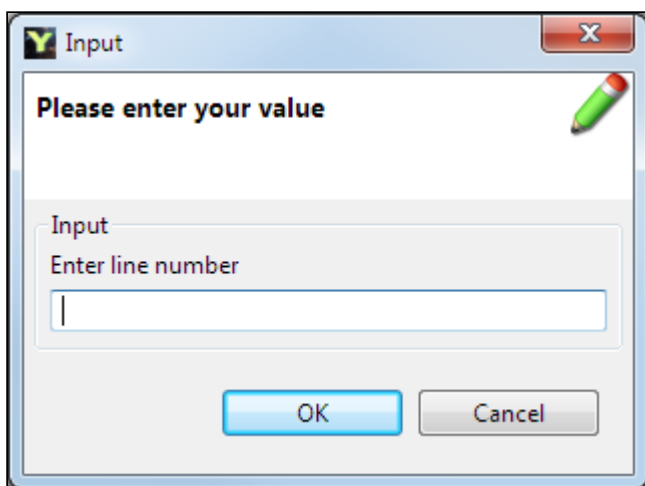


Fig. 19 Goto Line Dialog

No.	Label	Name	Analog
1		DisplayStatusNum	Index
2		GetAnalogIn	Sim ana
3		DisplayStatusNum	Value

Fig. 20 Set Breakpoint

9.3 Sequence Menu

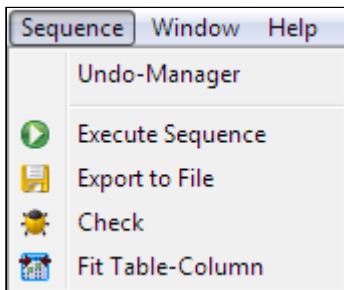


Fig. 21 Sequence Menu

Besides the elements already described above the Sequence menu provides the following functions:

	<i>Undo Manager</i>	The Undo Manager allows reversing all steps since opening the sequence.  Further information about the undo manager is given in Section <i>Undo Manager</i> of Chapter <i>Tools</i>.
	<i>Sequence Information</i>	Opens a panel with information about the currently edited sequence.  Further information is given in Section <i>Sequence Info</i> of Chapter <i>Editor</i>.
	<i>Execute Sequence</i>	This function executes a sequence. A window appears, where the consistency of host and port can be checked (see Figure <i>Execute sequence</i> below). Choose if the settings should be saved. The window will automatically appear, if inconsistency is noticed.
	<i>Export to File</i>	Exports a sequence to a .txt-file.
	<i>Check</i>	Manual trigger of error detection.  Further information is given in Section <i>Check Function</i> of Chapter <i>Editor</i>.

	Fit Table-Column	Resizes the column of the selected table to optimum size. i Further information is given in Section <i>Resize Column</i> of Chapter <i>Editor</i>.
---	-------------------------	--

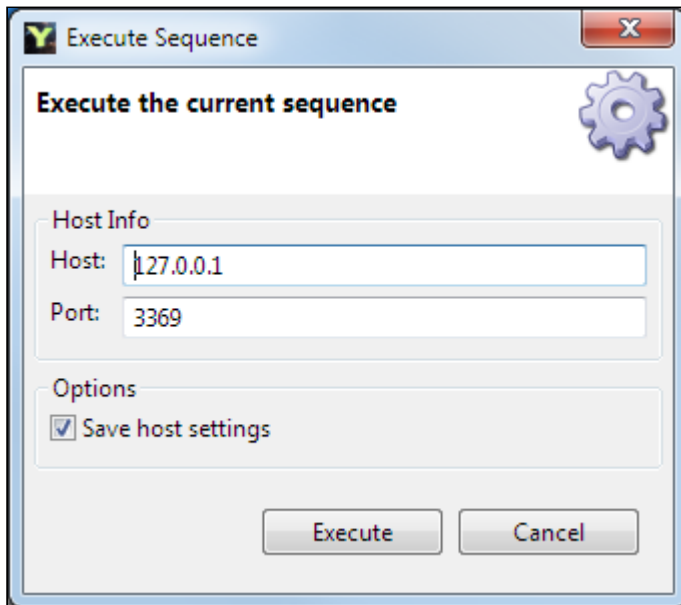
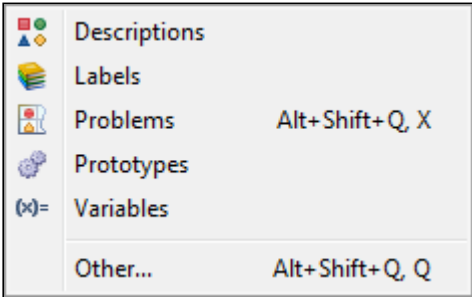


Fig. 22 Execute Sequence

9.4 Window Menu

Open Perspective	This function allows the user to switch between different perspectives. A perspective is a set of <i>Views</i>, <i>Editors</i>, and menus. i This function is optional, not all <i>Yase</i> configurations have different perspectives.
-------------------------	---

Show View	Opens a list of the views available in the system. Reference Further information about Views is given in Chapter <i>Perspectives and Views</i>.  <i>Fig. 23 'Show View' Menu</i>
Preferences	The <i>Preferences</i> function allows to do various settings relating to appearance, server settings and functionality of <i>Yase</i>. All required settings are described in the respective chapter in this manual.

9.5 Tools Menu

	Auto Check	The <i>Auto Check</i> tool offers the opportunity to check and correct statements within a group of sequences automatically, e.g. in case parameters have changed. Reference Further information about the <i>Auto Check</i> function is given in Section <i>Auto Check</i> of Chapter <i>Tools</i>.
	Auto Print	The <i>AutoPrint</i> function allows printing more than one sequence at a time. Reference Further information about the <i>Auto Print</i> function is given in Section <i>Auto Print</i> of Chapter <i>Tools</i>.

9.6 Help Menu

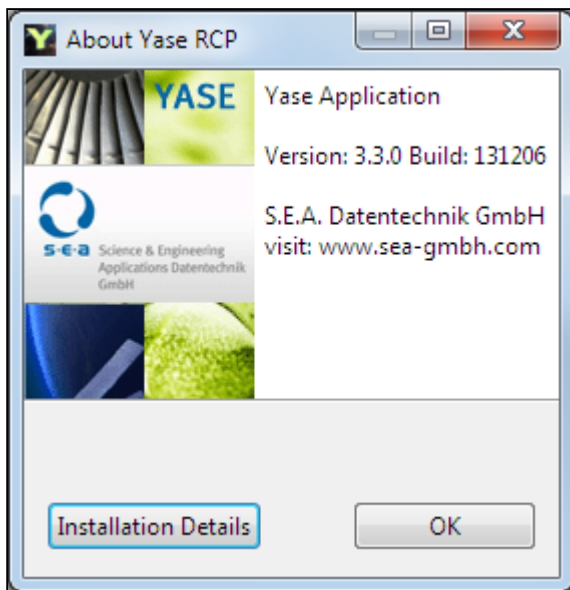


Fig. 24 YASE Help

The Help menu gives you general information about your software. Opening the *About Yase RCP* function some general information is given:

- Version Number; 3.3.0. means: Editor version,
- Build 090928 means: version from year 2013 December 6th.
- Contact Data.

Further information is given by the *Plug-In Details* and the *Configuration Details* window. *Configuration Details* are shown as text file in a separate window.

- The configuration can also be copied to clipboard.
- A detailed log file can be opened by a text editor by the *View Error Log* button.

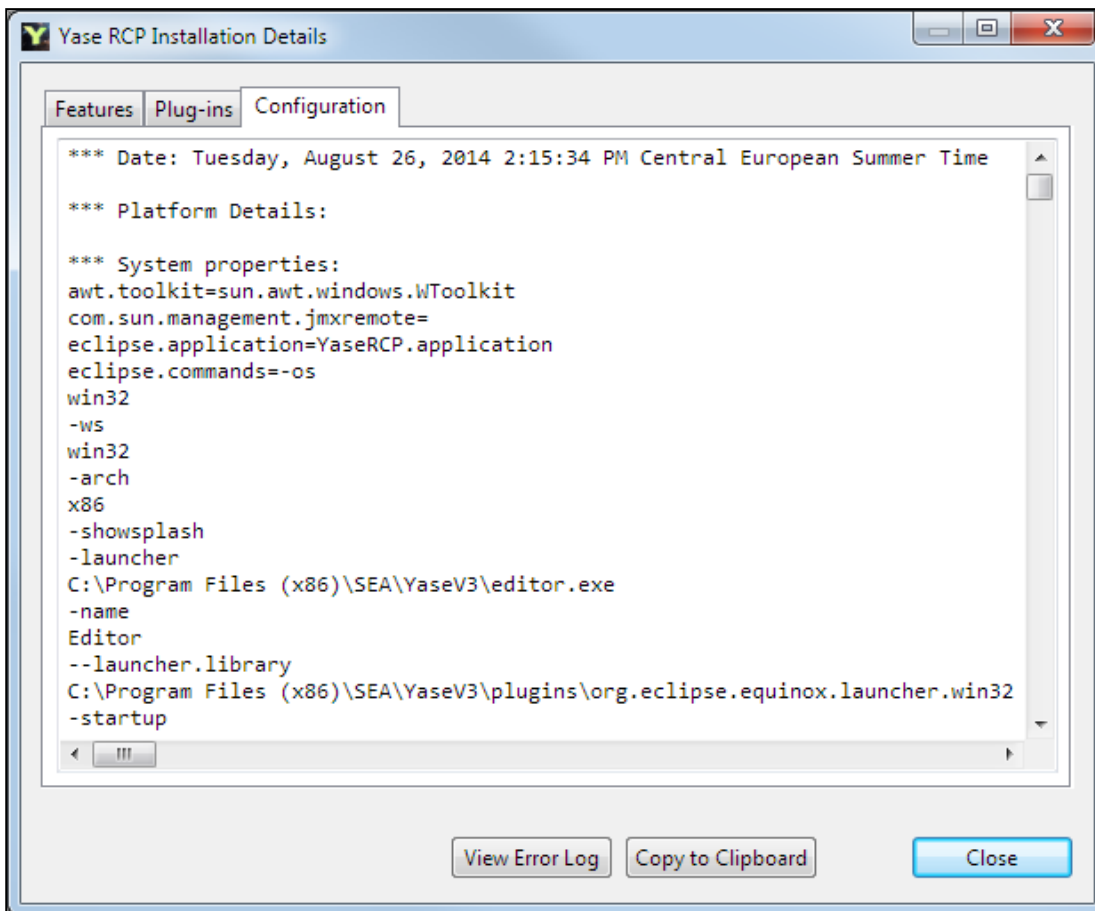


Fig. 25 Help – Configuration information

PlugIn Details are displayed in a separate table view. All installed plugins are listed. Selecting one of the lines, the *Legal Info* and *Hide Signing Info Buttons* become active.

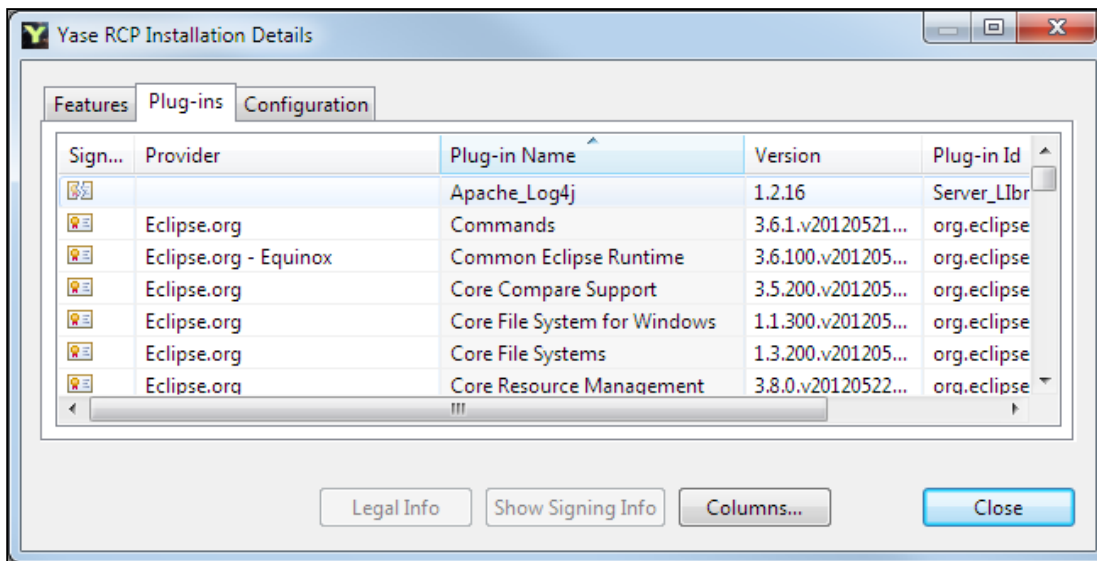


Fig. 26 Help – Plugins

- *Legal Info* opens in a separate window and gives license information about the selected plugin.
- *Signing Info* can be shown or hidden – the panel is enlarged.
- The *Column* button allows to set the column size.

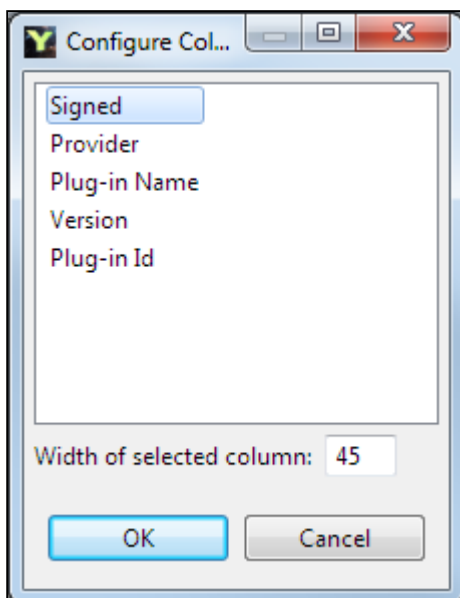


Fig. 27 Help – Column


10 Editor

To use the editor, first of all you have to import the project related prototypes. Then a new sequence can be created or an already existing sequence can be loaded.

In case a sequence is opened that has statements included which have changed, an auto correction process is automatically started. Parameter changes (added or missing parameters, data types) are corrected. If a sequence has been automatically corrected, the corrected lines are marked with a yellow warning mark . The warning marks disappear, when the sequence has been edited.

In case there are two different statements using the same name, the statement is corrected which has the maximum similarity to the old one.

The Yase editor area contains the sequence to be edited. This area can not be hidden as the views – even if no sequence is loaded. By default the editor is located in the center of the window.

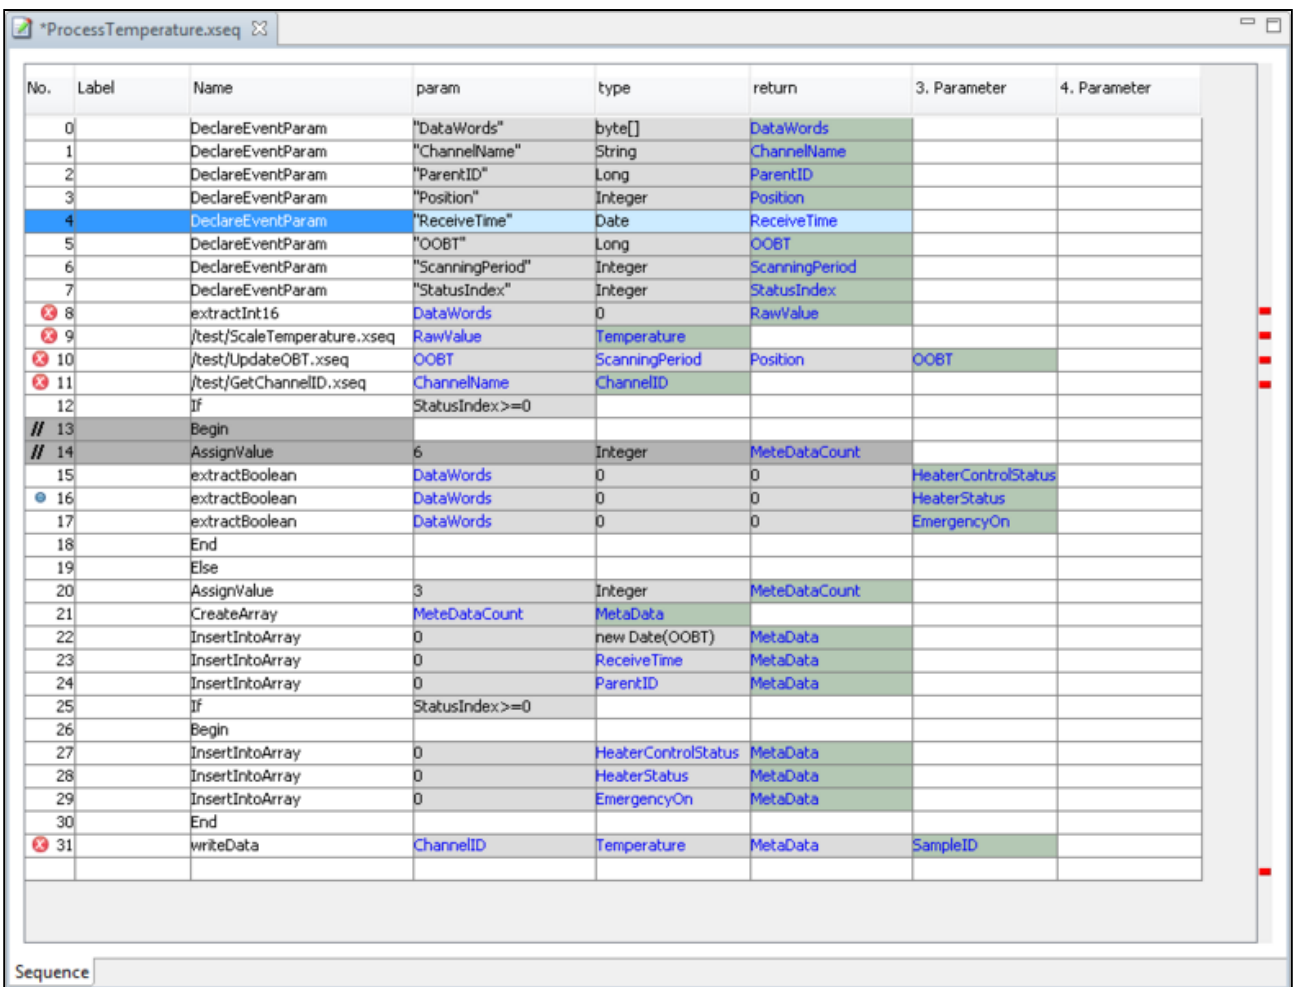

No.	Label	Name	param	type	return	3. Parameter	4. Parameter
0		DeclareEventParam	"DataWords"	byte[]	DataWords		
1		DeclareEventParam	"ChannelName"	String	ChannelName		
2		DeclareEventParam	"ParentID"	Long	ParentID		
3		DeclareEventParam	"Position"	Integer	Position		
4		DeclareEventParam	"ReceiveTime"	Date	ReceiveTime		
5		DeclareEventParam	"OOBT"	Long	OOBT		
6		DeclareEventParam	"ScanningPeriod"	Integer	ScanningPeriod		
7		DeclareEventParam	"StatusIndex"	Integer	StatusIndex		
8		extractInt16	DataWords	0	RawValue		
9		/test/ScaleTemperature.xseq	RawValue	Temperature			
10		/test/UpdateOOBT.xseq	OOBT	ScanningPeriod	Position	OOBT	
11		/test/GetChannelID.xseq	ChannelName	ChannelID			
12		If	StatusIndex>=0				
// 13		Begin					
// 14		AssignValue	6	Integer	MetaDataCount		
15		extractBoolean	DataWords	0	0	HeaterControlStatus	
16		extractBoolean	DataWords	0	0	HeaterStatus	
17		extractBoolean	DataWords	0	0	EmergencyOn	
18		End					
19		Else					
20		AssignValue	3	Integer	MetaDataCount		
21		CreateArray	MetaDataCount	MetaData			
22		InsertIntoArray	0	new Date(OOBT)	MetaData		
23		InsertIntoArray	0	ReceiveTime	MetaData		
24		InsertIntoArray	0	ParentID	MetaData		
25		If	StatusIndex>=0				
26		Begin					
27		InsertIntoArray	0	HeaterControlStatus	MetaData		
28		InsertIntoArray	0	HeaterStatus	MetaData		
29		InsertIntoArray	0	EmergencyOn	MetaData		
30		End					
31		writeData	ChannelID	Temperature	MetaData	SampleID	

Fig. 28 Edit Field

The editor is controlled by the *Yase* tool bar and the *File* menu, *Edit* menu and *Sequence* menu.

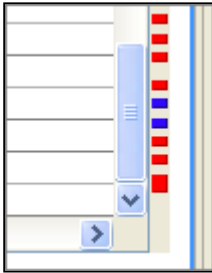


Fig. 29 Fast access bar

If the sequence does not fit into the *Editor*, two scroll bars appear at the right side and at the bottom.

On the right side of the *Edit Field* an information bar marks sequence errors – the *Fast access bar*. Each line with an error is marked red. To reach the errors, click on the mark. The mark position corresponds with the scrollbar, depending on the sequence length. Statements marked in the *Prototypes* view are marked blue.

The *Editor* displays the sequences formatted as colored table, where each line holds a single statement or a comment.

A right mouse click on an activated row allows the user to *Cut*, *Copy*, or *Paste* the selected row, to *Enable row* or *Disable row* (comment out), to *Set Breakpoint* and to *Remove Breakpoint*.

❗ These functions are also accessible by the *Edit menu*, described below in Section *Edit menu* of this Chapter *Editor*.

	Cut	Strg+X
	Copy	Strg+C
	Paste	Strg+V
	Delete	Entf
	Enable row	Strg+Umschalt+Leertaste
	Disable Row	Strg+Leertaste
	Set Breakpoint	Strg+B
	Remove Breakpoint	Strg+Umschalt+B

Fig. 30 Editor Popup Menu

The first column *No.* contains the line number, which is automatically generated. If an error is noticed in the respective line, a red mark  is generated. Disabled rows are marked by //, breakpoints by a blue dot .

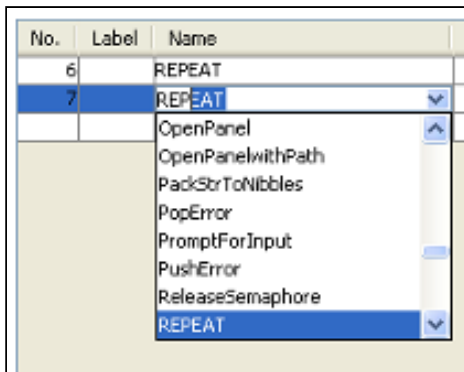


Fig. 31 Edit Field: Auto complete

The second column contains *Labels*. *Labels* allow to set a jump mark at a line. *Labels* are optional. To add a label, select the label field in the respective row and type in a string.

The third column *Name* contains the statement name. A statement can be inserted into the third column of the selected line by double clicking a statement from the *Statements View*. It can also be inserted manually with auto completion in combination with a drop down menu.

The other columns *0. Parameter*, *1. Parameter* – *n. Parameter* depend on the statements and the sequence structure. The column headers change to the parameter names of the statement in the current line. The number of displayed parameter fields depends on the statement with most parameters. Please start with entering Parameter 0. Some parameters may offer a drop down list with the valid values.

Variables are typed in dark blue. Output parameter backgrounds turn to green, input parameter backgrounds turn to gray. Backgrounds of selected parameters turn to light blue.

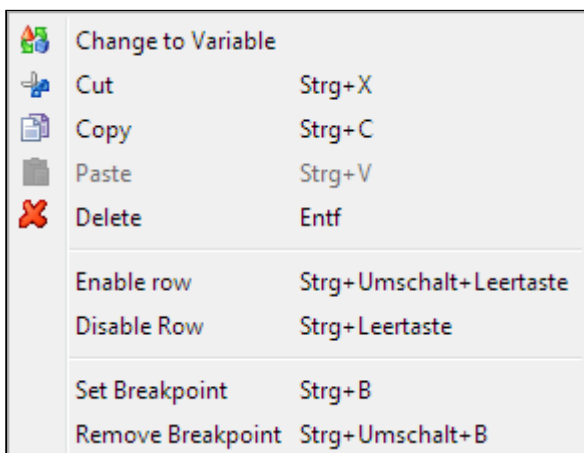


Fig. 32 Editor Popup Menu – Parameters

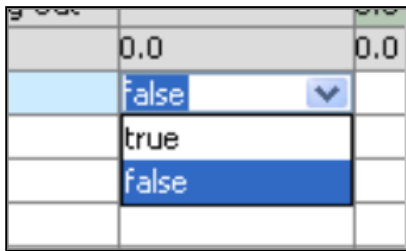


Fig. 33 Select Value

The number of the selected row in the *Editor* is displayed in the left bottom corner of the window in combination with the name of the active sequence and the total number of rows. If a connected group of rows is selected, the number of rows, the number of the first and the last row is displayed in the same place.

The pop-up menu, which appears when clicking on a parameter field is expanded by the entry *Change to Variable* or *Change to Constant* or *Open Subsequence*.

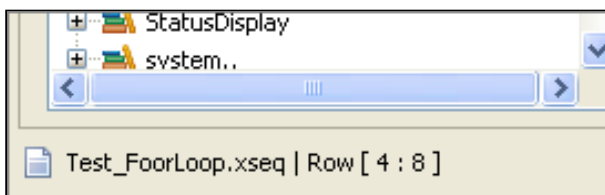


Fig. 34 Sequence information

Long sequences can become clearer by shrinking parts and expand them only if necessary. This can be done using the *Shrink* function.



Reference

The *Shrink* function is described below in Section *Shrink* of this *Editor* Chapter.

The number of open sequences is not limited. By default each sequence is displayed in a tab.

The editor can be split to show more than one sequence in parallel. To split the editor activate one of the tabs by mouse and draw it in the desired position. The editor can be split in horizontal and vertical direction.

After finishing, the sequences have to be stored. The first time a sequence is saved, the system offers a directory to store the file. Please change this and save your sequence to the respective process directory. After the first saving, the system uses the last used directory as default directory.

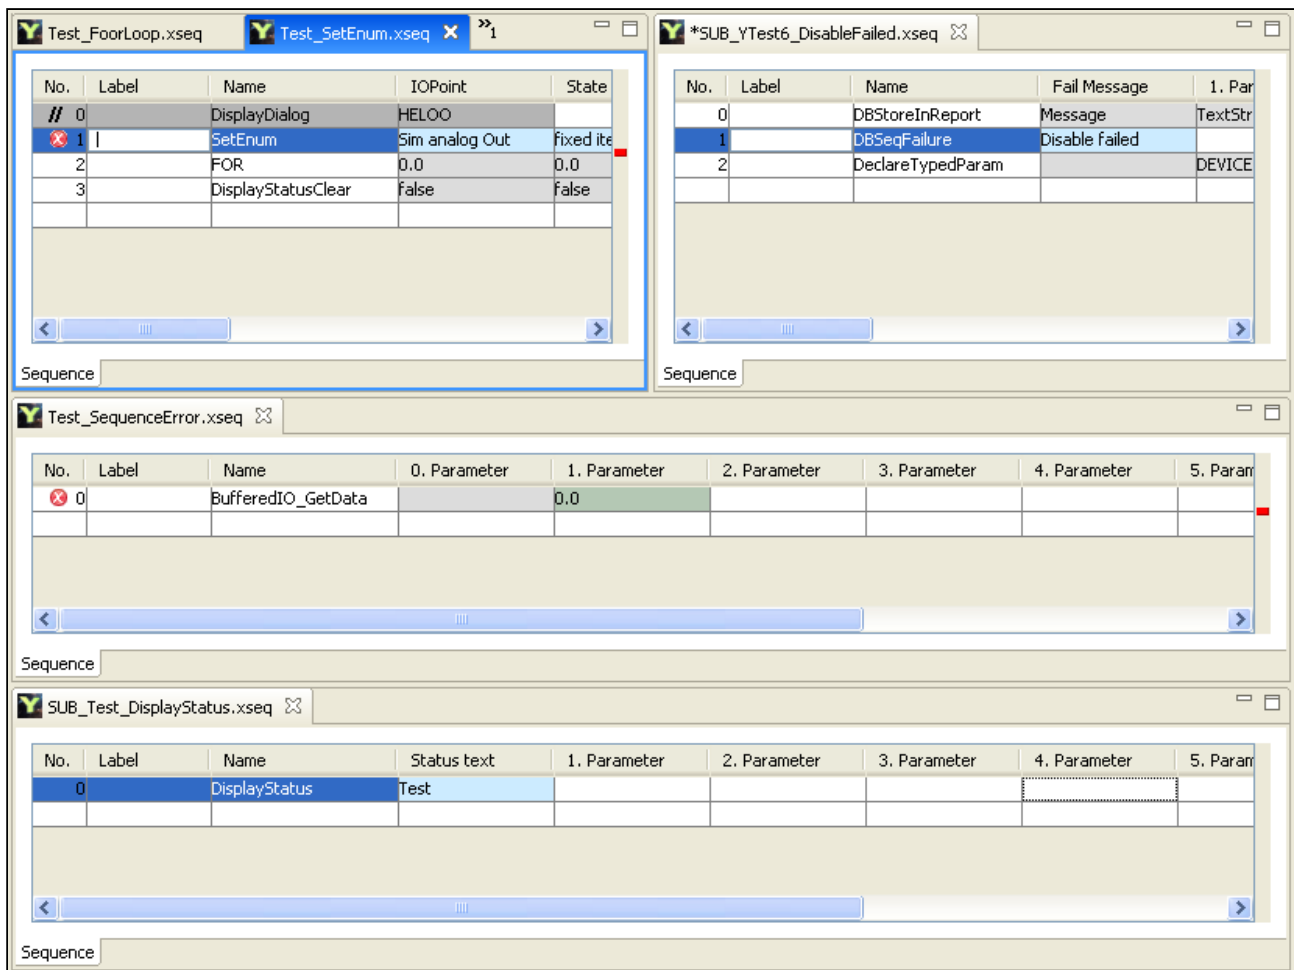


Fig. 35 Split Editor

10.1 Special Functions

10.1.1 Shrink

To make your sequence shorter and clearer the *Shrink* function is implemented. *Shrink* enables you to fold parts of a program to one line – e.g. ready parts or sub functions.

Therefore, you can mark some lines by mouse and shrink them by using the *Shrink* function in the *Edit* menu.

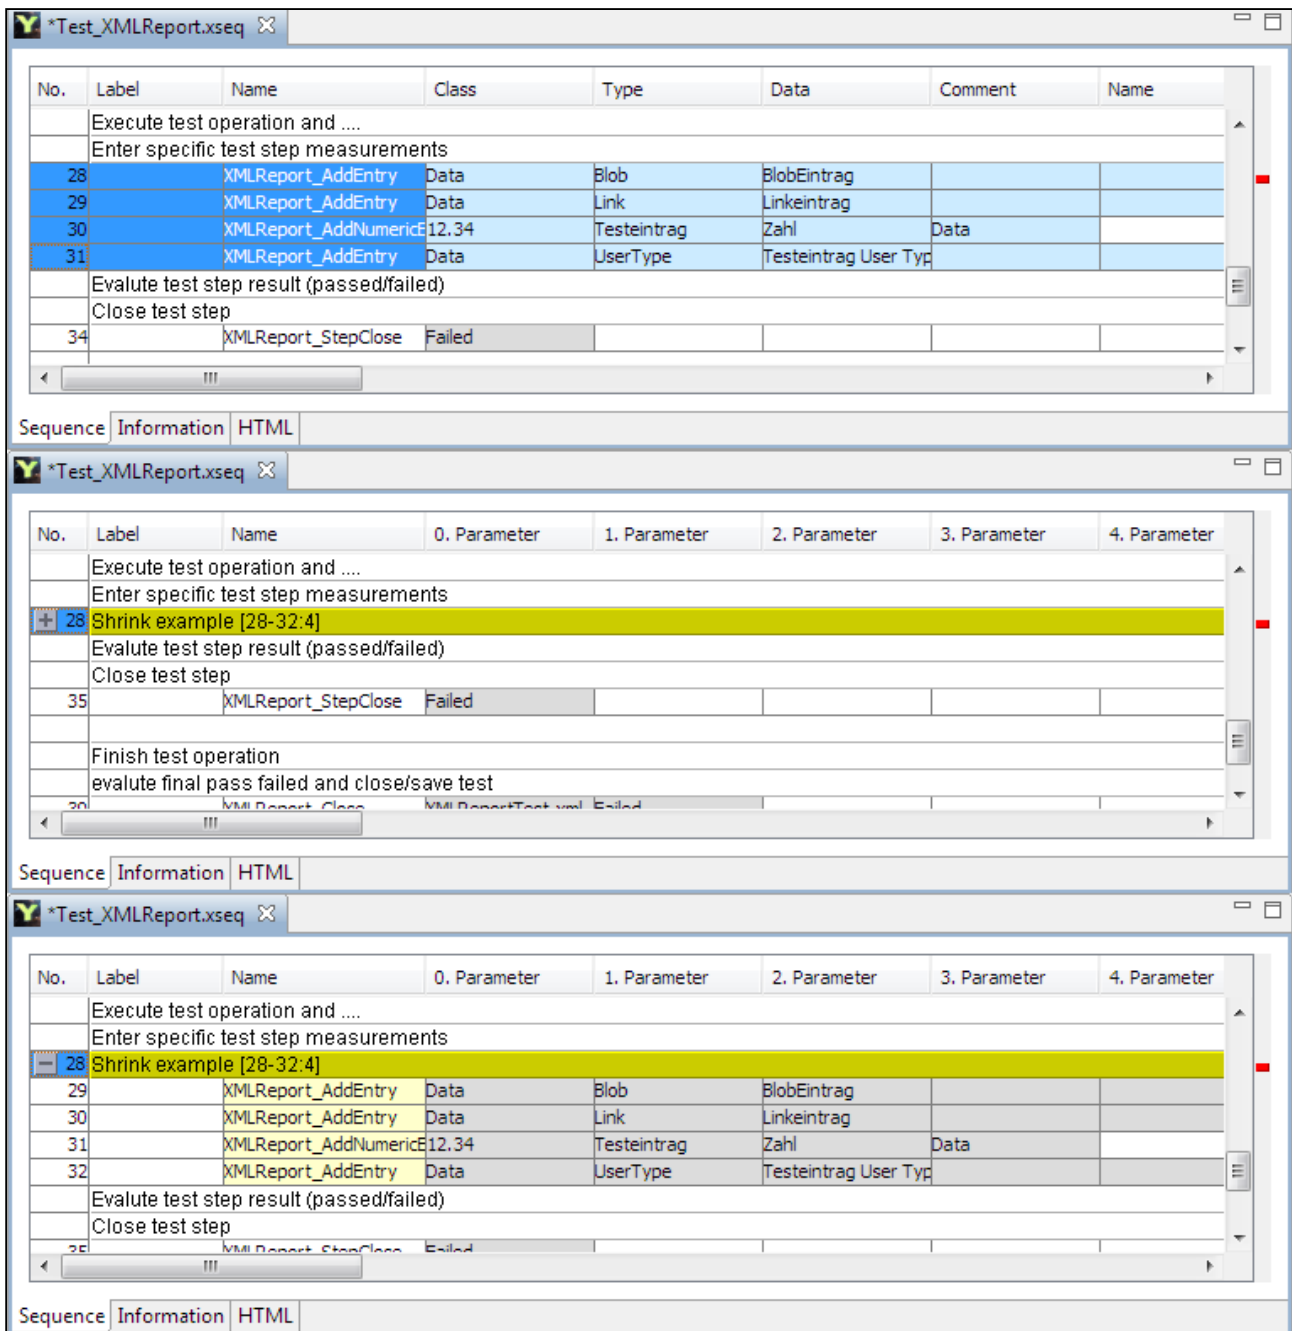


Fig. 36 Shrink

The shrunk part is only one line with general information about the hidden parts. Shrunk parts of a sequence turn yellow. To work with the shrunk part please double click the yellow line and all lines will appear.

To unshrink a shrunk area click the *Shrink* function from the edit menu or the *Shrink* button again. To delete a *Shrink*, please mark the shrunk yellow line and delete it by *Delete* function of the *Edit* menu.

 Please be careful, deleting a shrink will delete all lines within the *Shrunk* part!

After the usage of the *Create Shrink* function, the shrunk part can be hidden or expanded by double mouse click on the +/- symbol.

10.1.2 Resize Column

Resizes all columns of the selected table to optimum size for a better overview.

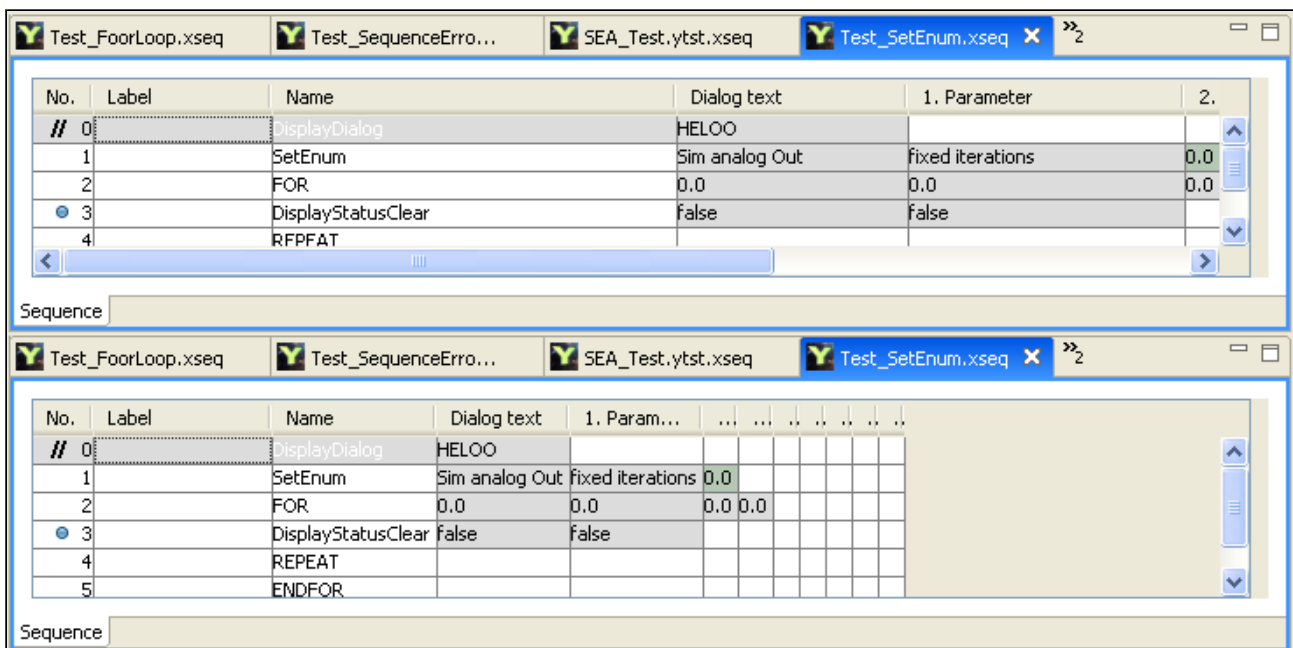


Fig. 37 Fit Table Column

Each column can be drawn to another size manually by mouse. A scroll bar allows to view the hidden parts.

The size is optimized for the content of the column, the parameter header may be cut.

10.1.3 Check Function

The *Check* function sets a manual trigger of error detection to a sequence.

The function checks the selected sequence and marks the row where an error occurs with a red mark



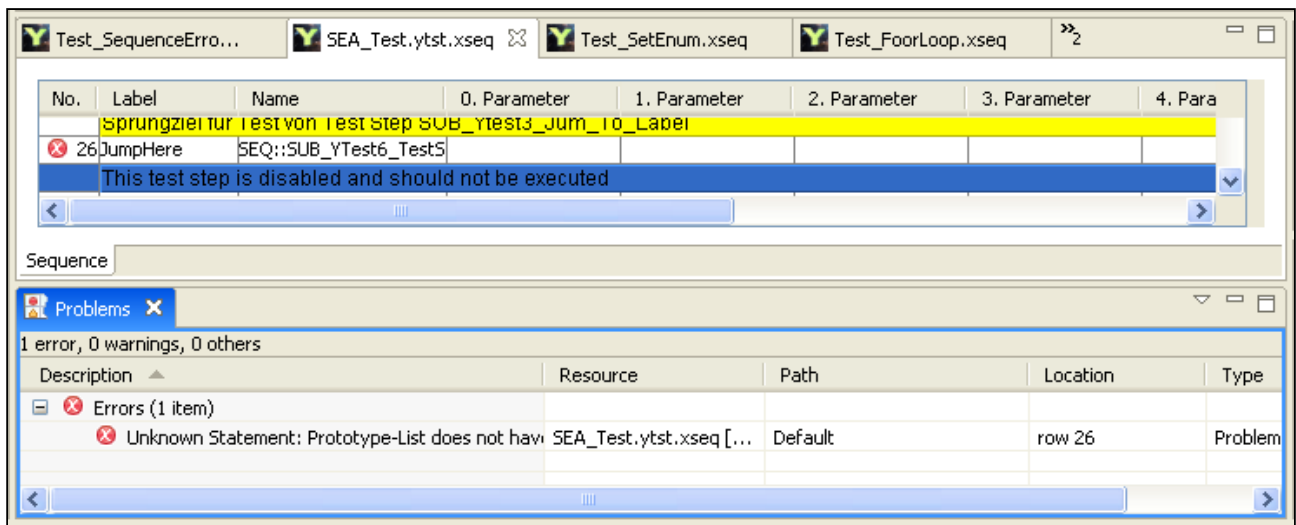


Fig. 38 Check Function

The error description is displayed in the *Problems View*.

 Further information about the problems view is given in Section *Problems View* of Chapter *Yase Perspective*.

10.1.4 Sequence Info

Sequence info gives general information about the sequence; about editor version, user, and history.

The user can enter a description of the sequence.

 This entry does not have any effect on the sequence description shown in the *Descriptions View*.

The screenshot shows the 'Sequence Information' dialog box. At the top, there's a title bar with a yellow icon and the file name '*Test_XMLReport.xseq'. Below the title bar, the main window has a light blue header with an exclamation mark icon and the text 'Sequence Information'. The left sidebar contains three sections: 'Sequence Path:' with a text field showing 'LocalFS:///C:/Program%2', 'Yase Version:' with a text field showing '1.0.0', and 'Current User:' with a text field showing 'th'. Below these is a 'Description:' section with a text area containing 'Description, editable by user.'. The right side of the dialog features a 'Sequence Tags' section with a toolbar containing icons for adding, deleting, and editing tags. Below the toolbar is a 'Filter:' text field. A large table occupies the center-right, with columns labeled 'Tag name' and 'Tag value'. The table is currently empty. At the bottom right, there is a checkbox labeled 'Show dialog if required tags are not set' which is checked. The bottom of the dialog has a tabbed interface with tabs for 'Sequence', 'Information', and 'HTML', where 'Information' is currently selected.

Fig. 39 Sequence Info

11 Perspectives and Views

Besides the *Editor*, the *Yase* window contains views. These are grouped to so called perspectives:

- *Yase Perspective* for programming and
- *Debugging Perspective*.

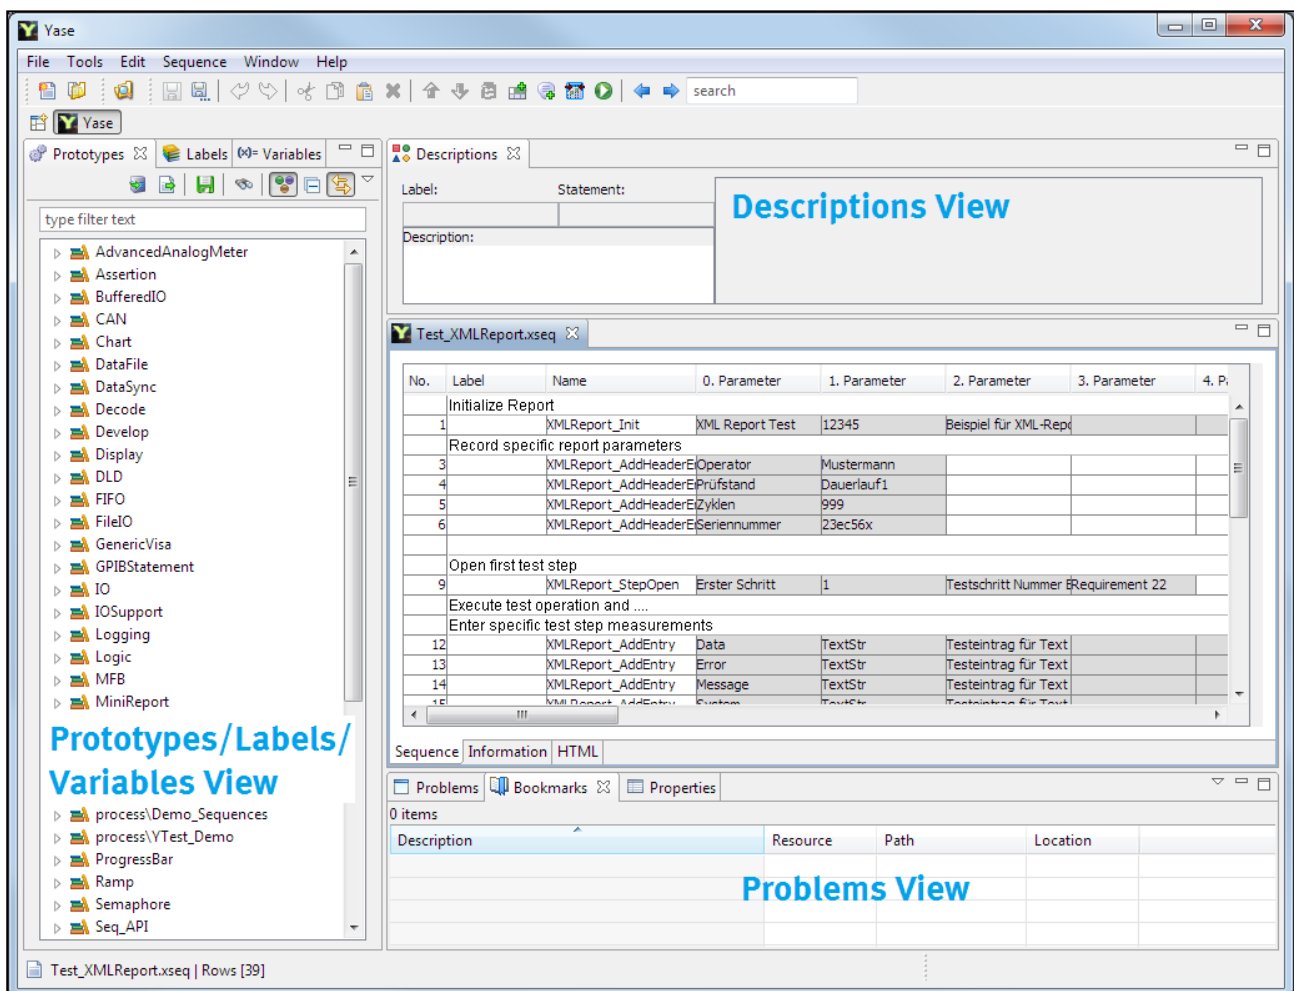


Fig. 40 Yase Views

The *Views* include supporting functions. Not any view is required for each test environment. Therefore each of the views can be shown or hidden.

Any of the *Views* can be resized by drawing the window border by mouse. All *Views* have default positions. Opening an additional view, this will be opened in the default position – even if it is in a tab – not at the cursor position.

The standard *Views* are:

- *Descriptions* – Shows statement description and parameter information,
- *Labels* – shows and handles all labels of the selected sequence,
- *Problems* – displays error messages,
- *Prototypes* – displays the list of available prototypes,
- *Variables* – shows and allows to handle all variables of the selected sequence.

In addition it is possible to show further views. These depend on the installed eclipse plugins. The available *Views* can be added by:

 Window > Show Views > Other

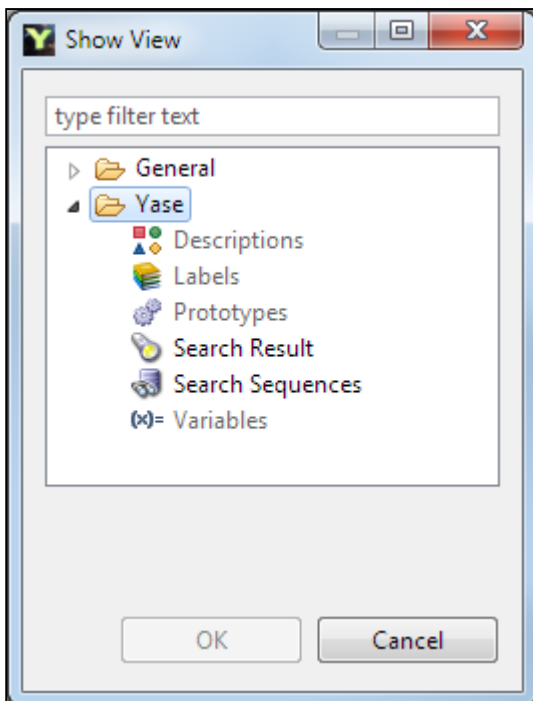


Fig. 41 Other Views

12 Yase Perspective

The *Yase* perspective is used to create and edit sequences. Starting *Yase* for the first time, the *Yase* perspective comes up with the following views:

- *Descriptions View*
- *Labels View*
- *Variables View*
- *Problems View*
- *Prototypes/Statements View*

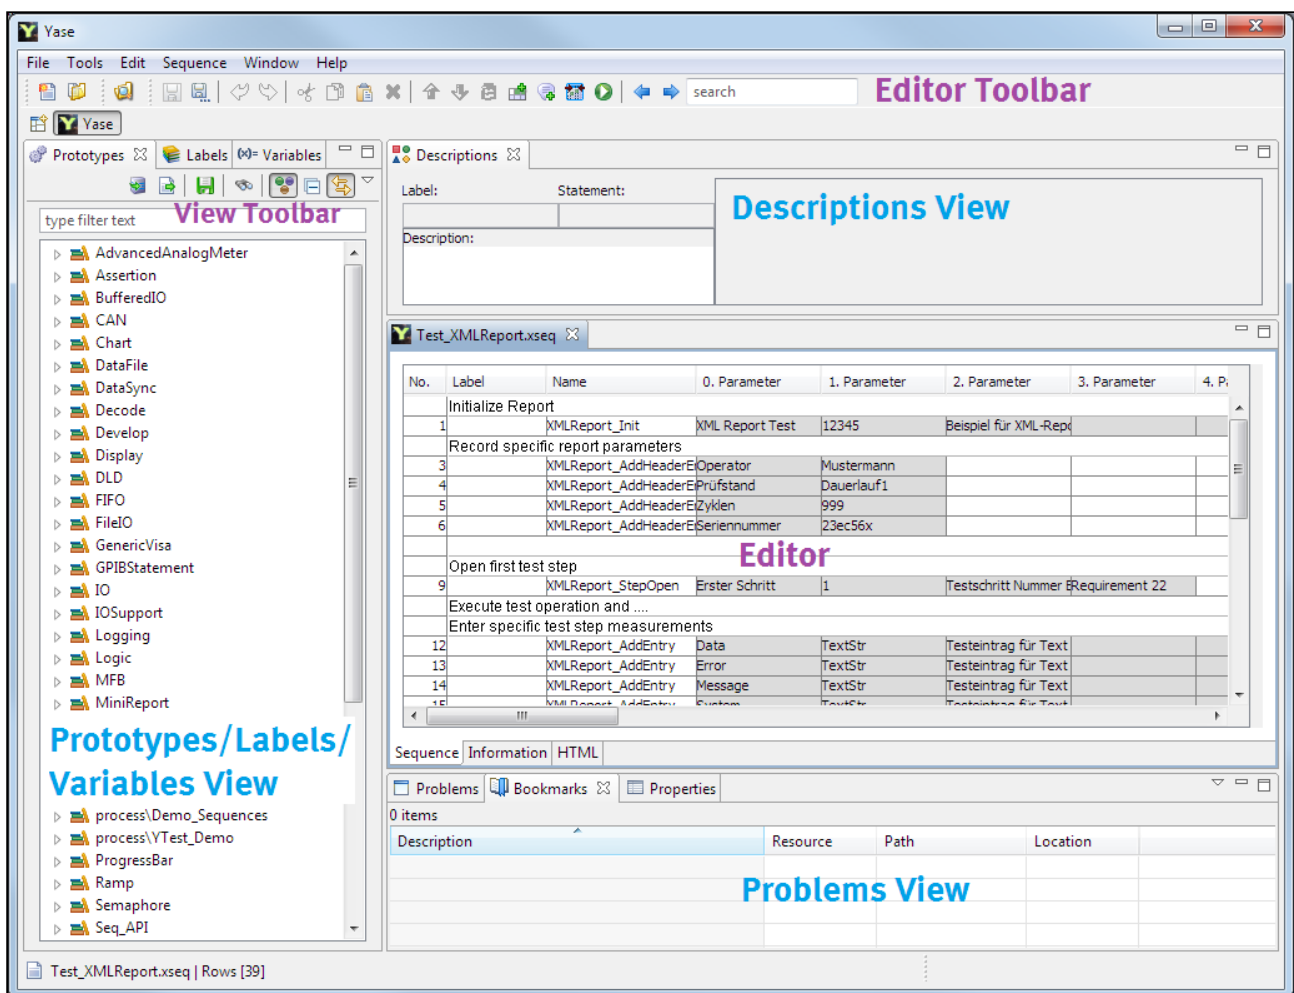


Fig. 42 Views

These *Views* are described in the following chapters.

12.1 Descriptions View

The *Descriptions View* gives you all information about the active sequence step or statement (selected line):

- *Label* – the name of the used label,
- *Statement* – the name of the used statement,
- *Statement Description*
- *Name*, *Type*, *Direction*, and *Value Type* of all parameters of the statement. Input parameters are marked gray, output parameters are marked green.

This view is only descriptive, no interactions are possible.

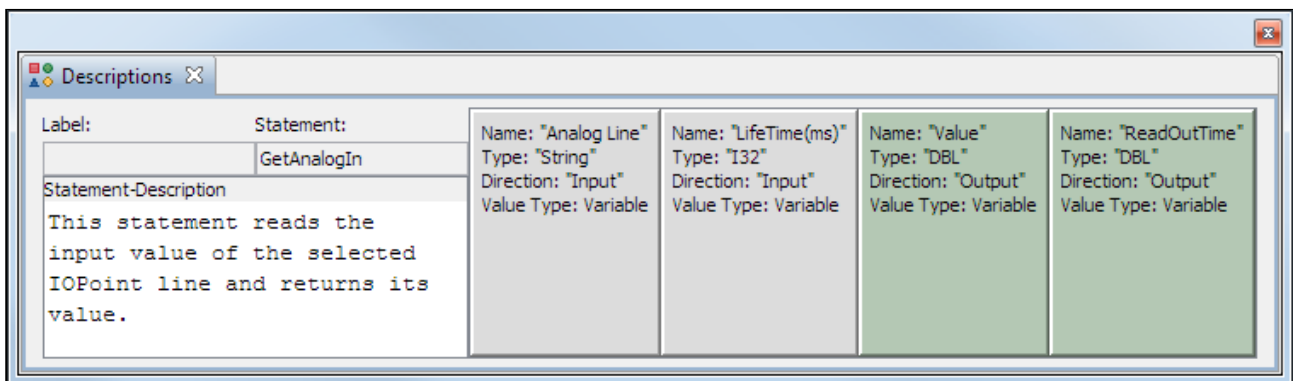


Fig. 43 Descriptions View

12.2 Problems View

The *Problems View* shows error messages and warnings relating the running processes.

Optionally you can open several *Problems Views* with different configuration settings.

Double clicking on an error message line brings you to the respective line in the *Edit* window. The *Problems View* gives an error description and detailed information about its resource, path, location and type. Errors are also marked in the text by a red mark in front of the line number.

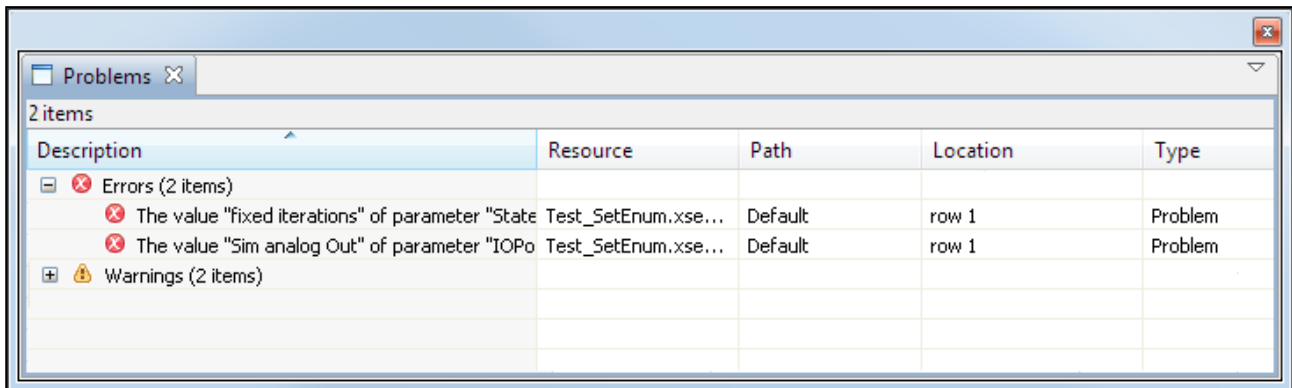


Fig. 44 Problems View

Double clicking the red icon  a window with the information about the error message appears. This information is identical to the information provided by the *Problems View*.

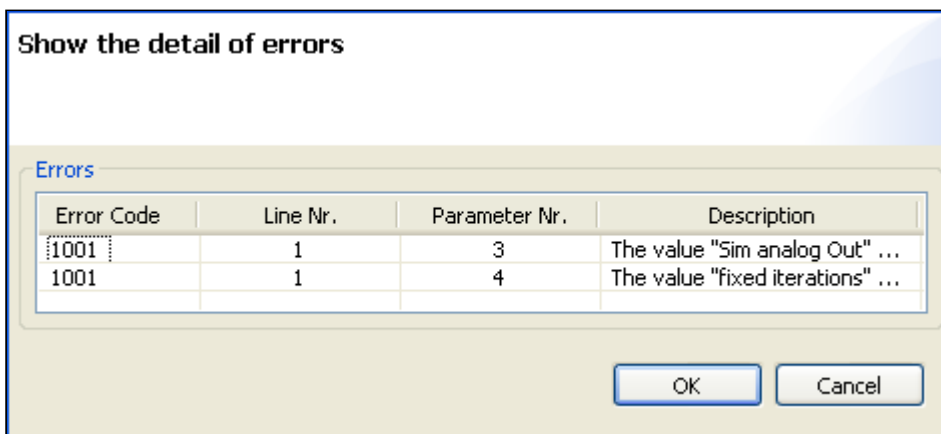


Fig. 45 Error Visualization Message

Activating a row with a "+" on the left will show further information about the errors in the respective line.

The *Problems View* allows some configuration settings.

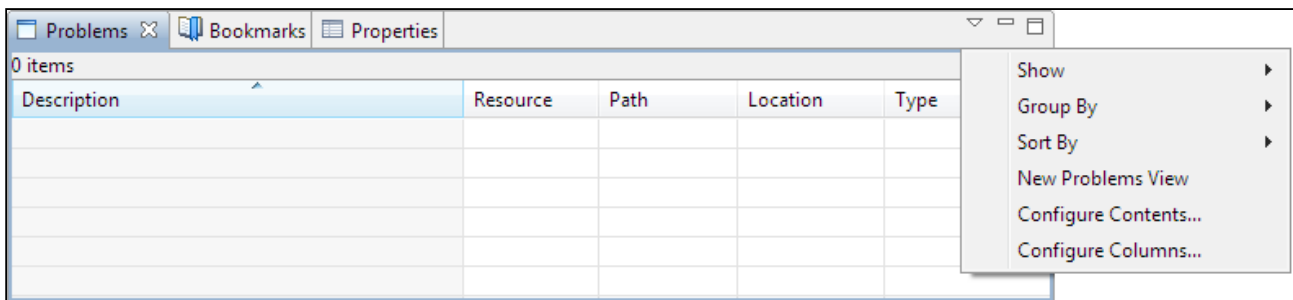


Fig. 46 Problems View - Settings

- *Show* allows to select the problems type: *All Errors*, *Warnings on Selection*, *Errors/Warnings on Selection*, *Errors/Warnings on Project*, or *All* off them should be displayed in the problems list.
- *Grouped By* allows to sort the table entries by Severity, Type or None.
- *Sort By* allows to decide, if the list elements are sorted by *Description*, *Resource*, *Path*, *Location*, or *Type* and if they are sorted *Ascending*.
- *New Problems View* allows to create more problems lists. The new view is opened automatically in an new tab with a new name.
- *Configure Contents...* allows to define filter settings for the selected *Problems View*.
- *Configure Columns...* allows to edit the column entries and to set the default width of each column. Select the entries for the current *Problems View*.

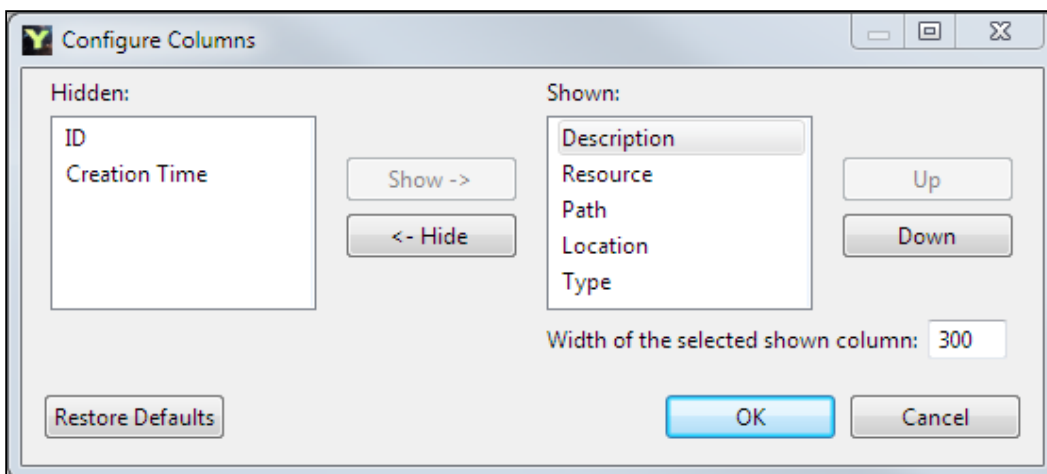


Fig. 47 Problems View - Preferences

12.3 Prototypes View or Statements View

The view on the left side of the *Yase* window contains one tab called Prototypes. Precondition to work with *Yase* is to have the respective statement libraries imported. Information about how to import your functions is given in Section *Import Statements* of Chapter [Installation](#). A statement list contains all project related functions, grouped in libraries.

This statement list can be imported from a server or loaded from a file.

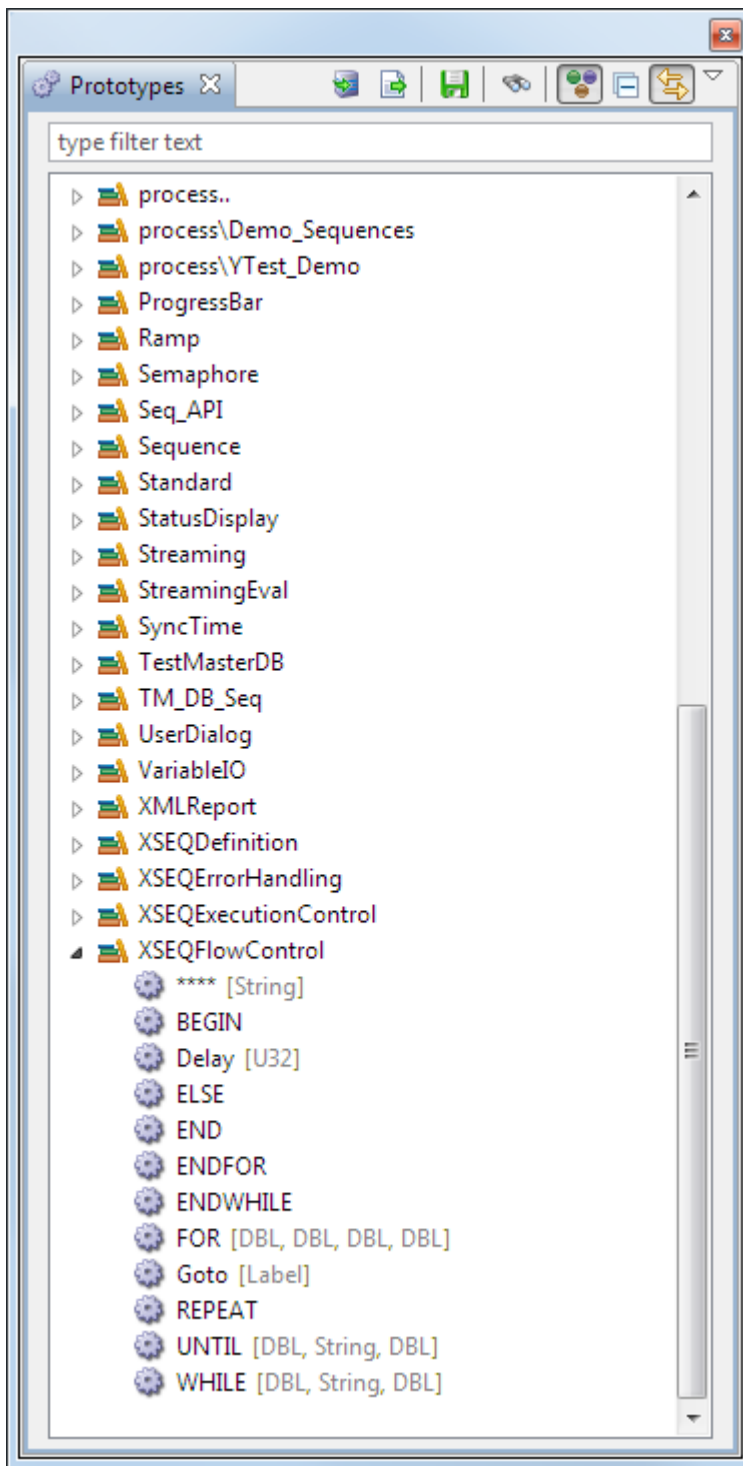


Fig. 48 Prototypes View

The *Prototypes View* comes with the following tool bar.



Import from server: The Import from server function imports a statement list from the system server. Default file format for Yase is `.xml`. Choosing Import from server, a window pops up where host and port have to be set. Please use `127.0.0.1` as default for the local host.



Import from file: The statements can also be loaded from a file at a chosen location.



Save prototype as... Select file name and file directory.



Show the statements data in fast access bar, if activated.



If this button is activated, the parameters of the statements and their data types are displayed behind the statements name. Input parameters are marked green, output parameters are marked gray.



This function collapses all expanded statement folders.



Link to editor. If this button is activated, the *Editor* is linked to the statement list. This linking implies that, if a statement is selected in the *Editor*, the corresponding statement in the statement list is selected and the containing folder is expanded.

12.4 Variables View for Editing

The *Variables View* shows all before defined variables in an alphabetical list. If one variable is selected, its occurrence in the sequence is displayed in the bottom line of the view.

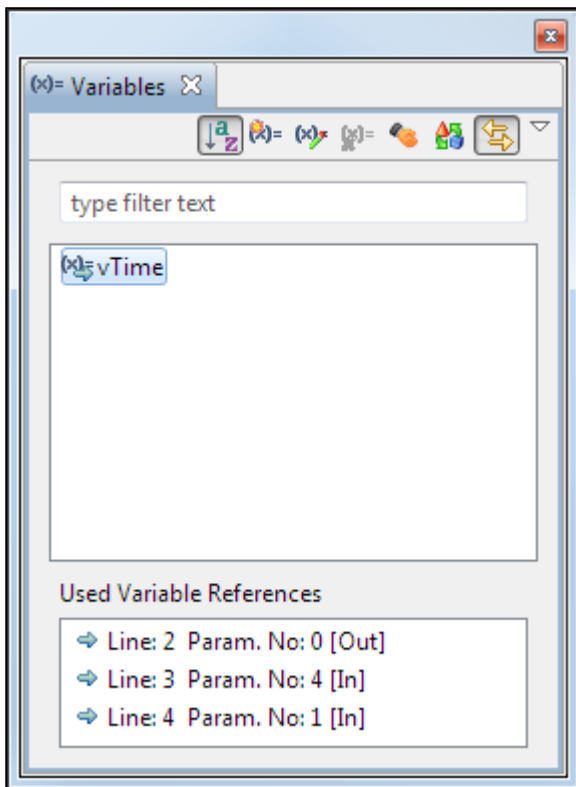


Fig. 49 Variables View

Active – applied – variables appear in dark blue, not used in middle blue. If you click on a used variable, the display at the bottom shows the variable references:

- Line number
- Parameter number
- In-/Output

It is not possible to delete used variables. If you rename the variable, the editor will change all variables with this name.

The *Variables View* provides the following tool bar functions:



Sort the variables alphabetically ascending or alphabetically descending.



Create a new variable. A dialog appears, where the variable name can be entered (see Figure *Create/Edit Variable* below).



Edit a variable. A dialog appears, where the name of the variable can be changed.



Delete a variable. Please note, that predefined variables cannot be deleted.



Use a variable. To use a variable, one table cell in the *Edit Field* has to be selected by double mouse click. Pressing this button transfers the selected variable from the *Variables View* to the selected table cell. An alternative method is double clicking the variable after selecting the table cell.



Change to variable/change to constant.

If a table cell contains a certain constant, it might be desirable to change that constant to a variable. In order to do so, you have to select that table cell and press this button. A dialog appears, where the name of the new variable can be inserted. If on the other hand the selected table cell contains a variable, it can be converted to a constant by pressing this button.

If once a variable was entered into a field, it is not possible to put an arbitrary constant into it without using this function. It is also possible to perform the changes by a right mouse click to the table field and choosing the command from the context menu. This is only possible, if the parameter is not in the edit mode,



Link to Editor. If this button is activated, the parameter table cells in the *Editor Field* are linked to the *Variables View*. That means that if a variable in a table cell is selected, the corresponding variable in the *Variables View* is selected automatically.

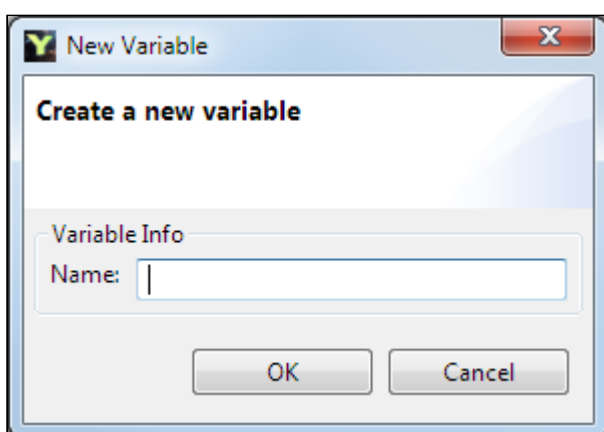


Fig. 50 *Create/Edit Variable*

13 Tools

13.1 Undo-Manager

The *Undo-Manager* allows reversing all steps since opening the currently edited sequence

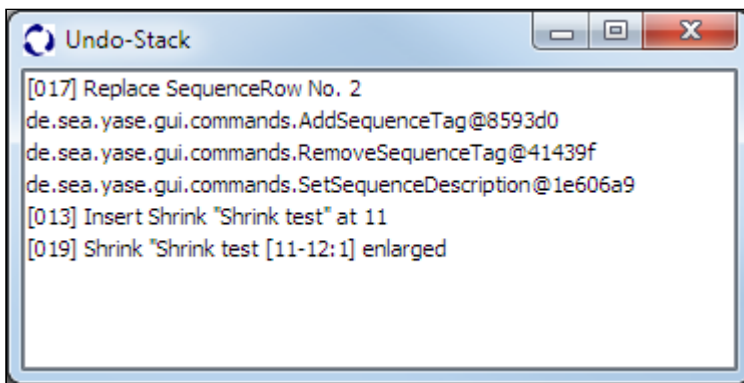


Fig. 51 Undo Manager

The *Undo-Manager* is opened by

 Sequence > Undo-Manager

A list of all changes is displayed in a separate window. Please choose the line before the last step to be undone by mouse click from the list. The selected step is not undone.

The changes will be managed, even if the sequence is saved. The *Undo-Stack* is deleted when the sequence is closed.

13.2 AutoCheck

The *AutoCheck* tool offers the opportunity to check and correct statements within a group of sequences automatically, e.g. in case parameters have changed.

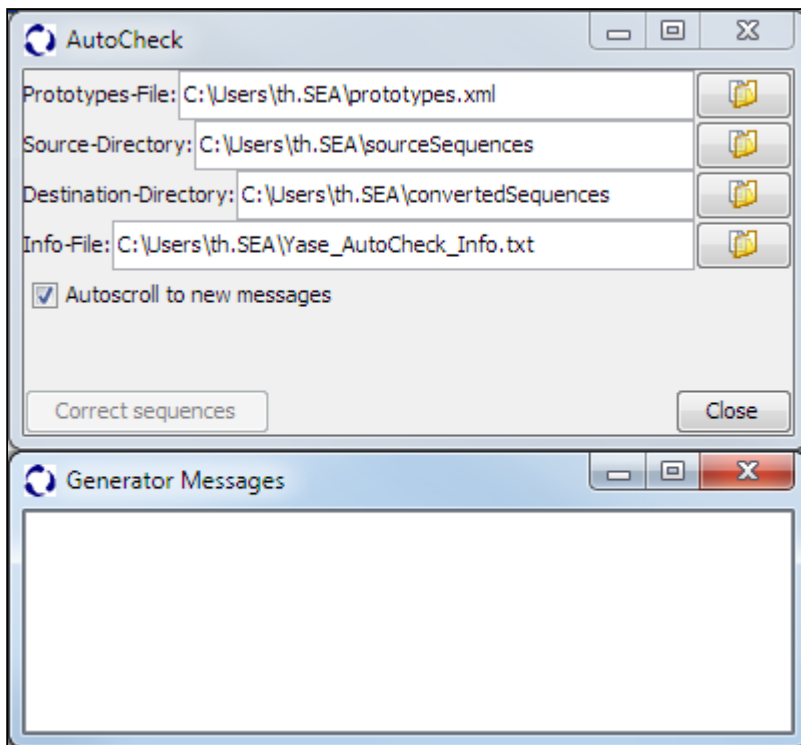


Fig. 52 Auto Check

The auto check function is opened by:

 Tools > Auto Check

 Before auto changing sequences please make sure, that the changed parameters could not corrupt your sequences.

Before using the *AutoCheck* function it is recommended to create copy of your the newest statement file by the green *Save* button .

After starting the *AutoCheck* function first of all select the current statement file. Then select source and destination directory for the sequences to be changed. All sequences in all sub directories of the source directory will be changed and the whole file structure will be reconstructed in the destination directory. After selecting a path for the info file please start the *AutoCheck* function by pressing the *Correct sequences* button. The *Generator Messages* window will display all information about the *AutoCheck* process; the same information can be found within the *Yase_AutoCheck_Info.txt* file.

13.3 AutoPrint

The *AutoPrint* function allows to select and print more than one sequence at a time. The *AutoPrint* function can be reached by the *Tools* menu:

Tool > AutoPrint

After starting the *AutoPrint* function please select the directory with the sequences to be printed in the left part of the panel. The respective sequences have to be selected by mouse click and to be added to the print list in the right part of the panel. The sequence selection window includes all elements of the standard *Windows* file dialog.




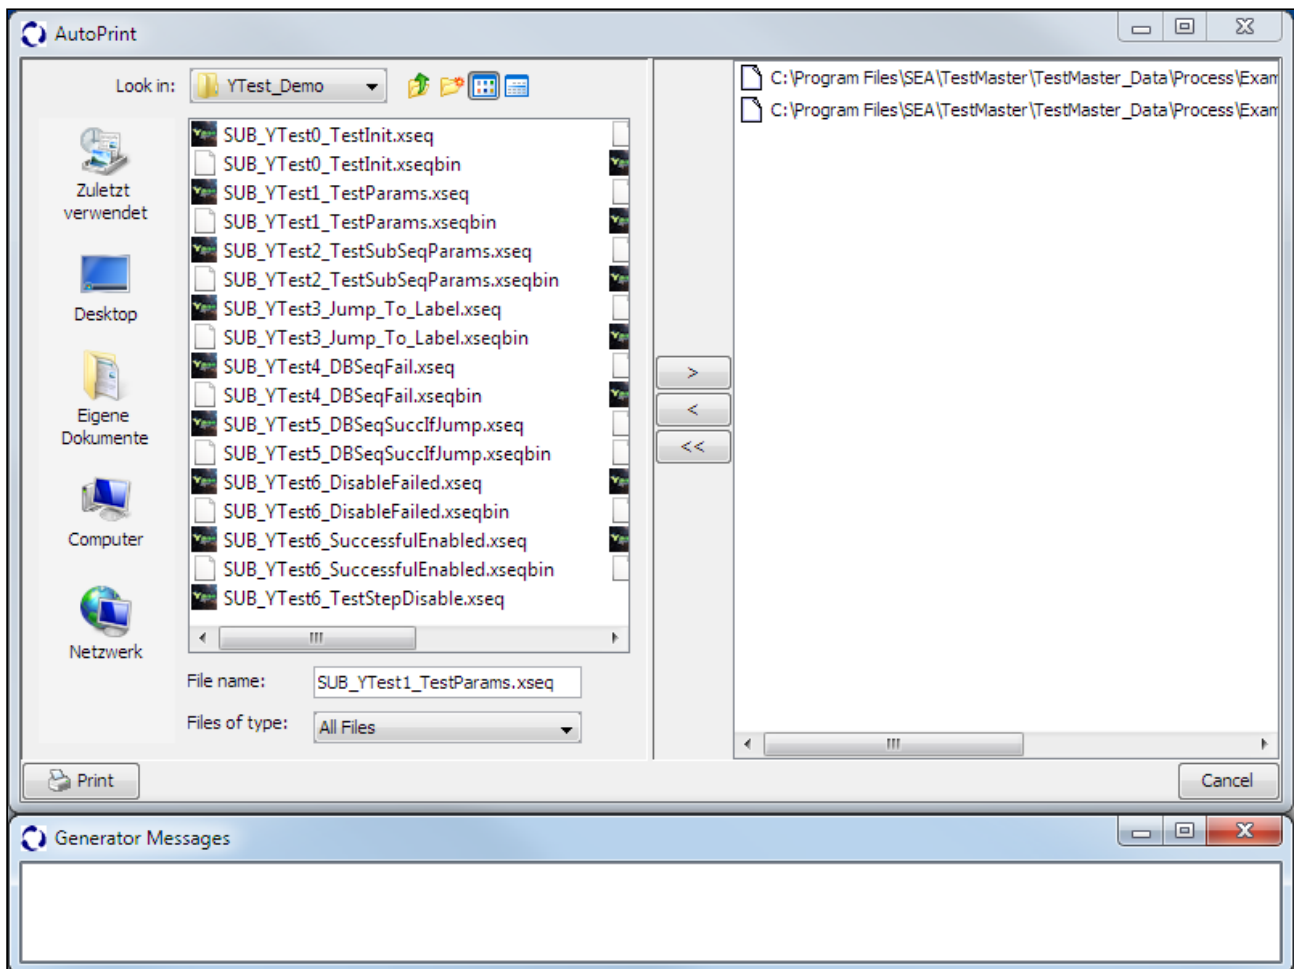



Fig. 53 AutoPrint Function with Generator Messages Window

Sequences can be selected and removed from the list by the arrow buttons.

-  Add the selected sequences to the print list.
-  Remove selected sequences from the print list.
-  Remove all files from the print list.



Start print process. The files will be sent to the default system printer.



Cancel print selection and close *AutoPrint* panel.

After pressing the print button, information about the print process is given within the *Generator Messages* window. The *Generator Messages* window opens automatically with the *AutoPrint* panel at the bottom of the display.

13.4 Print

To print a sequence, the print button or the print function in the *File* menu has to be used. The *Print Preview* opens and allows some print settings.

The print preview is divided into two sections, the page tree of the file to be printed in the left part and the page view in the right part.

The page tree distinguishes between *TextArea-Pages* and *Table-Pages*.

The *TextArea-Pages* are generated automatically by the system and contain several information about the sequence, the *Table-Pages* contain the sequence itself.


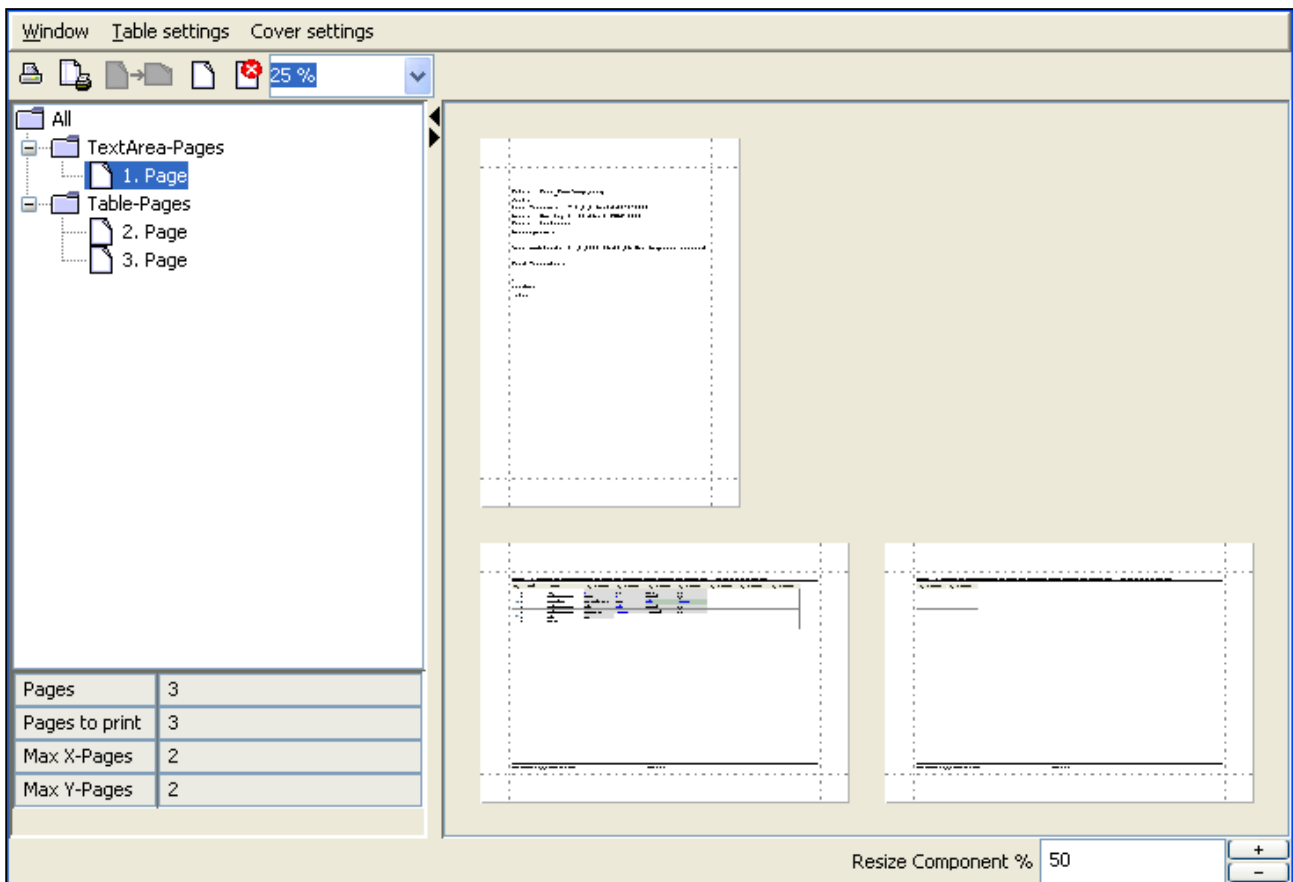


Fig. 54 Print Preview

The following functions are activated, if one or more pages are selected by mouse in the page overview.



Switch the format of the selected pages to portrait or landscape.



Activate the selected pages for printing.



Deactivate the selected pages for printing.



Resize the page view to see more than one page.

In the bottom left part some information about the document is given as the total number of pages, the number of *Pages to print*, the number of pages in vertical (*Max X-Pages*) and horizontal (*Max Y-Pages*) direction.

The *Table settings* menu allows to fit the columns of the sequence to optimal size. Besides the page selection can be ignored by selecting *Unselect all*. *Use tabel selection* will print the selected pages.

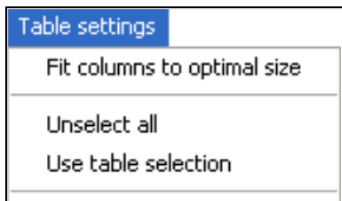


Fig. 55 Table Settings Menu

In the right part of the panel the page preview is shown. The number of pages to be printed can be controlled by the resize function.




Fig. 56 Resize Print

Resize the print in steps of 5 %. Header and footer of the page will be printed in 100 % size, only the sequence is resized.

Resizing will reduce the number of pages to print, increasing will enhance the number of pages.

By the *Cover settings* menu you can show or hide *Variables* and *Labels*. Variables and labels are listed as additional text in the *TextArea-Pages*.

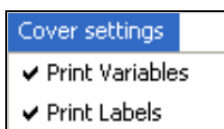


Fig. 57 Cover Settings Menu

Now start the print process:



Print the sequence with the selected setting to the default system printer.



Starts the print by the standard system printer dialog.

The table pages contain a header, which contains the sequence path and a footer which contains the Yase versions and the page number.

14 Icons – Short Description

Icon	Description	Appearance
	<i>AutoCheck</i> offers the opportunity to check and correct statements within a group of sequences automatically.	Tools Menu
	The <i>AutoPrint</i> function allows printing more than one sequence at a time.	Tools Menu
	New sequence. Opens an empty sequence input area.	Toolbar
	Open sequence from file.	Toolbar
	Save/download file. The current sequence will be saved to the default path.	Toolbar, File System Manager
	Save sequence as... Opens a file selector to save the current sequence to a new destination.	Toolbar
	Undo last step.	Toolbar
	Restore last removed step.	Toolbar
	Copies the selected lines to the clipboard and erases them from the sequence.	Toolbar
	Copies the selected lines to the clipboard without erasing them.	Toolbar
	Inserts the selected lines from the clipboard into the current sequence at the selected line.	Toolbar
	Deletes the selected lines.	Toolbar
	Shift selected lines or elements up.	Toolbar
	Shift selected lines or elements down.	Toolbar

Icon	Description	Appearance
	Create a <i>Shrink</i> . For details see <i>Shrink</i> function.	Toolbar
	Inserts a statement before the selected line.	Toolbar
	Inserts a comment line before selected line.	Toolbar
	Resizes the table columns.	Toolbar, Sequence Menu
	This function executes a sequence. A window appears, where consistency of host and port can be checked.	Toolbar, Sequence Menu
	Opens the print preview.	File Menu
	Sequence Information: Gives general information about the sequence as editor version, user, and history.	Sequence Menu
	Export to File: Exports a sequence to a .txt-file.	Sequence Menu
	Check: Manual trigger of error detection. Checks the selected sequence and marks the row the error occurs. The error description is displayed in the <i>Problems View</i> .	Sequence Menu
	Sort the listed labels by name. The button can be activated (sort by name) or deactivated.	Labels View
	Rename the selected label. A dialog to change the label will appear.	Labels View
	Use element. The selected element will be used in the selected sequence line.	Labels View, Variables View
	Goto label position. The cursor will go to the sequence line the selected label is used.	Labels View

Icon	Description	Appearance
	Activate or deactivate the link to the editor. If link is activated, the content related to the currently edited sequences is displayed.	Labels View, Variables View, Prototypes View
	Sort the variables alphabetically ascending or alphabetically descending.	Variables View
	Create a new variable. A dialog appears, where the name can be entered.	Variables View
	Edit a variable. A dialog appears, where the name of the variable can be changed.	Variables View
	Delete a variable. Predefined variables cannot be deleted.	Variables View
	Change to variable/change to constant. If a table cell contains a certain constant, it might be desirable to change that constant into a variable.	Variables View
	Imports a statement list from the system server.	Prototypes View
	Import from file loads the statements from a file at the chosen location.	Prototypes View
	Save prototype as...	Prototypes View
	Select statements data in fast access bar.	Prototypes View
	If this button is activated, the parameters of the statements and their data types are displayed behind the statements name.	Prototypes View
	This function collapses all expanded statement folders.	Prototypes View
	Variables.	Outline View
	Comments.	Outline View

Icon	Description	Appearance
	Subsequence.	Outline View
	Shrink.	Outline View
	Label.	Outline View
	Show properties.	Processes View
	Add Folder; a dialog opens and the name of the new process folder has to be set. The new folder is added to the process table.	Processes View
	Add element.	Processes View
	Edit process.	Processes View
	Delete element.	Processes View, File System Manager
	Run process; this button is enabled only if at least one sequence is selected. Runs the selected sequence and all related processes.	Processes View
	Stop process; this button is enabled only if at least one sequence is selected. Stop the selected sequence and all related processes.	Processes View
	Compile process; this button is enabled only if the the processing is stopped. The function compiles the selected processes.	Process View
	Show process chain cycles; opens the <i>Process chain cycles</i> view.	Processes View
	Opens the Process errors view.	Processes View
	Enable processing; starts the processing, which means i.e. that processes triggered by events are executed, if the event is received. If processing is running, the button switches to a stop button, which stops the running processing.	Processes View

Icon	Description	Appearance
	Query execution statistics	Processes View
	Enable / disable debug mode.	Processes View
	Switch to debug perspective	Processes View
	Edit element.	Processes View
	Clear table.	Processes View
	Refresh.	Log View
	Clear table	Log View
	Scroll backwards.	Log View
	Scroll forwards.	Log View
	Create new folder.	File System Manager
	Rename the selected file or a folder.	

Icon	Description	Appearance
	Add the selected sequences to the print list.	AutoPrint
	Remove selected sequences from the print list.	AutoPrint
	Remove all files from the print list.	AutoPrint

Icon	Description	Appearance
	Start printing process on the default system printer.	AutoPrint
	Cancel print selection and close <i>AutoPrint</i> panel.	AutoPrint
	Switch the format of the selected pages to portrait or landscape.	Print
	Activate the selected pages for printing.	Print
	Deactivate the selected pages for printing.	Print
	Resize the page view to see more than one page.	Print
	Print the sequence with the selected setting to the default system printer.	Print
	Starts print by the standard system printer dialog.	Print

15 Abbreviations and Glossary

A	
API	Application Programming Interface; interface for application programming
D	
DB	Database
G	
GUI	Graphical User Interface
P	
Perspective	A perspective is a predefined set of <i>Views</i> – configured for a special use case, e.g. creating sequences or debugging.
Process	Running sequences are called processes. Please note, that one sequence can be executed more then once, each one represents a process.
S	
Sequence	Sequences are user definable programs, which allow to run and repeat tests with predefined parameters. Please note: The term <i>Sequence</i> designates the program created with <i>Yase</i> .
STMT	Statement
Statement	Predefined function provided in the sequence editor to create sequences.
Subsequence	A subsequence is a sequence, which is stored with the prefix SUB_ in the process directory. Subsequences can be used in the sequences in the same way as statements. Subsequences can be found in the process directory of the <i>Yase</i> statement list.
V	
View	A function window, which is handled by separate menus.
Y	
Yase	Editor to write <i>TestMaster</i> sequences.