
82

Low Profile Hard Tonneau Cover Installation Manual

1 Accessories Inventory

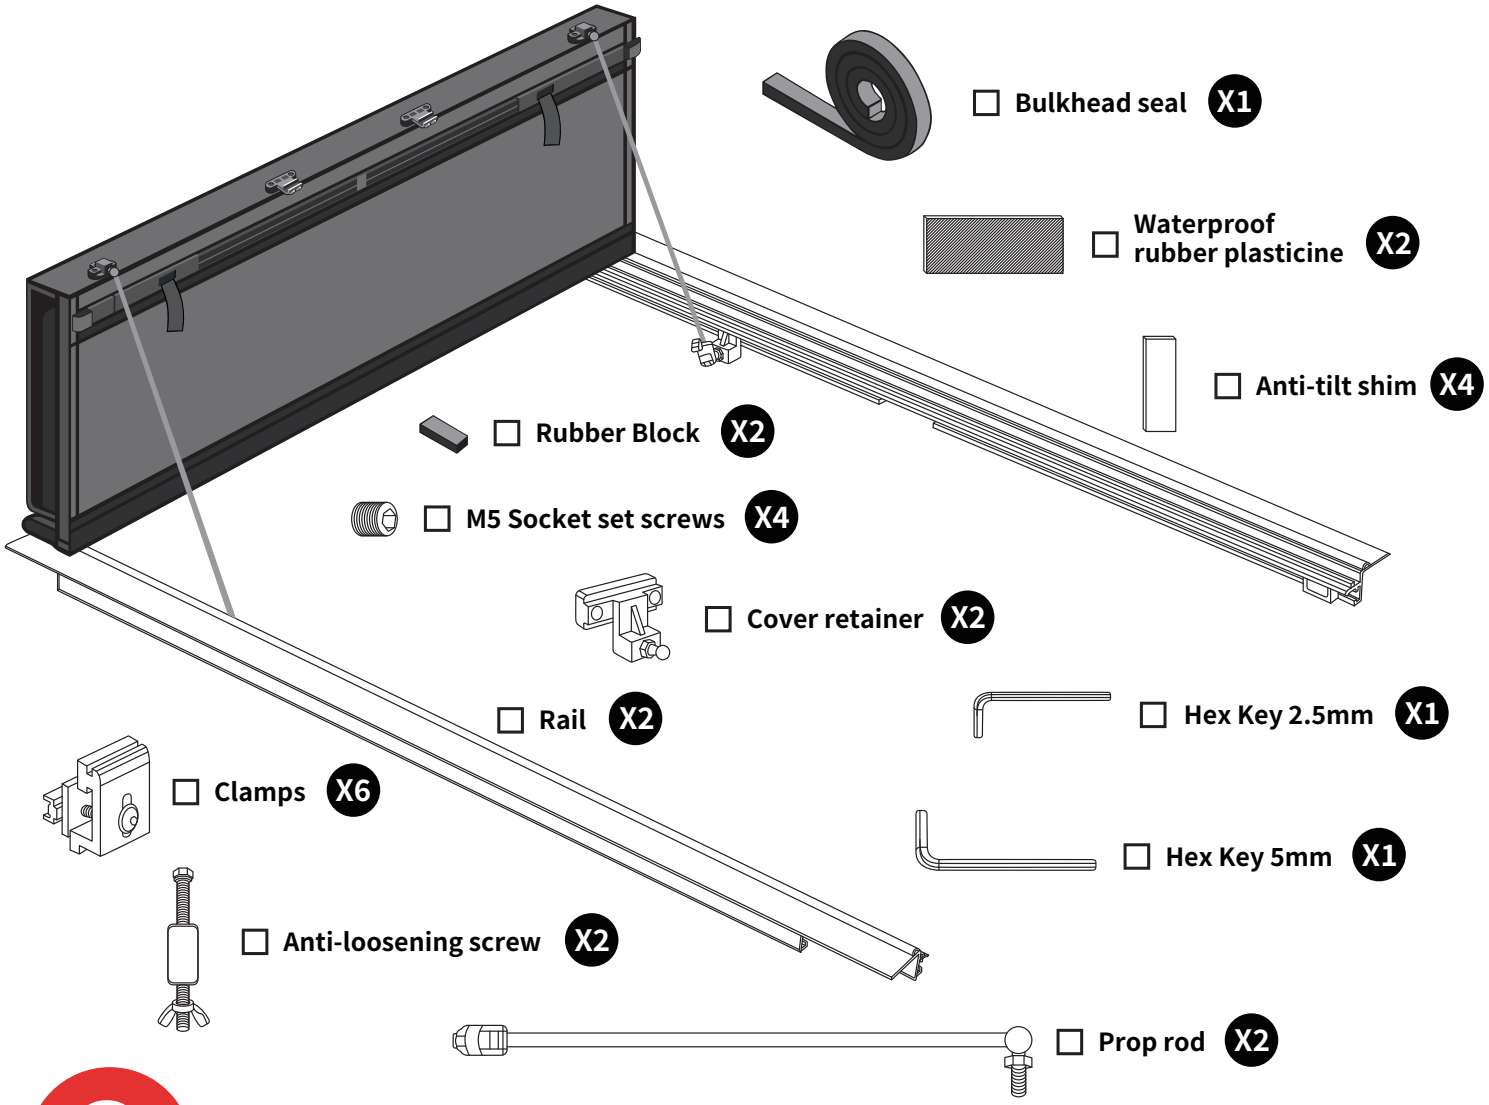

- ☐ Bulkhead seal X1
- ☐ Waterproof rubber plasticine X2
- ☐ Anti-tilt shim X4
- ☐ Rubber Block X2
- ☐ M5 Socket set screws X4
- ☐ Cover retainer X2
- ☐ Rail X2
- ☐ Hex Key 2.5mm X1
- ☐ Clamps X6
- ☐ Hex Key 5mm X1
- ☐ Anti-loosening screw X2
- ☐ Prop rod X2

2 Product Advantages


Our Tonneau Cover Is Made of Several Durable Materials,
Such as FRP Panels Aircraft-grade alloy aluminum and High Performance Structural Sealant Etc.

We Offer Matched Tonneau Cover For Dozens Of Car Models, Fit For The Truck Bed Perfectly.


3 Installation

CAUTION

- CLEAN THE BULKHEAD WITH SOAP AND WATER TO REMOVE IMPURITIES AND GREASE, ALLOWING THE MOISTURE TO EVAPORATE TO ENSURE A DRY SURFACE.

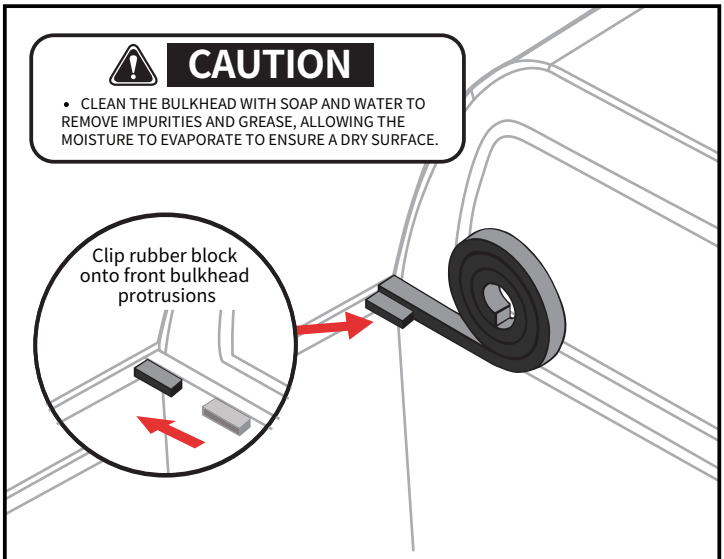


- Peel backing, stick seal edge - to - edge.
- Cut off excess with scissors or utility knife.
- Press evenly for adhesion.
- Skip seal if truck has plastic bed liner.

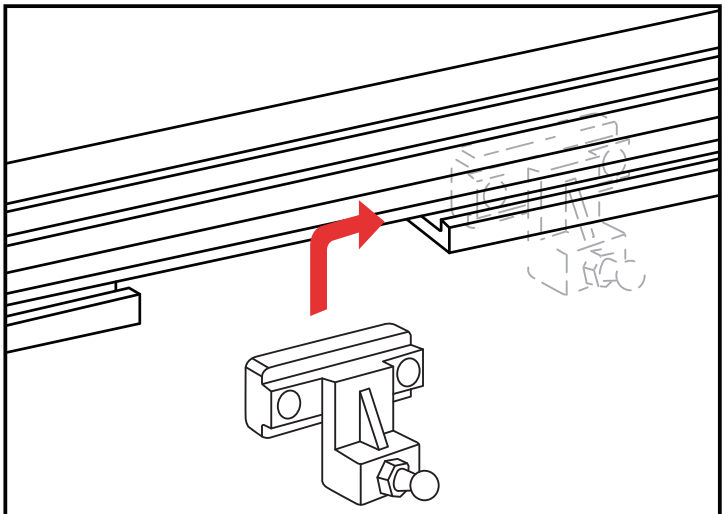

Note:Install the cover retainer on the outer rail.


Slide A, B, C, D to letter positions. (A/B/C: clamps; D: cover retainer).
A/B/C on inner rail, D on outer rail. Watch sharp edges.
Note: The figure only indicates the relative position and order of the parts (not the final positions).Fine-tuning is required after the cover is installed.

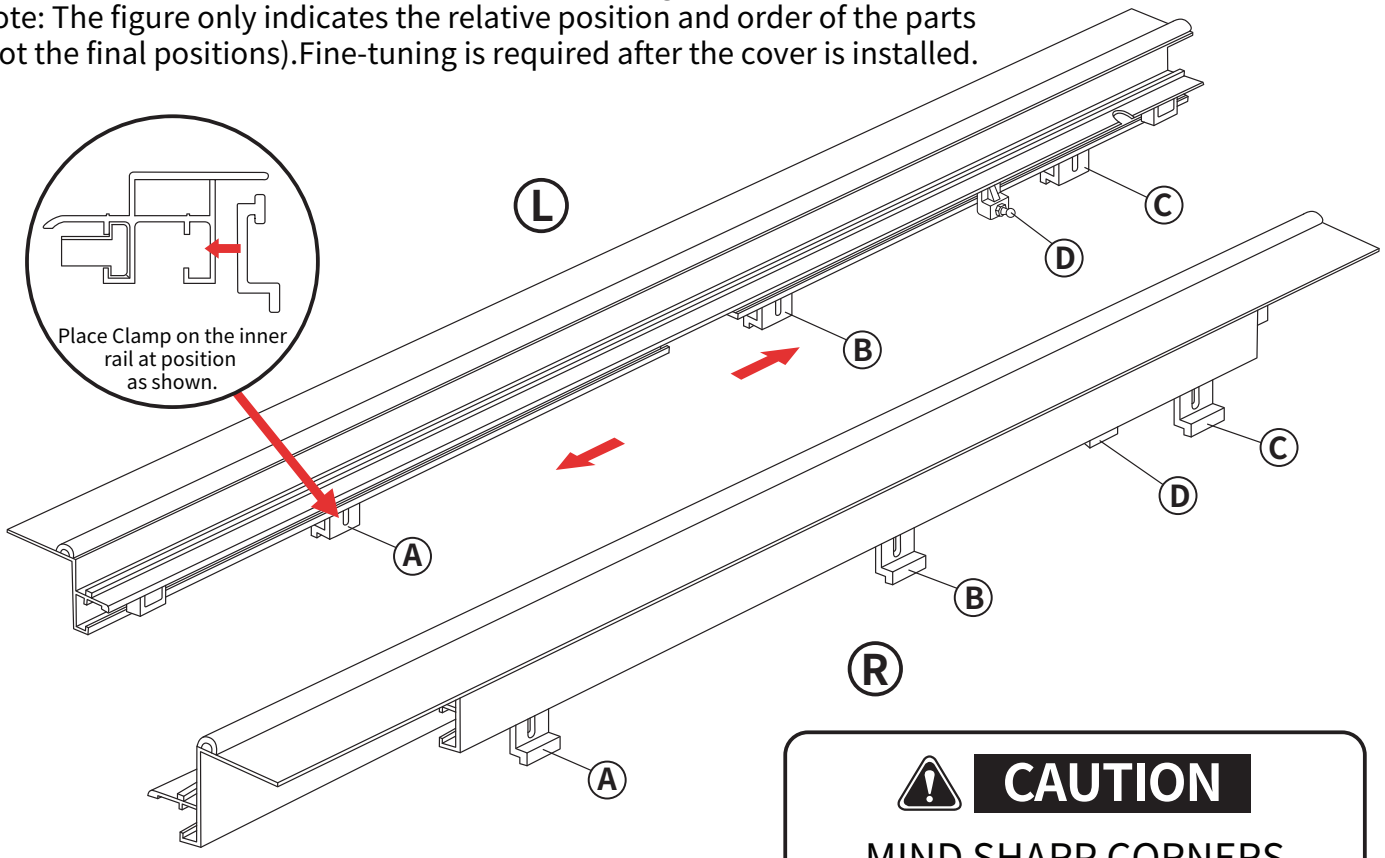


CAUTION

MIND SHARP CORNERS

Install the two sections of the rail parallel to the truck bed side rails. Slide the fixing blocks (clamps components) into the factory rails, three per side.Tighten the clamps on both sides of the rail.

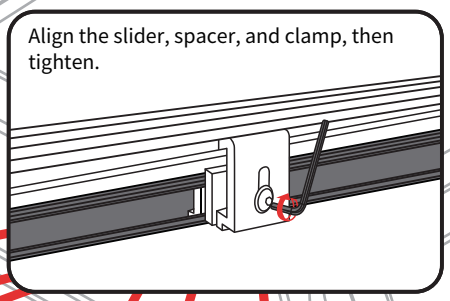


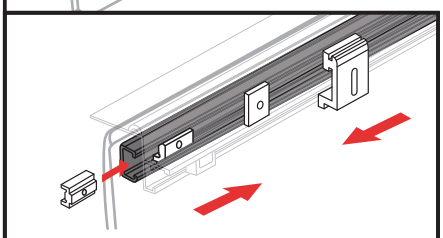


Align outer clamp, middle positioning plate & positioning block; secure centrally with screws.

CAUTION


- CHECK IF THE SIDE RAIL IS ALREADY PUSHED TO THE FRONT. IF NOT, PUSH THE RAIL TOWARDS THE CABIN TO ENSURE THE SIDE RAIL IS POSITIONED CORRECTLY.

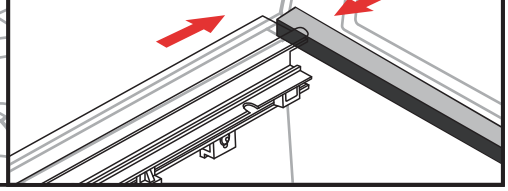


Install the prop rods on both sides of the cover, and store them in the retaining clips as shown, ensuring neat placement for easier installation and later use.

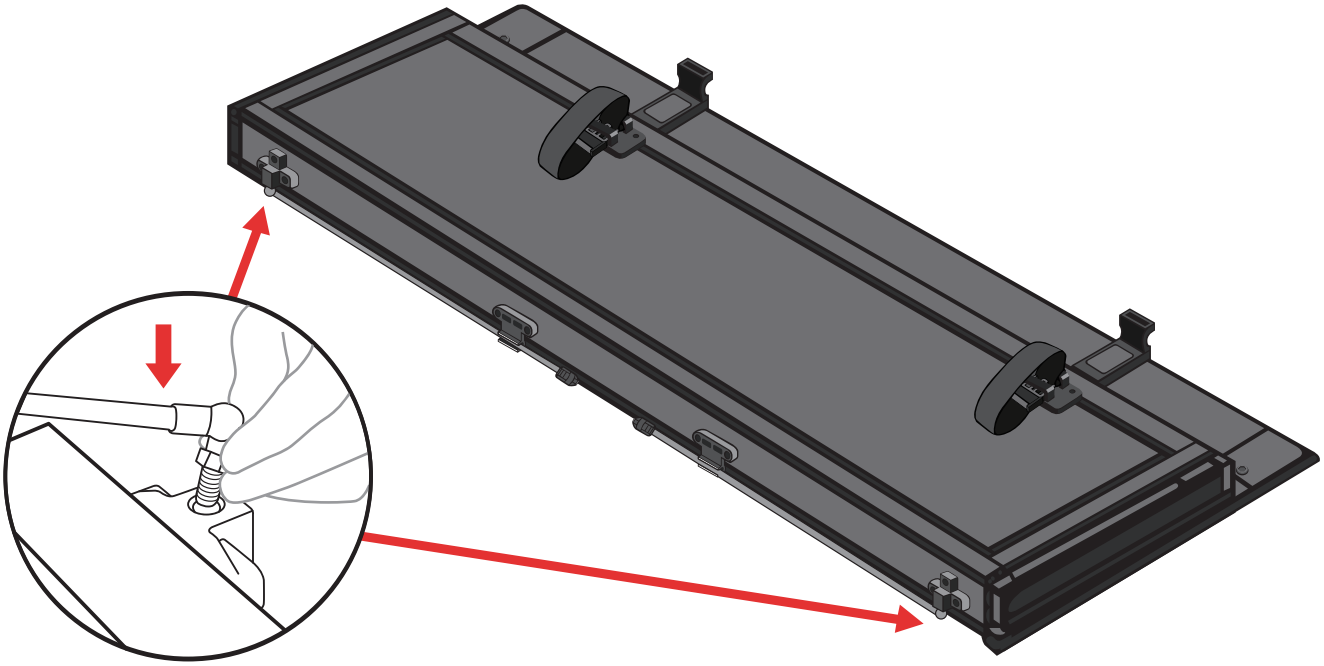



Place the truck bed cover onto the rails, ensuring that the locking latches on both sides of the front edge of the cover are properly positioned against the fixed blocks on the rails.

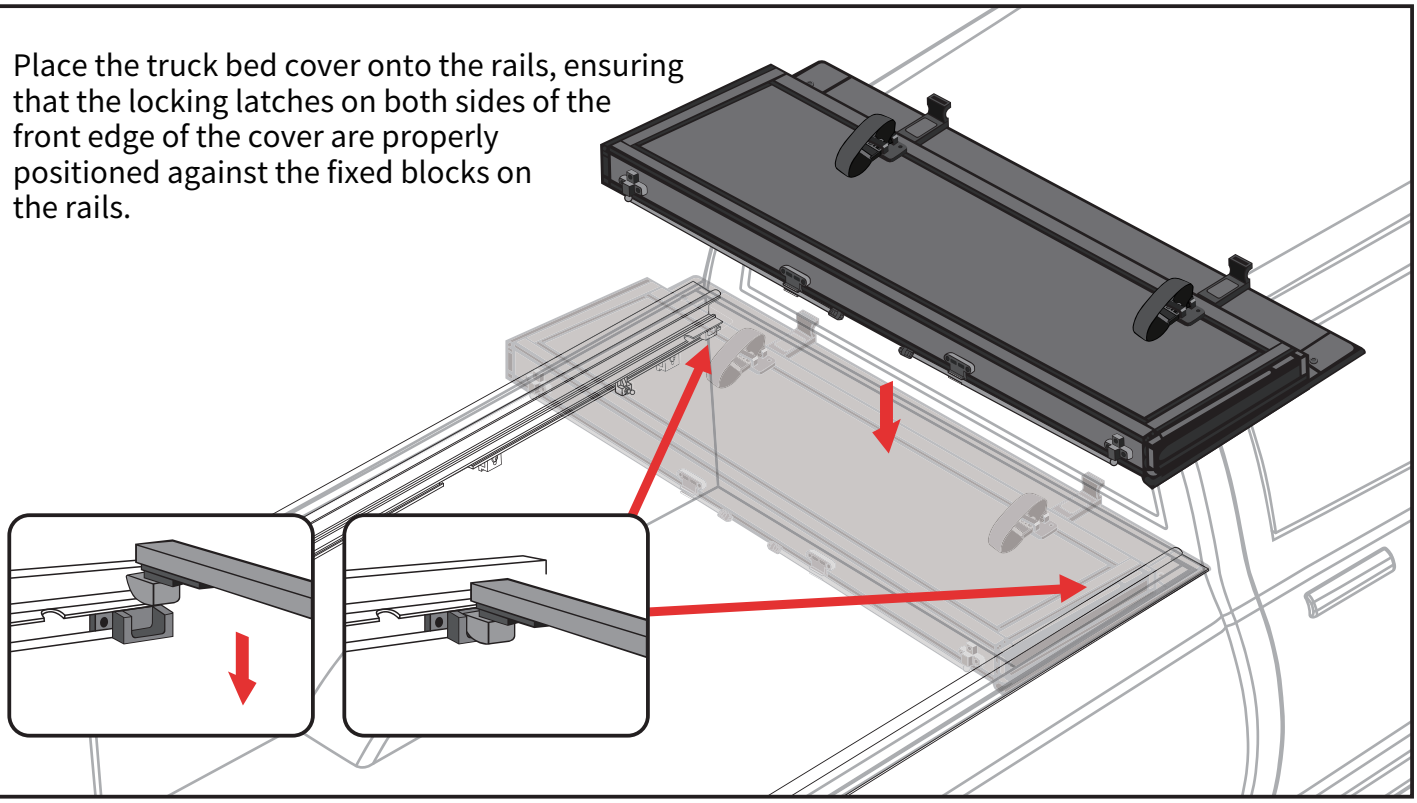

The product comes with a storage bag buckle, which can be fastened into the slot on the front bar when folded up, reducing noise and swinging during driving.

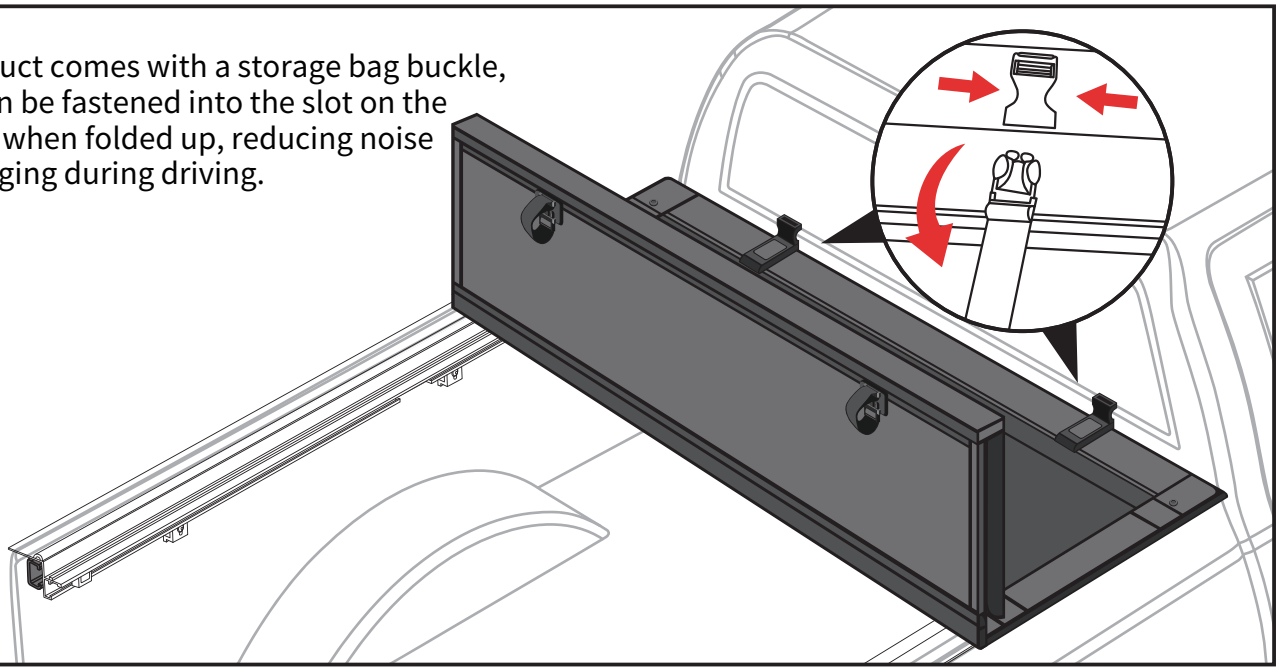


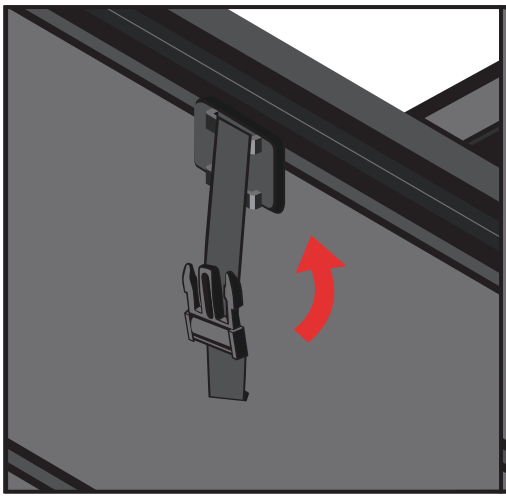


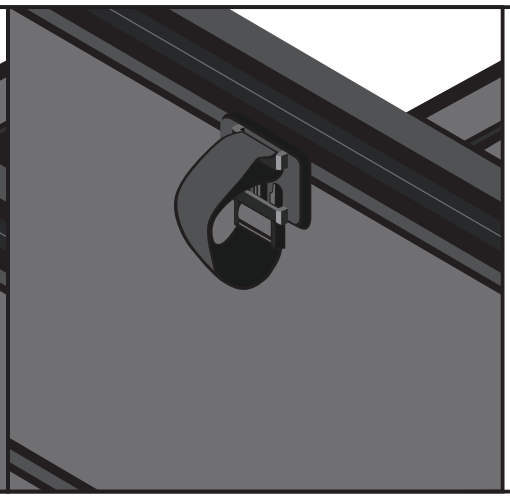

It can also be inserted in reverse into the reserved slot at the back when the cover is unfolded.


Unfold the truck bed cover in order. Ensure tail latches embed in guide rail blocks; if not, adjust position front - to - back so that all four latches can be properly embedded.

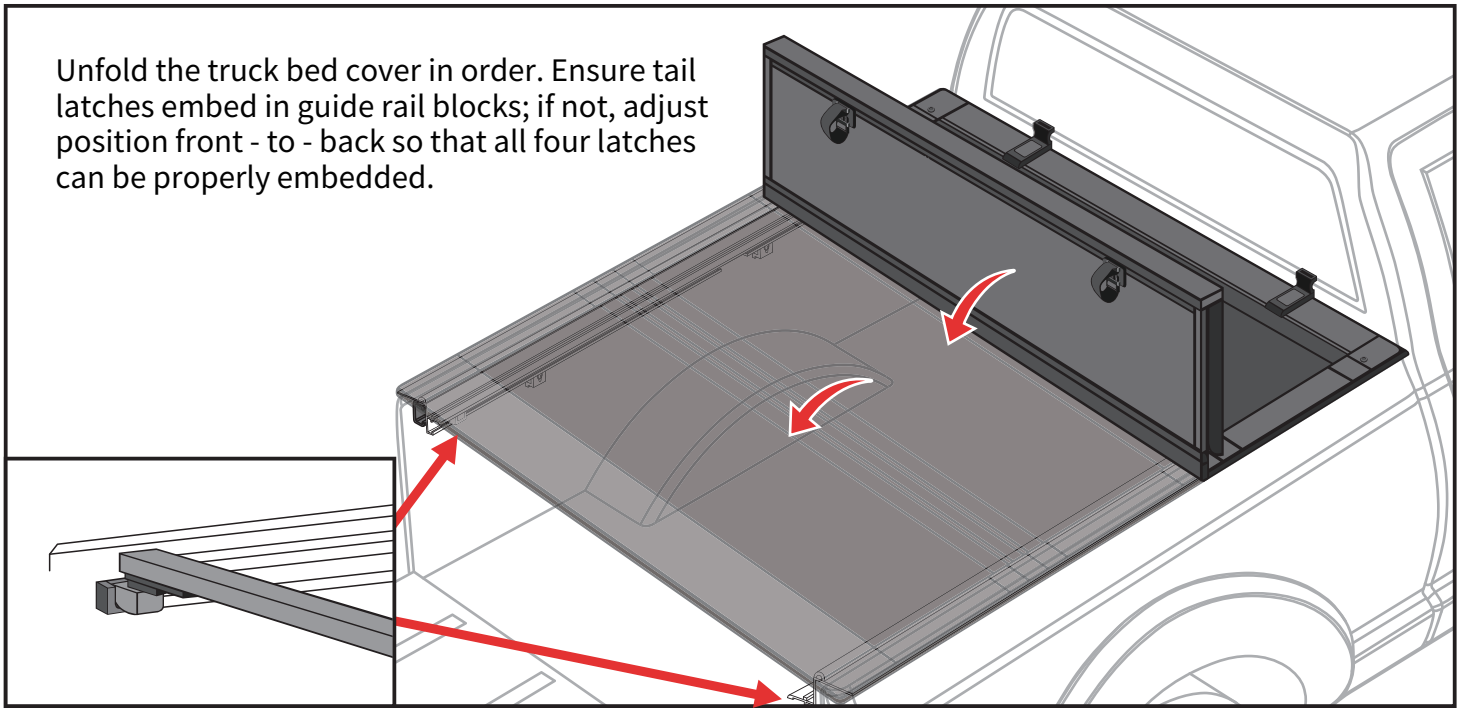

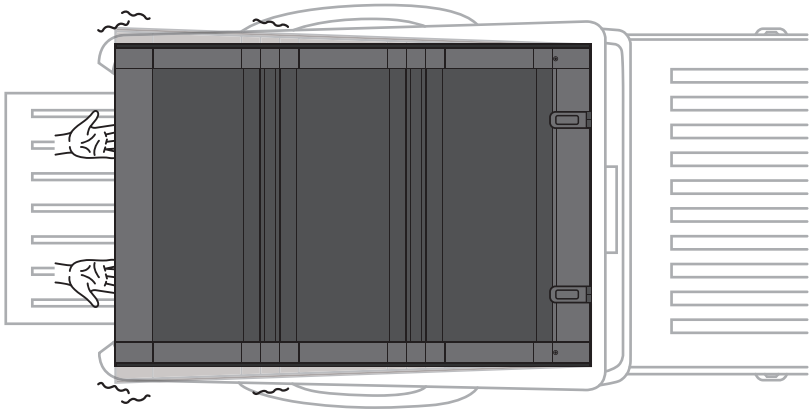


Fine-tune left and right to keep the truck bed cover equidistant from both sides of the truck bed.


Ensure the cover is aligned with the rails on both sides and the anti-tilt shim is in place. Check that the gap between the cover and side rails is even; if uneven, insert an anti-tilt shim at the position indicated in red.

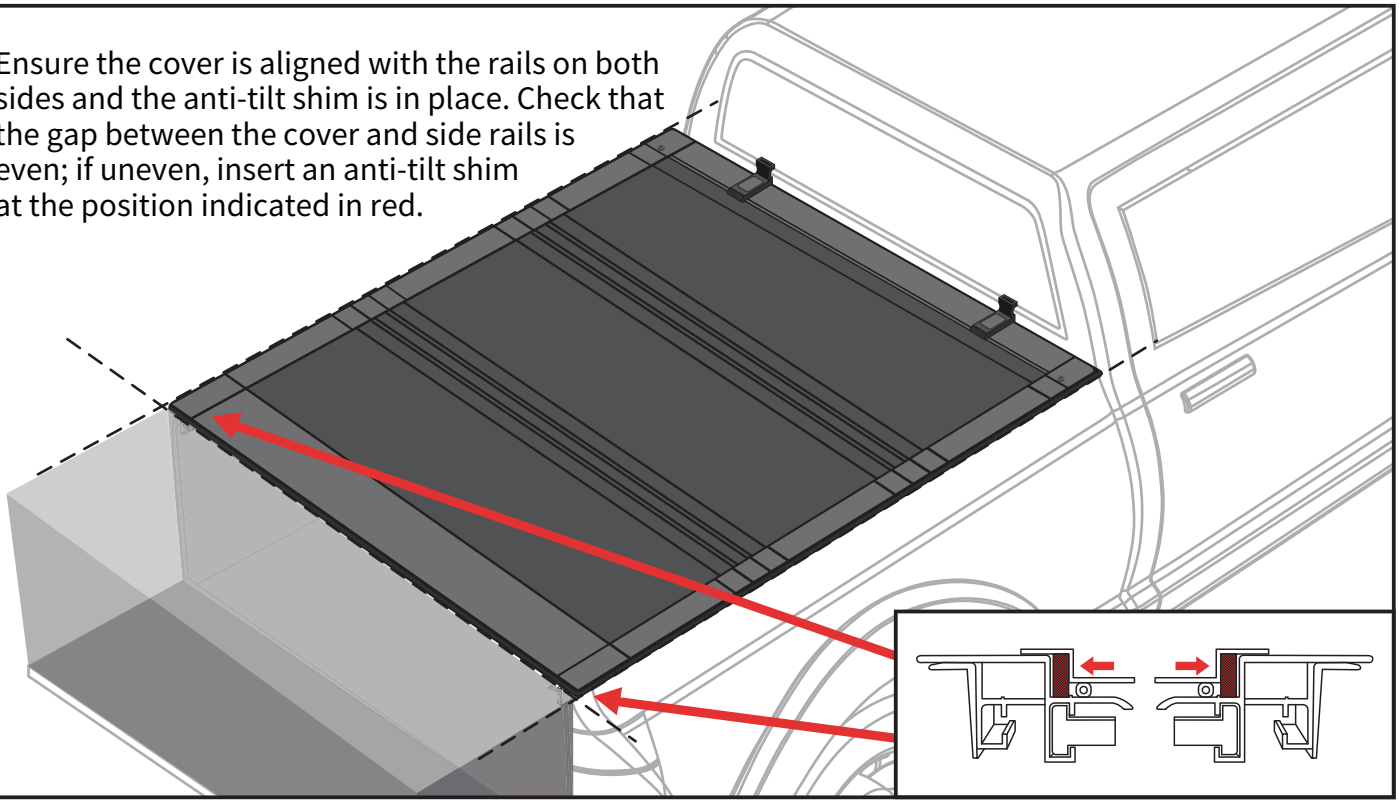


For some models, if guide rails tilt down, place the provided washer at the yellow position to realign.

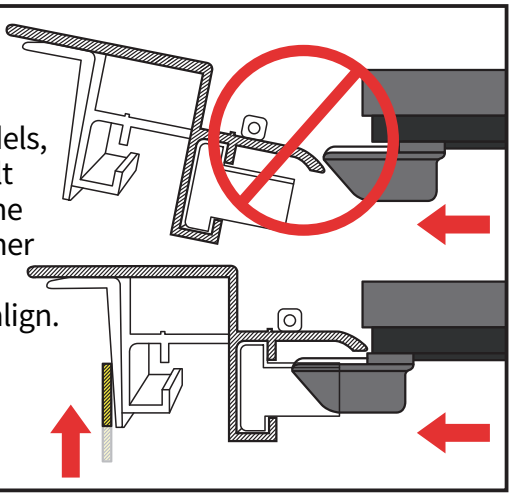


When the cover is fully closed inspect locking tongues properly engages.

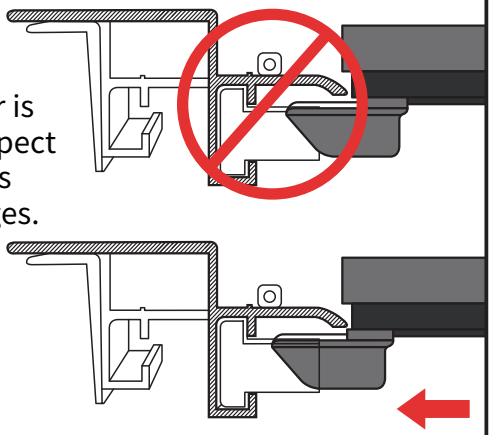

Pull the bottom handle to unlock the latch; pulling either side will release it.Flip open the cover for subsequent operations.

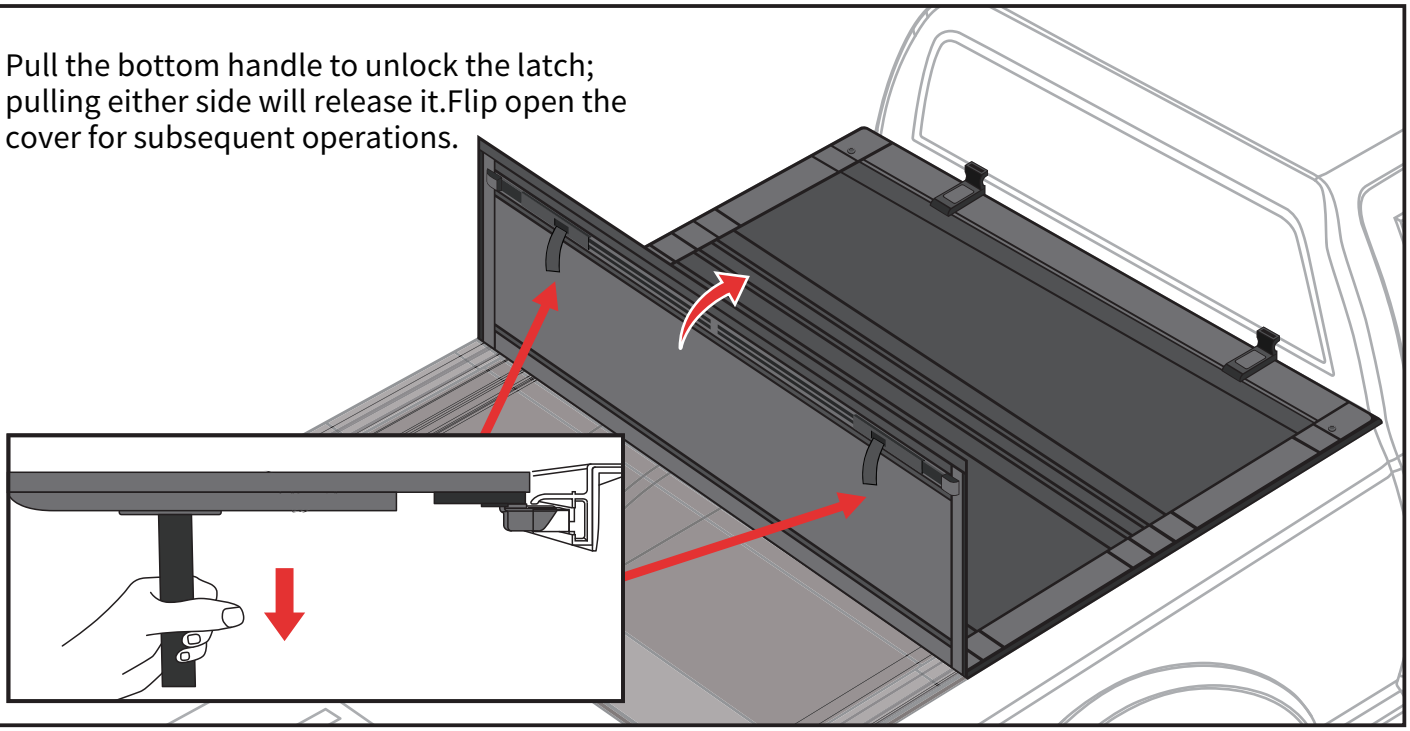



After fixing the other movable sliders on the guide rail, install the two middle clamps in place.

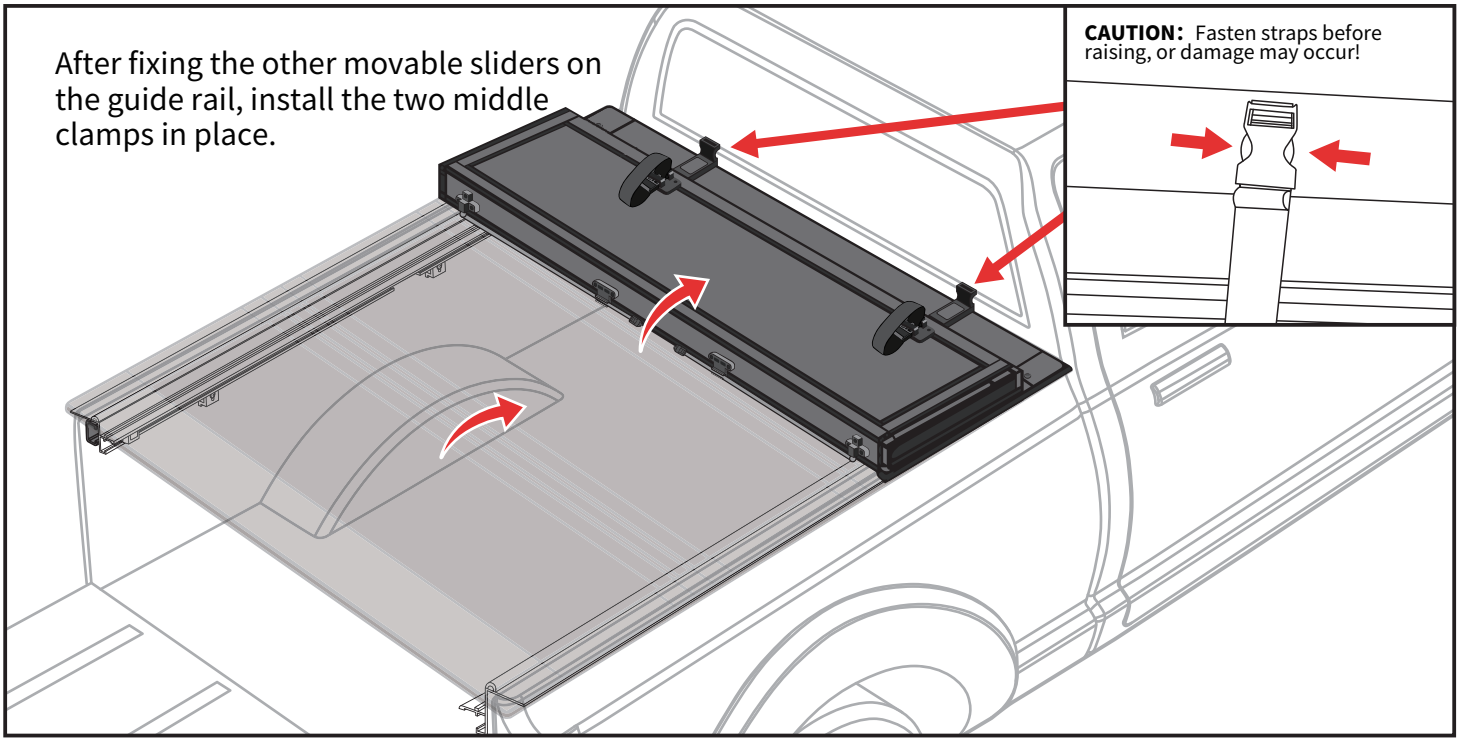

CAUTION: Fasten straps before raising, or damage may occur!

Insert the anti-loosening screw into the reserved hole on the cover. Ensure the screw aligns with the notch on the guide rail and secure it with the nut as shown in the diagram.

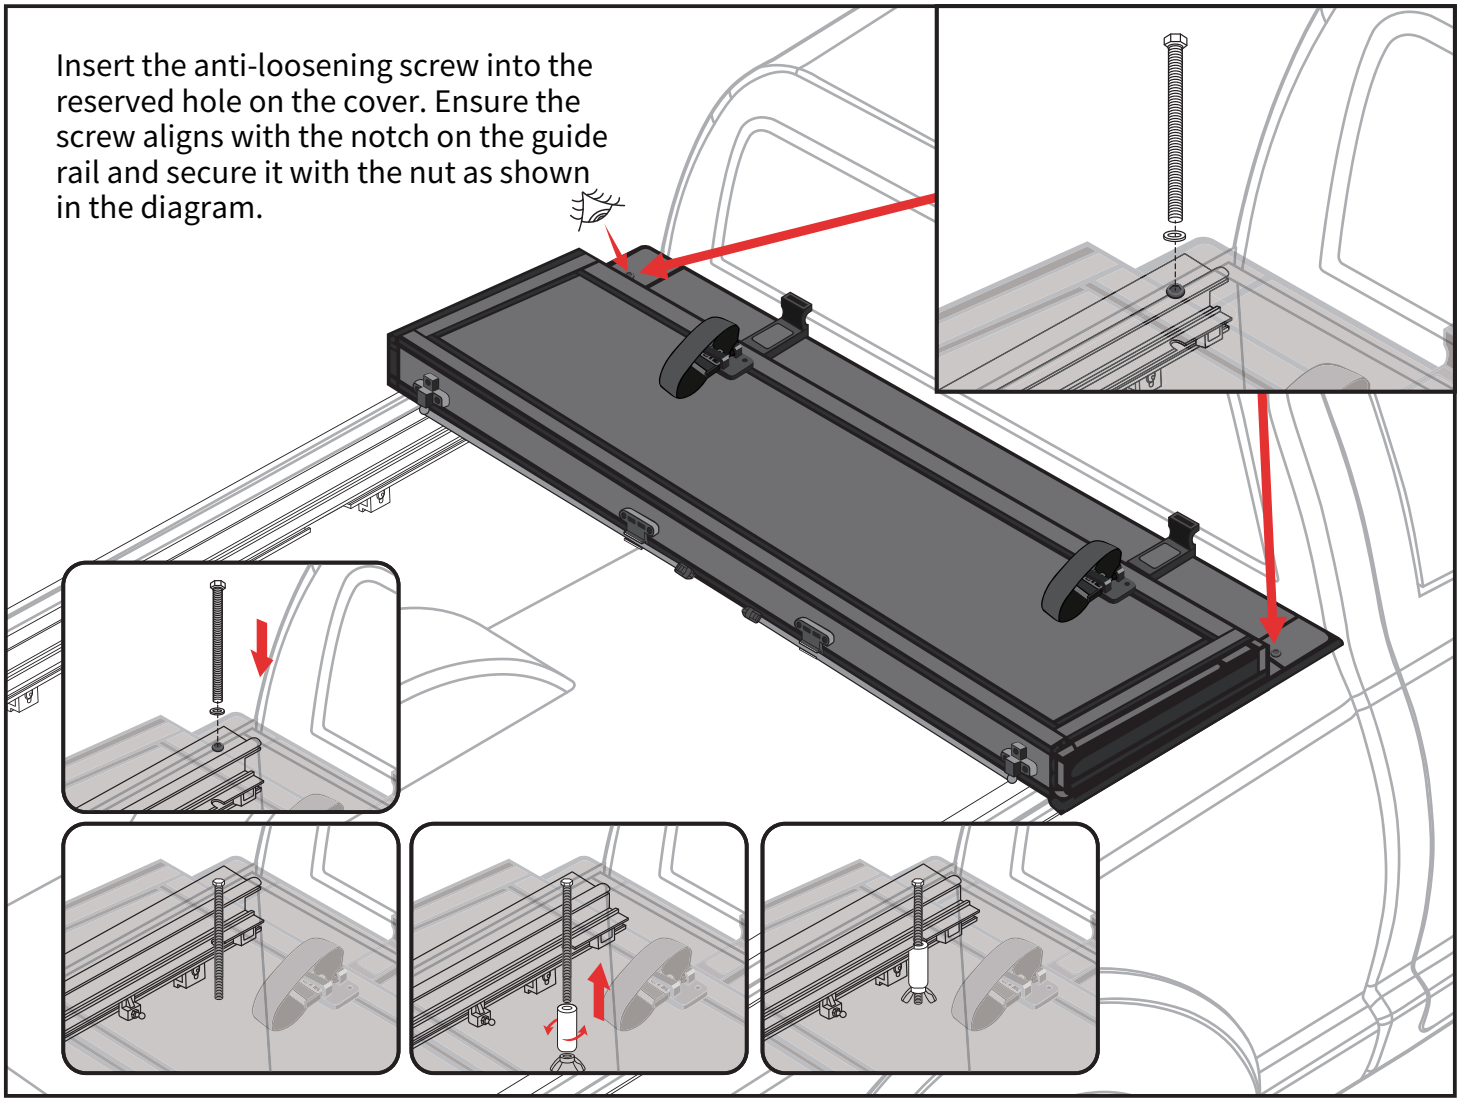


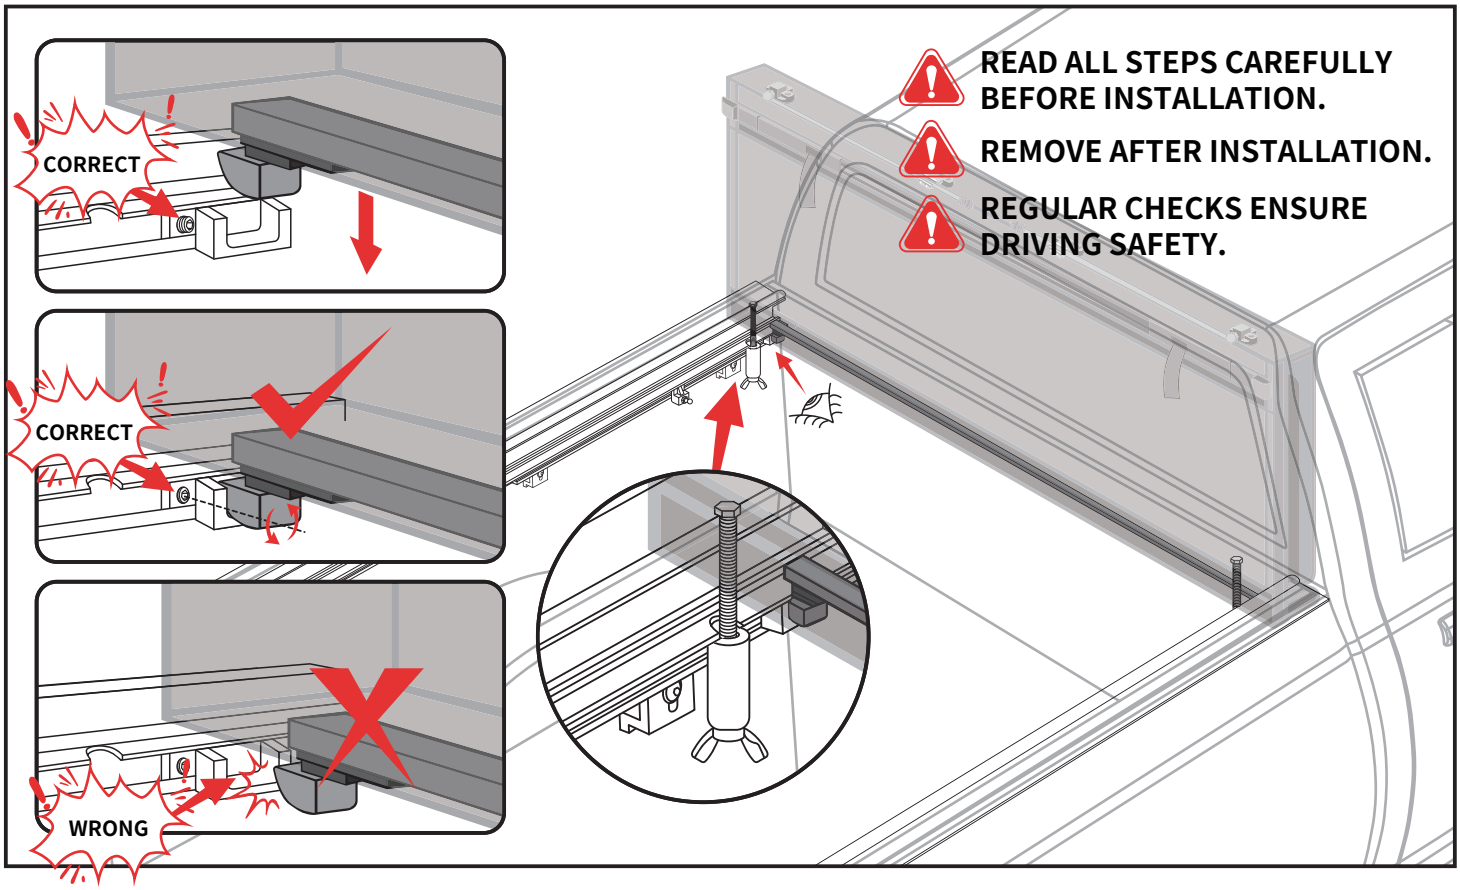


READ ALL STEPS CAREFULLY BEFORE INSTALLATION.


REMOVE AFTER INSTALLATION.

REGULAR CHECKS ENSURE DRIVING SAFETY.

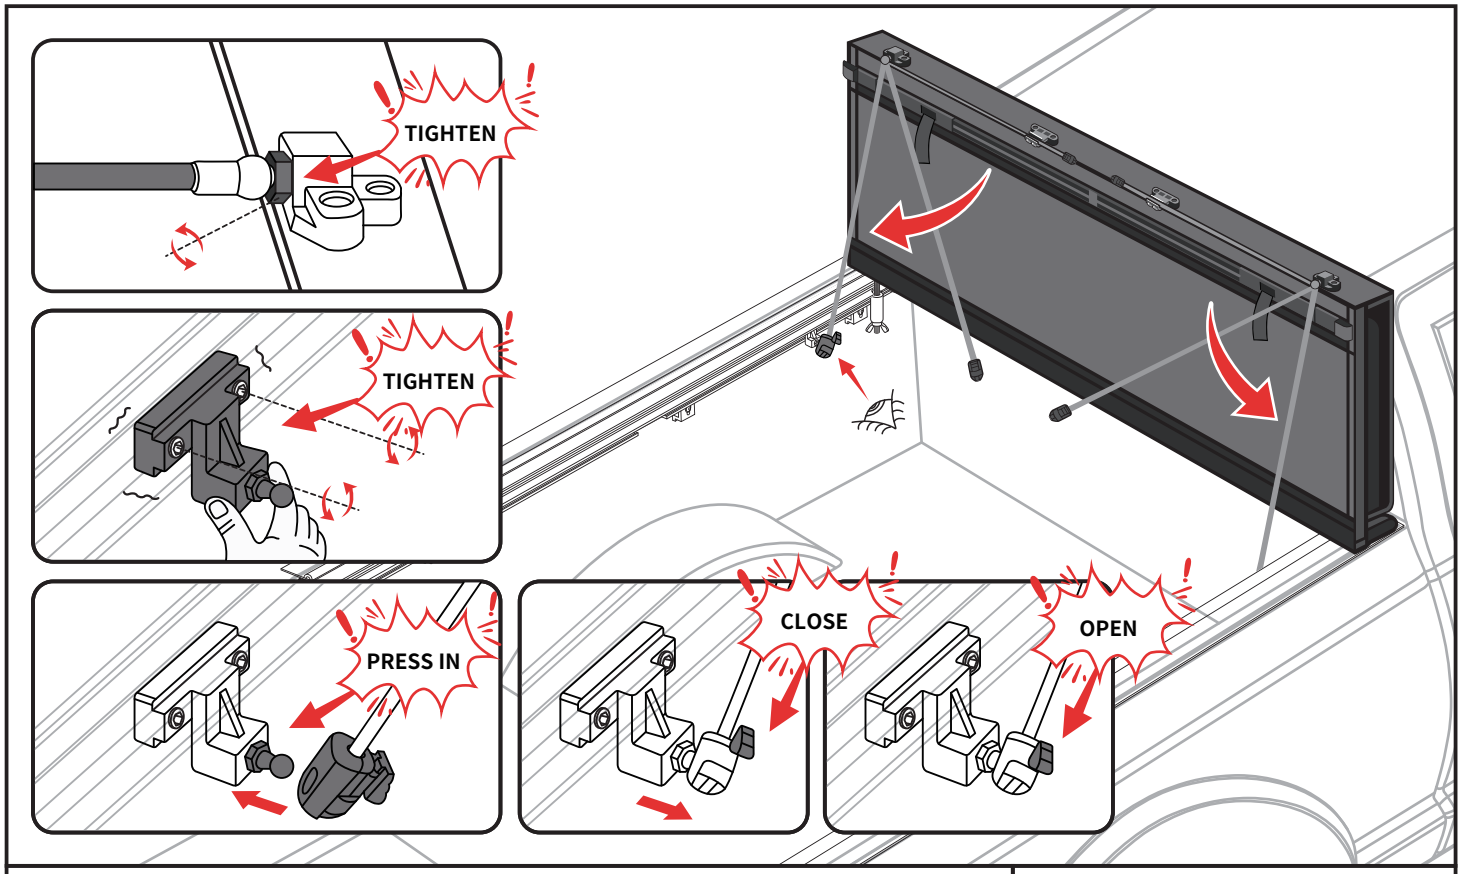

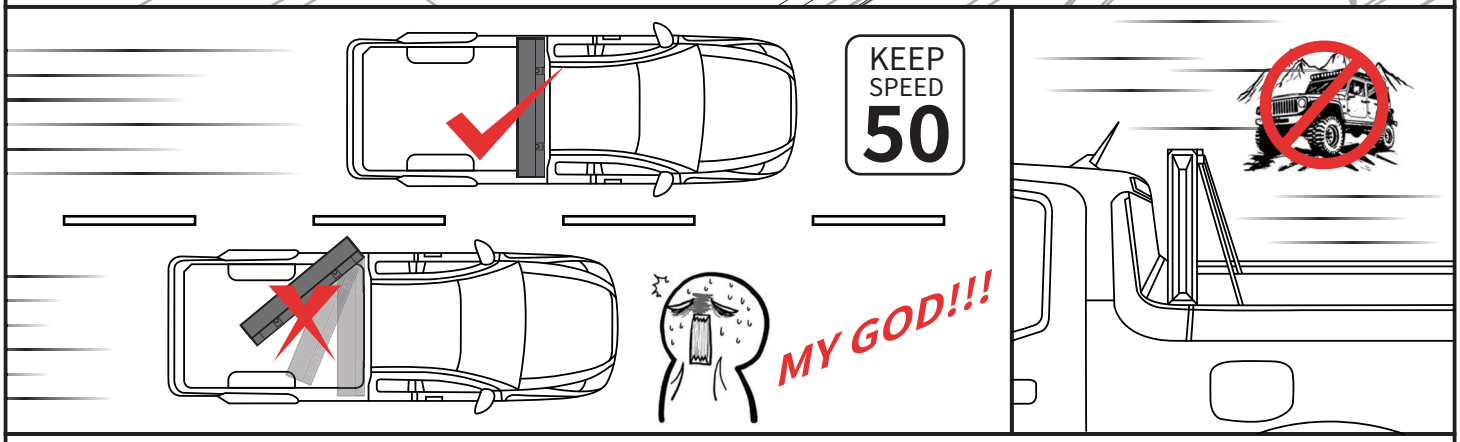

WARNING Do NOT drive over 30-50 mph with cover flipped up.Do NOT keep cover up during. off-road driving.We are NOT responsible for any loss or damage caused by misuse.

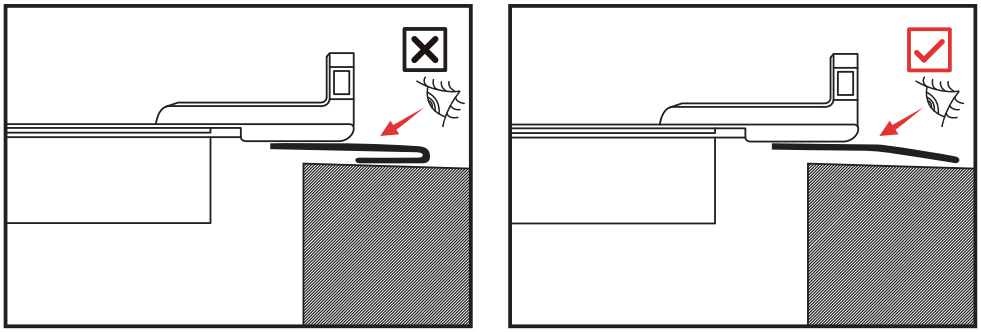

During the initial installation process, the sealed long blades may bend. Pull the blades out to adhere to the cabin wall to enhance waterproofing.

CAUTION Rough road surfaces can cause high-frequency vibrations, leading to the need for adjustments in the position of the truck cover.Regularly check if your truck cover is in the correct position within the truck bed,and inspect all connectors and fastening blocks to ensure they are functioning properly.

4 Care & Safety Guide

CARE & CLEANING

- Use mild car soap and water only
- Do NOT use pressure washers, abrasive cleaners, or chemicals
- If exposed to harsh substances (e.g., oils, solvents):

→ Rinse immediately with baking soda solution (1:10 water)

INSTALLATION & INSPECTION

After Installation

- Check and tighten all clamps, latches, and side rails within 7 days Regular Checks
- Every 2 weeks under normal conditions
- Every week for off-road, frequent, or high-vibration use Clearance
- Maintain ¼" (6mm) clearance around hinges and latches

BEFORE DRIVING

- Ensure all anchor points are fully secured
- Clear off snow, ice, or debris before opening

CARGO & USAGE WARNINGS

- No stacking or tying cargo on the cover
- No passengers or pets under a closed cover
- No exposure to chemicals over 48 hrs without rinsing
- Use OEM parts only – No drilling or tape

ENVIRONMENTAL LIMITS

- Designed to resist weather – Not 100% waterproof
- Use only between: -20°F (-29°C) to 120°F (49°C)
- If stuck due to ice or debris:

→ Use lukewarm water, do not force open

WARRANTY & LIABILITY

Limited Warranty

- Covers factory specs at shipping only
- No guarantees on:Durability / Fit for specific use / Environmental resistance

User Responsibility

- Damage caused by:

– Improper use or overloading / Unauthorized mods / Accidents, weather, chemical exposure

Product codes = tech specs only, not performance guarantees

LEGAL NOTICE

- Governed by state law where purchased
- Manufacturer may update this document without notice
- English version is legally binding