
Hard Tri-fold Low-profile Installation Manual

1 Accessories Inventory

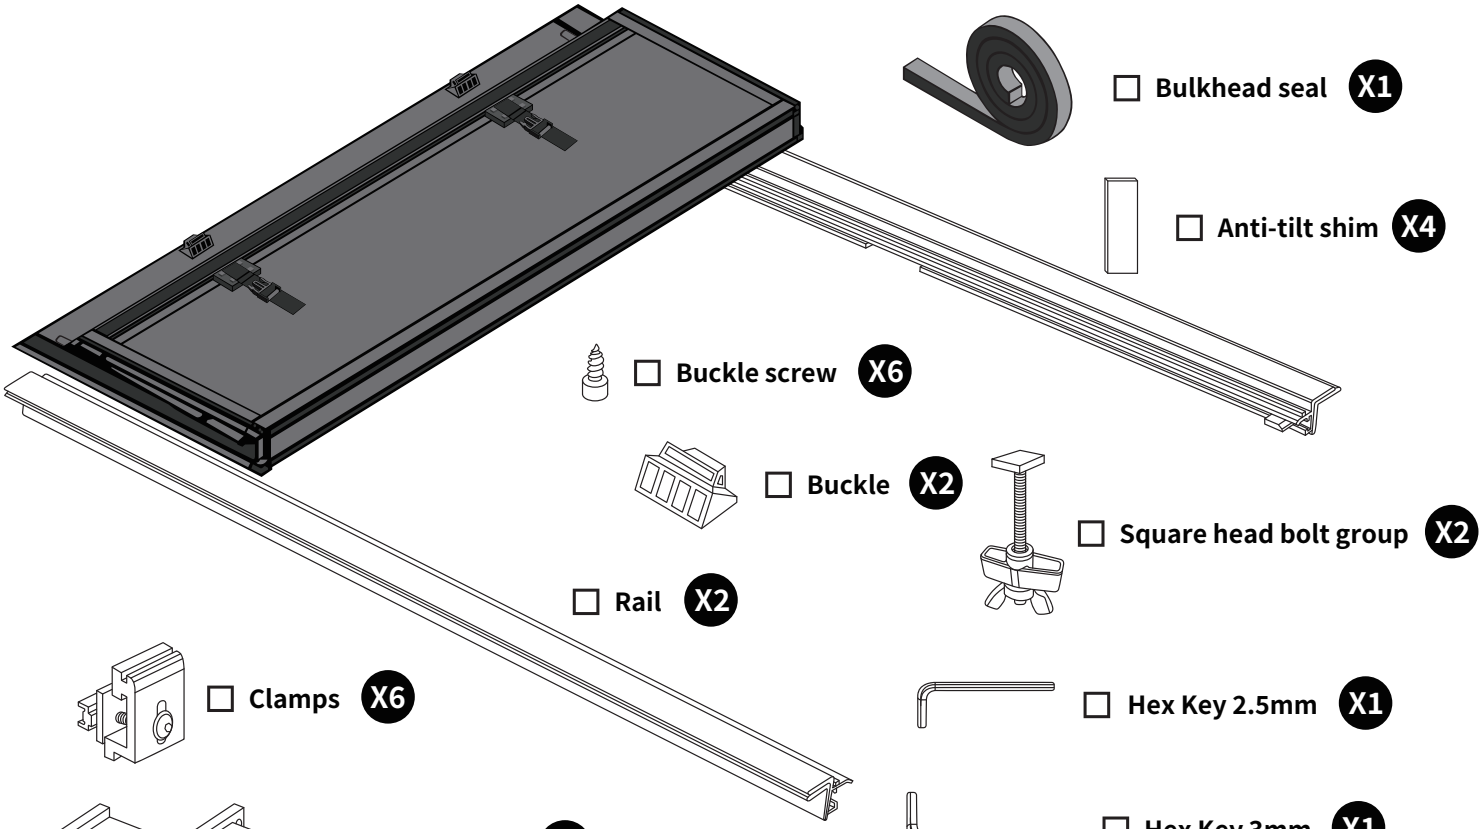

- ☐ Bulkhead seal X1
- ☐ Anti-tilt shim X4
- ☐ Buckle screw X6
- ☐ Buckle X2
- ☐ Square head bolt group X2
- ☐ Rail X2
- ☐ Clamps X6
- ☐ Hex Key 2.5mm X1
- ☐ Cover retainer X1
- ☐ Hex Key 3mm X1
- ☐ Anti-tilt bracket X1
- ☐ Hex Key 5mm X1
- ☐ Socket set screws X4
- ☐ Waterproof rubber plasticine X2

2 Product Advantages


Our Tonneau Cover Is Made of Several Durable Materials,
Such as FRP Panels Aircraft-grade alloy aluminum and High Performance Structural Sealant Etc.

We Offer Matched Tonneau Cover For Dozens Of Car Models, Fit For The Truck Bed Perfectly.


3 Installation

CAUTION

- CLEAN THE BULKHEAD WITH SOAP AND WATER TO REMOVE IMPURITIES AND GREASE, ALLOWING THE MOISTURE TO EVAPORATE TO ENSURE A DRY SURFACE.

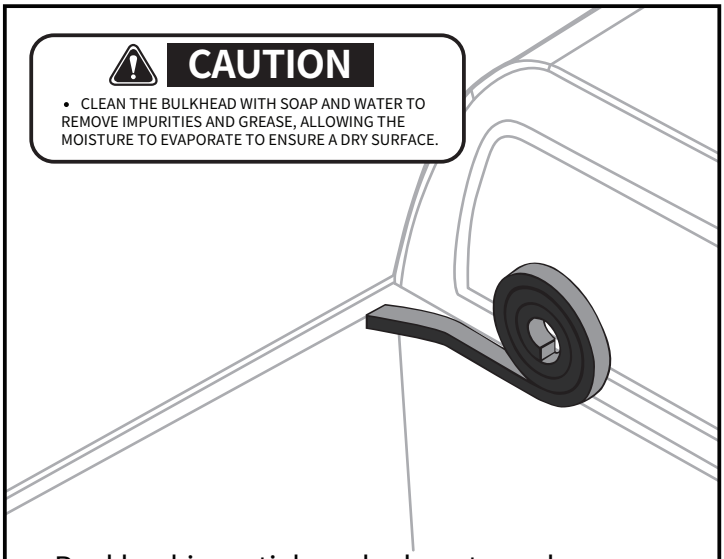


- Peel backing, stick seal edge - to - edge.
- Cut off excess with scissors or utility knife.
- Press evenly for adhesion.
- Skip seal if truck has plastic bed liner.
- Apply following the contour of truck bed rail.

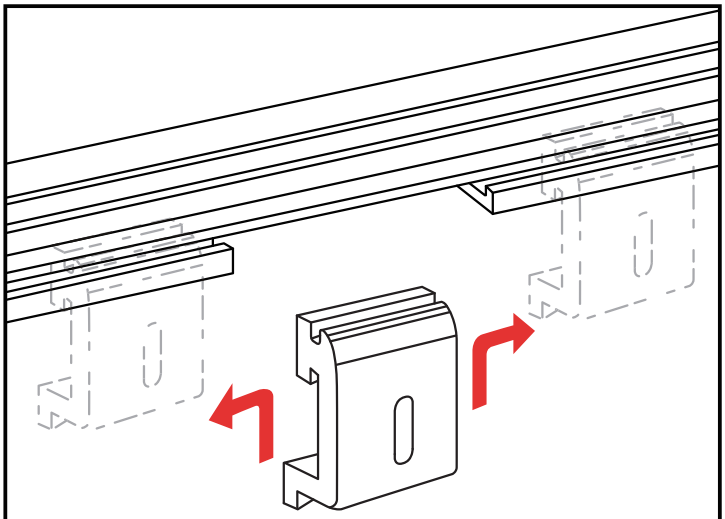


Insert the C-clip (of the clamp assembly) into the rail slot from the center notch, then slide outward to both sides.

- Distinguish left and right parts, note placement order.
- Slide A, B, D, E to corresponding letter positions on the guide rail; be careful of sharp edges.(Note to distinguish left and right.)
- Move to within 1 inch of the corresponding letter position on the guide rail. Only indicating the relative position and order of parts (not final positions); fine-tuning required after the cover is installed.

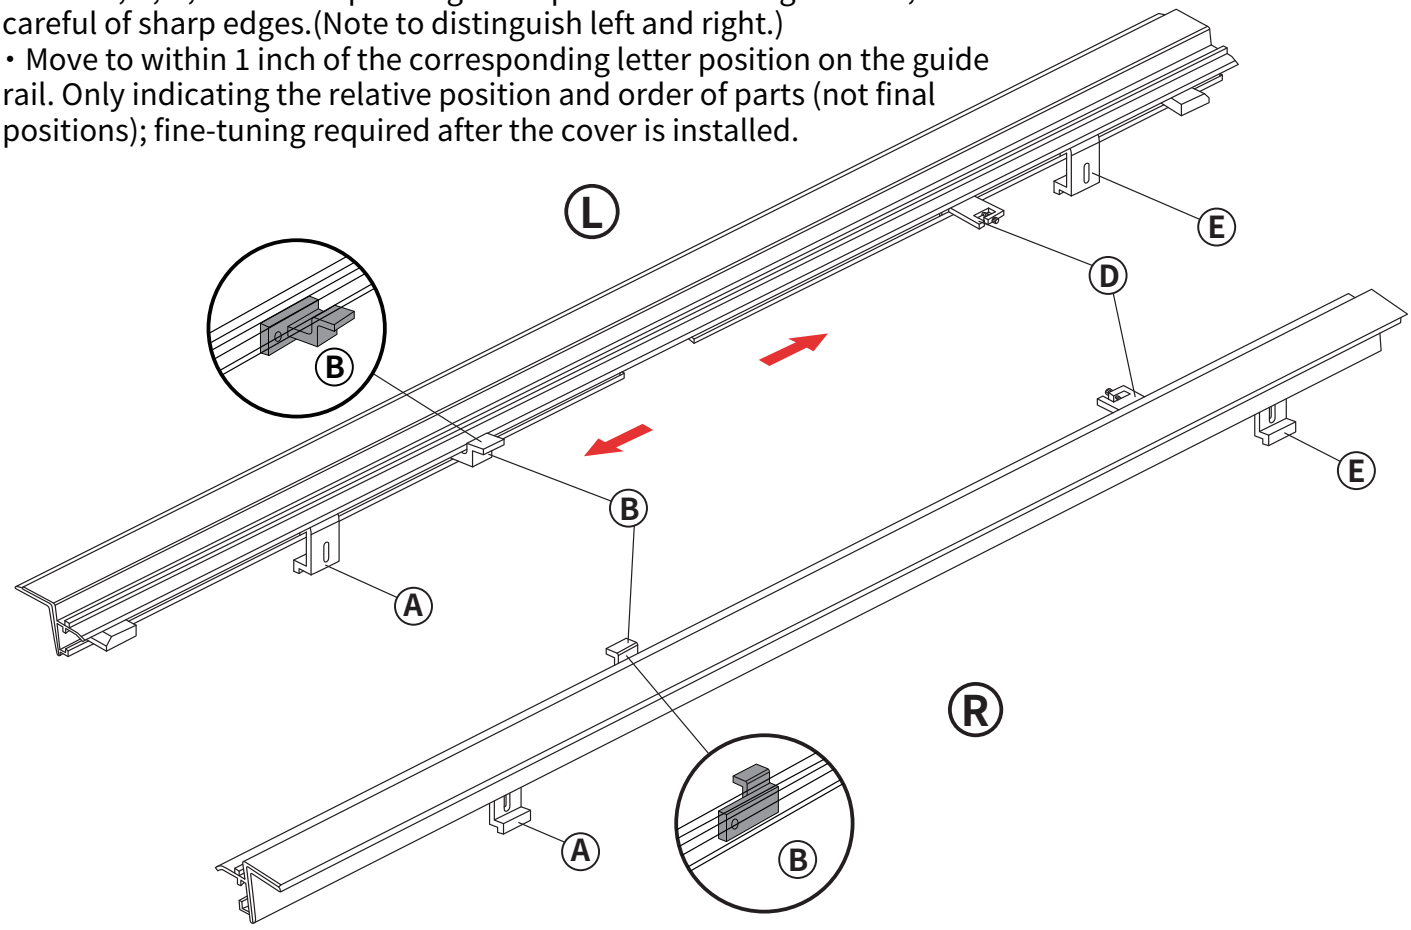

After installing the components onto the guide rail according to the position, place the guide rail on the truck lathe. Slide the sliders on the fixture into the guide rail originally equipped on the vehicle, with three on each side. Currently, only the fixtures on both sides need to be tightened to fix the position of the guide rail.

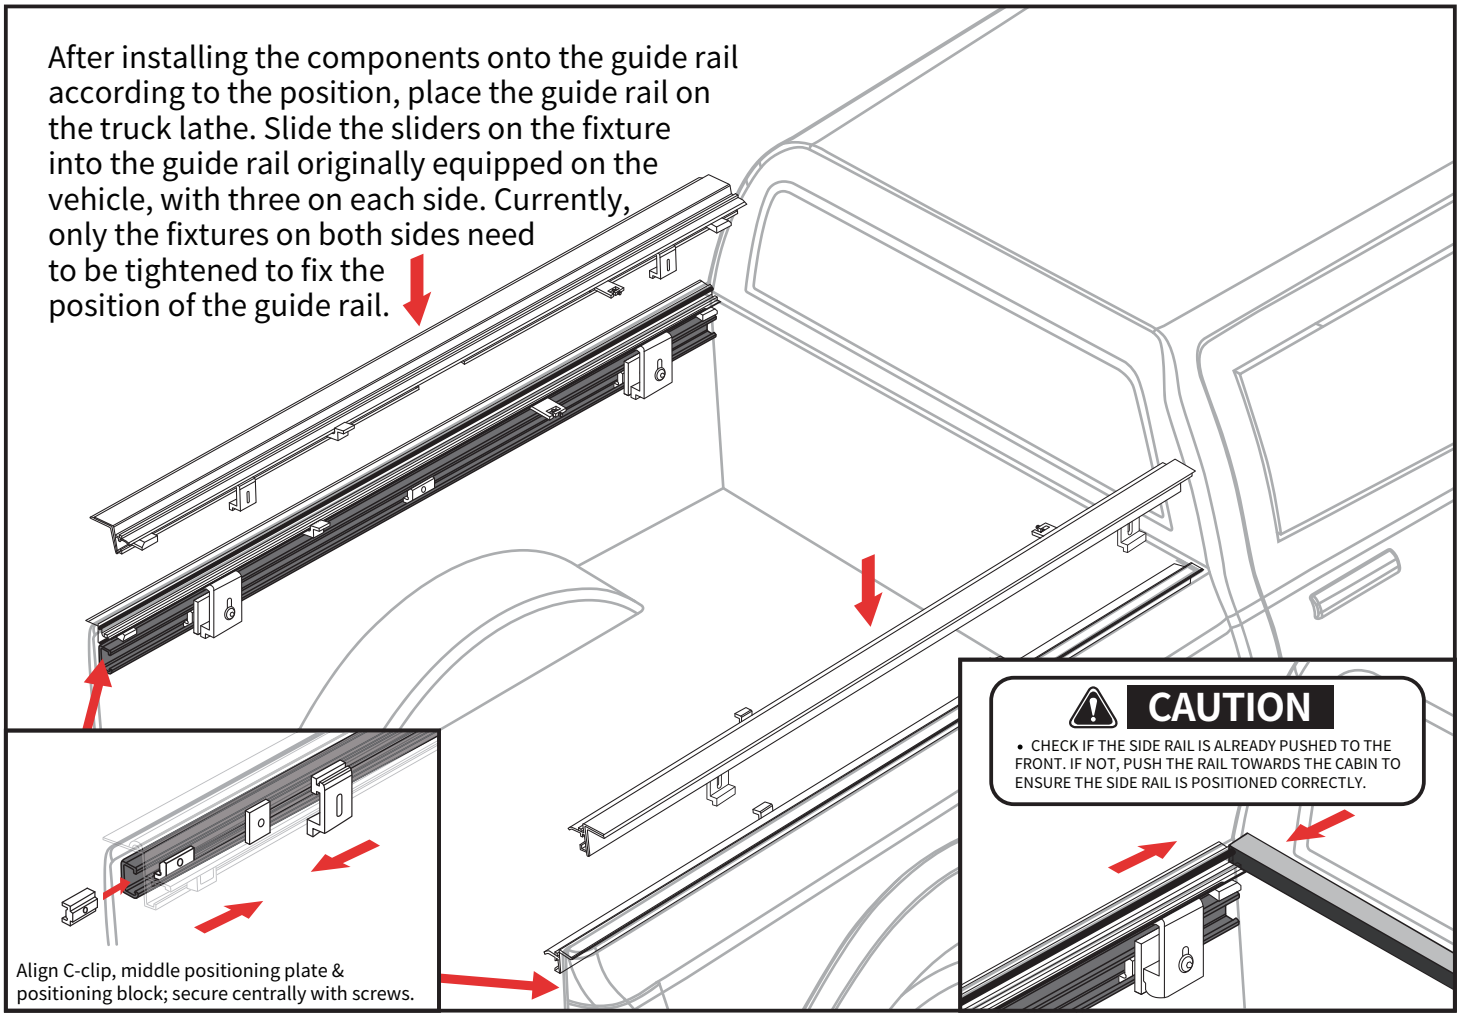


Align C-clip, middle positioning plate & positioning block; secure centrally with screws.

CAUTION


- CHECK IF THE SIDE RAIL IS ALREADY PUSHED TO THE FRONT. IF NOT, PUSH THE RAIL TOWARDS THE CABIN TO ENSURE THE SIDE RAIL IS POSITIONED CORRECTLY.

Rail slider in the middle of the factory accessory rails and align the corresponding slider on the moving rail.

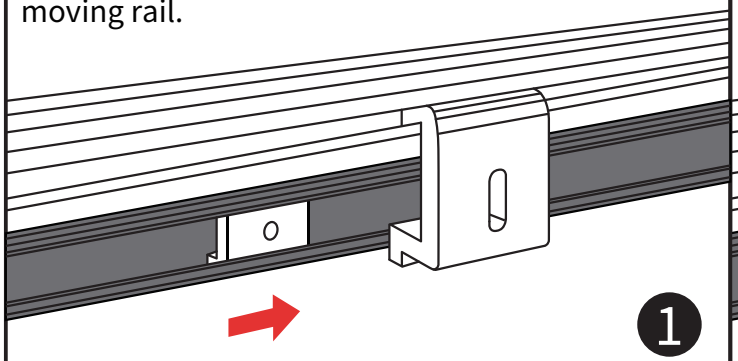

1


Slider clip inserted between two parts.

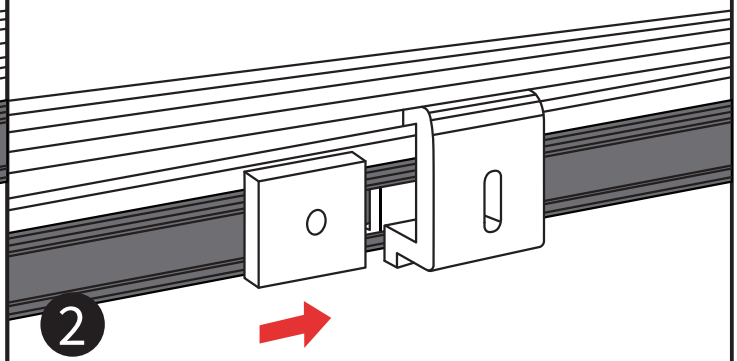


2

Pass the clamp screw through the gasket and connect the three parts through the middle threaded hole.


3

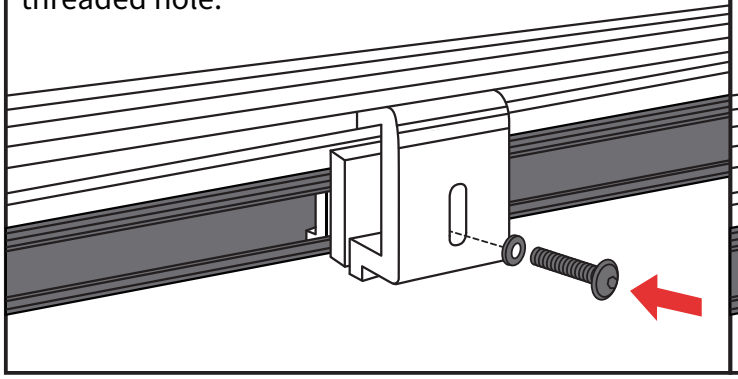


4 Complete installation after tightening.

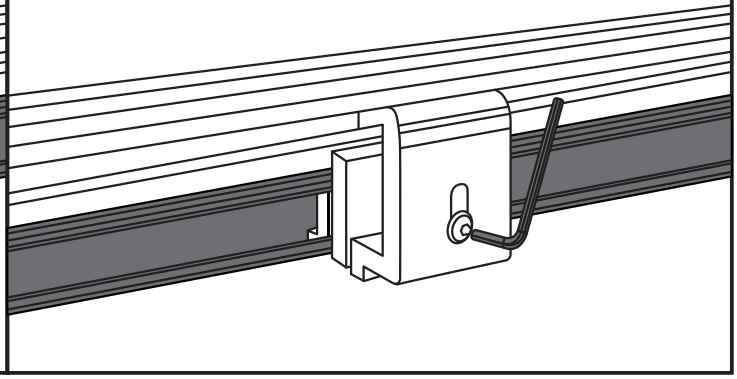


Place the cover on the rails and move it slightly back so the latch fits the block.
Adjust the block if the position is incorrect.

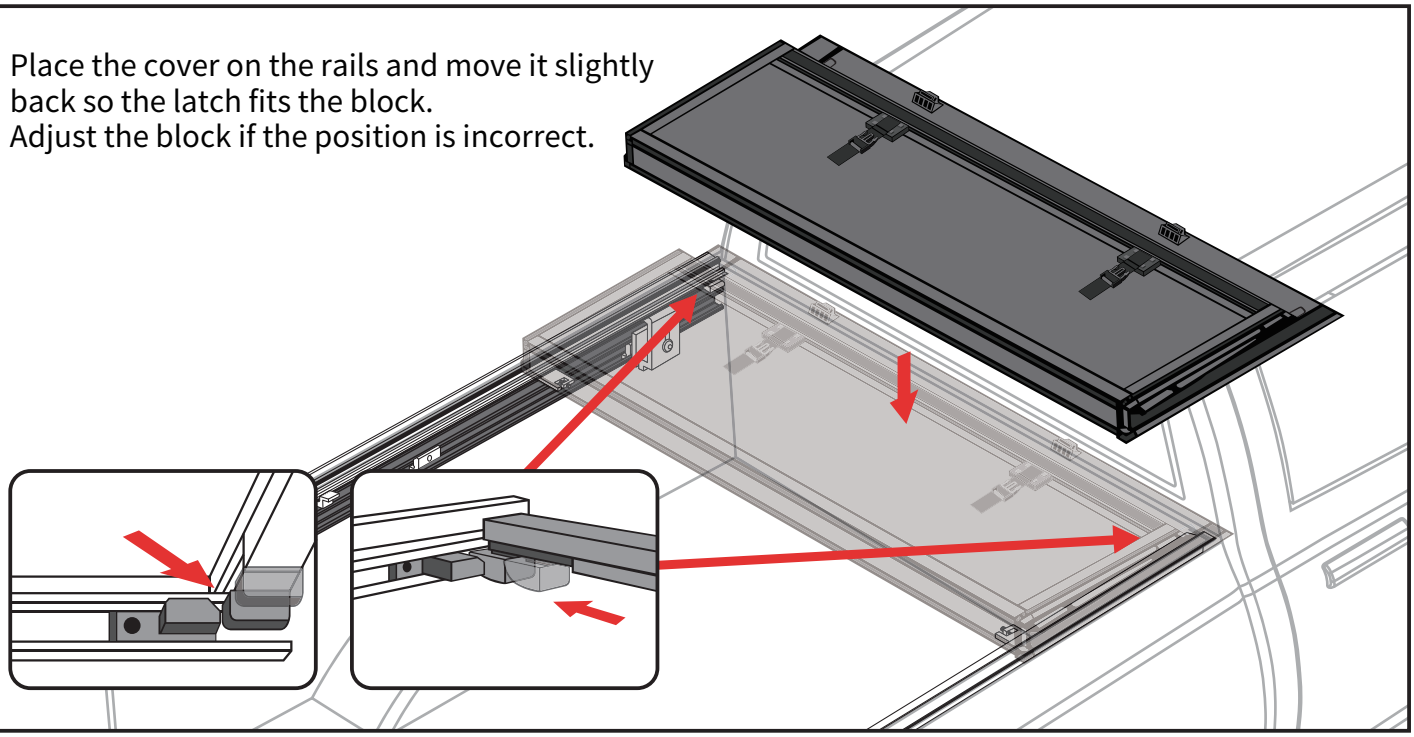


Position the buckle ends withthe open side facing the bed coverpanel.Use a Hexagon wrench install the two buckles into thepre-drilled holes on the front headerpanel with the provided screws. DO NOT usea screw gun,securely tighten byhand only.

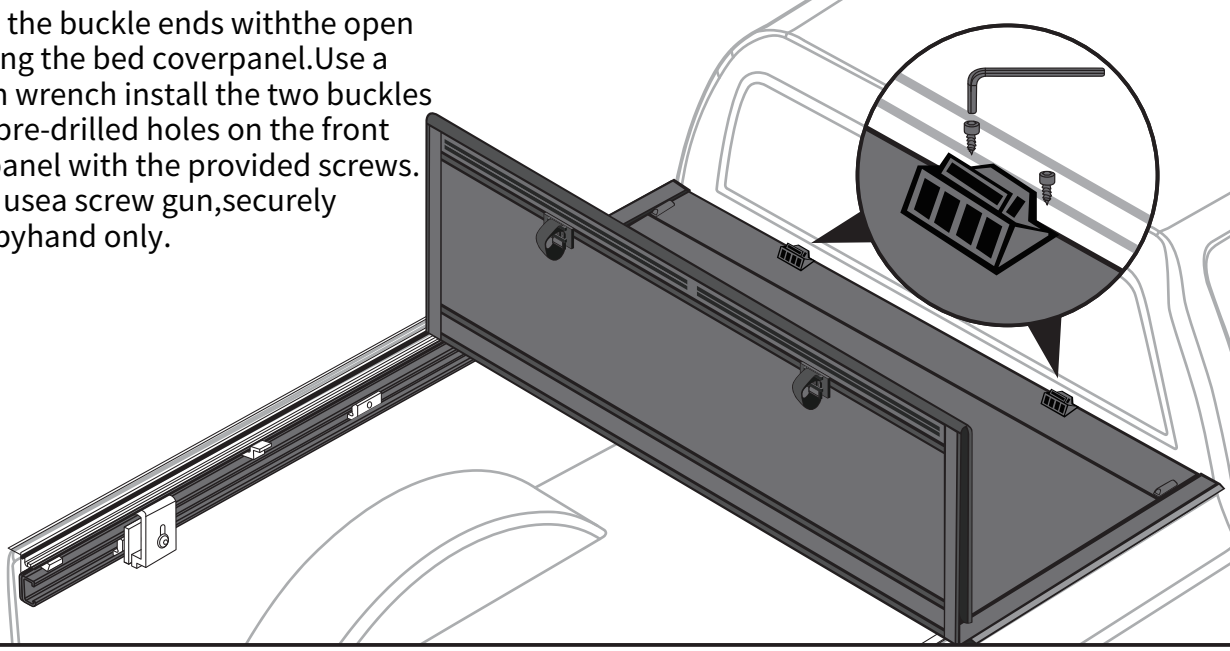


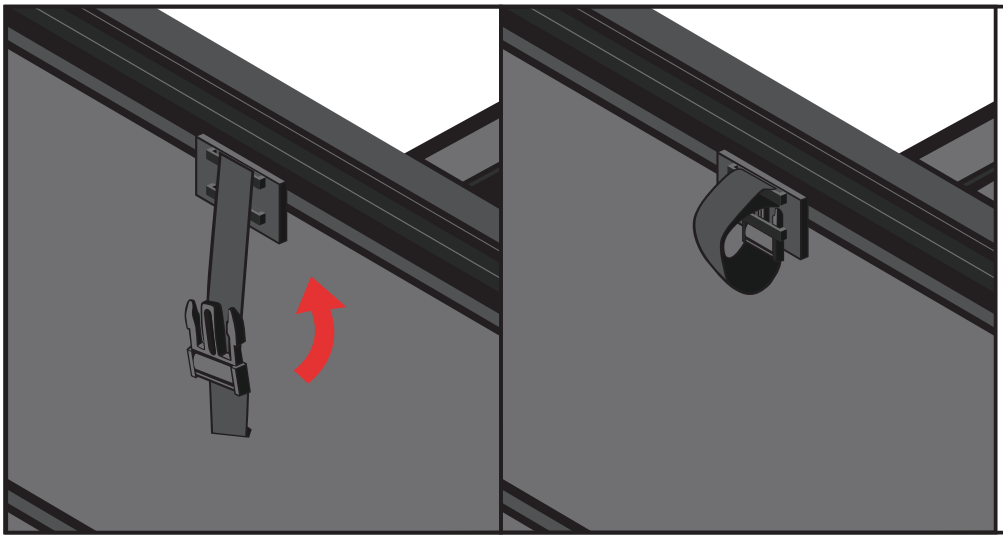

When cover is unfolded secure buckles onto the slots on the cover.


When lowered, the rear latch should fit the block. Adjust and secure if the position is incorrect.

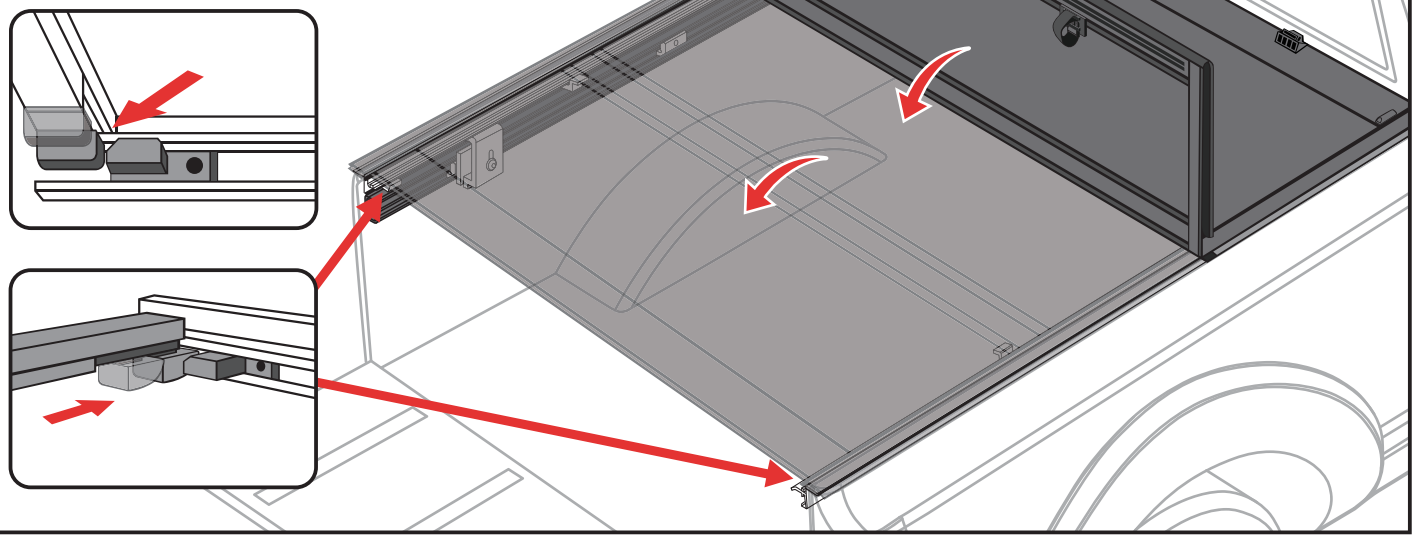

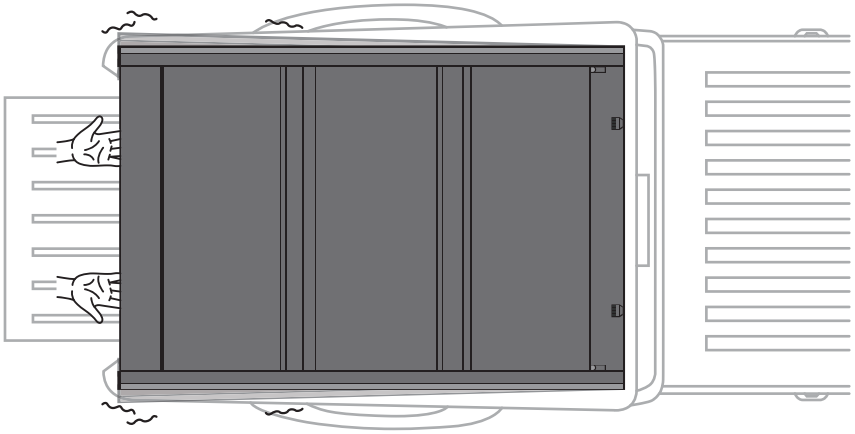


Adjust the bed cover to center it.


Ensure cover is aligned on both sides of the rails.Check the distance between the cover and side rails are even. Shown on red illustration.

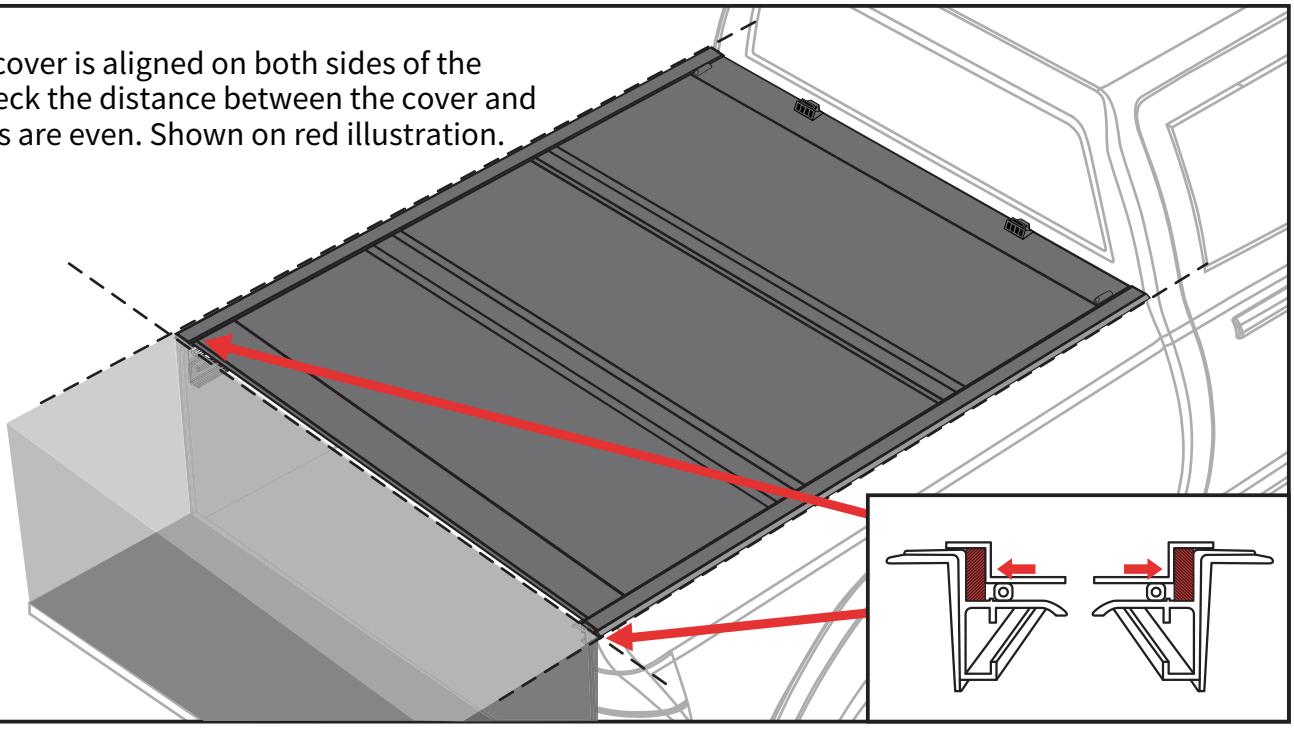


For some vehicle models, the guide rails may tilt downward. You can place the provided washer in the yellow position as shown in the diagram to realign the guide rails.

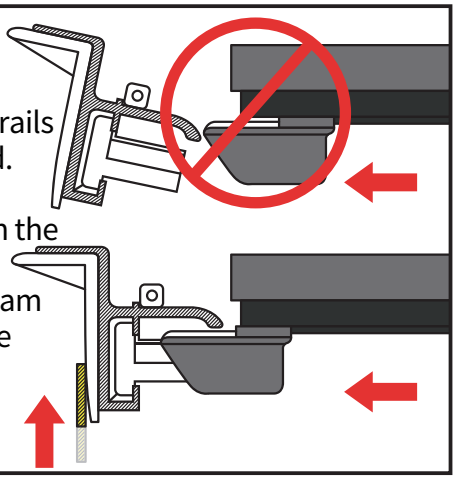

When the cover is fully closed inspect locking tongues properly engages.

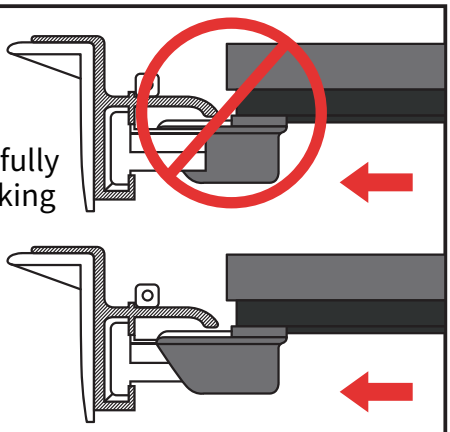


Pull the handle at the bottom to unlock the latch. Flip the cover open.

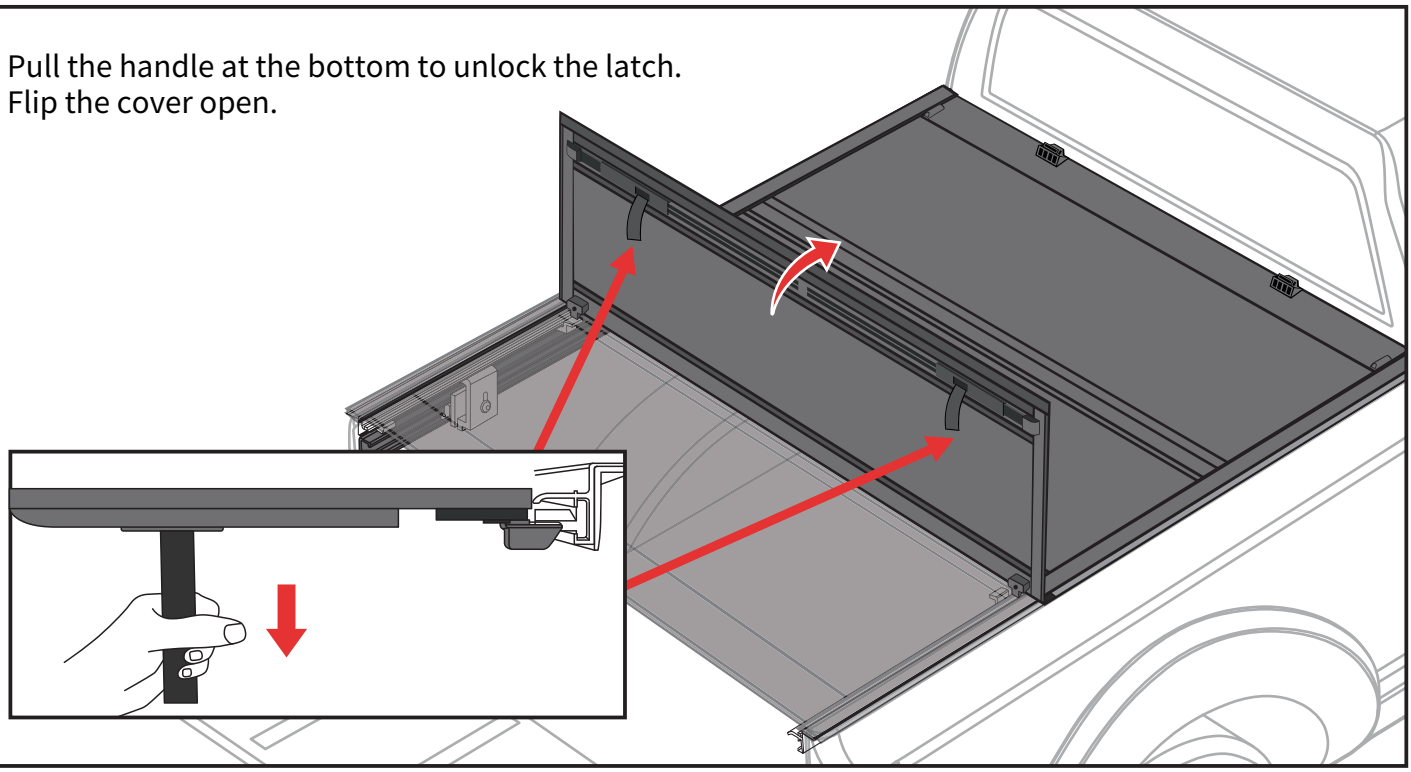


Pull the release cord to unlock the front bulkhead latch and remove the cover.


CAUTION

- PULL HERE TO UNLOCK THE COVER DURING REMOVAL. DO NOT FORCE IT OFF.

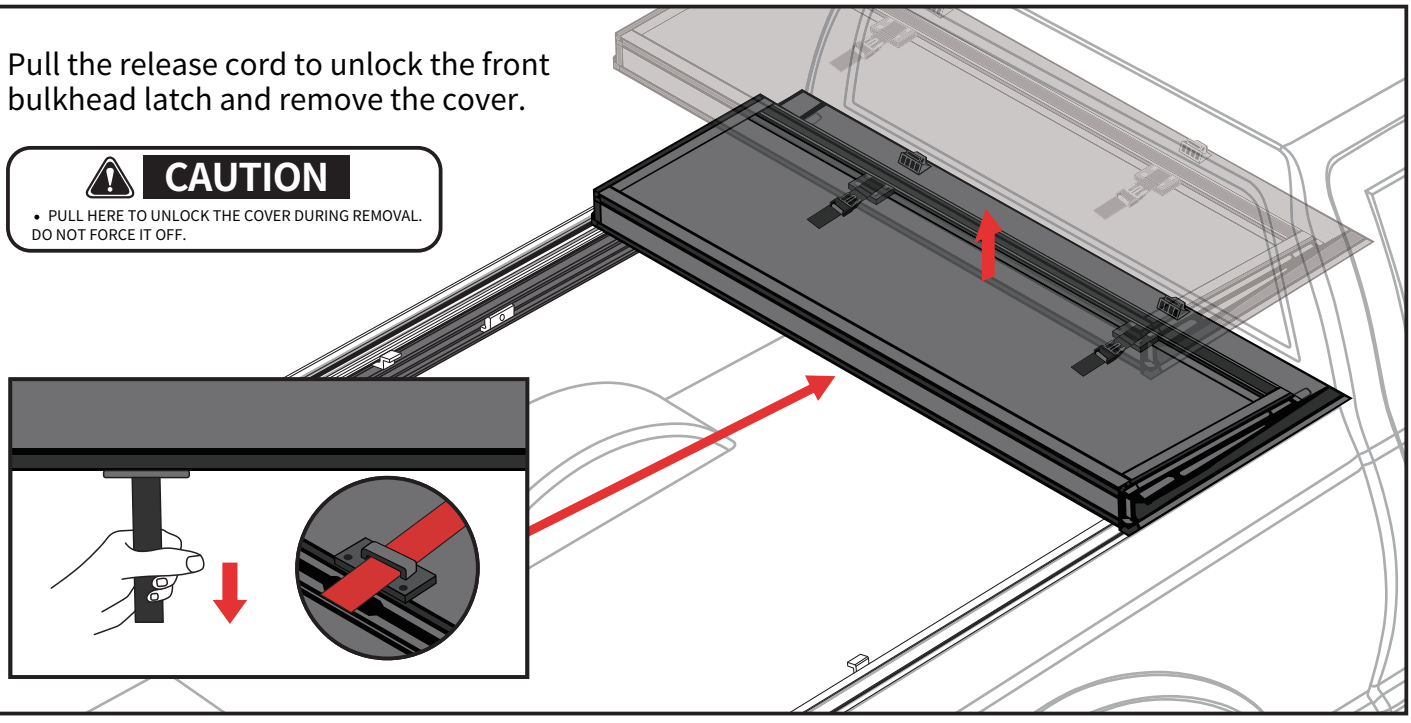


After confirming the position of the truck bed cover, install the cover stabilizer.

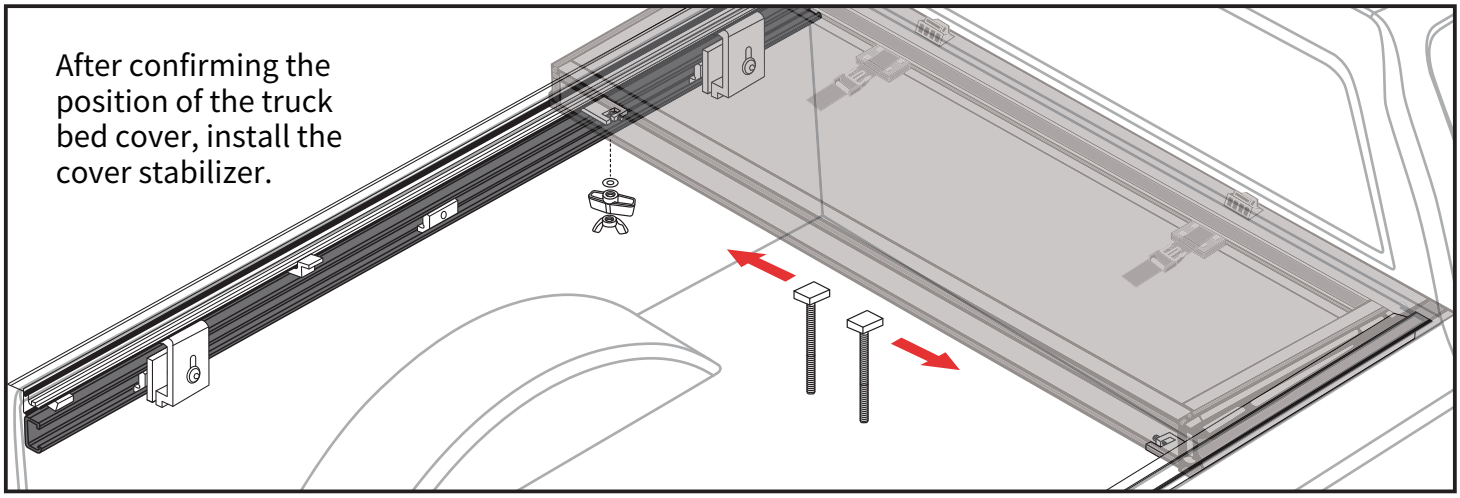


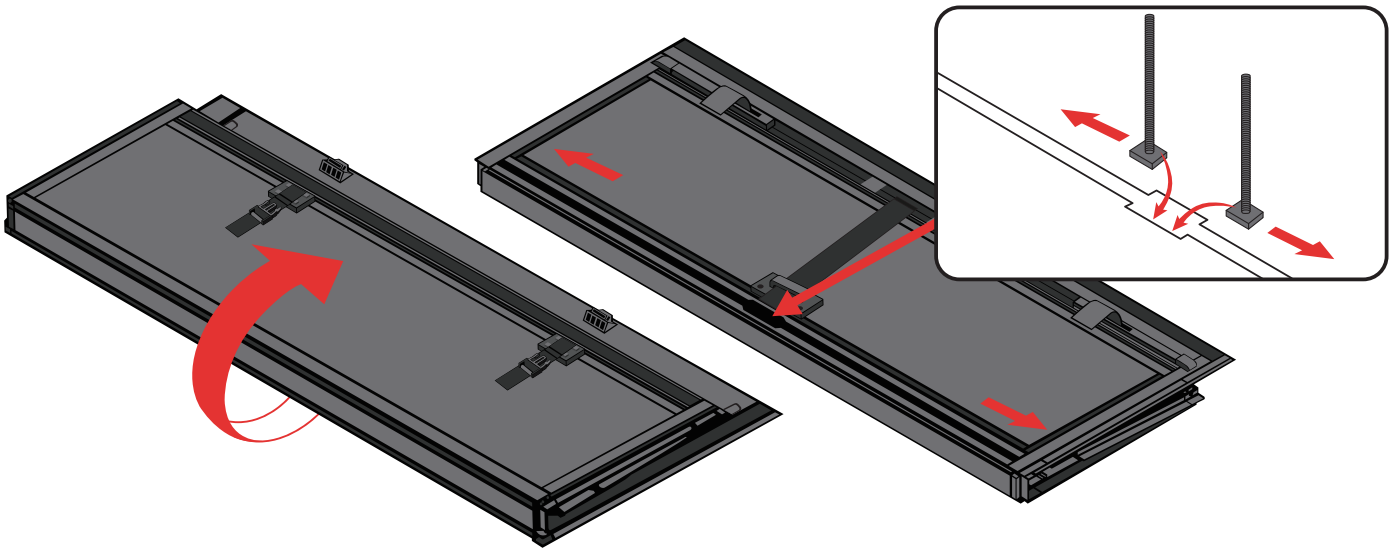



Insert screw cover retainer into the groove on the back of the truck bed cover and slide it to both sides.

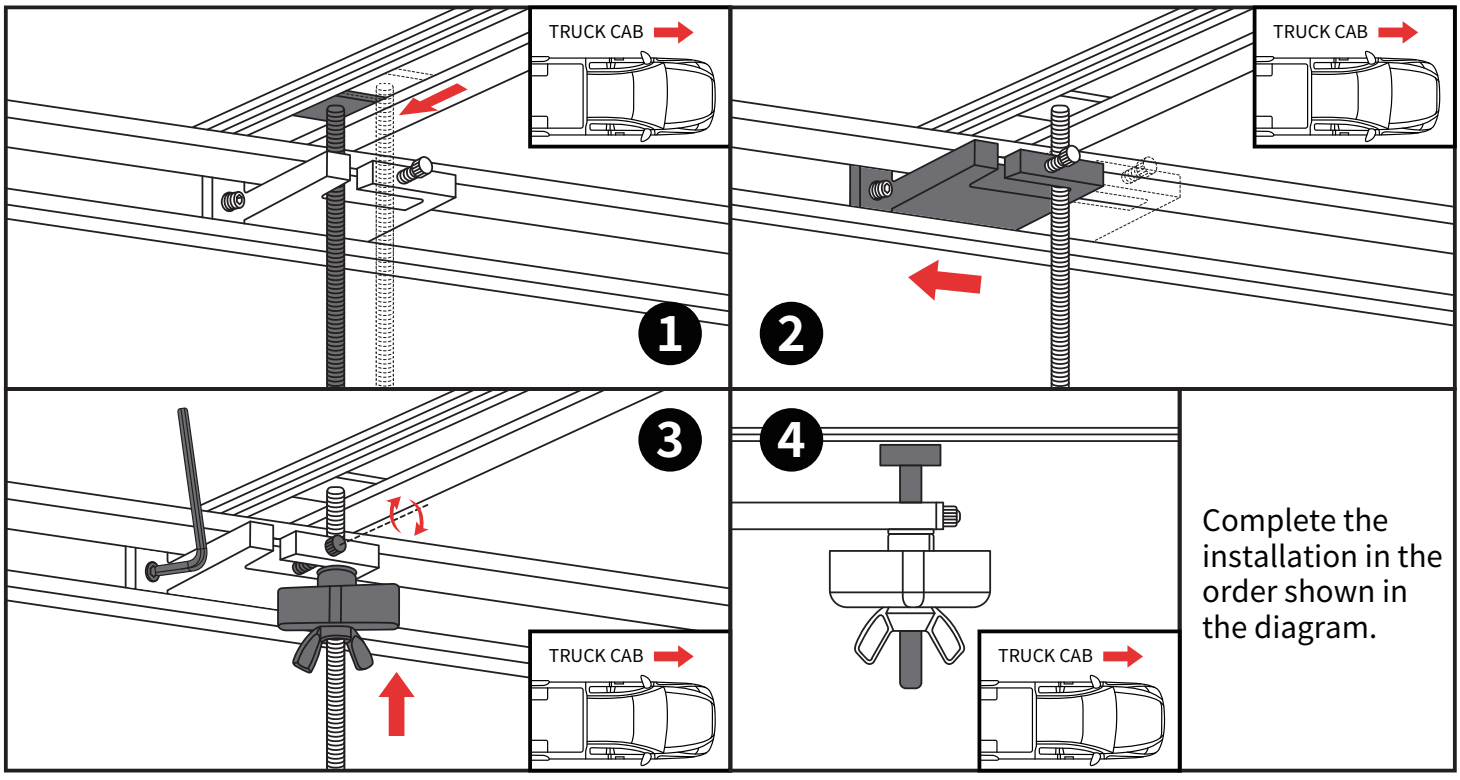

Complete the installation in the order shown in the diagram.

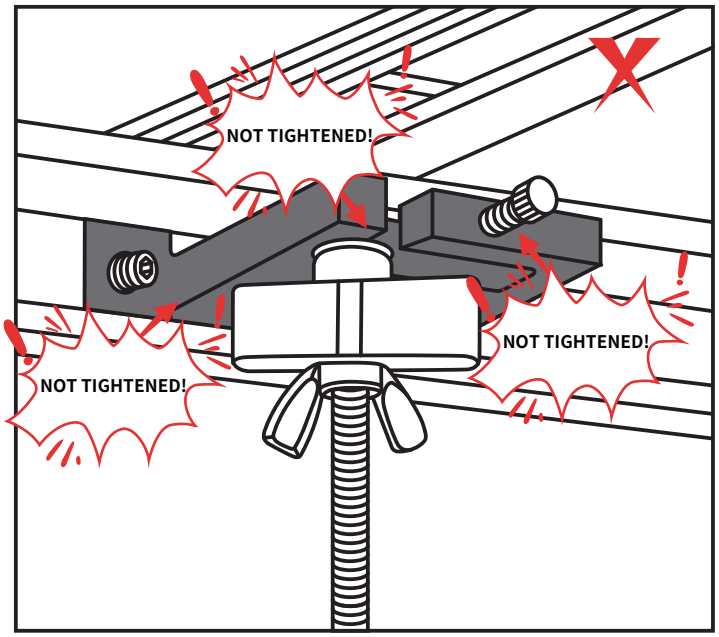

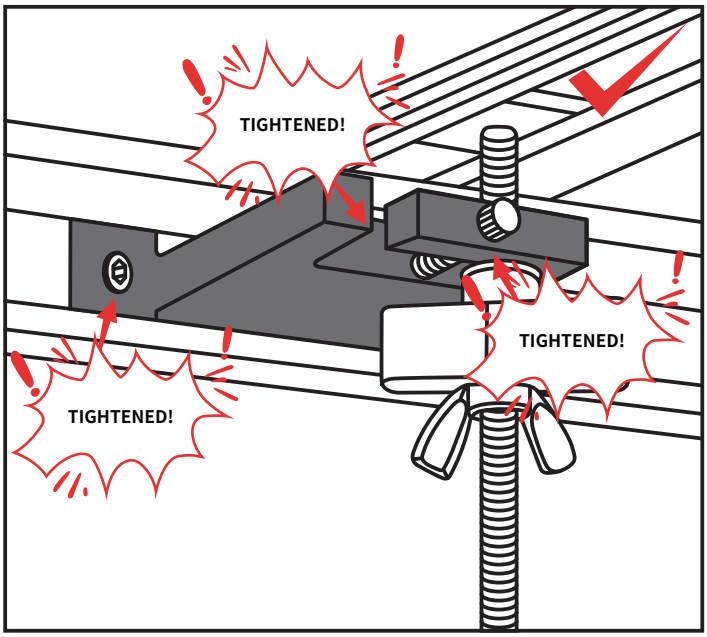


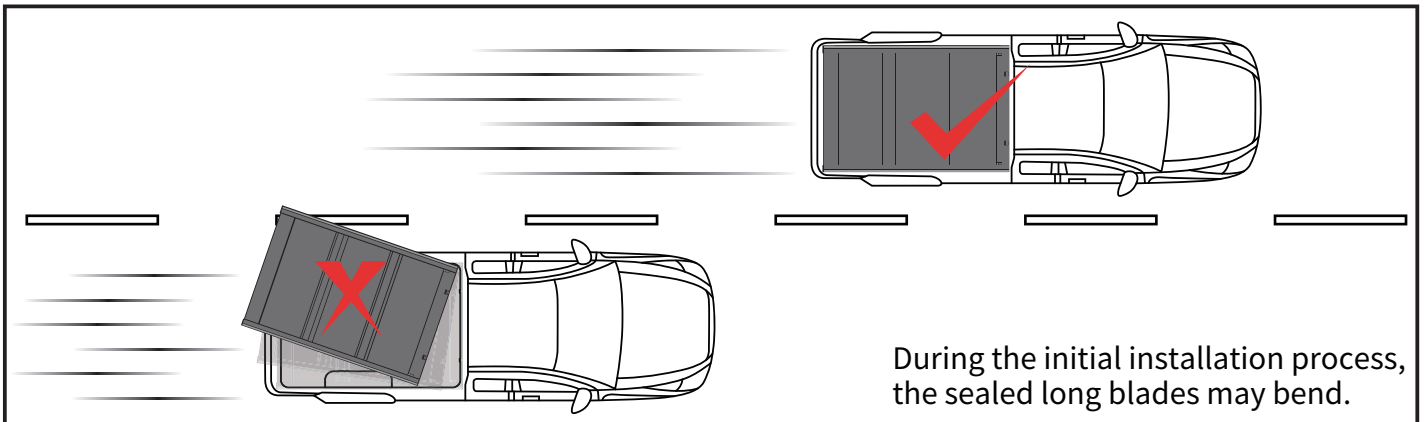


During the initial installation process, the sealed long blades may bend.

CAUTION Rough road surfaces can cause high-frequency vibrations, leading to the need for adjustments in the position of the truck cover.Regularly check if your truck cover is in the correct position within the truck bed,and inspect all connectors and fastening blocks to ensure they are functioning properly.


Adjust the anti-tilt Bracket position to ensure the small locking block securely fastens to it when lowering the last panel. Fold the panel multiple times to confirm it latches properly. Lastly tighten the screw on the anti-tilt Bracket to make it stay in place.

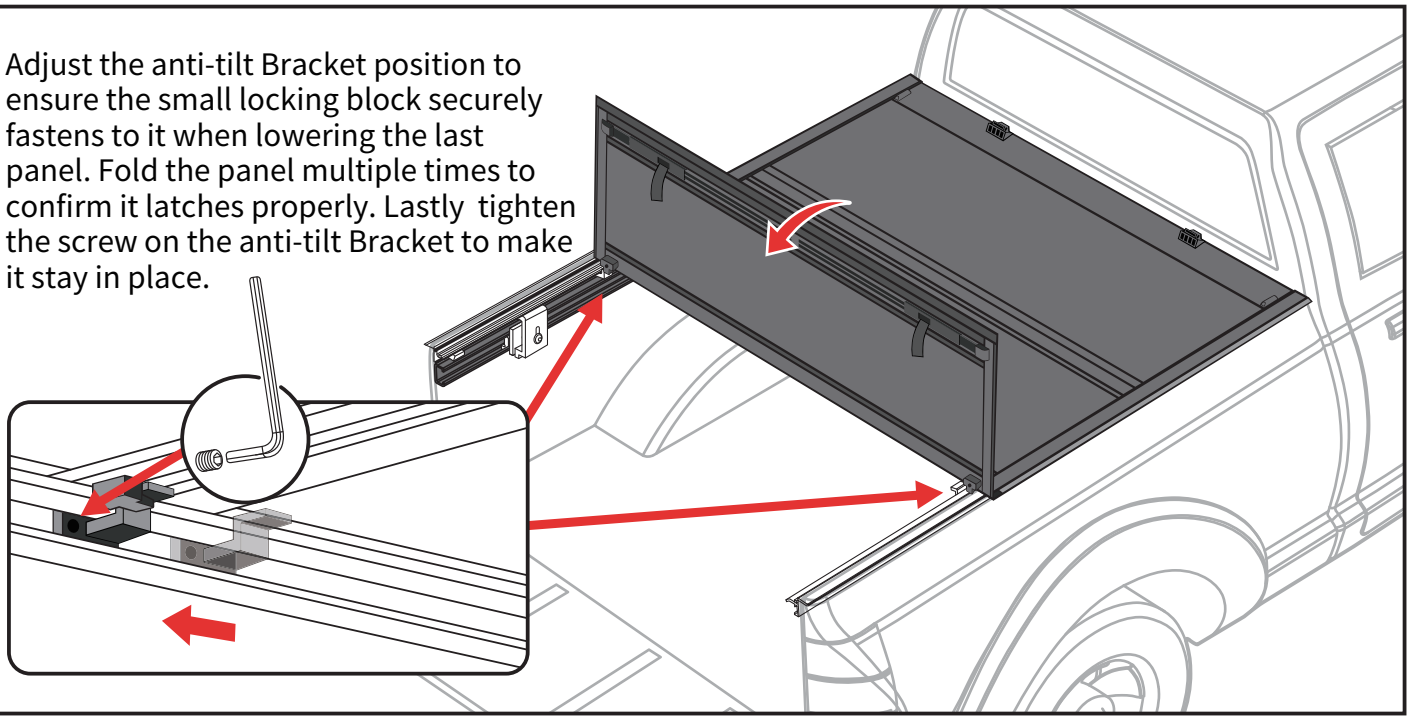


After fixing the other movable sliders on the guide rail, install the remaining middle fixture in place.

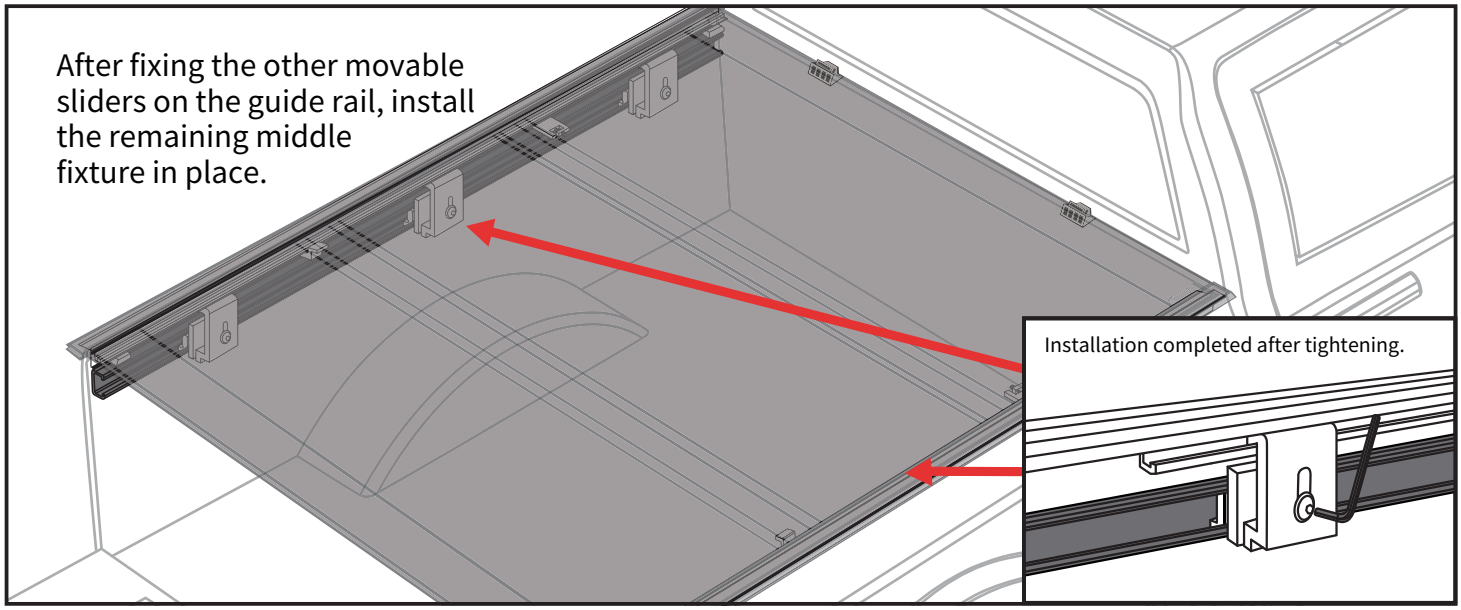


Finally, close the truck cover to complete the installation.

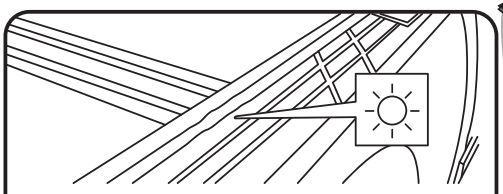

Note: Seals on the side of the cover may appear wrinkled shortly after the installation. They settle down with sufficient amount of sunlight.

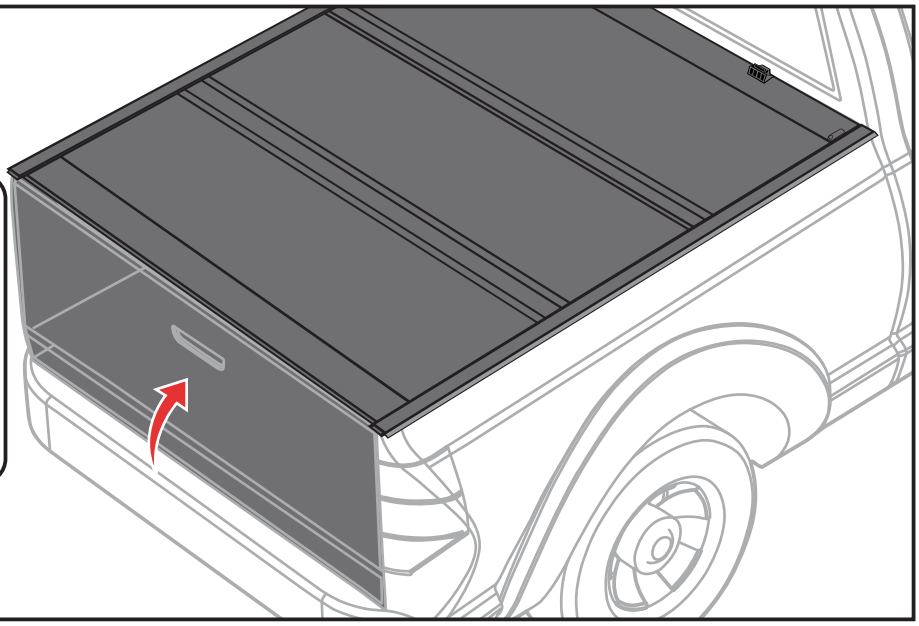

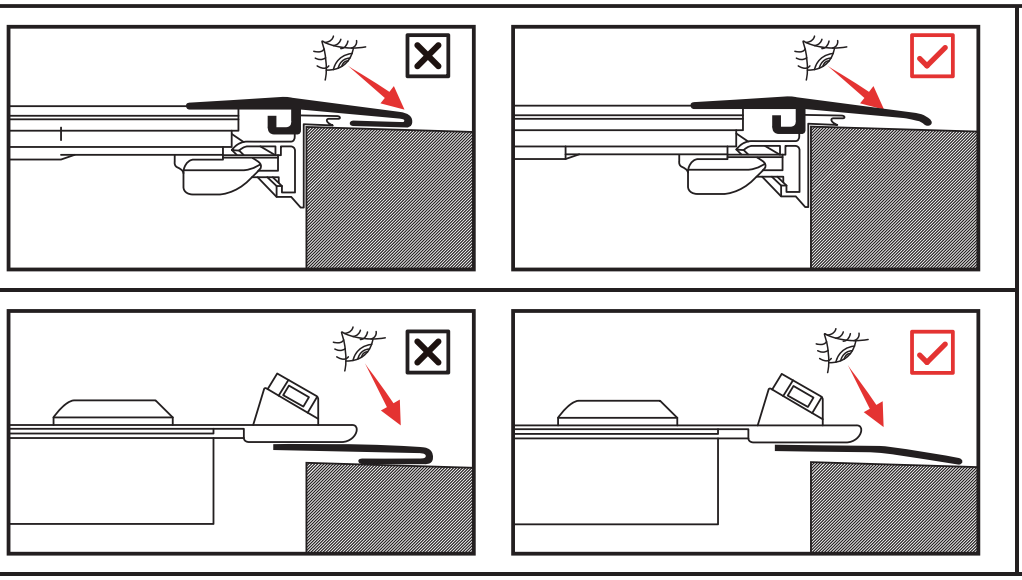

Check Side Gaskets and Bulkhead Gasket are properly placed to limit the water entry.

CAUTION Rough road surfaces can cause high-frequency vibrations, leading to the need for adjustments in the position of the truck cover.Regularly check if your truck cover is in the correct position within the truck bed,and inspect all connectors and fastening blocks to ensure they are functioning properly.

4 Care & Safety Guide

CARE & CLEANING

- Use mild car soap and water only
- Do NOT use pressure washers, abrasive cleaners, or chemicals
- If exposed to harsh substances (e.g., oils, solvents):

→ Rinse immediately with baking soda solution (1:10 water)

INSTALLATION & INSPECTION

After Installation

- Check and tighten all clamps, latches, and side rails within 7 days Regular Checks
- Every 2 weeks under normal conditions
- Every week for off-road, frequent, or high-vibration use Clearance
- Maintain ¼" (6mm) clearance around hinges and latches

BEFORE DRIVING

- Ensure all anchor points are fully secured
- Clear off snow, ice, or debris before opening

CARGO & USAGE WARNINGS

- No stacking or tying cargo on the cover
- No passengers or pets under a closed cover
- No exposure to chemicals over 48 hrs without rinsing
- Use OEM parts only – No drilling or tape

ENVIRONMENTAL LIMITS

- Designed to resist weather – Not 100% waterproof
- Use only between: -20°F (-29°C) to 120°F (49°C)
- If stuck due to ice or debris:

→ Use lukewarm water, do not force open

WARRANTY & LIABILITY

Limited Warranty

- Covers factory specs at shipping only
- No guarantees on:Durability / Fit for specific use / Environmental resistance

User Responsibility

- Damage caused by:

– Improper use or overloading / Unauthorized mods / Accidents, weather, chemical exposure

Product codes = tech specs only, not performance guarantees

LEGAL NOTICE

- Governed by state law where purchased
- Manufacturer may update this document without notice
- English version is legally binding