
53 60

Hard Tri-fold Low-profile Installation Manual

1 Accessories Inventory

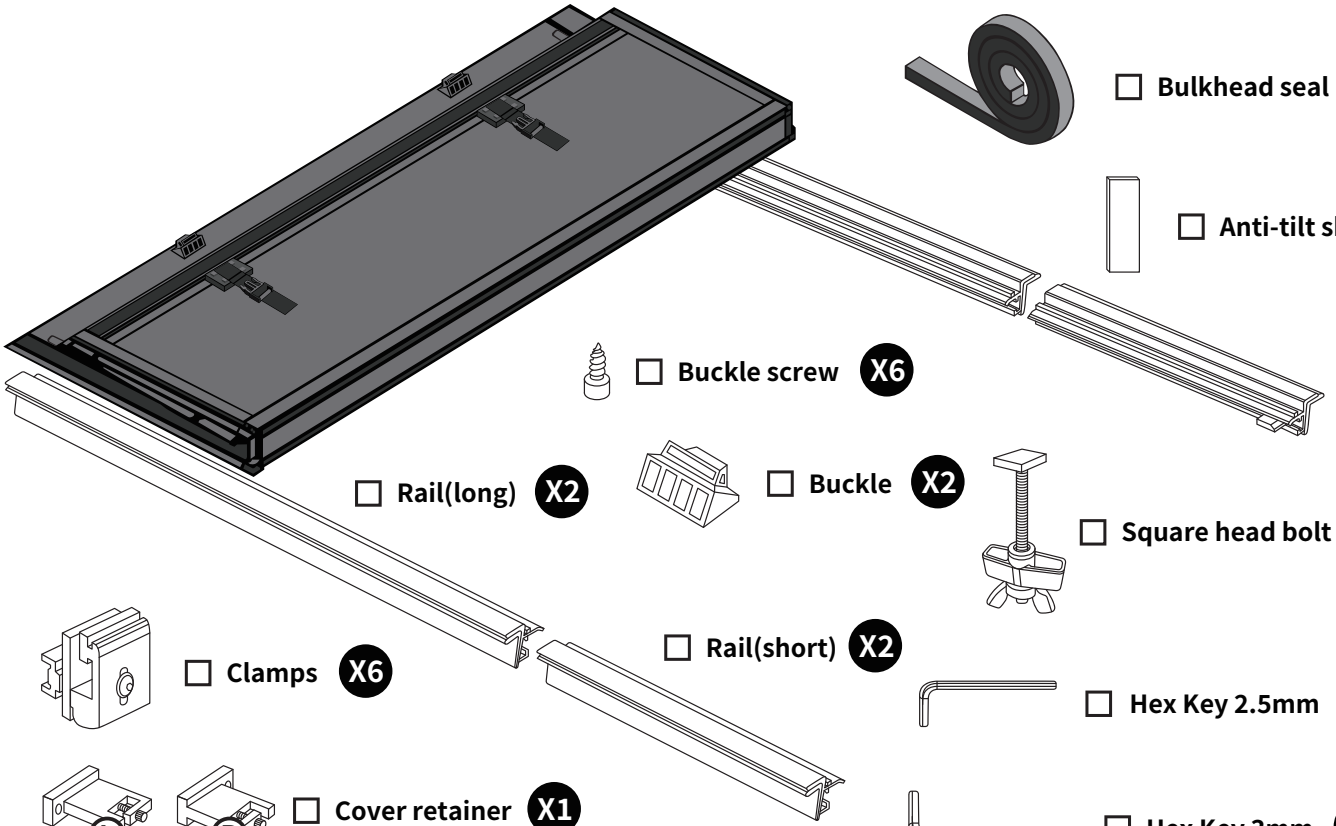

- ☐ Bulkhead seal X1
- ☐ Anti-tilt shim X4
- ☐ Buckle screw X6
- ☐ Rail(long) X2
- ☐ Buckle X2
- ☐ Square head bolt group X2
- ☐ Rail(short) X2
- ☐ Clamps X6
- ☐ Hex Key 2.5mm X1
- ☐ Cover retainer X1
- ☐ Hex Key 3mm X1
- ☐ Anti-tilt bracket X1
- ☐ Hex Key 5mm X1
- ☐ Socket set screws X4
- ☐ Waterproof rubber plasticine X2

2 Product Advantages


Our Tonneau Cover Is Made of Several Durable Materials,
Such as FRP Panels Aircraft-grade alloy aluminum and High Performance Structural Sealant Etc.

We Offer Matched Tonneau Cover For Dozens Of Car Models, Fit For The Truck Bed Perfectly.


3 Installation

CAUTION

- CLEAN THE BULKHEAD WITH SOAP AND WATER TO REMOVE IMPURITIES AND GREASE, ALLOWING THE MOISTURE TO EVAPORATE TO ENSURE A DRY SURFACE.

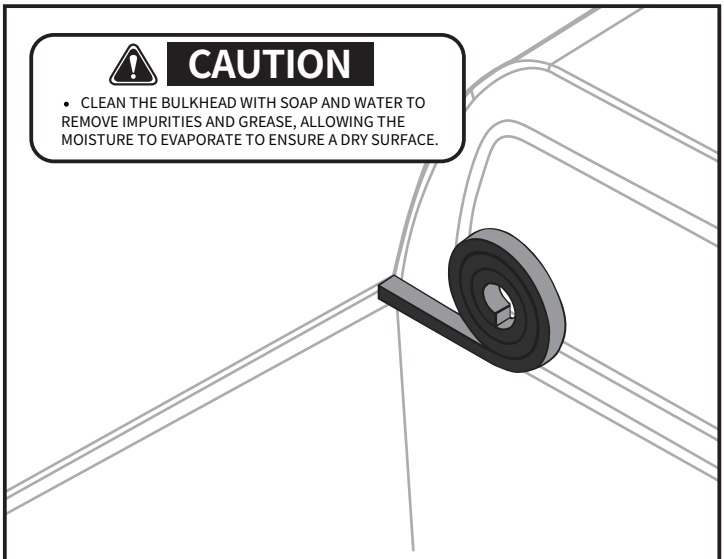


- Peel backing, stick seal edge - to - edge.
- Cut off excess with scissors or utility knife.
- Press evenly for adhesion.
- Skip seal if truck has plastic bed liner.

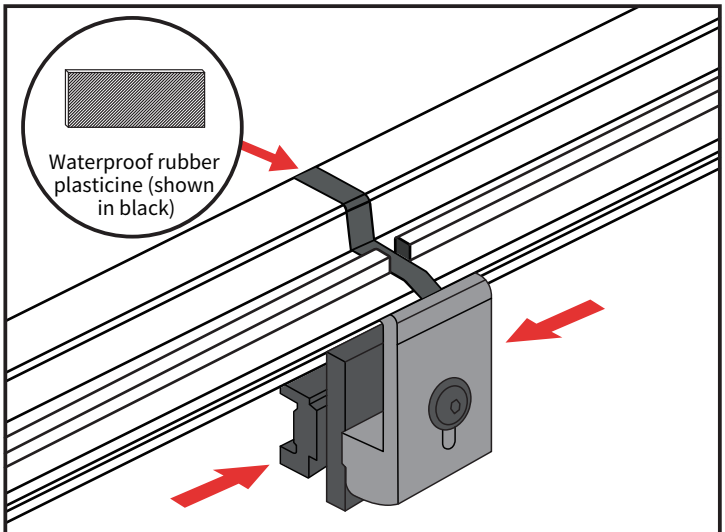


Fix the seam of the two sections of the guide rails with waterproof rubber plasticine. During installation, please ensure that the clamp is positioned in the middle of the seam between the short side rail and the long side rail.

- Place long rail beside cab, then short rail.
- Adjust clamp screws for smooth rail insertion.
- Insert clamps and sliders at the rail joint in A - E order.(Note to distinguish left and right.)
- Move to within 1 inch near the corresponding letter position on the guide rail.Only indicating the relative position and order of parts (not final positions); fine-tuning required after the cover is installed.

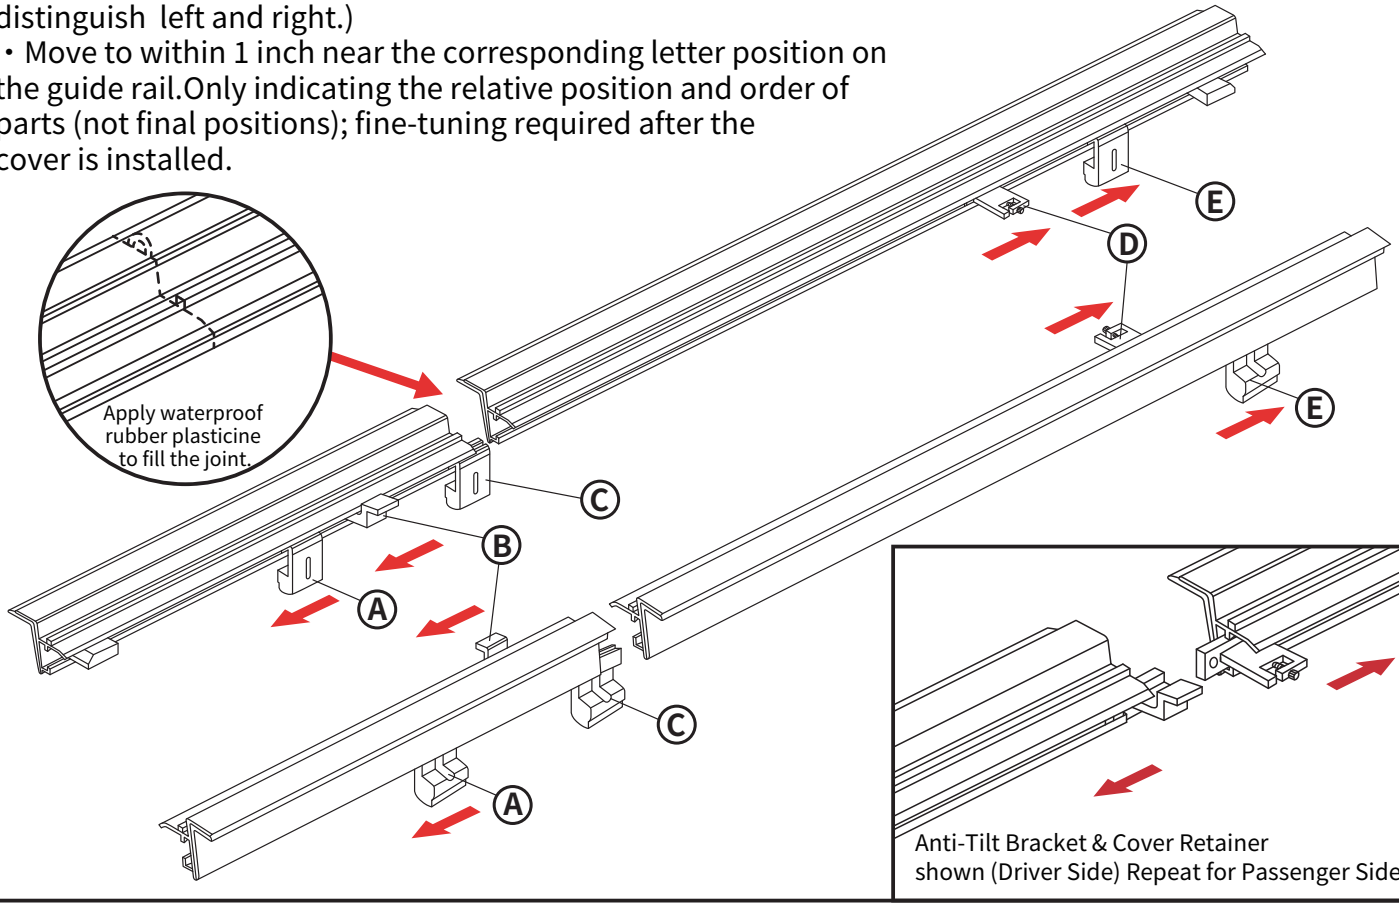

Anti-Tilt Bracket & Cover Retainer shown (Driver Side) Repeat for Passenger Side.


Ensure Rails are properly positioned as shown. Connect the Short Rail to the Long rail. Repeat for the other side.

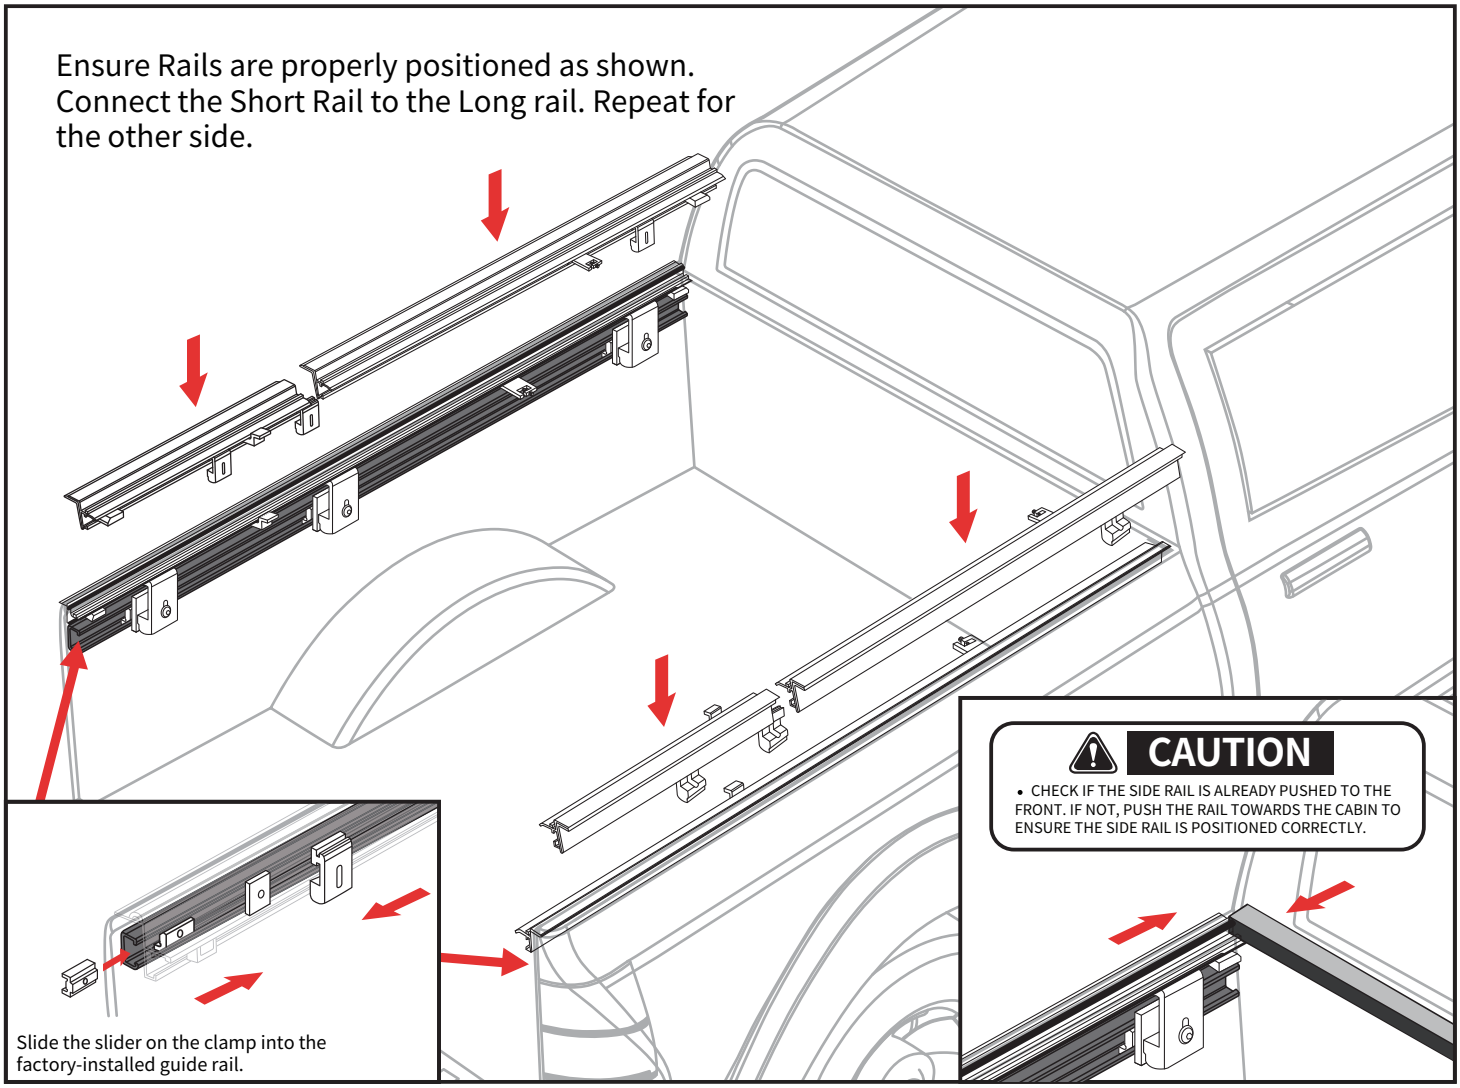



Slide the slider on the clamp into the factory-installed guide rail.

CAUTION

- CHECK IF THE SIDE RAIL IS ALREADY PUSHED TO THE FRONT. IF NOT, PUSH THE RAIL TOWARDS THE CABIN TO ENSURE THE SIDE RAIL IS POSITIONED CORRECTLY.

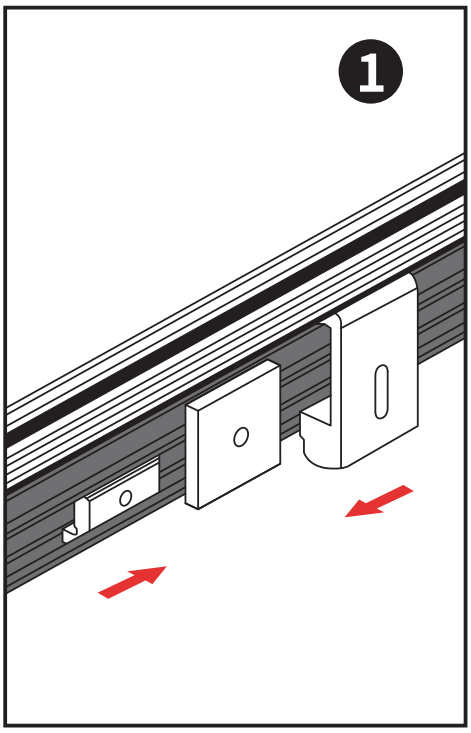


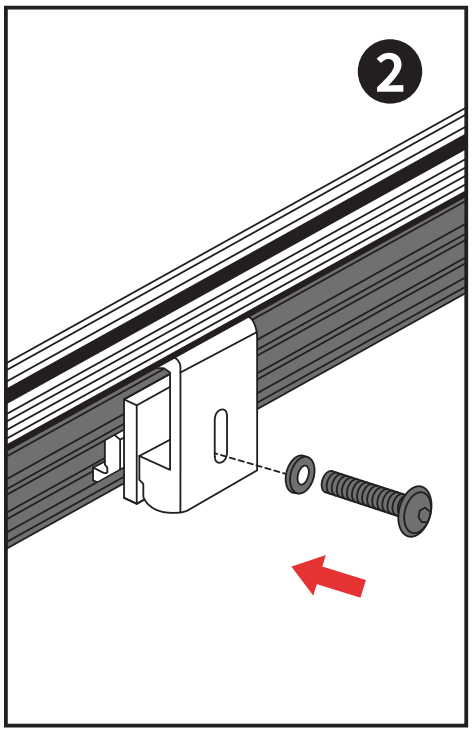

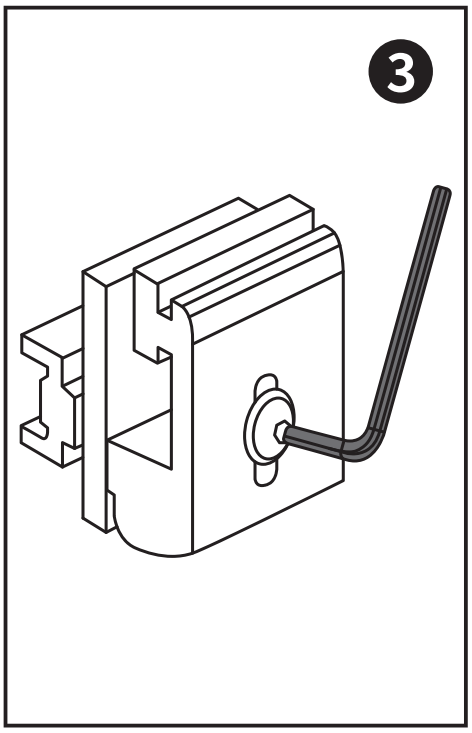



Remove the positioning block from the Clamps, slide it into the guide rail of the hopper, and move it to the position shown in the picture above. Then, connect the fixture with bolts and tighten it to secure the position.

Place the cover on the rails and move it slightly back so the latch fits the block.
Adjust the block if the position is incorrect.

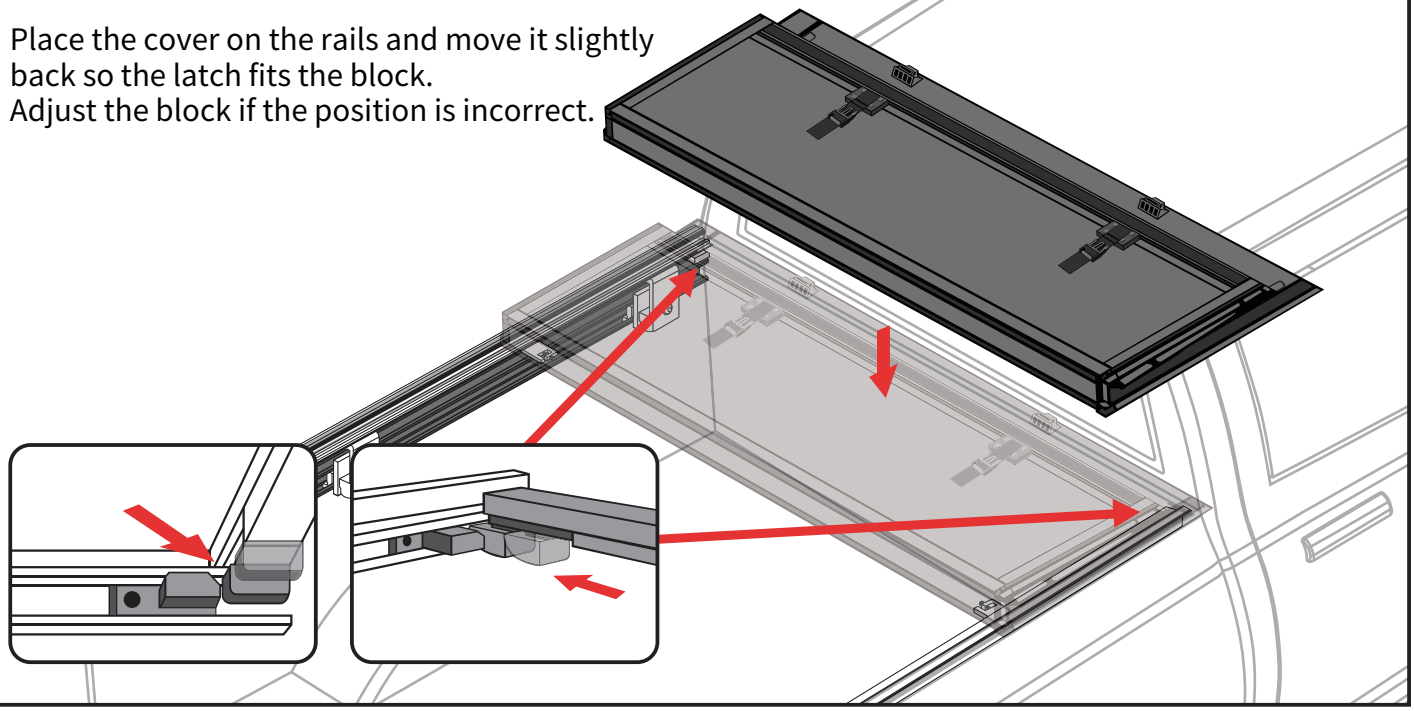


Position the buckle ends withthe open side facing the bed coverpanel.Use a Hexagon wrench install the two buckles into thepre-drilled holes on the front headerpanel with the provided screws. DO NOT usea screw gun,securely tighten byhand only.

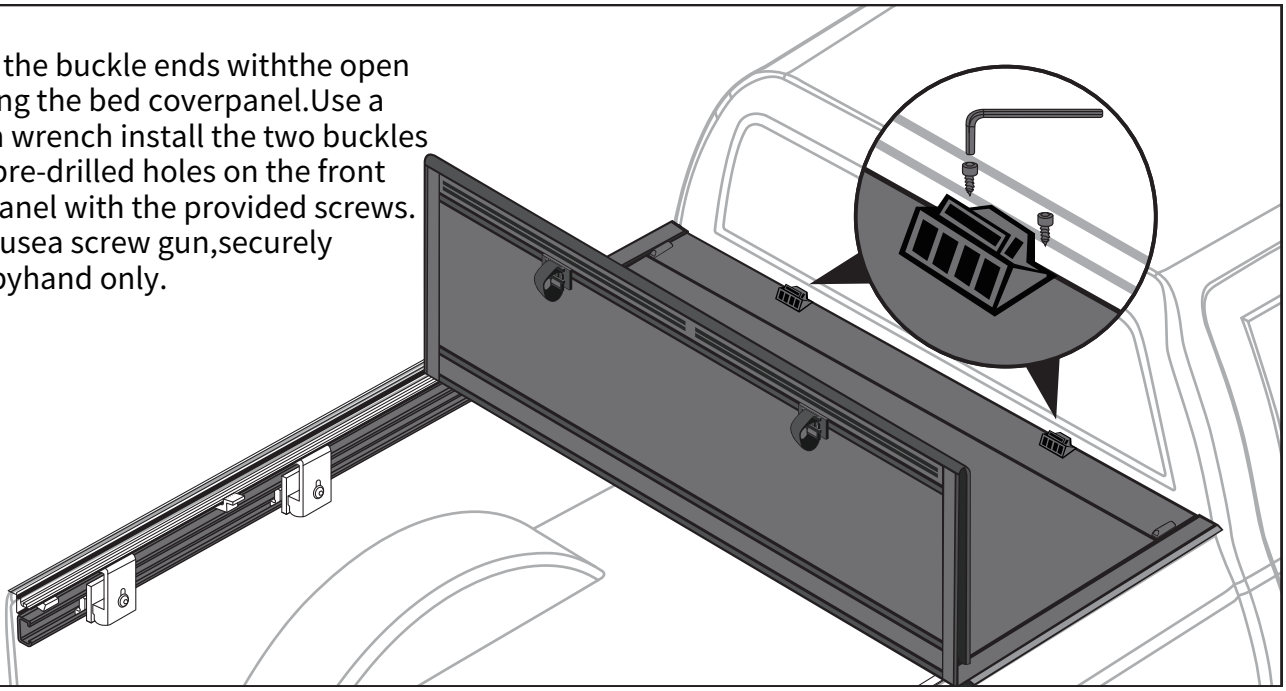


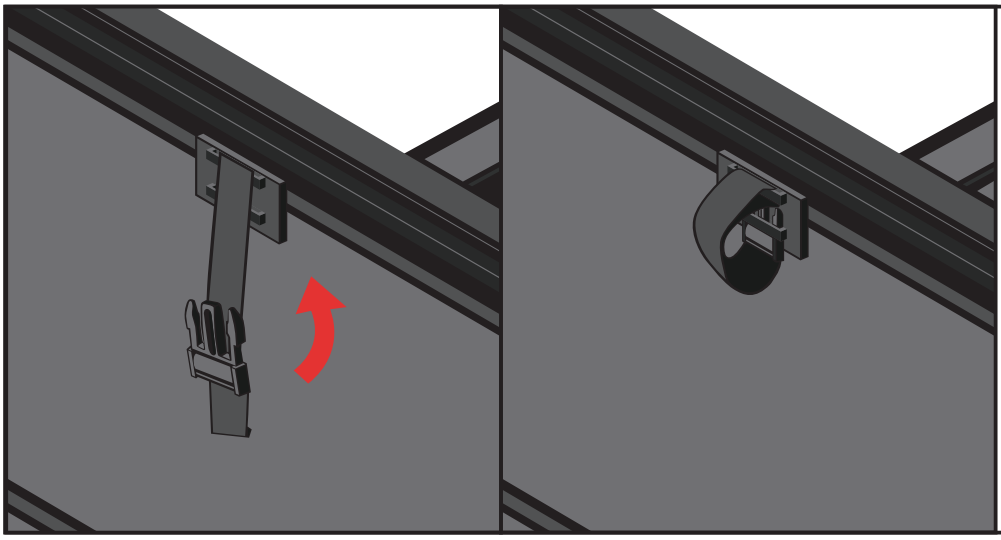

When cover is unfolded secure buckles onto the slots on the cover.


When lowered, the rear latch should fit the block. Adjust and secure if the position is incorrect.

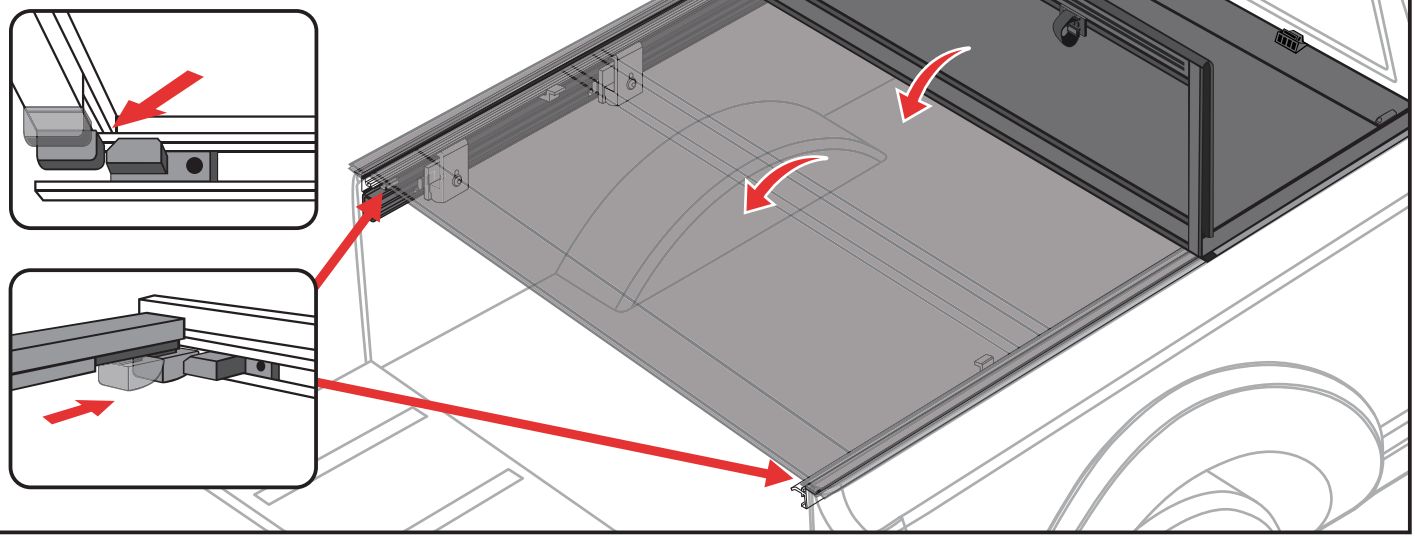

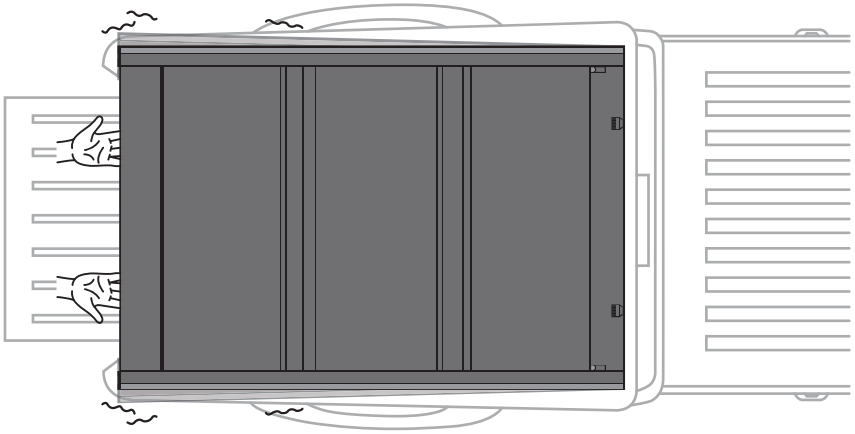


Adjust the bed cover to center it.


Ensure cover is aligned on both sides of the rails.Check the distance between the cover and side rails are even. Shown on red illustration.

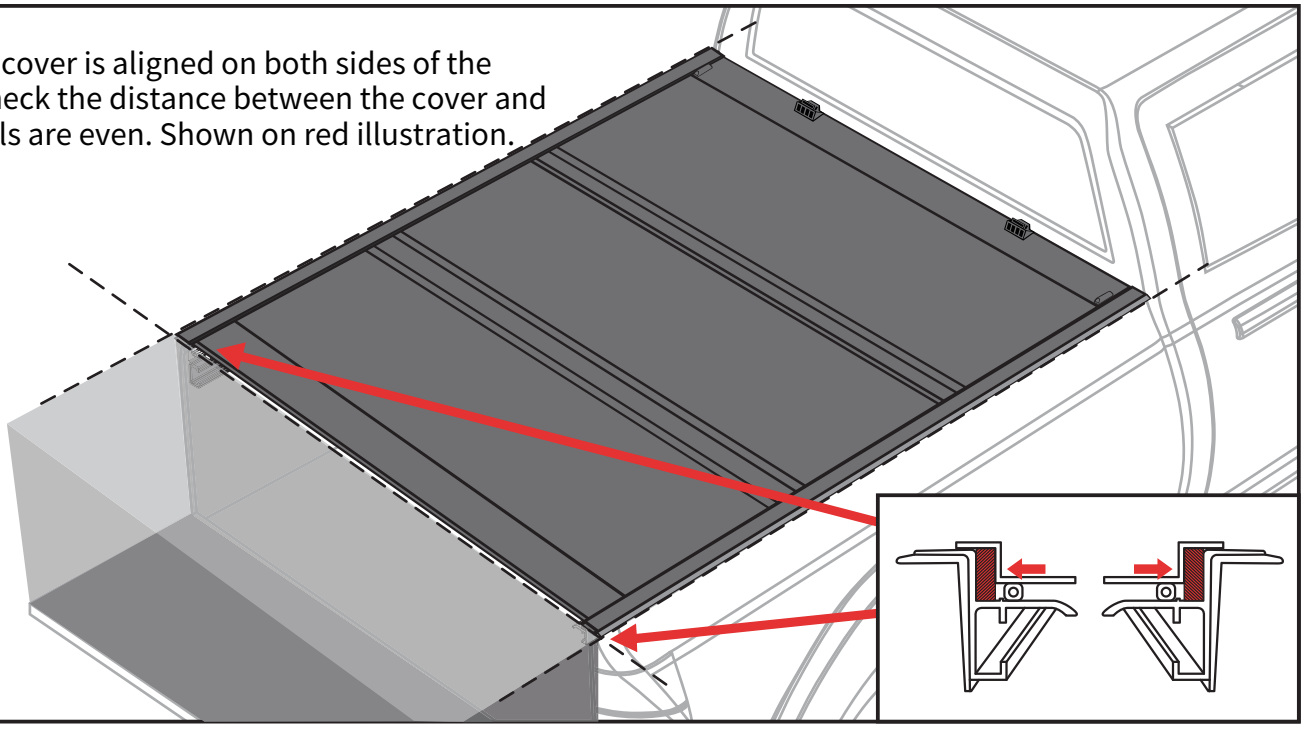


For some vehicle models, the guide rails may tilt downward. You can place the provided washer in the yellow position as shown in the diagram to realign the guide rails.

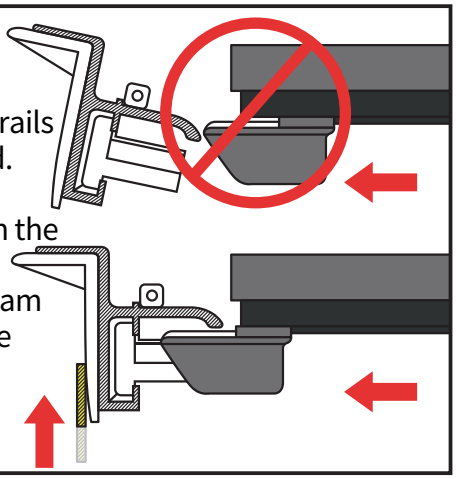

When the cover is fully closed inspect locking tongues properly engages.

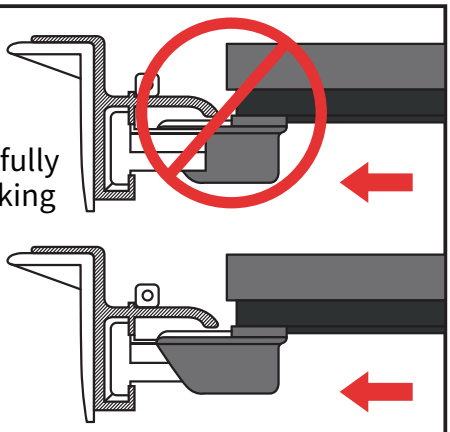


Pull the handle at the bottom to unlock the latch. Flip the cover open.

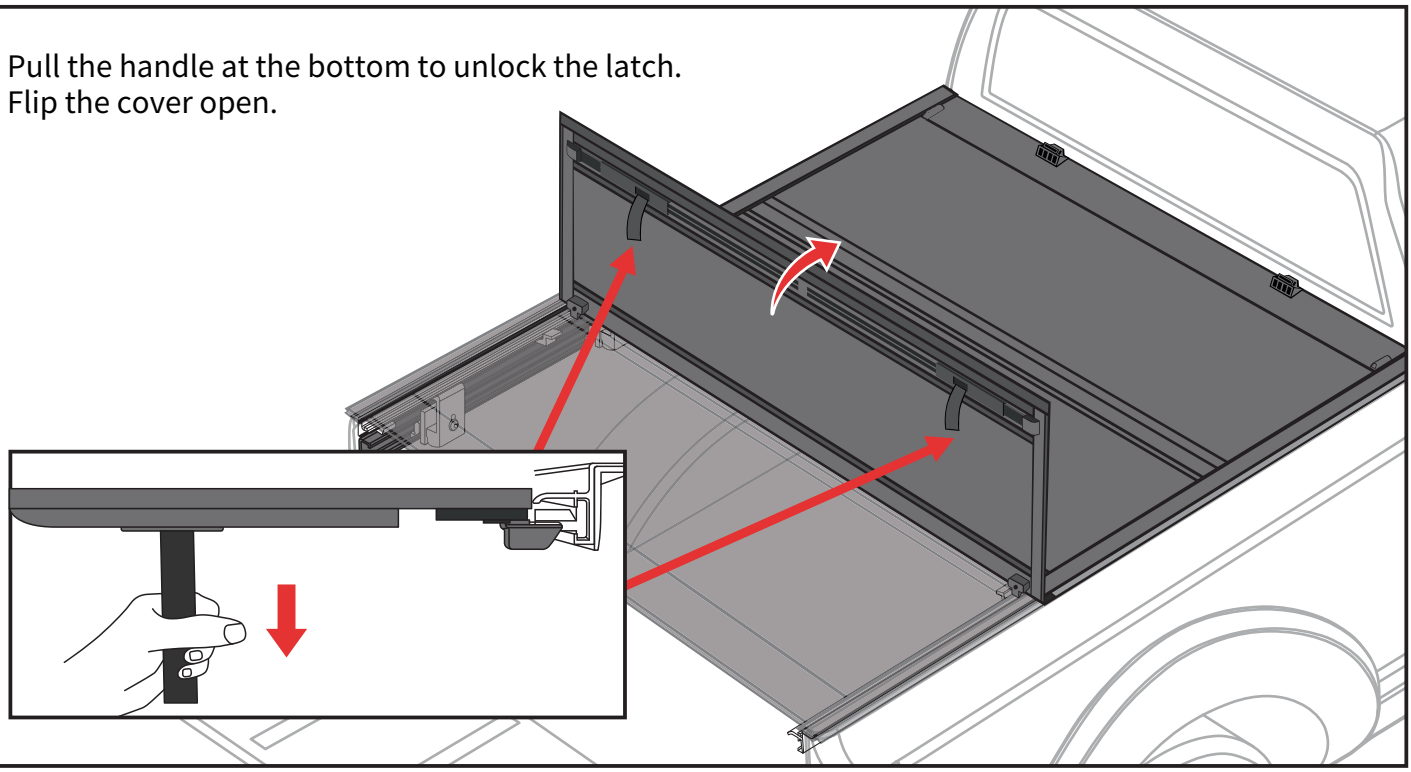


Pull the release cord to unlock the front bulkhead latch and remove the cover.


CAUTION

- PULL HERE TO UNLOCK THE COVER DURING REMOVAL. DO NOT FORCE IT OFF.

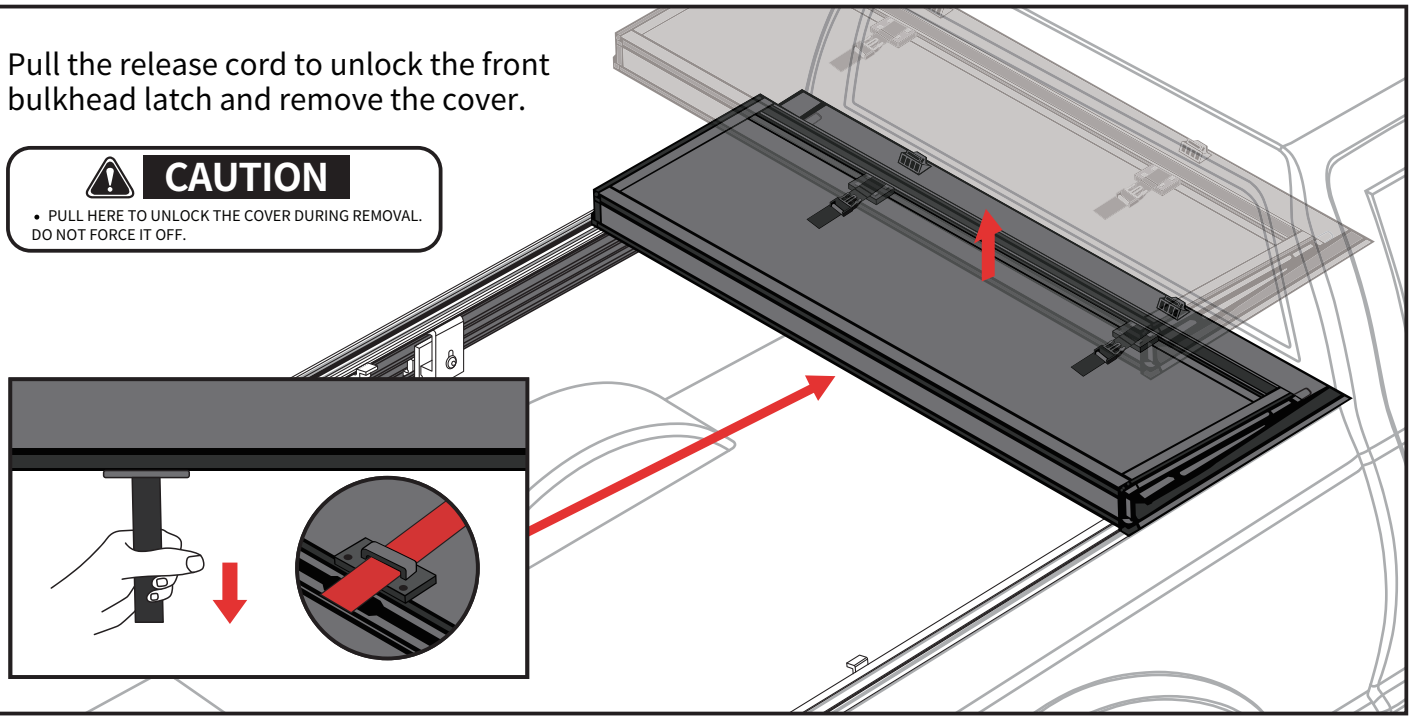



After confirming the position of the truck bed cover, install the cover stabilizer.

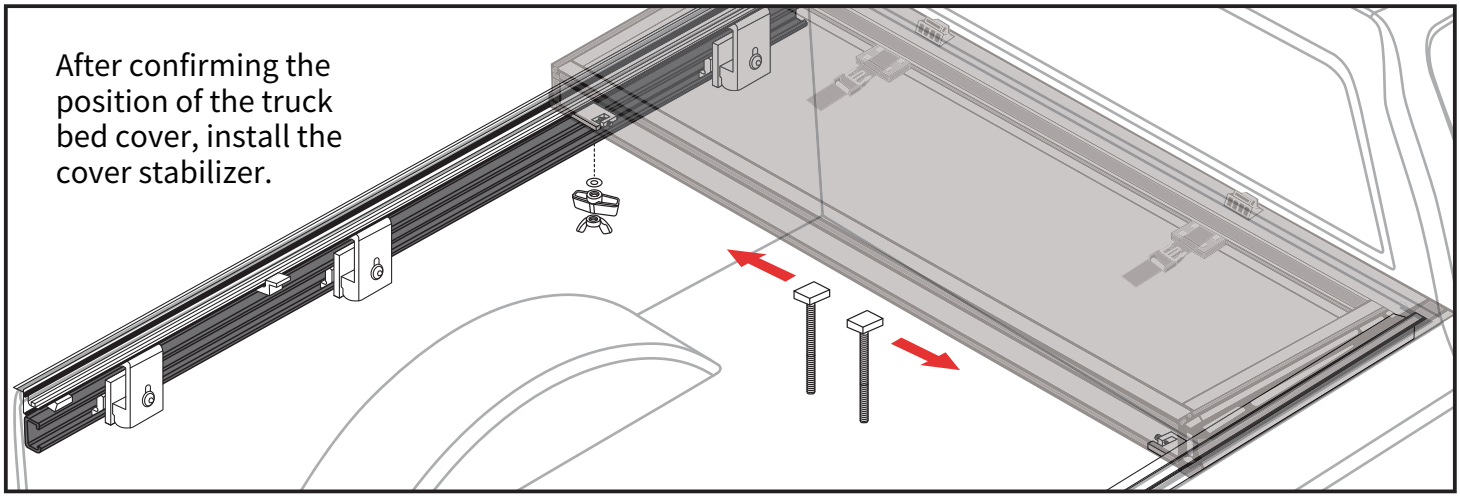


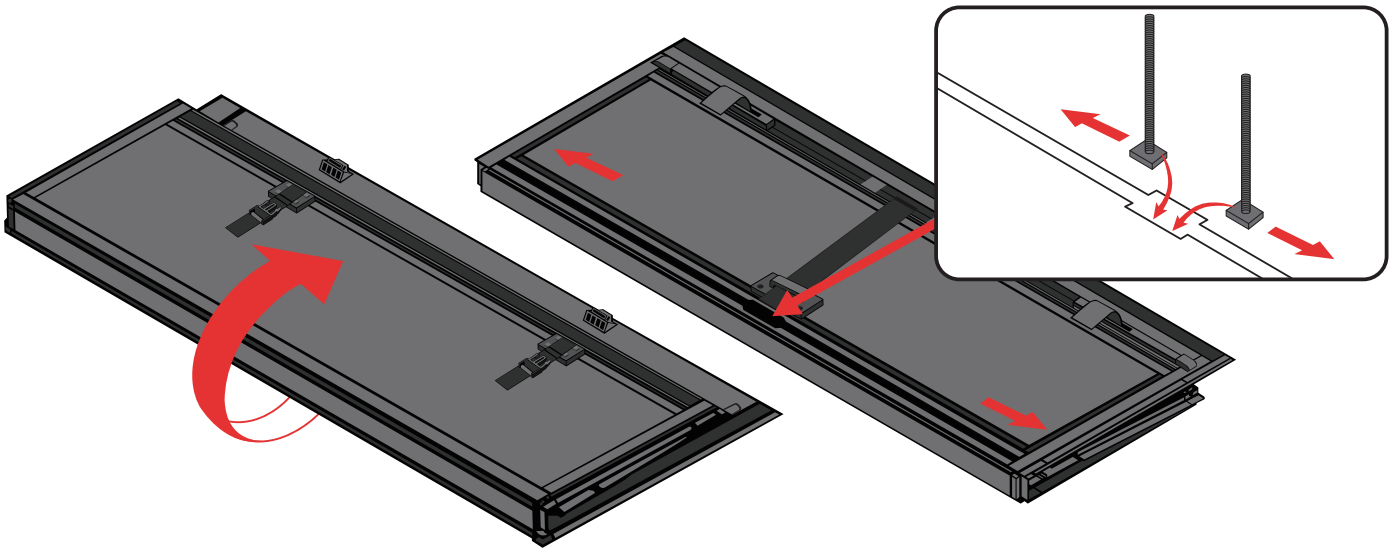


Insert screw cover retainer into the groove on the back of the truck bed cover and slide it to both sides.

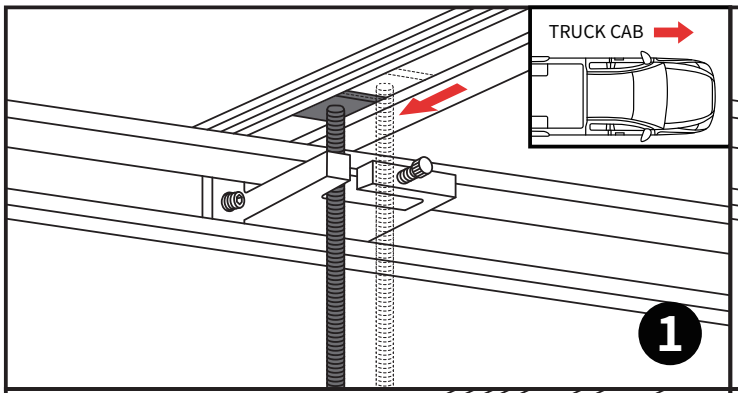


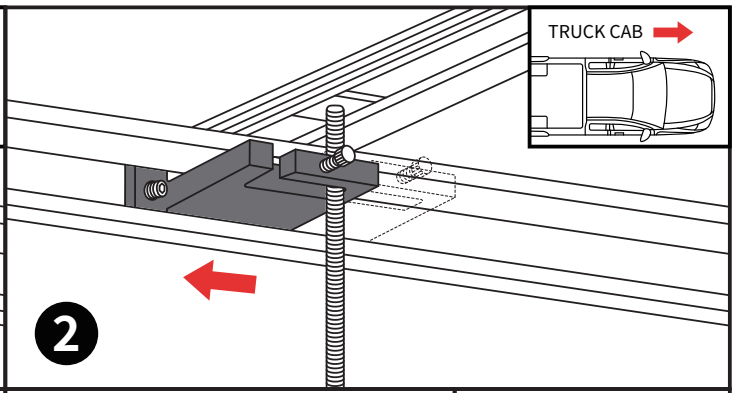


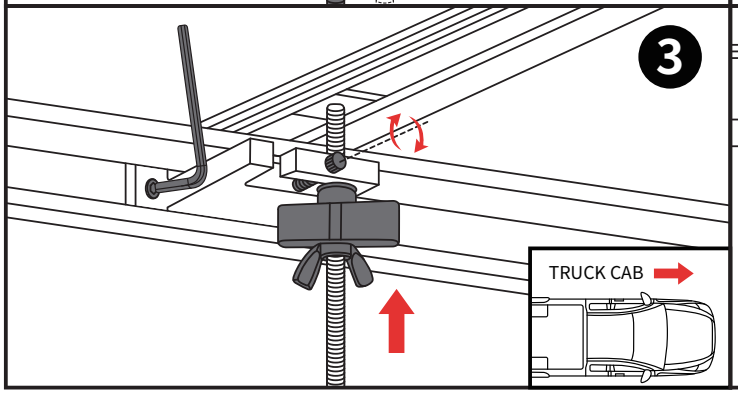


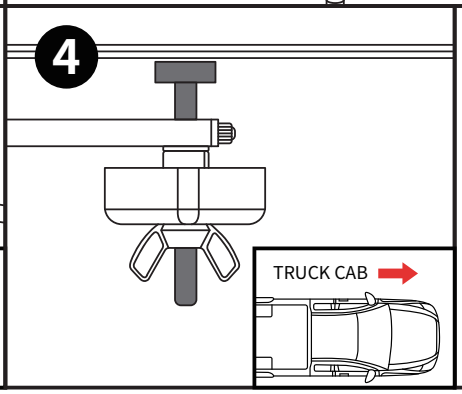

Complete the installation in the order shown in the diagram.

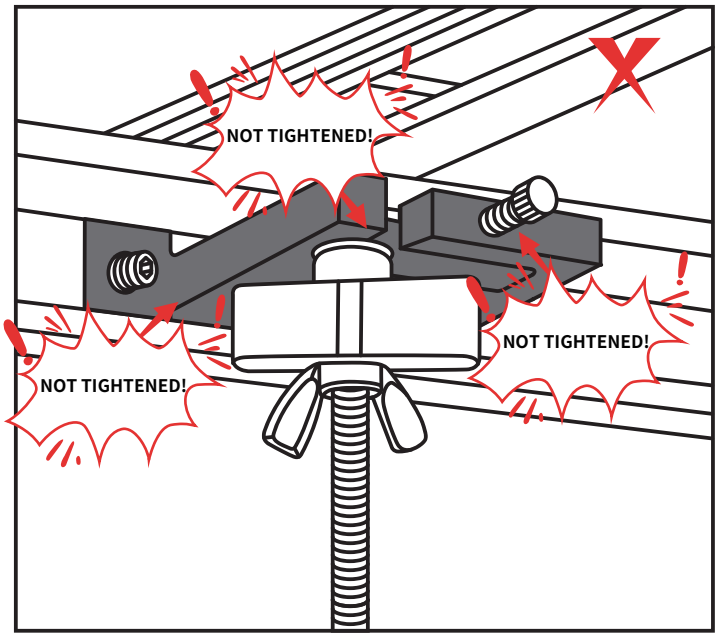

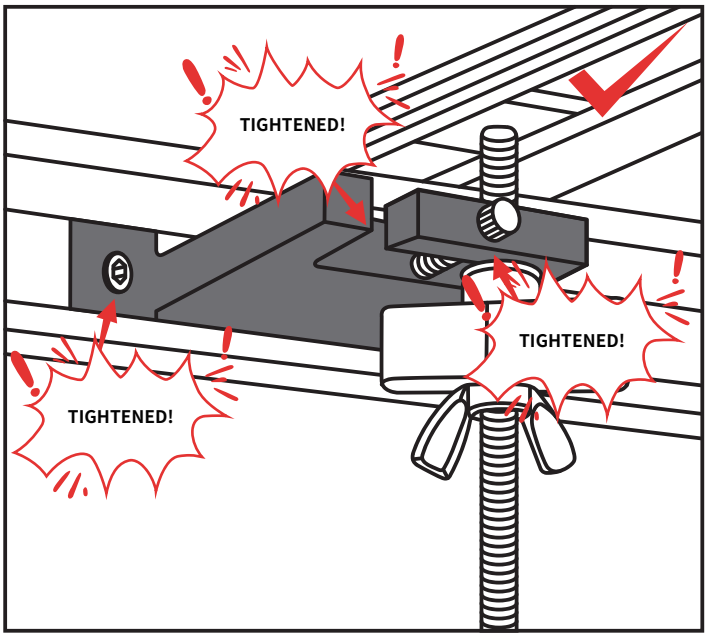


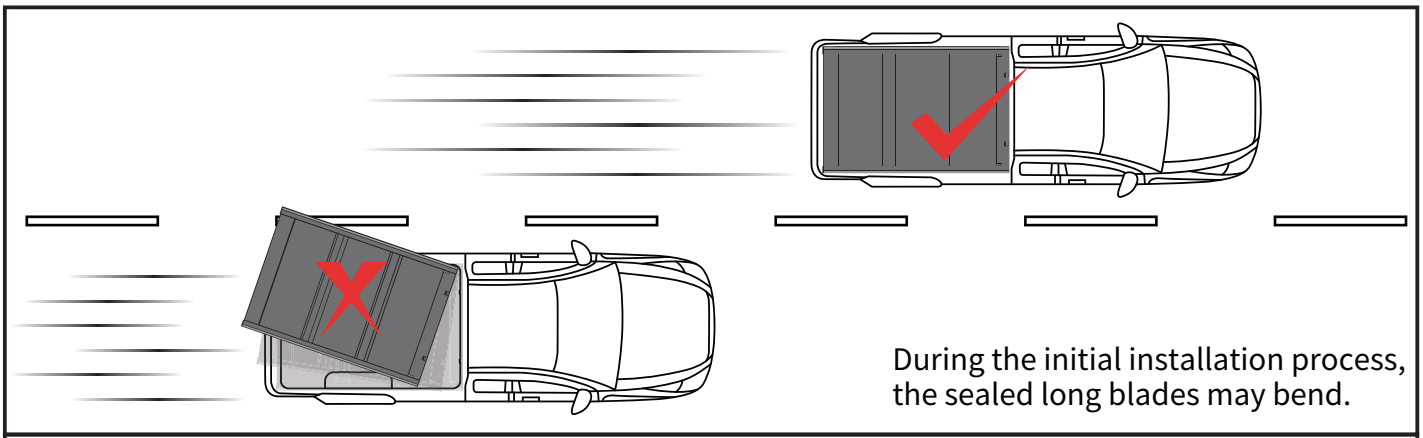


During the initial installation process, the sealed long blades may bend.

CAUTION Rough road surfaces can cause high-frequency vibrations, leading to the need for adjustments in the position of the truck cover.Regularly check if your truck cover is in the correct position within the truck bed,and inspect all connectors and fastening blocks to ensure they are functioning properly.


Adjust the anti-tilt Bracket position to ensure the small locking block securely fastens to it when lowering the last panel. Fold the panel multiple times to confirm it latches properly. Lastly tighten the screw on the anti-tilt Bracket to make it stay in place.

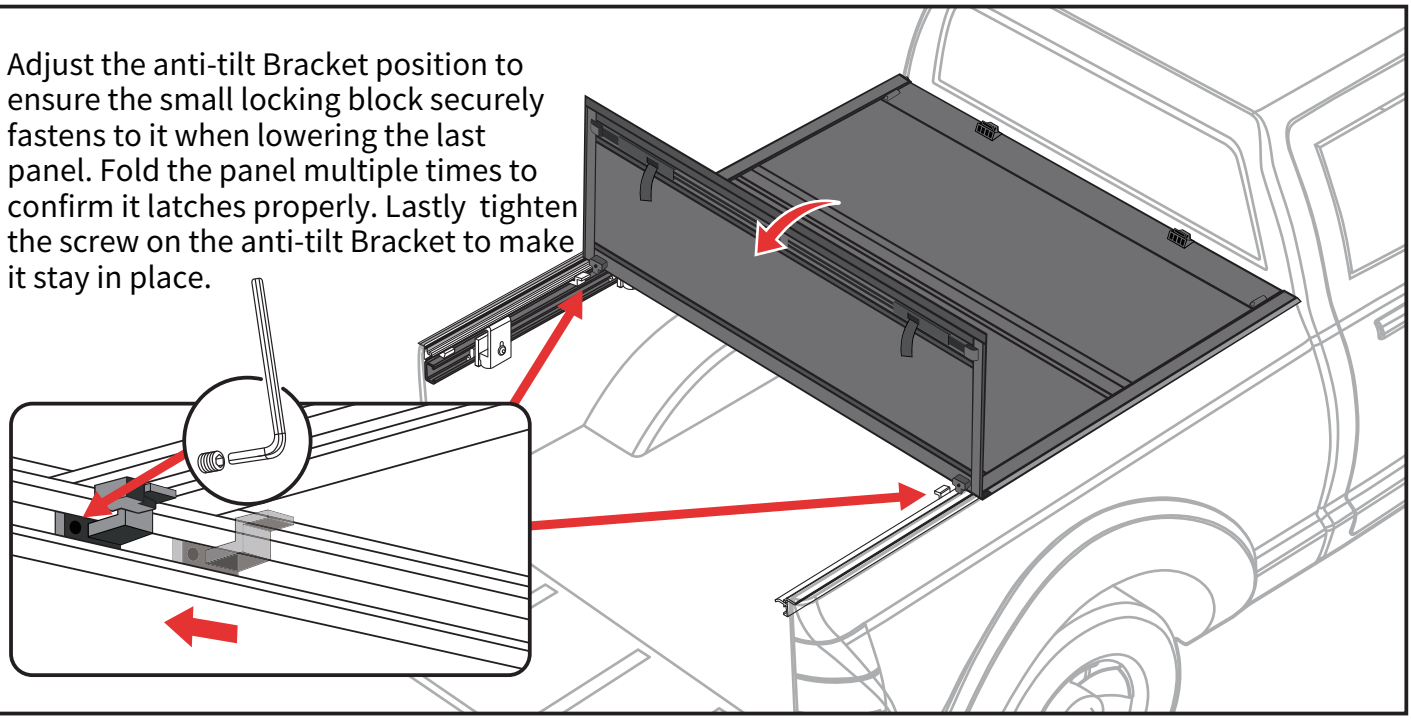

Finally, close the truck cover to complete the installation.

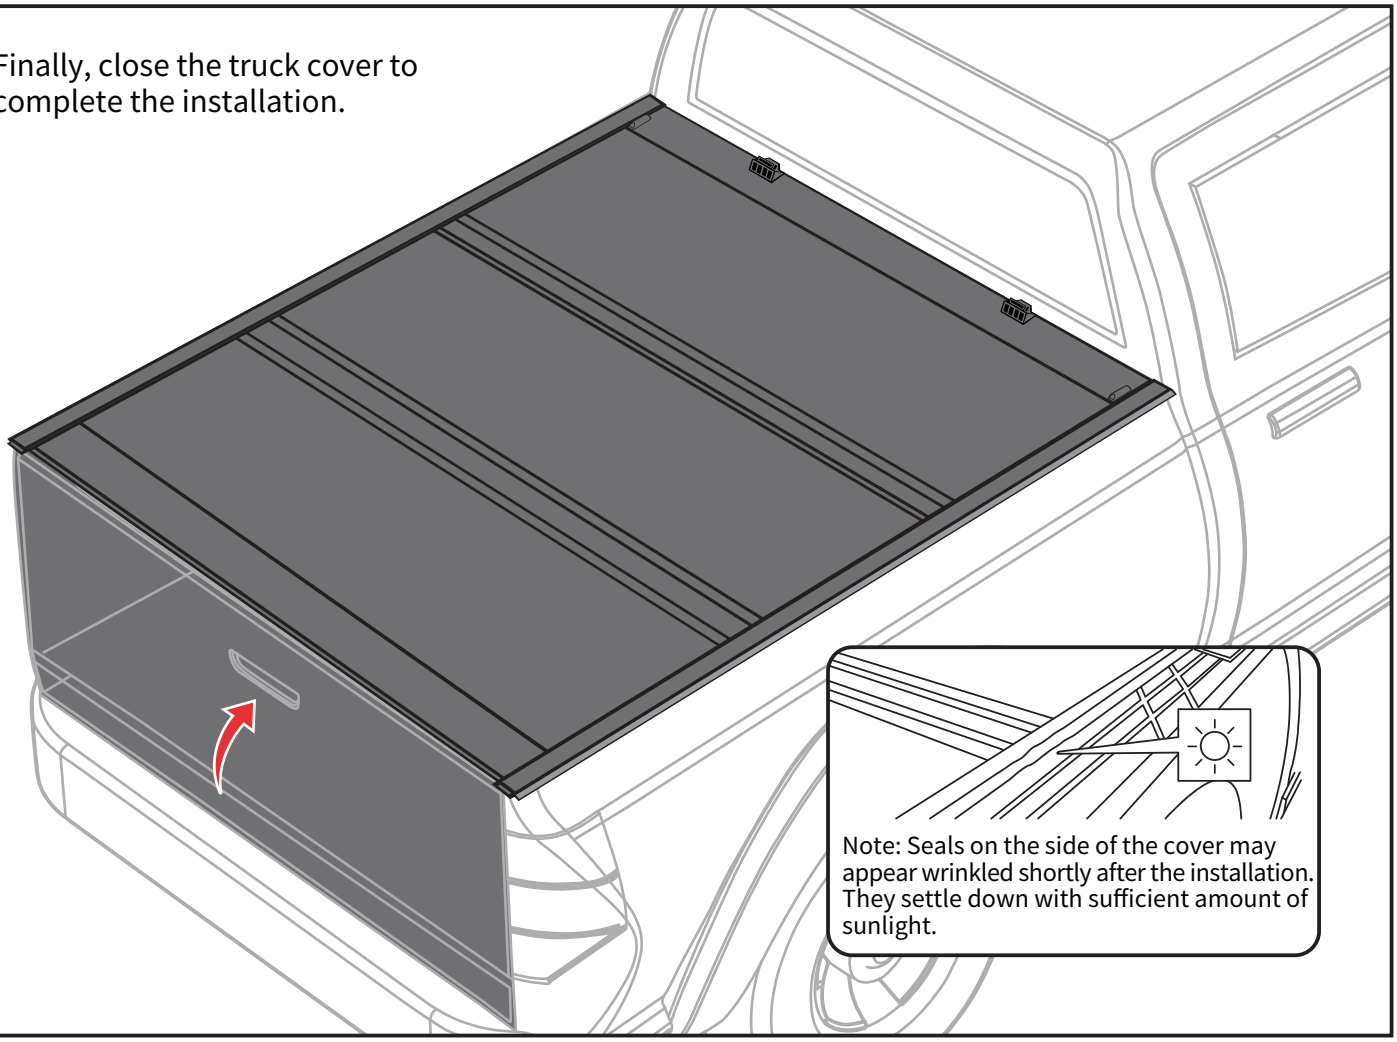

Note: Seals on the side of the cover may appear wrinkled shortly after the installation. They settle down with sufficient amount of sunlight.

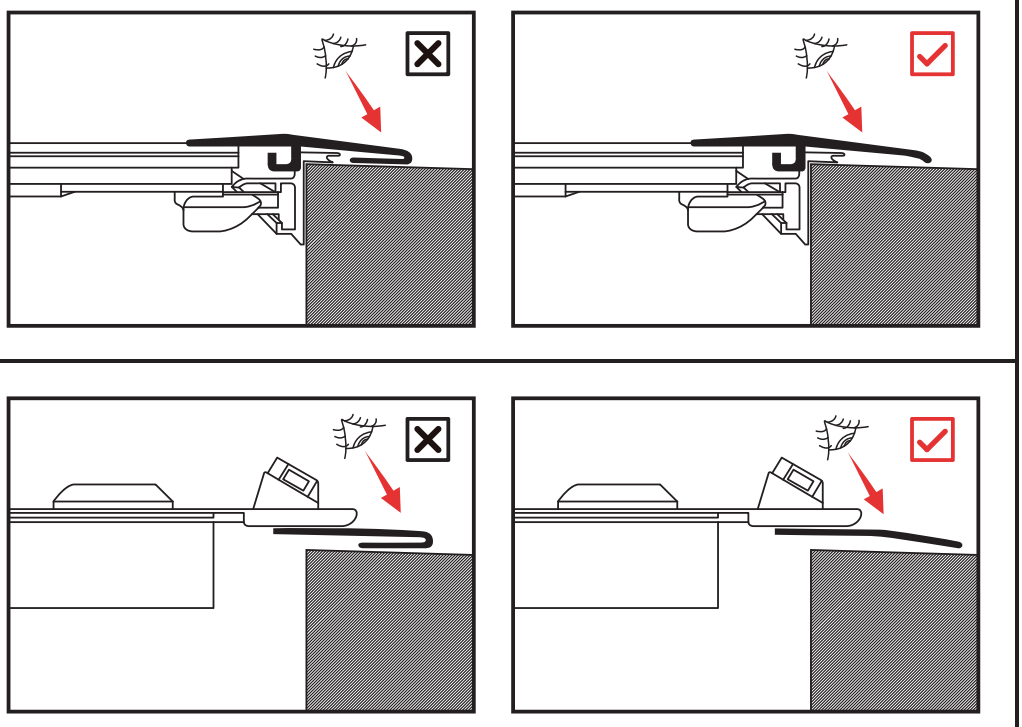

Check Side Gaskets and Bulkhead Gasket are properly placed to limit the water entry.

CAUTION Rough road surfaces can cause high-frequency vibrations, leading to the need for adjustments in the position of the truck cover.Regularly check if your truck cover is in the correct position within the truck bed,and inspect all connectors and fastening blocks to ensure they are functioning properly.

4 Care & Safety Guide

CARE & CLEANING

- Use mild car soap and water only
- Do NOT use pressure washers, abrasive cleaners, or chemicals
- If exposed to harsh substances (e.g., oils, solvents):

→ Rinse immediately with baking soda solution (1:10 water)

INSTALLATION & INSPECTION

After Installation

- Check and tighten all clamps, latches, and side rails within 7 days Regular Checks
- Every 2 weeks under normal conditions
- Every week for off-road, frequent, or high-vibration use Clearance
- Maintain ¼" (6mm) clearance around hinges and latches

BEFORE DRIVING

- Ensure all anchor points are fully secured
- Clear off snow, ice, or debris before opening

CARGO & USAGE WARNINGS

- No stacking or tying cargo on the cover
- No passengers or pets under a closed cover
- No exposure to chemicals over 48 hrs without rinsing
- Use OEM parts only – No drilling or tape

ENVIRONMENTAL LIMITS

- Designed to resist weather – Not 100% waterproof
- Use only between: -20°F (-29°C) to 120°F (49°C)
- If stuck due to ice or debris:

→ Use lukewarm water, do not force open

WARRANTY & LIABILITY

Limited Warranty

- Covers factory specs at shipping only
- No guarantees on:Durability / Fit for specific use / Environmental resistance

User Responsibility

- Damage caused by:

– Improper use or overloading / Unauthorized mods / Accidents, weather, chemical exposure

Product codes = tech specs only, not performance guarantees

LEGAL NOTICE

- Governed by state law where purchased
- Manufacturer may update this document without notice
- English version is legally binding