
# Hard Tri-fold Low-profile Installation Manual

## 1 Accessories Inventory

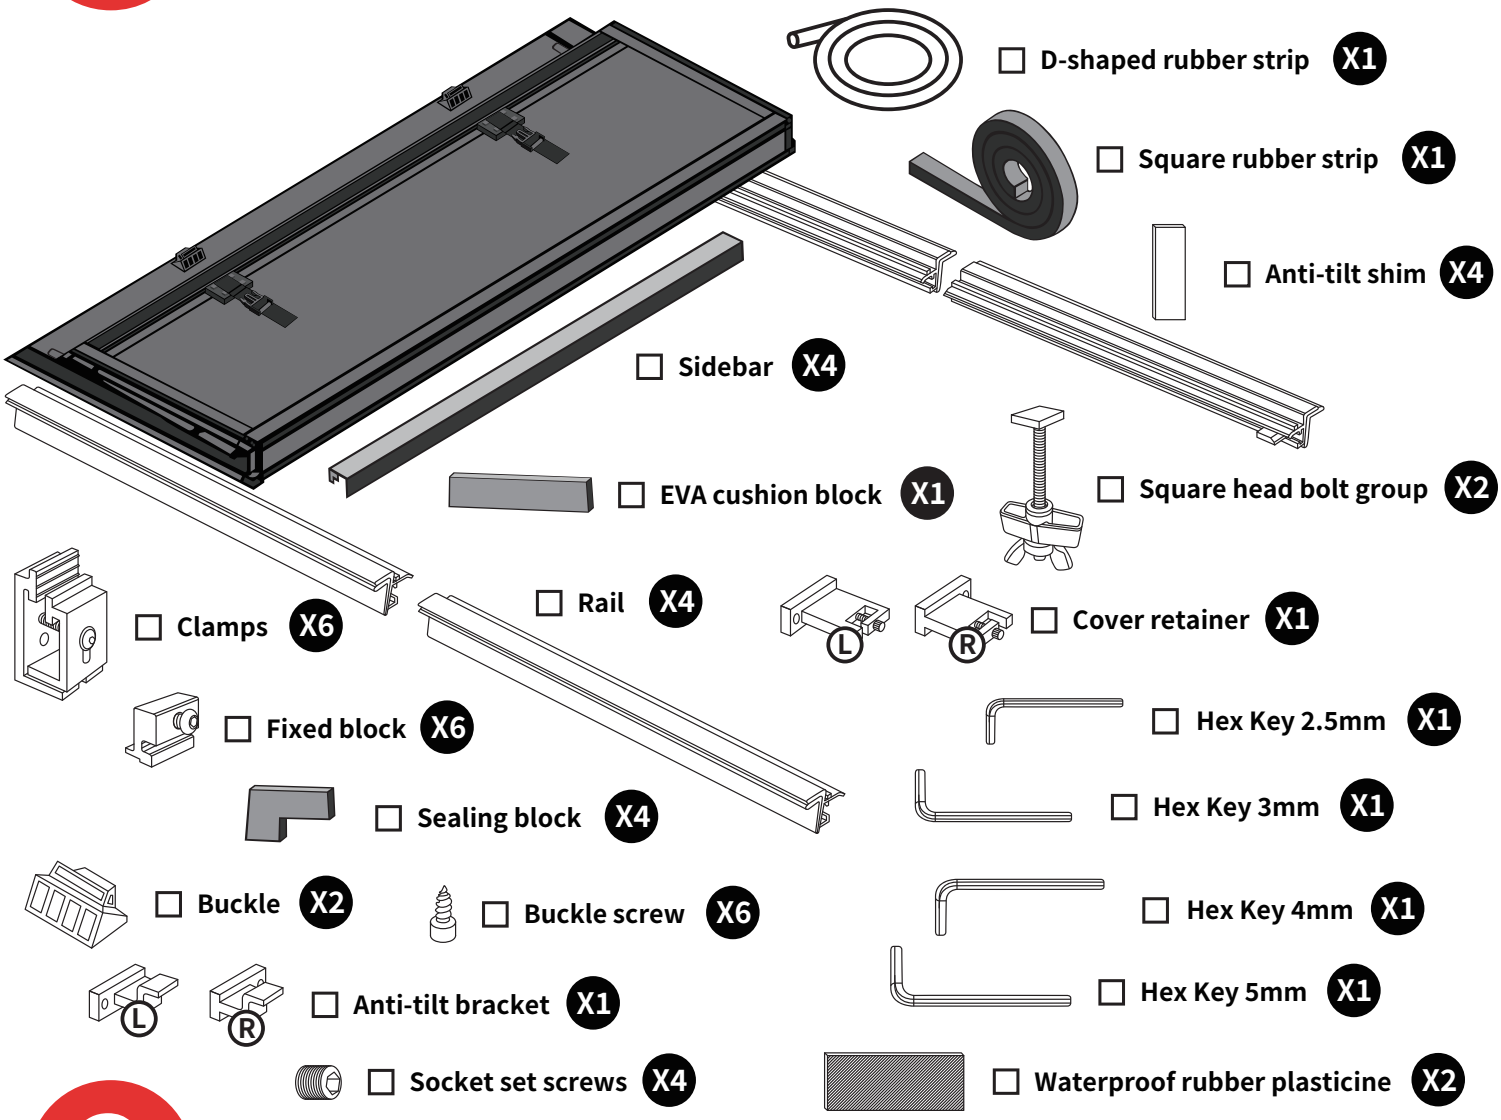

- ☐ D-shaped rubber strip X1
- ☐ Square rubber strip X1
- ☐ Anti-tilt shim X4
- ☐ Sidebar X4
- ☐ EVA cushion block X1
- ☐ Square head bolt group X2
- ☐ Clamps X6
- ☐ Rail X4
- ☐ Cover retainer X1
- ☐ Fixed block X6
- ☐ Hex Key 2.5mm X1
- ☐ Sealing block X4
- ☐ Hex Key 3mm X1
- ☐ Buckle X2
- ☐ Buckle screw X6
- ☐ Hex Key 4mm X1
- ☐ Anti-tilt bracket X1
- ☐ Hex Key 5mm X1
- ☐ Socket set screws X4
- ☐ Waterproof rubber plasticine X2


## 2 Product Advantages

Our Tonneau Cover Is Made of Several Durable Materials,
Such as FRP Panels Aircraft-grade alloy aluminum and High Performance Structural Sealant Etc.


We Offer Matched Tonneau Cover For Dozens Of Car Models, Fit For The Truck Bed Perfectly.

# 3 Installation


Remove the factory accessory rails.

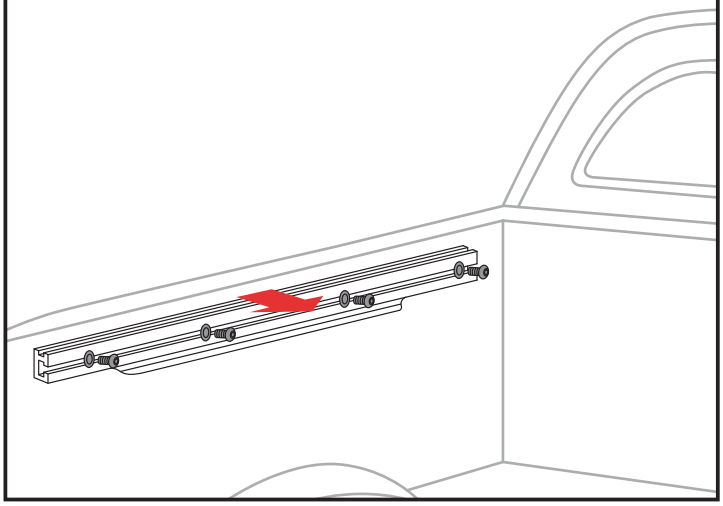


Apply the roll of D-shaped rubber strip along the bed.Make sure the seal extends beyond the ends of the accessory rail,from the bulkhead through to the back corner trim cap. Do this for both driver and passenger sides.

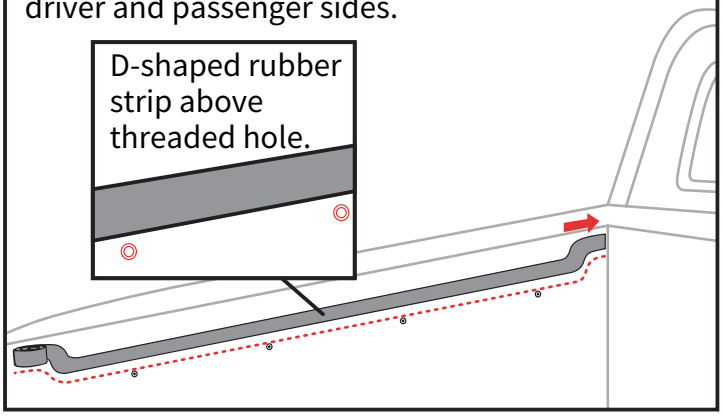



Place the D-shaped rubber strip to continue through the rear end cap.

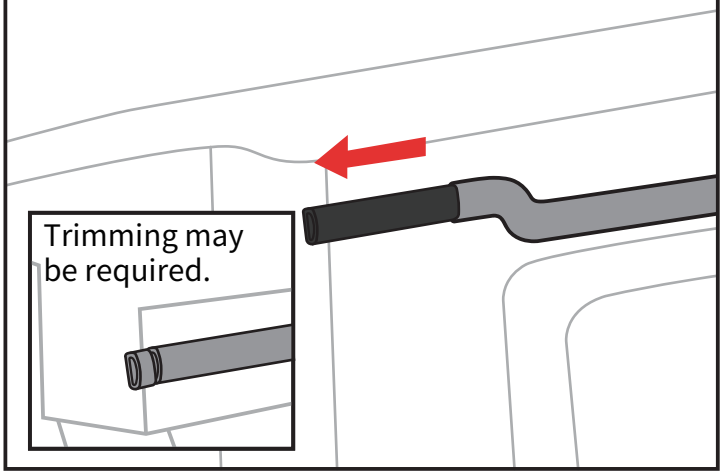



With the D-shaped rubber strip in place on both sides, reinstall the factory accessory rails.

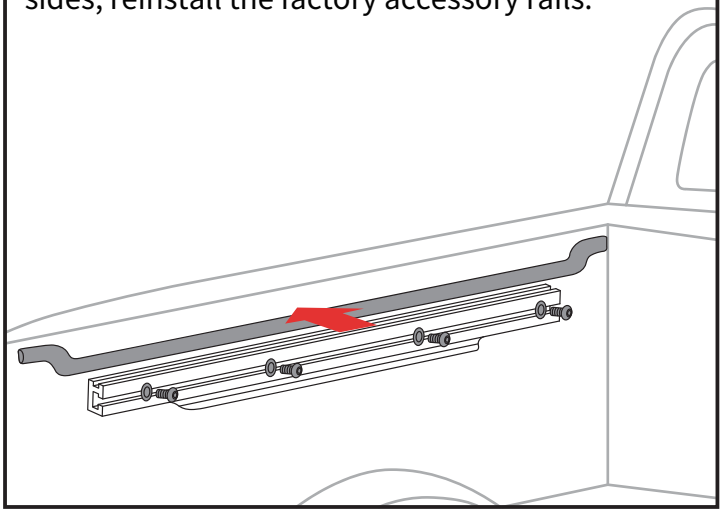


Remove the factory accessory rail end caps.

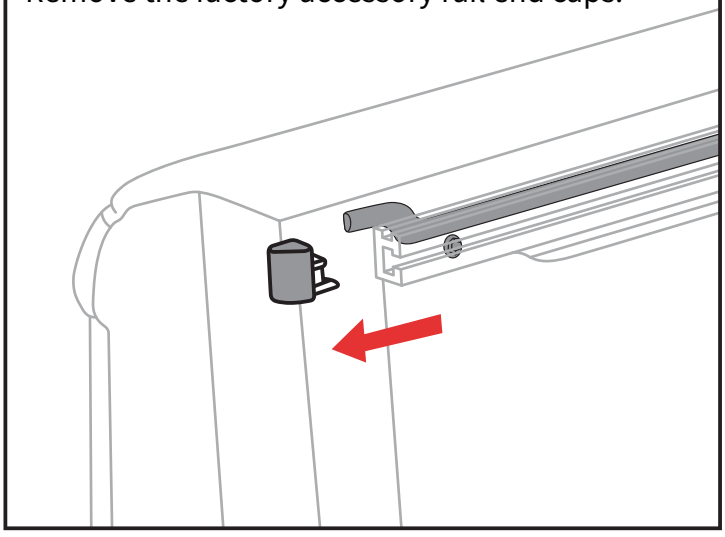


Place the sidebar into the top of the factory accessory rail and slide it toward the cab.

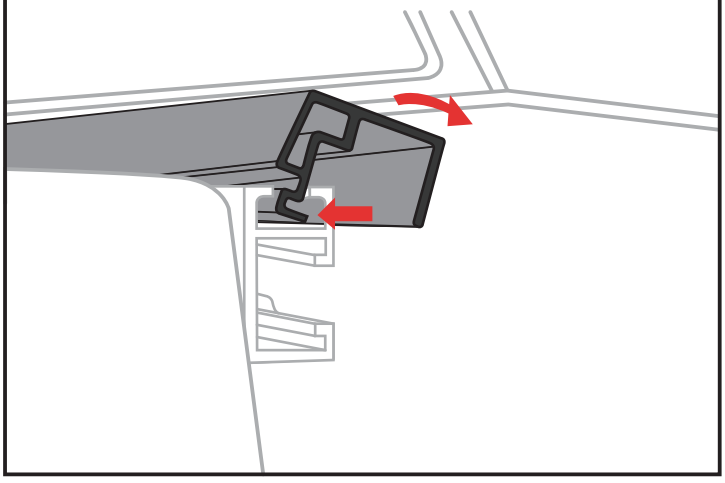


Before the sidebar is slid completely to the bulkhead,remove the backing and attach a rail end sealing block. Do this for both sides.

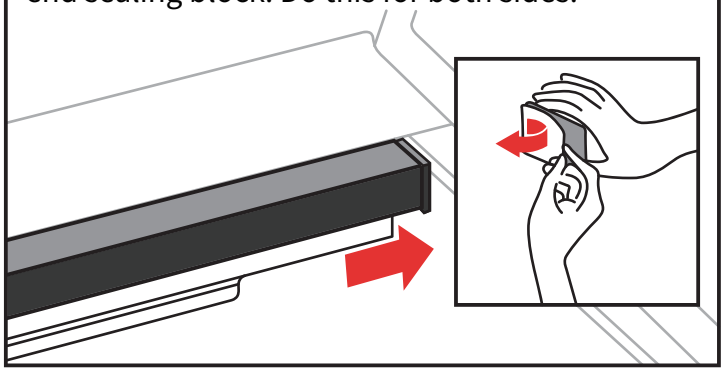


Slide the six fixed blocks shown below into the original guide rails, three on each side.

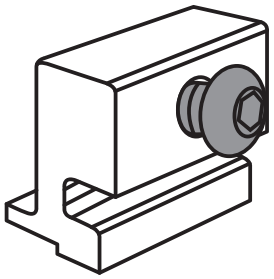


Slide 2 fixed blocks into each sidebar respectively.

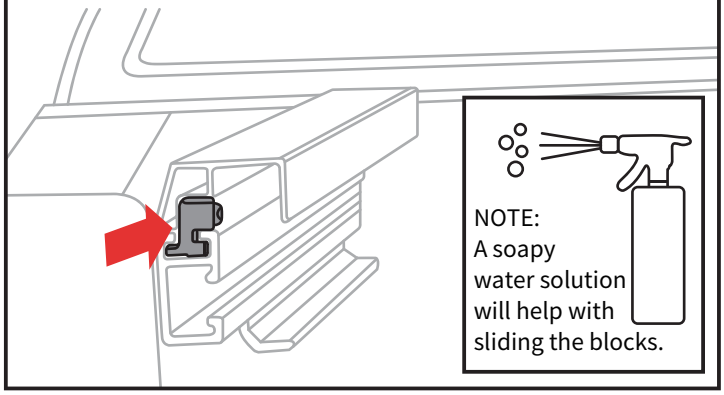



Evenly space the Fixed blocks on both driver and passenger sides

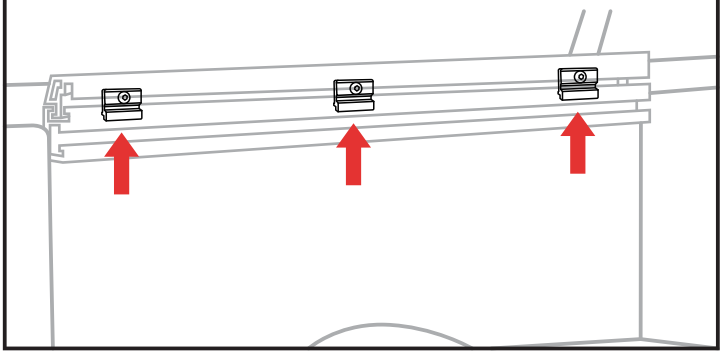


Clamp the EVA cushion block between the two sections of the sidebar.

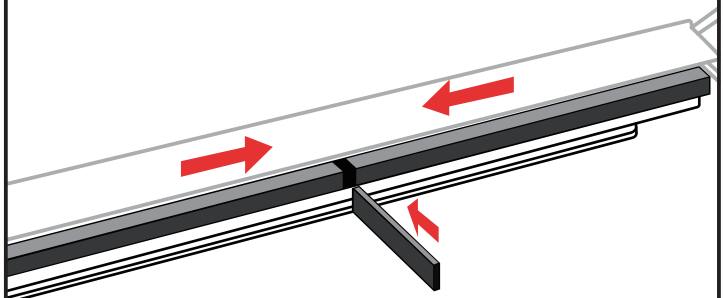


Trim to an appropriate size.

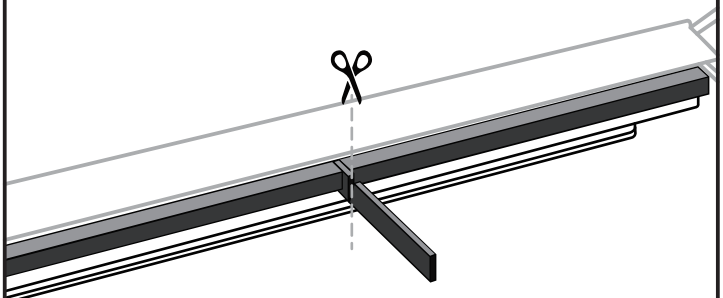

With the sidebar firmly pressed up to the bulkhead,tighten each Fixed block screws.

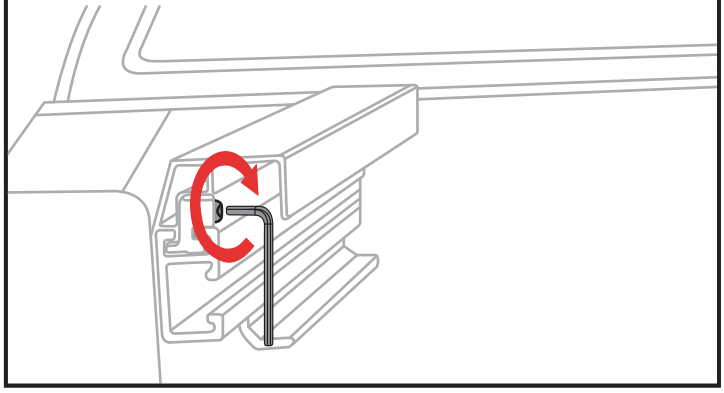


Adhere the Square rubber strip in the end cap corner to span the sidebar end cap and rear trim panel. Add one to each side. Trimming the seal may be required.

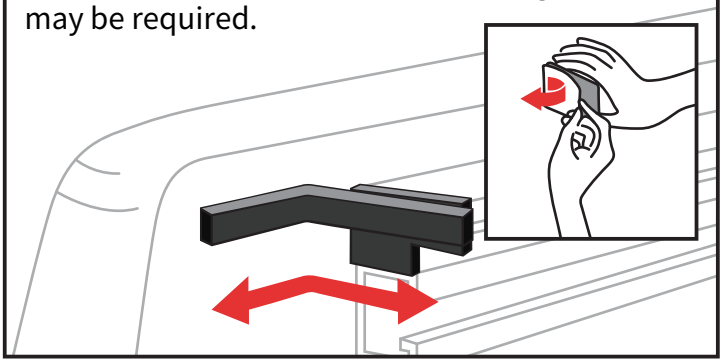


**CAUTION**

- CLEAN THE BULKHEAD WITH SOAP AND WATER TO REMOVE IMPURITIES AND GREASE, ALLOWING THE MOISTURE TO EVAPORATE TO ENSURE A DRY SURFACE.

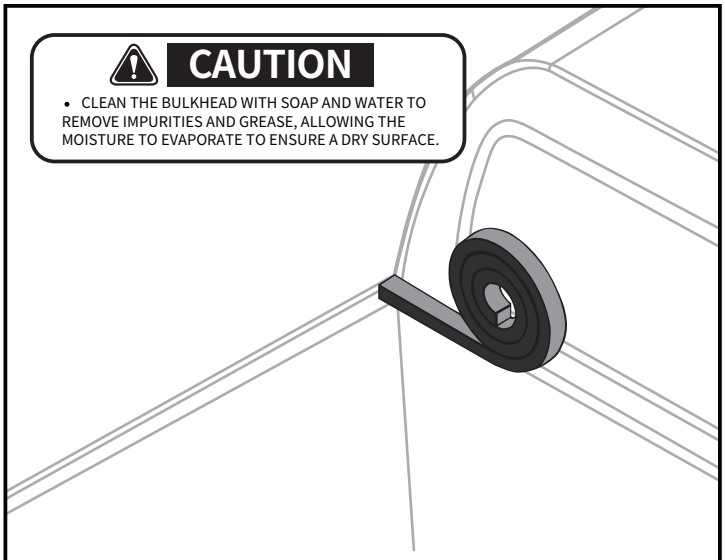



- Peel backing, stick seal edge - to - edge.
- Cut off excess with scissors or utility knife.
- Press evenly for adhesion.
- Skip seal if truck has plastic bed liner.

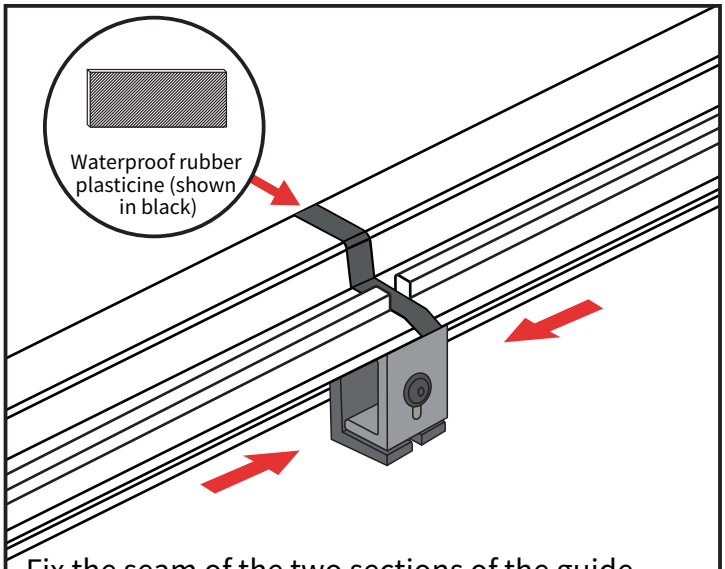


Fix the seam of the two sections of the guide rails with waterproof rubber plasticine. During installation, please ensure that the clamp is positioned in the middle of the seam between the short side rail and the long side rail.


- Place long rail beside cab, then short rail.
- Adjust clamp screws for smooth rail insertion.
- Insert clamps and sliders at the rail joint in A - E order.(Note to distinguish left and right.)
- Move to within 1 inch near the corresponding letter position on the guide rail.Only indicating the relative position and order of parts (not final positions); fine-tuning required after the cover is installed.

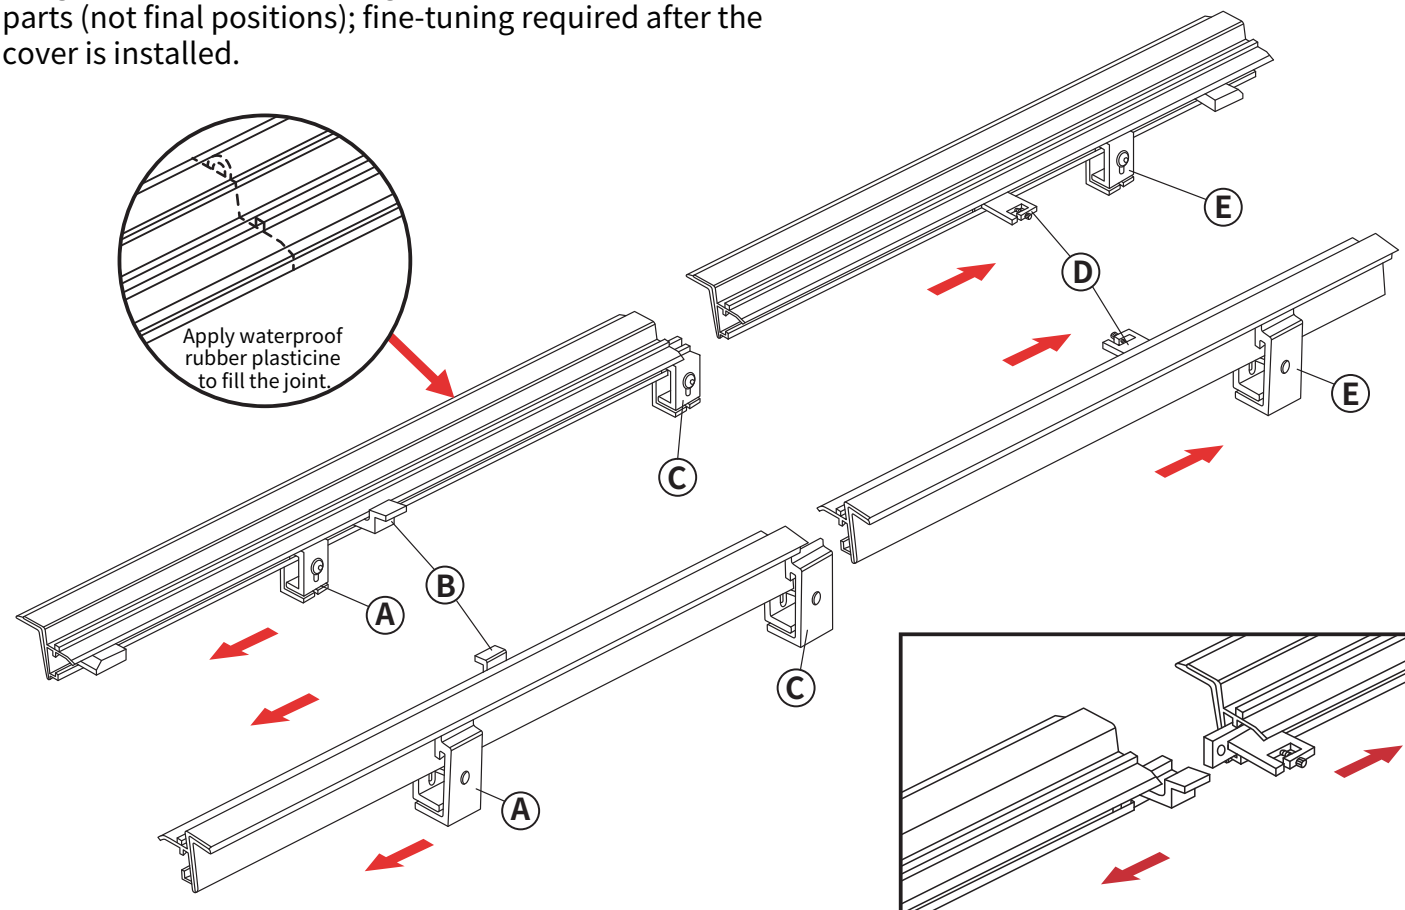

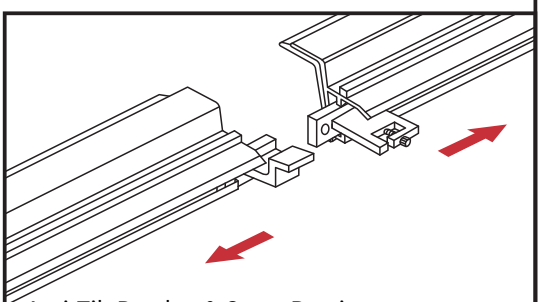
Anti-Tilt Bracket & Cover Retainer shown (Driver Side) Repeat for Passenger Side.

Ensure that the long rail is positioned at the driver's side, and that both sections of the rail are installed parallel to the truck bed side rails.

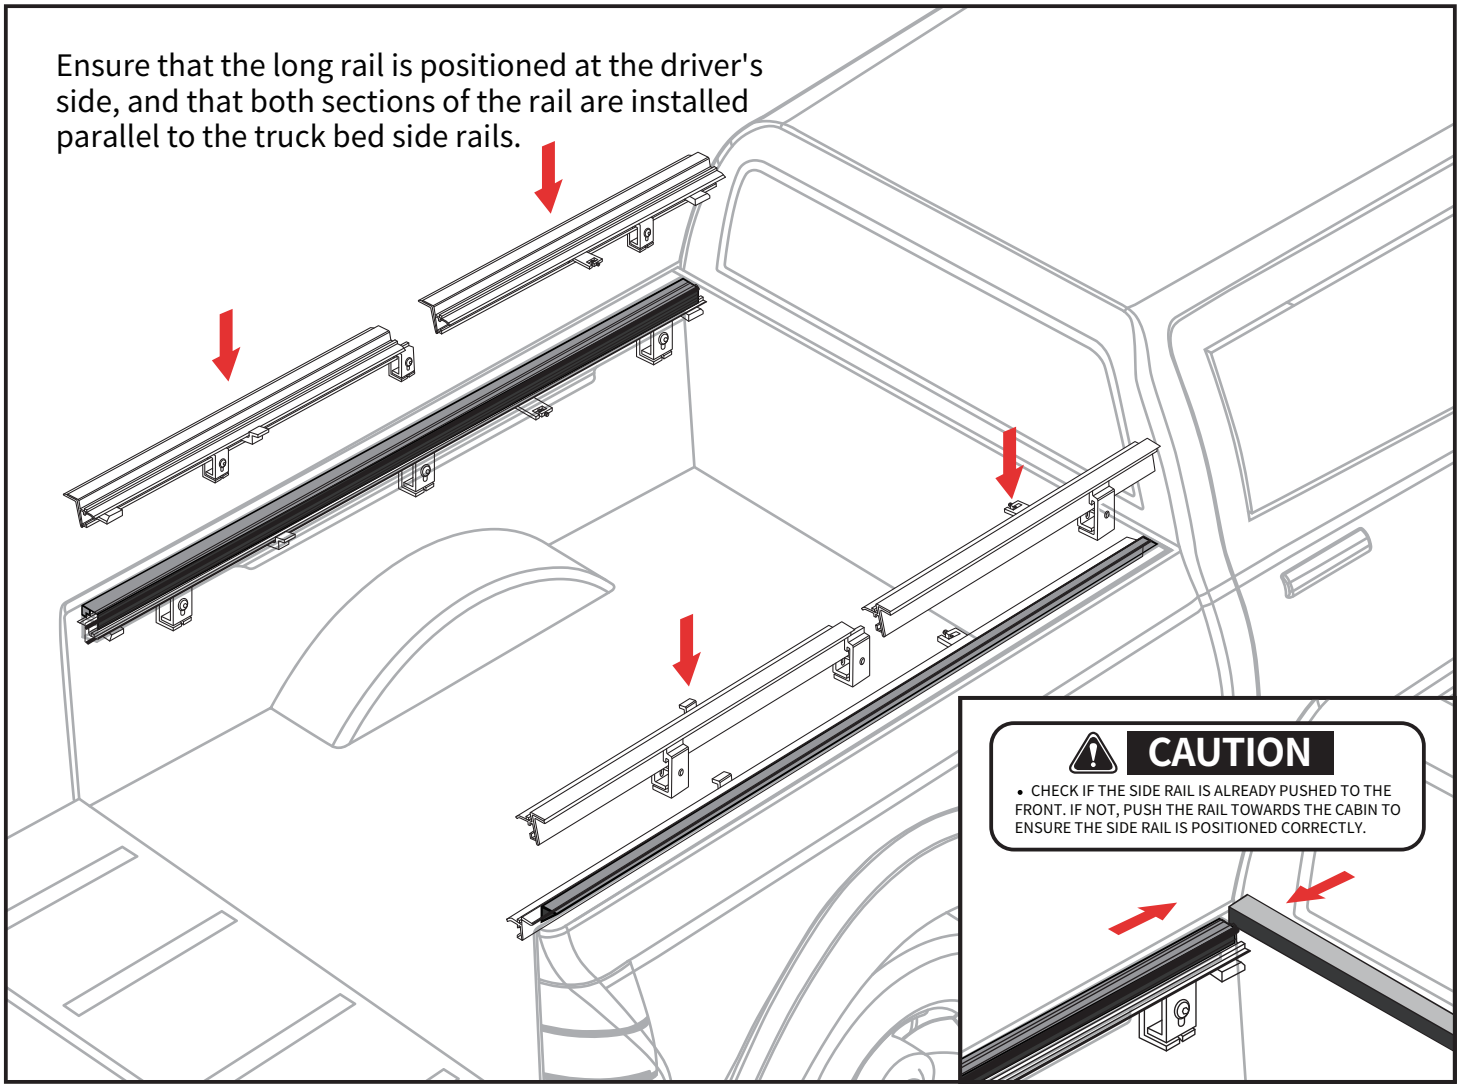


**CAUTION**

- CHECK IF THE SIDE RAIL IS ALREADY PUSHED TO THE FRONT. IF NOT, PUSH THE RAIL TOWARDS THE CABIN TO ENSURE THE SIDE RAIL IS POSITIONED CORRECTLY.

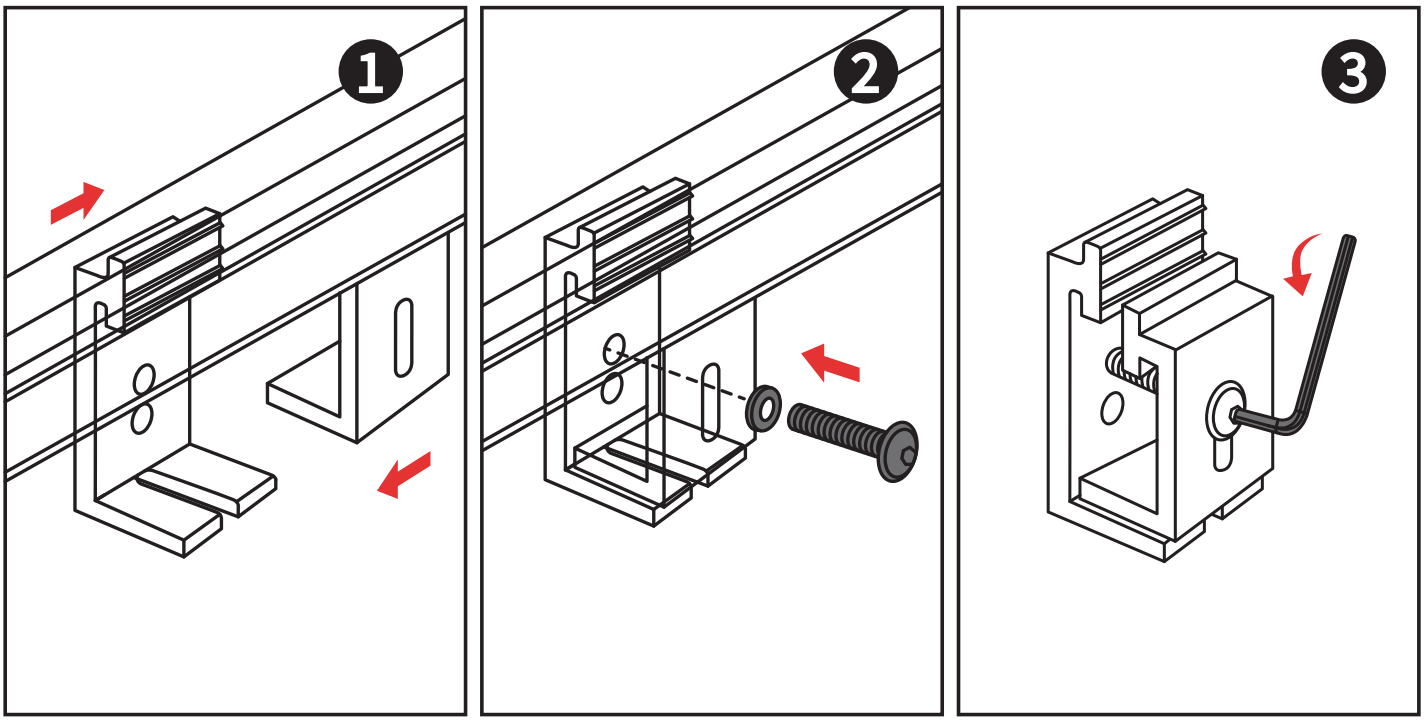




Remove the positioning block from the Clamps, slide it into the guide rail of the hopper, and move it to the position shown in the picture above. Then, connect the fixture with bolts and tighten it to secure the position.

Place the cover on the rails and move it slightly back so the latch fits the block.
Adjust the block if the position is incorrect.

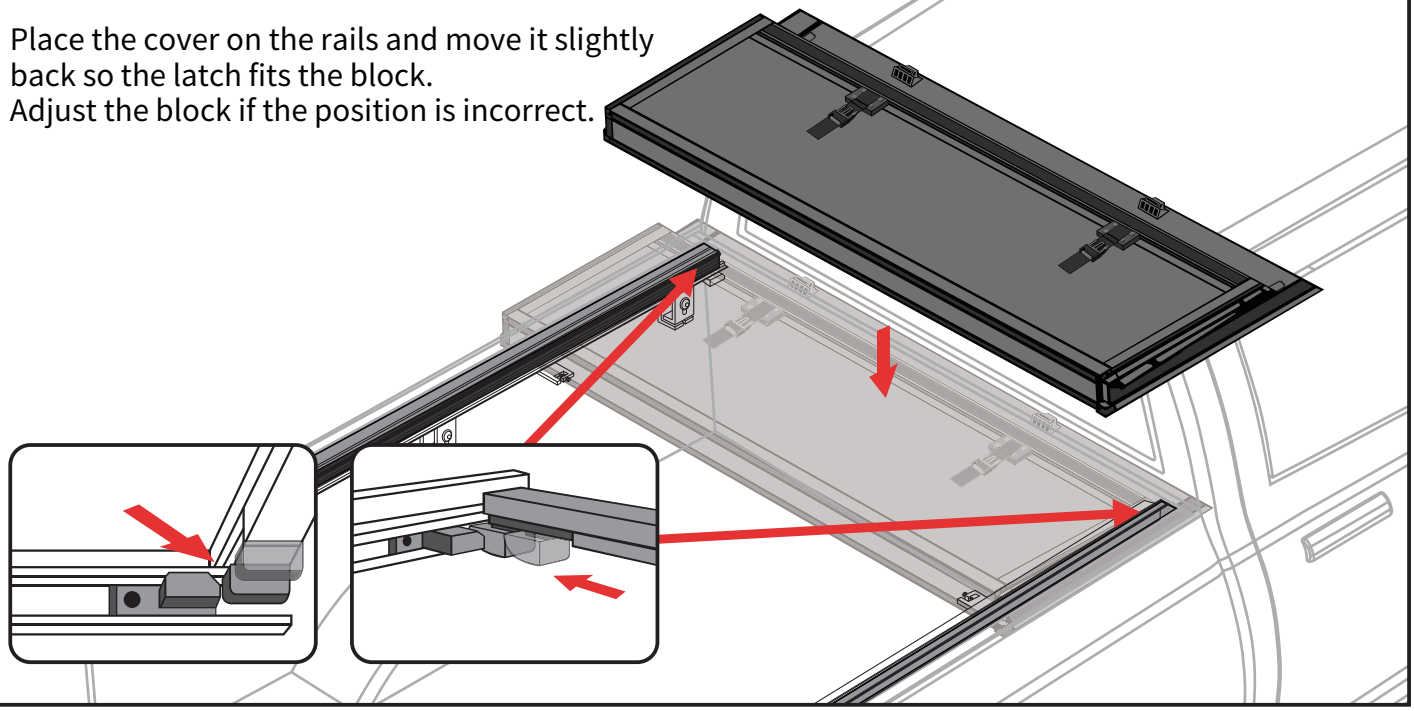


Position the buckle ends withthe open side facing the bed coverpanel.Use a Hexagon wrench install the two buckles into thepre-drilled holes on the front headerpanel with the provided screws. DO NOT usea screw gun,securely tighten byhand only.

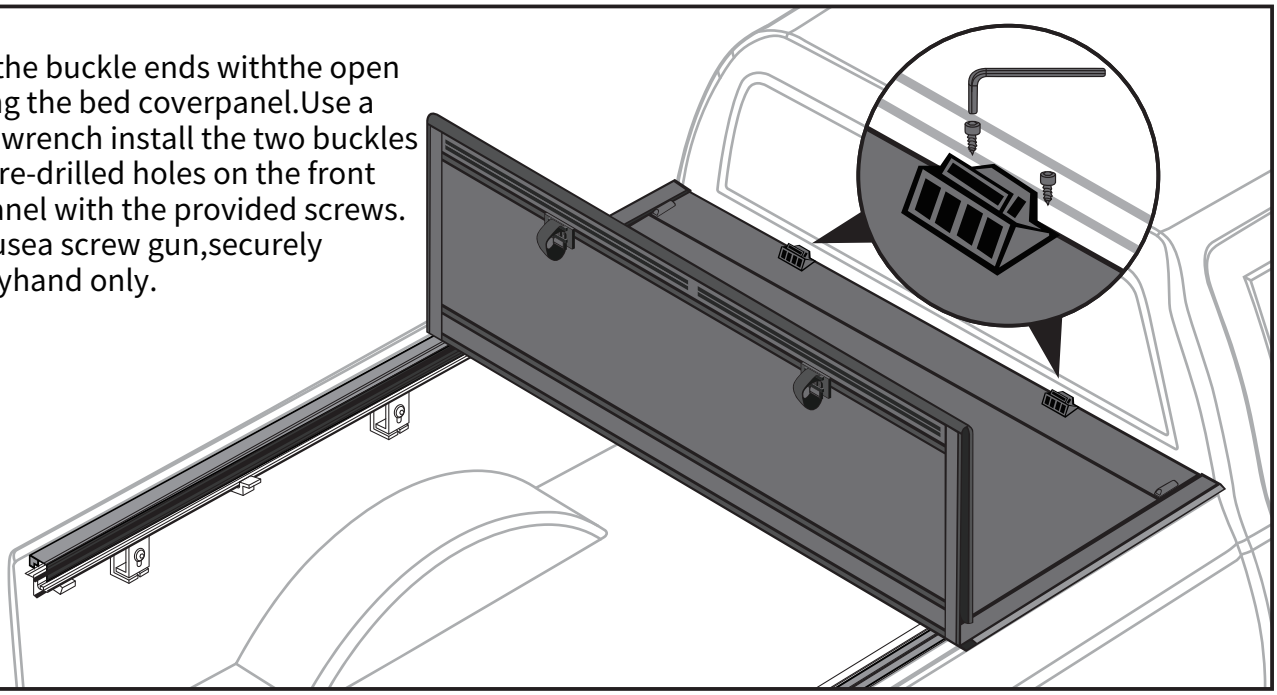


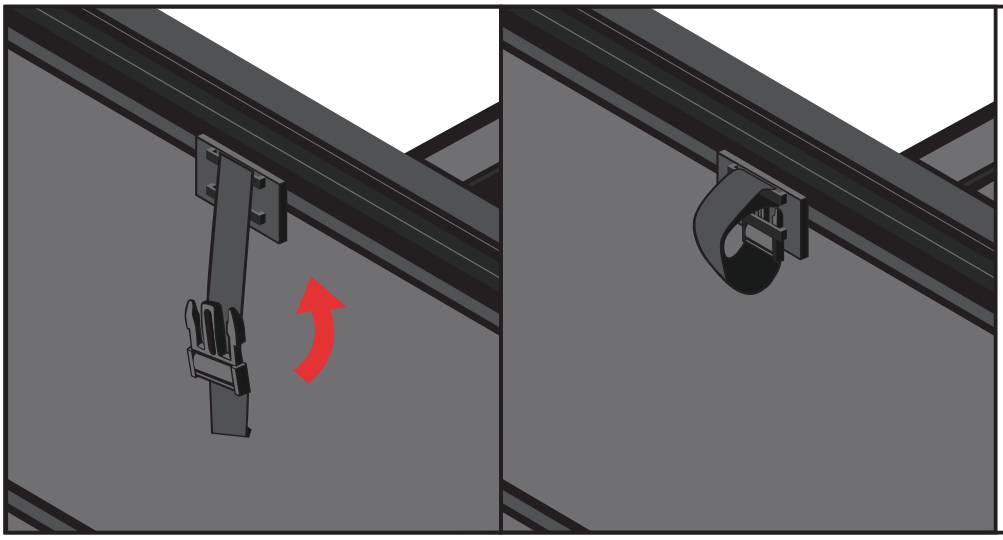

When cover is unfolded secure buckles onto the slots on the cover.


When lowered, the rear latch should fit the block. Adjust and secure if the position is incorrect.

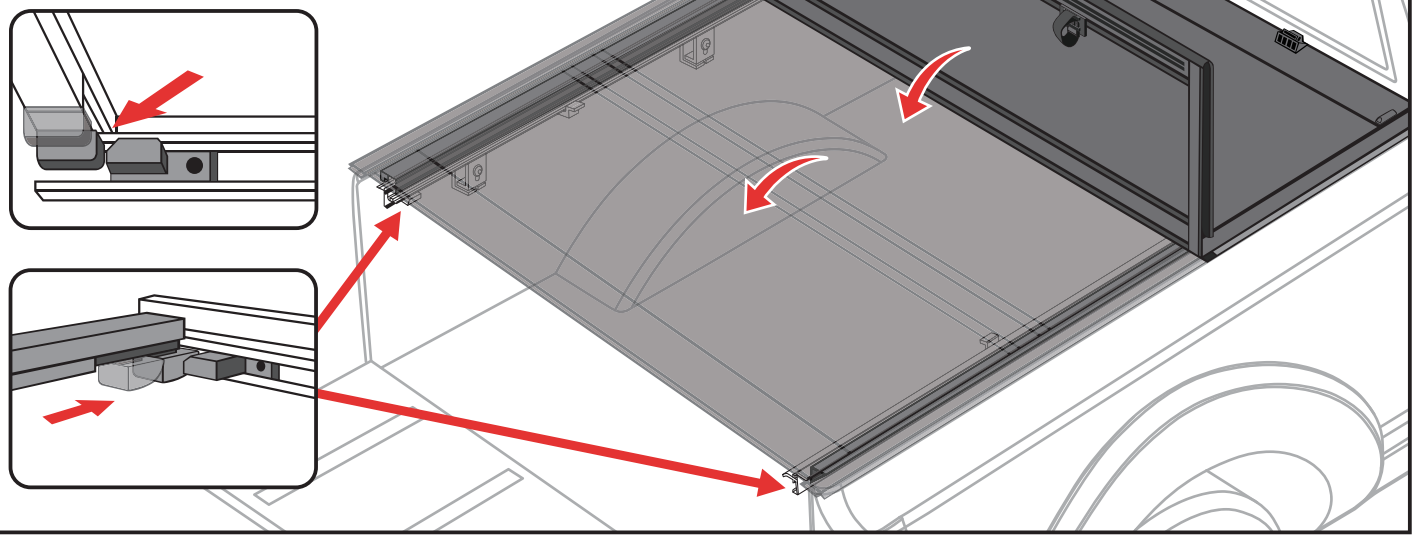

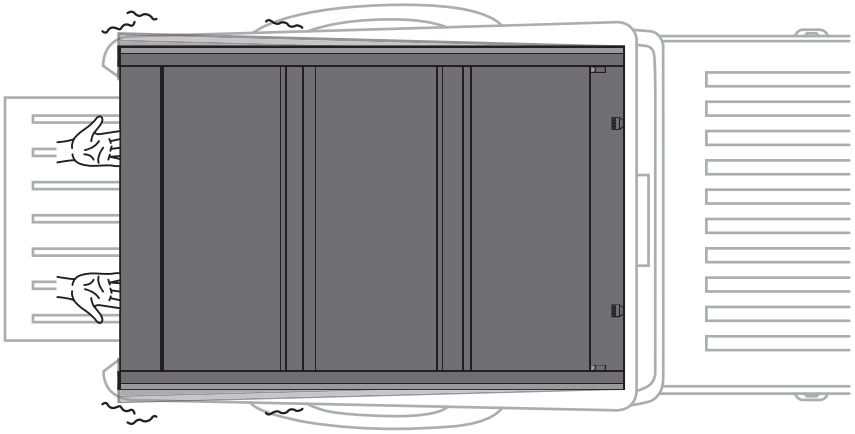


Adjust the bed cover to center it.


Ensure cover is aligned on both sides of the rails.Check the distance between the cover and side rails are even. Shown on red illustration.

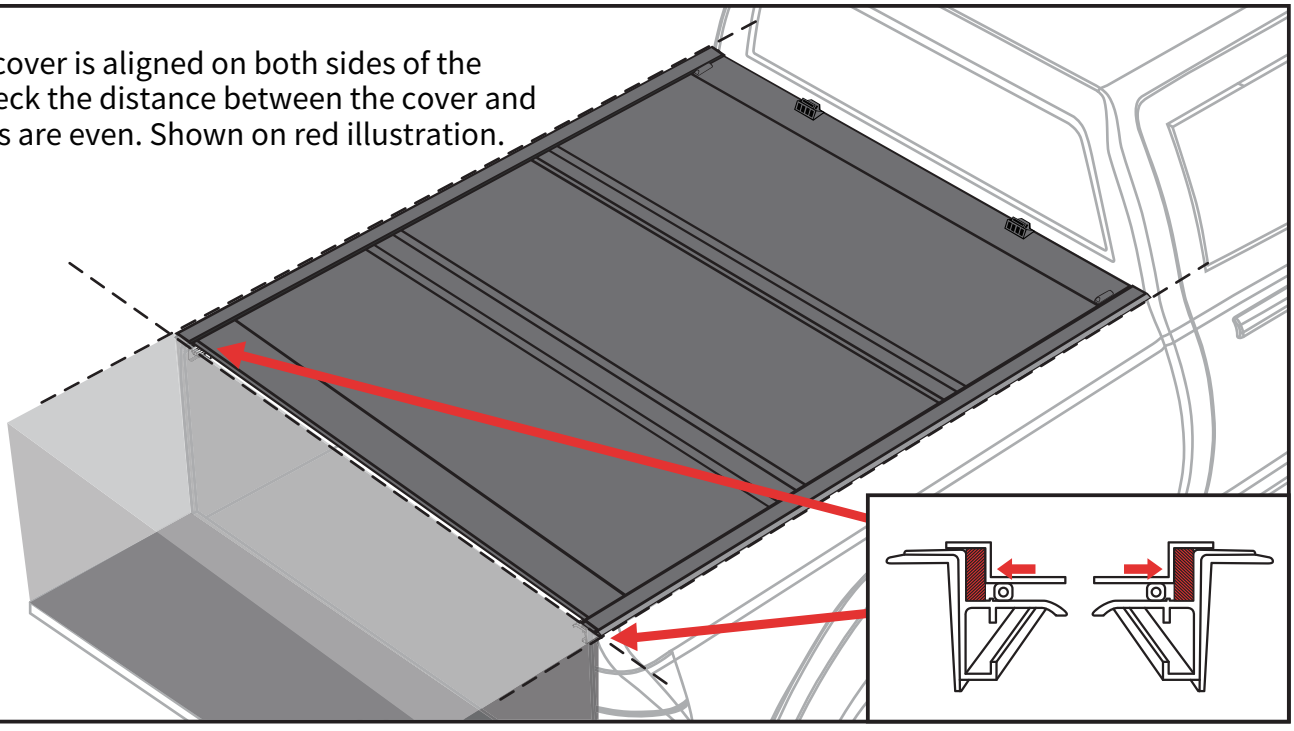


For some vehicle models, the guide rails may tilt downward. You can place the provided washer in the yellow position as shown in the diagram to realign the guide rails.

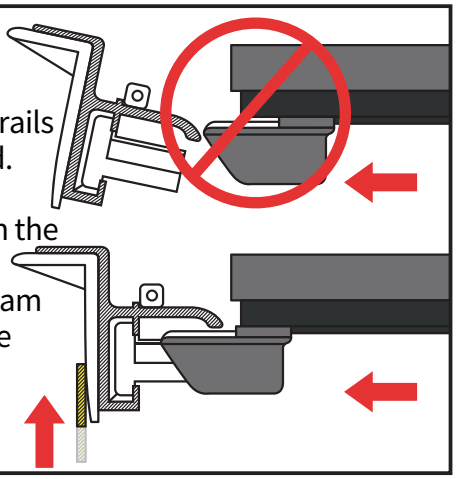

When the cover is fully closed inspect locking tongues properly engages.

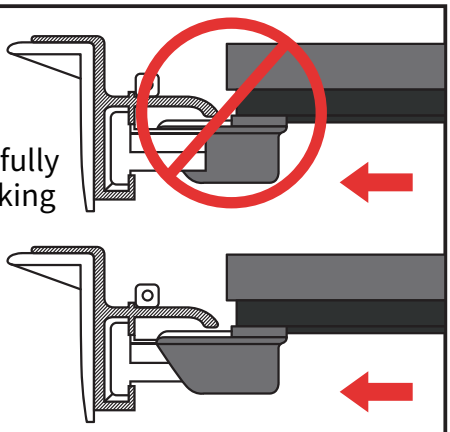


Pull the handle at the bottom to unlock the latch. Flip the cover open.

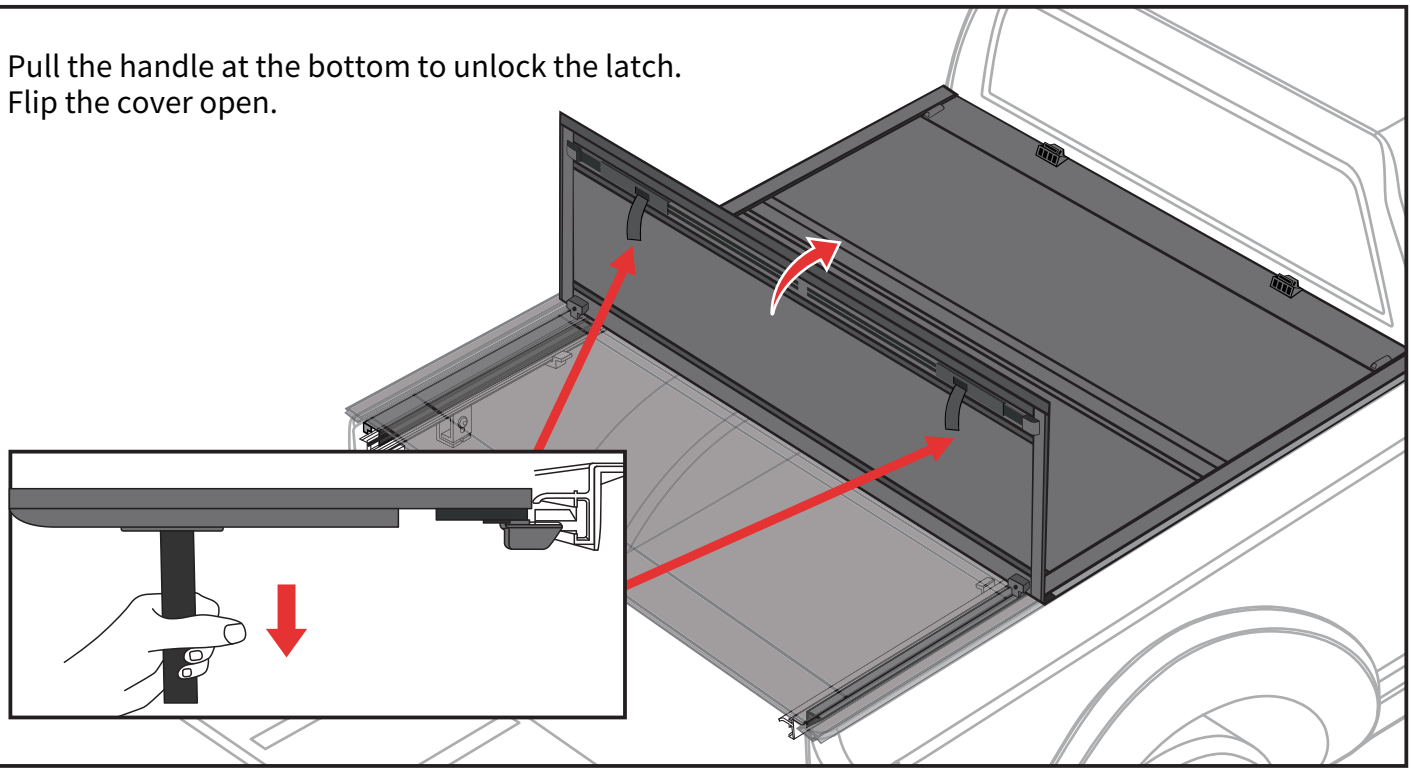


Pull the release cord to unlock the front bulkhead latch and remove the cover.


**CAUTION**

- PULL HERE TO UNLOCK THE COVER DURING REMOVAL. DO NOT FORCE IT OFF.

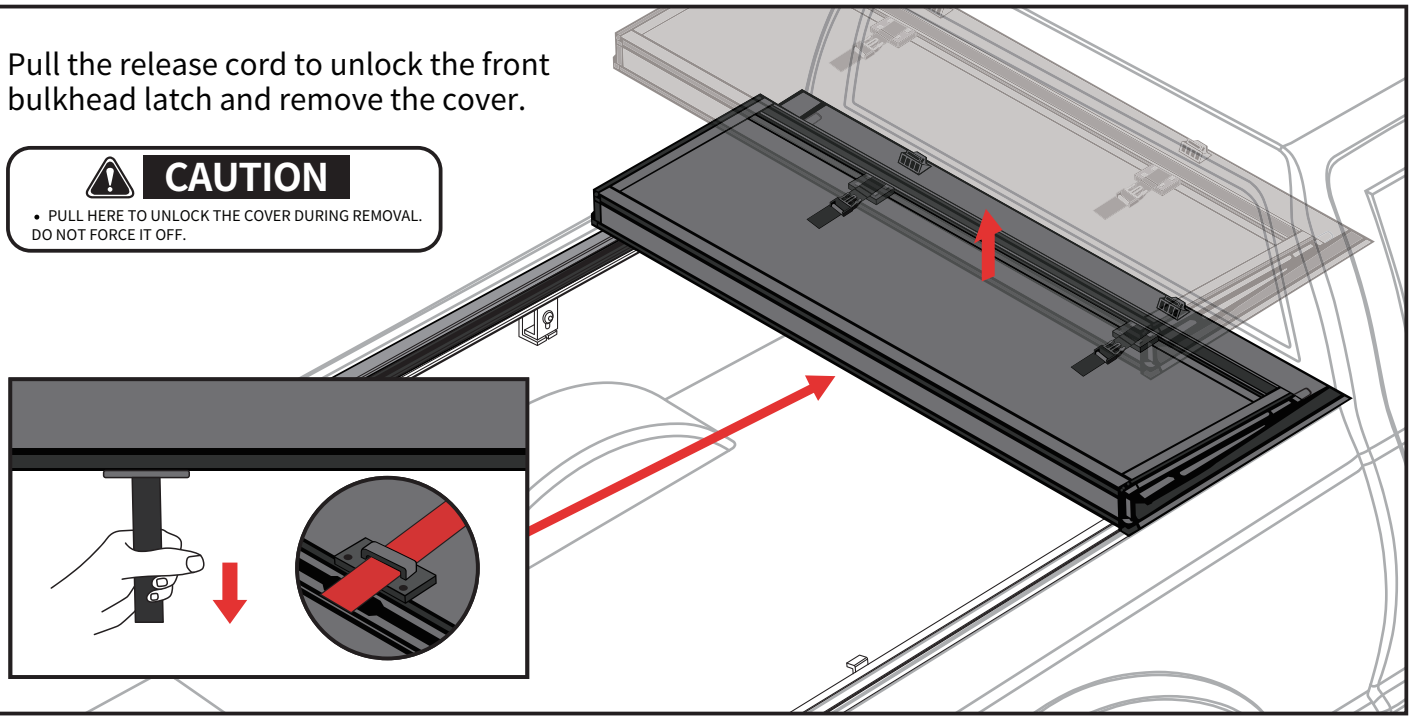


After confirming the position of the truck bed cover, install the cover stabilizer.

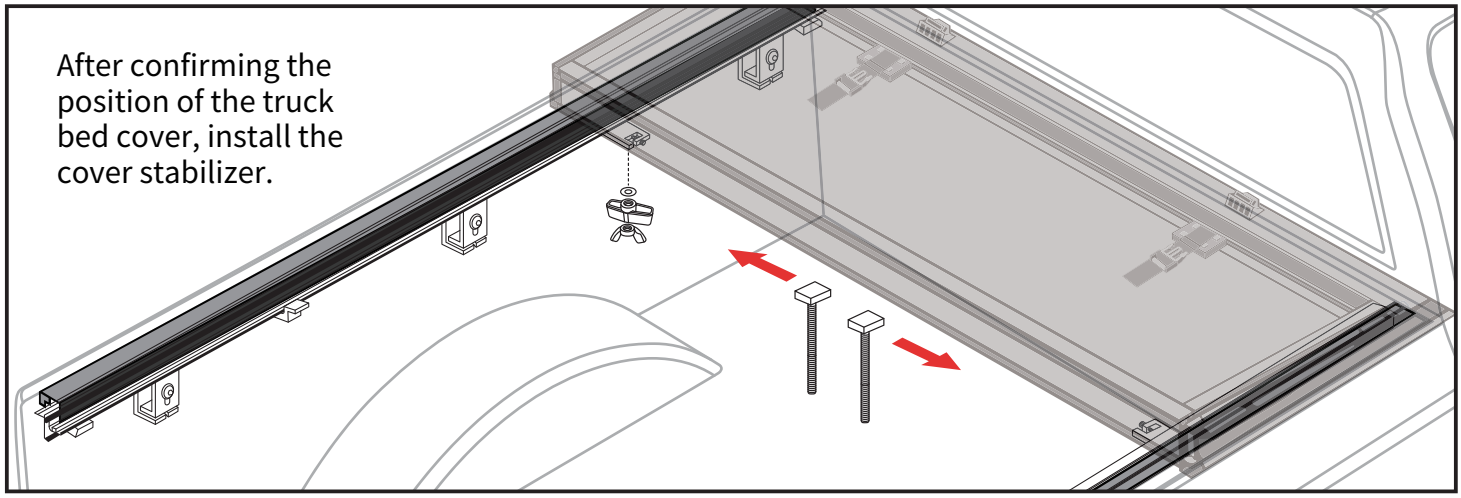


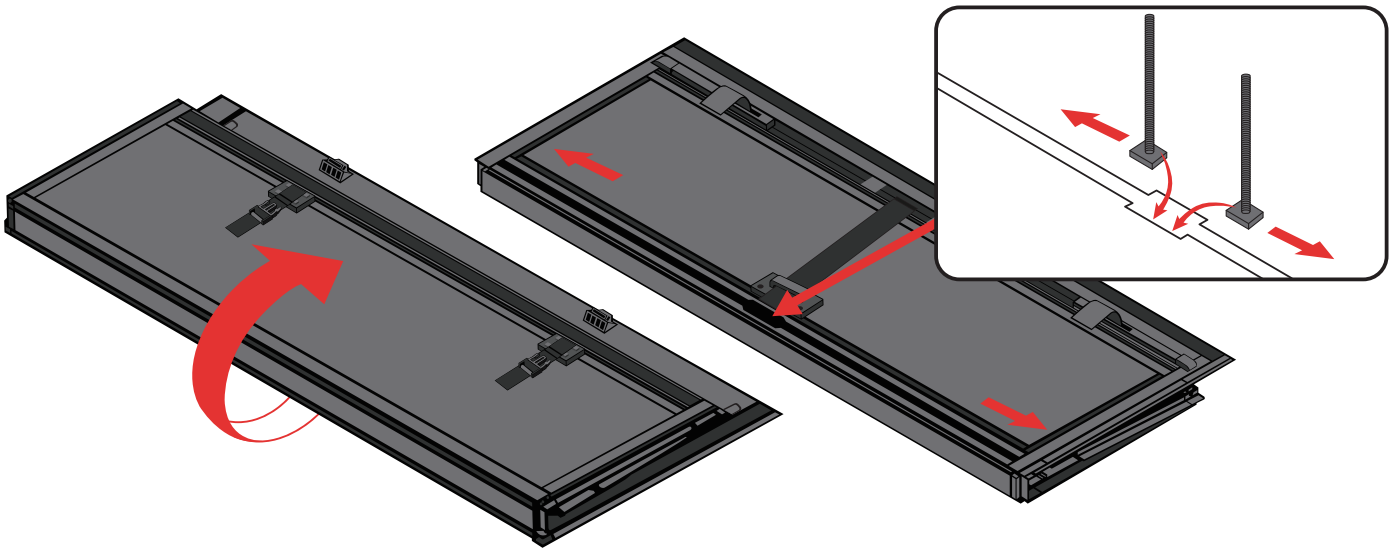



Insert screw cover retainer into the groove on the back of the truck bed cover and slide it to both sides.

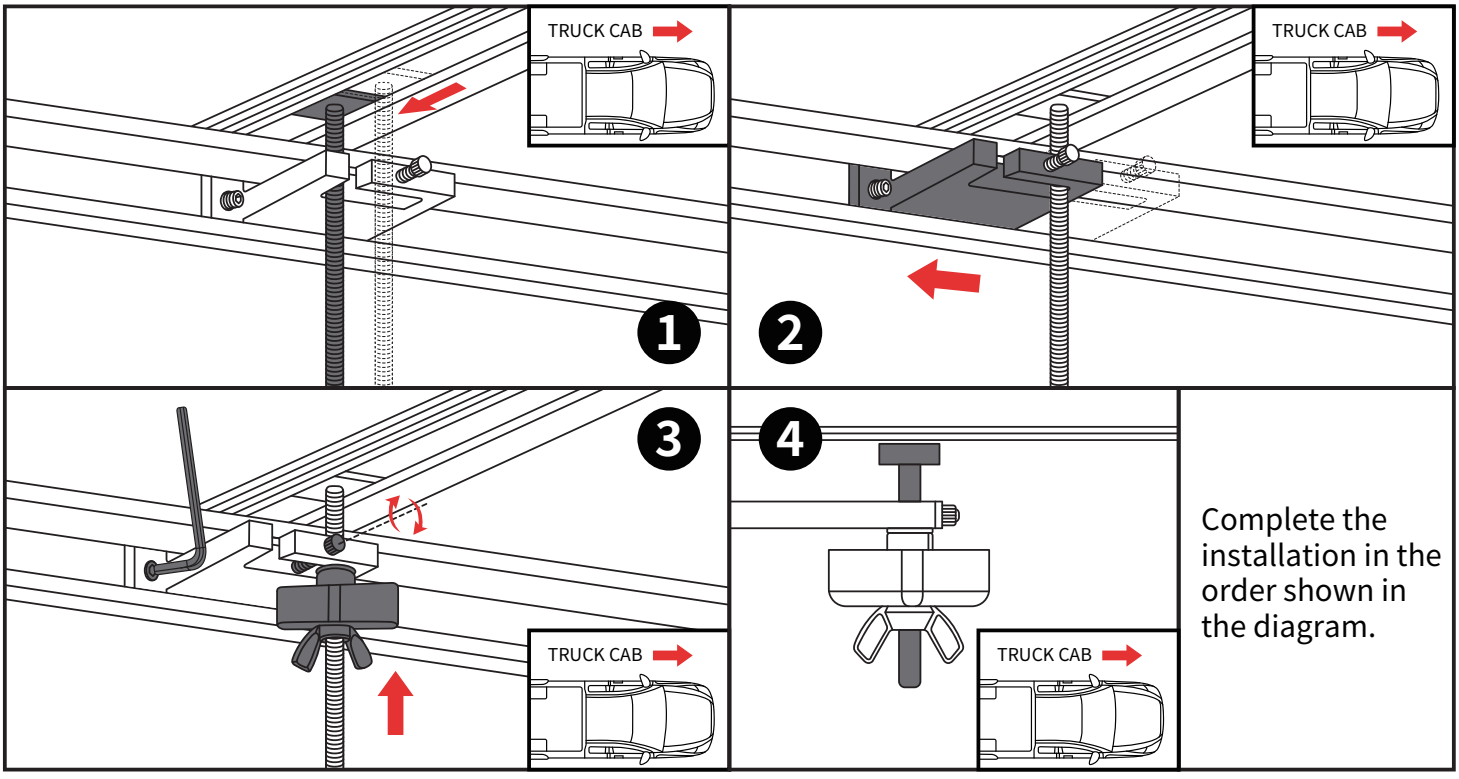


Complete the installation in the order shown in the diagram.

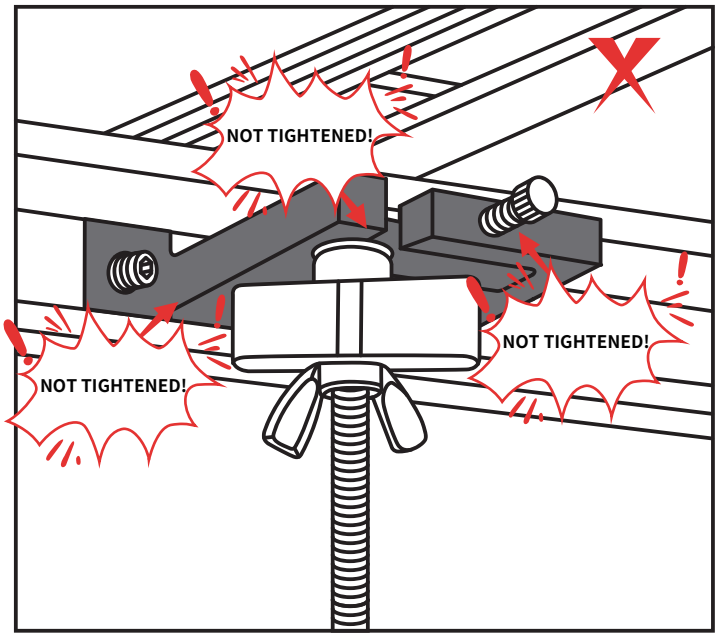

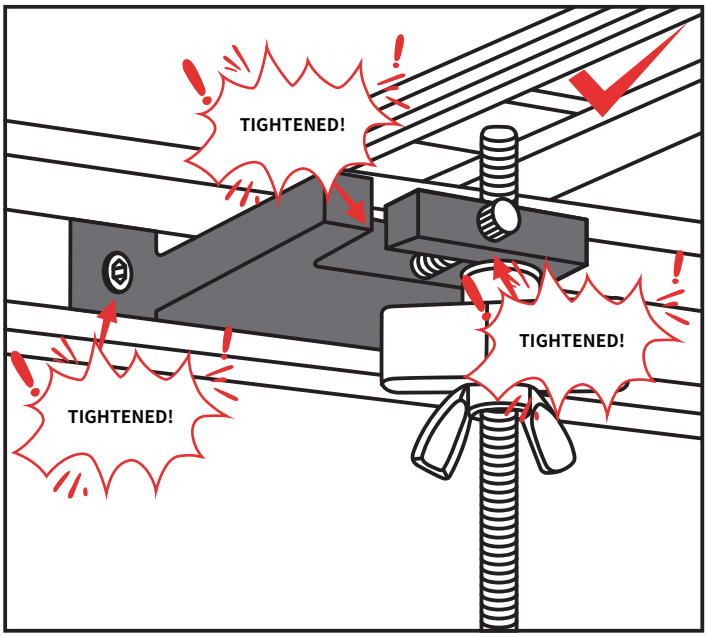


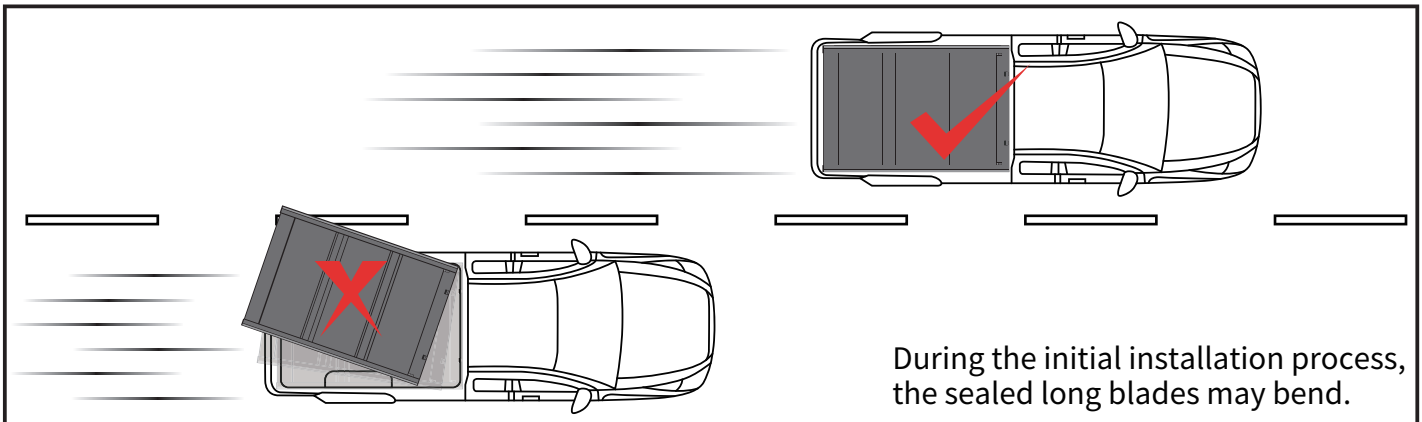
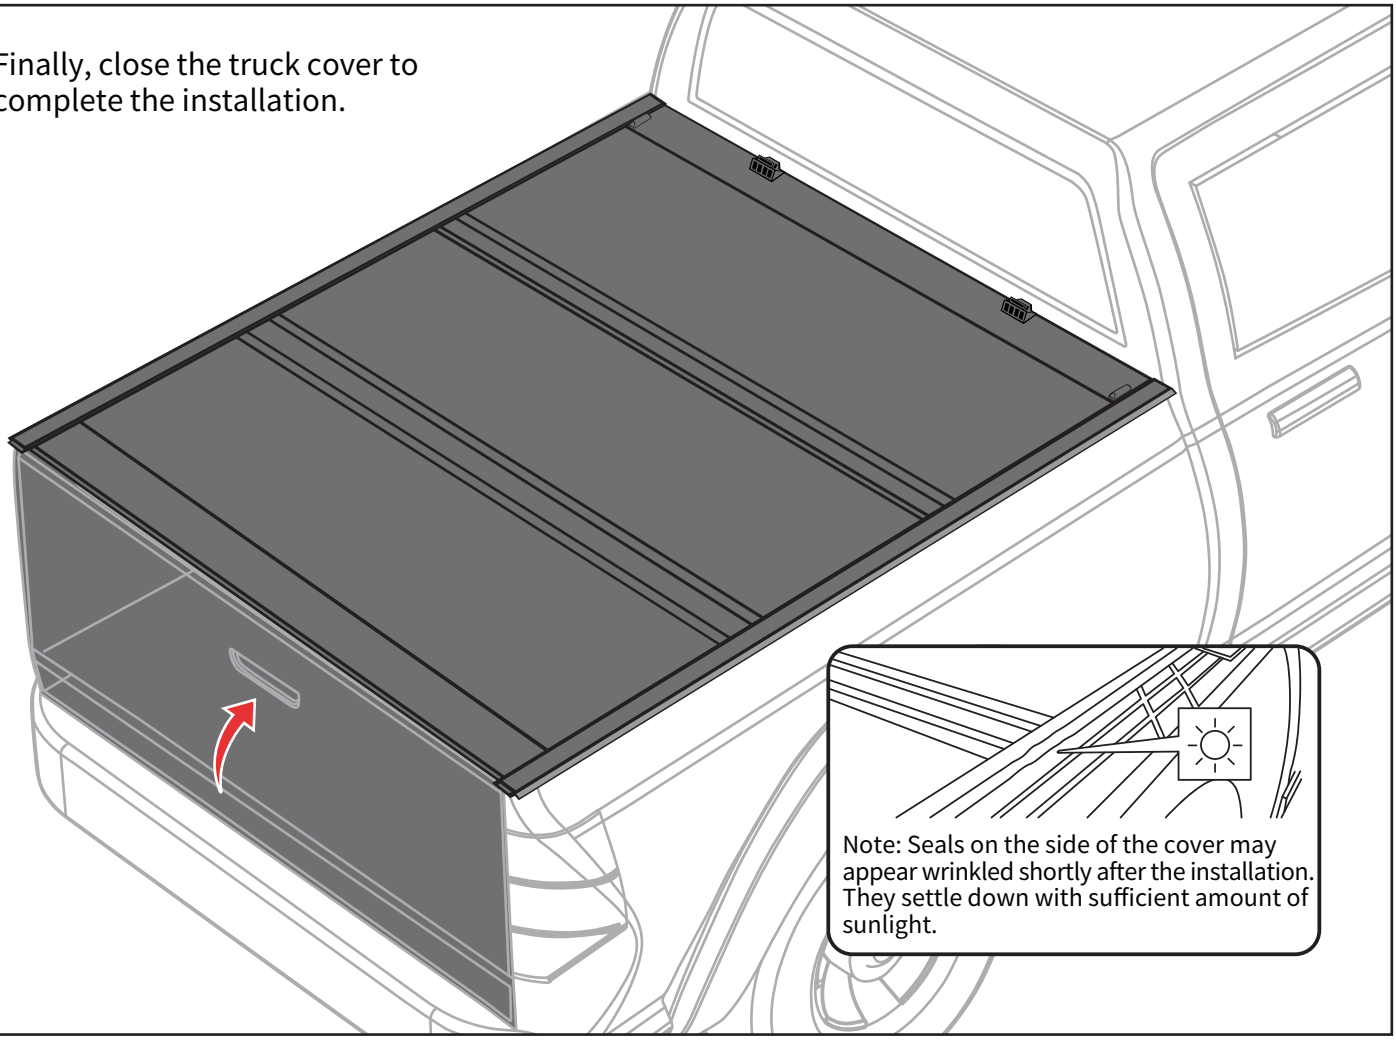
During the initial installation process, the sealed long blades may bend.

**CAUTION** Rough road surfaces can cause high-frequency vibrations, leading to the need for adjustments in the position of the truck cover.Regularly check if your truck cover is in the correct position within the truck bed,and inspect all connectors and fastening blocks to ensure they are functioning properly.


Adjust the anti-tilt Bracket position to ensure the small locking block securely fastens to it when lowering the last panel. Fold the panel multiple times to confirm it latches properly. Lastly tighten the screw on the anti-tilt Bracket to make it stay in place.

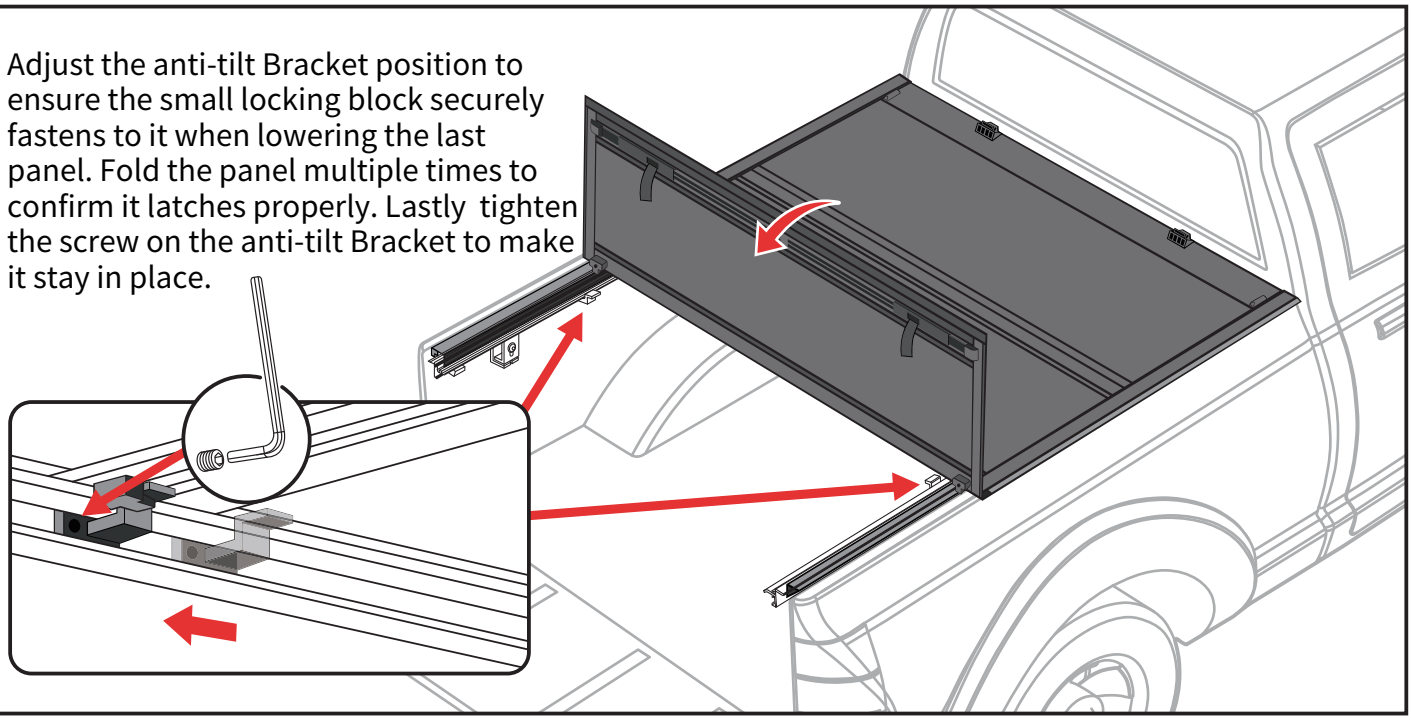

Finally, close the truck cover to complete the installation.



Note: Seals on the side of the cover may appear wrinkled shortly after the installation. They settle down with sufficient amount of sunlight.

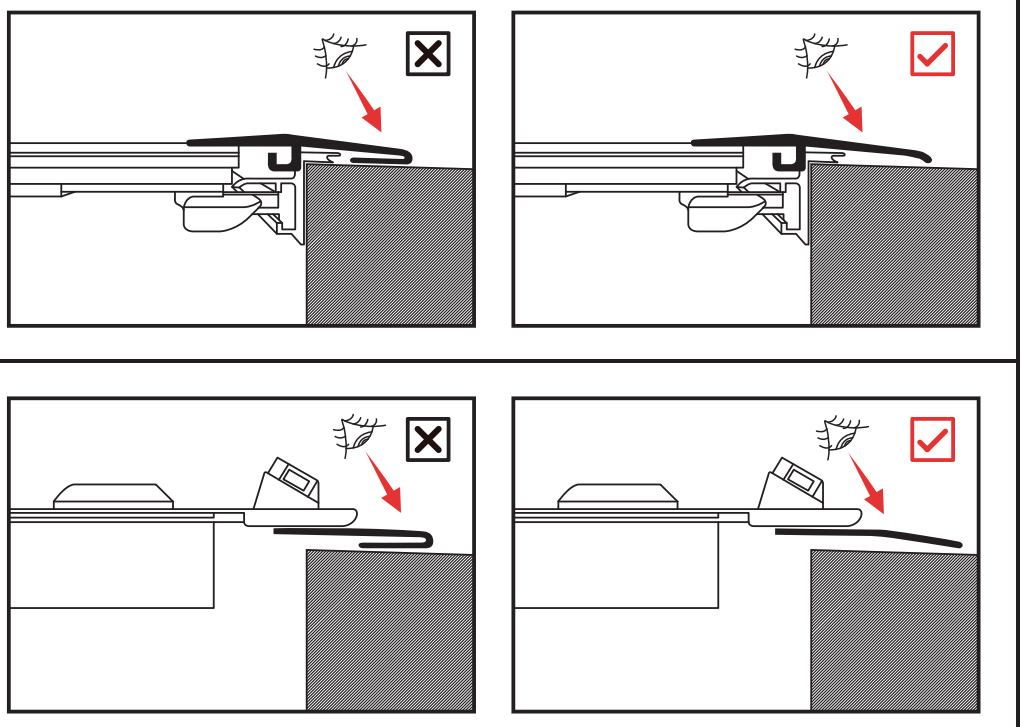

Check Side Gaskets and Bulkhead Gasket are properly placed to limit the water entry.

**CAUTION** Rough road surfaces can cause high-frequency vibrations, leading to the need for adjustments in the position of the truck cover.Regularly check if your truck cover is in the correct position within the truck bed,and inspect all connectors and fastening blocks to ensure they are functioning properly.

# 4 Care & Safety Guide

## CARE & CLEANING

- Use mild car soap and water only
- Do NOT use pressure washers, abrasive cleaners, or chemicals
- If exposed to harsh substances (e.g., oils, solvents):

→ Rinse immediately with baking soda solution (1:10 water)

## INSTALLATION & INSPECTION

After Installation

- Check and tighten all clamps, latches, and side rails within 7 days Regular Checks
- Every 2 weeks under normal conditions
- Every week for off-road, frequent, or high-vibration use Clearance
- Maintain ¼" (6mm) clearance around hinges and latches

## BEFORE DRIVING

- Ensure all anchor points are fully secured
- Clear off snow, ice, or debris before opening

## CARGO & USAGE WARNINGS

- No stacking or tying cargo on the cover
- No passengers or pets under a closed cover
- No exposure to chemicals over 48 hrs without rinsing
- Use OEM parts only – No drilling or tape

## ENVIRONMENTAL LIMITS

- Designed to resist weather – Not 100% waterproof
- Use only between: -20°F (-29°C) to 120°F (49°C)
- If stuck due to ice or debris:

→ Use lukewarm water, do not force open

## WARRANTY & LIABILITY

Limited Warranty

- Covers factory specs at shipping only
- No guarantees on:Durability / Fit for specific use / Environmental resistance

User Responsibility

- Damage caused by:

– Improper use or overloading / Unauthorized mods / Accidents, weather, chemical exposure

*Product codes = tech specs only, not performance guarantees*

## LEGAL NOTICE

- Governed by state law where purchased
- Manufacturer may update this document without notice
- English version is legally binding