
60

Low Profile Hard Tonneau Cover Installation Manual

1 Accessories Inventory

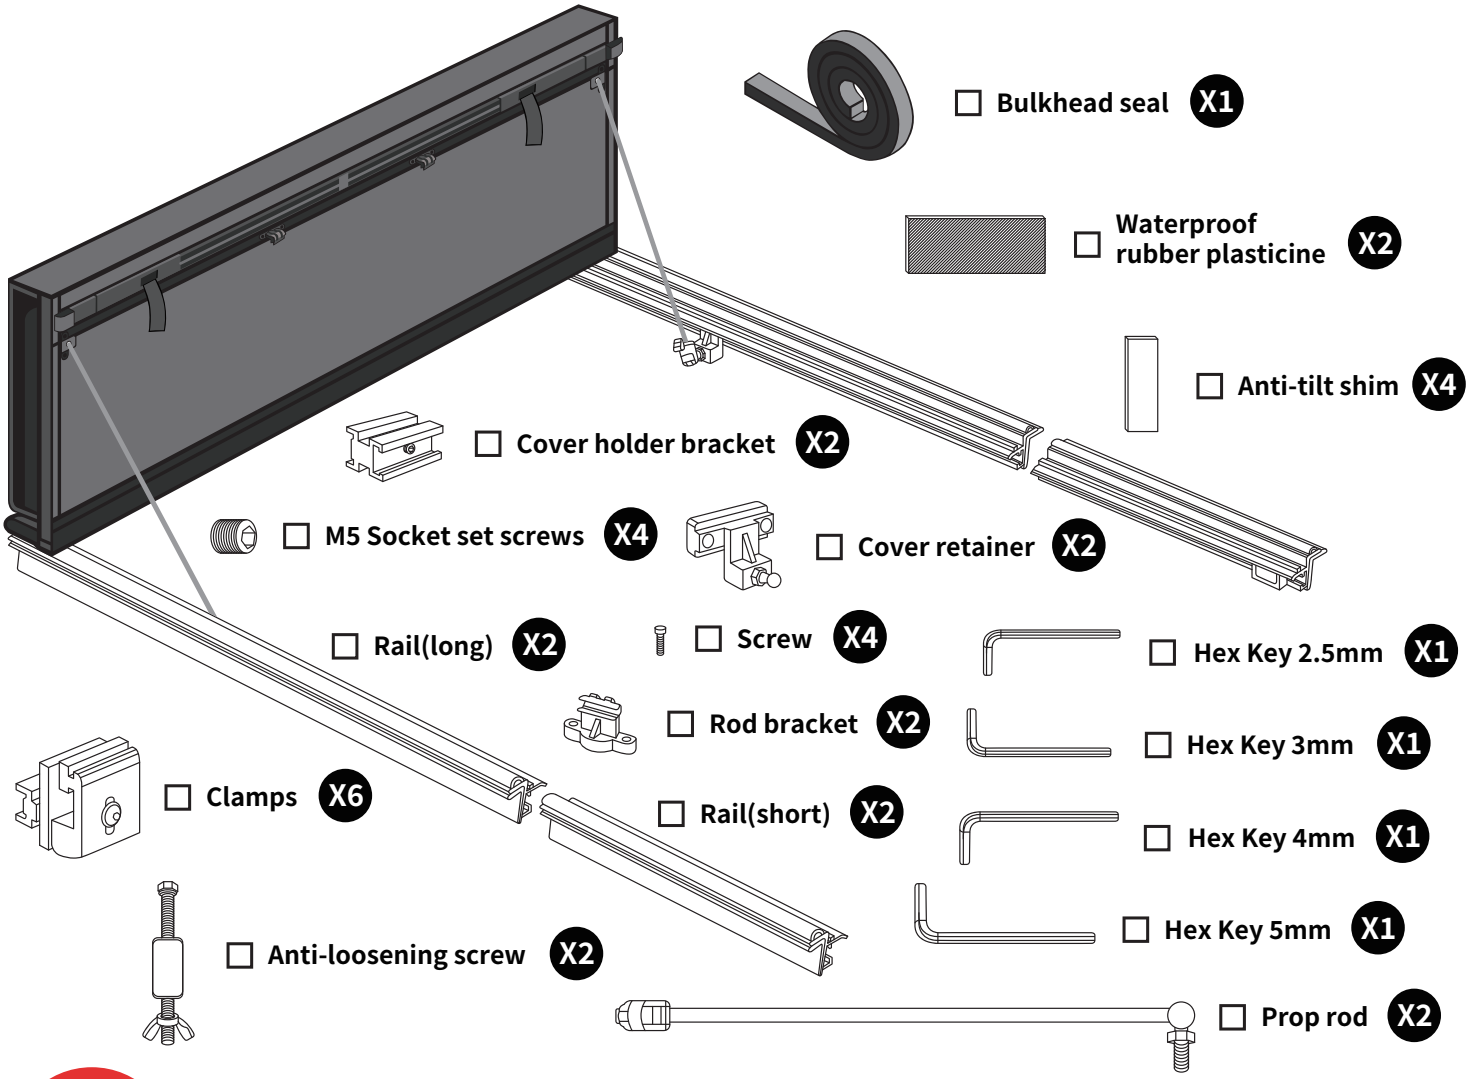


2 Product Advantages


Our Tonneau Cover Is Made of Several Durable Materials,
Such as FRP Panels Aircraft-grade alloy aluminum and High Performance Structural Sealant Etc.

We Offer Matched Tonneau Cover For Dozens Of Car Models, Fit For The Truck Bed Perfectly.

3 Installation

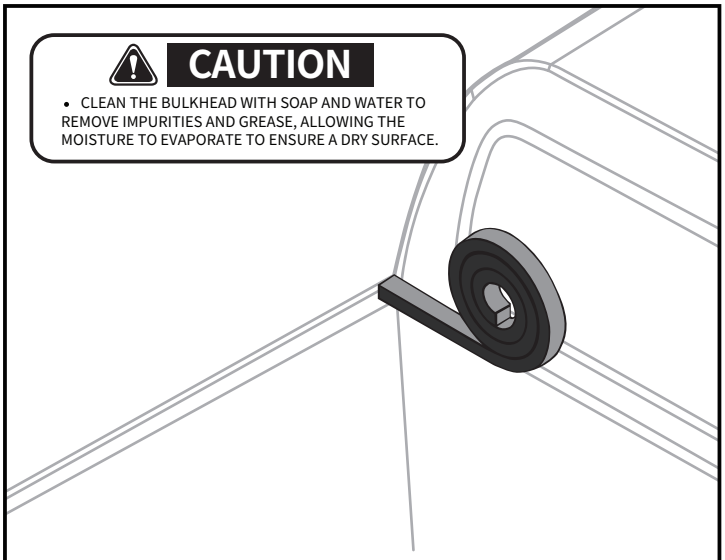


- Peel backing, stick seal edge - to - edge.
- Cut off excess with scissors or utility knife.
- Press evenly for adhesion.
- Skip seal if truck has plastic bed liner.

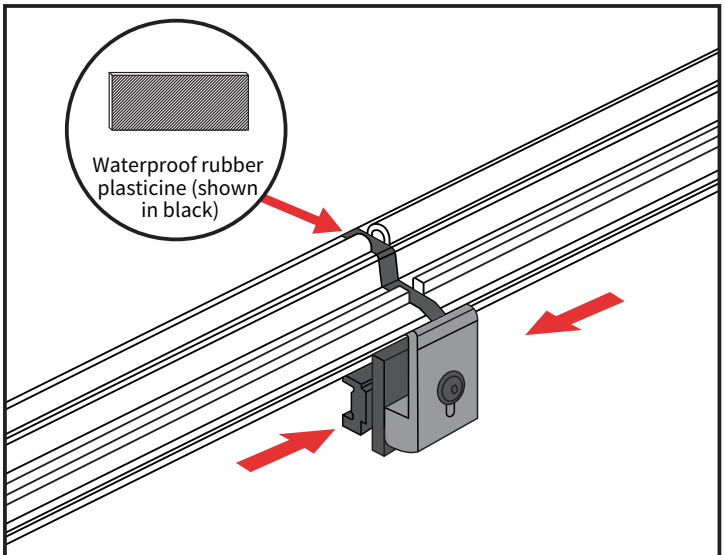



Fix the seam of the two sections of the guide rails with waterproof rubber plasticine. During installation, please ensure that the clamp is positioned in the middle of the seam between the short side rail and the long side rail.

- Slide A, B, C (all clamp components) to corresponding letter positions on the guide rail; be careful of sharp edges.
- Move to within 1 inch of the corresponding letter position on the guide rail. Only indicating the relative position and order of parts (not final positions); fine-tuning required after the cover is installed.

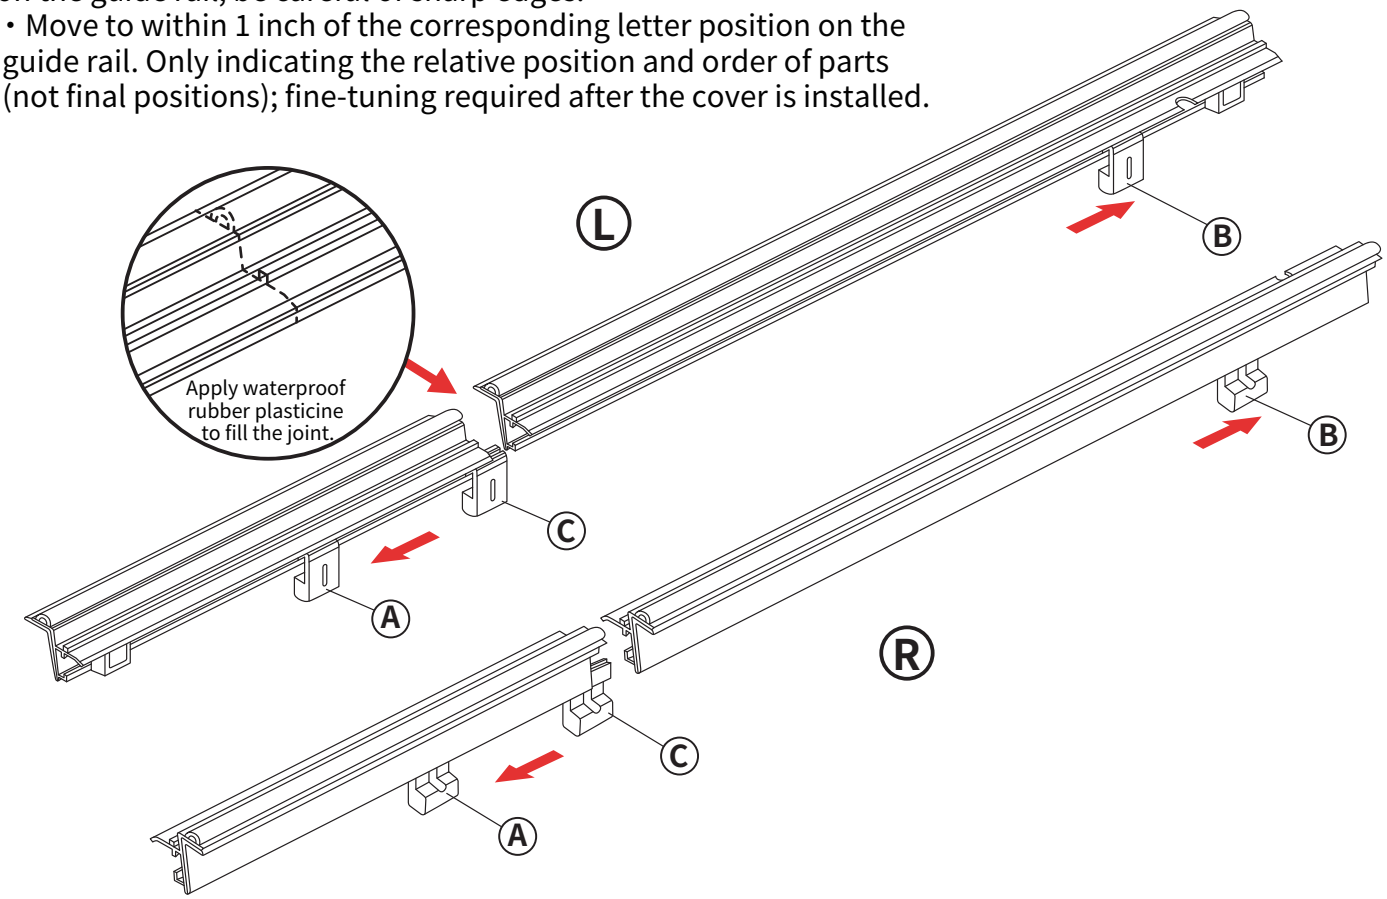

Install 1st positioning block (clamps component), then cover bracket, then remaining 2 blocks.

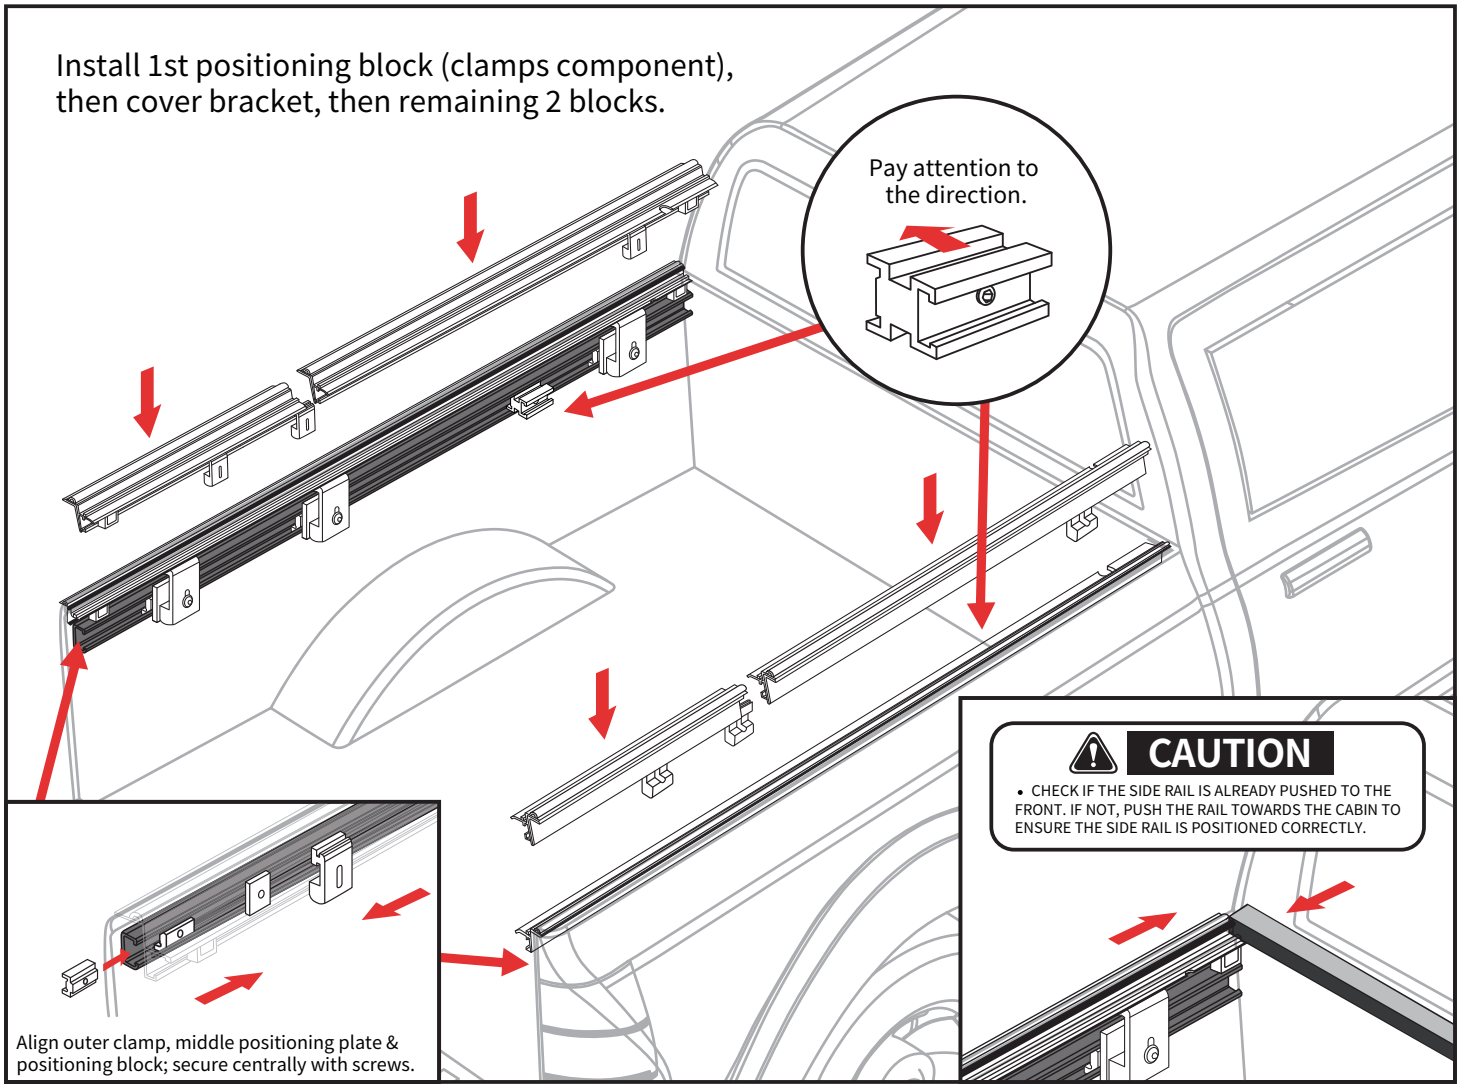

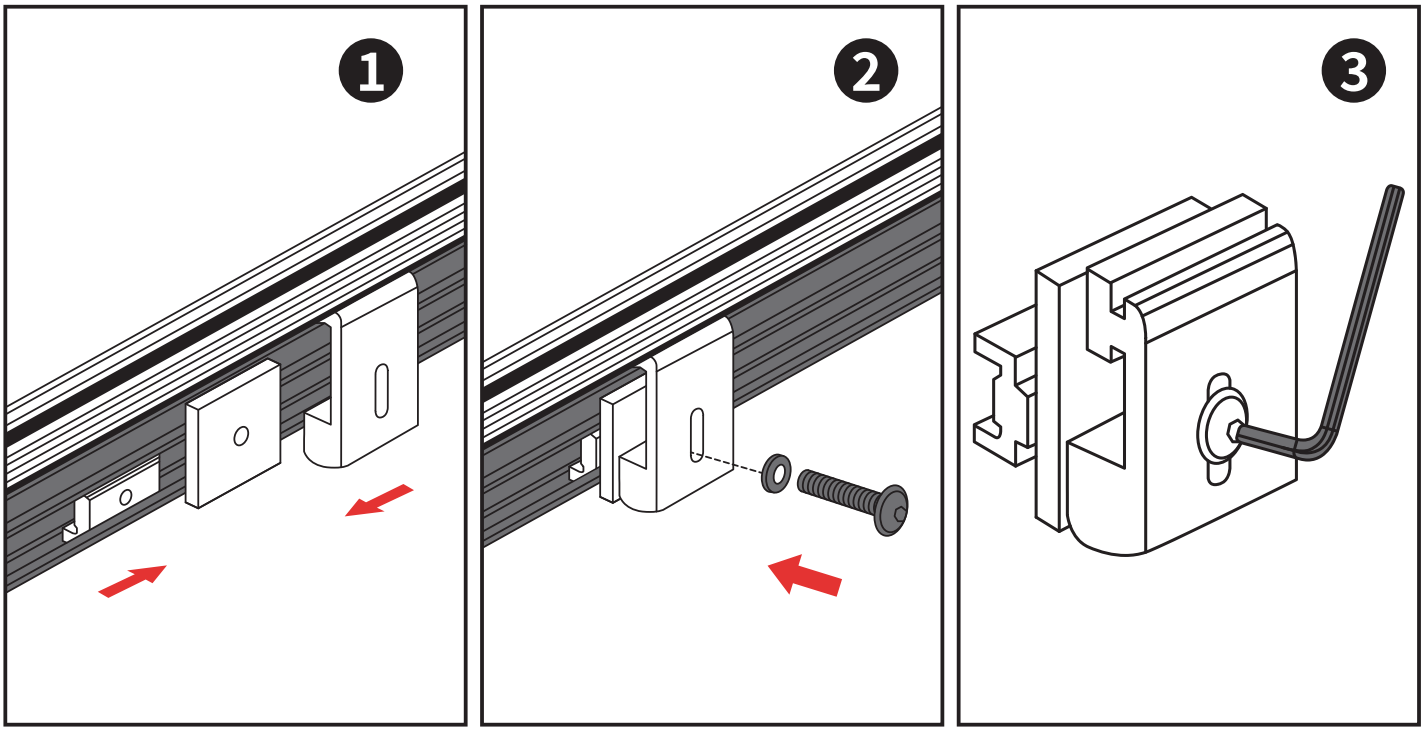


Remove the positioning block from the Clamps, slide it into the guide rail of the hopper, and move it to the position shown in the picture above. Then, connect the fixture with bolts and tighten it to secure the position.

Place the truck bed cover onto the rails, ensuring that the locking latches on both sides of the front edge of the cover are properly positioned against the fixed blocks on the rails.


READ ALL STEPS CAREFULLY BEFORE INSTALLATION.


REMOVE AFTER INSTALLATION.

REGULAR CHECKS ENSURE DRIVING SAFETY.

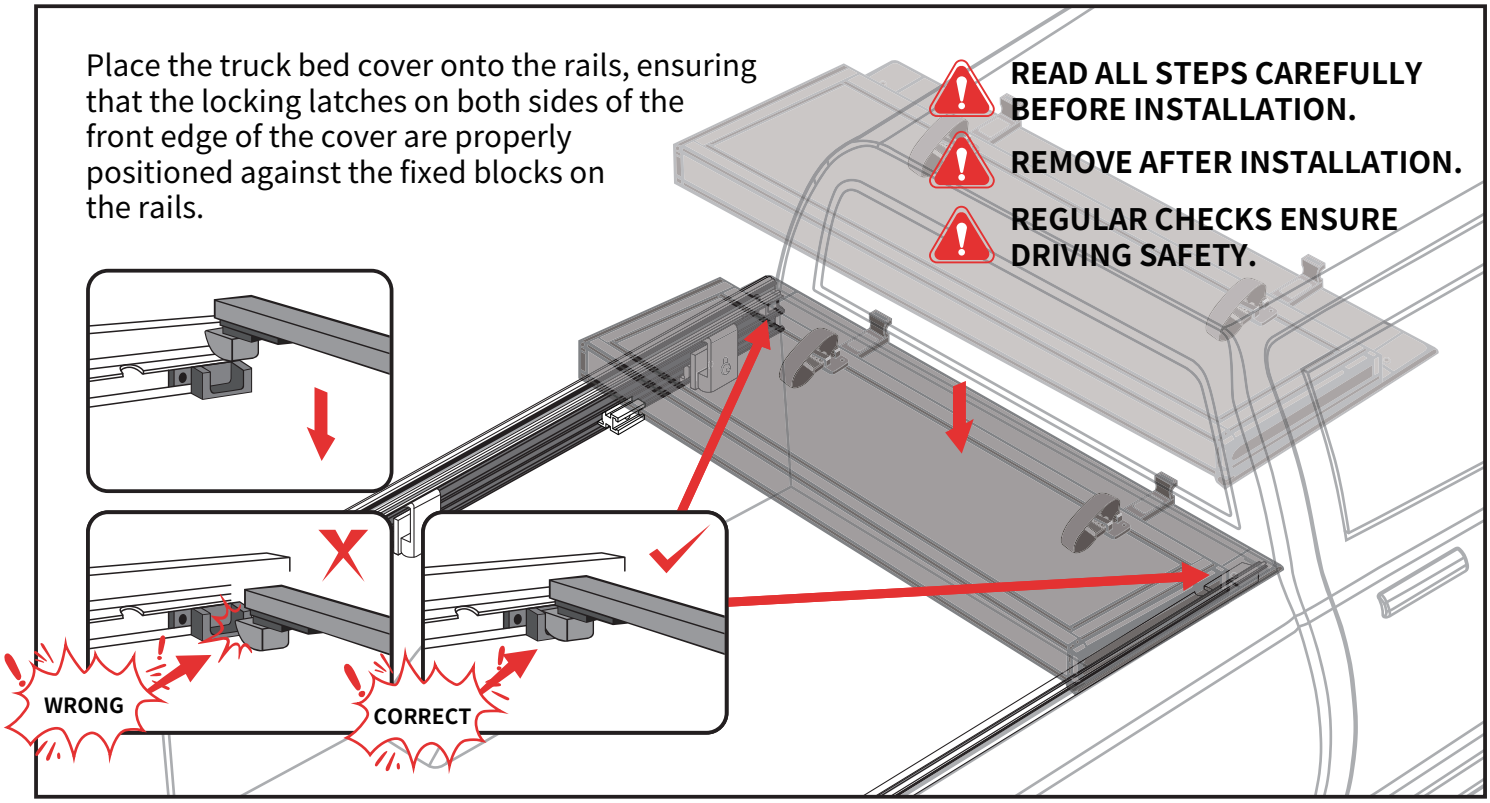


The product comes with a storage bag buckle, which can be fastened into the slot on the front bar when folded up, reducing noise and swinging during driving.

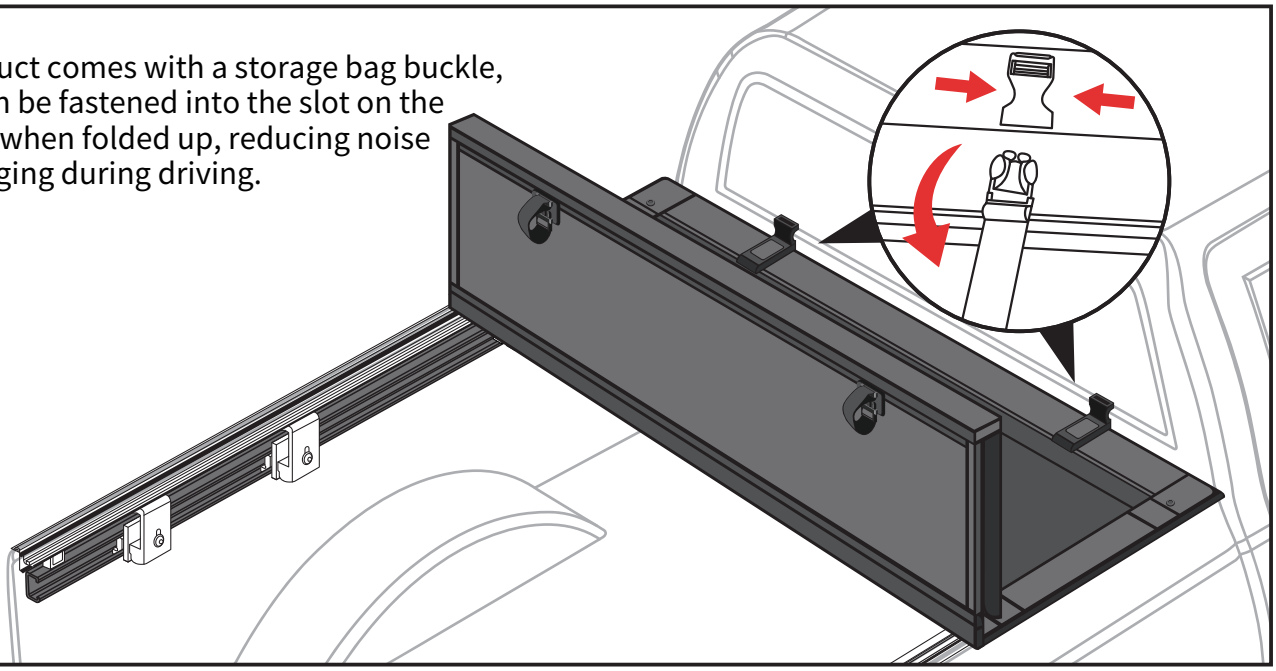


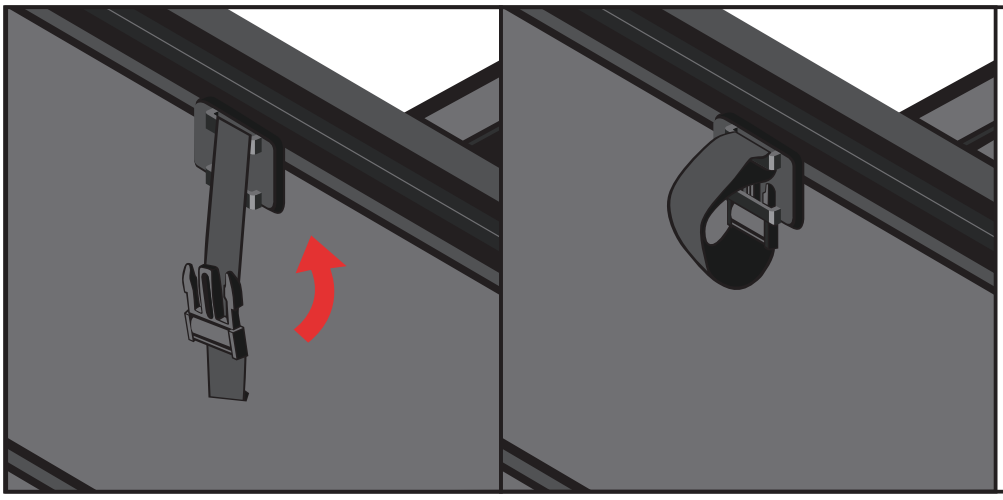

It can also be inserted in reverse into the reserved slot at the back when the cover is unfolded.


Unfold the truck bed cover in order. Ensure tail latches embed in guide rail blocks; if not, adjust position front - to - back so that all four latches can be properly embedded.

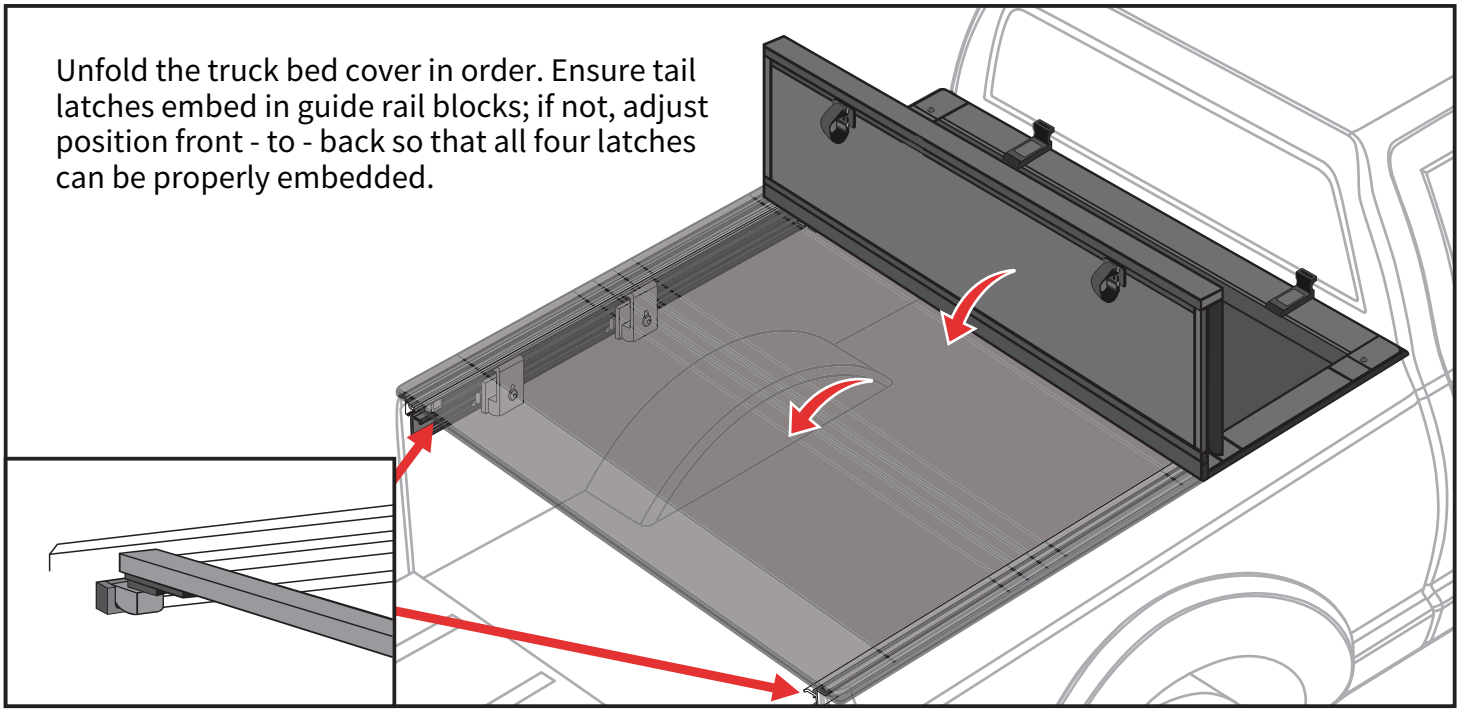

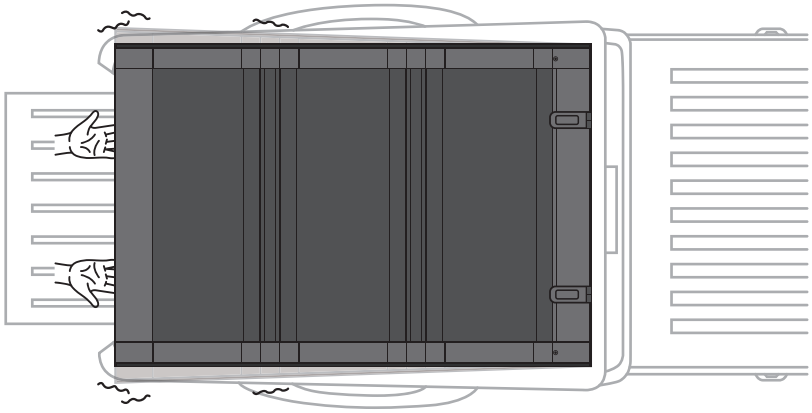


Fine-tune left and right to keep the truck bed cover equidistant from both sides of the truck bed.


Ensure cover is aligned on both sides of the rails.Check the distance between the cover and side rails are even. Shown on red illustration.

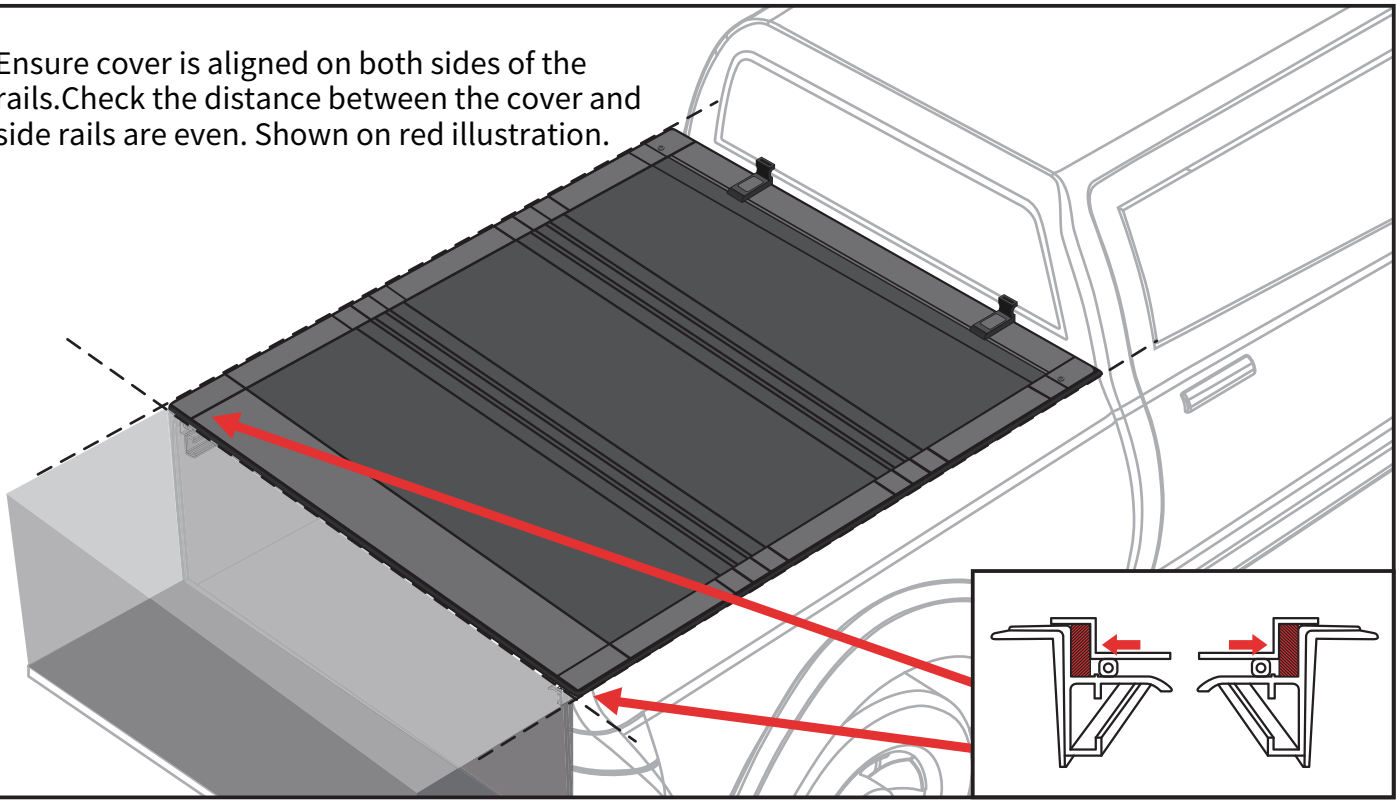


For some vehicle models, the guide rails may tilt downward. You can place the provided washer in the yellow position as shown in the diagram to realign the guide rails.

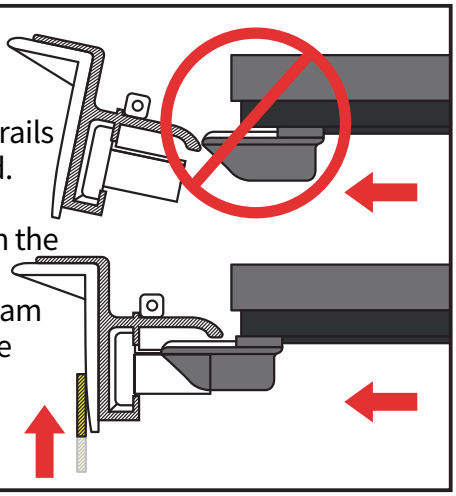


When the cover is fully closed inspect locking tongues properly engages.

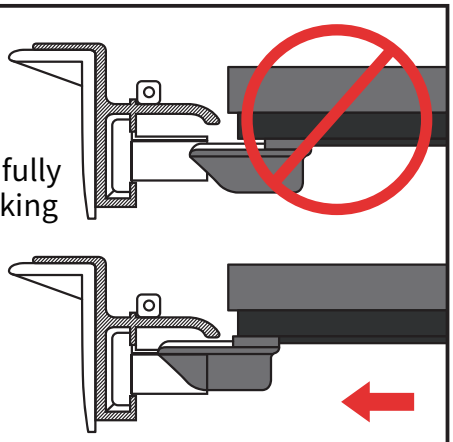

Pull the bottom handle to unlock the latch; pulling either side will release it.Flip open the cover for subsequent operations.

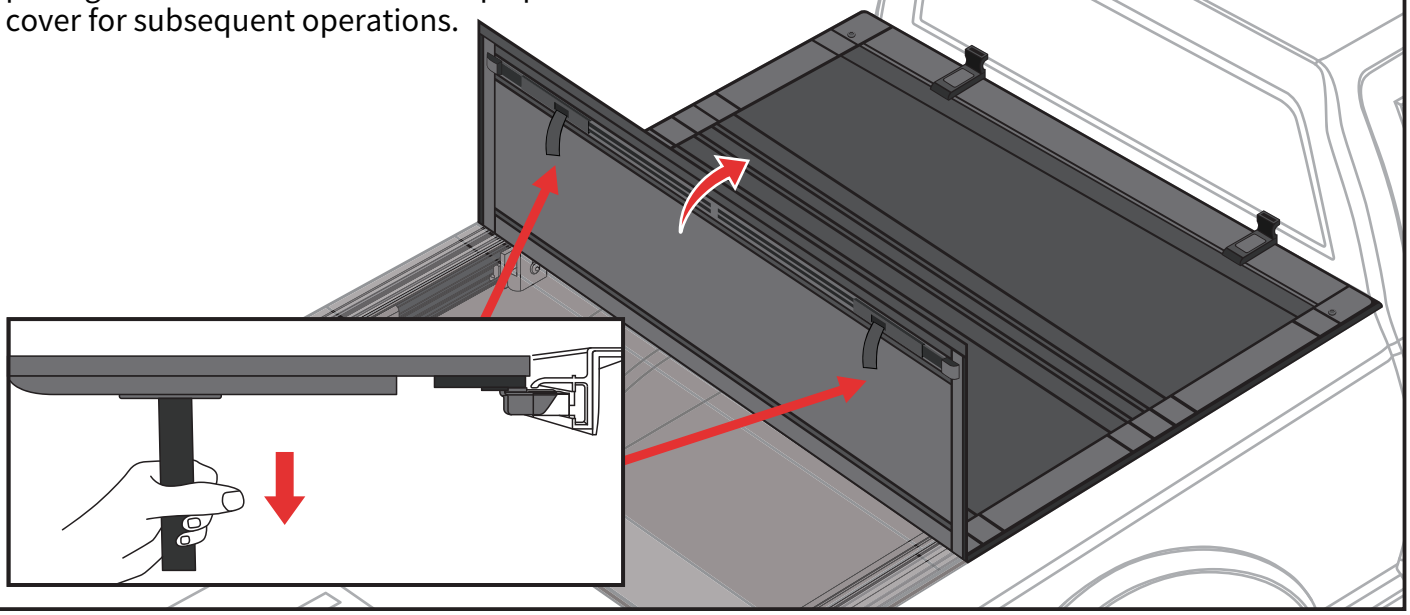


After fixing the other movable sliders on the guide rail, install the two middle clamps in place.

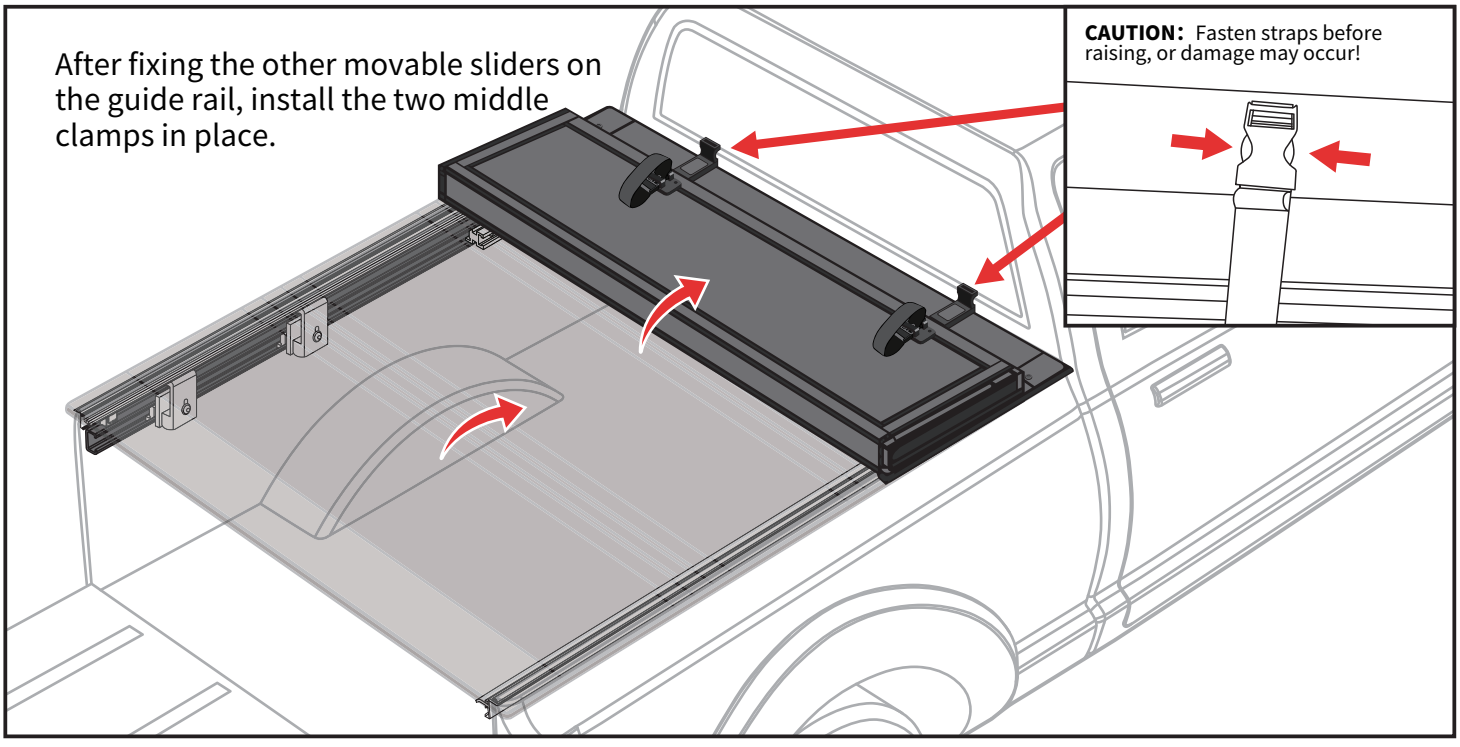


CAUTION: Fasten straps before raising, or damage may occur!


Insert the anti-loosening screw into the reserved hole on the cover. Ensure the screw aligns with the notch on the guide rail and secure it with the nut as shown in the diagram.

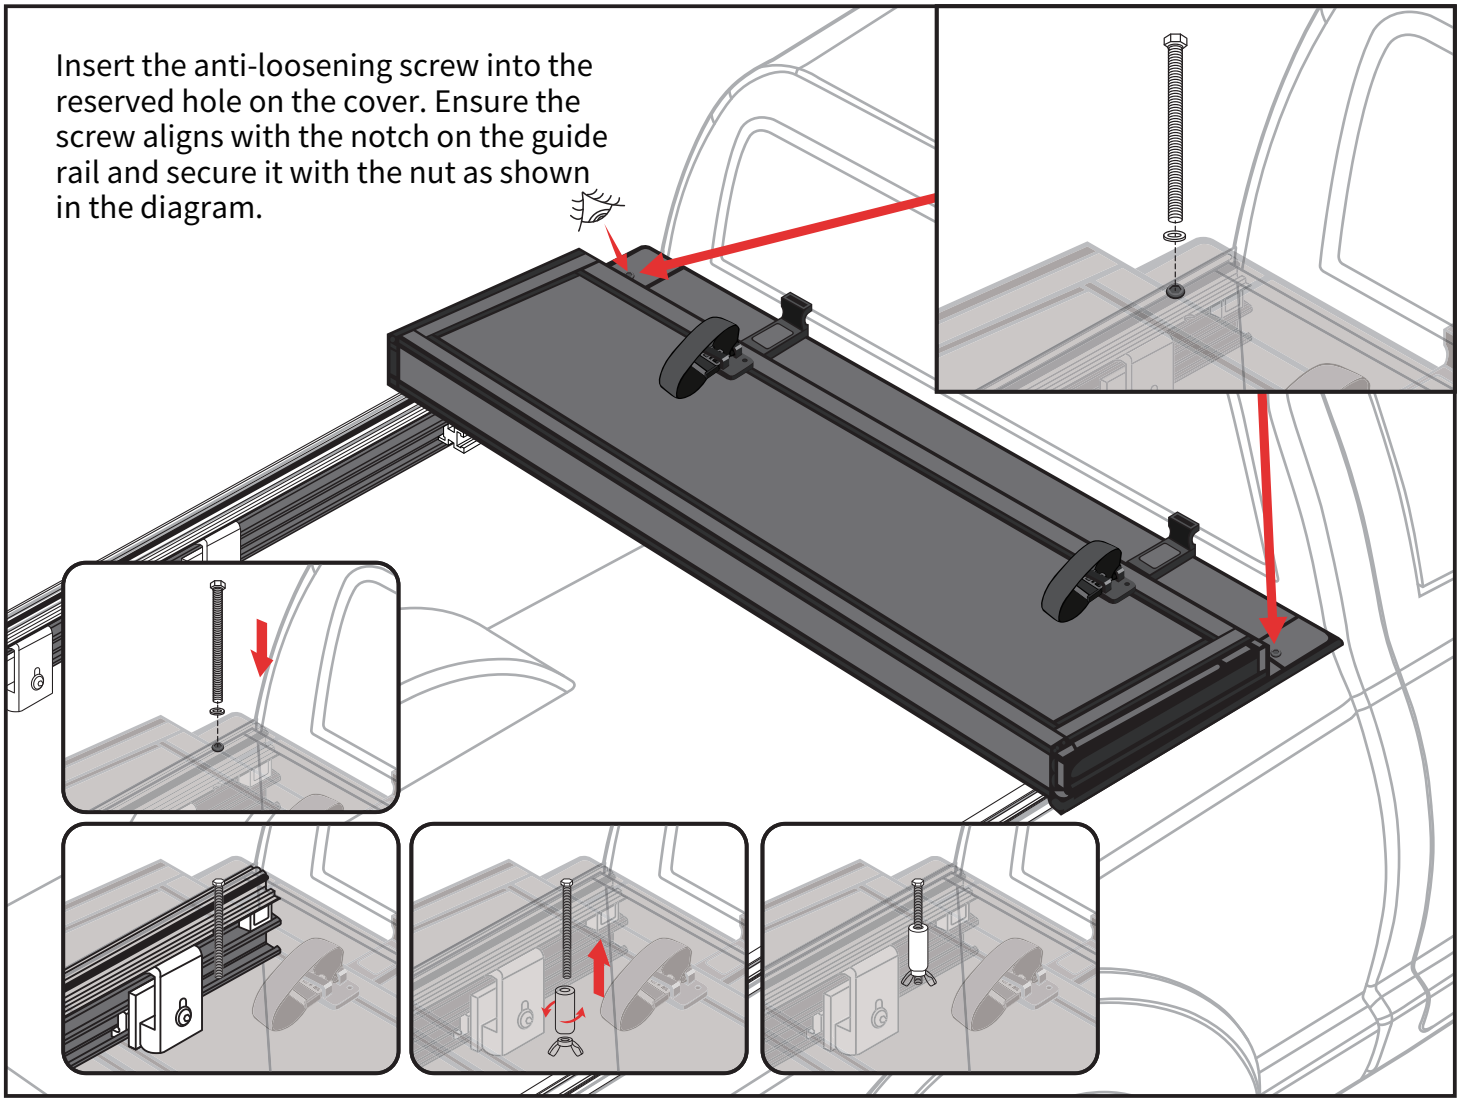


Lift the cover upward.Using the included L-wrench, secure the rod bracket in place. Tighten both mounting screws as shown in the diagram.Align the prop rod’ s threaded end with the pre-drilled hole on the cover panel.Rotate clockwise until fully seated and secure.

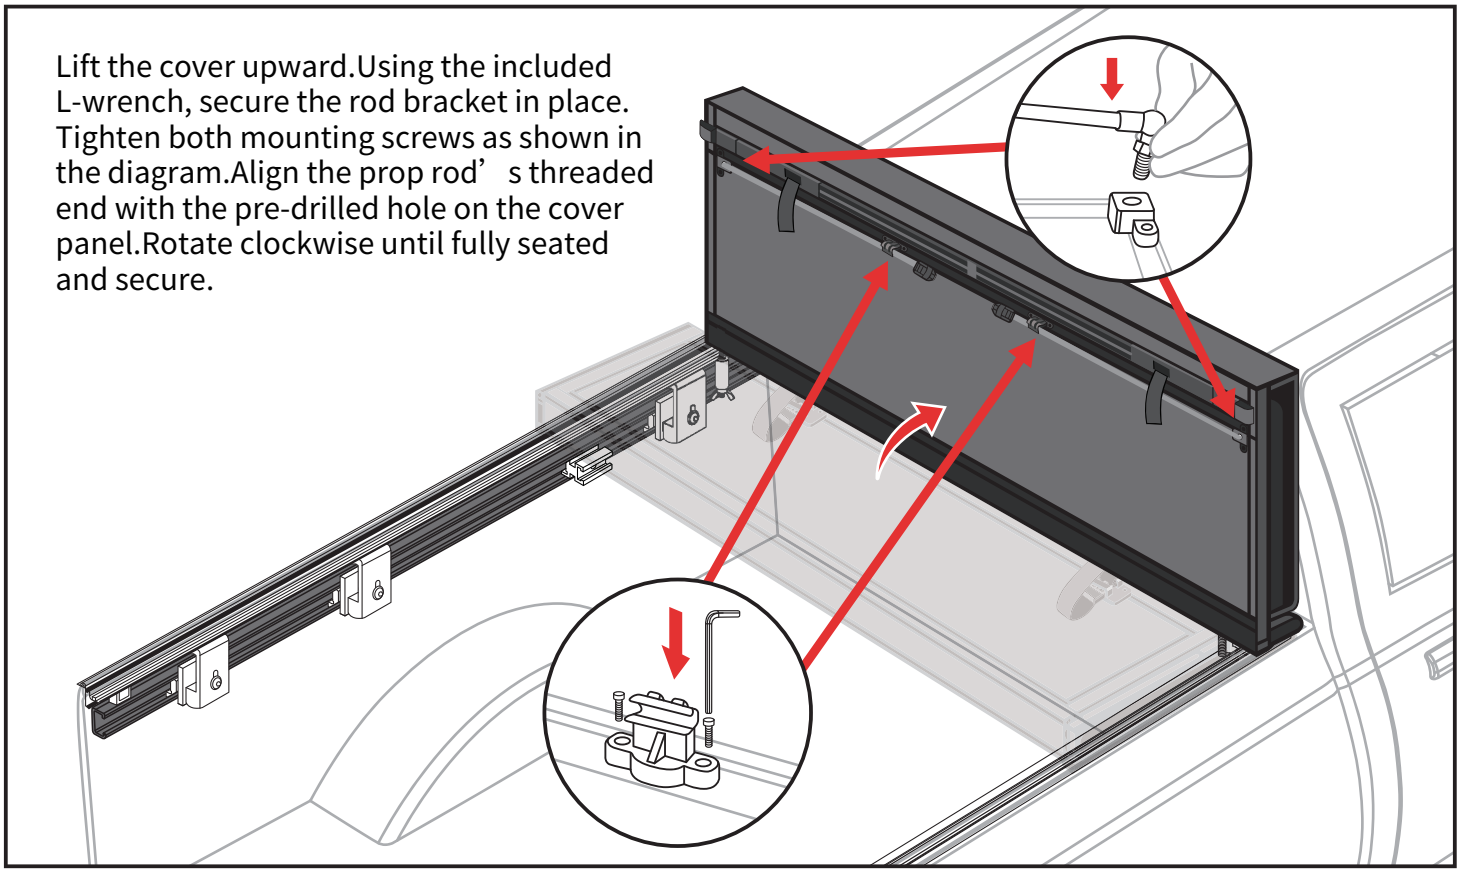


Put the cover retainer into the cover holder bracket, and lower the prop rod after the cover is vertical.

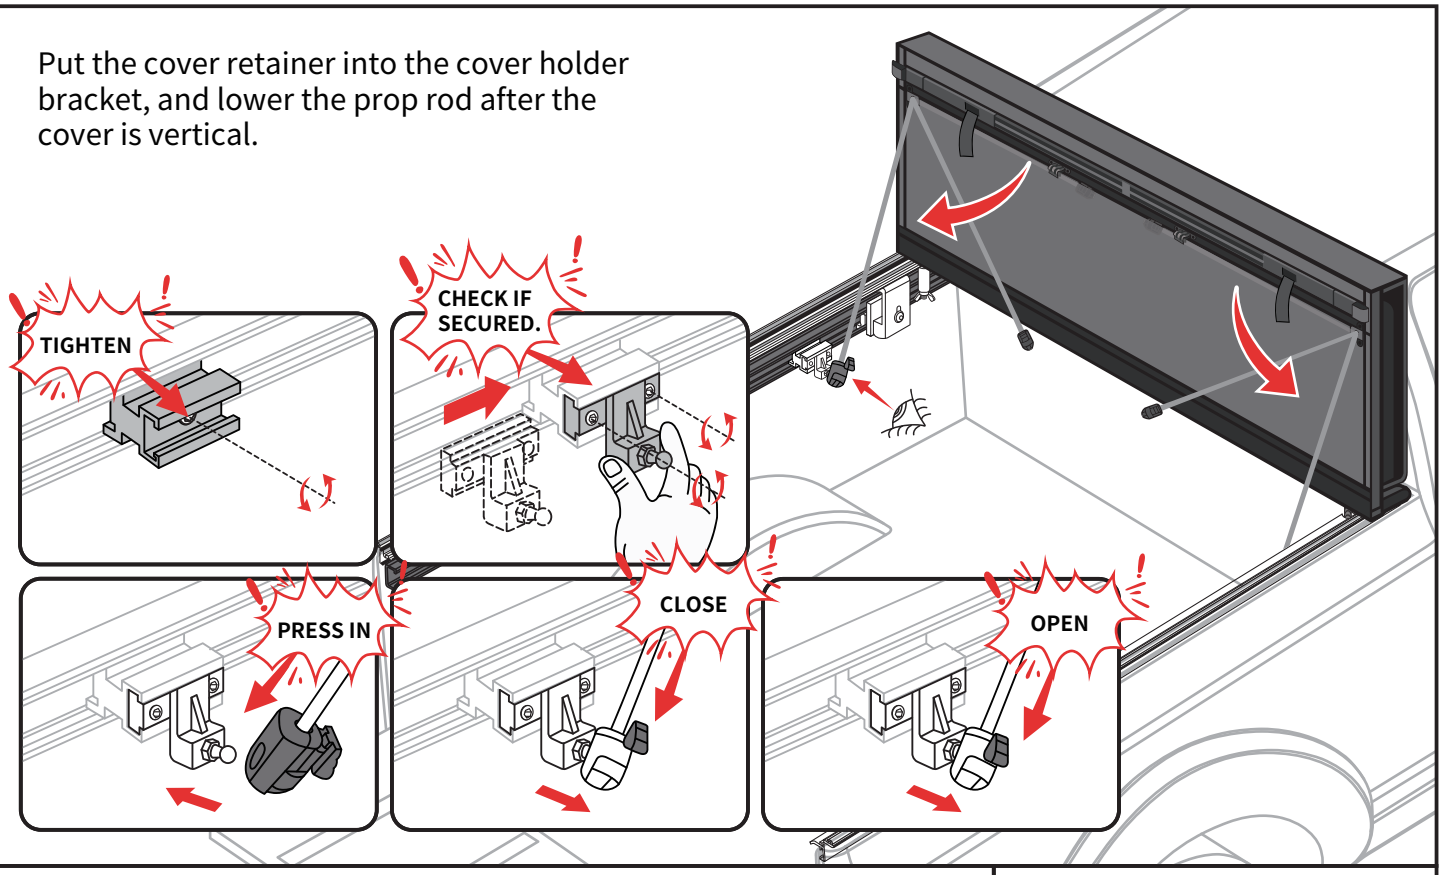

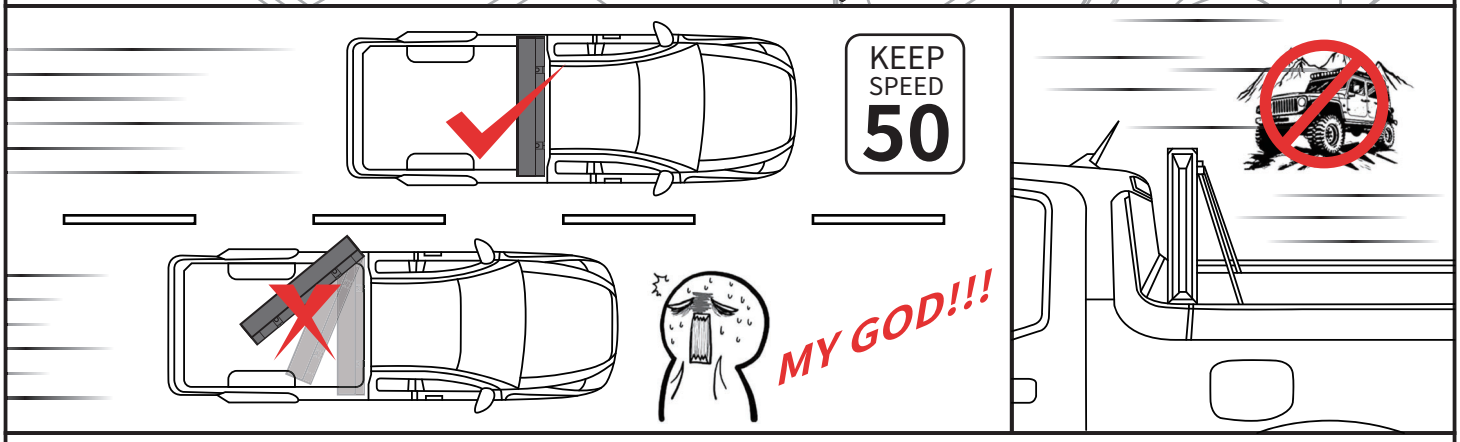

WARNING Do NOT drive over 30-50 mph with cover flipped up.Do NOT keep cover up during. off-road driving.We are NOT responsible for any loss or damage caused by misuse.

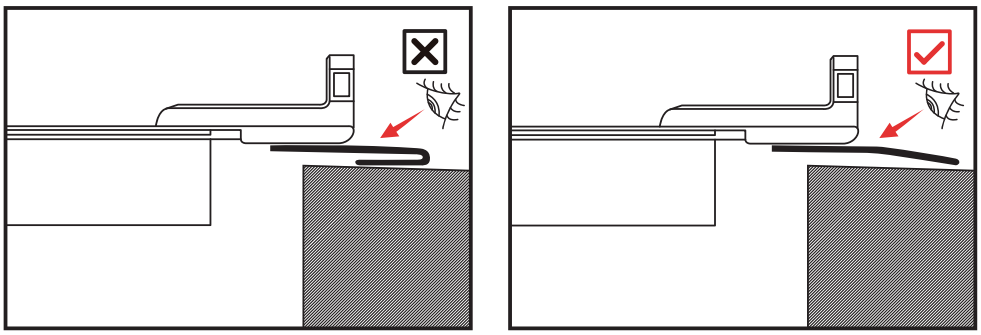

During the initial installation process, the sealed long blades may bend. Pull the blades out to adhere to the cabin wall to enhance waterproofing.

CAUTION Rough road surfaces can cause high-frequency vibrations, leading to the need for adjustments in the position of the truck cover.Regularly check if your truck cover is in the correct position within the truck bed,and inspect all connectors and fastening blocks to ensure they are functioning properly.

4 Care & Safety Guide

CARE & CLEANING

- Use mild car soap and water only
- Do NOT use pressure washers, abrasive cleaners, or chemicals
- If exposed to harsh substances (e.g., oils, solvents):

→ Rinse immediately with baking soda solution (1:10 water)

INSTALLATION & INSPECTION

After Installation

- Check and tighten all clamps, latches, and side rails within 7 days Regular Checks
- Every 2 weeks under normal conditions
- Every week for off-road, frequent, or high-vibration use Clearance
- Maintain ¼" (6mm) clearance around hinges and latches

BEFORE DRIVING

- Ensure all anchor points are fully secured
- Clear off snow, ice, or debris before opening

CARGO & USAGE WARNINGS

- No stacking or tying cargo on the cover
- No passengers or pets under a closed cover
- No exposure to chemicals over 48 hrs without rinsing
- Use OEM parts only – No drilling or tape

ENVIRONMENTAL LIMITS

- Designed to resist weather – Not 100% waterproof
- Use only between: -20°F (-29°C) to 120°F (49°C)
- If stuck due to ice or debris:

→ Use lukewarm water, do not force open

WARRANTY & LIABILITY

Limited Warranty

- Covers factory specs at shipping only
- No guarantees on:Durability / Fit for specific use / Environmental resistance

User Responsibility

- Damage caused by:

– Improper use or overloading / Unauthorized mods / Accidents, weather, chemical exposure

Product codes = tech specs only, not performance guarantees

LEGAL NOTICE

- Governed by state law where purchased
- Manufacturer may update this document without notice
- English version is legally binding