

Makita Battery Tool - User Guide V4.0.1

1. Hardware Connection

- Connect your Makita Battery Repair Tool to your laptop using the USB cable and adaptor if needed.
- Slide the Makita Battery Repair Tool onto the Makita Battery until it clicks securely into place.


2. Access the Web Interface

- Open Google Chrome or Microsoft Edge. (**MAC Users need to use Chrome browser, Safari does not allow a serial communications connection!**)
- Navigate to the web UI: <https://skippyw.github.io/Web-Reset-Tool>. (No spaces anywhere!)
- You will be greeted by the "🔒 Device Required" lock screen.


3. Safety Disclaimer & Connection

- **Acknowledge Risks:** You must check the Safety Disclaimer box on the lock screen before proceeding. The connection button will remain disabled until you agree.
- Click the blue Connect Device button on the screen.
- A browser pop-up window will appear asking you to select a serial port.
- Select the port that corresponds to your tool (e.g., USB Serial Device (COM4)).
- Click Connect in the pop-up window.
- The system will wake up the device and authenticate it. Once verified, the lock screen will disappear, and the main dashboard will be available.

Acknowledgement Screen.

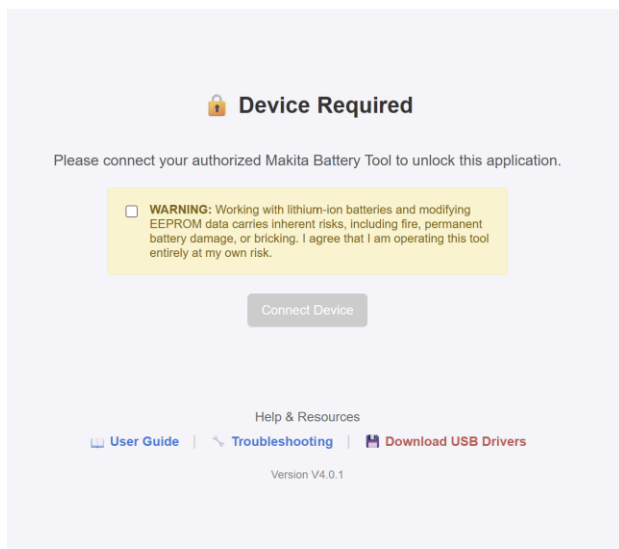


Port Selection pop-up

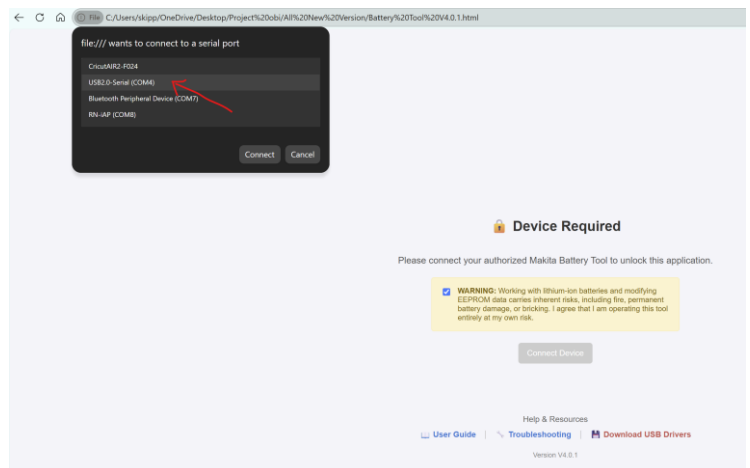

4. Reading Battery Data

- Click the green Read Data button.
- The tool will communicate with the battery and populate the table with its Model, Charge Count, Lock State, Pack/Cell Voltages, and Temperatures. **New for V4.0.1:** It will also calculate an overall **Health Rating** (0.0 - 4.0), a precision **State of Charge (%)**, and check for dangerous **Cell Imbalances**.

- **Diagnostic-Only Batteries:** If you connect a restricted battery (e.g., some older or specific models), a pop-up will inform you that "This model only supports diagnostics.". Click OK, and the tool will automatically read the available limited data (Model, Charge Count, State, Status Code, Design Capacity).

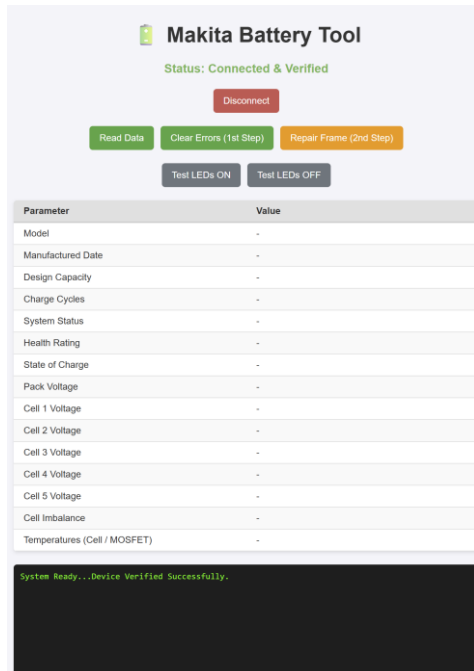

5. Function Tests & Resets: Use the control buttons at the top of the dashboard to test or repair the battery. Note: When running a Reset command, the tool will automatically pause for 2 seconds to allow the battery memory to rewrite, and then it will automatically re-read and refresh your table data.

- Test LEDs ON / OFF: Tests the fuel gauge LEDs on the back of the battery (if applicable).
- Clear Errors (1st Step) — Try This First: This safely clears temporary fault codes stored in the battery's memory. If your battery locked itself simply due to a temporary overload or low voltage, this button will usually unlock it.
- Repair Frame (2nd Step) — Try This Second: If the battery remains locked after clearing errors, try a deep repair. This initiates a full memory sequence to clear permanent errors and recalculates the system checksums. *You will be prompted to confirm this action. This function is automatically blocked on Type 5/6 batteries to prevent permanent hardware damage.*
- If Both Resets Fail: If a battery remains locked after attempting both of these software resets, it is highly unlikely it can be unlocked via software. This almost always indicates a permanent physical hardware issue inside the pack (e.g., a blown BMS safety fuse, completely dead cells, or broken balancing tabs) that requires physical board replacement.

6. Disconnecting Safely

- Always click the red Disconnect button on the web dashboard before unplugging the battery.
- This closes the serial port safely and returns the app to the secure lock screen, ready for your next battery.

7. Notes

- There are several variables why a battery may not unlock and some battery safety features will not reset.
- If a battery is reset 3 times it will become permanently locked and not charge but can still work on the tools, if this happens the only option to save the battery is to replace the circuit board for an aftermarket one or another Makita one where the cells have failed.