SUGER



CX2177x

17" DEEP 2U CHASSIS
INTERNAL 3.5" DRIVE CAGE

ENGLISH

In this guide

This guide covers chassis access, component installation, and reassembly.

Choose your cooling configuration and check component clearances before starting assembly. Supported components may compete for the same space.

Before installation: Follow the installation instructions supplied with your motherboard, power supply, graphics card, and cooler.

Maintenance: Before opening a chassis that already has components installed, switch the system off and unplug it.

Fasteners: Tighten chassis fasteners by hand. Do not force a screw that does not thread correctly.


Exploded assembly & part key 2
Clearance drawing — top view 3
Front-view component clearances 4
Dimensions & compatibility 5
Hardware kit 6
Front ports & connections 7
Remove the lid 8
Remove the faceplate & filter 9
Install rack ears & handles 10
Install fans 11
Remove the front drive cage 12
Remove the rear drive bracket 13
Prepare the motherboard area 14
Install the motherboard 15
Install the power supply 16
Install a GPU or PCIe card 17
Mount drives in the front drive cage 18
Mount drives in the rear drive bracket 19
Reinstall the rear drive bracket 20
Reinstall the front drive cage 21
Route cables & close the chassis 22
Warranty & support 23
Regulations 24
Manual revision history 25

Exploded assembly & part key

Assembly part key

No.	Part	Related procedure
1	Lid	Remove the lid (page 8)
2	Faceplate	Remove the faceplate & filter (page 9)
3	Front I/O assembly	Front ports & connections (page 7)
4	Chassis wrap	Main chassis body
5	Filter foam	Remove the faceplate & filter (page 9)
6	Rack ear & pull handle	Install rack ears & handles (page 10)


See the hardware-kit page for the supplied fasteners and rack hardware.

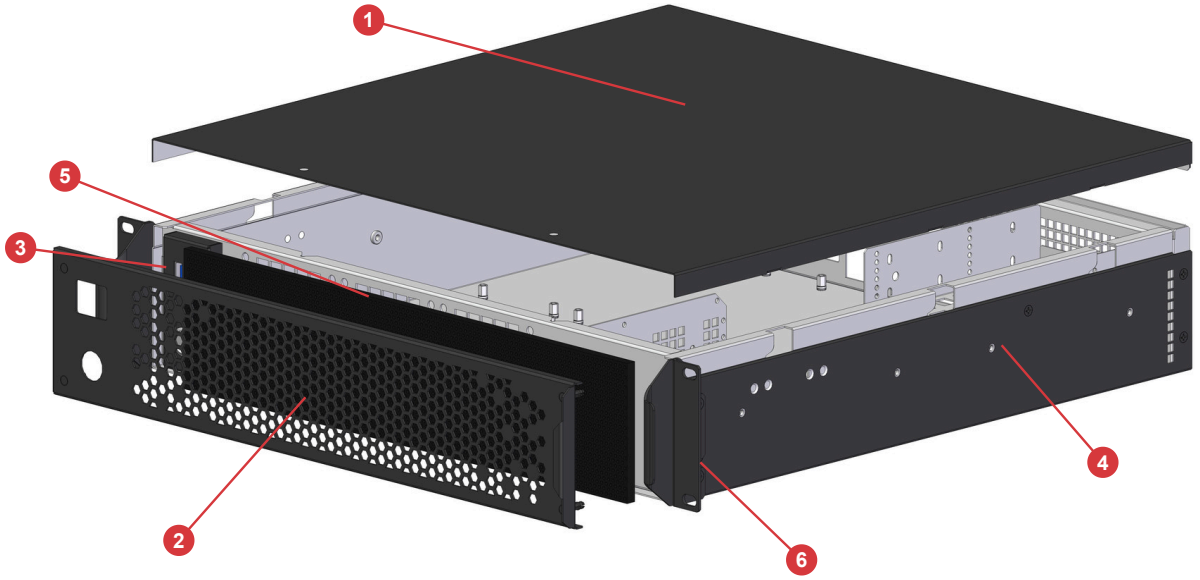


Clearance drawing — top view

The top-view drawing shows the motherboard, power supply, front fans, drive mounting locations, and the GPU length available with each front cooling arrangement.

ⓘ Drawing dimensions are nominal. For compatibility, use the limits on the compatibility page.

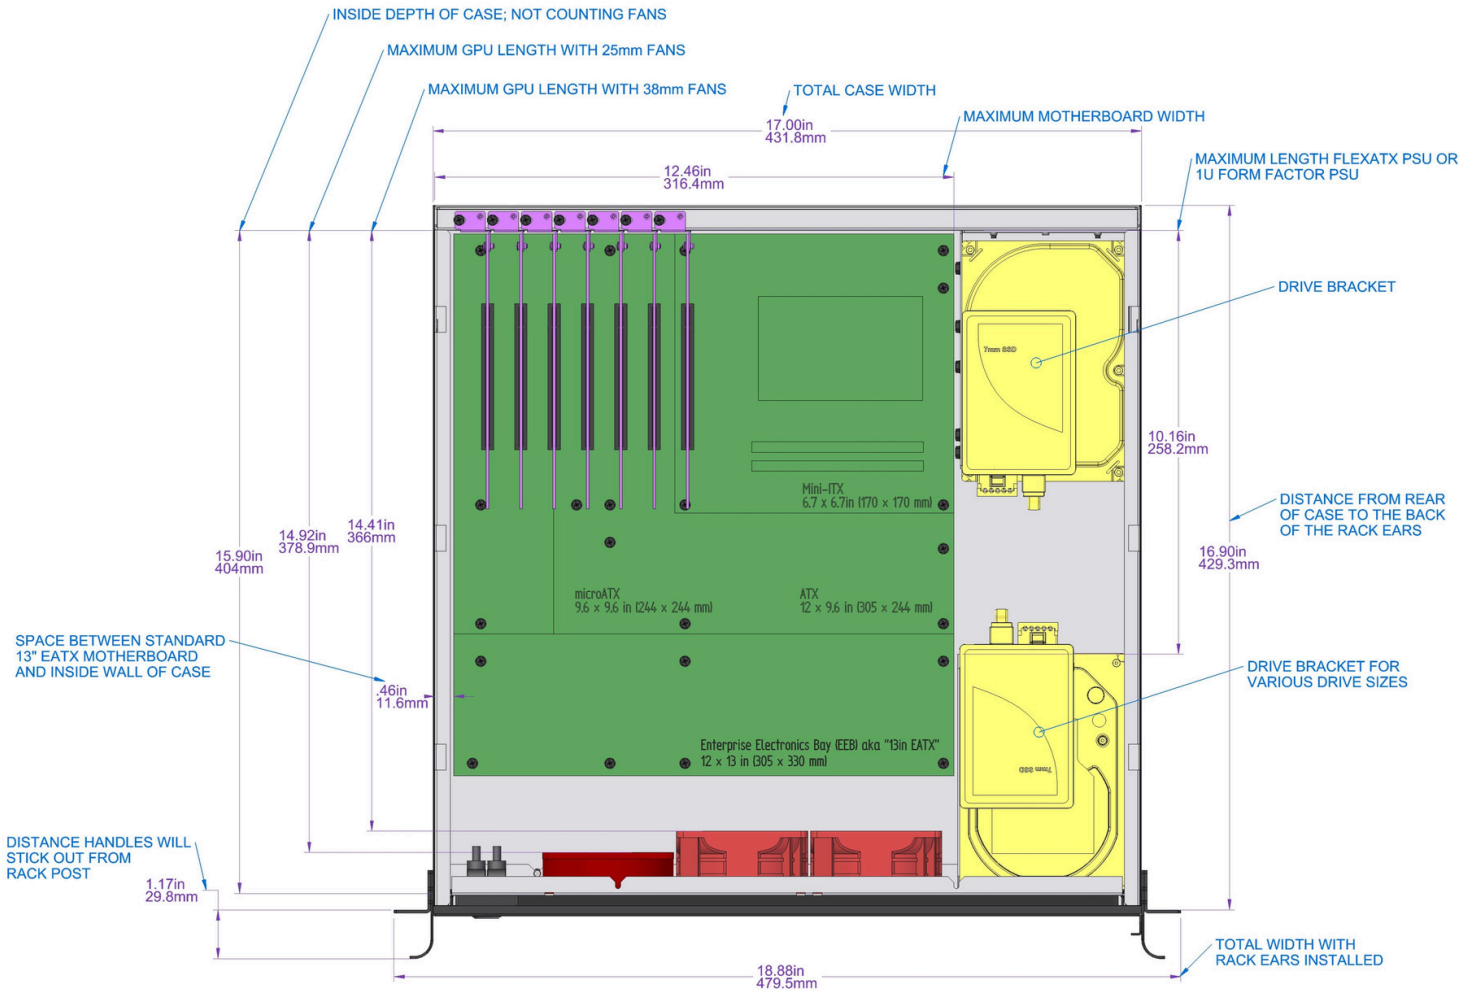

Front-view component clearances

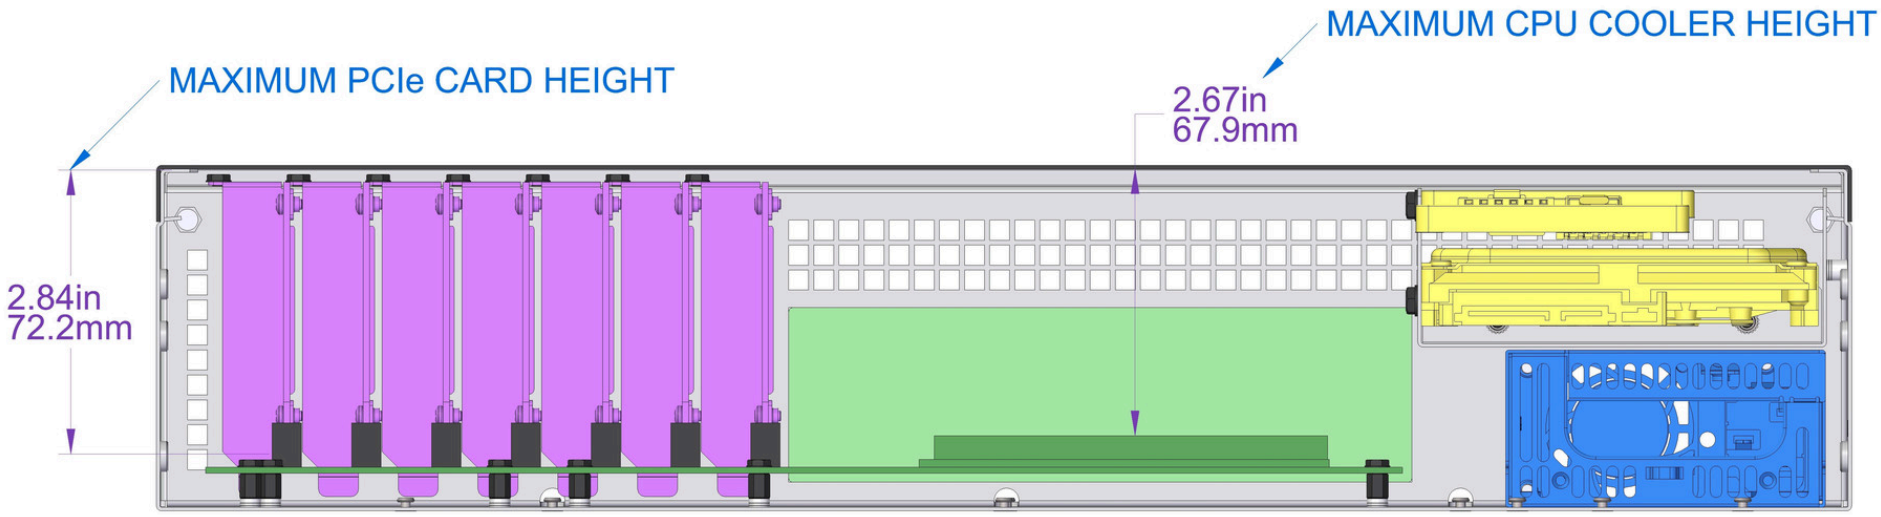

The front-view drawing illustrates expansion-card height, CPU-cooler height, and the power supply and drive positions.

ⓘ Drawing dimensions are nominal. For compatibility, use the limits on the compatibility page.

Dimensions & compatibility

Component	Specification
Outer dimensions, D × W × H	431.8 × 431.8 × 87.88 mm (17 × 17 × 3.46 inches)
Rack size	2U · 19-inch rack
Power supply	FlexATX, up to 250 mm long
Motherboard	Mini-ITX, Mini-DTX, FlexATX, MicroATX, ATX, EATX and SSI-CEB up to 12 × 10.5 inches; SSI-EEB up to 12 × 13 inches
CPU air cooler	Up to 66 mm tall
Front cooling	Three 80 mm fans, up to 38 mm thick
Liquid cooling	Not officially supported
Front bays	None (internal 3.5-inch drive cage)
Expansion	Seven half-height PCIe slots; cards up to 72 mm tall including power connectors
Storage	12 × 2.5-inch and 4 × 3.5-inch mounting locations: in the front drive cage, two 3.5-inch drives up to 25 mm thick, or up to seven 7 mm SSDs (one above the 3.5-inch drives up to 15 mm thick, one below them, 7 mm); in the rear drive bracket, two 3.5-inch drives up to 20 mm thick or five 7 mm SSDs

GPU length by cooling configuration

Configuration	Maximum length
No front fans	404 mm
Three 25 mm front fans	378 mm
Three 38 mm front fans	366 mm

ⓘ Fan thickness and GPU length together must be less than 404 mm. SSI-CEB and 10.5-inch deep EATX motherboards are incompatible with 38 mm thick fans. AIO cooling is not officially supported: the three-fan Dynatron L35 interferes with the drive brackets. Not every mounting location can be used at the same time.

Hardware kit

Match the **letter and color** here to the references beside the installation illustrations and in each procedure. All rackmount chassis use screwbag **SBAG-HWKIT** (items A–F).

A 6-32 × 0.25-inch hex screws — 45 ×

Yellow-marked · Motherboard, PSU, HDDs, and PCIe accessories.



B M3 × 0.5 screws, 5 mm long — 10 ×

Red-marked · 2.5-inch SSDs and some 3.5-inch accessories.



C 6-32 hex standoffs — 20 ×

Teal in drawings; black, unpatched hardware · 0.125-inch and 0.25-inch lengths. Install in the motherboard tray.



D M3 screws (5 mm thread) — 16 ×

Blue-marked · 2.5-inch SSDs and some 3.5-inch accessories.



E 6-32 × 0.25-inch flat-head screws — 10 ×

Green-marked · Motherboard tray, subfront, internal brackets, and front I/O bracket.



F M4 × 7 mm screws — 7 ×

Pink-marked · Rack ears and pull handles.



G Slot covers — 7 ×

Cover unused PCIe slots (half-height, vented).



H Rack ears — 1 pair

Secure the chassis to the rack.




I Pull handles — 1 pair


Optional handles make pulling the chassis from the rack easier.




ⓘ Items G–I are separate chassis/accessory items. Illustrations are not to scale. Fan and radiator fasteners are supplied with the cooling components.

Front ports & connections

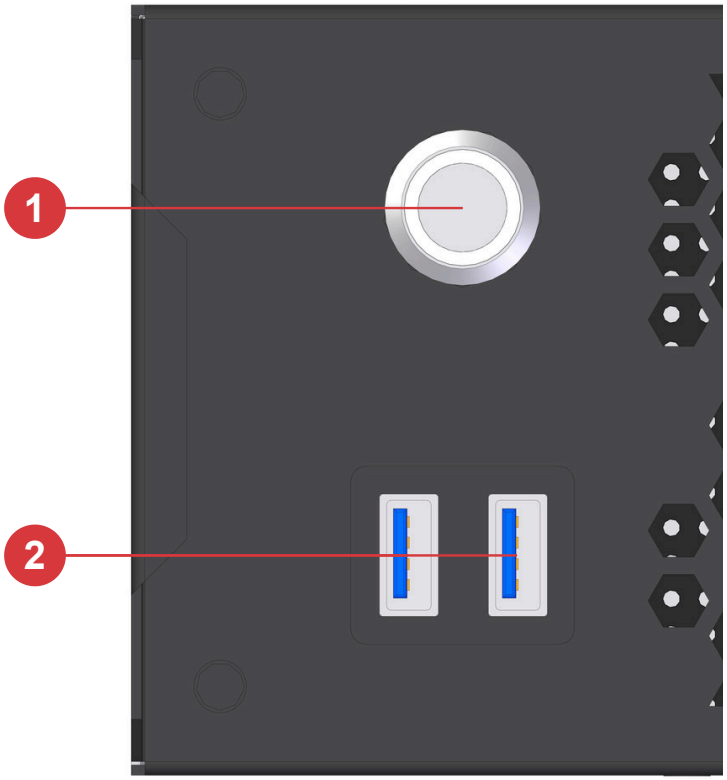

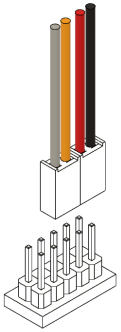

Power switch & status light

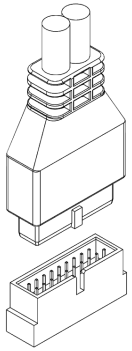


USB Type-A ports

No.	Port / connection
1	**Power switch & status light** Momentary switch with a white ring-shaped status light. Connect switch and LED leads to the front-panel header; observe the motherboard's LED polarity markings.
2	**USB Type-A ports** Two USB 3.0 Type-A ports, connected through the keyed internal USB cable shown.


ⓘ Use your motherboard manual to identify matching headers and pin assignments. The numbered front-panel locations correspond to the connector drawings and legend.

Remove the lid


1

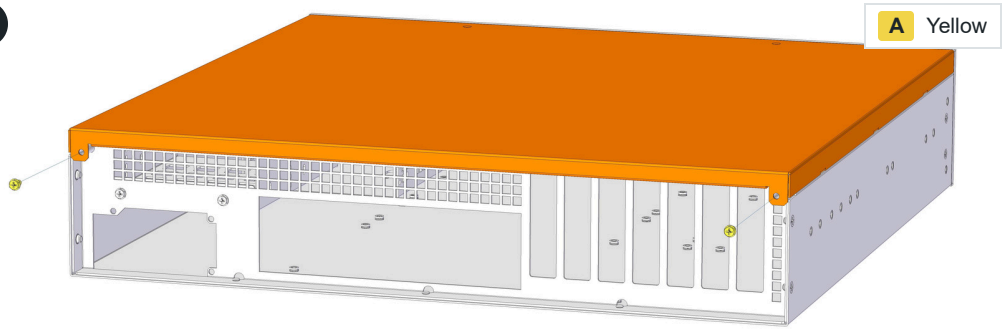

2

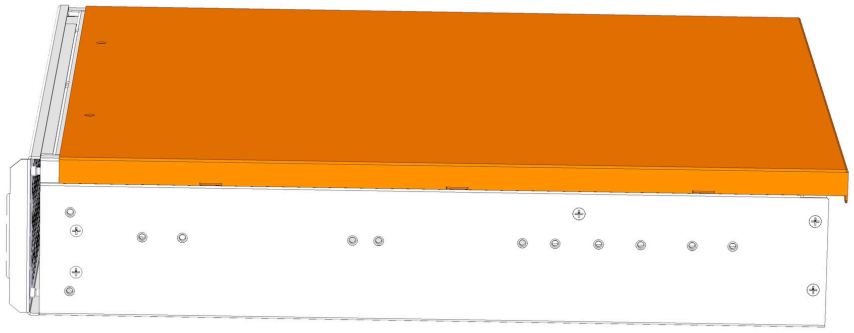

3

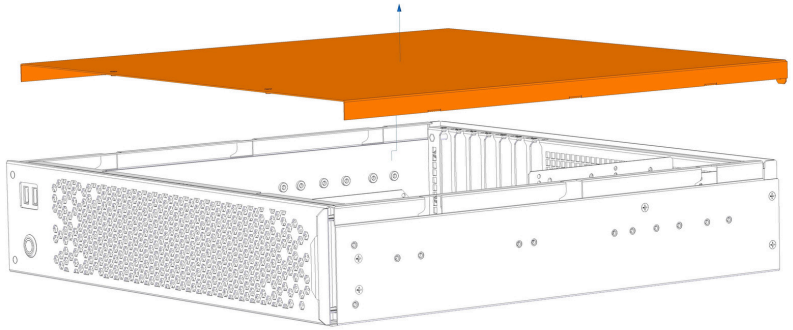

1. Remove the screws

Remove the two yellow-patched 6-32 screws **(A)** at the upper rear corners that secure the lid to the chassis.


2. Slide the lid back

Push the lid toward the rear of the chassis.

3. Lift the lid away

Check that the lid flanges have cleared the chassis slots. Lift the lid up and away.

Remove the faceplate & filter

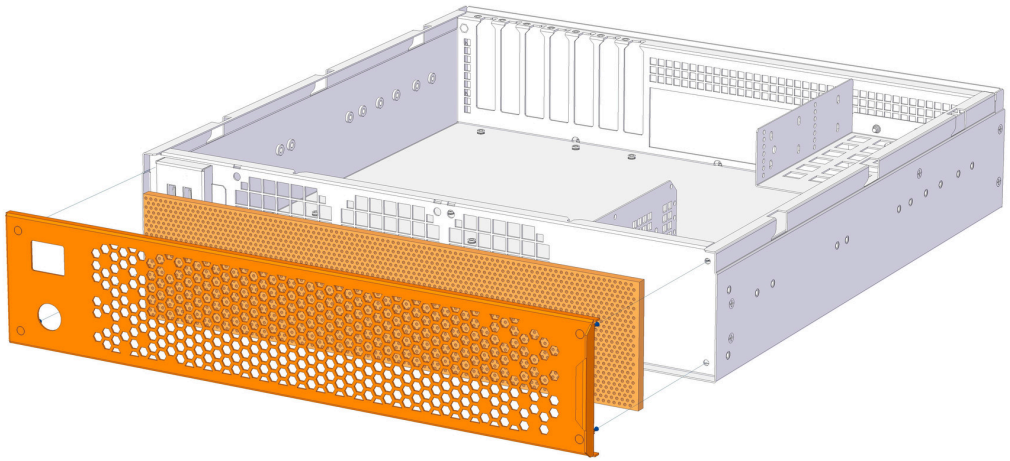

1. Release the left side

Pull on the left-side handle of the faceplate until its locating pins disengage, approximately ½ inch.


2. Release the right side

Gently pull the right side outward to remove the faceplate and dust filter.

Keep the faceplate and filter aside while installing front fans or a radiator.

Install rack ears & handles

F Pink | H | I

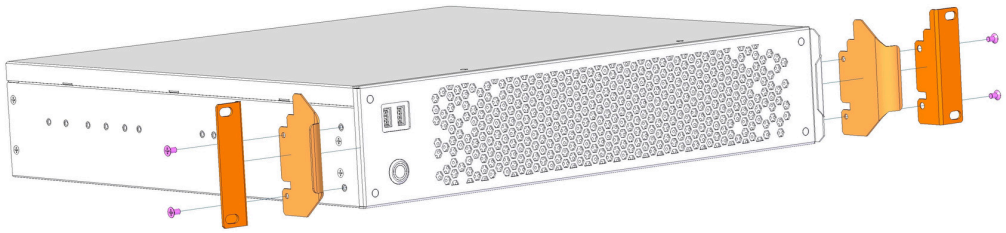

1. Align the hardware

If using pull handles, stack the rack ears **(H)** over the pull handles **(I)** with the handle facing away from the faceplate.


Rack ears can also be installed without handles.

2. Secure both sides

Install 4 pink-marked M4 × 7 mm screws **(F)** in total, 2 on each side, through the rack ears and handles into the chassis. Tighten by hand.

ⓘ Rack-slide installation depends on the rail kit. Follow the instructions supplied with the selected kit.

Install fans

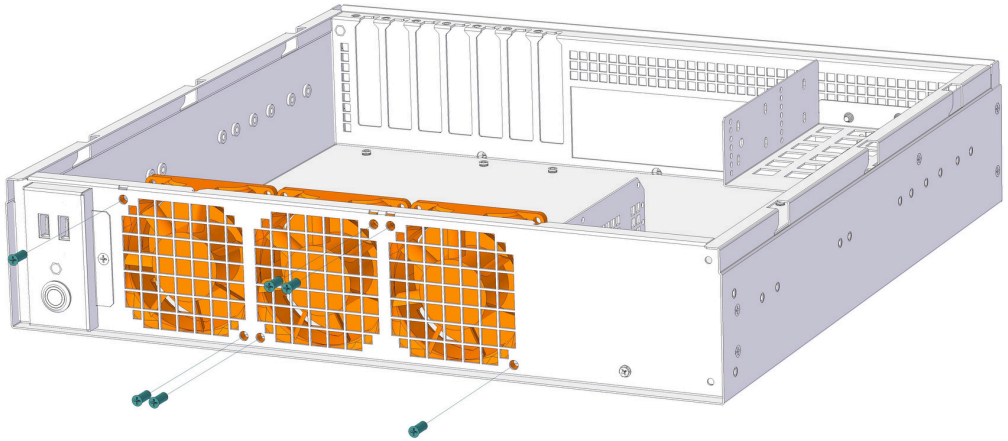

1. Align the fans

Align three 80 mm fans with the subfront, airflow into the chassis. Each fan uses two diagonal mounting points.

2. Secure the fans

Use the screws supplied with your fans. Pass them through the subfront and into the fan frames.


Tighten sufficiently to prevent movement and vibration.

Check GPU clearance


With 25 mm fans, maximum GPU length is **378 mm**; with 38 mm fans, **366 mm**. AIO cooling is not officially supported on this model.

Remove the front drive cage


1

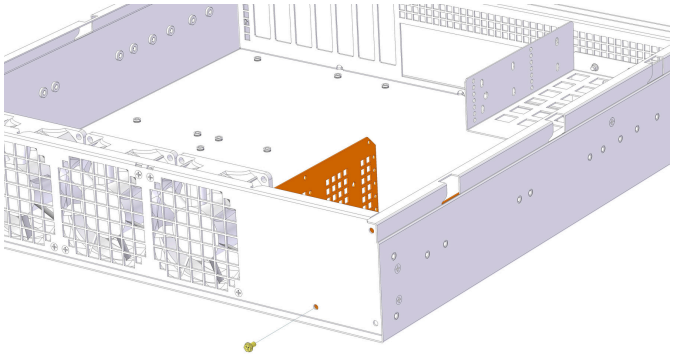

2

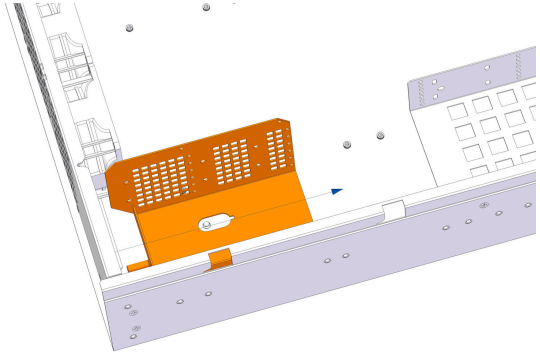

3

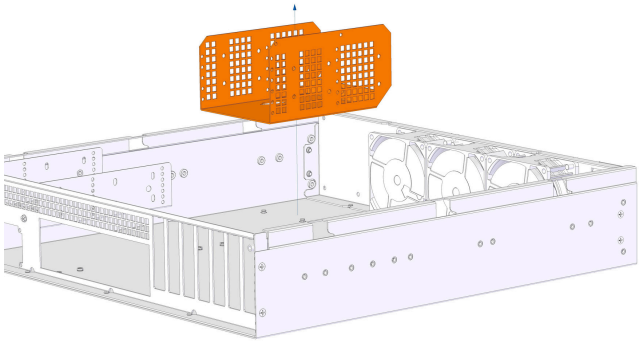

A Yellow

1. Remove the screw

Remove the yellow-patched 6-32 screws **(A)** from the chassis side wall.

2. Slide the cage back


Slide the cage toward the rear of the chassis to release it.

3. Lift out the cage


Lift the cage up and out of the chassis.

Remove the rear drive bracket

1

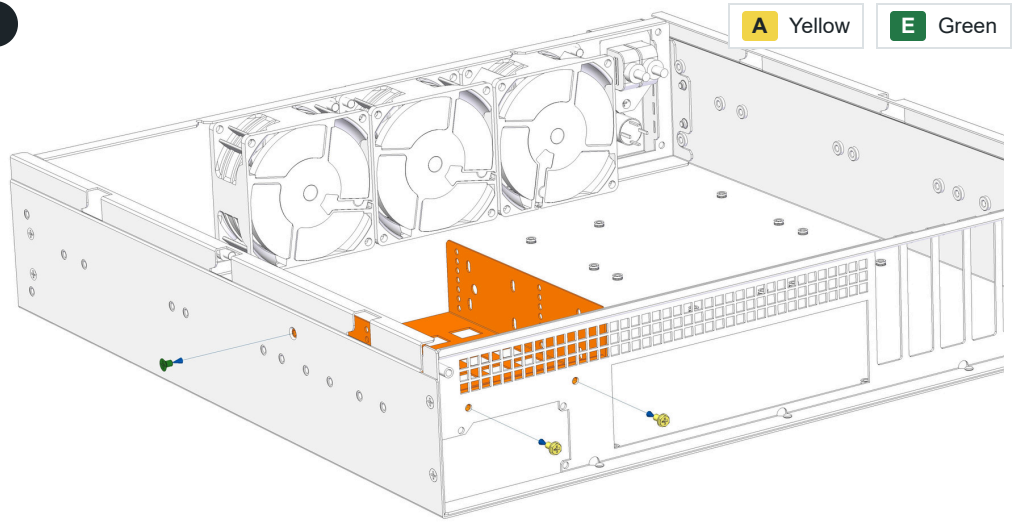

2

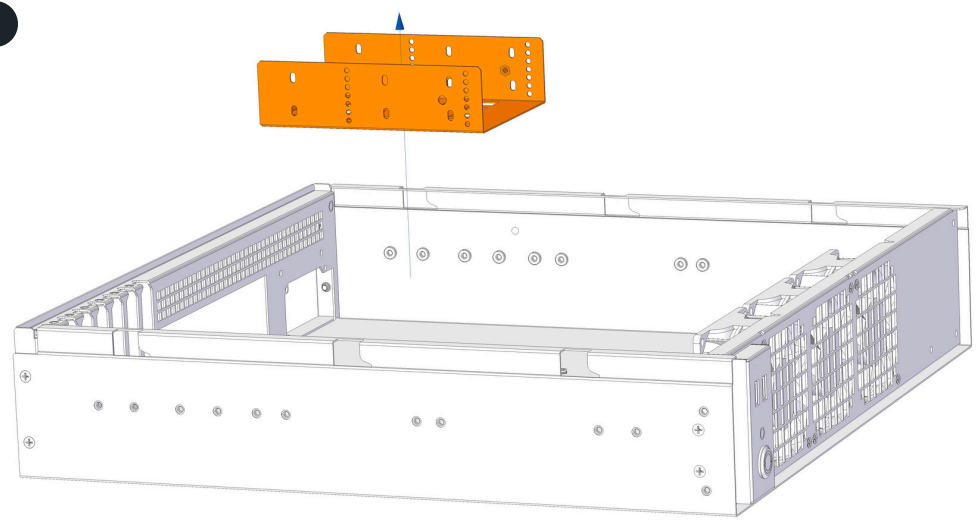

The rear drive bracket sits beside the power supply. Remove it before installing the motherboard and power supply.

1. Remove the screws


Remove the green-patched 6-32 screws (E) from the chassis side wall and the yellow-patched 6-32 screws (A) from the rear panel.

2. Lift out the bracket

Lift the bracket up and out of the chassis.


Prepare the motherboard area

1

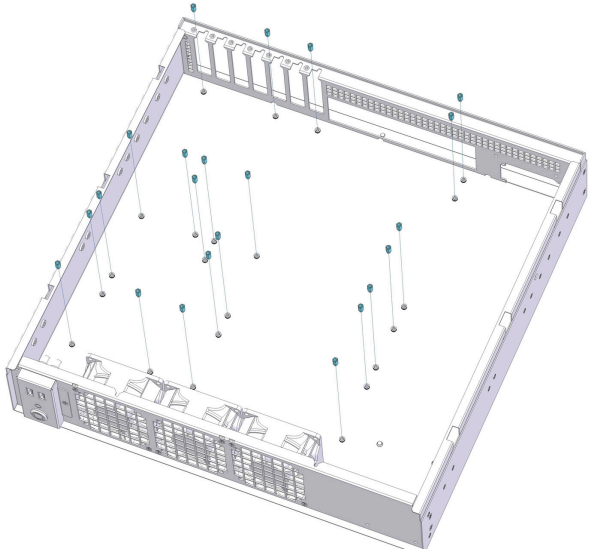

C Teal

2

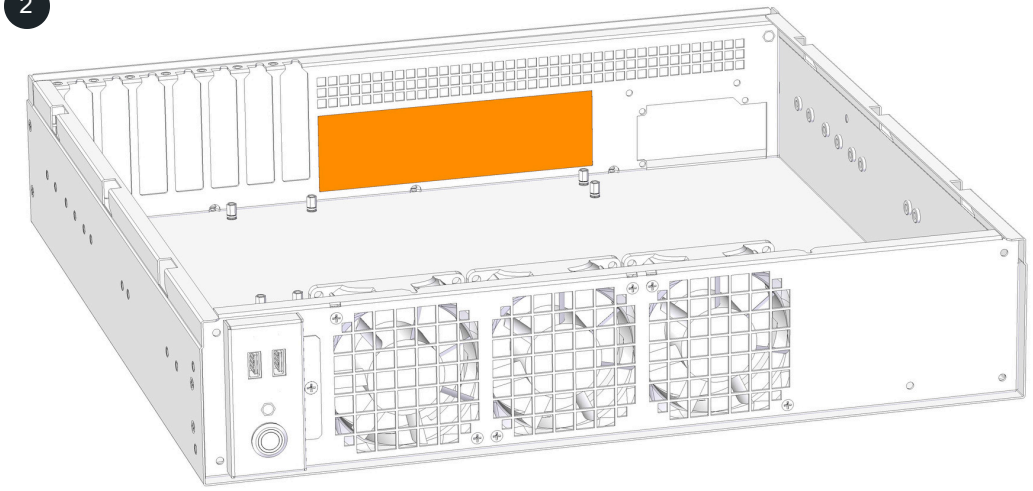

1. Install the standoffs

Match standoff positions to the mounting holes on your motherboard. Install the black hex standoffs **(C)** into the corresponding threaded locations in the chassis floor. The floor is marked with the outline of each supported board size.


Do not leave an extra standoff beneath a part of the board without a mounting hole.

2. Install the I/O shield

If your motherboard has a separate I/O shield, orient it to match the motherboard ports and press it into the rectangular opening in the chassis rear panel.

ⓘ Skip this step if the I/O shield is integrated into the motherboard.

Install the motherboard

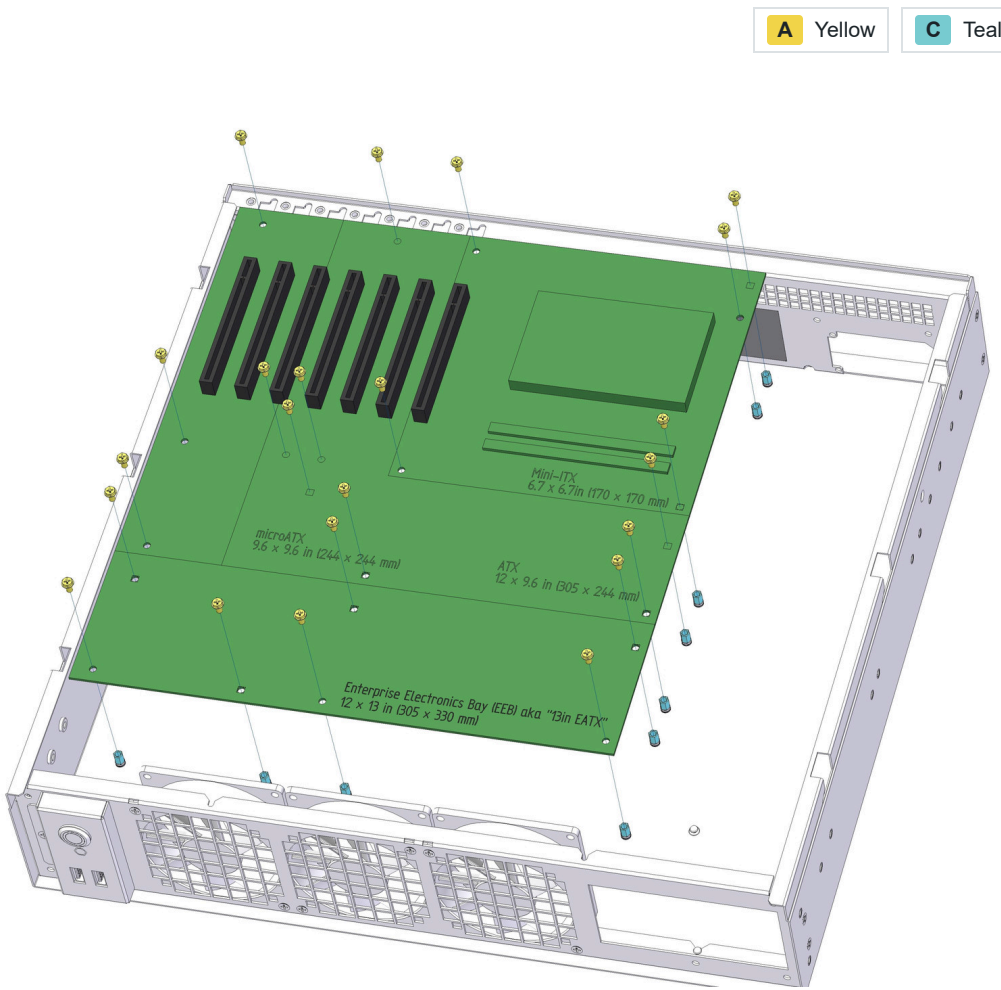

1. Lower the motherboard

Place the motherboard onto the black hex standoffs **(C)**. Align its rear ports with the I/O opening and its mounting holes with the standoffs.


2. Secure the board

Install yellow-patched 6-32 screws **(A)** through the board and into the standoffs.

Tighten by hand to avoid damaging the board or loosening the standoffs during future removal.

Follow your motherboard's instructions for CPU, memory, M.2 drives, and cable connections.

Install the power supply

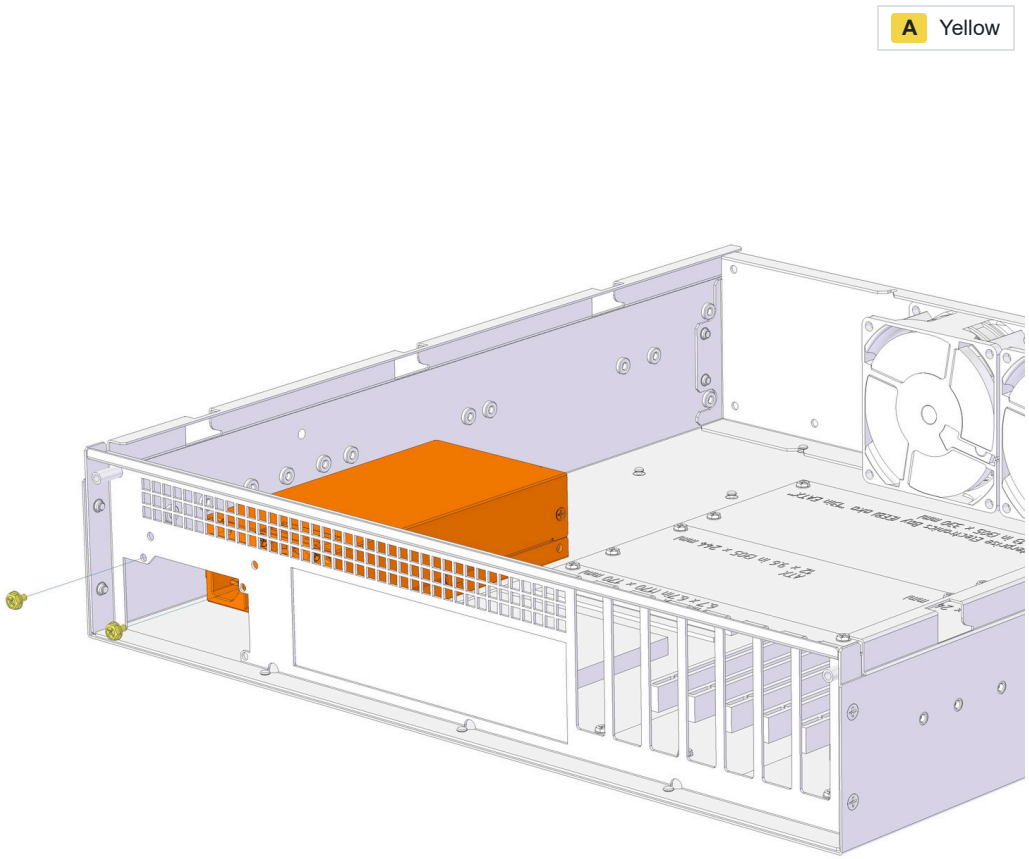

1. Position the FlexATX power supply

Slide the FlexATX PSU into its mounting location at the rear of the chassis. Align its rear mounting holes with the openings in the rear panel and keep the fan intake clear.

2. Secure the PSU


Install two yellow-patched 6-32 screws **(A)** through the rear panel into the PSU. Tighten by hand.

Check length

Maximum PSU length is **250 mm**. Longer FlexATX units interfere with the drive hardware on this model.

Install a GPU or PCIe card

A Yellow G

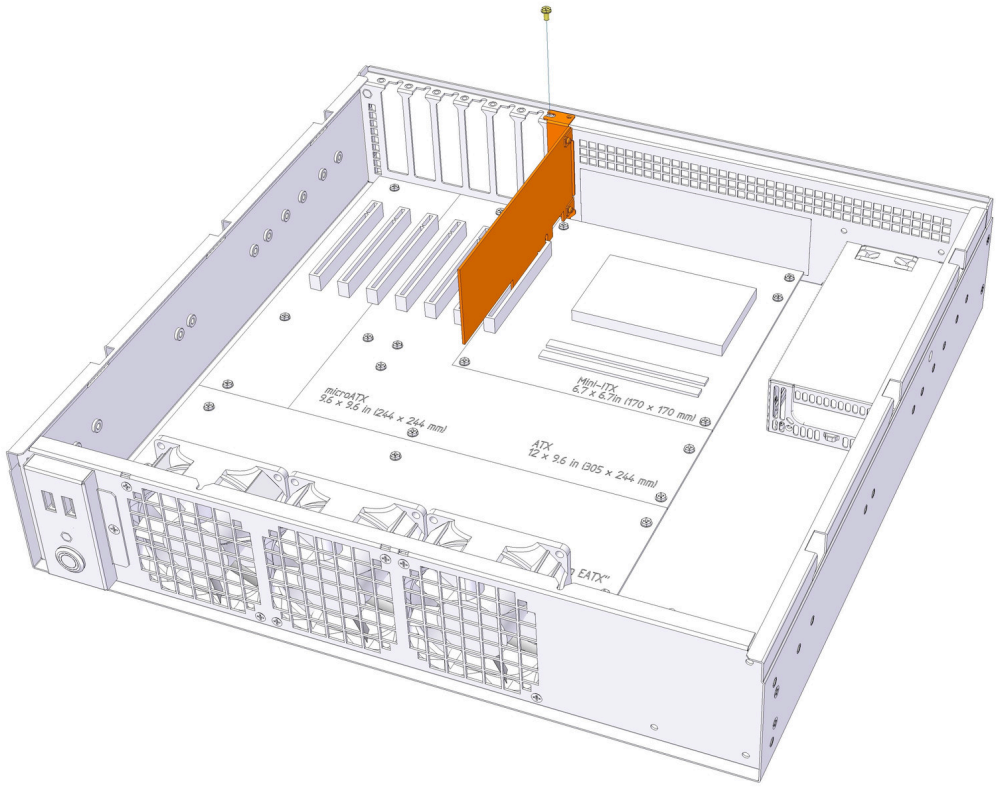

1. Prepare the slot

Select the PCIe slot specified by your motherboard manual. Remove the corresponding chassis slot covers and open the motherboard slot latch, if present.

2. Seat the card


Fit a low-profile (half-height) bracket to the card. Align the card with the motherboard slot and rear bracket opening, then apply gentle, even pressure until it is fully seated.

3. Secure the bracket

Fasten the card's mounting bracket to the chassis with yellow-patched 6-32 screws **(A)**. Fit slot covers **(G)** over unused openings and secure them with yellow-patched 6-32 screws **(A)**.

ⓘ Card height, including power connectors, must remain within **72 mm**. Cards may be listed as 2U height, low-profile, or MD1/MD2/MD3 form factor. Check the cooling-dependent length limits before installation.

Mount drives in the front drive cage

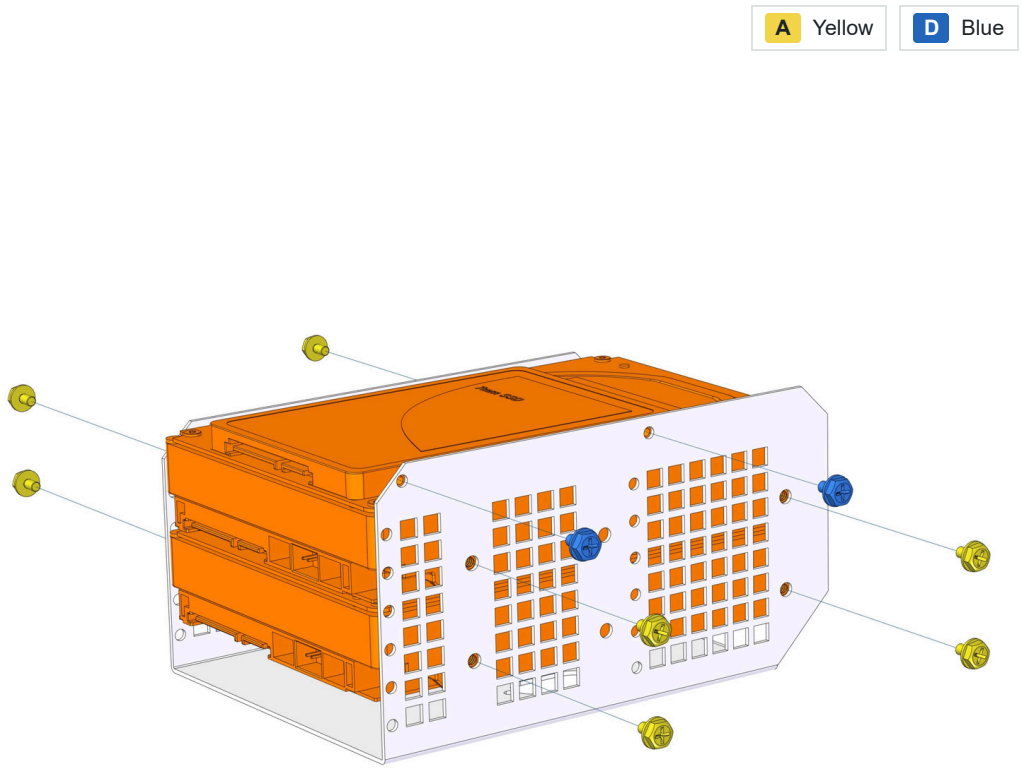


The front drive cage takes two 3.5-inch drives up to 25 mm thick, or up to seven 7 mm 2.5-inch SSDs. One SSD mounts above the 3.5-inch drives (up to 15 mm thick) and one below them (7 mm).

Mount the drives

Fasten 3.5-inch drives with yellow-patched 6-32 screws **(A)** and 2.5-inch SSDs with blue-patched M3 screws **(D)** through the cage side walls.


Mount drives in the rear drive bracket

1

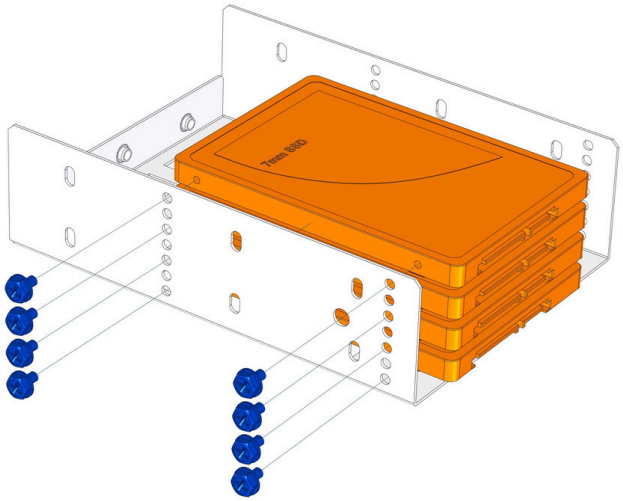

D Blue

2

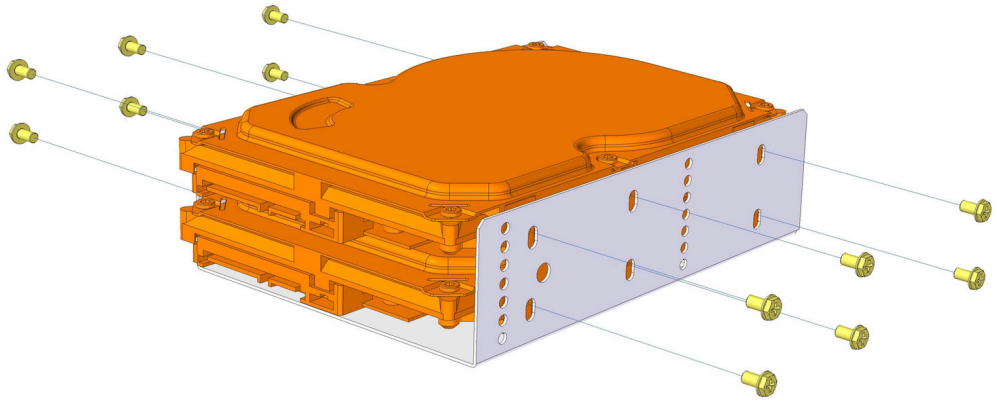

A Yellow

The rear drive bracket takes five 7 mm 2.5-inch SSDs, two 3.5-inch drives up to 20 mm thick, or one 3.5-inch drive and one 2.5-inch SSD up to 15 mm thick.

1. Mount 2.5-inch SSDs

Stack the SSDs in the bracket and fasten each with blue-patched M3 screws **(D)** through the bracket side walls.


2. Mount 3.5-inch drives

Fasten each 3.5-inch drive with yellow-patched 6-32 screws **(A)** through the bracket side walls.

ⓘ Connect data and power cables before reinstalling the bracket if access is limited.


Reinstall the rear drive bracket

1

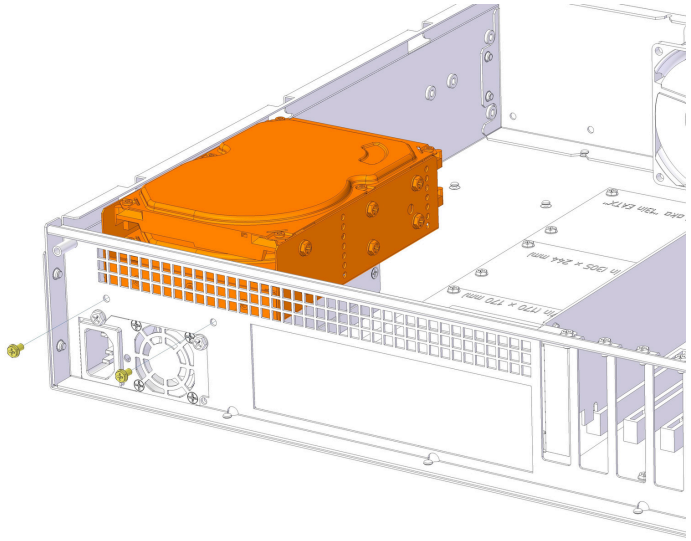

A Yellow

2

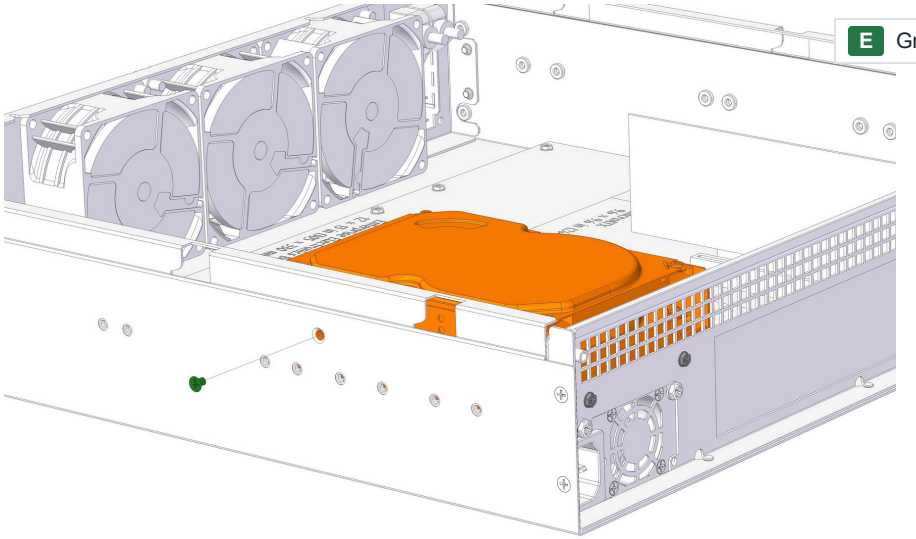

E Green

1. Secure the rear of the bracket


Lower the filled rear drive bracket into place beside the power supply. Install two yellow-patched 6-32 screws **(A)** through the rear panel.

2. Secure the side

Install one of the green-patched 6-32 screws **(E)** through the chassis side wall.

Reinstall the front drive cage

A Yellow

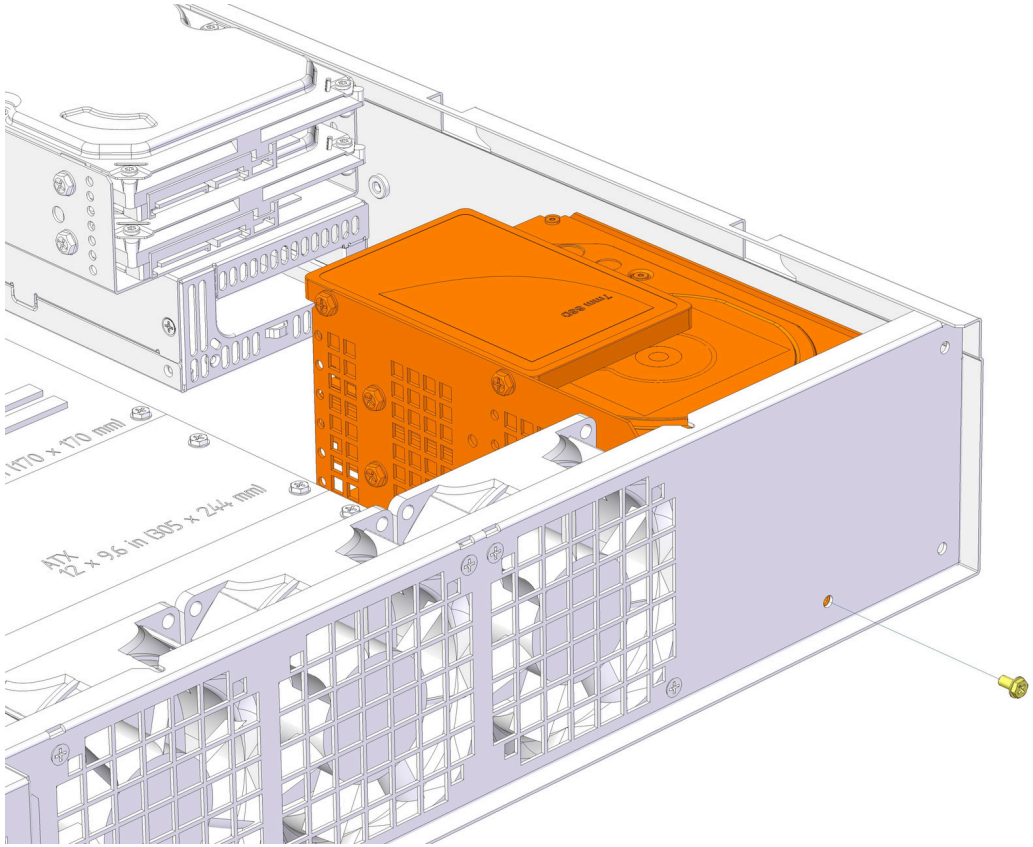

Reinstall the cage

Lower the filled cage into place behind the fans, slide it forward, and install the yellow-patched 6-32 screws **(A)** through the chassis side wall.

Route cables & close the chassis

1. Route and secure cables

Run drive, front-panel, PCIe, power and fan cables along the chassis side walls. Keep them clear of the fan blades and the CPU cooler.

Bundle excess slack and secure it with ties.

2. Close the chassis

Refit the faceplate. Align the lid flanges with the chassis slots, lower the lid, and slide it forward. Secure the lid with its two yellow-patched 6-32 screws **(A)**.

Warranty & support

WARRANTY POLICY

Sliger Designs LLC ("Sliger") warrants its Products, if properly used and installed, against defects in material and workmanship for the period stated on the product specifications. Under normal use and service, every hardware portion of the products will be free from physical defects in material and workmanship during the warranty period (excludes normal wear and tear), or the product will be repaired or replaced as determined solely by Sliger.

For full warranty and RMA policy visit :
https://www.sliger.com/support/warranty_and_rma/

SUPPORT AND SERVICE

If you have any questions or problems with the Sliger product you purchased, please don't hesitate to contact us via email or phone. Please include a detailed explanation of your problem and your order number.

For comments and suggestions, you can e-mail our design team, orders@sliger.com.

Lastly we would like to thank you for your support by purchasing this product.

For more information about Sliger Designs, please visit us online.

Website: sliger.com
Support Email: orders@sliger.com
Phone Number: 1 775 356 5595
Hours of Operation: 8a - 4:30p MST

Regulations

To the best of our knowledge, all computer chassis manufactured by Sliger Designs, LLC adhere to ROHS, REACH, and Conflict Minerals regulations. All Sliger products are produced in the United States of America and primarily utilize materials sourced domestically.

ROHS STATEMENT

This product is compliant to implemented RoHS (Restriction of Hazardous Substances) type regulations worldwide, including but not limited to China, India, Japan, Korea and European Union.

REACH STATEMENT

REACH (Registration, Evaluation, Authorization and Restriction of Chemicals, EC 1907/2006) is the European Union's (EU) chemical substances regulatory framework. REACH requires Sliger Designs, LLC to provide customers with sufficient information on Substances of Very High Concern (SVHC) contained in products in concentration above 0.1% weight by weight (w/w) to allow safe use of the product.

Certificates of Compliance are available upon request.

Manual revision history

Version	Date	Changes
v1.0	2026-11-13	Initial release