SUGER



CX2130a

13" DEEP 2U CHASSIS
4 × 80 MM FAN MOUNTS

ENGLISH

In this guide

This guide covers chassis access, component installation, and reassembly.

Choose your cooling configuration and check component clearances before starting assembly. Supported components may compete for the same space.

Before installation: Follow the installation instructions supplied with your motherboard, power supply, graphics card, and cooler.

Maintenance: Before opening a chassis that already has components installed, switch the system off and unplug it.

Fasteners: Tighten chassis fasteners by hand. Do not force a screw that does not thread correctly.


Exploded assembly & part key 2
Clearance drawing — top view 3
Front-view component clearances 4
Dimensions & compatibility 5
Hardware kit 6
Front ports & connections 7
Remove the lid 8
Remove the faceplate & filter 9
Install rack ears & handles 10
Install fans 11
Install an AIO cooler 12
Prepare the motherboard area 13
Install the motherboard 14
Install the power supply 15
Install a GPU or PCIe card 16
Route cables & close the chassis 17
Warranty & support 18
Regulations 19
Manual revision history 20

Exploded assembly & part key


Assembly part key

No.	Part	Related procedure
1	Lid	Remove the lid (page 8)
2	Faceplate	Remove the faceplate & filter (page 9)
3	Front I/O assembly	Front ports & connections (page 7)
4	Chassis wrap	Main chassis body
5	Filter foam	Remove the faceplate & filter (page 9)
6	Rack ear & pull handle	Install rack ears & handles (page 10)

See the hardware-kit page for the supplied fasteners and rack hardware.

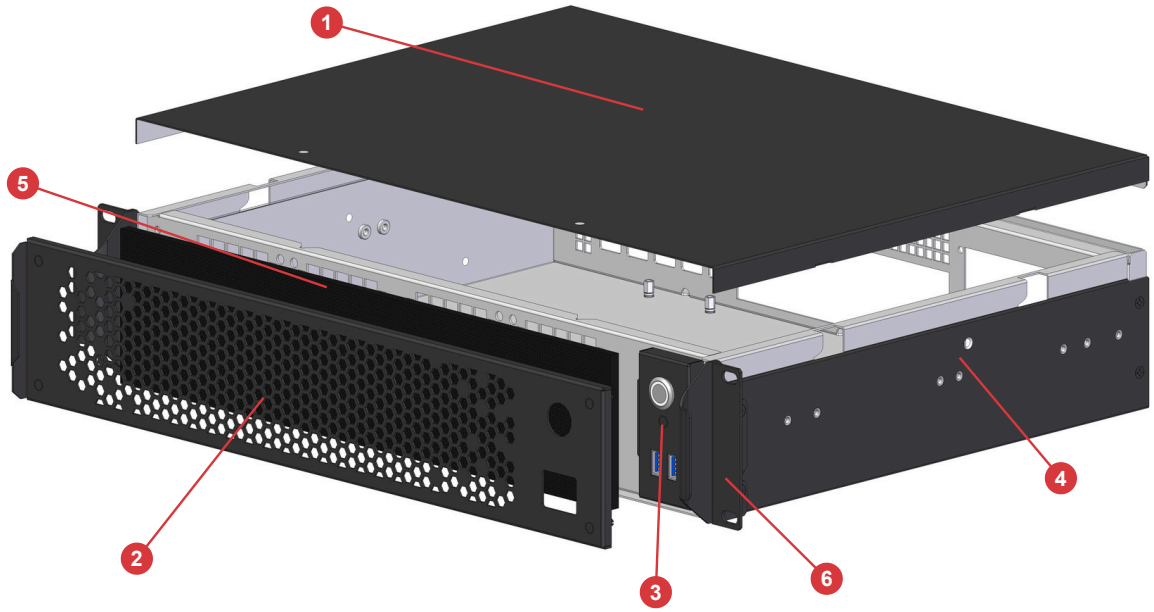


Clearance drawing — top view

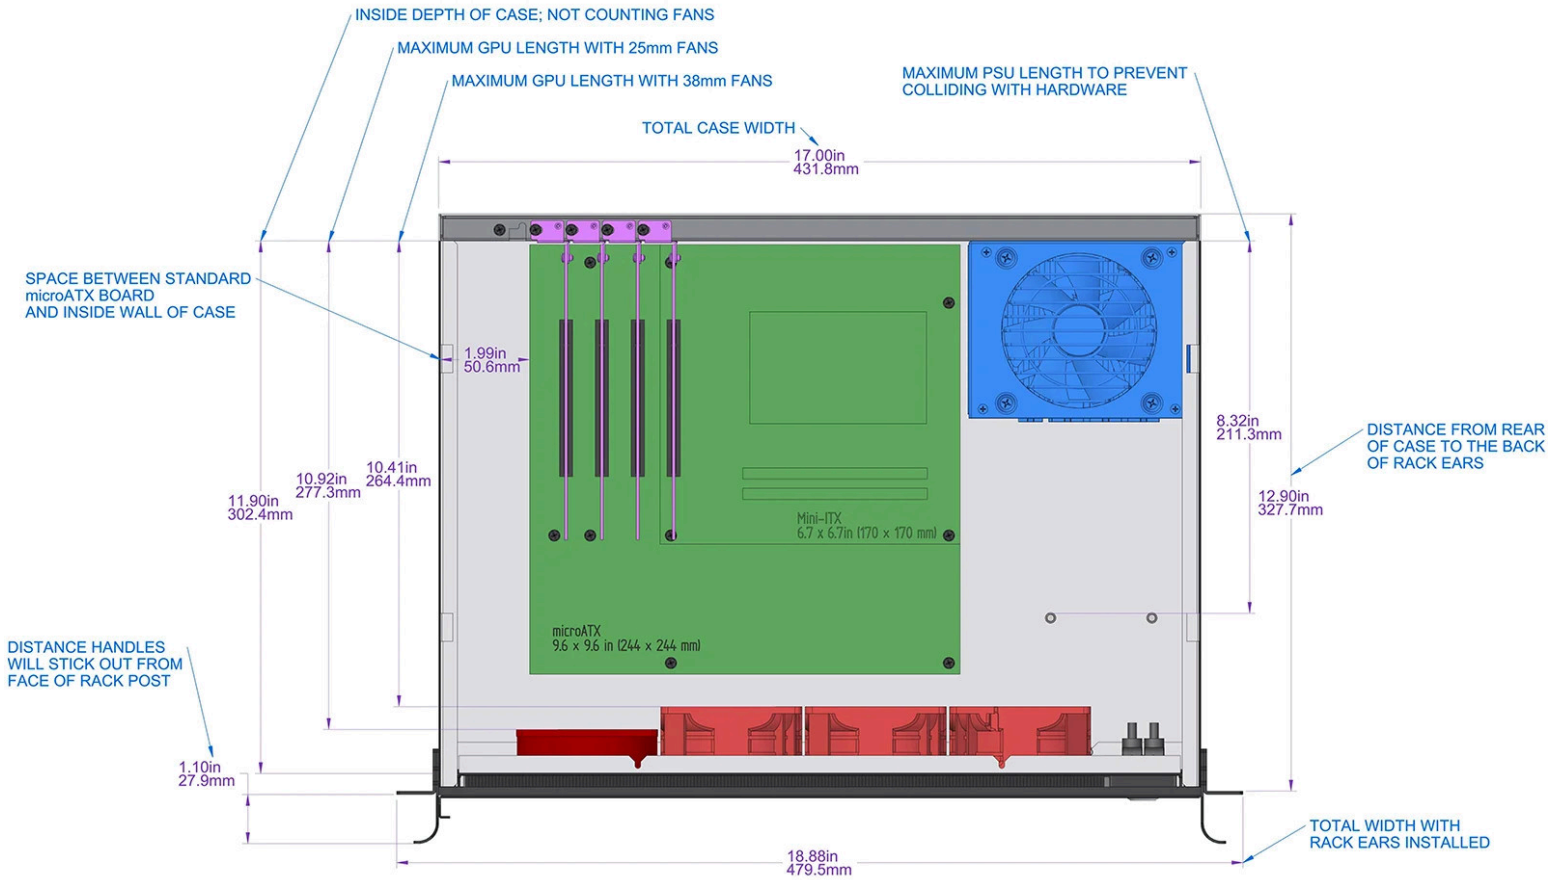

The top-view drawing shows the motherboard, power supply, front fans, drive mounting locations, and the GPU length available with each front cooling arrangement.

ⓘ Drawing dimensions are nominal. For compatibility, use the limits on the compatibility page.

Front-view component clearances

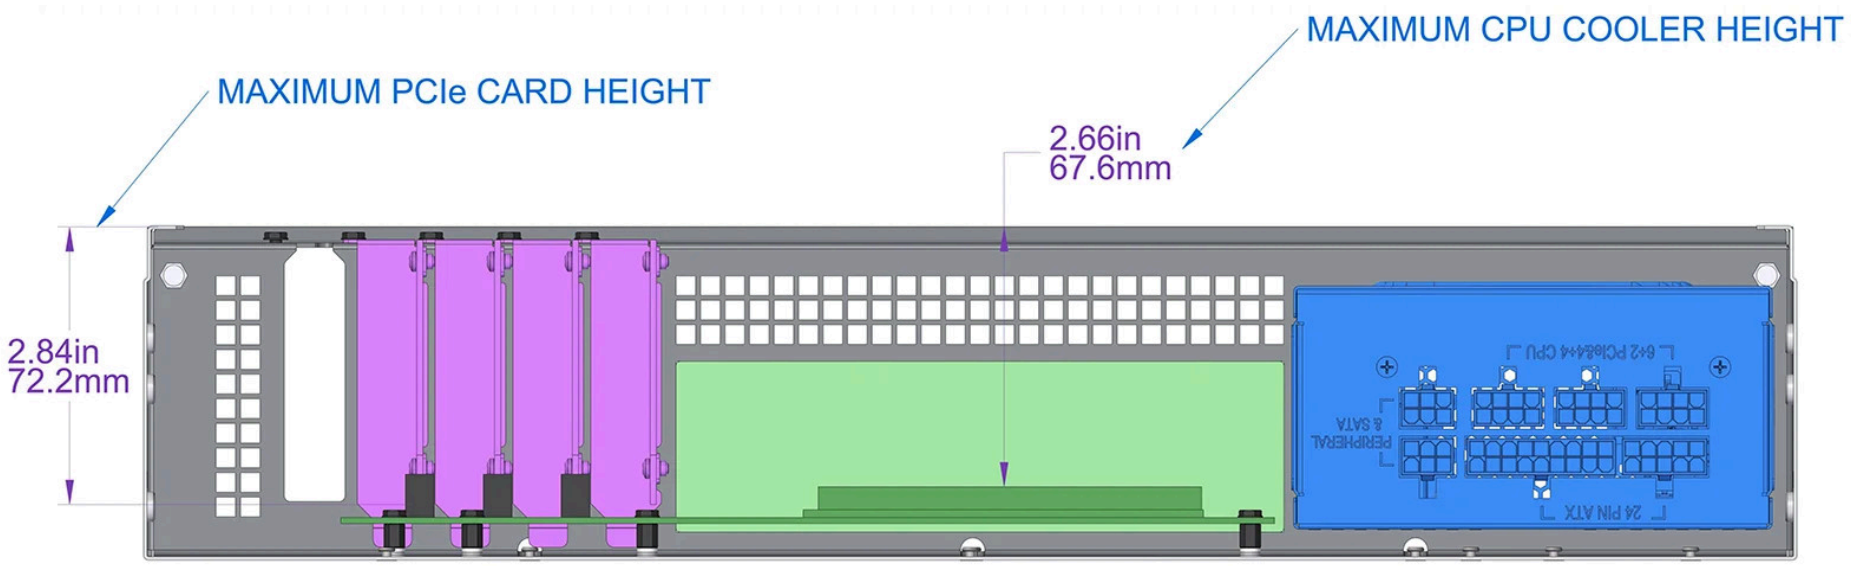

The front-view drawing illustrates expansion-card height, CPU-cooler height, and the power supply and drive positions.

ⓘ Drawing dimensions are nominal. For compatibility, use the limits on the compatibility page.

Dimensions & compatibility

Component	Specification
Outer dimensions, D × W × H	330.2 × 431.8 × 87.88 mm (13 × 17 × 3.46 inches)
Rack size	2U · 19-inch rack
Power supply	SFX or SFX-L
Motherboard	Mini-ITX, Deep Mini-ITX (6.7 × 8.2 inches), MicroATX, Deep MicroATX (10.4 × 10.5 inches)
CPU air cooler	Up to 66 mm tall
Front cooling	Four 80 mm fans, up to 38 mm thick
Liquid cooling	One 320 mm radiator: Dynatron L34 2U AIO with four 80 mm fans (tested and confirmed to fit)
Front bays	None
Expansion	Five half-height PCIe slots; cards up to 72 mm tall including power connectors
Storage	One M.2/NVMe drive on the motherboard; no 2.5- or 3.5-inch mounting locations. PCIe slots can take M.2 adapters

GPU length by cooling configuration

Configuration	Maximum length
No front fans	302 mm
Four 25 mm front fans	275 mm
Four 38 mm front fans	264 mm
Dynatron L34 AIO (radiator and four fans)	215 mm

ⓘ Radiator thickness, fan thickness and GPU length together must be less than 302 mm.

Hardware kit

Match the **letter and color** here to the references beside the installation illustrations and in each procedure. All rackmount chassis use screwbag **SBAG-HWKIT** (items A–F).

A 6-32 × 0.25-inch hex screws — 45 ×

Yellow-marked · Motherboard, PSU, HDDs, and PCIe accessories.



B M3 × 0.5 screws, 5 mm long — 10 ×

Red-marked · 2.5-inch SSDs and some 3.5-inch accessories.



C 6-32 hex standoffs — 20 ×

Teal in drawings; black, unpatched hardware · 0.125-inch and 0.25-inch lengths. Install in the motherboard tray.



D M3 screws (5 mm thread) — 16 ×

Blue-marked · 2.5-inch SSDs and some 3.5-inch accessories.



E 6-32 × 0.25-inch flat-head screws — 10 ×

Green-marked · Motherboard tray, subfront, internal brackets, and front I/O bracket.



F M4 × 7 mm screws — 7 ×

Pink-marked · Rack ears and pull handles.



G Slot covers — 7 ×

Cover unused PCIe slots (half-height, vented).



H Rack ears — 1 pair

Secure the chassis to the rack.




I Pull handles — 1 pair


Optional handles make pulling the chassis from the rack easier.




ⓘ Items G–I are separate chassis/accessory items. Illustrations are not to scale. Fan and radiator fasteners are supplied with the cooling components.

Front ports & connections

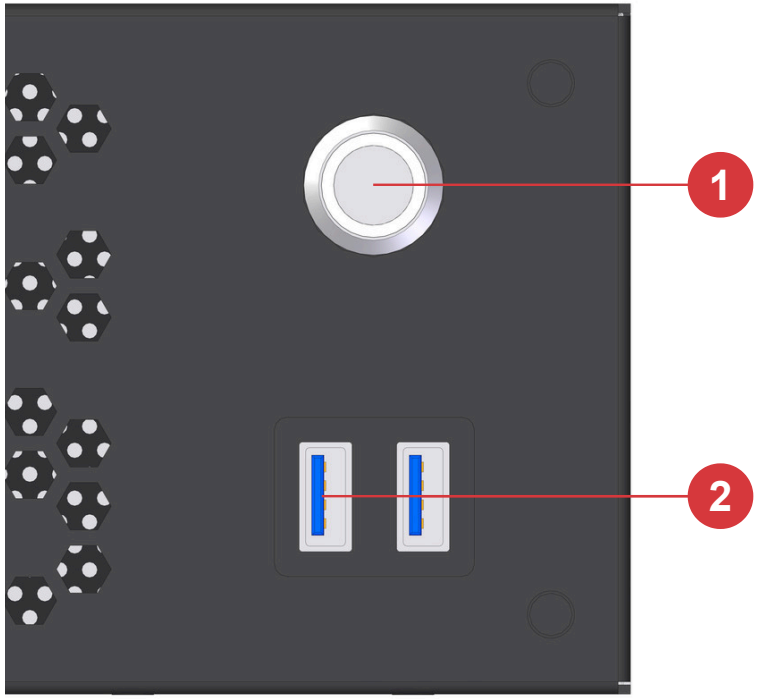

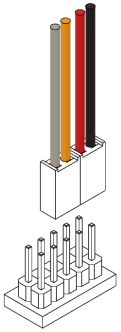

Power switch & status light

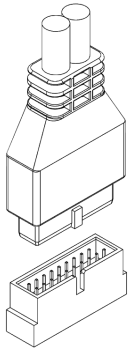


USB Type-A ports

No.	Port / connection
1	**Power switch & status light** Momentary switch with a white ring-shaped status light. Connect switch and LED leads to the front-panel header; observe the motherboard's LED polarity markings.
2	**USB Type-A ports** Two USB 3.0 Type-A ports, connected through the keyed internal USB cable shown.


ⓘ Use your motherboard manual to identify matching headers and pin assignments. The numbered front-panel locations correspond to the connector drawings and legend.

Remove the lid


1

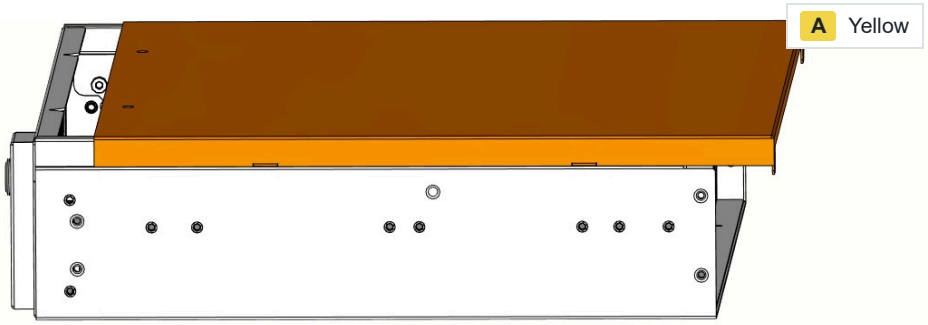

2

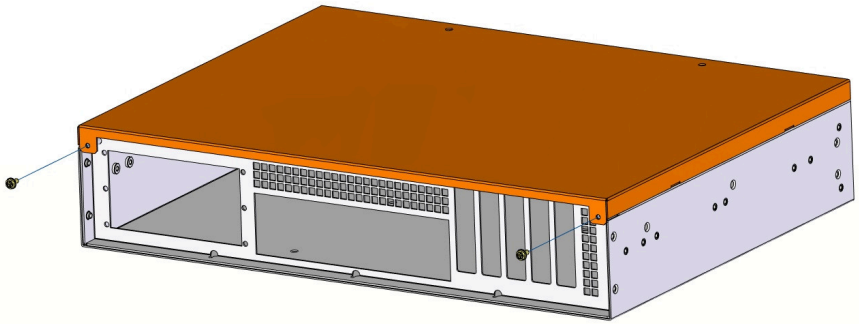

3

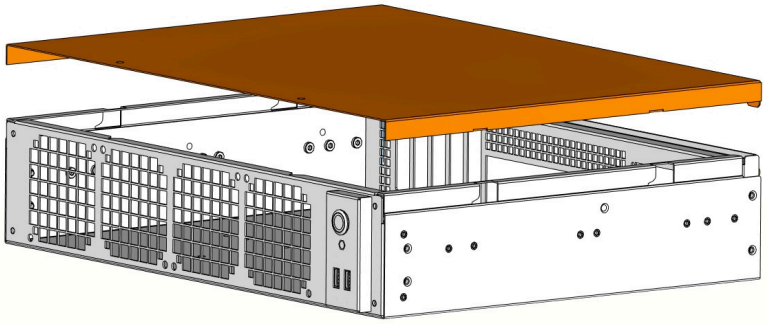

1. Remove the screws

Remove the two yellow-patched 6-32 screws **(A)** at the upper rear corners that secure the lid to the chassis.


2. Slide the lid back

Push the lid toward the rear of the chassis.

3. Lift the lid away

Check that the lid flanges have cleared the chassis slots. Lift the lid up and away.

Remove the faceplate & filter

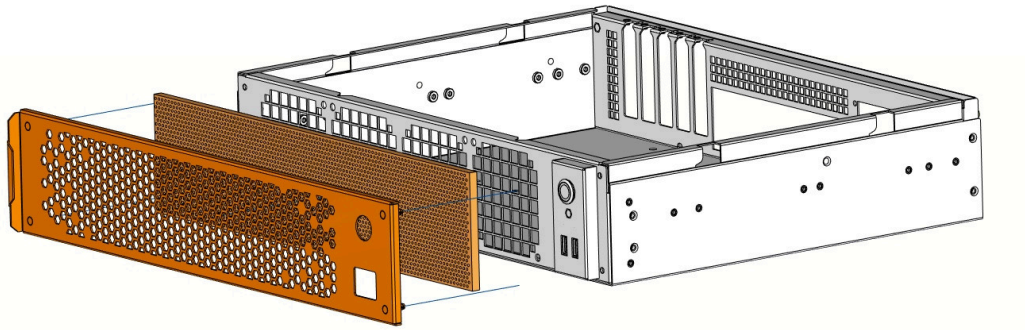

1. Release the left side

Pull on the left-side handle of the faceplate until its locating pins disengage, approximately ½ inch.


2. Release the right side

Gently pull the right side outward to remove the faceplate and dust filter.

Keep the faceplate and filter aside while installing front fans or a radiator.

Install rack ears & handles

F Pink | H | I

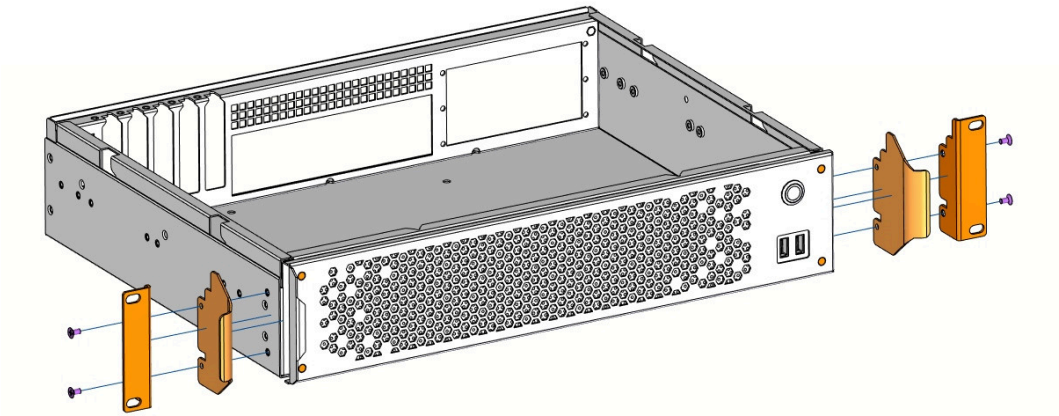

1. Align the hardware

If using pull handles, stack the rack ears **(H)** over the pull handles **(I)** with the handle facing away from the faceplate.


Rack ears can also be installed without handles.

2. Secure both sides

Install 4 pink-marked M4 × 7 mm screws **(F)** in total, 2 on each side, through the rack ears and handles into the chassis. Tighten by hand.

ⓘ Rack-slide installation depends on the rail kit. Follow the instructions supplied with the selected kit.

Install fans

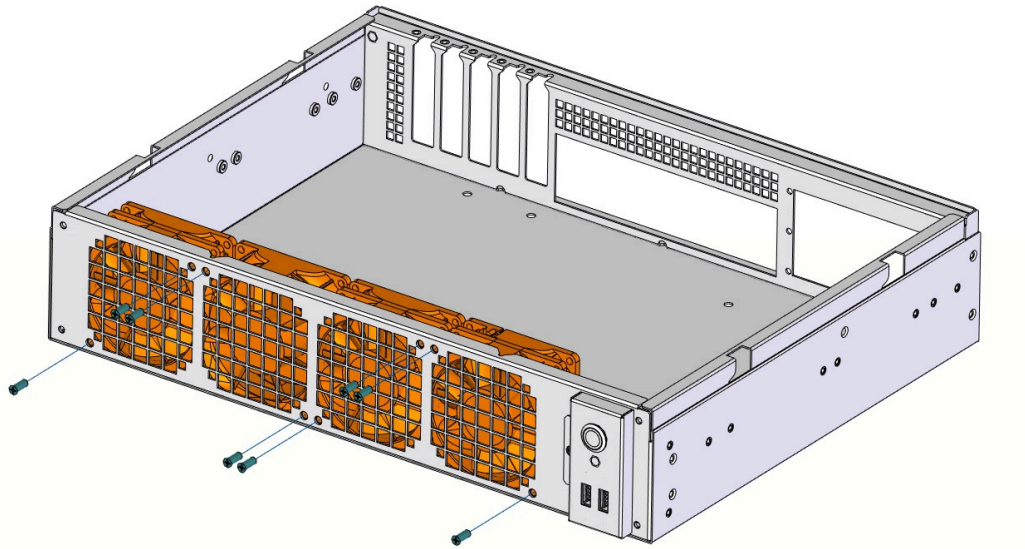

1. Align the fans

Align four 80 mm fans with the subfront, airflow into the chassis. Each fan uses two diagonal mounting points.

2. Secure the fans

Use the screws supplied with your fans. Pass them through the subfront and into the fan frames.


Tighten sufficiently to prevent movement and vibration.

Check GPU clearance


With 25 mm fans, maximum GPU length is **275 mm**; with 38 mm fans, **264 mm**. For an AIO configuration, continue to the next section before installing fans.

Install an AIO cooler

1

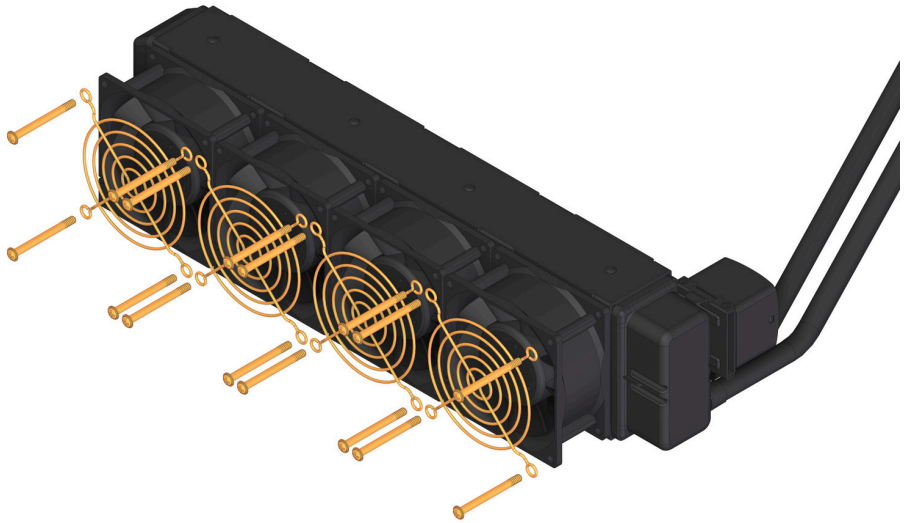

2

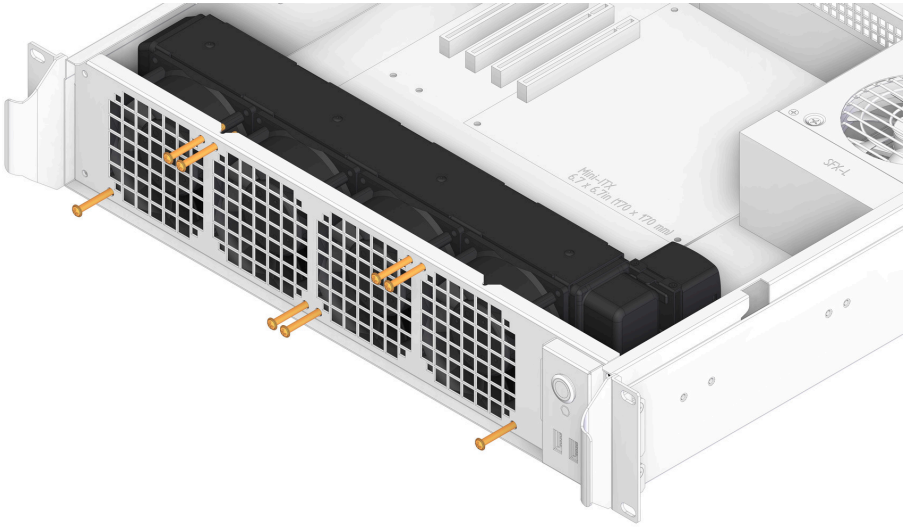

The Dynatron L34 2U AIO mounts on the subfront in place of the front fans, with its four 80 mm fans between the subfront and the radiator.

1. Remove the fan guards

Remove all the screws holding the fans and fan guards to the radiator, leaving the fans on the radiator. Set the fan guards aside; they are not used in the chassis. Keep the screws.

2. Mount the radiator


Hold the radiator and fans against the inside of the subfront, fans toward the front. Secure them through the subfront with half of the radiator screws, passing each screw through a fan into the radiator. Route the tubing to the CPU block clear of the PCIe slots.

Check component clearance

The L34 stack (radiator and fans) is 86.5 mm thick, leaving **215 mm** for the GPU.


Prepare the motherboard area

1

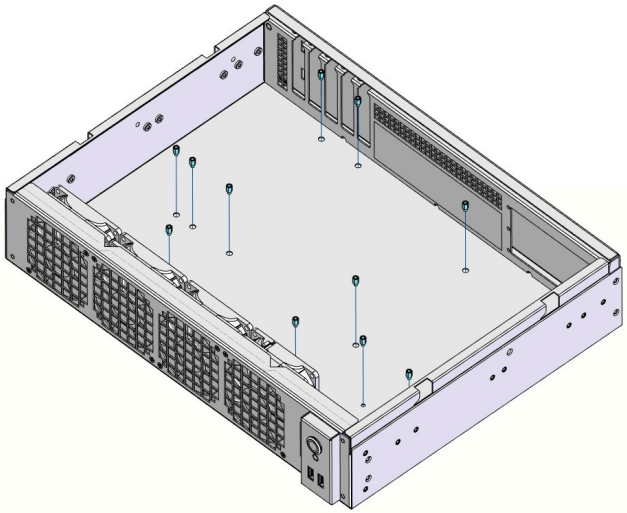

C Teal

2

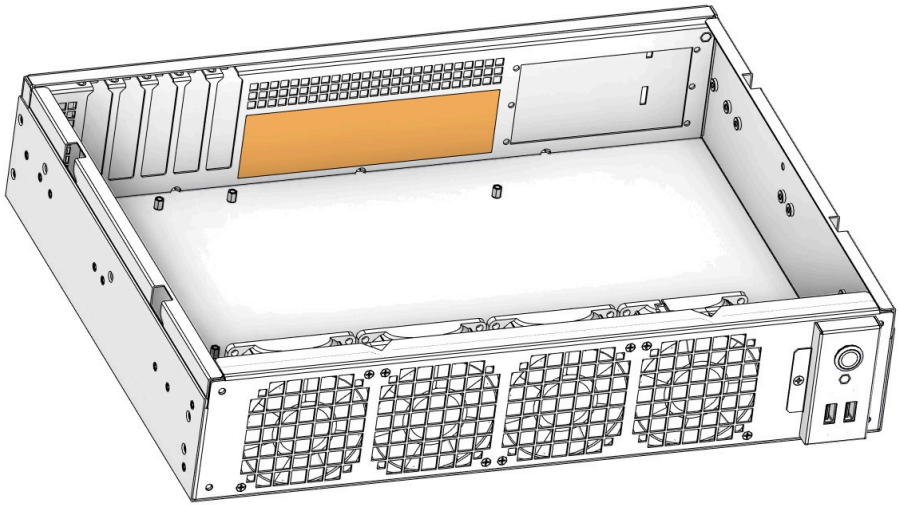

1. Install the standoffs

Match standoff positions to the mounting holes on your motherboard. Install the black hex standoffs **(C)** into the corresponding threaded locations in the chassis floor. The floor is marked with the outline of each supported board size.

Do not leave an extra standoff beneath a part of the board without a mounting hole.


2. Install the I/O shield

If your motherboard has a separate I/O shield, orient it to match the motherboard ports and press it into the rectangular opening in the chassis rear panel.

ⓘ Skip this step if the I/O shield is integrated into the motherboard.

Install the motherboard

A Yellow C Teal

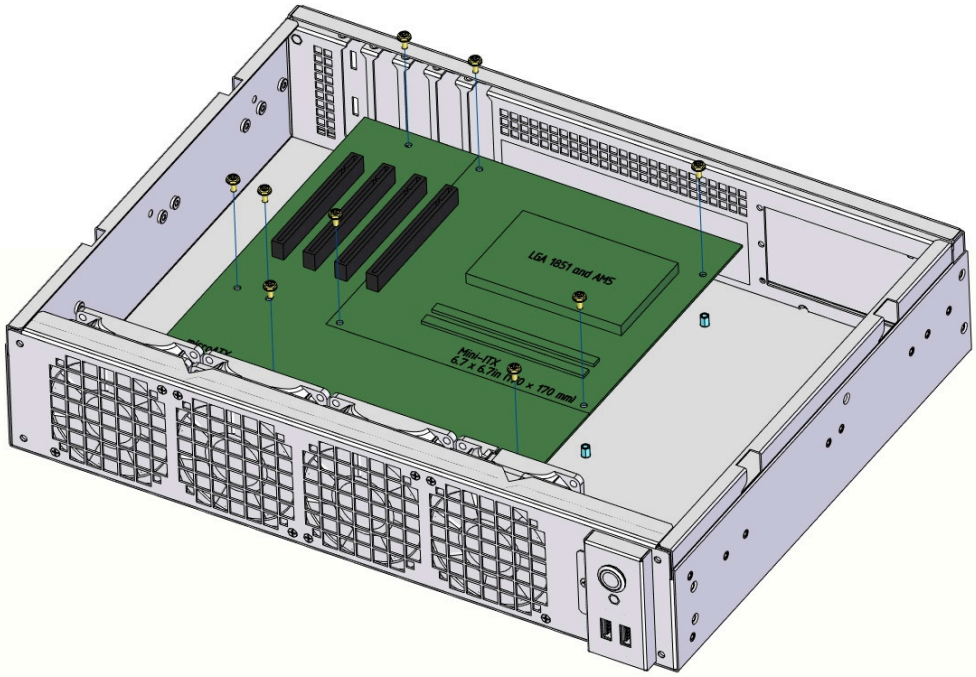

1. Lower the motherboard

Place the motherboard onto the black hex standoffs **(C)**. Align its rear ports with the I/O opening and its mounting holes with the standoffs.


2. Secure the board

Install yellow-patched 6-32 screws **(A)** through the board and into the standoffs.

Tighten by hand to avoid damaging the board or loosening the standoffs during future removal.

Follow your motherboard's instructions for CPU, memory, M.2 drives, and cable connections.

Install the power supply

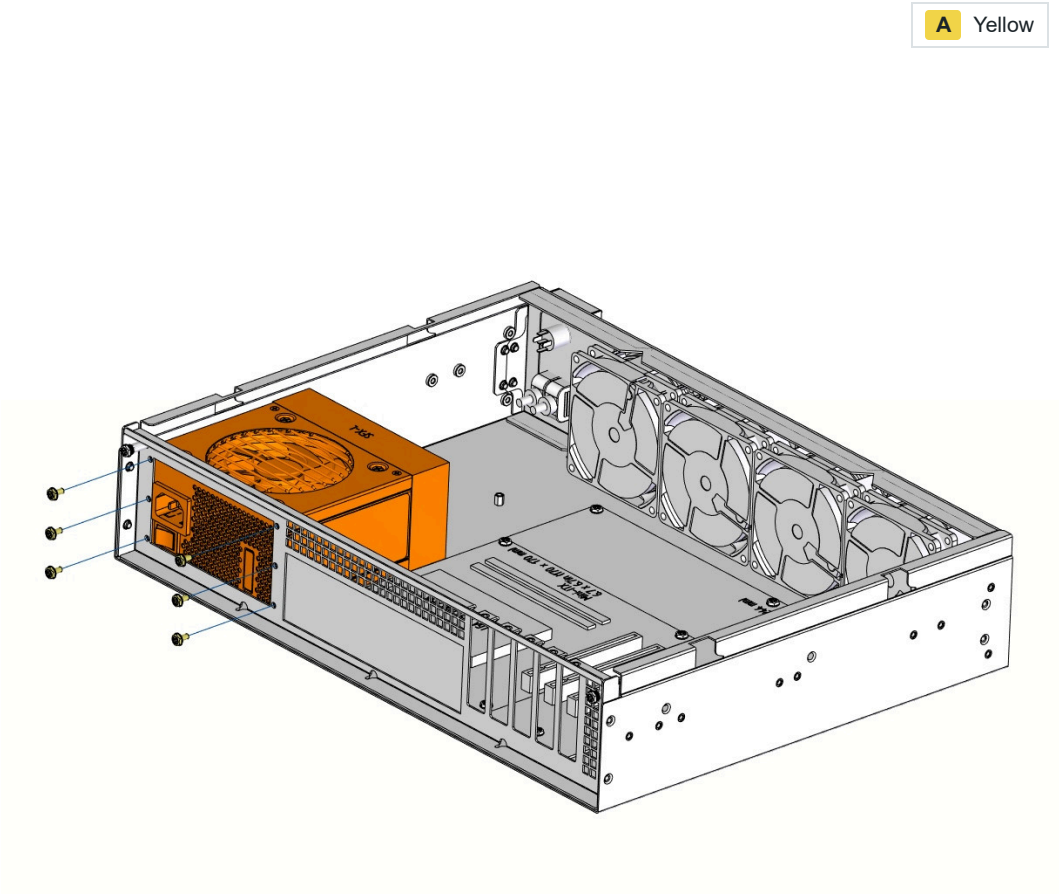

A Yellow

1. Position the SFX power supply


Place the SFX or SFX-L PSU in its mounting location at the rear of the chassis. Align its rear mounting holes with the openings in the rear panel and keep the fan intake clear.

2. Secure the PSU

Install yellow-patched 6-32 screws **(A)** through the rear panel into the PSU. Tighten by hand.

Install a GPU or PCIe card

A Yellow G

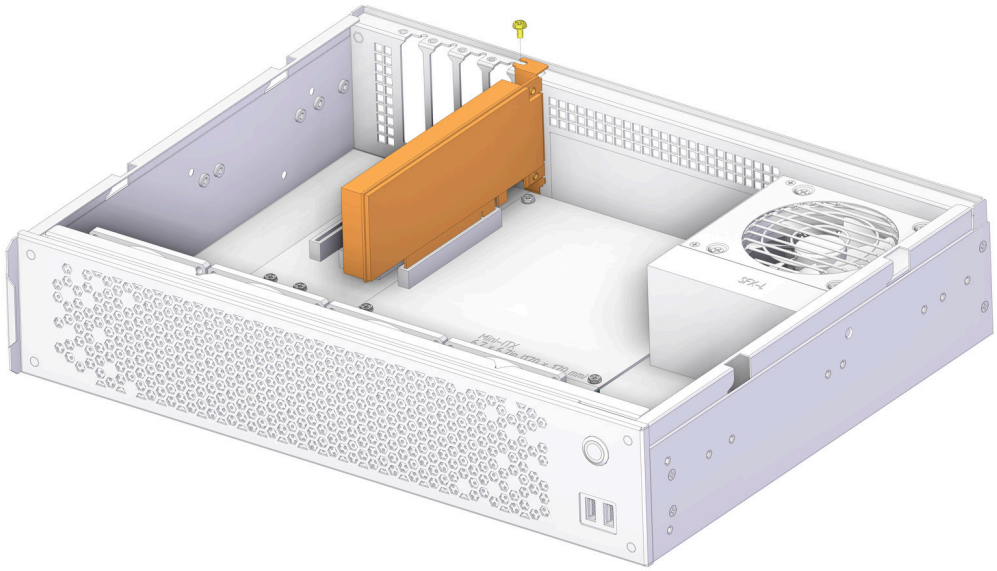

1. Prepare the slot

Select the PCIe slot specified by your motherboard manual. Remove the corresponding chassis slot covers and open the motherboard slot latch, if present.

2. Seat the card

Fit a low-profile (half-height) bracket to the card. Align the card with the motherboard slot and rear bracket opening, then apply gentle, even pressure until it is fully seated.

3. Secure the bracket

Fasten the card's mounting bracket to the chassis with yellow-patched 6-32 screws **(A)**. Fit slot covers **(G)** over unused openings and secure them with yellow-patched 6-32 screws **(A)**.

ⓘ Card height, including power connectors, must remain within **72 mm**. Cards may be listed as 2U height, low-profile, or MD1/MD2/MD3 form factor. Check the cooling-dependent length limits before installation.

Route cables & close the chassis

1. Route and secure cables

Run drive, front-panel, PCIe, power and fan cables along the chassis side walls. Keep them clear of the fan blades and the CPU cooler.

Bundle excess slack and secure it with ties.

2. Close the chassis

Refit the faceplate. Align the lid flanges with the chassis slots, lower the lid, and slide it forward. Secure the lid with its two yellow-patched 6-32 screws **(A)**.

Warranty & support

WARRANTY POLICY

Sliger Designs LLC ("Sliger") warrants its Products, if properly used and installed, against defects in material and workmanship for the period stated on the product specifications. Under normal use and service, every hardware portion of the products will be free from physical defects in material and workmanship during the warranty period (excludes normal wear and tear), or the product will be repaired or replaced as determined solely by Sliger.

For full warranty and RMA policy visit :
https://www.sliger.com/support/warranty_and_rma/

SUPPORT AND SERVICE

If you have any questions or problems with the Sliger product you purchased, please don't hesitate to contact us via email or phone. Please include a detailed explanation of your problem and your order number.

For comments and suggestions, you can e-mail our design team, orders@sliger.com.

Lastly we would like to thank you for your support by purchasing this product.

For more information about Sliger Designs, please visit us online.

Website: sliger.com
Support Email: orders@sliger.com
Phone Number: 1 775 356 5595
Hours of Operation: 8a - 4:30p MST

Regulations

To the best of our knowledge, all computer chassis manufactured by Sliger Designs, LLC adhere to ROHS, REACH, and Conflict Minerals regulations. All Sliger products are produced in the United States of America and primarily utilize materials sourced domestically.

ROHS STATEMENT

This product is compliant to implemented RoHS (Restriction of Hazardous Substances) type regulations worldwide, including but not limited to China, India, Japan, Korea and European Union.

REACH STATEMENT

REACH (Registration, Evaluation, Authorization and Restriction of Chemicals, EC 1907/2006) is the European Union's (EU) chemical substances regulatory framework. REACH requires Sliger Designs, LLC to provide customers with sufficient information on Substances of Very High Concern (SVHC) contained in products in concentration above 0.1% weight by weight (w/w) to allow safe use of the product.

Certificates of Compliance are available upon request.

Manual revision history

Version	Date	Changes
v1.0	2026-11-13	Initial release