

1. 1. Shipping List:


NAME	LONG U	MULTI-FUNCTIONAL BRACKET	SERVO DISC	SERVO
weight	1	1	2	2

Screw:

NAME	KM3*10MM	M3*8MM	M3 NUT	BEARING
qty	5	10	5	1


2. 2. Know the parts

From up to down, and from left to right, they are multi-functional bracket, servo disc, servo, long U bracket, M3*8 screw, km3*10 screw, m3 nut and bearing.


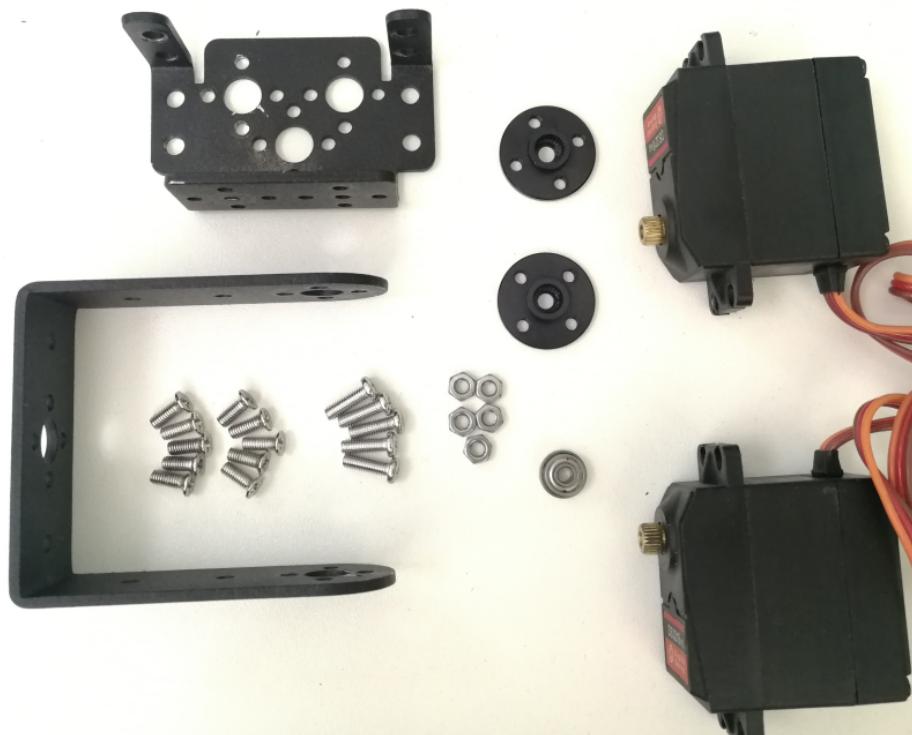



3. 3. Installation for 1st dof

- 1) Take out 1pcs multi-functional bracket, servo, servo disc, and 5pcs M3*8 screw, and fix them on the multi-functional bracket.
- 2) Then fix the servo to the multi-functional bracket, as shown the following pictures.

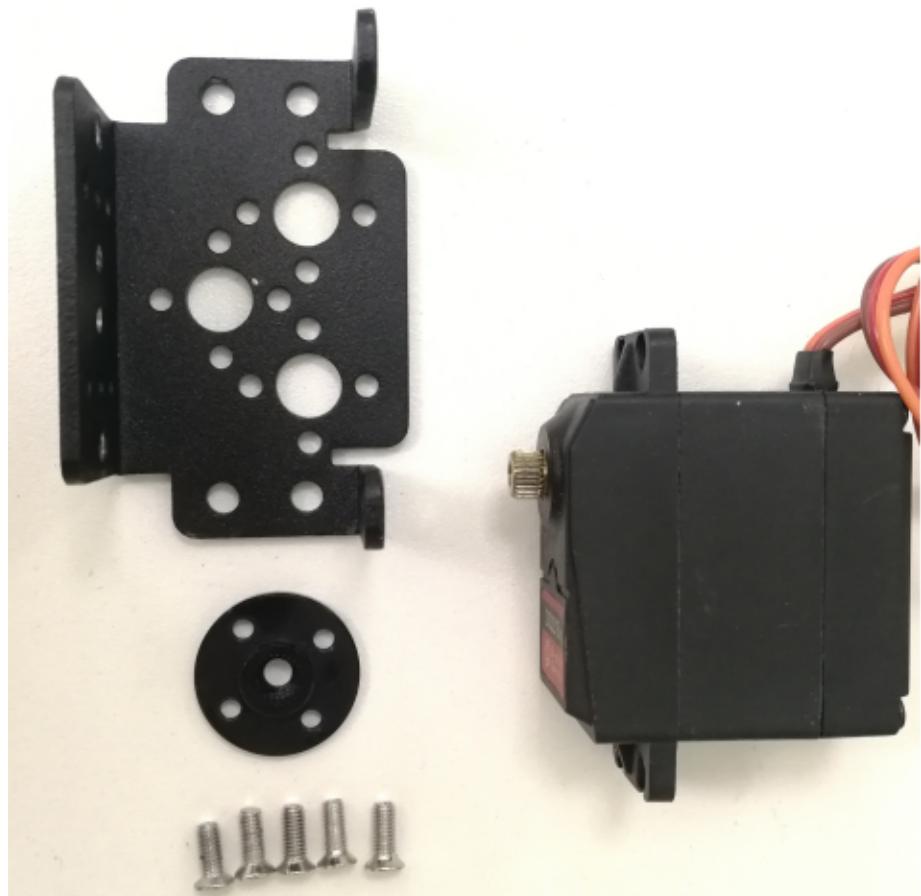



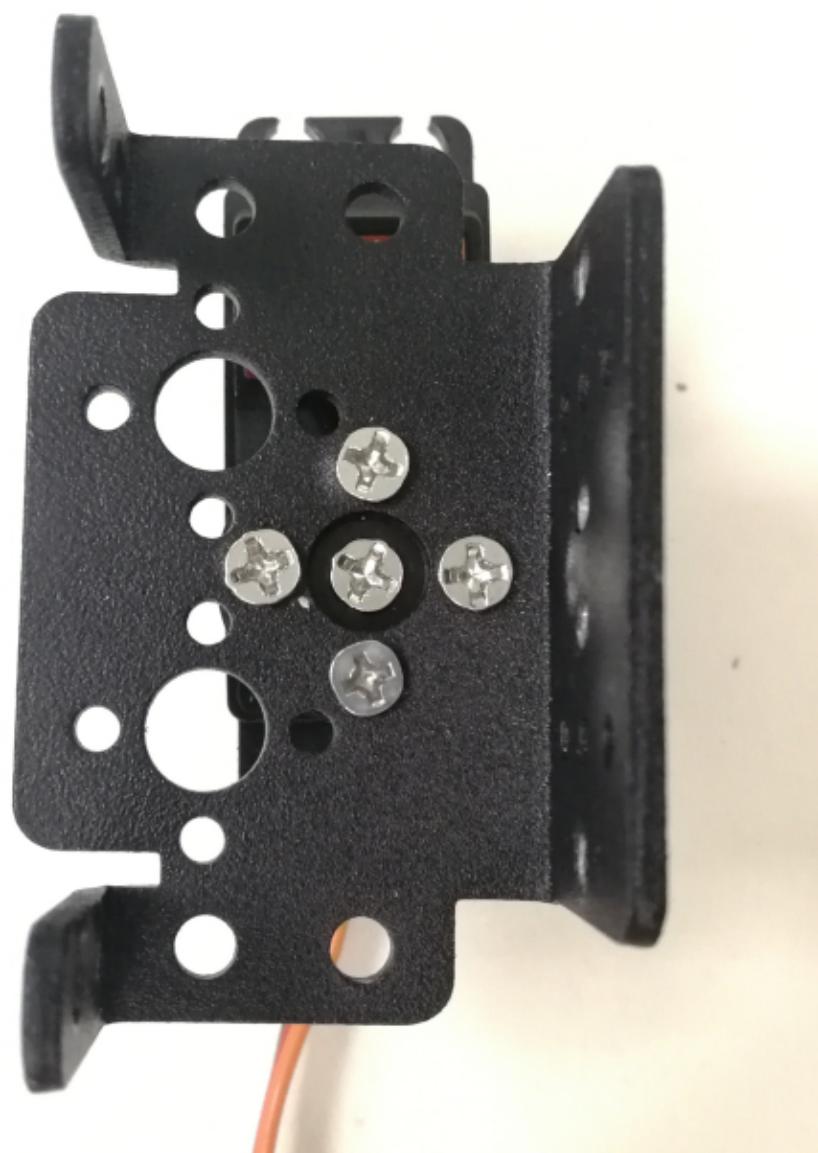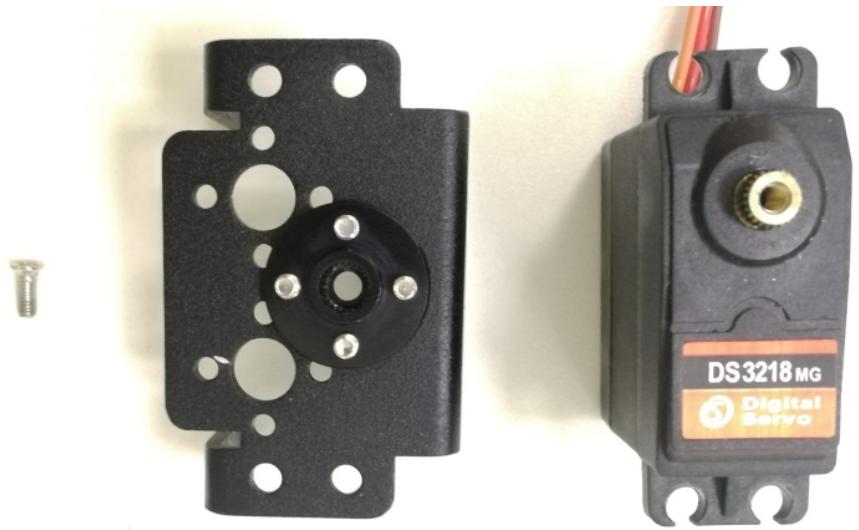


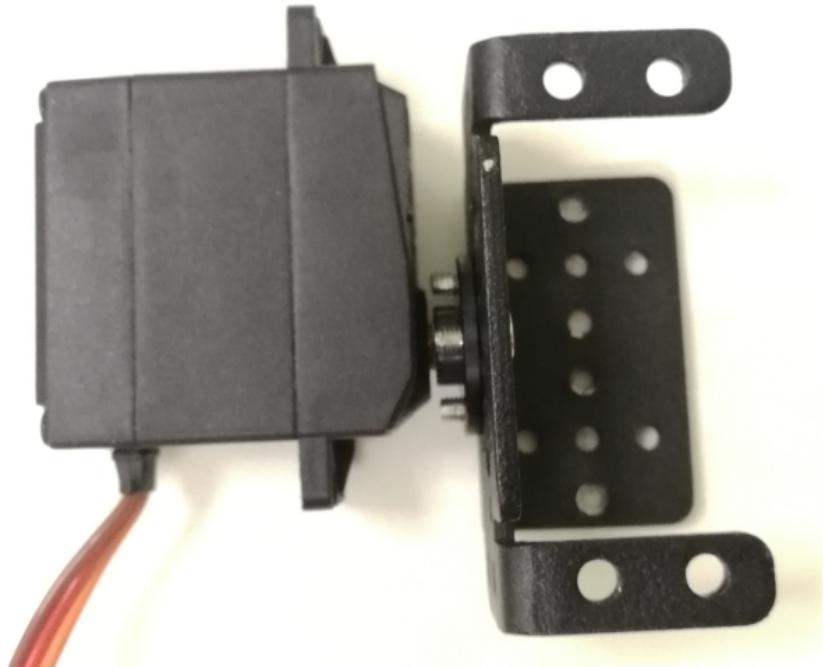

4. 4. Installation for 2nd dof

- 1) Firstly fix 1pcs KM3*10 screw to the multi-functional bracket.




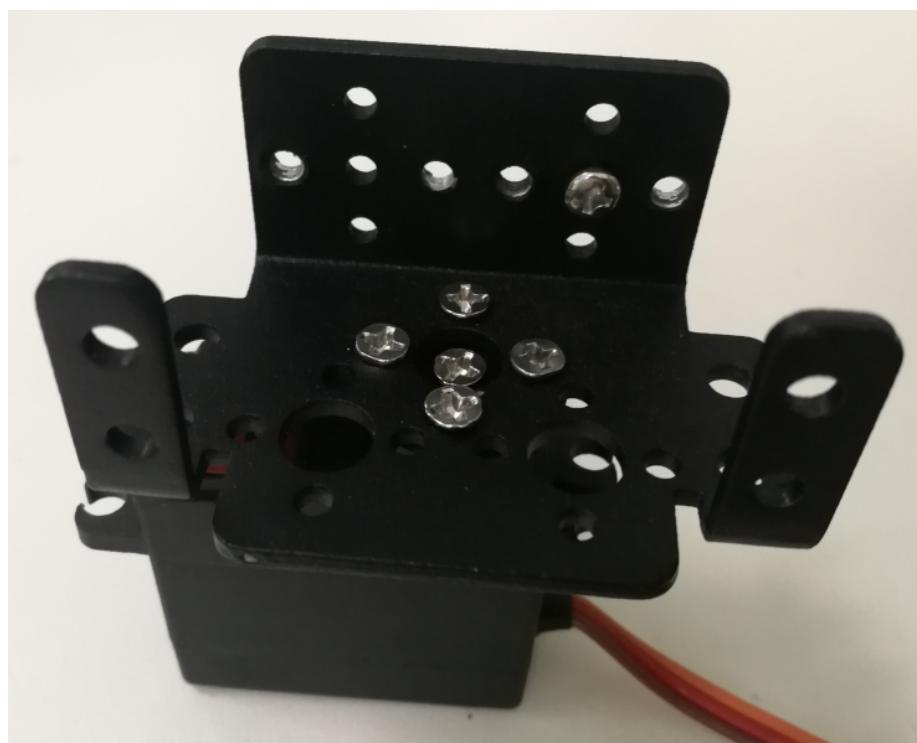




Then, use 4pcs KM3*10 screw and 4pcs M3 nut fix the 2nd servo to the multi-functional bracket.



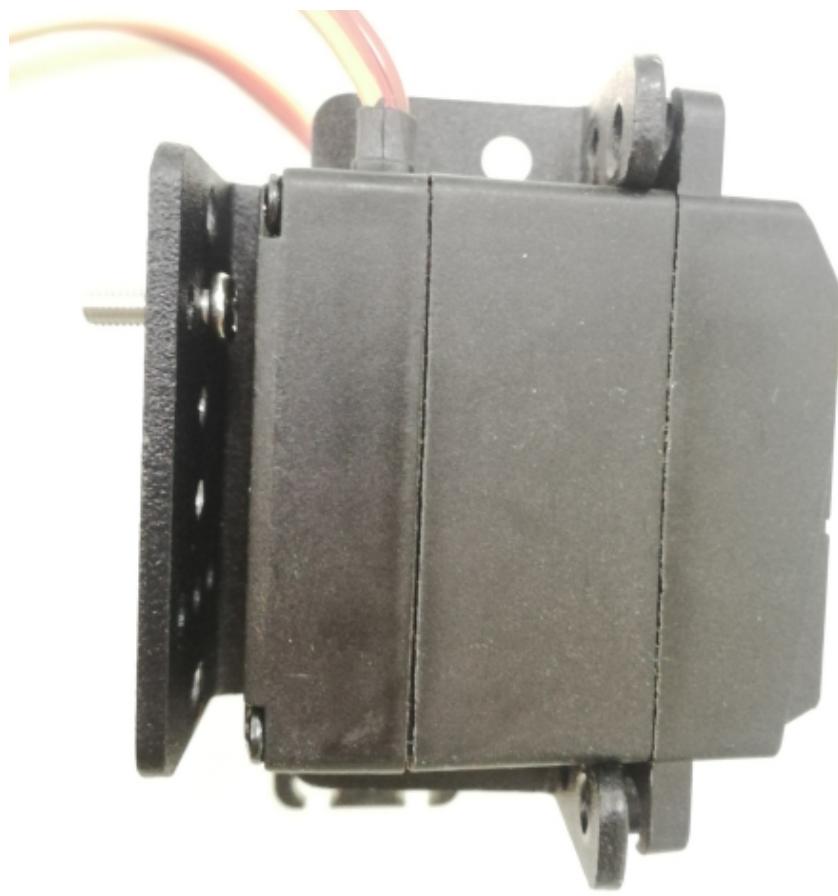

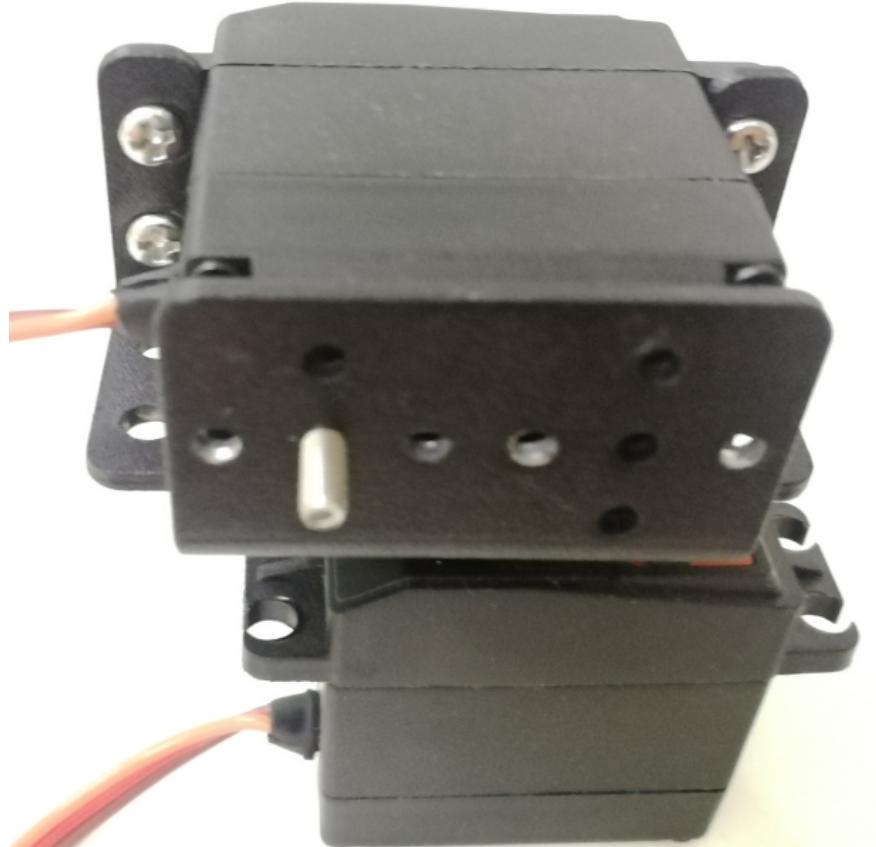

5. 5. Fix the long U to the bracket


1) Use 4 pcs M38 screw to fix the servo disc, and then use one pcs M38 screw to fix servo









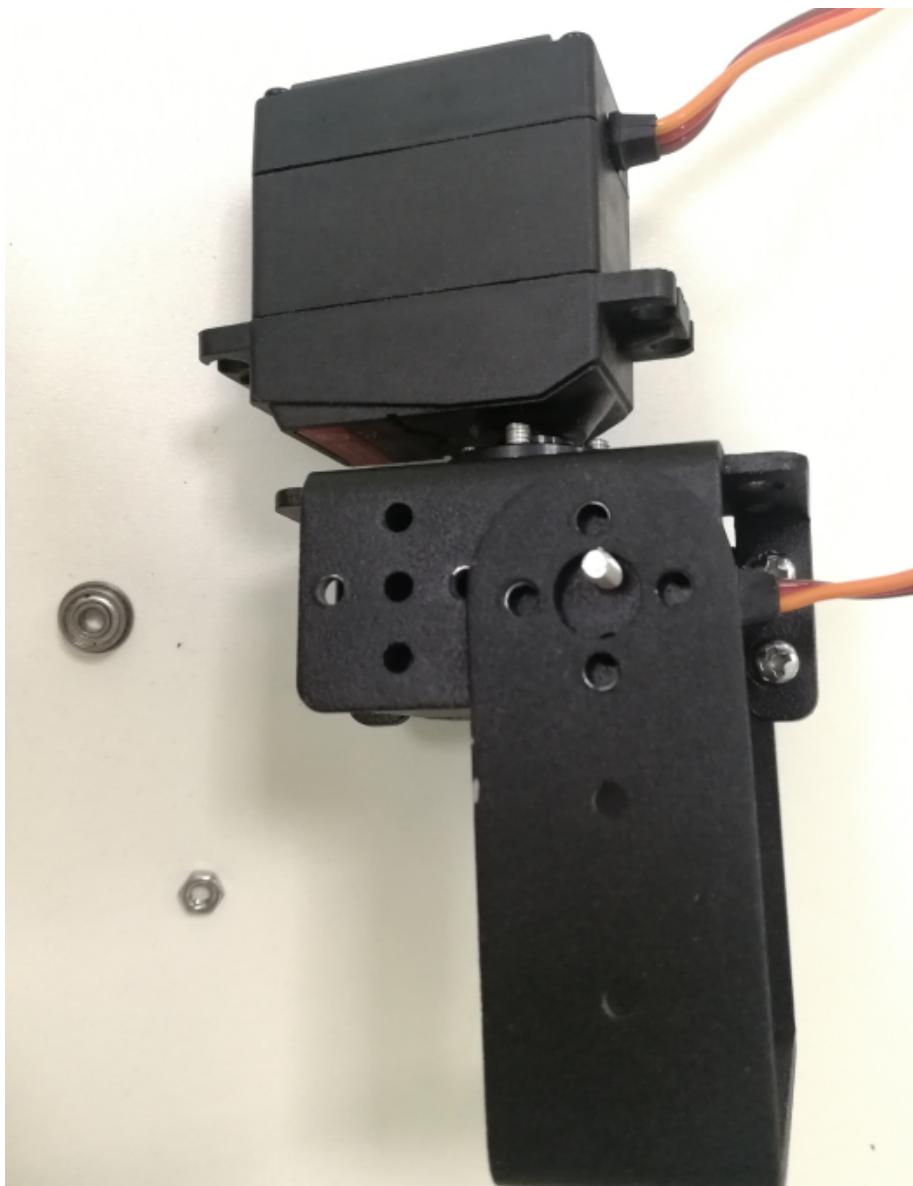

2) Firstly use bearing to insert into the M3 screw, and then use M3 nut to fix the multi-functional servo bracket.



