


API	Instruction code			Operand	Function
0300	D	MOV	P	S, D	Transferring data

Device	X	Y	M	S	T	C	HC	D	FR	SM	SR	E	K	16#	"\$"	F
S	●	●			●	●	●	●	●		○	○	○	○		○
D		●			●	●	●	●			○	○				

Data type	BOOL	WORD	DWORD	LWORD	UINT	INT	DINT	LINT	REAL	LREAL	TMR	CNT	STRING
S		●	●			●	●		●		●	●	
D		●	●			●	●		●		●	●	

Pulse instruction	16-bit instruction	32-bit instruction
AS	AS	AS

Symbol

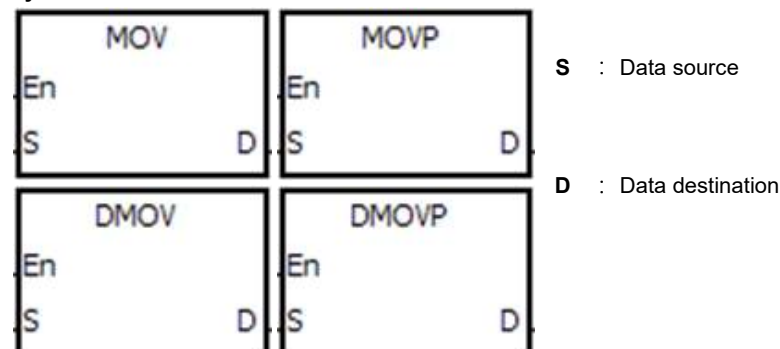


Explanation

1. This instruction transfers the data in **S** to **D**.
2. You must use a 32-bit instruction when the data in **S** is a floating-point number.
3. Only the 32-bit instructions can use the 32-bit counter, but not the device E.

Example

1. To transfer 16-bit data, use MOV.
 - When X0.0 is OFF, the data in D0 is unchanged. When X0.0 is ON, the instruction transfers 10 to the data register D0.
 - When X0.1 is OFF, the data in D10 is unchanged. When X0.1 is ON, the instruction transfers the current value of T0 to the data register D10.
2. For 32-bit data, use DMOV.
 - When X0.2 is OFF, the data in (D31, D30) and (D41, D40) is unchanged. When X0.2 is ON, the instruction transfers the current value in (D21, D20) to (D31, D30), and transfers the current value of HC0 to (D41, D40).
3. For floating-point numbers, use DMOVP.
 - When X0.3 is OFF, the data in (D51, D50) is unchanged. When X0.3 is ON, the instruction converts the floating-point number 3.450 into a binary floating-point number, and transfers the conversion result to (D51, D50).


NETWORK 1

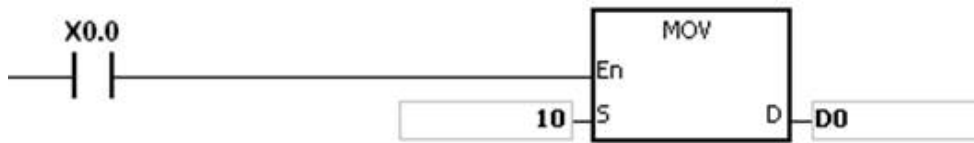

NETWORK 2



NETWORK 3

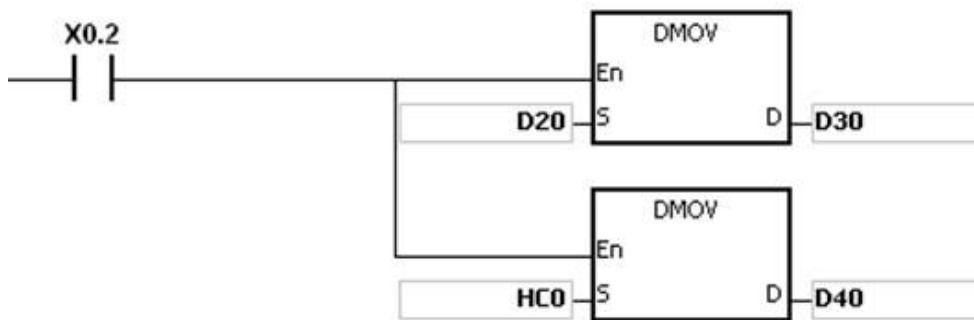

NETWORK 4

