

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

**TRANSMITTAL INFORMATION**

TO HOLDERS OF: COMPONENT MAINTENANCE MANUAL, PUB. NO. 25-30-02,  
COFFEE MAKER ASSEMBLY

REVISION NO. 010, DATED 11 JULY 2014

**Revision History**

B/E Aerospace Publication No. 25-30-02 has had 10 revisions as shown in the Table of Revisions.

**Table of Revisions**

| Revision Number | Revision Date |
|-----------------|---------------|
| 000             | 28 June 1995  |
| 001             | 05 July 1995  |
| 002             | 16 May 1996   |
| 003             | 03 Oct 1997   |
| 004             | 15 June 1998  |
| 005             | 06 Dec 1999   |
| 006             | 09 Aug 2002   |
| 007             | 25 Oct 2002   |
| 008             | 12 Aug 2004   |
| 009             | 29 Jul 2011   |
| 010             | 11 Jul 2014   |

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

THIS PAGE IS INTENTIONALLY LEFT BLANK.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

REVISION NUMBER 010 DATED 11 JULY 2014

**HIGHLIGHTS**

This Component Maintenance Manual (CMM) with Illustrated Parts List (IPL) has been reviewed for technical changes resulting from B/E Service Bulletins, B/E Service Information letters, configuration changes and part improvements. Any existing Temporary Revisions (TRs) against this CMM have been incorporated with this revision. The part numbers 11050-1, 11050-3, 11050-5, 11050-7, 11050-31, and 280001-11 are obsolete and are deleted in the Illustrated Parts List (IPL) section. Updated the procedures related to the deleted part numbers in the Component Maintenance Manual (CMM).

This CMM and IPL have been completely revised and reformatted. Please replace the old copies of this manual with this Revision Number 010 dated 11 July 2014. A description of the changes follows.

| SECTION AND PAGES                                | CHANGE DESCRIPTION                                                  |
|--------------------------------------------------|---------------------------------------------------------------------|
| Transmittal Sheet,<br>TL-1 and TL-2              | Added to reflect current revision.                                  |
| Title Page, T-1                                  | Updated to reflect current revision.                                |
| Alert Page, A-1                                  | Updated to reflect current revision.                                |
| Record of Revisions,<br>ROR-1                    | Updated Record of Revisions to reflect current revision.            |
| Record of Temporary Revisions,<br>RTR-1          | Updated Record of Temporary Revisions to reflect current revision.  |
| Service Bulletin List,<br>SBL-1                  | Added new SBs to the list.                                          |
| Service Information Letter List,<br>SIL-1        | Added new SILs to the list.                                         |
| List of Effective Pages,<br>LEP-1 and LEP-2      | Updated List of Effective Pages to reflect current revision.        |
| Introduction,<br>INTRO-2                         | Updated Abbreviation Table to reflect current revision.             |
| Testing and Fault Isolation,<br>1005             | Updated paragraph 2.P as per TR-10B.                                |
| Schematics and Wiring Diagrams,<br>2005 and 2006 | Updated Schematics and Wiring Diagrams to reflect current revision. |
| Assembly,<br>7001                                | Added Petroleum Jelly as a consumable in Table 7001.                |
| Assembly,<br>7004                                | Updated the torque value for screws as per current drawing.         |
| Assembly,<br>7007 and 7008                       | Added a Note in paragraphs 2.L.(3) and 2.M.(3).                     |

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

| SECTION AND PAGES                            | CHANGE DESCRIPTION                                                                           |
|----------------------------------------------|----------------------------------------------------------------------------------------------|
| Special Tools, Fixtures, and Equipment, 9002 | Added Petroleum Jelly as a consumable in Table 9001.                                         |
| Illustrated Parts List, 10001 and 10002      | Added new vendor codes and updated Table 10001 as per manual usage.                          |
| Illustrated Parts List, 10004                | Updated Effectivity Guide (Table 10002).                                                     |
| Illustrated Parts List, 10006 through 10037  | Updated the Alpha/Numerical Index and the DPL-1, DPL-1A as per current drawing and standard. |
| Illustrated Parts List, 10039                | Changed from 2nd Indenture to 1st Indenture from item 20 thru -75A.                          |
| Illustrated Parts List, 10041 through 10072  | Updated DPL-2 to DPL-8 as per current drawing and standard.                                  |



# **COFFEE MAKER ASSEMBLY**

## **PART NUMBERS**

**11050-11**

**11225-3**

**11225-31**

**MODEL 1100**

# **COMPONENT MAINTENANCE MANUAL WITH ILLUSTRATED PARTS LIST**

*ORIGINALLY ISSUED 28 JUNE 1995*

B/E Aerospace, Inc.  
Commercial Aircraft Products Group  
Beverage Maker Products  
10800 Pflumm Road  
Lenexa, KS 66215  
TEL: 913-338-9800  
FAX: 913-469-4032  
CAGE: 63367

THIS CMM EMBODIES A PROPRIETARY DESIGN, ORIGINATED BY B/E AEROSPACE AND ALL DESIGN MANUFACTURING, REPRODUCTION (EXCEPTING WHERE THE RECIPIENT HAS BEEN GIVEN THE EXPRESS RIGHT BY WRITTEN AGREEMENT TO REPRODUCE THE CMM), USE AND SALE RIGHTS REGARDING THE SAME ARE EXPRESSLY RESERVED. IT IS SUBMITTED UNDER A CONFIDENTIAL RELATIONSHIP FOR A SPECIFIC PURPOSE. THE RECIPIENT AGREES BY ACCEPTING THIS CMM NOT TO SUPPLY OR DISCLOSE ANY INFORMATION REGARDING IT TO ANY UNAUTHORIZED PERSON, OR TO INCORPORATE IN OTHER PROJECTS ANY SPECIAL FEATURES PECULIAR TO THIS DESIGN. ALL PATENT RIGHTS HERETO ARE EXPRESSLY RESERVED BY B/E AEROSPACE, INC.

THIS DOCUMENT CONTAINS U.S. ORIGIN TECHNICAL DATA 9E991 AS DEFINED BY THE UNITED STATES EXPORT ADMINISTRATION REGULATIONS (EAR) (15 CFR 730-774). AN EXPORT LICENSE MAY BE REQUIRED BEFORE IT IS USED FOR DEVELOPMENT, PRODUCTION OR USE BY FOREIGN PERSONS FROM SPECIFIC COUNTRIES. THE CONTROLLER OF THIS DATA HAS THE INDIVIDUAL RESPONSIBILITY TO ABIDE BY ALL EXPORT LAWS.

**25-30-02**

Page T-1  
11 Jul 2014  
Rev 010

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

## **ALERT**

THIS COMPONENT MAINTENANCE MANUAL IDENTIFIES REPLACEMENT PARTS AND REPAIR PROCEDURES SPECIFICALLY ENGINEERED FOR BEVERAGE MAKER PRODUCTS MANUFACTURED BY B/E AEROSPACE, INC., COMMERCIAL AIRCRAFT PRODUCTS GROUP. B/E PARTS ARE MANUFACTURED UNDER STRINGENT QUALITY CONTROL PROCESSES. USING NON-B/E PARTS MAY JEOPARDIZE YOUR WARRANTY AND RESULT IN DEGRADED PRODUCT PERFORMANCE. ALL MODIFICATIONS SHOULD BE COORDINATED IN ADVANCE TO AVOID THIS POSSIBILITY.

THE INFORMATION IN THIS DOCUMENT IS CONFIDENTIAL AND MAY NOT BE DISCLOSED WITHOUT WRITTEN PERMISSION OF B/E AEROSPACE, INC. ©2014 B/E AEROSPACE, INC.

PLEASE REFER TO THE ATA NUMBER AND THE BASE PART NUMBER IN ALL CORRESPONDENCE TO B/E AEROSPACE, INC. REGARDING THIS COMPONENT MAINTENANCE MANUAL AND ILLUSTRATED PARTS LIST.

FOR TECHNICAL SUPPORT, TO CONFIRM REVISION STATUS, OR TO MAKE A PUBLICATION REQUEST, REFERENCE [http://www.beaerospace.com/support/customer\\_support.htm](http://www.beaerospace.com/support/customer_support.htm)



**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

THIS PAGE IS INTENTIONALLY LEFT BLANK.





**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

THIS PAGE IS INTENTIONALLY LEFT BLANK.

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

TASK 25-30-02-990-803-A01

**SERVICE BULLETIN LIST**

All Service Bulletins will be incorporated into the Component Maintenance Manual (CMM).

| SERVICE BULLETIN /<br>REVISION NUMBER | ISSUE DATE  | DATE INCORPORATED<br>OR NO EFFECT | TITLE                                                            |
|---------------------------------------|-------------|-----------------------------------|------------------------------------------------------------------|
| SB-25-30-02-2                         | 19 Nov 1996 | 16 May 1996                       | Producibility And Reliability ECN's                              |
| SB-25-30-02-3                         | 10 Oct 1997 | 03 Oct 1997                       | Producibility And Reliability ECN's                              |
| SB-25-30-02-4                         | 15 Jun 1998 | 15 June 1998                      | Producibility And Reliability ECN's                              |
| SB-25-30-02-5                         | 02 Dec 1999 | 06 Dec 1999                       | Coffee Maker Relay Socket<br>Producibility And Reliability ECN's |
| SB-25-30-02-6                         | 29 Nov 1999 | 06 Dec 1999                       | Coffee Maker Upgrade to Solid State<br>Relay                     |
| SB-25-30-02-7                         | 17 Mar 2000 | 06 Dec 1999                       | Coffee Maker Led Upgrade                                         |
| SB-25-30-02-8                         | 28 Feb 2000 | 06 Dec 1999                       | Producibility And Reliability ECN's                              |
| SB-25-30-02-9                         | 05 Mar 2002 | 09 Aug 2002                       | Torsion Spring Upgrade                                           |
| SB-25-30-02-10                        | 05 Mar 2002 | 09 Aug 2002                       | O-ring Upgrade                                                   |
| SB-25-30-02-11                        | 18 Mar 2002 | 09 Aug 2002                       | Limit Switch Mod                                                 |
| SB-25-30-02-12                        | 31 May 2002 | 09 Aug 2002                       | Producibility And Reliability ECN's                              |
| SB-25-30-02-13                        | 12 Feb 2004 | 12 Aug 2004                       | Modification of 11225-3 To Create<br>11225-31                    |
| SB-25-30-02-14                        | 31 May 2004 | 12 Aug 2004                       | Producibility And Reliability ECN's                              |
| SB-25-30-02-15                        | 11 Dec 2008 | 29 Jul 2011                       | Platen Heater Replacement                                        |
| SB-25-30-02-16                        | 22 Jan 2007 | 29 Jul 2011                       | Torque Instructions for Nuts on<br>Terminal Block TB3            |
| SB-25-30-04-9                         | 03 Dec 2013 | 11 Jul 2014                       | Torsion Spring Upgrade to<br>PN 11225-3                          |
| SB-25-30-04-10                        | 03 Dec 2013 | No Effect                         | O-Ring Upgrade to PN 11225-3                                     |
| SB-25-30-04-11                        | 03 Dec 2013 | 11 Jul 2014                       | Limit Switch Modification to<br>PN 11225-3                       |
|                                       |             |                                   |                                                                  |
|                                       |             |                                   |                                                                  |
|                                       |             |                                   |                                                                  |
|                                       |             |                                   |                                                                  |
|                                       |             |                                   |                                                                  |
|                                       |             |                                   |                                                                  |
|                                       |             |                                   |                                                                  |

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

THIS PAGE IS INTENTIONALLY LEFT BLANK.



**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

THIS PAGE IS INTENTIONALLY LEFT BLANK.

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

TASK 25-30-02-990-805-A01

**LIST OF EFFECTIVE PAGES**

| <u>SECTION</u>                  | <u>PAGE</u> | <u>DATE</u> | <u>SECTION</u>                 | <u>PAGE</u> | <u>DATE</u> |
|---------------------------------|-------------|-------------|--------------------------------|-------------|-------------|
| Title                           | T-1         | 11 Jul 2014 | Testing and Fault Isolation    | 1011        | 29 Jul 2011 |
| Alert                           | A-1         | 11 Jul 2014 | (Continued)                    | 1012        | 29 Jul 2011 |
|                                 |             |             |                                | 1013        | 29 Jul 2011 |
|                                 |             |             |                                | 1014        | Blank       |
| Record of Revisions             | ROR-1       | 11 Jul 2014 |                                |             |             |
|                                 | ROR-2       | Blank       | Schematics and Wiring Diagrams | 2001        | 29 Jul 2011 |
|                                 |             |             |                                | 2002        | 29 Jul 2011 |
| Record of Temporary Revisions   | RTR-1       | 11 Jul 2014 |                                | 2003        | 29 Jul 2011 |
|                                 | RTR-2       | Blank       |                                | 2004        | 29 Jul 2011 |
|                                 |             |             |                                | 2005        | 11 Jul 2014 |
|                                 |             |             |                                | 2006        | 11 Jul 2014 |
| Service Bulletin List           | SBL-1       | 11 Jul 2014 |                                |             |             |
|                                 | SBL-2       | Blank       | Disassembly                    | 3001        | 29 Jul 2011 |
|                                 |             |             |                                | 3002        | 29 Jul 2011 |
| Service Information Letter List | SIL-1       | 11 Jul 2014 |                                | 3003        | 29 Jul 2011 |
|                                 | SIL-2       | Blank       |                                | 3004        | 29 Jul 2011 |
|                                 |             |             |                                | 3005        | 29 Jul 2011 |
|                                 |             |             |                                | 3006        | 29 Jul 2011 |
| List of Effective Pages         | LEP-1       | 11 Jul 2014 |                                | 3007        | 29 Jul 2011 |
|                                 | LEP-2       | 11 Jul 2014 |                                | 3008        | 29 Jul 2011 |
|                                 |             |             |                                | 3009        | 29 Jul 2011 |
| Table of Contents               | TOC-1       | 29 Jul 2011 |                                | 3010        | Blank       |
|                                 | TOC-2       | Blank       |                                |             |             |
|                                 |             |             | Cleaning                       | 4001        | 29 Jul 2011 |
| Introduction                    | INTRO-1     | 29 Jul 2011 |                                | 4002        | 29 Jul 2011 |
|                                 | INTRO-2     | 11 Jul 2014 |                                | 4003        | 29 Jul 2011 |
|                                 | INTRO-3     | 29 Jul 2011 |                                | 4004        | Blank       |
|                                 | INTRO-4     | 29 Jul 2011 |                                |             |             |
|                                 |             |             | Inspection/Check               | 5001        | 29 Jul 2011 |
| Description and Operation       | 1           | 29 Jul 2011 |                                | 5002        | 29 Jul 2011 |
|                                 | 2           | 29 Jul 2011 |                                | 5003        | 29 Jul 2011 |
|                                 | 3           | 29 Jul 2011 |                                | 5004        | Blank       |
|                                 | 4           | 29 Jul 2011 |                                |             |             |
|                                 | 5           | 29 Jul 2011 | Repair                         | 6001        | 29 Jul 2011 |
|                                 | 6           | 29 Jul 2011 |                                | 6002        | 29 Jul 2011 |
|                                 |             |             |                                | 6003        | 29 Jul 2011 |
| Testing and Fault Isolation     | 1001        | 29 Jul 2011 |                                | 6004        | Blank       |
|                                 | 1002        | 29 Jul 2011 |                                |             |             |
|                                 | 1003        | 29 Jul 2011 | Assembly                       | 7001        | 11 Jul 2014 |
|                                 | 1004        | 29 Jul 2011 |                                | 7002        | 29 Jul 2011 |
|                                 | 1005        | 11 Jul 2014 |                                | 7003        | 29 Jul 2011 |
|                                 | 1006        | 29 Jul 2011 |                                | 7004        | 11 Jul 2014 |
|                                 | 1007        | 29 Jul 2011 |                                | 7005        | 29 Jul 2011 |
|                                 | 1008        | 29 Jul 2011 |                                | 7006        | 29 Jul 2011 |
|                                 | 1009        | 29 Jul 2011 |                                | 7007        | 11 Jul 2014 |
|                                 | 1010        | 29 Jul 2011 |                                | 7008        | 11 Jul 2014 |

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| <u>SECTION</u>                               | <u>PAGE</u> | <u>DATE</u> | <u>SECTION</u>                        | <u>PAGE</u> | <u>DATE</u> |
|----------------------------------------------|-------------|-------------|---------------------------------------|-------------|-------------|
| Special Tools,<br>Fixtures, and<br>Equipment | 9001        | 29 Jul 2011 | Illustrated Parts<br>List (Continued) | 10036       | 29 Jul 2011 |
|                                              | 9002        | 11 Jul 2014 |                                       | 10037       | 29 Jul 2011 |
|                                              |             |             |                                       | 10038       | 29 Jul 2011 |
|                                              |             |             |                                       | 10039       | 11 Jul 2014 |
| Removal                                      | 12001       | 29 Jul 2011 |                                       | 10040       | 29 Jul 2011 |
|                                              | 12002       | Blank       |                                       | 10041       | 11 Jul 2014 |
|                                              |             |             |                                       | 10042       | 29 Jul 2011 |
|                                              |             |             |                                       | 10043       | 29 Jul 2011 |
| Installation                                 | 13001       | 29 Jul 2011 |                                       | 10044       | 11 Jul 2014 |
|                                              | 13002       | Blank       |                                       | 10045       | 29 Jul 2011 |
|                                              |             |             |                                       | 10046       | 29 Jul 2011 |
|                                              |             |             |                                       | 10047       | 29 Jul 2011 |
| Storage                                      | 15001       | 29 Jul 2011 |                                       | 10048       | 11 Jul 2014 |
|                                              | 15002       | Blank       |                                       | 10049       | 29 Jul 2011 |
|                                              |             |             |                                       | 10050       | 29 Jul 2011 |
|                                              |             |             |                                       | 10051       | 11 Jul 2014 |
| Illustrated Parts<br>List                    | 10001       | 11 Jul 2014 |                                       | 10052       | 11 Jul 2014 |
|                                              | 10002       | 11 Jul 2014 |                                       | 10053       | 29 Jul 2011 |
|                                              | 10003       | 29 Jul 2011 |                                       | 10054       | 29 Jul 2011 |
|                                              | 10004       | 11 Jul 2014 |                                       | 10055       | 11 Jul 2014 |
|                                              | 10005       | 29 Jul 2011 |                                       | 10056       | 11 Jul 2014 |
|                                              | 10006       | 11 Jul 2014 |                                       | 10057       | Blank       |
|                                              | 10007       | 11 Jul 2014 |                                       | 10058       | 29 Jul 2011 |
|                                              | 10008       | 29 Jul 2011 |                                       | 10059       | 11 Jul 2014 |
|                                              | 10009       | 11 Jul 2014 |                                       | 10060       | 29 Jul 2011 |
|                                              | 10010       | 11 Jul 2014 |                                       | 10061       | Blank       |
|                                              | 10011       | 11 Jul 2014 |                                       | 10062       | 29 Jul 2011 |
|                                              | 10012       | 11 Jul 2014 |                                       | 10063       | 11 Jul 2014 |
|                                              | 10013       | 29 Jul 2011 |                                       | 10064       | 11 Jul 2014 |
|                                              | 10014       | 11 Jul 2014 |                                       | 10065       | 11 Jul 2014 |
|                                              | 10015       | 11 Jul 2014 |                                       | 10066       | 11 Jul 2014 |
|                                              | 10016       | 29 Jul 2011 |                                       | 10067       | 11 Jul 2014 |
|                                              | 10017       | 29 Jul 2011 |                                       | 10068       | 11 Jul 2014 |
|                                              | 10018       | 11 Jul 2014 |                                       | 10069       | 11 Jul 2014 |
|                                              | 10019       | 29 Jul 2011 |                                       | 10070       | 11 Jul 2014 |
|                                              | 10020       | 11 Jul 2014 |                                       | 10071       | 11 Jul 2014 |
|                                              | 10021       | 11 Jul 2014 |                                       | 10072       | 11 Jul 2014 |
|                                              | 10022       | 11 Jul 2014 |                                       | 10073       | 29 Jul 2011 |
|                                              | 10023       | 11 Jul 2014 |                                       | 10074       | Blank       |
|                                              | 10024       | 11 Jul 2014 |                                       |             |             |
|                                              | 10025       | 11 Jul 2014 |                                       |             |             |
|                                              | 10026       | 11 Jul 2014 |                                       |             |             |
|                                              | 10027       | 11 Jul 2014 |                                       |             |             |
|                                              | 10028       | 11 Jul 2014 |                                       |             |             |
|                                              | 10029       | 11 Jul 2014 |                                       |             |             |
|                                              | 10030       | 11 Jul 2014 |                                       |             |             |
|                                              | 10031       | 29 Jul 2011 |                                       |             |             |
|                                              | 10032       | 29 Jul 2011 |                                       |             |             |
|                                              | 10033       | 11 Jul 2014 |                                       |             |             |
|                                              | 10034       | 11 Jul 2014 |                                       |             |             |
|                                              | 10035       | 11 Jul 2014 |                                       |             |             |



**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

TASK 25-30-02-990-806-A01

**TABLE OF CONTENTS**

| <u>SECTION</u>                               | <u>PAGE</u>            |
|----------------------------------------------|------------------------|
| INTRODUCTION .....                           | INTRO-1                |
| DESCRIPTION AND OPERATION .....              | 1                      |
| TESTING AND FAULT ISOLATION .....            | 1001                   |
| SCHEMATIC AND WIRING DIAGRAMS .....          | 2001                   |
| DISASSEMBLY .....                            | 3001                   |
| CLEANING .....                               | 4001                   |
| INSPECTION/CHECK .....                       | 5001                   |
| REPAIR .....                                 | 6001                   |
| ASSEMBLY .....                               | 7001                   |
| FITS AND CLEARANCES .....                    | 8001 (Not Applicable)  |
| SPECIAL TOOLS, FIXTURES, AND EQUIPMENT ..... | 9001                   |
| SPECIAL PROCEDURES .....                     | 11001 (Not Applicable) |
| REMOVAL .....                                | 12001                  |
| INSTALLATION .....                           | 13001                  |
| SERVICING .....                              | 14001 (Not Applicable) |
| STORAGE .....                                | 15001                  |
| REWORK .....                                 | 16001 (Not Applicable) |
| ILLUSTRATED PARTS LIST .....                 | 10001                  |

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

THIS PAGE IS INTENTIONALLY LEFT BLANK.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

**INTRODUCTION**

TASK 25-30-02-990-807-A01

1. General

- A. This manual has been prepared to fulfill the requirements of ATA iSpec 2200. It is intended to provide such data as is necessary for an approved repairer to return an unserviceable coffee maker part numbers 11050-11, 11225-3, and 11225 -31 to a serviceable condition.
- B. All procedures established in this manual have been performed and verified acceptable by trained personnel at B/E Aerospace, Inc. A competent shop mechanic who is unfamiliar with these units should, with a minimum amount of effort and tools, be able to isolate the problems of a nonfunctional unit and restore it to service.
- C. Procedures are provided for the full range of maintenance and include all the work functions that could or may be done to the unit throughout its entire service life.
- D. A competent shop mechanic should use this manual first to test and isolate a faulty component. The mechanic should then go directly to the applicable manual subject to effect a repair in the specific problem area without disturbing other areas.

TASK 25-30-02-990-808-A01

2. Abbreviation

The following abbreviations may be used in this manual:

TABLE 25-30-02-99A-001-A01

| ABBREVIATION | MEANING                          | ABBREVIATION | MEANING                  |
|--------------|----------------------------------|--------------|--------------------------|
| AC           | Alternating Current              | FIG          | Figure                   |
| AL           | Aluminum                         | FT           | Feet                     |
| AR           | As Required                      | GA           | Gauge                    |
| ASSY         | Assembly                         | GPM          | Gallons Per Minute       |
| BARG         | Barometric Gauge                 | HZ           | Hertz                    |
| ° C          | Degree Celsius                   | ID           | Inner Diameter           |
| CAGE         | Commercial and Government Entity | IN           | Inch                     |
| CCA          | Circuit Card Assembly            | IN-LBS       | Inch-Pounds              |
| CCW          | Counter Clock Wise               | IPL          | Illustrated Parts List   |
| CM           | Centimeter                       | IR           | Infra Red                |
| CW           | Clock Wise                       | IREDD        | Infra Red Emitting Diode |
| DIA          | Diameter                         | KPAG         | Kilo Pascals Gauge       |
| DIP          | Dual In-line Package             | KVA          | Kilo Volt-Ampere         |
| EFF          | Effectivity                      | LBS          | Pound                    |
| ° F          | Degree Fahrenheit                | LG           | Long                     |

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

| ABBREVIATION | MEANING                                  |
|--------------|------------------------------------------|
| LH           | Left Hand                                |
| MAX          | Maximum                                  |
| MM           | Millimeter                               |
| MTOSS        | Maintenance Task Oriented Support System |
| NHA          | Next Higher Assembly                     |
| NO           | Number                                   |

| ABBREVIATION | MEANING                      |
|--------------|------------------------------|
| RF           | Reference                    |
| RTD          | Resistive Temperature Device |
| SB           | Service Bulletin             |
| SCR          | Silicone Control Rectifier   |
| TIL          | Technical Information Letter |
| TPN          | True Part Number             |
| TTL REQ      | Total Required               |

TASK 25-30-02-990-809-A01

3. Verification

The sections of this publication shown below have been verified on the date(s) specified. Where actual performance of the functions (tasks) cannot be done prior to issuing a manual, the function (tasks) must be verified by simulation. Any function (task) verified by simulation must be verified by actual performance at the earliest possible time.

| VERIFIED SECTION            | PART NO. | VERIFIED BY | VERIFIED DATE |
|-----------------------------|----------|-------------|---------------|
| Testing and Fault Isolation | 11050-11 | Performance | 6/28/95       |
|                             | 11225-3  | Performance | 9/29/95       |
|                             | 11225-31 | Performance | 5/20/04       |
| Disassembly                 | 11050-11 | Performance | 6/28/95       |
|                             | 11225-3  | Performance | 9/29/95       |
|                             | 11225-31 | Performance | 5/20/04       |
| Assembly                    | 11050-11 | Performance | 6/28/95       |
|                             | 11225-3  | Performance | 9/29/95       |
|                             | 11225-31 | Performance | 5/20/04       |

TASK 25-30-02-990-810-A01

4. Maintenance Task Oriented Support System

- A. The Maintenance Task Oriented Support System (MTOSS) permits the use of electronic data processing of maintenance data.

NOTE: For detailed information, refer to Component Maintenance Manual (CMM) of the Air Transport Association (ATA) Specification 2200.


- (1) The MTOSS system uses standard and unique number combinations to identify maintenance tasks and sub tasks.
- (2) The MTOSS structure is a logical approach to organizing maintenance tasks and sub tasks.
- (3) The MTOSS numbering system includes ATA chapter-section-subject number as well as a function code and unique identifiers.

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

- (4) The purpose of the MTOSS numbering system is to provide a means for automated sorting, retrieval, and management of digitized data.
- B. The MTOSS numbering system is an expansion of the ATA three element numbering system. An MTOSS number has seven elements of which the first five elements are mandatory for each task and sub task. The sixth and seventh elements are applied when necessary. This CMM incorporates the use of six of the seven elements. Refer to Figure INTRO-1.
  - (1) Element numbers 1, 2, and 3. These elements are existing ATA numbers:
    - (a) Element number 1: Chapter
    - (b) Element number 2: Section
    - (c) Element number 3: Subject
  - (2) Element number 4. The fourth element numerically defines the maintenance function being performed.
  - (3) Element number 5. The fifth element is provided to create unique numbers for all tasks or sub tasks that are similarly numbered through the first four elements.
    - (a) Tasks are numbered from 801 - 999.
    - (b) Subtasks are numbered from 001 - 800.
  - (4) Element number 6. The sixth element is a three position alphanumeric number that allows for identification of differences in configurations, methods, and techniques, variations of standard practice applications, etc.
    - (a) Most tasks in this CMM will use A01 as the sixth element. This indicates that the task applies to all configurations with no variation.
    - (b) If an S01 is used as the sixth element, it will indicate that a service bulletin applies to the task.
  - (5) Element number 7. The seventh element is a three position alphanumeric number reserved for customer use.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

**TASK 25-XX-XX-700-824-A01**

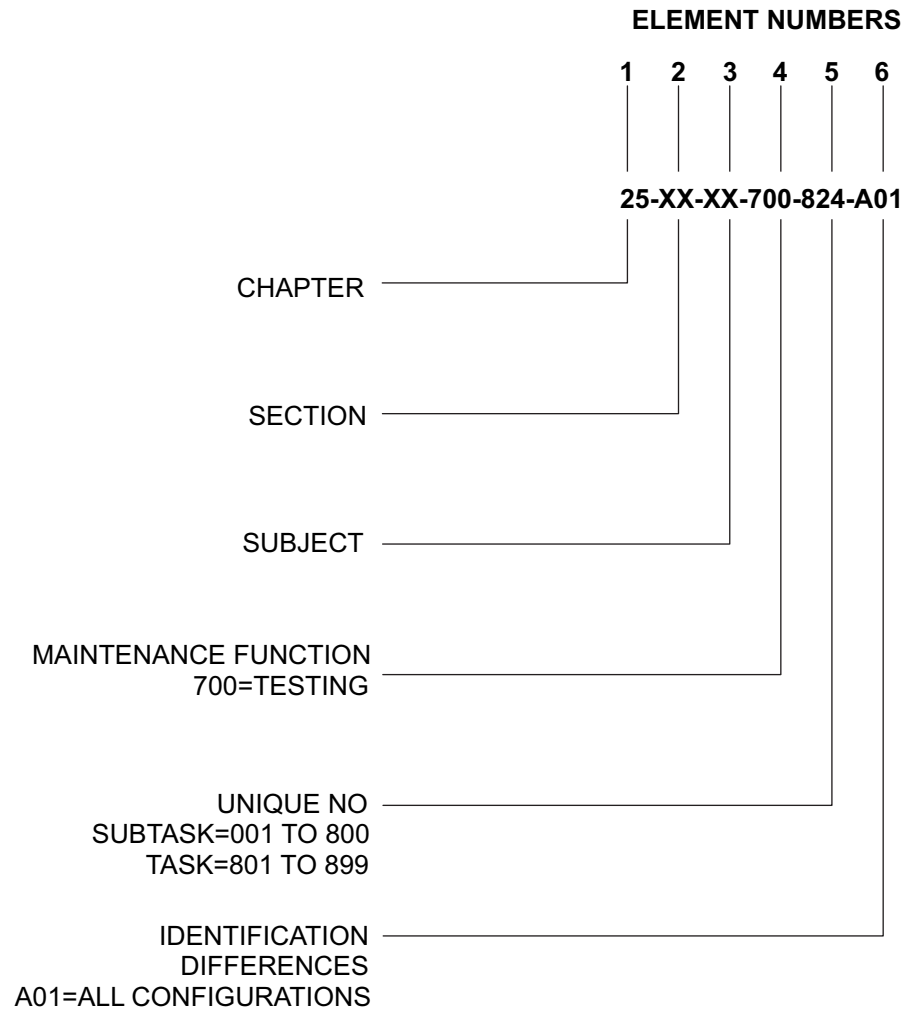

NOTE: Element Number 7 is NOT USED.

GRAPHIC 25-30-02-99B-001-A01

Figure INTRO-1  
Explanation of Maintenance Task Oriented Support System (MTOSS) Task Codes


**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

**DESCRIPTION AND OPERATION**

TASK 25-30-02-870-801-A01

1. Description

- A. Coffee Maker part numbers 11050-11, 11225-3, and 11225-31 are manufactured at B/E Aerospace, Inc., Commercial Aircraft Products Group in Lenexa, Kansas.
- B. Coffee Maker part numbers 11050-11, 11225-3, and 11225-31 are three-solenoid Coffee Makers. They differ only in style of base pan and/or drain. Each can be equipped with an optional solid state relay upgrade. These Coffee Makers are galley inserts on airline transport aircraft. The Coffee Makers fit a galley Coffee Maker compartment. Power and potable water are obtained through a Coffee Maker rail such as part numbers 11160-1 or 11160-5.
- C. The Coffee Maker consists of a black anodized aluminum chassis to which the water tank, solenoid manifold, electronics enclosure, brew assembly and hot plate assembly are attached. Brief operating instructions are placarded on the face plate under the color coded operation switches.
- D. Immersion heaters in the heavy duty stainless steel water tank provide hot water which is routed to "pillow pack" coffee in the brew cup. Coffee then drains into the server until it is full.

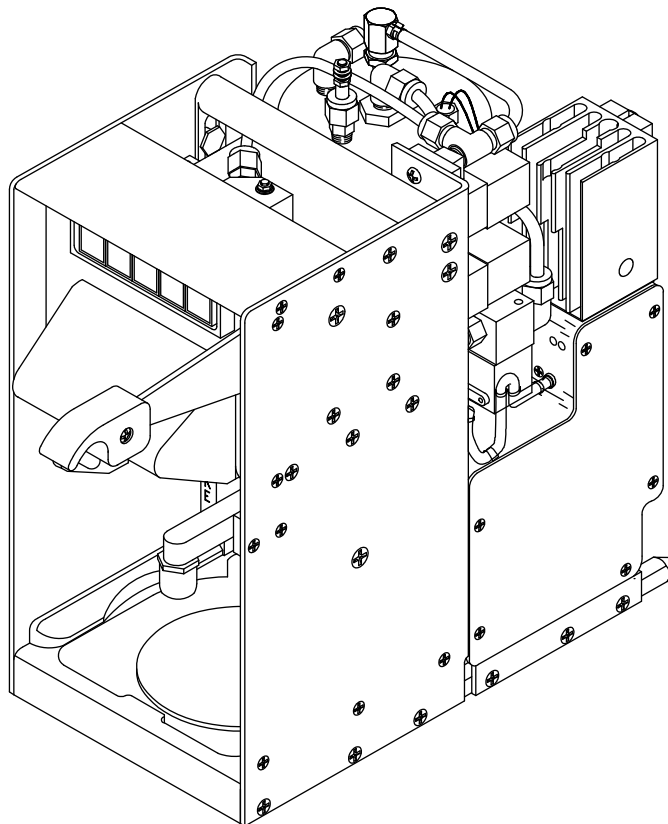

GRAPHIC 25-30-02-99B-002-A01

Figure 1  
Coffee Maker Assembly

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

TASK 25-30-02-870-802-A01

2. General Operating Instructions

A. This section assumes an installed functional Coffee Maker (galley power and water turned on) and contains operating instructions for flight attendants.

B. Power

- (1) Depress the red ON/OFF button if it is not already illuminated. Verify that COLD/LOW WATER button is not illuminated. (If it is, turn on the galley water supply.) Once power is on and the water tank is full, the water will automatically heat to a maximum nominal temperature of approximately  $188 \pm 3^{\circ} \text{ F}$  ( $86 \pm 2^{\circ} \text{ C}$ ) [ $193 \pm 3^{\circ} \text{ F}$  ( $89 \pm 2^{\circ} \text{ C}$ ) for 11225-31] at which time the HOT WATER button will illuminate. You do not need to wait for hot water before initiating brew.

C. Brew

- (1) Raise the brew handle and remove the brew cup. Verify that the brew cup is clean and free of coffee grounds. Place a pillow pack, seam down, on top of the screen in the brew cup. Replace the brew cup in the Coffee Maker.
- (2) Insert an empty server into the server cavity and lower the brew handle. Verify that the server is in the server cavity as far as it will go by giving the server a gentle push.
- (3) Press the green BREW button which will illuminate to indicate that brew is in progress. Brewing will occur only when the water is within the set maximum nominal operating range of approximately  $188 \pm 3^{\circ} \text{ F}$  ( $86 \pm 2^{\circ} \text{ C}$ ) [ $193 \pm 3^{\circ} \text{ F}$  ( $89 \pm 2^{\circ} \text{ C}$ ) for 11225-31]. The Coffee Maker will cycle between heating water and brewing until the server is full. For the 11225-31, the improved anticipation will eliminate almost entirely the heating portion of the cycle. When the server is full the green brew light will turn off indicating that brew is complete.
- (4) After the brew light goes out raise the brew handle. Remove the brew cup and remove the used pillow pack. Tilting the brew cup slightly will limit dripping. Rinse the brew cup and replace it in the Coffee Maker. Coffee is ready to serve.
- (5) The brew cycle can be interrupted at any time by raising the brew handle. To restart the brew, lower the brew handle and press the green BREW button.

D. Hot Plate

**WARNING: DO NOT TOUCH HOT PLATE.**

- (1) Depress the orange HOT PLATE button to maintain server temperature until the coffee is served.

E. Hot Water

- (1) Pushing the yellow HOT WATER button channels heated water from the tank to the faucet. This feature works irrespective of water temperature. To get fully heated water wait until the hot water light comes on.



**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

- (2) Hot water is also available during brew. The brew will be temporarily interrupted (indicated by the brew light going off), but will automatically resume (brew light will go back on) when the HOT WATER button is released. If enough water is drawn out to make the hot water light go out, the brew will resume only after the water has reheated.
- (3) If a full server of hot water is desired, rinse the brew cup and server then perform a normal brew without a pillow pack.


**F. Cold Water**

- (1) Unheated water is available at the faucet by pushing the white COLD/LOW WATER button.

TASK 25-30-02-870-803-A01

**3. Detailed Description Of Operation**

- A. This section will provide a detailed overview of Coffee Maker operation for qualified maintenance personnel. Circuit and system analysis, along with schematics can be found in SCHEMATIC AND WIRING DIAGRAMS section. The Coffee Maker block diagram in Figure 2 has been provided to help understand subsystem interactions.

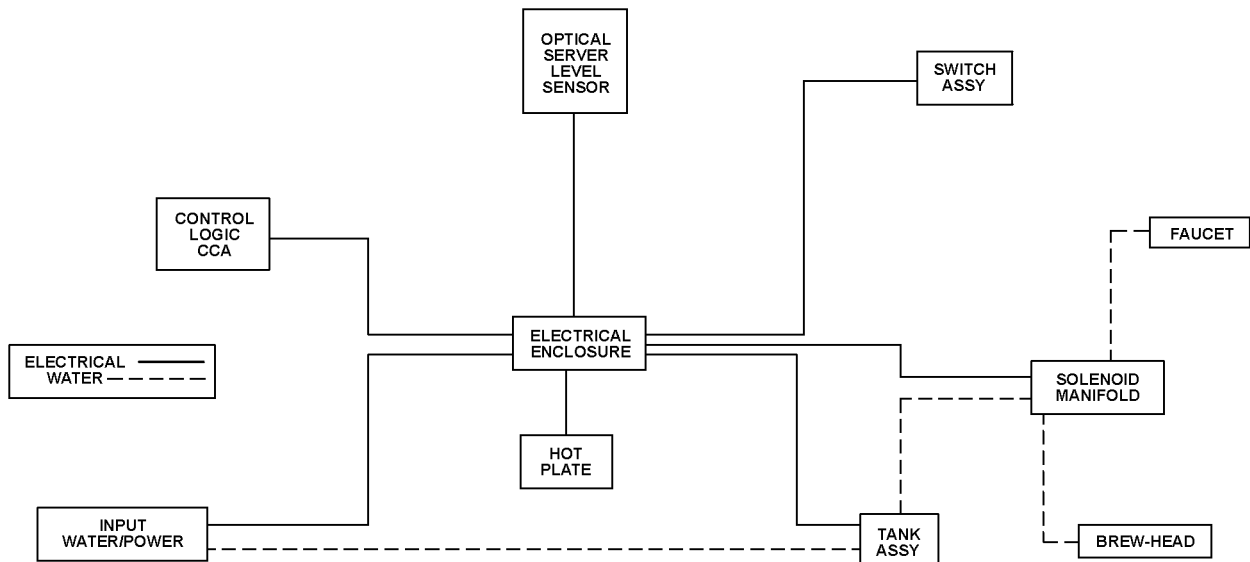

GRAPHIC 25-30-02-99B-003-A01

Figure 2  
Coffee Maker Block Diagram

**B. Power**

- (1) Depress the ON/OFF switch which should illuminate (otherwise turn on galley power). The COLD/LOW WATER lamp should illuminate until the tank fills with water. The tank will finish filling because the electrical air vent was automatically activated when power was turned on.

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

- (2) When the water reaches the tank full level sensor the low water lamp will go off and the three 900 watt immersion heaters in the tank will come on. Each heater is powered through a three phase power relay by a separate phase of 115 VAC line power. The heaters will remain on until the water reaches nominally  $188 \pm 3^{\circ} \text{ F}$  ( $86 \pm 2^{\circ} \text{ C}$ ) [ $193 \pm 3^{\circ} \text{ F}$  ( $89 \pm 2^{\circ} \text{ C}$ ) for 11225-31] at which time the hot water light will come on and the heaters will turn off. The heaters will cycle on and off as required to maintain hot water temperature.

**C. Temperature Control**

- (1) Hot water temperature is controlled by a negative feedback closed loop. A very low impedance RTD (Resistive Temperature Device) senses the water temperature above the immersion heaters. Comparator logic on the CCA (Circuit Card assembly) then turns the three phase heater relay on and off as required and drives the hot water light to indicate when the water is hot. Additional protection circuitry on the CCA will open the circuit breaker if the water is above  $235^{\circ} \text{ F}$  ( $112.77^{\circ} \text{ C}$ ) or below  $35^{\circ} \text{ F}$  ( $1.66^{\circ} \text{ C}$ ).
- (2) The nominal maximum hot water temperature of  $188 \pm 3^{\circ} \text{ F}$  ( $86 \pm 2^{\circ} \text{ C}$ ) [ $193 \pm 3^{\circ} \text{ F}$  ( $89 \pm 2^{\circ} \text{ C}$ ) for 11225-31] is adjustable  $\pm 3^{\circ} \text{ F}$  on the CCA. This is a bench procedure and will be discussed in TESTING AND FAULT ISOLATION section.
- (3) The control logic on the CCA contains heater control anticipator circuitry to optimize cycle time. This is only observable on a bench set up and will be described in TESTING AND FAULT ISOLATION section.

**D. Brew**

- (1) Pushing the green BREW button attempts to arm the brew latch on the CCA. If the brew handle is not fully lowered, a micro switch closes a circuit that will not allow the brew latch to arm. Also, a full server in the Coffee Maker will not allow the brew latch arm. Once the brew latch is armed the brew light will remain on. A brief power interruption, such as change over to aircraft power, will not disarm it.
- (2) The brew latch can be armed without a brew cup or a server present, but this should be avoided because hot water will splash from the brew cup cavity.
- (3) The control logic waits for a combination of brew latch and hot water, then energizes the brew solenoid with 28 VDC. Cold water then enters the bottom of the tank pushing hot water out of the top. The hot water travels from the top of the tank through the brew solenoid to the brew head. The brew head directs the hot water into a pillow pack which is placed seam down in the brew cup. Coffee flows from the brew cup into the server.
- (4) When the water tank temperature drops below the desired range the control logic closes the brew solenoid and turns on the heaters. When the water is hot the brew continues until the server is full.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

E. Server Level

- (1) Opto-electronic sensors are used to detect server level. An IRED (Infra Red Emitting Diode) transmits an IR (Infra Red) beam into the server. An IR pass filtered silicon phototransistor aimed into the server detects the IR beam only if it is reflected from coffee (or water) in a full server. Once the fluid detection level is reached the brew solenoid are turned off. If a pillow pack is in the brew cup it takes approximately five seconds for the coffee to drain from the brew cup. Therefore even though the server detection point is the same, server level with coffee will be approximately 0.25 inch (6.3 mm) higher than with water.
- (2) Discarding the used pillow pack before serving the coffee is a good practice because it limits the residual coffee drips into the server cavity. (Drips and spillage in the server cavity drain to the galley sump.)

F. Hot Plate

**WARNING: DO NOT TOUCH HOT PLATE.**

- (1) Whenever Coffee Maker power is on, the hot plate can be energized by pushing the orange HOT PLATE button. This lights the button and connects phase A line power to the 30 watt cal-rod heater or 35 watt platen heater. The heater assembly concentrates the heat into the aluminum hot plate.

G. Hot and Cold Water

- (1) Hot and cold water are available at the faucet by pushing the appropriate button. Hot water is drawn from the top of the water tank when the hot water solenoid is energized with 28 VDC through the control CCA. Cold water is taken directly from the water input when the cold water solenoid is energized.

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

TASK 25-30-02-870-804-A01

4. Leading Particulars

A. Refer to Table 1 for a list of leading particulars on the Coffee Maker assembly.

TABLE 25-30-02-99A-002-A01

Table 1  
Leading Particulars

| PARAMETER                                               |                     | LIMIT                             |                     |
|---------------------------------------------------------|---------------------|-----------------------------------|---------------------|
| FEATURES                                                |                     |                                   |                     |
| Opto-electronic sensors reliably maintain server level  |                     |                                   |                     |
| 50 ounces of fresh brewed coffee in less than 4 minutes |                     |                                   |                     |
| Hot/Cold water spigot                                   |                     |                                   |                     |
| Recovery time between brewing cycles less than 1 minute |                     |                                   |                     |
| Power change over logic hold                            |                     |                                   |                     |
| Electrical air venting                                  |                     |                                   |                     |
| ELECTRICAL                                              |                     |                                   |                     |
| Operating voltage                                       |                     | 115 VAC, 400 Hz, 3 Phase          |                     |
| Wattage                                                 |                     | Standard 3KVA Insert (2750 Watts) |                     |
| WEIGHT                                                  |                     |                                   |                     |
| Part Number                                             | Pounds (lbs)        | Kilograms (kg)                    |                     |
| 11050-11                                                | 24.0                | 10.9                              |                     |
| 11225-3, 11225-31                                       | 23.5                | 10.7                              |                     |
| DIMENSIONS                                              |                     |                                   |                     |
| Part Number                                             | Height              | Width                             | Depth               |
| 11050-11                                                | 12.00 in (30.48 cm) | 6.30 in (16.00 cm)                | 14.47 in (36.75 cm) |
| 11225-3, 11225-31                                       | 12.00 in (30.48 cm) | 6.30 in (16.00 cm)                | 14.47 in (36.75 cm) |
| SAFETY FEATURES                                         |                     |                                   |                     |
| Pressure relief valve                                   |                     |                                   |                     |
| Over temperature protection                             |                     |                                   |                     |
| Low water sensing                                       |                     |                                   |                     |
| Freeze protection                                       |                     |                                   |                     |
| IRED power monitor                                      |                     |                                   |                     |
| Secondary restraint                                     |                     |                                   |                     |

NOTE: All weights are full weights.

NOTE: All dimensions are overall dimensions.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

**TESTING AND FAULT ISOLATION**

TASK 25-30-02-700-801-A01

1. General

- A. TESTING AND FAULT ISOLATION section covers the test equipment, bench setup, functional checkout procedure and fault isolation procedures required to return an inoperative coffee maker to service.
- B. Completely read and thoroughly understand the entire TESTING AND FAULT ISOLATION section. Become thoroughly familiar with the test sequences and their interactive correlations before performing any tests.
- C. The test equipment and materials required for testing of the Coffee Maker are listed in Table 1001.

NOTE: Equivalent substitutes may be used for listed items.

TABLE 25-30-02-99A-003-A01


Table 1001  
Test Equipment and Materials

| NOMENCLATURE                   | PARTS/SPEC NO       | SOURCE (CAGE)                |
|--------------------------------|---------------------|------------------------------|
| CCA and Switch Module Test Box | 11238-1             | B/E Aerospace, Inc. (V63367) |
| Coffee Maker Rail              | 11160-1 and 11160-5 | B/E Aerospace, Inc. (V63367) |
| Stop Watch                     | None                | Commercially Available       |
| Temperature Test Brew Cup      | 11239-1             | B/E Aerospace, Inc. (V63367) |
| Thermometers                   | None                | Commercially Available       |

- D. Figure 1001 defines a standard Coffee Maker test bench configuration. This is the minimum test setup required to functionally check a Coffee Maker. All test and fault isolation procedures assume this setup and corresponding data availability.

NOTE: The water should be regulated (while flowing) to 26 psig.

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

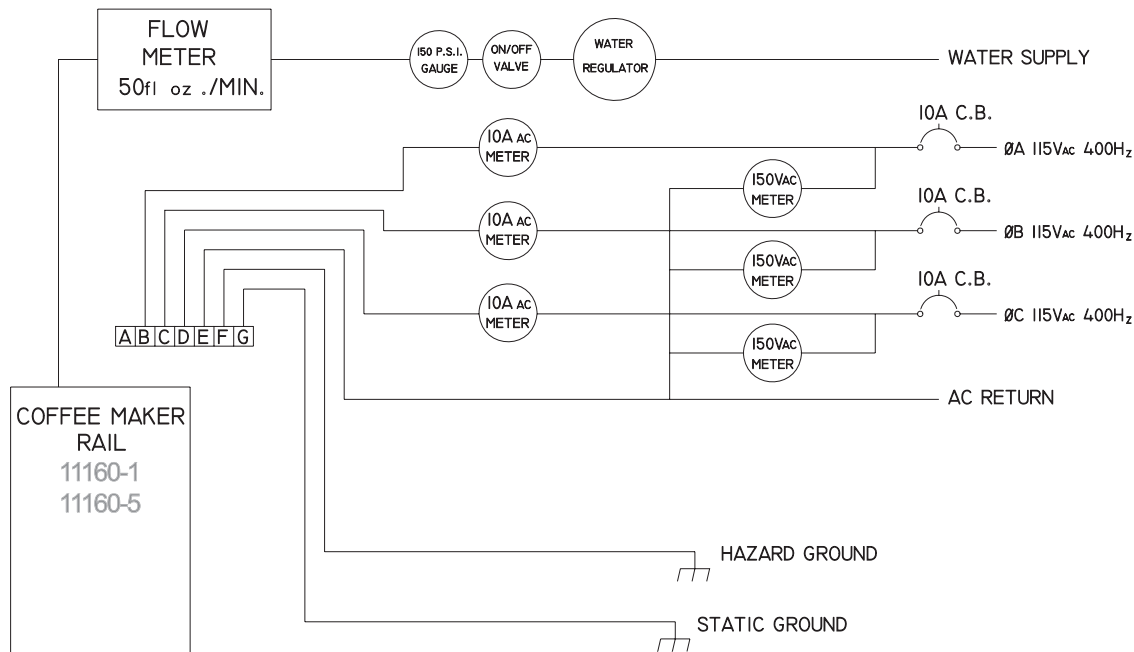

GRAPHIC 25-30-02-99B-004-A01

Figure 1001  
Coffee Maker Test Bench

TASK 25-30-02-700-802-A01

2. Procedure

A. Functional Test

- (1) This section contains a return to service test procedure intended to assure proper unit operation. This procedure is a logical starting point for an inoperative Coffee Maker. Refer to Table 1002 or 1002A for Coffee Maker Functional Test.

B. Visual Inspection

- (1) Visual inspection should precede and be a standard part of all testing. As a minimum, perform each check step in the INSPECTION/CHECK section. It should comply with the pre-operation check list.

NOTE: Make sure that the drain valve is closed.

C. Low Water

- (1) Make sure that the water tank is empty. Attach Coffee Maker to test bench rail. (Do not turn on water supply.) Apply test bench line power. Close the Coffee Maker circuit breaker. Press the ON/OFF switch. ON/OFF and LOW WATER lamps should come on.
- (2) Turn on the water and water tank should finish filling. The LOW WATER lamp should turn off when the tank is full.

NOTE: Phase A line current should be less than 0.1 amps. Phase B and C should be zero.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

**D. Water Leaks**

- (1) Turn off the ON/OFF switch. Turn on the water supply. Verify the water pressure is 26 PSIG while the water is flowing. Water flow rate should be greater than 32 fluid ounces per minute. The water tank should fill part way (until the air trapped in the tank is compressed to 26 PSIG) then water flow should stop completely. Residual water flow indicates a water leak. Visually check the Coffee Maker for leaks too small to cause a residual water flow.

**E. Heater Current**

- (1) Press ON/OFF switch (this activates the electric vent valve). The water tank should finish filling. The LOW WATER lamp should turn off when the tank is full and each heater should draw approximately  $8A \pm 1A$  on each of three power phases.

**F. Hot Water Light**

- (1) Press HOT WATER button. Once the water is hot (approximately two minutes) the HOT WATER light should come on and the heaters should turn off (indicated by current drop).

**G. Brew**

- (1) Starting with a hot tank, use a stop watch to time a brew cycle from when the BREW button is pushed until the BREW light goes out. The brew cycle time for Coffee Maker except PN 11225-31 should be 3 minutes 15 seconds  $\pm 40$  seconds. The brew cycle time for Coffee Maker PN 11225-31 should be 2 minutes 30 seconds  $\pm 40$  seconds.

NOTE: Brews started in mid cycle can be extended by a recovery time of up to 90 seconds.


- (2) The server level measured in a 64 ounce server should be  $4.1 \pm 0.3$  inches ( $104.14 \pm 7.62$  mm).

**H. Temperature Discussion**

- (1) Several factors should be taken into account when testing Coffee Maker temperature.
- (2) A Coffee Maker does not warm up or heat soak as quickly on a bench setup as it does in an enclosed galley compartment. Partial compensation can be achieved by performing at least three brew cycles before taking temperature and timing measurements. However, ambient temperature and air flow differences will still introduce some error.
- (3) Thermometers, even the digital lab grade models, have a set time delay and an accuracy limit.
- (4) Water temperature drops very quickly as heat is withdrawn. The farther away from the source measurements are taken the less accurate they will be.
- (5) The Coffee Maker is factory set to apply nominally  $188 \pm 3^\circ F$  ( $86 \pm 2^\circ C$ ) [ $193 \pm 3^\circ F$  ( $89 \pm 2^\circ C$ ) for 11225-31] water to "pillow pack" pillow packs in the brew cup. A  $\pm 3^\circ F$  different nominal temperature may be set on the CCA. The best temperature measurement technique simulates the thermometer in a pillow pack. A special temperature test brew cup, PN 11239-1, (Figure 1002) has been designed to perform this function.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

- (6) A second, much less accurate, technique to measure temperature is to hold the thermometer under the hot water faucet. Start the measurement right after the heaters cycle off. The thermometer will reach a peak temperature representative of the brew cup temperature, but it must be held steady in the water stream.

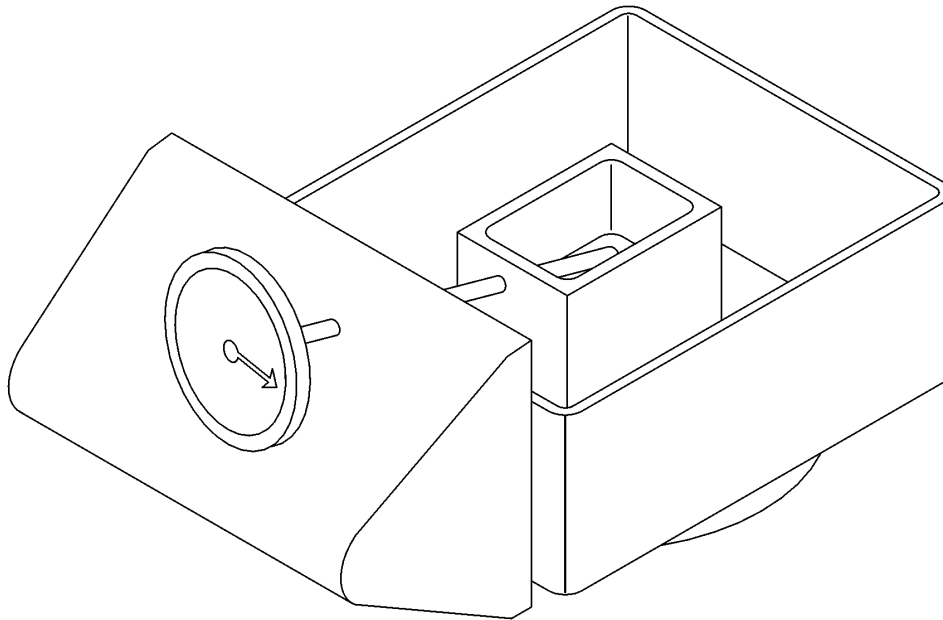

GRAPHIC 25-30-02-99B-005-A01

Figure 1002  
Temperature Test Brew Cup

**J. Temperature Test**

- (1) Measure the brew cup peak temperature using PN 11239-1 (refer to Table 1001). The temperature should be  $188 \pm 3^\circ \text{ F}$  ( $86 \pm 2^\circ \text{ C}$ ) [ $193 \pm 3^\circ \text{ F}$  ( $89 \pm 2^\circ \text{ C}$ ) for 11225-31].
- (2) Measure the server temperature after a brew cycle. The server temperature should be  $175 \pm 10^\circ \text{ F}$  ( $79^\circ \pm 6^\circ \text{ C}$ ).
- (3) The flight attendants have some control over server temperature by selective use of the hot plate during a brew cycle.

**K. Heated Water**

- (1) Push the HOT WATER button and verify that heated water comes out of the faucet and that the flow rate is greater than 30 fluid ounces per minute (0.235 GPM).

**L. Unheated Water**

- (1) Push the COLD WATER button and verify that unheated water comes out of the faucet and that the flow rate is greater than 30 fluid ounces per minute (0.235 GPM).



**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

M. Hot Plate

**WARNING: THE HOT PLATE GETS VERY HOT.**

- (1) Press the HOT PLATE button and verify that the hot plate gets hot. Also, the HOT PLATE light should come on.

N. Power Interrupt

- (1) During a brew cycle turn off the Coffee Maker then quickly turn it back on. The BREW light should remain on.

P. Brew Interrupt

- (1) During a brew cycle raise the brew handle. The BREW light should go out, brew flow will cease and will not resume.

Q. IRED Monitor

- (1) With the brew handle raised, insert a piece of 0.125 inch (3.175 mm) black heat shrink tubing in the left optical sensor cavity, blocking the infra-red beam. The circuit breaker should open.

R. Pressure Relief Valve

- (1) With water tank full, increase source water pressure until the pressure relief valve opens. Make sure that the pressure relief valve opens at  $95 \pm 10$  PSIG, if not replace the pressure relief valve. Check for leaks in the Coffee Maker after 5 minutes.

TABLE 25-30-02-99A-004-A01

Table 1002  
Coffee Maker Functional Test For All Except PN 11225-31

| Technician:        | Date:                                                                | Ser. No.: |
|--------------------|----------------------------------------------------------------------|-----------|
| TEST               | CRITERIA                                                             | RESULTS   |
| Visual             | Pass/Fail                                                            |           |
| Low Water          | Pass/Fail                                                            |           |
| Water Leaks        | Pass/Fail                                                            |           |
| Phase A Current    | $8 \pm 1$ amps                                                       |           |
| Phase B Current    | $8 \pm 1$ amps                                                       |           |
| Phase C Current    | $8 \pm 1$ amps                                                       |           |
| Hot Water Light    | Pass/Fail                                                            |           |
| Brew Time          | $3'15" \pm 40"$                                                      |           |
| Brew Level         | $4.1" \pm 0.3"$                                                      |           |
| Peak Temperature   | $188^\circ \pm 3^\circ \text{ F } (86^\circ \pm 2^\circ \text{ C})$  |           |
| Server Temperature | $175^\circ \pm 10^\circ \text{ F } (79^\circ \pm 6^\circ \text{ C})$ |           |
| Hot Water          | $>30 \text{ fl-oz/min}$                                              |           |

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

Table 1002 (Continued)  
Coffee Maker Functional Test For All Except PN 11225-31

| Technician:           | Date:         | Ser. No.: |
|-----------------------|---------------|-----------|
| TEST                  | CRITERIA      | RESULTS   |
| Cold Water            | >30 fl-oz/min |           |
| Hot Plate             | Pass/Fail     |           |
| Power Interrupt       | Pass/Fail     |           |
| Brew Interrupt        | Pass/Fail     |           |
| IREN Monitor          | Pass/Fail     |           |
| Pressure Relief Valve | 95 ±10 PSIG   |           |

TABLE 25-30-02-99A-005-A01

Table 1002A  
Coffee Maker Functional Test for PN 11225-31

| Technician:           | Date:                   | Ser. No.: |
|-----------------------|-------------------------|-----------|
| TEST                  | CRITERIA                | RESULTS   |
| Visual                | Pass/Fail               |           |
| Low Water             | Pass/Fail               |           |
| Water Leaks           | Pass/Fail               |           |
| Phase A Current       | 8 ±1 amps               |           |
| Phase B Current       | 8 ±1 amps               |           |
| Phase C Current       | 8 ±1 amps               |           |
| Hot Water Light       | Pass/Fail               |           |
| Brew Time             | 2'30" ±40"              |           |
| Brew Level            | 4.1" ±0.3"              |           |
| Peak Temperature      | 193° ±3° F (89° ±2° C)  |           |
| Server Temperature    | 175° ±10° F (79° ±6° C) |           |
| Hot Water             | >30 fl-oz/min           |           |
| Cold Water            | >30 fl-oz/min           |           |
| Hot Plate             | Pass/Fail               |           |
| Power Interrupt       | Pass/Fail               |           |
| Brew Interrupt        | Pass/Fail               |           |
| IREN Monitor          | Pass/Fail               |           |
| Pressure Relief Valve | 95 ±10 PSIG             |           |

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

TASK 25-30-02-810-801-A01

3. Fault Isolation

A. This section contains the information, test procedures and techniques to identify and isolate Coffee Maker faults to a replacement part. Component reference designators will be used to help follow the System Wiring Diagram, refer to Figures 2001, 2002, or 2003, and the Circuit Card Assembly Schematic, Figure 2004.

B. Plumbing

Refer to Figure 2005 for Plumbing Schematic, which has been included as an aid to isolating plumbing faults.

(1) Water Leaks

- (a) Water can leak to undesirable locations. This could be the thermostats, power connector, electronics enclosure or switches etc. To all failure diagnosis procedures add a caveat to visually inspect for water near any components that might be related to the failure.
- (b) The isolation of a water leak source requires visual detection. Look for water stains around all water fittings. During the tank fill test a mild solution of soapy water sprayed on a leak will bubble. This only tests the pressurized side of the water system, but that is where leaks are most likely to occur. Finally, carefully observe and inspect the Coffee Maker during operation until the leak is found.
- (c) To fix a water leak, review the applicable disassembly and assembly procedures for the components involved. Generally, electrical parts (including the CCA) that do not visually appear damaged will still function once they are well dried.

(2) Slow Water Flow

- (a) Slow water flow generally means that the Coffee Maker is due for periodic cleaning. To clear sluggish flow from a specific plumbing system component, isolate the component and blow air through it.

(3) Brew, Hot and Cold Water Solenoids

- (a) The resistance across all three solenoids can be measured from TB1-3 (28 V) to TB1-4 (BREW) or to TB1-8 (HOT) or to TB2-1(COLD). This resistance should be approximately  $85 \pm 10$  ohms, if not remove and replace the solenoid.

(4) Leaky Water Faucet

- (a) Water dripping from the faucet is usually caused by a small particle trapped in the valve seat. Often rapidly turning the valve on and off will dislodge the particle. Also, try blowing air through the valve with the valve energized. If the valve still leaks rework per CLEANING and REPAIR sections.

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

**C. Wiring Errors**

- (1) It is important to inspect for and consider all possible wiring errors that could cause the fault. Touching ring terminals on terminal blocks and frayed wires etc., should be included in this category.

**D. Circuit Card Assembly (CCA)**

**CAUTION:** BEFORE USING THIS CCA PROCEDURE ASSURE THAT THE CCA WAS NOT DAMAGED BY AN EXISTING FAULT CONDITION. (I.E. 28 V SHORTED AT THE BREW BUTTON COULD DESTROY THE BREW LATCH ON THE CCA.)

- (1) The manufacturer does not recommend the repair of the CCA. If repairs are to be made, the CCA and switch module test box (refer to Table 1001), must be used. A procedures manual comes with the test box which details fault isolation, repair and certification.
- (2) A general procedure for isolating a fault to the CCA requires using another CCA known to be functional. If use of the functional CCA corrects the fault, remove and replace the CCA.

**E. Circuit Breaker CB1**

- (1) The circuit breaker is opened whenever the SCR (Q101) pulls current through the load resistor (R101). This is designed to happen if the tank temperature as reported by the RTD is high (>235° F (112.78° C)) or low (<35° F (1.66° C)) or the IRED (U101) output power is low. Water leaking into the electronics enclosure usually trips one of these circuits and is the most common cause of circuit breaker faults. To isolate a circuit breaker fault open the electronics enclosure and remove the CCA. Inspect the CCA, especially the connector contacts, for water or contamination. If the CCA is wet, allow the CCA to dry. Close the circuit breaker and apply power with the CCA removed. If the circuit breaker opens proceed to Paragraph 3.E.(2). If the circuit breaker remains closed proceed to Paragraph 3.E.(4).

- (2) Circuit Breaker Opens Without CCA Installed

If the fault is not a water leak or a wiring error it must be the SCR (Q101), varistor (CR101), transformer (T1), hot plate (W1) or the circuit breaker (CB1).

- (a) Hot Plate W1 (shorted to chassis)

Turn off the hot plate, close the circuit breaker and turn on power. If power stays on, depress the HOT PLATE switch. If the circuit breaker opens only when the HOT PLATE is turned on, remove and replace the hot plate assembly.

- (b) Transformer T1

The transformer (T1) primary resistance (TB2-9 to TB3-4 with the Coffee Maker power switch off) should be 23.6 ohms and secondary resistance (TB1-1 to TB1-2) should be  $0.5 \pm 0.3$  ohm. The fault can be verified by removing either wire from TB2-9 and repeating the power on test. If the circuit breaker now remains closed, remove and replace the transformer.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

(c) Circuit Breaker CB1

Disconnect all wires from the circuit breaker. The circuit breaker resistance should be 0.8 ohms, if not remove and replace the circuit breaker.

(d) Varistor CR101

Lift one leg of the varistor (CR101). The varistor resistance should be much greater than a standard ohms meter can measure ( $>>1$  Gohms). If not remove and replace the varistor.

(e) SCR Q101 (shorted)

The SCR (Q101) anode (pin 2) to cathode (pin 1) resistance should be more than 1 Mohms. If not remove and replace the SCR.

(3) Circuit Breaker Opens Only With CCA Installed

Measure water tank temperature.

(a) Temperature under 35° F (1.66° C) - Coffee Maker is working correctly. Allow tank to warm before using Coffee Maker.

(b) Temperature between 35° F (1.66° C) and 235° F (112.78° C)

1 Server Level Optical Sensor U101

Remove CCA. Attach a jumper from TB2-4 to TB1-6. Reinstall CCA. Apply power. If the circuit breaker opens proceed to Paragraph 3.E.(3).(c).

Clean the optical sensor (U101) with an alcohol or water dampened cotton tipped swab, especially the IRED in the left hand cavity. Remove jumper, reinstall CCA and repeat power on test. If the circuit breaker opens, remove and replace the optical level sensor (U101).

If the circuit breaker opens when power is turned off, remove and replace the optical level sensor (U101).

2 RTD

An intermittent RTD is possible though unlikely. Disconnect the RTD at TB2-2 and TB2-4. The RTD resistance should be between 500 and 700 ohms depending on tank temperature per Table 1003. Also, the lead to case impedance should be greater than 1 Gohms. If not remove and replace the RTD.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

TABLE 25-30-02-99A-006-A01

Table 1003  
RTD Resistance Vs. Temperature

| TEMPERATURE      | RESISTANCE |
|------------------|------------|
| 32° F (0° C)     | 500 ohms   |
| 78° F (25.55° C) | 549 ohms   |
| 212° F (100° C)  | 696 ohms   |

3 CCA

If water was found on the CCA while performing steps in Paragraph 3.E, verify that the CCA has dried. If replacing the CCA with a known good spare does not open the circuit breaker, replace the CCA (refer to Paragraph 3.D).

(c) Temperature over 235° F (112.78° C)

Allow the tank to cool before proceeding. Power the Coffee Maker and observe the current on each phase as the tank heats. When the hot water light turns on all three phase currents should drop to zero (phase A less than 0.1 amps). Note that if the brew latch has been armed the heaters will remain on for several seconds after the hot water light has turned on. Fully raise the brew handle to disarm the brew latch.

1 CCA

If all three phases remain at  $8 \pm 1$  amps, replace the CCA with a known good spare and repeat the test. If all three phases turn off when the hot water light turns on, replace the original CCA (refer to Paragraph 3.D.).

2 Relay

If only one or two of the phases turn off when the hot water light turns on see Paragraph 3.H. or 3.J. to troubleshoot the relay.

(4) Circuit Breaker Does Not Open per Paragraph 2.Q.

Verify that test in Paragraph 2.Q. was performed correctly. If light leaks around the piece of heat shrink, the circuit will not trigger.

(a) CCA

Remove CCA and measure resistance from CB1 (closed) to TB3-4 with the ON/OFF switch depressed. If the resistance is not approximately 24ohms proceed to Paragraph 3.E.(4).(c) or 3.E.(4).(d). Remove wire number 57 from TB1-6 and reinstall the CCA. The circuit breaker should open on power on. If not remove and replace the CCA. (Verify with alternate CCA per Paragraph 3.D)

(b) Optical Sensor U101

Measure resistance from wire number 57 to TB2-4. If it is shorted, remove and replace the optical sensor (U101).

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

(c) Load Resistor R101

Measure the resistance across the load resistor (R101). If the resistance is not approximately 16 ohms, remove and replace the load resistor (R101).

(d) SCR Q101 (open)

Measure the SCR (Q101) gate (J1-1) to cathode (TB3-4) resistance. If the resistance is not approximately 70 ohms, remove and replace the SCR (Q101).

F. Switch Module SW1 - SW5

Although not required, the CCA and switch module test box (refer to Table 1001), provides a methodical approach to switch module fault isolation.

(1) LEDs

Move the suspect LED to a known functioning switch (i.e. Either ON/OFF or HOT PLATE). If the LED still does not illuminate, remove and replace the LED.

(2) Switches SW1 - SW5

Using the wiring diagram verify proper continuity to P3 for each switch position. Nonconforming switches can be replaced individually or the module can be replaced and repaired separately.

(3) Connectors J3 and P3

Connector continuity can be verified point to point from the switches to the terminal blocks using the system wiring diagram. Defective connectors can be repaired per REPAIR section.

G. Water Tank Level Sensor Z1

- (1) Remove the water tank level sensor Z1. Inspect for contamination and clean or replace as required.

H. Relay K1 (Mechanical)

- (1) Remove the relay K1 and check continuity per Table 1004, replace if nonconforming per DISASSEMBLY and ASSEMBLY section.

TABLE 25-30-02-99A-007-A01

Table 1004  
Relay K1 Continuity

| PINS |    | CONTINUITY             |
|------|----|------------------------|
| 2    | 10 | Approximately 460 ohms |
| 1    | 3  | OPEN                   |
| 1    | 4  | SHORT                  |
| 6    | 7  | OPEN                   |
| 6    | 5  | SHORT                  |

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

Table 1004 (Continued)  
Relay K1 Continuity

| PINS |      | CONTINUITY |
|------|------|------------|
| 11   | 9    | OPEN       |
| 11   | 8    | SHORT      |
| ALL  | CASE | OPEN       |

**J. Solid State Relay K1**

- (1) We expect the alternate and interchangeable solid state relay to be very reliable. To maintain an operational internal temperature the relay must be well attached to the heat sink. An overheated relay will not draw full current on all phases and must be replaced.
- (2) To verify relay conformance remove the relay K1 per DISASSEMBLY section and check continuity per Table 1004A, replace if nonconforming per ASSEMBLY section.

TABLE 25-30-02-99A-008-A01

Table 1004A  
Relay K1 Continuity

| PINS     |          | CONTINUITY |
|----------|----------|------------|
| +        | -        | OPEN       |
| Pole 1-1 | Pole 1-2 | >2 Mohm    |
| Pole 2-1 | Pole 2-2 | >2 Mohm    |
| Pole 3-1 | Pole 3-2 | >2 Mohm    |
| Pole 1-1 | Pole 2-1 | OPEN       |
| Pole 1-1 | Pole 2-2 | OPEN       |
| Pole 2-1 | Pole 3-1 | OPEN       |
| Pole 2-1 | Pole 3-2 | OPEN       |
| Pole 3-1 | Pole 1-1 | OPEN       |
| Pole 3-2 | Pole 1-2 | OPEN       |

**K. Heaters H1 - H3**

- (1) Verify the thermostats (S1, S2, and S3) per Paragraph 3.L. before testing the heaters. The heater resistance from the buss bar (BB1) to TB3-1, TB3-2 or TB3-3 should be approximately 15 ±2 ohms. If not remove and replace the corresponding heater.
- (2) A commercially available, variable voltage Meg-ohm tester is required to test for potential heater failures due to increased insulation resistance. Set the tester to 500 VDC and measure the resistance between the water tank and AC RETURN (TB3-4). This tests all three heaters in parallel and essentially provides the value of the worst heater. A value under 1 Mohms indicates that at least one of the heaters needs to be replaced. Using the appropriate wiring diagram,



**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

remove the leads for each heater and measure the resistance between each lead and its heater case. Any heater which measures less than 1 Meg Ohm should be replaced. Any heater which has damage to the epoxy plug sealing the wires, or if the plug is pushed outward, should also be replaced. Lowered resistance or damage to the epoxy indicates a heater that is very likely to fail due to water intrusion.

**L. Thermoswitches**

- (1) Verify that the thermoswitches are closed, by pushing on each red button. If a thermoswitch was open, but the Coffee Maker was not over temperature, verify all mechanical connections to the thermoswitches. If the fault repeats, remove and replace the thermoswitch.
- (2) Thermoswitches (with the button in) should have <1 ohms resistance across their leads. If not remove and replace the thermoswitches.

**M. Optical Sensor U101**

- (1) Clean the optical sensors with an alcohol dampened cotton tipped swab. Observe the water flow through the sensor. If the water flow is erratic or water is getting to the underside of the sensor, realign and reseal the sensor. If the average server level is still out of spec (i.e. short or overflow), remove and replace the optical sensor U101.

**N. Microswitch SW6**

- (1) Disconnect the microswitch (SW6) leads from TB1-7 and TB2-4. Attach an Ohm meter to the leads and raise and lower the brew handle. The microswitch should be open when the brew handle is down and closed when the brew handle is up. If not verify that the actuator is not damaged. If the actuator is OK, then remove and replace the microswitch.

**P. Temperature Adjust**

- (1) Minor temperature adjustments can be made by turning the trimpot (R27) on the CCA. CW increases the temperature. CCW decreases the temperature.

**NOTE:** Large temperature shifts indicate a fault mode. Check for wiring shorts on either RTD wire. Check the CCA per Paragraph 2.B. Check the RTD per Paragraph 3.E.(3).(b).(2) Check the heater relay K1 per Paragraph 3.H. or 3.J.

**Q. Hot Plate W1**

- (1) If the hot plate does not get hot, check for unattached wires. If none, remove and replace the hot plate assembly.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

THIS PAGE IS INTENTIONALLY LEFT BLANK.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

**SCHEMATICS AND WIRING DIAGRAMS**

1. General

A. This section contains the schematics and wiring diagrams for the Coffee Maker assembly.


2. Wiring Diagrams

A. The Coffee Maker receives electrical power from the galley through the Coffee Maker rails (PNs 11160-1 and 11160-5) via connector P2. Figure 2001 shows the system wiring diagram for a Coffee Maker equipped with a mechanical relay, minus the CCA. Figure 2002 shows the system wiring diagram for a Coffee Maker equipped with a solid state relay, minus the CCA. Figure 2003 shows the system wiring diagram for a Coffee Maker equipped with a solid state relay and "Brew Thru" base pan minus the CCA. Figure 2004 shows the CCA, which interfaces with the Coffee Maker through connector J1.

3. Plumbing Schematic

A. The complete plumbing system is represented pictorially in Figure 2005. The plumbing components and their interconnections are shown with part number labels.


**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

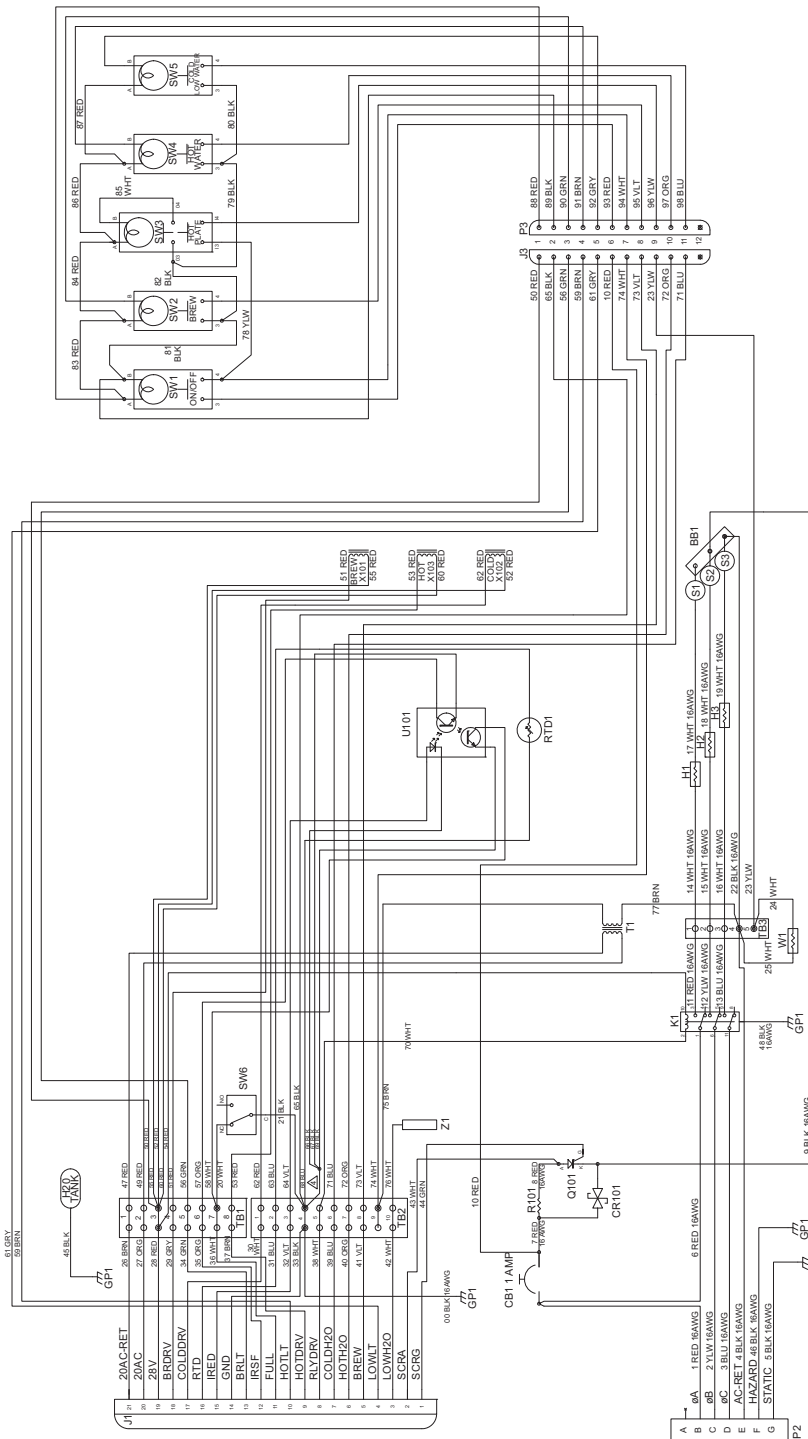

GRAPHIC 25-30-02-99B-006-A01

Figure 2001  
 System Wiring Diagram (Mechanical Relay)


**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

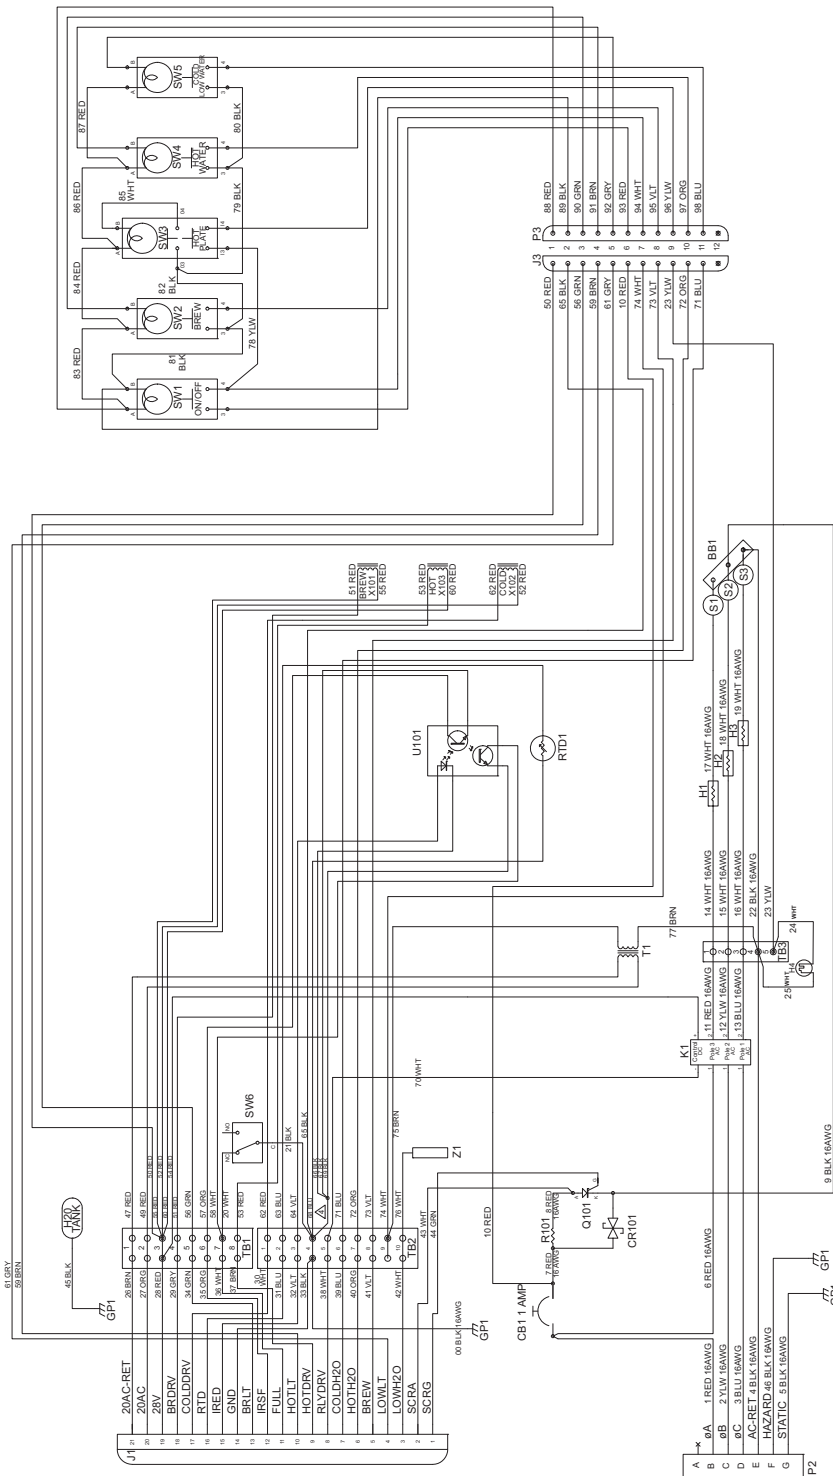

GRAPHIC 25-30-02-99B-007-A01

Figure 2002  
 System Wiring Diagram (Solid State Relay)


**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

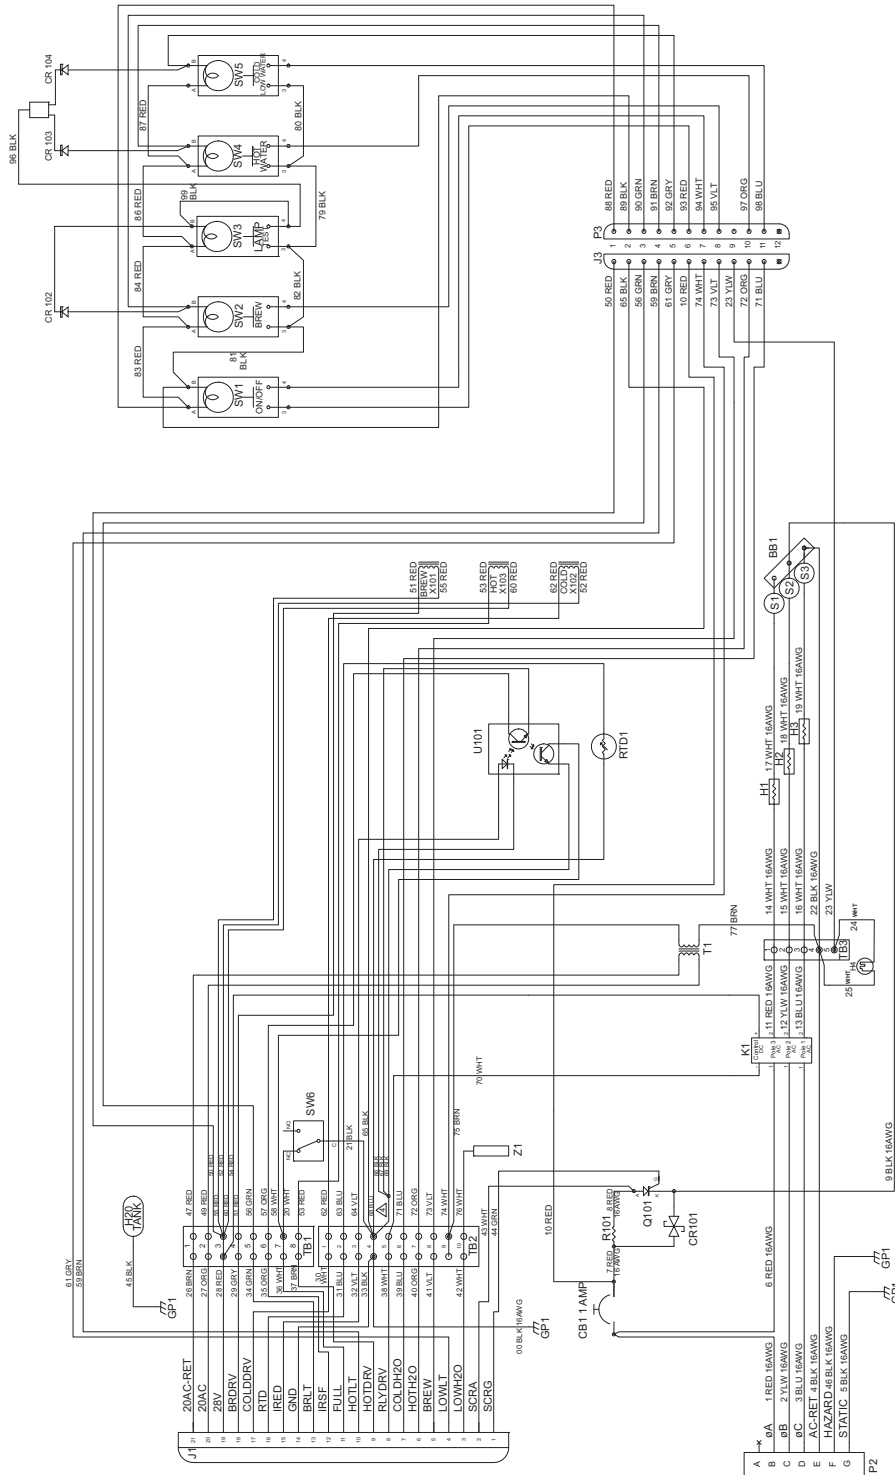

GRAPHIC 25-30-02-99B-008-A01

Figure 2003  
 System Wiring Diagram "Brew Thru"

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

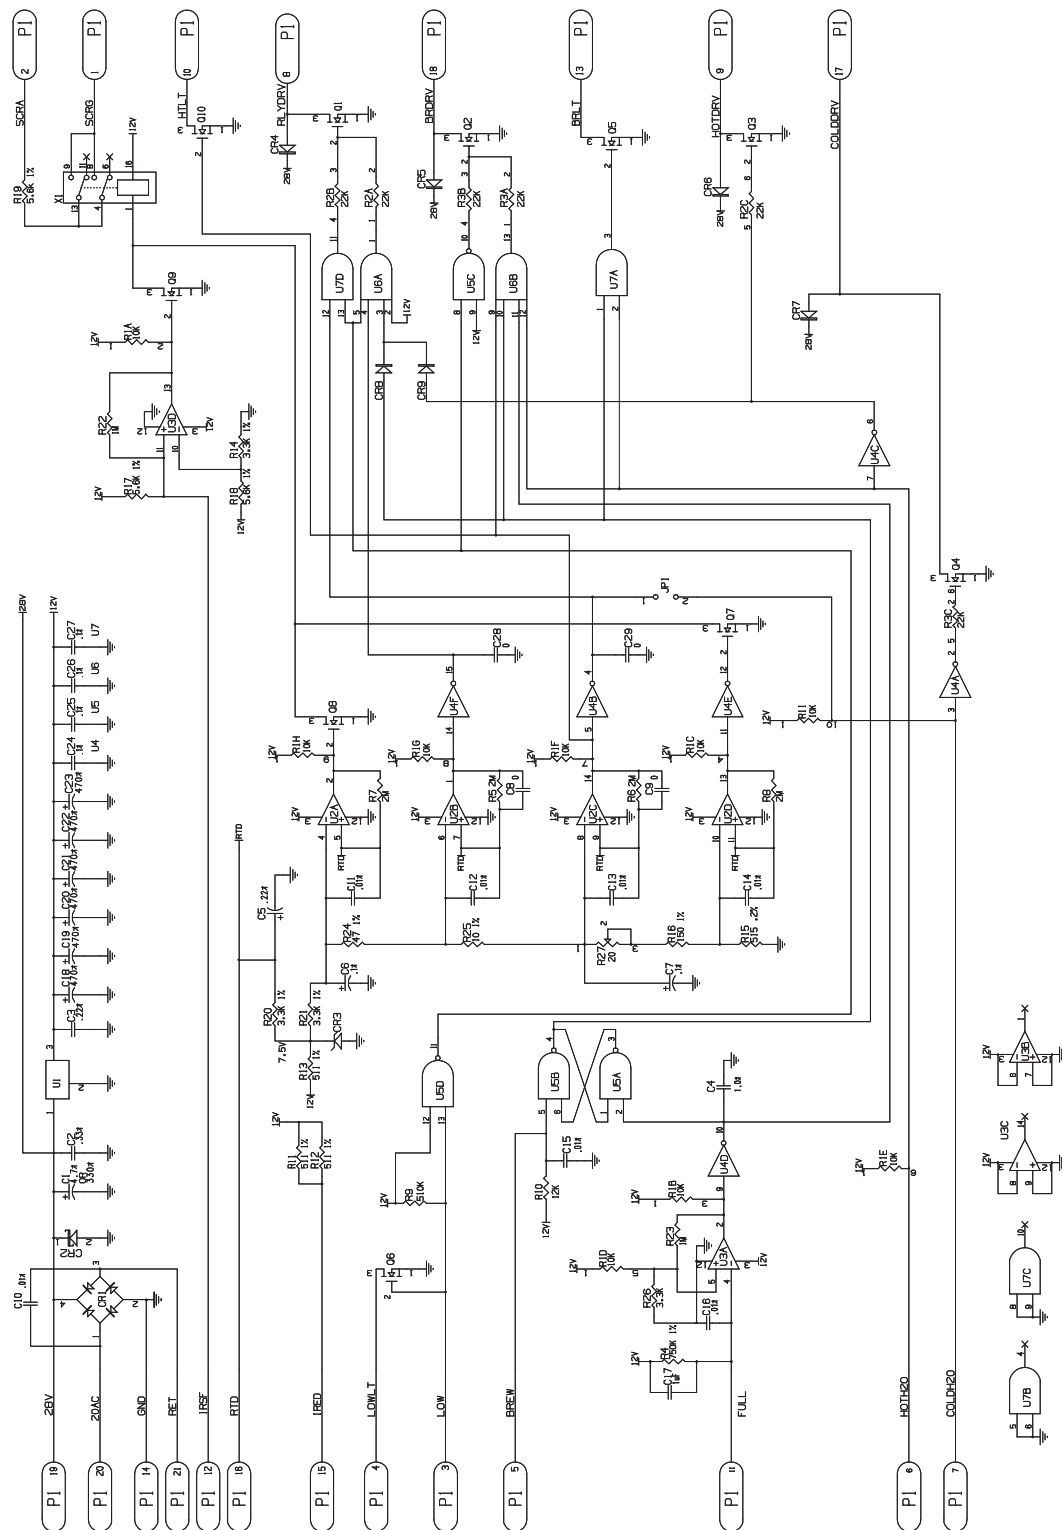

GRAPHIC 25-30-02-99B-009-A01

Figure 2004  
Circuit Card Assembly Schematic





**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

**DISASSEMBLY**

TASK 25-30-02-000-801-A01

1. General

- A. Prior to disassembly carefully read all instructions applicable to the item of equipment undergoing maintenance.
- B. Test each unit in accordance with the procedures in TESTING AND FAULT ISOLATION section. Refer to Fault Isolation section to determine the condition of the unit and the most probable cause of any malfunction. That will determine the extent of disassembly required to effect necessary repairs without complete teardown of the unit.
- C. The tools required for the disassembly of the Coffee Maker assembly are listed in the Table 3001.

NOTE: Equivalent substitutes may be used for listed items.

TABLE 25-30-02-99A-009-A01

Table 3001  
Disassembly Tools

| NOMENCLATURE                     | PARTS/SPEC NO | SOURCE (CAGE)                   |
|----------------------------------|---------------|---------------------------------|
| Angle Head Phillips Screw Driver | None          | Commercially Available          |
| Ratchet with 5/32 in. socket     | None          | Commercially Available          |
| Switch Lamp Remover              | 02-906        | EAO Switch Corporation (V61706) |
| Switch Lens Remover              | 02-905        | EAO Switch Corporation (V61706) |

TASK 25-30-02-000-802-A01

2. Procedure

CAUTION: ALL DISASSEMBLY IS TO BE ACCOMPLISHED WITH THE COFFEE MAKER REMOVED FROM THE RAIL (I.E., POWER AND WATER SUPPLY ARE OFF) AND THE WATER TANK DRAINED.

- A. Switch Module Assembly SW1 - SW5 (Refer to IPL Figure 1)
  - (1) Raise the brew handle and remove the brew cup assembly (5).
  - (2) Remove brew handle knob (10) by removing screw (15).
  - (3) Remove the switch mount cover (20) by removing four screws (30) and one washer (25).
  - (4) Remove wire tie and disconnect the switch module connector (J3/P3).
  - (5) Remove the switch mount assembly (35) by removing four screws (40).

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

- (6) Disassemble the switch mount assembly (35) as follows (refer to IPL Figure 6):
  - (a) Using switch lens remover, (refer to Table 3001) grasp the switch lens cap (5, 10, 15, 20, or 25) to be removed along the vertical sides. Apply adequate pressure on the tool and pull the switch lens cap (5, 10, 15, 20, or 25) away from the switch housing.
  - (b) Use switch lamp remover (refer to Table 3001). Push the tool onto the LED (30) to be removed and pull the LED out.

**B. Brew Head Assembly (Pre SB 25-30-02-9 and SB 25-30-02-11) (Refer to IPL Figure 1)**

- (1) Remove the nut (85, IPL Figure 5) and ferrule set (90, IPL Figure 5) from the male run tee (80, IPL Figure 5) on the flow control assembly (290). The flow restrictor (75, IPL Figure 5) will fall free.
- (2) Remove wire #20 from TB1-7 and wire #21 from TB2-4. Cut wire ties as required to loosen the brew head assembly (95). Remove cable wire clamp (60) by removing nut (75), washer (70), and screw (65).
- (3) Remove two screws (175) from the brew handle assemblies (110 and 115, IPL Figure 3) and coffee maker housing (670).
- (4) With the brew head assembly (95) raised, loosen the set screws (110 and 135) and remove pot retainer brackets (105 and 130). Do not remove screws (115 and 140), retainer bushings (120 and 142), or guide bushings (125 and 145) unless damaged or in need of replacement.
- (5) Remove screws (155 and 165) and remove brew head guides (150 and 160) and brew head assembly (95) from coffee maker housing (670).
- (6) Disassemble the brew head assembly (95) as follows (refer to IPL Figure 3):
  - (a) Remove two shaft bushings (130) and retaining rings (125). Slide LH brew head handle assembly (115) from RH brew head handle assembly (110). Lift RH brew head handle assembly (110) from brew head (5). Remove two roller bushings (120) from the brew head handle assemblies (110 and 115).
  - (b) Remove the bolt (140), washer (145) and flat washers (150) to remove the ground wire assembly (135) from the RH brew head handle assembly (110).
  - (c) Remove four nuts (30), washers (25), and screws (20) from the brew head (5). Remove retainer plate (10) and brew head gasket (15) from the brew head (5).
  - (d) Remove nut (90), washer (85), and screw (80) from water inlet assembly (75). Lift water inlet assembly (75) out of the brew head (5). If necessary for replacement, remove male connector (95) from water inlet assembly (75).
  - (e) Remove two screws (160) from the plunger assemblies (155) and pull plunger assemblies (155) away from the brew head (5). Remove set screw (165) from the plunger assembly (155). Invert plunger assemblies (155) to remove the plunger springs (170) and plungers (175) from the plunger housings (180).
  - (f) Remove two screws (45), star washer (50), and nuts (55) and remove auxiliary actuator (40).

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

- (g) Remove the screws (65) and rod guide screws (70) to remove the slides (60) from the brew head (5).

**C. Brew Head Assembly (Post SB 25-30-02-9 and SB 25-30-02-11) (Refer to IPL Figure 1)**

- (1) Remove the nut (85, IPL Figure 5) and ferrule set (90, IPL Figure 5) from the male run tee (80, IPL Figure 5) on the flow control assembly (290). The flow restrictor (75, IPL Figure 5) will fall free.
- (2) Remove wire #20 from TB1-7 and wire #21 from TB2-4. Cut wire ties as required to loosen the brew head assembly (95). Remove cable wire clamp (60) by removing nut (75), washer (70), and screw (65).
- (3) Remove two brew head handle screws (175) from the brew handle assemblies (105 and 110, IPL Figure 3A) and coffee maker housing (670).
- (4) With the brew head assembly (95) raised, back out the set screws (110 and 135) and remove pot retainer brackets (105 and 130). Do not remove screws (115 and 140), retainer bushings (120 and 142), or guide bushings (125 and 145) unless damaged or in need of replacement.
- (5) Remove screws (155 and 165) and remove brew head guides (150 and 160) and brew head assembly (95A) from coffee maker housing (670).
- (6) Disassemble the brew head assembly (95A) as follows (refer to IPL Figure 3A):
  - (a) Remove two shaft bushings (125) and retaining rings (120). Slide LH brew head handle assembly (110) from RH brew head handle assembly (105). Lift RH brew head handle assembly (105) from brew head (5). Remove two roller bushings (115) from the brew head handle assemblies (105 and 110).
  - (b) Remove the bolt (135), washer (140) and flat washers (145) to remove the ground wire assembly (130) from the RH brew head handle assembly (105).
  - (c) Remove four nuts (30), washers (25), and screws (20) from the brew head (5). Remove retainer plate (10) and brew head gasket (15) from the brew head (5).
  - (d) Remove nut (85), washer (80), and screw (75) from water inlet assembly (70). Lift water inlet assembly (70) out of the brew head (5). If necessary for replacement, remove male connector (90) from water inlet assembly (70).

**NOTE:** For PN 11225-31 only, flow restrictor (155) and o-ring (160) is under the male connector (90).

- (e) Remove two screws (40), star washers (45), and nuts (50) and remove the actuator angle (35).
- (f) Remove the screws (60) and rod guide screws (65) to remove the slides (55) from the brew head (5).

**D. Server Level Optical Sensor U101 (Refer to IPL Figure 1)**

- (1) Disconnect the following wires: #57 from TB1-6, #58 from TB1-7, #64 from TB2-3 and the black wire triplet (#66, #67, and #69) from TB2-4. Clip off the four ring terminals.

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

- (2) Carefully clip the wire ties between the server cavity and the electrical enclosure terminal blocks. Carefully pull the six wires (#57, #58, #64, #66, #67, and #69) through the electrical enclosure grommet and wire clamp.
- (3) Remove six screws (710) and remove the pillow pack plate assembly (705).
- (4) Remove two screws (195) located at the top front edge of the pillow pack plate assembly (705). Break the seal between the server level sensor assembly (190) and the pillow pack plate assembly (705). Pull the server level sensor assembly (190) down, then forward when it clears the retainer rod guides (100). Carefully pull the six wires (#57, #58, #64, #66, #67, and #69) through the coffee maker housing (670) and remove the server level sensor assembly (190).

**E. Limit Switch Angle Assembly (Refer to IPL Figure 1)**

- (1) Remove the screws (205) from the limit switch angle assembly (200). Cut ring terminals off both wires. Gently, pull wires through bundle to remove limit switch angle assembly (200).
- (2) Remove the limit switch angle (210) and the actuator switch (230) by removing the two nuts (supplied with item 235), washers (225) and screws (supplied with item 235).

**F. Water Faucet (Refer to IPL Figure 1)**

- (1) Remove water faucet assembly (240) by removing the two screws (245) and washers (250).
- (2) Remove nut (40, IPL Figure 5) from male connector (30, IPL Figure 5) on flow control assembly (290) to disconnect hose of the water faucet assembly (240).
- (3) Remove the faucet head (260) from the faucet subassembly (285). Remove the o-ring (265) and aerator (255) from the faucet head (260).
- (4) Remove the connector (270) from the faucet subassembly (285).

**G. Flow Control Assembly (Refer to IPL Figure 5)**

- (1) Remove screw (295, IPL Figure 1) and remove flow control assembly (290, IPL Figure 1) from coffee maker housing (670, IPL Figure 1).
- (2) Remove two screws (65) and remove solenoid mounting plate assembly (5) from flow control assembly (1).
- (3) Remove each elbow (15) as required from flow control assembly. Disconnect hose assemblies from elbows (15) as required by removing nuts (25) from elbows.
- (4) Remove street elbow (50), male run tee (80) and male connector (30).
- (5) Separate solenoid valves (10), hex nipple (45), water fitting (60) and tee (55).
- (6) Remove ring terminals (70) from solenoid valves (10), only if damaged.

**H. Locking Pin Block Assembly (Refer to IPL Figure 1)**

- (1) Remove screw (320), post locking pin (330), and locking pin bushing (325) and remove the locking pin assembly (310).

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

- (2) Remove the E-ring (345) and groove pin (340) to remove the locking pin (350) and spring (315) from handle assembly (335).
- (3) Remove screws (740) from angle (735) and remove the screws (750) to remove the locking pin block assembly (745).

**J. Manifold Assembly (Refer to IPL Figure 1)**

- (1) Turn the inlet water plug (425) CCW and remove inlet water plug (425) and manifold (445) from the mounting bracket assembly (365).
- (2) Remove and discard the o-ring (430) from the inlet water plug (425).
- (3) If damaged or defective, remove and replace the valve stem assembly (460) and o-rings (465, 470, and 475) from manifold (445).
- (4) Remove the male connector (450) and elbow (455) from the manifold (445).
- (5) Remove screws (380), flat washers (375), lock nuts (370) and mounting bracket (435) from the mounting bracket assembly (365).
- (6) On PN 11050-11 only, remove the screw (410) and washer (415) to remove the drain tube bracket assembly (405) from the mounting bracket assembly (365).

**K. Electrical Enclosure Assembly (Refer to IPL Figure 1):**

- (1) Remove the screws (485 and 490) washers (495) and remove the electrical enclosure assembly (480) from the coffee maker housing (670).
- (2) Remove the electrical enclosure cover (500) by removing six screws (505).
- (3) Remove screws (515 and 530) and washers (520 and 525) from the circuit card assembly (510).
- (4) Disconnect wire #J101-1 from the circuit card assembly (510).
- (5) Lift circuit card assembly (510) out of electrical enclosure assembly (480).
- (6) Remove transformer (270) (refer to IPL Figure 7):
  - (a) Remove the two screws (275) holding the transformer (270) in place. Carefully pull the transformer (270) away from the electrical enclosure (170) to expose the wires attached to it and beneath it.
  - (b) Disconnect the following wires: #47 from TB1-1, #49 from TB1-2, #75 from TB2-9 and #77 from TB3-4. Carefully cut wire ties as required and remove the transformer (270).
- (7) If present, remove electromechanical relay K1 (Refer to IPL Figure 1A):
  - (a) Remove the two screws (10) and two washers (15) that hold the relay housing assembly (5) in place. Lift the housing (5) off the socket (50).

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

- (b) Remove wire #54 from TB1-3. Remove wire #70 from TB2-5. Remove wire #6 from CB1-1. Remove wire #11 from TB3-1, wire #12 from TB3-2 and wire #13 from TB3-3. Extract pins C and D from P2 per REPAIRS section.
  - (c) Carefully lift relay socket (50) out of electrical enclosure (480, IPL Figure 1).
  - (d) Remove two relay cover screws (30) and cover (35). Disconnect the ground wire #48 from the screw (240, IPL Figure 7).
  - (e) Carefully insert a screw driver through the relay housing assembly (5) slot and under the relay. Gently rotate the screw driver to dislodge the relay. Lift the relay out without snagging the ground wire.
- (8) If present, remove solid state relay K1 (Refer to IPL Figure 1B)

**CAUTION:** ELECTROSTATIC DISCHARGE SENSITIVE (ESDS) COMPONENT, USE PROPER HANDLING.

- (a) Remove two screws (5 or 10), flat washers (20), hold down bar (15, if present), to remove the heat sink (55) and relay cover plate (65) from the electrical enclosure assembly (480, IPL Figure 1).
  - (b) Unsolder wires from solid state relay (25), refer to system wiring diagram Figures 2002 or 2003 for wire numbers.
  - (c) To remove solid state relay (25) from heat sink (55) remove two screws (30), lock washers (35) and flat washers (40).
- (9) Remove circuit breaker CB1 (refer to IPL Figure 7):
- (a) Remove wires #1 and #6 from CB1-1.
  - (b) Remove wires #7 and #10 from CB1-2.
  - (c) Remove retaining nut and washer from the circuit breaker CB1 (180).
- (10) Remove SCR assembly (Refer to IPL Figure 7):
- (a) Remove screws (205) and nuts (200) and remove the SCR assembly (195) from the electrical enclosure assembly (480, IPL Figure 1).
  - (b) It is recommended that SCR assembly (195) be removed prior to replacing the resistor (210), SCR (215), and varistor (220). The removal can be accomplished by using a low profile angle head Phillips screw driver and a small ratchet with a 5/32 inch socket (refer to Table 3001).
  - (c) Remove the defective component by unsoldering the appropriate wires or replace entire assembly.


**L. Tank Assembly (Refer to IPL Figure 4)**

- (1) Remove the screws (565, IPL Figure 1), standoffs (560B, IPL Figure 1), and thermostat cover (555, IPL Figure 1) from the tank assembly.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

- (2) Remove the self-locking nuts (205), washers (210), and screws (215) from thermostats (195).
- (3) Disconnect wire #9 from S2-2 and wire #22 from S3-2 and remove the bus bar (200).
- (4) Disconnect the wire (#17, #18, or #19) from the thermostats (195).
- (5) Remove self-locking nuts (190) and pull the thermostats (195) from the mounting studs.
- (6) Remove immersion heaters (10) from the tank assembly. Refer to Figure 3001 for immersion heater (10) orientation.
  - (a) Make sure that the water tank is drained.
  - (b) Remove terminal block cover (90, IPL Figure 7) from TB3 (95, IPL Figure 7).
  - (c) Disconnect wire #14 from TB3-1 and wire #17 from thermostat S1. Cut wire ties as required and pull heater wires through protective sleeving to the bottom of the tank assembly. Turn the immersion heater H1 (10) CCW until it is free of the tank assembly. Remove o-ring (25) from the immersion heater (10).
  - (d) Disconnect wire #15 from TB3-2 and wire #18 from thermostat S2. Cut wire ties as required and pull heater wires through protective sleeving to the bottom of the tank assembly. Turn the immersion heater H2 (10) CCW until it is free of the tank assembly. Remove o-ring (25) from the immersion heater (10).
  - (e) Disconnect wire #16 from TB3-3 and wire #19 from thermostat S3. Cut wire ties as required and pull heater wires through protective sleeving to the bottom of the tank assembly. Turn the immersion heater H3 (10) CCW until it is free of the tank assembly. Remove o-ring (25) from the immersion heater (10).

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

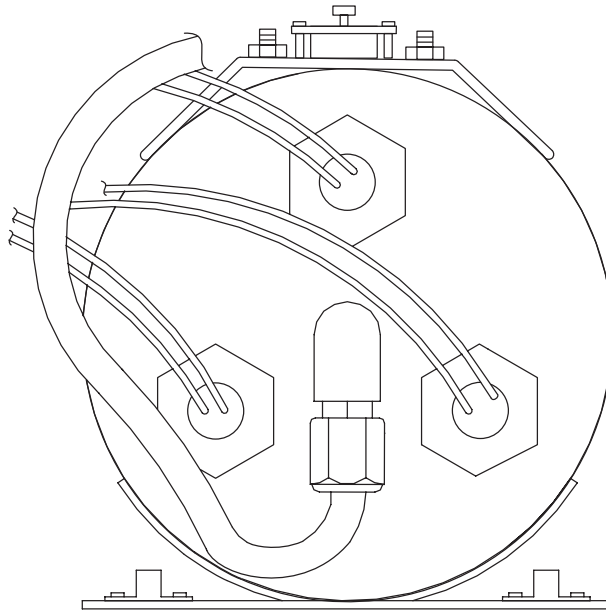

GRAPHIC 25-30-02-99B-011-A01

Figure 3001  
Tank - Bottom View

- (7) Remove the filler tube fitting assembly (30 or 35) and male branch tee (40) from the tank assembly.
- (8) Remove wire #68 from TB2-4 and wire #63 from TB2-2. Clip ring terminals and wire ties as required to remove wire from the electrical enclosure. Unscrew the temperature probe (55) CCW until it is free of the tank assembly.
- (9) Remove nuts (65), washers (70) and wire #76 from the top of the tank level probe (60). Turn the tank level probe (60) CCW until the tank level probe (60) is free of the tank assembly.
- (10) Remove the pressure relief hose assembly (110) from the pressure relief valve (75). Turn the pressure relief valve (75) CCW to remove from the tank assembly.
- (11) Remove elbow (145) and filter assembly (160) from the tank assembly.
- (12) Remove elbow (170) from the tank assembly.

M. Hot Plate W1 (Pre SB 25-30-02-15) (Refer to IPL Figure 1)

- (1) Remove screw (820), washer (825) and wire clamp (815) from the base pan assembly (830).
- (2) Remove two screws (805), two washers (810) and ground wire assembly (800) from the base pan assembly (830).
- (3) Remove the heating elements form the base pan assembly (830) as follows:



**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

- (a) Find and remove wires #24 and #25 from TB3-4 and TB3-5. Remove wire ties as required and carefully pull wires through protective sleeving to bottom of coffee maker base pan (910).
- (b) Put the Coffee Maker on its side. Remove the screws (895 and 900) and washers (905).
- (c) Put the Coffee Maker to the up right position and remove heater cover (860), o-ring (865), cal-rod heater (870) and heater plate (890) from base pan (910).

**N. Hot Plate W1 (Post SB 25-30-02-15) (Refer to IPL Figure 1)**

- (1) Remove screw (820), washer (825) and wire clamp (815) from the base pan assembly (830).
- (2) Remove screws (805A and 805B), washers (810A) and ground wire assembly (800A) from the base pan assembly (830).
- (3) Remove the heating elements from the base pan assembly (830) as follows:
  - (a) Find and remove wires #24 and #25 from TB3-4 and TB3-5. Clip off ring terminals (885), remove wire ties as required and carefully pull wires through protective sleeving to bottom of coffee maker base pan (910).
  - (b) Put the Coffee Maker on its side. Remove the screws (895A and 900) and washers (905A).
  - (c) Put the Coffee Maker to the up right position and remove cover assembly (860A), o-ring (865A), heater (870B) and heater retainer (890B) from base pan (910).

**P. Base Pan Assembly (Refer to IPL Figure 1)**

- (1) Remove screws (835 and 845), washers (840 and 850) and remove the base pan assembly (830) from the base pan supports (760, 770, and 780).
- (2) For PN 11050-11 only, remove screw (935) and remove the drain tube (925) and screen drain (930).

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

THIS PAGE IS INTENTIONALLY LEFT BLANK.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

**CLEANING**

TASK 25-30-02-100-801-A01

1. General

**CAUTION:** TURN ALL POWER TO COFFEE MAKER AND COMPARTMENT OFF. EXCESSIVE WATER MAY CAUSE A SHORT CIRCUIT. USE A DAMP CLOTH ONLY.

**CAUTION:** DO NOT USE ANY SOLVENTS, DEGREASERS, DETERGENTS, AEROSOL SPRAY, ETC., AS THESE HARM SENSORS SWITCHES AND PLASTIC PARTS.

**NOTE:** The Coffee Maker should be completely cleaned and the brew head lubricated every 2000 operating hours.

The materials required for cleaning the Coffee Maker are listed in Table 4001.

**NOTE:** Equivalent substitutes may be used for listed items.

TABLE 25-30-02-99A-010-A01

Table 4001  
Cleaning Materials

| NOMENCLATURE                      | PART/SPEC NUMBER                                                                                            | SOURCE (CAGE)          |
|-----------------------------------|-------------------------------------------------------------------------------------------------------------|------------------------|
| Cloths, Cleaning, Low-Lint Type 1 | A-A-59323                                                                                                   | Commercially Available |
| Clean Water                       | None                                                                                                        | Commercially Available |
| Isopropyl Alcohol                 | TT-I-735                                                                                                    | Commercially Available |
| Sulphamic Acid Based Cleaner      | Sulphamic acid 5% solution, LimeAway, Vinegar, or other agent that removes calcium, lime, and rust deposits | Commercially Available |

TASK 25-30-02-100-802-A01

2. Procedure

A. Coffee Maker Periodic Cleaning Instructions (refer to IPL Figure 1 and Table 4001)

**WARNING: ALLOW WATER TANK TO COOL BEFORE DRAINING.**

- (1) Drain Coffee Maker by turning valve stem assembly (460) CCW until water flows from manifold (445).
- (2) Fill water tank with a sulphamic acid based cleaner that acts on calcium, lime, and rust deposits.

**NOTE:** Follow manufacturer's precaution for use of cleaner.

- (3) Operate Coffee Maker for part of a cycle to allow cleaner to circulate.
- (4) Draw half a cup of cleaner through the hot water solenoid and faucet.


**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

- (5) Turn off power and leave the cleaner in Coffee Maker for minimum amount of time required to remove the mineral deposits.
- (6) Drain the cleaner from Coffee Maker. (Refer to Paragraph 2.A.(1).)
- (7) Flush all traces of the cleaner out of the Coffee Maker with clean water. Also, flush hot water through the solenoid and faucet.
- (8) Clean all surfaces in accordance with approved methods using warm water. Particular care should be taken to remove coffee residue that may have accumulated within the moving areas of the server retainer. If coffee leak is evident under the hot plate, replace o-ring (865). Refer to hot plate disassembly and assembly procedures in DISASSEMBLY and ASSEMBLY sections of this manual.
- (9) Allow parts to dry thoroughly at room temperature, or blow dry parts with filtered, oil-free, compressed air.

**B. Server Level Optical Sensor U101**

- (1) Insert cotton tipped swab moistened with isopropyl alcohol (refer to Table 4001) into sensor ports and rotate to clean lens. Refer to Figure 4001 for location of sensor ports. Use the dry end of the cotton tipped swab to dry the lens. Check for lint left in ports.
- (2) This cleaning should be done every week.

**CAUTION:** ACETONE OR MEK WILL RUIN THE SENSOR. DO NOT USE UNAPPROVED SOLVENTS TO CLEAN THE SENSOR.

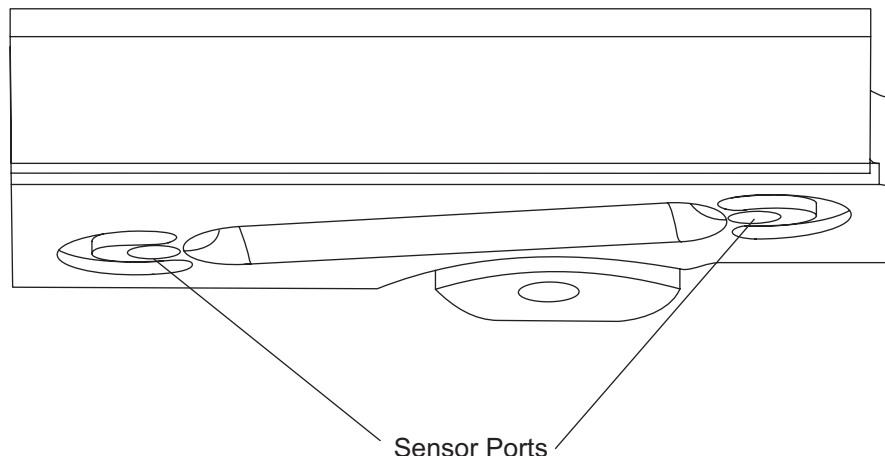

GRAPHIC 25-30-02-99B-012-A01

Figure 4001  
Optical Sensor Cleaning Locations

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

**C. Water Tank Level Probe Z1**

- (1) The tank level probe should be inspected every time that a Coffee Maker has been removed for maintenance.
- (2) Contamination and light surface rust can be removed from the probe tip with a non-metallic scouring pad, provided that either the pad is new or has only been used on stainless steel. Cleaning with metal tools or a scouring pad that has been used on different metals will embed iron particles on the probe and become a new source of rust.
- (3) Buildup on the Teflon sleeving can be removed with alcohol.
- (4) Polishing of the stainless steel probe tip is permitted provided that the polishing compound contains no metallic particles. Be sure to remove all traces of the polishing compound when finished.
- (5) There are several types of corrosion which can attack the stainless steel of the tank level probe. Normally the passivation layer protects the stainless steel from corrosion. However, if the passivation layer is penetrated, lost or destroyed, corrosion can attack the stainless steel very rapidly. The most common types for this application are pitting, general corrosion, intergranular corrosion and stress corrosion cracking.
- (6) The types of corrosion listed above have different characteristics but all will erode the stainless steel. More than one can be present at a time, and generally once started will continue to erode the stainless steel. Any probe that is attacked by any of these forms of erosion should be replaced.
- (7) Remove water tank level sensor per DISASSEMBLY section, Paragraph 2.K.
- (8) Inspect per the above and determine if the probe is serviceable, if not obtain a replacement and install per ASSEMBLY section, Paragraph 2.C.
- (9) Determine and apply the appropriate method of cleaning.
- (10) Install per ASSEMBLY section, Paragraph 2.C.

**D. Water Faucet Screen**

- (1) With soft grip pliers remove the faucet aerator (255).
- (2) Soak aerator screen in isopropyl alcohol and flush with clean water as required until the screen is free of debris. (Remove and replace the aerator (255), if the screen is damaged).

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

THIS PAGE IS INTENTIONALLY LEFT BLANK.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

**INSPECTION/CHECK**

**TASK 25-30-02-200-801-A01**

1. General

- A. The line operational check enables the Coffee Maker assembly to be checked while still installed on an aircraft.

**TASK 25-30-02-200-802-A01**

2. Procedure

A. Visual Inspection (Refer to IPL Figure 1)

- (1) Inspect the Coffee Maker for physical damage and verify that all parts are present and secure.
- (2) Inspect the power connector P2 for damage and verify that the pins are straight and not excessively worn. Refer to REPAIR section Paragraph 2.B.
- (3) Inspect the water inlet plug (425) for damage and contamination.
- (4) Inspect the bottom of the Coffee Maker to verify that all wires are properly tied and that the Coffee Maker is free of obstruction to installation.
- (5) Check rail supports (790) for straightness.
- (6) Check brew handle for proper operation.
- (7) Inspect switch lens caps (refer to IPL Figure 6, Items 5, 10, 15, 20, and 25) for cracks, marks or illegible printing.

B. Electrical Enclosure

- (1) Check that all parts are present and undamaged.
- (2) Check terminal block attachments for tightness.
- (3) Check that wires are undamaged, secured and routed out of the way as much as possible.
- (4) Check connector J1 for damaged contacts and good solder joints.
- (5) Inspect relay socket for corrosion or overheated wires.
- (6) Check the circuit breaker CB1 for proper operation.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

C. Pressure Relief Valve

- (1) Check the pressure relief valve (refer to IPL Figure 4, Items 75A, 95) for proper operation. Refer to TESTING AND FAULT ISOLATION section Paragraph 2.P.

D. Coffee Maker Line Operational Check (Refer to Table 5001)

- (1) This section provides a short operational check that may be performed with the Coffee Maker installed on the aircraft. A wrist watch, small ruler and pocket thermometer is required to perform this check. Operational check presumes that the Coffee Maker is installed and that power and water are turned on.
  - (a) Clean the Coffee Maker. Refer to Cleaning section. The switches should not be sticky from coffee. The ON/OFF switch should illuminate when depressed. Install a server and lower the brew handle. The BREW light should illuminate when depressed.
  - (b) If the tank was not full, the LOW WATER light will come on until it fills. If the tank was full skip this check.
  - (c) Throughout the entire check look for evidence of water or coffee leakage.
  - (d) The HOT WATER light should illuminate a couple of minutes after power is turned on and the tank is full. When the hot water light comes on the Coffee Maker will start brewing.
  - (e) Within five minutes the BREW light should go out indicating that brew cycle is complete.
  - (f) The server water or coffee level should be about one and a half inches from the top of the server.
  - (g) The temperature of the water or coffee in the server should be  $175^{\circ} \pm 10^{\circ} \text{ F}$  ( $79^{\circ} \pm 6^{\circ} \text{ C}$ ).
  - (h) Pushing the HOT WATER button should provide hot water at the faucet after the HOT WATER light comes on.
  - (i) Pushing the COLD WATER button should provide COLD WATER at the faucet.

**WARNING: DO NOT TOUCH HOT PLATE.**

- (j) The HOT PLATE button should illuminate when depressed and the hot plate should get hot.
- (k) Raising the brew handle should extinguish the BREW light and interrupt the brew cycle. Lower the brew handle and push BREW to continue operation.



**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

TABLE 25-30-02-99A-011-A01

Table 5001  
Coffee Maker Operational Check

| Technician:        | Date:                                    | Ser. No.: |
|--------------------|------------------------------------------|-----------|
| TEST               | CRITERIA                                 | RESULTS   |
| Visual             | Pass/Fail                                |           |
| Low Water          | Pass/Fail                                |           |
| Water Leaks        | Pass/Fail                                |           |
| HOT WATER Light    | ~2 minutes                               |           |
| Brew Time          | <5 minutes                               |           |
| Brew Level         | ~1.5 in (38.1 mm) from top of the server |           |
| Server Temperature | 175° ±10° F<br>(79° ±6° C)               |           |
| Hot Water          | Pass/Fail                                |           |
| Clod Water         | Pass/Fail                                |           |
| Hot Plate          | Pass/Fail                                |           |
| Brew Interrupt     | Pass/Fail                                |           |

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

THIS PAGE IS INTENTIONALLY LEFT BLANK.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

**REPAIR**

TASK 25-30-02-300-801-A01

1. General

- A. All parts found defective or inoperative in TESTING AND FAULT ISOLATION section and INSPECTION/CHECK section should be replaced or repaired.
- B. Standard parts such as screws, nuts, and washers should be replaced rather than repaired for economy purposes.
- C. The tools required for the repair of the Coffee Maker Assembly are listed in Table 6001.

NOTE: Equivalent substitutes may be used for the listed items.

TABLE 25-30-02-99A-012-A01

Table 6001  
Repair Tools

| NOMENCLATURE                   | PART/SPEC NUMBER | SOURCE (CAGE)                              |
|--------------------------------|------------------|--------------------------------------------|
| CCA and Switch Module Test Box | 11238-1          | B/E Aerospace, Inc. (V63367)               |
| J2/P2 Crimper                  | M22520/1-01      | Daniels Manufacturing Corporation (V11851) |
| J2/P2 Crimper Turret           | M22520/1-02      | Daniels Manufacturing Corporation (V11851) |
| J2/P2 Pin Extraction Tool      | M81969/19-08     | Daniels Manufacturing Corporation (V11851) |
| J2/P2 Pin Insertion Tool       | M81969/17-04     | Daniels Manufacturing Corporation (V11851) |
| J3/P3 Crimper                  | 90325-1          | Tyco Electronic Corporation (V00779)       |
| J3/P3 Pin Extraction Tool      | 455822-2         | Tyco Electronic Corporation (V00779)       |
| Switch Alignment Tool          | 01-906           | EAO Switch Corporation (V61706)            |
| Switch Mounting Wrench         | 01-907           | EAO Switch Corporation (V61706)            |

TASK 25-30-02-300-802-A01

2. Procedure

A. Circuit Card Assembly

CAUTION: REPLACEMENT OF ELECTRONIC COMPONENTS ON THE CCA REQUIRES FUNCTIONAL TEST AND CCA CERTIFICATION. THE COFFEE MAKER COULD OVERHEAT AND/OR MALFUNCTION IF INSTRUCTIONS ARE NOT COMPLIED WITH.

- (1) Repair of the CCA requires the CCA and Switch Module Test Box (refer to Table 6001). An instructions and procedures manual comes with the test box.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

**B. Power Connector P2**

(1) Pin Extraction

CAUTION: DO NOT ATTEMPT TO USE EXTRACTION TOOL (REFER TO TABLE 6001) IN ANY CONTACT HOLE UNLESS A CONTACT IS LOCKED IN PLACE.

CAUTION: DO NOT TWIST OR TURN TOOL WHILE EXTRACTING A CONTACT.

- (a) Remove the strain from the pin to be extracted by disconnecting the opposite end of the wire (except pins C and D). Push extraction tool firmly onto pin such that the pin retention spring is unlocked. Push slider until it stops, this ejects the pin from the connector.

(2) Pin Replacement

- (a) Extract damaged pins. If the pin is from position F or G the entire wire and ring terminal must be replaced. (Do not attempt to shorten these ground wires as this will strain the connector and inhibit alignment.) All other pins (positions B, C, D, and E) have sufficient wire length to be replaced at least once.

(3) Power Connector Removal

- (a) Extract pins C and D. Disconnect wire #1 from CB1-1, wire #4 from TB3-4, and wires #5 and #46 from the ground stud. Slide the retaining ring of the wires.

(4) Pin Insertion

- (a) Place crimped contact into the grommet hole at the rear of the connector. Using the insertion tool (refer to Table 6001) push the contact slowly into the connector until it snaps into position. Be careful not to cock the tool during insertion.

(5) Power Connector Installation

- (a) Grind down the alignment pin on the connector to a maximum length of 0.08 inch (2.032 mm).
- (b) Insert crimped contacts into positions B, E, F, and G. (Insert an uncrimped pin and filler into position A). Feed wires through hole in the electrical enclosure and align the connector. Slide the retaining ring over the wires onto the connector, but leave it loose. Insert pins C and D and tighten the retaining ring.

**C. Switch Module**

(1) Connectors J3 and P3

- (a) Repair of the switch module connector requires both of J3/P3 related tools listed in Table 6001.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

(2) Switches SW1 - SW5

- (a) Carefully remove the wire ties from the switch module and spread the wires away from the defective switch. Unsolder all wires attached to the defective switch. Remove the retaining ring with switch mounting tool (refer to Table 6001) and slide the switch out of the module. Insert new switch, align with switch alignment tool (refer to Table 6001) and tighten retaining ring with switch mounting tool (refer to Table 6001). Solder wires back to the same position that they were removed from switch. (Refer to IPL Figure 6, as required.)

D. Relay Socket (Refer to IPL Figure 1A, Item 50)

- (1) The relay socket contacts can be repaired by carefully bending the contact locking tabs and swapping the defective contact with an unused contact (socket positions 4, 5, or 8).

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

THIS PAGE IS INTENTIONALLY LEFT BLANK.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

**ASSEMBLY**

TASK 25-30-02-400-801-A01

1. General

**CAUTION:** DO NOT ALLOW LOCTITE THREAD SEALANT TO CONTACT THE BREW CUP OR BASE PAN.

A. The equipment and materials required for assembly of the Coffee Maker are listed in Table 7001.

**NOTE:** Equivalent substitutes may be used for listed items.

TABLE 25-30-02-99A-013-A01

Table 7001  
Assembly Materials and Equipment

| NOMENCLATURE                                    | PART/SPEC NUMBER                     | SOURCE (CAGE)                                                                                                      |
|-------------------------------------------------|--------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| Adhesive, Silicone                              | 736 Red<br>AD-50005                  | Dow Corning Corporation (V71984)<br>B/E Aerospace, Inc. (V63367)                                                   |
| Adhesive, Threadlock                            | Loctite® 242                         | Commercially Available                                                                                             |
| Heat Sink Compound                              | 10-8109<br>CM-50019                  | Waldom, Inc. (V72653)<br>B/E Aerospace, Inc. (V63367)                                                              |
| Nut Driver, 1/4 in.                             | None                                 | Commercially Available                                                                                             |
| Nylon Wire Tie Downs                            | MS3367-4-9                           | Commercially Available                                                                                             |
| Open End Wrench<br>1/4 in., 7/8 in.             | None                                 | Commercially Available                                                                                             |
| Petroleum Jelly                                 | CM-50015                             | B/E Aerospace, Inc. (V63367)                                                                                       |
| Teflon Tape - 1/4 in.                           | MS-STR-4<br>TT-7454                  | Swagelok Companies (V02570)<br>B/E Aerospace, Inc. (V63367)                                                        |
| Thread Lubricant                                | Never Seez<br>CM-50016               | Bostik, Inc. (V1Y0Z7)<br>B/E Aerospace, Inc. (V63367)                                                              |
| Translucent Silicone Rubber<br>Adhesive/Sealant | 732 Clear RTV<br>RTV 108<br>AD-50002 | Dow Corning Corporation (V71984)<br>Momentive Performance Materials, Inc. (V01139)<br>B/E Aerospace, Inc. (V63367) |

TASK 25-30-02-400-802-A01

2. Procedure

A. Base Pan Assembly (Refer to IPL Figure 1)

- (1) For PN 11050-11 only, attach screw (935), drain tube (925) and screen drain (930).
- (2) Apply a thin coat of grease to the underside of base pan supports and install the base pan assembly (830) to the base pan supports (760, 770, and 780) and attach with screws (835 and 845) and washers (840 and 850).

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

**B. Hot Plate W1 (Post SB 25-30-02-15) (Refer to IPL Figure 1)**

- (1) Install the heating elements to the base pan assembly (830) as follows:
  - (a) Place o-ring (865A) on the cover assembly (860A) and attach heater (870B) to the cover assembly (860A).

NOTE: Use silicone rubber adhesive (refer to Table 7001) evenly between heater (870B) and cover assembly (860A) and all around the perimeter.

- (b) Add heater retainer (890B) on top of the heater (870B) and use silicone rubber adhesive (refer to Table 7001) to seal the perimeter to prevent moisture from getting to the wiring.

CAUTION: DO NOT USE THREAD SEALANT (FOR EXAMPLE LOCTITE) ON SCREWS.

- (c) With the coffee maker in the upside down position, insert cover assembly (860A), o-ring (865A), heater (870B) and heater retainer (890B) into the cavity of the base pan (910).
    - (d) Install screws (895A) and washers (905A) around the cavity and one screw (900) and one washer (around) in the center of the cover assembly (860A).
    - (e) Route wires #24 and #25 through protective sleeving (875) and attach ring terminals (885).
    - (f) Route and connect wire #24 to TB3-4 and wire #25 to TB3-5. Use wire ties as required to be sure wiring does not touch the tank (545, IPL Figure 1) or immersion heaters (10, IPL Figure 4).
  - (2) Install the ground wire assembly (800A) with screws (805A and 805B) and washers (810A).
- NOTE: Use chemical coating to cover fastener heads and washers. The chemical coating must extend beyond the grounding terminal and be in contact with the assembly cover.
- (3) Attach the heater wiring to the base pan assembly (830) using screw (820), washer (825) and wire clamp (815).

**C. Tank Assembly (Refer to IPL Figure 4)**

- (1) Install the elbow (170) to the top of tank assembly.
- (2) Apply teflon tape (refer to Table 7001) to the threads and install filter assembly (160) and elbow (145) on top of the tank assembly.
- (3) Apply teflon tape to the threads and install the pressure relief valve (75) into the top of tank assembly and rotate CW. Connect the pressure relief hose assembly (110) to the pressure relief valve (75).
- (4) Apply thread lock compound to threads of tank level probe (60). Insert the tank level probe (60) into tank assembly and tighten.

CAUTION: DO NOT USE 0.56 INCH (14.29 MM) FITTING FOR REMOVAL OR INSTALLATION. OVERTIGHTENING THIS FITTING COULD GROUND THE TANK WATER LEVEL PROBE (60).



**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

- (5) Attach nut (65) onto the top of the tank level probe (60). Hand tighten the nut (65) against the Teflon shoulder. Place the washer (70) on top of the nut (65). Place the ring terminal of wire #76 next followed by the washer (70). Place the other nut (65) onto the 6-32 threads and make it finger tight. Using a quarter inch open end wrench (refer to Table 7001) to hold the bottom nut, tighten the top nut with a quarter inch nut driver (refer to Table 7001) until both of the lock washers are fully compressed.

NOTE: Some radial movement of the ring terminal may still be possible after tightening. As long as nuts, washers and the ring terminal rotate as a unit this is acceptable. Do not continue to tighten the nuts any further, as this will only deform the Teflon shoulder.

- (6) Apply teflon tape (refer to Table 7001) to the threads and insert the temperature probe (55) into tank assembly. Turn CW until "finger" tight.
- (7) Route wires into electrical enclosure. Connect wire #63 to TB2-2 and wire #68 to TB2-4. Secure wires with wire tie as required.
- (8) Apply teflon tape (refer to Table 7001) to the threads and install the filler tube fitting assembly (30 or 35) in the bottom of tank assembly and orient per Figure 3001 of DISASSEMBLY section.
- (9) Install the immersion heaters (10) to the tank assembly as follows:

- (a) Install new o-ring (25) onto the immersion heater H1 (10) and insert into the bottom of the tank assembly. Rotate CW to advance threads. Continue until "finger" tight and then use a 7/8 wrench (refer to Table 7001) to tighten snugly into tank assembly. Attach wire #14 to TB3-1 and wire #17 to thermoswitch S1.

NOTE: Immersion heater (10) should turn freely by hand to start threads properly.

- (b) Install new o-ring (25) onto the immersion heater H2 (10) and insert into the bottom of the tank assembly. Rotate CW to advance threads. Continue until "finger" tight and then use a 7/8 wrench (refer to Table 7001) to tighten snugly into tank assembly. Attach wire #15 to TB3-2 and wire #18 to thermoswitch S2.

NOTE: Immersion heater (10) should turn freely by hand to start threads properly.

- (c) Install new o-ring (25) onto the immersion heater H3 (10) and insert into the bottom of the tank assembly. Rotate CW to advance threads. Continue until "finger" tight and then use a 7/8 wrench (refer to Table 7001) to tighten snugly into tank assembly. Attach wire #16 to TB3-3 and wire #19 to thermoswitch S3.

NOTE: Immersion heater (10) should turn freely by hand to start threads properly.

- (10) Install terminal block cover (90, IPL Figure 7) to TB3 (95, IPL Figure 7).
- (11) Route wires through protective sleeving to prevent chafing and secure the wires with wire ties as required.
- (12) Install thermoswitch S1 - S3 (195):
- (a) Position the thermoswitches (195) onto the mounting stud and secure each thermoswitch with self-locking nuts (190).

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

- (b) Attach wires #17, #18 and #19 to S1-1, S2-1, and S3-1 respectively. Then place buss bar (200) on S1-2, S2-2, and S3-2. Attach wire #9 to S2-2 and wire #22 to S3-2. Secure in place with screws (215), washers (210), and self-locking nuts (205).
- (c) Attach thermostat cover (555, IPL Figure 1) with standoffs (560B, IPL Figure 1) and screws (565, IPL Figure 1) to the tank assembly.

**D. Electrical Enclosure Assembly (Refer to IPL Figure 1):**

- (1) Install SCR assembly (Refer to IPL Figure 7):

**NOTE:** Per DISASSEMBLY section 2.J.(10) resistor (210), SCR (215), and varistor (220) should have been removed as an assembly or the defective part replaced.

- (a) Attach the SCR assembly (195) to the electrical enclosure (480, IPL Figure 1) with screws (205) and nuts (200).
- (b) Route wires and attach per the System Wiring Diagram, Figures 2001, 2002, or 2003.
- (2) Install circuit breaker CB1 (Refer to IPL Figure 7):
  - (a) Attach wires #1 and #6 to CB1-1.
  - (b) Attach wires #7 and #10 to CB1-2.
  - (c) Insert circuit breaker CB1 (180) with its alignment guide into hole on the back of the electrical enclosure (170) and attach with washer and retaining nut.
- (3) If removed, install the solid state relay K1 (Refer to IPL Figure 1B)

**CAUTION:** ELECTROSTATIC DISCHARGE SENSITIVE (ESDS) COMPONENT, USE PROPER HANDLING.

- (a) Begin by cleaning any remaining heat sink compound from solid state relay and heat sink. Apply heat sink compound (refer to Table 7001) to back side of solid state relay (25) insuring no voids between heat sink (55) and white ceramic on back of solid state relay (25).
- (b) Securely attach solid state relay (25) using flat washers (40), lock washers (35) and screws (30). Torque both screws to 40 in-oz (2.5 in-lbs).
- (c) Solder wires to solid state relay (25) leads per wiring diagram Figure 2002 or 2003.
- (d) Place the relay cover plate (65) on top of electrical enclosure (480, IPL Figure 7) and then attach heat sink (55) using screws (5) and washers (20) or heat sink (55A) using two screws (10) and hold down bar (15).
- (4) If removed, install transformer (270) (refer to IPL Figure 7):
  - (a) Connect the following wires: #47 to TB1-1, #49 to TB1-2, #75 to TB2-9 and #77 to TB3-4. Secure with wire ties as required.
  - (b) Attach transformer (270) to electrical enclosure (170) with screws (275).

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

- (5) Connect wire #J101-1 to the circuit card assembly (510).
- (6) Install the circuit card assembly (510) with screws (515 and 530) and washers (520 and 525).
- (7) Apply a bead of RTV (refer to Table 7001) around inside edge of electrical enclosure cover (500). Attach with six screws (505).
- (8) Install the electrical enclosure assembly (480) to the coffee maker housing (670) with the screws (485 and 490) and washers (495). Apply RTV (refer to Table 7001) to the screws (490).

**E. Manifold Assembly (Refer to IPL Figure 1)**

- (1) For PN 11050-11 only, attach the drain tube bracket assembly (405) to the mounting bracket assembly (365) with the screw (410) and washer (415).
- (2) Attach the mounting bracket (435) to the mounting bracket assembly (365) with screws (380), flat washers (375) and lock nuts (370).
- (3) Install the male connector (450) and elbow (455) to the manifold (445).
- (4) If removed, install the valve stem assembly (460) and o-rings (465, 470, and 475) to manifold (445).
- (5) Install the o-ring (430) on the inlet water plug (425).
- (6) Turn the inlet water plug (425) CW to install the inlet water plug (425) and manifold (445) to the mounting bracket assembly (365).

**F. Locking Pin Block Assembly (Refer to IPL Figure 1)**

- (1) Attach the screws (740) to angle (735) and attach the screws (750) to install the locking pin block assembly (745).
- (2) Install the locking pin (350) and spring (315) to the handle assembly (335) and install the groove pin (340) and E-ring (345).
- (3) Install the locking pin assembly (310), post locking pin (330), and locking pin bushing (325) and attach with screw (320).

**G. Flow Control Assembly (Refer to IPL Figure 5)**

- (1) If removed, install ring terminals (70) to the solenoid valves (10).
- (2) Install solenoid valves (10), hex nipple (45), water fitting (60) and tee (55).
- (3) Install street elbow (50), male run tee (80) and male connector (30).
- (4) Install each elbow (15) to the flow control assembly. Attach the hose assemblies to the elbows (15) as required by tightening the nuts (25) to elbows to complete the flow control assembly.
- (5) Install two screws (65) and attach solenoid mounting plate assembly (5) to flow control assembly.

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

- (6) Align the flow control assembly such that the male connector (30) enters the back of the coffee maker housing (670, IPL Figure 1). Install the screws (295, IPL Figure 1) through the coffee maker housing (670, IPL Figure 1) into the solenoid mounting plate assembly (5).
- (7) Route wires through protective sleeving into electrical enclosure (480, IPL Figure 1) and make any required connections as follows: Wire #51 to TB1-4, wire #62 to TB2-1, wire #53 to TB1-8 and wires #55, #52 and #60 to TB1-3. Wire tie as required.

**H. Water Faucet (Refer to IPL Figure 1)**

- (1) Attach the connector (270) to the faucet subassembly (285).
- (2) Install the o-ring (265) and aerator (255) to the faucet head (260). Install the faucet head (260) to the faucet subassembly (285).
- (3) Connect hose of the water faucet assembly (240) to the male connector (30, IPL Figure 5) on flow control assembly (290) and tighten the nut (40, IPL Figure 5).
- (4) Attach the water faucet assembly (240) to coffee maker housing (670) with the two screws (245) and washers (250).

**J. Limit Switch Angle Assembly (Refer to IPL Figure 1)**

- (1) Attach the limit switch angle (210) and the actuator switch (230) with the two nuts (supplied with item 235), washers (225) and screws (supplied with item 235).
- (2) Attach the limit switch angle assembly (200) with the screws (205).

**K. Server Level Optical Sensor U101 (Refer to IPL Figure 1)**

- (1) Apply a thin coat of RTV (refer to Table 7001) to the top side of the server level optical sensor (190) and attach to the pillow pack plate assembly (705) with two screws (195). Wipe off excess RTV from the server level sensor assembly (190) and pillow pack plate (705).
- (2) Carefully route sensor wire bundle through coffee maker housing (670) and route to the electrical enclosure (480). Use RTV (refer to Table 7001) to seal openings through coffee maker housing (670) and electrical enclosure (480).
- (3) Connect wire #57 to TB1-6, wire #58 to TB1-7, wire #64 to TB2-3 and the black wire triplet (#66, #67, and #69) to TB2-4. Wire tie as required.
- (4) Attach the pillow pack plate assembly (705) with screws (710).

**L. Brew Head Assembly (Pre SB 25-30-02-9 and SB 25-30-02-11) (Refer to IPL Figure 1)**

- (1) Assemble the brew head assembly (95) as follows (refer to IPL Figure 3):
  - (a) Install the water inlet assembly (75) to brew head (5) with screw (80), washer (85), and nut (90). If removed, install the male connector (95) to water inlet assembly (75).
  - (b) Insert brew head gasket (15) and retainer plate (10) into brew head assembly (5). Attach with screws (20), washers (25), and nuts (30).

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

- (c) Install roller bushing (120) onto RH brew head handle assembly (110). Place RH brew head handle assembly (110) onto brew head (5) making sure roller bushing (120) is in the slot on the brew head (5). Install roller bushing (120) on LH brew head handle assembly (115). Slide LH brew head handle assembly (115) onto RH brew head handle assembly (110) shaft so that roller bushing (120) goes into slot on the brew head (5). Install retaining rings (125) each side of handle onto hex shaft. Insert shaft bushing (130) into each end of the brew head handle assemblies (110 and 115).
- (d) Attach the ground wire assembly (135) to the RH brew head handle assembly (110) with the bolt (140), washer (145) and flat washers (150).
- (e) Insert plungers (175) and plunger springs (170) into plunger housings (180). Apply Loctite to set screw (165) and screw into plunger housings (180) until set screw (165) is in contact with the plunger springs (170). Attach plunger assemblies (155) to the brew head (5) with screws (160).
- (f) Remove two screws (45), star washer (50), and nuts (55) and remove auxiliary actuator (40).
- (g) Attach the slides (60) to the brew head (5) with screws (65) and rod guide screws (70).
- (2) If removed, install the set screws (110 and 135) to retainer bushings (120 and 142), or guide bushings (125 and 145). Install pot retainer brackets (105 and 130) to brew head with screws (115 and 140).
- (3) Install brew head guides (150 and 160) with screws (155 and 165). Two brew head handle screws (175) go through the brew head guides (150 and 160) into the brew head handle assemblies (110 and 115, IPL Figure 3).

**NOTE:** Apply petroleum jelly (refer to Table 7001) to the brew head guides (150 and 160).

- (4) Route wire bundle through protective sleeving. Attach wire #20 to TB1-7 and wire #21 to TB2-4. Wire tie as required. Attach cable wire clamp (60) with nut (75), washer (70), and screw (65).
- (5) Install the flow restrictor (75, IPL Figure 5) and attach the nut (85, IPL Figure 5) and ferrule set (90, IPL Figure 5) from the male run tee (80, IPL Figure 5) on the flow control assembly (290).

**M. Brew Head Assembly (Post SB 25-30-02-9 and 25-30-02-11) (Refer to IPL Figure 1)**

- (1) Assemble the brew head assembly as follows (refer to IPL Figure 3A):
    - (a) Install the water inlet assembly (70) to brew head (5) with screw (75), washer (80), and nut (85). If removed, install the male connector (90) to water inlet assembly (70).
- NOTE:** For PN 11225-31 only, make sure the flow restrictor (155) and o-ring (160) is under the male connector (90).
- (b) Insert brew head gasket (15) and retainer plate (10) into brew head assembly (5). Attach with screws (20), washers (25), and nuts (30).

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

- (c) Install roller bushing (115) onto RH brew head handle assembly (105). Place RH brew head handle assembly (105) onto brew head (5) making sure roller bushing (115) is in the slot on the brew head (5). Install roller bushing (115) on LH brew head handle assembly (110). Slide LH brew head handle assembly (110) onto RH brew head handle assembly (105) shaft so that roller bushings (115) goes into slot on the brew head (5). Install retaining rings (120) on each side of handle onto hex shaft. Insert shaft bushings (125) into each end of the brew head handle assemblies (105 and 110).
  - (d) Install two screws (40), star washers (45), and nuts (50) and attach the actuator angle (35).
  - (e) Attach the slides (55) to the brew head (5) with screws (60) and rod guide screws (65).
  - (f) Attach the ground wire assembly (130) to the RH brew head handle assembly (105) with the bolt (135), washer (140) and flat washers (145).
- (2) If removed, install the set screws (110 and 135) to retainer bushings (120 and 142), or guide bushings (125 and 145). Install pot retainer brackets (105 and 130) to brew head with screws (115 and 140).
  - (3) Install brew head guides (150 and 160) with screws (155 and 165). Two brew head handle screws (175) go through the guides into the brew head handle assemblies (105 and 110, IPL Figure 3A).

**NOTE:** Apply petroleum jelly (refer to Table 7001) to the brew head guides (150 and 160).

- (4) Route wire bundle through protective sleeving. Attach wire #20 to TB1-7 and wire #21 to TB2-4. Wire tie as required. Attach cable wire clamp (60) with nut (75), washer (70), and screw (65).
- (5) Install the flow restrictor (75, IPL Figure 5) and attach the nut (85, IPL Figure 5) and ferrule set (90, IPL Figure 5) from the male run tee (80, IPL Figure 5) on the flow control assembly (290).

**N. Switch Module Assembly SW1-SW5 (Refer to IPL Figure 1)**

- (1) Assemble switch mount assembly (35) as follows (refer to IPL Figure 6):
  - (a) Push in the LED (30) until it clicks into place.
  - (b) Position lens cap (5, 10, 15, 20, 25) so that wording is properly oriented and push until it clicks into place.
- (2) Install switch mount assembly (35) with four screws (40).
- (3) Connect switch module connectors J3 and P3. Wire tie as required.
- (4) Install switch mount cover (20) with four screws (30) and washer (25).
- (5) Install brew handle knob (10) with screw (15).
- (6) Install the brew cup assembly (5).

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

**SPECIAL TOOLS, FIXTURES, AND EQUIPMENT**

TASK 25-30-02-940-801-A01

1. General

- A. All work described in this manual may be conducted in any normal work area with ambient environmental and physical conditions and whose environment has been cleaned for Coffee Maker Assembly repair.
- B. Special tools, fixtures, and equipment required to perform the work function listed in all paragraphs of this manual are listed in Table 9001.

TABLE 25-30-02-99A-014-A01

Table 9001  
Special Tools, Fixtures, and Equipment List

| NOMENCLATURE                      | PARTS/SPEC NO       | SOURCE (CAGE)                                                    |
|-----------------------------------|---------------------|------------------------------------------------------------------|
| Adhesive, Silicone                | 736 Red<br>AD-50005 | Dow Corning Corporation (V71984)<br>B/E Aerospace, Inc. (V63367) |
| Adhesive, Threadlock              | Loctite® 242        | Commercially Available                                           |
| CCA and Switch Module Test Box    | 11238-1             | B/E Aerospace, Inc. (V63367)                                     |
| Cloths, Cleaning, Low-Lint Type 1 | A-A-59323           | Commercially Available                                           |
| Coffee Maker Rail                 | 11160-1 and 11160-5 | B/E Aerospace, Inc. (V63367)                                     |
| Clean Water                       | None                | Commercially Available                                           |
| Heat Sink Compound                | 10-8109<br>CM-50019 | Waldom, Inc. (V72653)<br>B/E Aerospace, Inc. (V63367)            |
| Isopropyl Alcohol                 | TT-I-735            | Commercially Available                                           |
| J2/P2 Crimper                     | M22520/1-01         | Daniels Manufacturing Corporation<br>(V11851)                    |
| J2/P2 Crimper Turret              | M22520/1-02         | Daniels Manufacturing Corporation<br>(V11851)                    |
| J2/P2 Pin Extraction Tool         | M81969/19-08        | Daniels Manufacturing Corporation<br>(V11851)                    |
| J2/P2 Pin Insertion Tool          | M81969/17-04        | Daniels Manufacturing Corporation<br>(V11851)                    |
| J3/P3 Crimper                     | 90325-1             | Tyco Electronic Corporation (V00779)                             |
| J3/P3 Pin Extraction Tool         | 455822-2            | Tyco Electronic Corporation (V00779)                             |
| Angle Head Phillips Screw Driver  | None                | Commercially Available                                           |
| Nut Driver, 1/4 in.               | None                | Commercially Available                                           |
| Nylon Wire Tie Downs              | MS3367-4-9          | Commercially Available                                           |

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

Table 9001 (Continued)  
Special Tools, Fixtures, and Equipment List

| NOMENCLATURE                                    | PARTS/SPEC NO                                                                                                           | SOURCE (CAGE)                                                                                                         |
|-------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| Open End Wrench<br>1/4 in., 7/8 in.             | None                                                                                                                    | Commercially Available                                                                                                |
| Petroleum Jelly                                 | CM-50015                                                                                                                | B/E Aerospace, Inc. (V63367)                                                                                          |
| Ratchet with 5/32 in. socket                    | None                                                                                                                    | Commercially Available                                                                                                |
| Stop Watch                                      | None                                                                                                                    | Commercially Available                                                                                                |
| Sulphamic Acid Based Cleaner                    | Sulphamic acid 5%<br>solution, LimeAway,<br>Vinegar, or other agent<br>that removes calcium,<br>lime, and rust deposits | Commercially Available                                                                                                |
| Switch Alignment Tool                           | 01-906                                                                                                                  | EAO Switch Corporation (V61706)                                                                                       |
| Switch Lamp Remover                             | 02-906                                                                                                                  | EAO Switch Corporation (V61706)                                                                                       |
| Switch Lens Remover                             | 02-905                                                                                                                  | EAO Switch Corporation (V61706)                                                                                       |
| Switch Mounting Wrench                          | 01-907                                                                                                                  | EAO Switch Corporation (V61706)                                                                                       |
| Teflon Tape - 1/4 in                            | MS-STR-4<br>TT-7454                                                                                                     | Swagelok Companies (V02570)<br>B/E Aerospace, Inc. (V63367)                                                           |
| Temperature Test Brew Cup                       | 11239-1                                                                                                                 | B/E Aerospace, Inc. (V63367)                                                                                          |
| Thermometers                                    | None                                                                                                                    | Commercially Available                                                                                                |
| Thread Lubricant                                | Never Seez<br>CM-50016                                                                                                  | Bostik, Inc. (V1Y0Z7)<br>B/E Aerospace, Inc. (V63367)                                                                 |
| Translucent Silicone Rubber<br>Adhesive/Sealant | 732 Clear RTV<br>RTV 108<br><br>AD-50002                                                                                | Dow Corning Corporation (V71984)<br>Momentive Performance Materials, Inc.<br>(V01139)<br>B/E Aerospace, Inc. (V63367) |



**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

**REMOVAL**

TASK 25-30-02-010-801-A01

1. General

A. This section contains the removal procedures for the Coffee Maker Assembly.

TASK 25-30-02-010-802-A01

2. Procedure

**WARNING:** IF THE COFFEE MAKER WAS USED RECENTLY THE REMOVAL HANDLE AND THE CARRY HANDLE WILL BE WARM.

**CAUTION:** DO NOT USE SERVER BASE TO REMOVE BREWER.

A. Coffee Maker Removal

- (1) Before removing the Coffee Maker from the galley it is best (but not required) to bleed the water pressure from the tank. This can be done by turning off the galley water supply and drawing a cup of water from the faucet by pushing the HOT WATER button while power is on.
- (2) To remove the Coffee Maker from the galley compartment, unscrew the secondary restraint with a bladed screwdriver and raise the LOCK lever in the server cavity. Then pull straight out on the removal handle in the server cavity until the carry handle is exposed. Support the Coffee Maker weight with the carry handle and pull clear of galley compartment.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

THIS PAGE IS INTENTIONALLY LEFT BLANK.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

**INSTALLATION**

TASK 25-30-02-410-801-A01

1. General

- A. This section contains the installation procedures for the Coffee Maker Assembly.

TASK 25-30-02-410-802-A01

2. Installation

A. Mechanical

- (1) Verify that the valve stem assembly is closed (turn CW). Position the LOCK lever (in server cavity) up. Engage both Coffee Maker rail guides into the end of a standard Coffee Maker rail. Hold Coffee Maker level and slide onto rail until power and water connectors fully engage. Lower the LOCK lever until it is straight down, align secondary restraint screw and hand tighten, then turn the screw an additional 1/8 turn using a blade screwdriver.
- (2) Turn on galley water (if it is not already on). Tank will fill part way with water.

B. Power

- (1) Galley power is obtained through the rail.

C. Water

- (1) Galley potable water is obtained through the rail.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

THIS PAGE IS INTENTIONALLY LEFT BLANK.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

**STORAGE**

TASK 25-30-02-550-801-A01

1. General

A. This section contains the draining and storage procedures for the Coffee Maker Assembly.

TASK 25-30-02-550-802-A01

2. Procedure

A. Draining

- (1) To drain the water tank turn the valve stem assembly CCW until water flows out of the manifold.
- (2) To enable aircraft potable water drainage, reinsert Coffee Maker onto rail with the drain valve open.
- (3) Turn the valve stem assembly CW to close after the Coffee Maker has drained for storage off the aircraft.

B. Storage

- (1) After the unit assembly is complete, put the unit in a clean, dust-free, moisture-proof container. A sealed, polyethylene plastic bag is permitted.
- (2) The unit can be kept in any normal, ambient temperature, pressure, and humidity environment.
- (3) Put the correct part identification (include the name of the unit, part number, unit condition, and date of repair) on the unit.
- (4) For long storage, put the full unit in a polyethylene plastic bag, and put it in a cardboard container.
- (5) The Coffee Maker should be stored in a dirt free environment.
- (6) Maintain storage temperature between -50° F to 150° F.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

THIS PAGE IS INTENTIONALLY LEFT BLANK.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

**ILLUSTRATED PARTS LIST**

TASK 25-30-02-990-811-A01

1. Introduction

- A. The ILLUSTRATED PARTS LIST is intended for use in provisioning, storing, and issuing replaceable parts for the component, and in identification of new and reclaimed parts.

TASK 25-30-02-990-812-A01

2. Vendor's Parts

- A. Vendor's parts used in the unit and which are not altered by B/E Aerospace, Inc are listed in the Detailed Parts List by the vendor's part number, vendor's description of the part, and vendor's code listed in parentheses following the description. Vendors' code symbols used in this publication are taken from the CAGE Cataloging Handbook, and consist of the applicable code symbol preceded by the Letter "V." Table 10001 shows a numerically arranged list of vendor codes used in this publication.

TABLE 25-30-02-99A-015-A01

Table 10001  
Vendor Information

| VENDOR CODE (CAGE) | ADDRESS                                                                                              |
|--------------------|------------------------------------------------------------------------------------------------------|
| V00779             | Tyco Electronics Corporation<br>2800 Fulling Mill Road Building-38<br>Middletown, PA 17057-3142      |
| V01139             | Momentive Performance Materials, Inc.<br>22 Corporate Woods Boulevard<br>Albany, NY 12211-2374       |
| V02570             | Swagelok Company<br>29500 Solon Road<br>Solon, OH 44139-3449                                         |
| V11851             | Daniels Manufacturing Corporation<br>526 Thorpe Road<br>Orlando, FL 32824                            |
| V1Y0Z7             | Bostik, Inc.<br>Construction and Distribution Division<br>205 Oliver Drive<br>Calhoun, MI 49068-9543 |
| V61706             | EAO Switch Corporation<br>DBA Switches Plus<br>98 Washington Street<br>Milford, CT 06460-3133        |
| V63367             | B/E Aerospace, Inc.<br>10800 Pflumm Road<br>Lenexa, KS 66215                                         |
| V71984             | Dow Corning Corporation<br>2200 West Salzburg Road<br>Midland, MI 48686-0001                         |

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

Table 10001 (Continued)  
Vendor Information

| VENDOR CODE (CAGE) | ADDRESS                                                   |
|--------------------|-----------------------------------------------------------|
| V72653             | Waldom, Inc.<br>1801 Morgan Street<br>Winnebago, IL-61102 |

TASK 25-30-02-990-813-A01

3. Use of the Illustrated Parts List

A. When the part number is known:

Turn to the Numerical Index and locate the part number. Figure and item numbers on the illustration where the part appears are listed in the column to the right of the part number. Turn to the illustration and locate the item number. The corresponding item number in the accompanying Detailed Parts List will give part number, description, assembly relationship, quantity required for that particular application, and whether or not the part appears in the illustrations.

B. When the part number is not known:

Look through the figures and identify the part by appearance. Note the figure number and the item number. The corresponding Fig-Item number in the Detailed Parts List shows the part number, description, assembly relationship, effectivity code, and the number of units per assembly.

TASK 25-30-02-990-814-A01

4. Material Arrangement

A. Numerical Index

The Numerical Index is an alphanumeric listing of all the part numbers in the Detailed Parts List. Each part number is listed together with its corresponding item number, ILLUSTRATED PARTS LIST figure number, and the total required number of units per assembly. The figure-item number is composed of two parts. To the left of the dash is the figure number. It is the number of the figure in the ILLUSTRATED PARTS LIST that shows the part. To the right of the dash is the item number. It is the number that identifies a part in a figure.

B. Illustrations

The ILLUSTRATED PARTS LIST illustrations interrelate to the Numerical Index and the Detailed Parts List. The separate illustrations pictorially describe recommended disassembly/assembly sequence and support DISASSEMBLY and ASSEMBLY as well as the Numerical Index and the Detailed Parts List of this manual.



**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

**C. Detailed Parts List**

**(1) Fig-Item**

The Detailed Parts List is arranged numerically by item numbers. These are the same item numbers listed in the Numerical Index. In the Detailed Parts List, the figure number portion of the figure-item number is listed only once per column. Immediately below a figure number are the item numbers that appear on that figure. A dash in front of an item number means the corresponding part is not shown in that or any other figure. Each item number is listed together with its corresponding part number, nomenclature (description, assembly relationship), effectivity code, and units per assembly.

**(2) Part Number**

The part number column contains the original manufacturer's part number. When standard parts are used, the standard part number is listed in this column. When B/E Aerospace, Inc. is not the original manufacturer the vendor's part number is shown in the part number column, and the CAGE vendor number and equivalent B/E Aerospace, Inc. part number are given in the nomenclature column.

**(3) Airline Part Number**

This column is left blank for airline internal use.

**(4) Nomenclature**

**(a) Indenture System**

The indenture system shows the relationship of parts and assembly to next higher assembly or installations, as follows:

1 2 3 4 5 6 7

Unit (Product which this manual describes)

- Detail parts for assembly into the unit

- Subassembly

- Attaching parts for subassembly

\* \* \*

- • Detail parts for subassembly

- • Sub-subassembly

- • Attaching parts for sub-subassembly

\* \* \*

- • • Detailed parts for sub-subassembly

**(b) Attaching Parts**

Attaching parts are captioned ATTACHING PARTS and are listed immediately following the parts attached. The \* \* \* symbol follows the last item of the attaching parts group.

**(c) Vendor Code**

Parts manufactured by companies other than B/E Aerospace, Inc. are identified by an appropriate vendor's CAGE code following the nomenclature, and are preceded by the letter "V." Standard parts such as AN, MS, etc., are not identified by a vendor code.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

(5) Effectivity Code

When two or more units (main assembly) are listed in the same ILLUSTRATED PARTS LIST, a code ("A," "B," "C," etc.) is assigned to each main unit. All subcomponents that are peculiar to a particular unit are identified by the same effectivity code letter as the unit. If parts are common to all units, the effectivity code column is left blank. The coding used in the ILLUSTRATED PARTS LIST in this manual is shown in Table 10002.

TABLE 25-30-02-99A-016-A01

Table 10002  
Effectivity Guide

| ASSEMBLY PN | IPL FIGURE NO. | EFF CODE |
|-------------|----------------|----------|
| 11050-11    | 1              | A        |
| 11225-3     | 1              | B        |
| 11225-31    | 1              | C        |

(6) Units per assembly

Quantities specified in the "UNITS PER ASSEMBLY" column are the total number of each part required per assembly or subassembly and are not necessarily the total used per the complete unit.

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

TASK 25-30-02-990-815-A01

5. Parts Replacement Data

Interchangeability relationship between parts is identified in the 'NOMENCLATURE' column. A list of terms used and their definition is as follows.

| TERM              | ABBREVIATION                | DEFINITION                                                                                                                                                                                                                                                          |
|-------------------|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Alternate         | ALT                         | Part fully meets functional and structural specifications, but differs either in overall external dimensions, connection installation, and/or mounting provisions, and may require additional rework or modifications to install in a specific application.         |
| Optional          | OPT                         | The part is fully interchangeable in form, fit, and function with other item numbers shown.                                                                                                                                                                         |
| Preferred         | PRFD                        | Part is preferred over the other optional parts shown.                                                                                                                                                                                                              |
| Replaced By       | REPLD BY                    | Part is replaced by and is interchangeable with item number listed in notation.                                                                                                                                                                                     |
| Replaces          | REPLS                       | Part replaces and is interchangeable with number listed in notation.                                                                                                                                                                                                |
| Superseded By     | SUPSD BY                    | Part is replaced by and is not interchangeable with item number listed in notation.                                                                                                                                                                                 |
| Supersedes        | SUPSDS                      | Part replaces and is not interchangeable with item number listed in notation.                                                                                                                                                                                       |
| Service Bulletins | PRE SB<br>POST SB<br>SB RWK | Identifies when a service bulletin (SB) has an effect on a part. PRE shows the condition of the part before the work in the service bulletin is done; POST shows the condition after the work is done; RWK shows that the part is reworked by the service bulletin. |

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

TASK 25-30-02-970-880-A01

6. Alpha/Numerical Index

| PART NUMBER | AIRLINE PART NO. | IPL FIG. | ITEM  | TTL REQ |
|-------------|------------------|----------|-------|---------|
| AN565D8H3   |                  | 3        | 165   | 2       |
| AN565D8H4   |                  | 1        | -110  | DEL     |
|             |                  | 1        | 127   | 1       |
|             |                  | 1        | -135  | DEL     |
|             |                  | 1        | 147   | 1       |
| AN960-08    |                  | 1        | 70    | 1       |
|             |                  | 1        | 375   | 2       |
|             |                  | 1        | 395   | 2       |
| AN960-6     |                  | 1B       | 20    | 2       |
|             |                  | 1B       | 40    | 2       |
| AN960-8     |                  | 7        | 260   | 2       |
| AN960C4L    |                  | 1        | -580  | DEL     |
|             |                  | 1        | -600  | DEL     |
|             |                  | 4        | 210   | 6       |
| AN960C6     |                  | 7        | 140   | 1       |
|             |                  | 1        | 635   | 1       |
|             |                  | 1        | 825   | 1       |
|             |                  | 1        | 850   | 2       |
|             |                  | 1        | -855  | DEL     |
|             |                  | 1        | 905   | 5       |
|             |                  | 3        | 25    | 4       |
|             |                  | 3        | 85    | 1       |
|             |                  | 3A       | 25    | 4       |
|             |                  | 3A       | 80    | 1       |
| AN960C8L    |                  | 3        | 150   | 2       |
|             |                  | 3A       | 145   | 2       |
| AN960D10L   |                  | 7        | -235  | 2       |
| AN960D6L    |                  | 1        | 25    | 1       |
|             |                  | 1        | 250   | 2       |
|             |                  | 1        | 810   | 2       |
| AN960D8L    |                  | 1        | 495   | 4       |
| B129831A001 |                  | 1        | 255   | 1       |
| C403B021R   |                  | 7        | 15    | 1       |
| CA50143     |                  | 8        | -200A | 4       |
| CA50144     |                  | 8        | -195A | 7       |
| CA50145     |                  | 8        | -180A |         |
| CA50146     |                  | 8        | -10A  |         |
| CCS25S8M0   |                  | 1        | -60A  | 1       |
|             |                  | 1        | -625A | 1       |
|             |                  | 1        | -815A | 1       |
|             |                  | 7        | -250A | 1       |
| CD4011BE    |                  | 8        | -45B  | 1       |
| CD4011BF    |                  | 8        | 45    | 1       |
|             |                  | 8        | -45A  | 1       |
| CD4049UBE   |                  | 8        | -40B  | 1       |
|             |                  | 8        | 40    | 1       |
|             |                  | 8        | -40A  | 1       |

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| PART NUMBER  | AIRLINE PART NO. | IPL FIG. | ITEM  | TTL REQ |
|--------------|------------------|----------|-------|---------|
| CD4081BE     |                  | 8        | -55B  | 1       |
|              |                  | 8        | 55    | 1       |
|              |                  | 8        | -55A  | 1       |
| CD4082BE     |                  | 8        | -50B  | 1       |
|              |                  | 8        | 50    | 1       |
|              |                  | 8        | -50A  | 1       |
| CL315        |                  | 1        | -815B | 1       |
| CL320        |                  | 1        | -60C  | 1       |
|              |                  | 1        | -625B | 1       |
|              |                  | 7        | -250B | 1       |
| CL3201       |                  | 1        | -60B  | 1       |
|              |                  | 1        | -625C | 1       |
|              |                  | 4        | -125  | 1       |
| CL50010      |                  | 7        | -15A  | 1       |
| CO50414      |                  | 6        | 50    | 1       |
| CO50422      |                  | 1B       | -70A  | 2       |
| CO6505-03    |                  | 3A       | -160A | RF      |
| E540-2-005   |                  | 1        | 565   | 4       |
| FN824C       |                  | 7        | -245A | 1       |
| GR50054      |                  | 7        | -160A | 1       |
| GR50057      |                  | 1        | 675   | 1       |
| GR50058      |                  | 3        | 135   | 1       |
| GS14-010-03  |                  | 3A       | 130   | 1       |
|              |                  | 7        | -215  | 1       |
|              |                  | 8        | -35A  | 2       |
| IC50045      |                  | 7        | 40    | 16      |
| IC50126      |                  | 7        | 65    | 20      |
| KU63214      |                  | 7        | 185   | 2       |
|              |                  | 8        | -215  | 1       |
|              |                  | 8        | 30    | 1       |
| L7812CV      |                  | 8        | -35   | 2       |
| LM239AJ      |                  | 6        | -30B  | 5       |
| LP50099-1089 |                  | 1        | -430A | 1       |
| M83248-1-110 |                  | 1        | -255A | 1       |
| MISC013      |                  | 8        | -80A  | 4       |
| MPF960       |                  | 1        | 525   | 2       |
| MS15795-804  |                  | 3        | 125   | 2       |
| MS16624-4031 |                  | 3A       | 120   | 2       |
|              |                  | 1        | 345   | 1       |
|              |                  | 1        | -535  | 1       |
| MS16633-4012 |                  | 7        | 90    | RF      |
| MS18029-1S5  |                  | 1        | -730  | 4       |
| MS204264D3-4 |                  | 1        | -575  | DEL     |
| MS21042-04   |                  | 1        | -595  | DEL     |
|              |                  | 4        | 205   | 6       |
|              |                  | 7        | 200   | 2       |
| MS21042-06   |                  | 1        | -620  | DEL     |
|              |                  | 3        | 30    | 4       |
|              |                  | 3        | 90    | 1       |
|              |                  | 3A       | 30    | 4       |
|              |                  | 3A       | 85    | 1       |

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| PART NUMBER | AIRLINE PART NO. | IPL FIG. | ITEM  | TTL REQ |
|-------------|------------------|----------|-------|---------|
| MS21042-06  |                  | 4        | -190  | 6       |
|             |                  | 7        | 50    | 4       |
|             |                  | 7        | 75    | 4       |
|             |                  | 7        | 145   | 1       |
|             |                  | 8        | -220  | 1       |
| MS21042-08  |                  | 1        | 75    | 1       |
|             |                  | 1        | 370   | 2       |
|             |                  | 1        | 390   | 2       |
|             |                  | 7        | 255   | 1       |
| MS21042-3   |                  | 7        | 230   | 1       |
| MS21076-08  |                  | 1        | -725  | 2       |
| MS24585C265 |                  | 1        | 315   | 1       |
| MS24693C24  |                  | 1        | 505   | 6       |
| MS24693C25  |                  | 7        | 155   | 5       |
|             |                  | 1        | 750   | 3       |
|             |                  | 1        | 765   | 3       |
|             |                  | 1        | 775   | 2       |
|             |                  | 1        | -775A | DEL     |
| MS24693C26  |                  | 1        | 785   | 3       |
|             |                  | 7        | 275   | 2       |
|             |                  | 1        | 30    | 4       |
|             |                  | 1        | 40    | 4       |
|             |                  | 1A       | 30    | 2       |
| MS24693C269 |                  | 7        | 135   | 2       |
|             |                  | 1        | -115  | 1       |
|             |                  | 1        | 140   | 1       |
| MS24693C270 |                  | 1        | 700   | 4       |
| MS24693C271 |                  | 1        | 320   | 1       |
| MS24693C28  |                  | 3        | 20    | 4       |
|             |                  | 3A       | 20    | 4       |
|             |                  | 7        | 45    | 4       |
|             |                  | 7        | 70    | 4       |
| MS24693C33  |                  | 1B       | 10    | 2       |
|             |                  | 3        | 80    | 1       |
|             |                  | 3A       | 75    | 1       |
| MS24693C4   |                  | 1        | 515   | 2       |
|             |                  | 3        | 160   | 4       |
|             |                  | 7        | -100A | 2       |
| MS24693C49  |                  | 7        | 205   | 2       |
|             |                  | 1        | 195   | 2       |
|             |                  | 1        | 385   | 3       |
|             |                  | 1        | 485   | 3       |
|             |                  | 1        | 710   | 6       |
| MS24693C50  |                  | 1        | 720   | 2       |
|             |                  | 1        | -750A | 3       |
|             |                  | 1        | 795   | 6       |
|             |                  | 1        | 65    | 1       |
|             |                  | 1        | 380   | 2       |
|             |                  | 1        | 400   | 2       |
|             |                  | 1        | 740   | 2       |
|             |                  | 5        | 65    | 2       |

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| PART NUMBER | AIRLINE PART NO. | IPL FIG. | ITEM  | TTL REQ |
|-------------|------------------|----------|-------|---------|
| MS24693C51  |                  | 1        | -155  | 3       |
|             |                  | 1        | 165   | 3       |
| MS24693C53  |                  | 1        | 90    | 1       |
| MS24693C8   |                  | 7        | 25    | 2       |
| MS26574-1   |                  | 7        | -180A | 1       |
| MS27212-1-5 |                  | 7        | 95    | 1       |
| MS3367-4-9  |                  | 6        | -80   | 4       |
| MS35333-69  |                  | 1        | 225   | 2       |
|             |                  | 3        | 50    | 2       |
|             |                  | 3A       | 45    | 2       |
| MS35338-137 |                  | 1        | 415   | 1       |
| MS35338-134 |                  | 1        | -225A | 2       |
| MS35338-135 |                  | 1        | 520   | 2       |
| MS35338-136 |                  | 1        | -570  | 4       |
|             |                  | 1B       | 35    | 2       |
|             |                  | 4        | 70    | 2       |
|             |                  | 7        | 30    | 16      |
|             |                  | 7        | 55    | 20      |
|             |                  | 7        | 115   | 5       |
|             |                  | 7        | 190   | 2       |
| MS35338-42  |                  | 3        | 145   | 1       |
|             |                  | 3A       | 140   | 1       |
| MS35649-224 |                  | 1        | -220  | DEL     |
|             |                  | 3        | 55    | 2       |
|             |                  | 3A       | 50    | 2       |
|             |                  | 7        | 105   | 2       |
| MS51957-13  |                  | 1        | 205   | 2       |
|             |                  | 1        | -585  | DEL     |
|             |                  | 1        | -605  | DEL     |
|             |                  | 4        | -215  | 6       |
| MS51957-14  |                  | 1        | 530   | 2       |
| MS51957-16  |                  | 1        | -515A | 2       |
| MS51957-25  |                  | 1        | -900  | 1       |
| MS51957-26  |                  | 1        | 630   | 1       |
|             |                  | 1        | 805B  | 1       |
|             |                  | 1        | 835   | 6       |
|             |                  | 1        | 845   | 2       |
|             |                  | 1        | -845A | DEL     |
| MS51957-27  |                  | 1        | -805  | 2       |
|             |                  | 1        | 805A  | 1       |
|             |                  | 1        | 820   | 1       |
|             |                  | 1        | 895   | 5       |
|             |                  | 1        | -895A | 6       |
| MS51957-28  |                  | 1        | -820A | 1       |
|             |                  | 1B       | 30    | 2       |
| MS51957-30  |                  | 1A       | 10    | 2       |
| MS51957-32  |                  | 1        | -565A | 4       |
| MS51957-33  |                  | 1        | -565B | 4       |
| MS51957-43  |                  | 1        | 295   | 1       |
|             |                  | 3        | 65    | 2       |
|             |                  | 3A       | 60    | 2       |

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| PART NUMBER   | AIRLINE PART NO. | IPL FIG. | ITEM  | TTL REQ |
|---------------|------------------|----------|-------|---------|
| MS51957-44    |                  | 1        | 410   | 1       |
| MS51957-45    |                  | 1        | 490   | 4       |
|               |                  | 1        | -550  | 8       |
|               |                  | 1        | -550A | 7       |
|               |                  | 7        | 265   | 1       |
| MS51957-46    |                  | 1        | 15    | 1       |
| MS51958-62    |                  | 7        | 240   | 1       |
| MS51959-3     |                  | 3A       | 40    | 2       |
| MS51959-8     |                  | 1        | -215  | DEL     |
|               |                  | 3        | 45    | 2       |
| MS83248-1-110 |                  | 1        | 430   | 1       |
| NAS1149CN416R |                  | 4        | -210A | 12      |
| NAS1149CN616R |                  | 1        | -635A | 1       |
|               |                  | 1        | -825A | 1       |
|               |                  | 1        | -850A | 2       |
|               |                  | 1        | -905A | 7       |
|               |                  | 3A       | -25A  | 4       |
|               |                  | 3A       | -80A  | 1       |
|               |                  | 7        | 120   | 5       |
| NAS1149CN632R |                  | 1B       | -40A  | 2       |
|               |                  | 7        | -140A | 1       |
| NAS1149CN816R |                  | 3A       | -145A | 2       |
| NAS1149D0316H |                  | 7        | 235A  | 3       |
| NAS1149DN616H |                  | 1        | -25A  | 1       |
|               |                  | 1        | -250A | 2       |
|               |                  | 1        | -810A | 4       |
|               |                  | 1        | -495A | 4       |
| NAS1149FN832P |                  | 1        | -70A  | 1       |
|               |                  | 1        | -375A | 2       |
|               |                  | 1        | -395A | 2       |
|               |                  | 7        | -260A | 2       |
| NAS1329A08-75 |                  | 1        | -940  | RF      |
| NAS1635-06-48 |                  | 1B       | 5     | 2       |
| NAS1801-3-7   |                  | 7        | -240A | 1       |
| NAS1801-3-8   |                  | 7        | -240B | 1       |
| NAS1802-08-4  |                  | 3        | 140   | 1       |
|               |                  | 3A       | 135   | 1       |
| NAS671C6      |                  | 4        | 65    | 2       |
|               |                  | 7        | 110   | 5       |
| OA250M        |                  | 1        | -610  | DEL     |
|               |                  | 4        | -195  | 3       |
| OR067         |                  | 1        | -420  | 1       |
| OR50041-005   |                  | 1        | -180  | 1       |
|               |                  | 1        | -475A | 1       |
| OR50041-008   |                  | 1        | -265A | 1       |
| OR50041-012   |                  | 1        | -465A | 1       |
| OR50041-016   |                  | 4        | -25A  | 3       |
| OR50042-044   |                  | 1        | 865   | 1       |
| OR50043-010   |                  | 1        | -470A | 1       |
| PF50254       |                  | 1        | -280  | 1       |
|               |                  | 3        | -96   | 1       |



**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| PART NUMBER | AIRLINE PART NO. | IPL FIG. | ITEM  | TTL REQ |
|-------------|------------------|----------|-------|---------|
| PF50254     |                  | 3A       | -91   | 1       |
|             |                  | 4        | -120  | 1       |
|             |                  | 4        | 155   | 1       |
|             |                  | 4        | 180   | 1       |
|             |                  | 5        | 20    | 1       |
|             |                  | 5        | 35    | 1       |
|             |                  | 5        | -90   | 1       |
| PF50256     |                  | 4        | 145   | 1       |
|             |                  | 4        | 170   | 1       |
|             |                  | 5        | 15    | 2       |
| PF50258     |                  | 4        | 40    | 1       |
|             |                  | 5        | 80    | 1       |
| PF50259     |                  | 1        | 455   | 1       |
| PF50261     |                  | 1        | 270   | 1       |
|             |                  | 1        | 450   | 1       |
|             |                  | 3        | 95    | 1       |
|             |                  | 3A       | 90    | 1       |
|             |                  | 5        | 30    | 1       |
| PF50262     |                  | 1        | -275  | 1       |
|             |                  | 3        | -97   | 1       |
|             |                  | 3A       | -92   | 1       |
|             |                  | 4        | -115  | 1       |
|             |                  | 4        | 150   | 1       |
|             |                  | 4        | 175   | 1       |
|             |                  | 5        | 25    | 1       |
|             |                  | 5        | 40    | 1       |
|             |                  | 5        | -85   | 1       |
|             |                  | 5        | 45    | 1       |
|             |                  | 8        | -75A  | 6       |
| PF50264     |                  | 8        | -60B  | 1       |
| RC50222     |                  | 7        | -210  | 1       |
| RC50223     |                  | 7        | -220A | 1       |
| RE50107     |                  | 8        | -140A | 3       |
| RE50108     |                  | 8        | -160A | 1       |
| RE50330     |                  | 8        | -95A  | 2       |
| RE50331     |                  | 8        | -90A  | 1       |
| RE50332     |                  | 8        | 80    | 4       |
| RFL1N08     |                  | 8        | -25D  | 1       |
| RL50078     |                  | 8        | 195   | 8       |
| SA105C103M  |                  | 8        | -205A | 4       |
| SA105E104M  |                  | 8        | 205   | 4       |
| SA115E104M  |                  | 8        | 175   | 1       |
| SA115E224M  |                  | 8        | 170   | 1       |
| SA115E334M  |                  | 8        | 180   |         |
| SA305E105M  |                  | 1        | 935   | 1       |
| SC50265     |                  | 7        | -85   | 2       |
| SC50268-04  |                  | 7        | 100   | 2       |
|             |                  | 1        | 245   | 2       |
| SC50268-25  |                  | 2        | 15    | 2       |
| SC50268-26  |                  | 7        | -40A  | 16      |
| SC50269     |                  | 7        | -65A  | 20      |

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| PART NUMBER      | AIRLINE PART NO. | IPL FIG. | ITEM  | TTL REQ |
|------------------|------------------|----------|-------|---------|
| SC50269          |                  | 7        | -185A | 2       |
|                  |                  | 8        | -215A | 1       |
| SC50277          |                  | 5        | -65A  | 2       |
| SS400-2-4        |                  | 4        | -90   | 1       |
| SS400SET         |                  | 4        | -85   | 1       |
| SS402-1          |                  | 4        | -80   | 1       |
| SW50212          |                  | 6        | 35    | 1       |
| SW50217          |                  | 6        | 40    | 3       |
| SW50279          |                  | 6        | -45A  | 1       |
| SW737            |                  | 1        | 230   | 1       |
| T85N11D114-12    |                  | 8        | 25    | 1       |
| TE097            |                  | 1        | -660  | 3       |
|                  |                  | 1        | -885  | 2       |
|                  |                  | 1B       | -50A  |         |
|                  |                  | 1B       | -75A  | 3       |
|                  |                  | 4        | 20    | 6       |
|                  |                  | 5        | 70    | 6       |
|                  |                  | 7        | -125  |         |
| TE215            |                  | 7        | -225  | 2       |
| TE50445-08       |                  | 7        | -35A  | 1       |
| TE50445-10       |                  | 7        | -60A  | 1       |
| TE50446          |                  | 6        | -55   | 12      |
| TE50448          |                  | 1        | 45    | 1       |
| TE50452          |                  | 1        | -50   | 12      |
| TFMR50016        |                  | 7        | 270   | 1       |
| TR50063          |                  | 8        | -225A | 1       |
| TR50064          |                  | 8        | -85A  | 6       |
| TR50065          |                  | 8        | -80C  | 4       |
| TS50075          |                  | 4        | 195A  | 3       |
| TU310            |                  | 1        | -655  | 3       |
|                  |                  | 1        | -880  | 3       |
|                  |                  | 4        | -15   | 6       |
| TU50020          |                  | 4        | -140  | AR      |
| TU50034-1        |                  | 1        | -640  | 1       |
| TU50034-3        |                  | 1        | -645  | 1       |
| TU50034-4        |                  | 1        | -55   | 1       |
| TU50034-6        |                  | 1        | -300  | 3       |
| TU50051          |                  | 1        | -875  | 1       |
| TU50229-2        |                  | 1        | -650  | 1       |
| V23105A3003B201  |                  | 8        | -25A  | 1       |
| V23105A50003A201 |                  | 8        | -25C  | 1       |
| V250LA40A        |                  | 7        | -220  | 1       |
| VA50102          |                  | 4        | 75A   | 1       |
| VA50104          |                  | 5        | -10   | 3       |
| VA50129          |                  | 5        | -13   | 1       |
| W02F             |                  | 8        | -60A  | 1       |
| W02G             |                  | 8        | 60    | 1       |
| XAL50V330        |                  | 8        | 10    |         |
| XRL16V470        |                  | 8        | 200   | 6       |
| ZVN4306A         |                  | 8        | -80B  | 4       |
| .10M35           |                  | 8        | 190   | 2       |

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| PART NUMBER | AIRLINE PART NO. | IPL FIG. | ITEM  | TTL REQ |
|-------------|------------------|----------|-------|---------|
| .22M35      |                  | 8        | 185   | 1       |
| 03093113    |                  | 1A       | 50    | 1       |
| 1.5KE39A    |                  | 8        | 65    | 1       |
| 10 OHM      |                  | 8        | 155   | 1       |
| 10-23161089 |                  | 6        | -30A  | 5       |
| 11050-1     |                  | 1        | -1    | DEL     |
| 11050-11    |                  | 1        | -1D   | RF      |
| 11050-3     |                  | 1        | -1A   | DEL     |
| 11050-31    |                  | 1        | -1E   | DEL     |
| 11050-5     |                  | 1        | -1B   | DEL     |
| 11050-7     |                  | 1        | -1C   | DEL     |
| 11051-1     |                  | 1        | 545   | 1       |
|             |                  | 4        | -1    | RF      |
| 11051-13    |                  | 4        | -235  | 1       |
| 11051-15    |                  | 1        | -545A | 1       |
|             |                  | 4        | -1A   | RF      |
| 11051-5     |                  | 4        | -240  | 1       |
| 11051-7     |                  | 4        | -245  | 1       |
| 11051-9     |                  | 4        | 220   | 1       |
| 11052-1     |                  | 4        | -230  | 1       |
| 11053-1     |                  | 4        | 225   | 2       |
| 11055-1     |                  | 1        | 670   | 1       |
| 11056-1     |                  | 4        | 10    | 3       |
| 11057-1     |                  | 4        | 55    | 1       |
| 11058-1     |                  | 6        | 75    | 1       |
| 11058-3     |                  | 1        | 20    | 1       |
| 11059-1     |                  | 7        | 170   | 1       |
| 11060-1     |                  | 1        | 500   | 1       |
| 11061-1     |                  | 1        | 760   | 1       |
| 11062-1     |                  | 1        | 780   | 1       |
| 11063-1     |                  | 1        | 770   | 1       |
| 11064-1     |                  | 1        | -910  | DEL     |
| 11067-1     |                  | 1        | 745   | 1       |
| 11067-3     |                  | 1        | -755  | DEL     |
| 11068-1     |                  | 3        | 105   | 1       |
|             |                  | 3A       | 100   | 1       |
| 11069-1     |                  | 3        | -75   | 1       |
|             |                  | 3A       | -70   | 1       |
| 11069-3     |                  | 3        | -100  | 1       |
|             |                  | 3A       | -95   | 1       |
| 11070-1     |                  | 3        | 5     | 1       |
|             |                  | 3A       | 5     | 1       |
| 11071-1     |                  | 1        | 705   | 1       |
| 11072-3     |                  | 3        | 60    | 2       |
|             |                  | 3A       | 55    | 2       |
| 11073-1     |                  | 3        | 15    | 1       |
|             |                  | 3A       | 15    | 1       |
| 11074-1     |                  | 3        | 10    | 1       |
|             |                  | 3A       | 10    | 1       |
| 11075-1     |                  | 1        | 435   | 1       |
| 11076-1     |                  | 1        | 735   | 1       |

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| PART NUMBER | AIRLINE PART NO. | IPL FIG. | ITEM  | TTL REQ |
|-------------|------------------|----------|-------|---------|
| 11078-1     |                  | 1        | -790  | DEL     |
| 11080-1     |                  | 1        | 555   | 1       |
| 11081-1     |                  | 1        | 35    | 1       |
|             |                  | 6        | -1    | RF      |
| 11081-5     |                  | 1        | -35A  | DEL     |
|             |                  | 6        | -1A   | DEL     |
| 11082-1     |                  | 1        | -665  | DEL     |
| 11082-11    |                  | 1        | -665E | 1       |
| 11082-3     |                  | 1        | -665A | 1       |
| 11082-5     |                  | 1        | -665B | 1       |
| 11082-7     |                  | 1        | -665C | DEL     |
| 11082-9     |                  | 1        | -665D | DEL     |
| 11083-3     |                  | 1        | 95    | 1       |
|             |                  | 3        | -1    | RF      |
| 11085-1     |                  | 1        | -310  | 1       |
| 11085-3     |                  | 1        | 335   | 1       |
| 11085-5     |                  | 1        | 350   | 1       |
| 11087-1     |                  | 1        | 330   | 1       |
| 11088-1     |                  | 1        | 690   | 1       |
| 11090-1     |                  | 1        | 480   | 1       |
|             |                  | 7        | -1    | RF      |
| 11090-301   |                  | 7        | -5    | 1       |
| 11090-303   |                  | 7        | -165  | 1       |
| 11091-1     |                  | 4        | 60    | 1       |
| 11093-1     |                  | 7        | -10   | 1       |
| 11094-1     |                  | 4        | -160  | 1       |
| 11095-301   |                  | 8        | -15   | 1       |
|             |                  | 8        | -15A  | DEL     |
| 11095-503   |                  | 1        | 510   | 1       |
|             |                  | 8        | -1    | RF      |
| 11095-509   |                  | 1        | -510A | 1       |
|             |                  | 8        | -1A   | RF      |
| 11095-E     |                  | 8        | 20    | 1       |
| 11098-1     |                  | 7        | 150   | 1       |
| 11099-1     |                  | 3        | 115   | 1       |
|             |                  | 3A       | 110   | 1       |
| 11099-3     |                  | 3        | 110   | 1       |
|             |                  | 3A       | 105   | 1       |
| 11100-11    |                  | 3        | 120   | 2       |
|             |                  | 3A       | 115   | 2       |
| 11100-13    |                  | 1        | -170  | 2       |
|             |                  | 3        | 130   | RF      |
|             |                  | 3A       | 125   | RF      |
| 11102-1     |                  | 5        | 55    | 1       |
| 11106-1     |                  | 1        | 175   | 2       |
| 11107-1     |                  | 5        | -5    | 1       |
| 11107-5     |                  | 5        | 5A    | 1       |
| 11110-1     |                  | 1        | 790A  | 2       |
| 11111-1     |                  | 5        | 60    | 1       |
| 11112-1     |                  | 7        | 130   | 1       |
| 11114-1     |                  | 1        | -240  | 1       |

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| PART NUMBER | AIRLINE PART NO. | IPL FIG. | ITEM  | TTL REQ |
|-------------|------------------|----------|-------|---------|
| 11114-7     |                  | 1        | 260   | 1       |
| 11114-9     |                  | 1        | 285   | 1       |
| 11117-1     |                  | 1        | 190   | 1       |
| 11119-1     |                  | 2        | 10    | 1       |
| 11120-1     |                  | 1        | -5    | 1       |
|             |                  | 2        | -1    | RF      |
| 11122-1     |                  | 1        | 290   | 1       |
|             |                  | 5        | -1    | RF      |
| 11124-1     |                  | 2        | 20    | 2       |
| 11125-1     |                  | 1        | 355   | 1       |
| 11128-1     |                  | 1        | 695   | 4       |
| 11132-1     |                  | 1        | 360   | 1       |
| 11133-1     |                  | 3        | -180  | 2       |
| 11134-1     |                  | 3        | 155   | 2       |
| 11135-1     |                  | 3        | -170  | 2       |
| 11136-1     |                  | 3        | -175  | 2       |
| 11154-1     |                  | 1A       | 5     | 1       |
| 11154-3     |                  | 1A       | -20   | 1       |
| 11154-5     |                  | 1A       | -25   | 1       |
| 11154-7     |                  | 1A       | 35    | 1       |
| 11170-1     |                  | 1        | 340   | 1       |
| 11172-1     |                  | 1        | -305  | 1       |
|             |                  | 5        | 75    | RF      |
| 11172-5     |                  | 1        | -185  | 1       |
|             |                  | 3A       | -155  | RF      |
| 11176-1     |                  | 5        | 50    | 1       |
| 11201-1     |                  | 6        | 70    | 1       |
| 11204-1     |                  | 6        | -85   | RF      |
| 11205-1     |                  | 4        | -75   | 1       |
| 11205-3     |                  | 4        | -105  | 1       |
| 11205-5     |                  | 4        | -100  | 1       |
| 11206-1     |                  | 8        | 5     | 1       |
| 11211-3     |                  | 1        | 955   | 1       |
| 11222       |                  | 8        | 125   | 1       |
| 11224-1     |                  | 7        | 20    | 1       |
| 11225-3     |                  | 1        | -1F   | RF      |
| 11225-31    |                  | 1        | -1G   | RF      |
| 11230-1     |                  | 1        | -800A | 1       |
| 11230-3     |                  | 1        | 800   | 1       |
| 11240-1     |                  | 6        | 5     | 1       |
| 11240-15    |                  | 6        | -15A  | DEL     |
| 11240-2     |                  | 6        | 10    | 1       |
| 11240-3     |                  | 6        | 15    | 1       |
| 11240-4     |                  | 6        | 20    | 1       |
| 11240-5     |                  | 6        | 25    | 1       |
| 11242-1     |                  | 1        | -925  | RF      |
| 11243-1     |                  | 1        | 930   | 1       |
| 11245-1     |                  | 1        | 235   | 1       |
|             |                  | 3        | 35    | 1       |
| 11246-1     |                  | 7        | -80   | 2       |
| 11247-3     |                  | 1        | -830  | DEL     |

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| PART NUMBER | AIRLINE PART NO. | IPL FIG. | ITEM  | TTL REQ |
|-------------|------------------|----------|-------|---------|
| 1125        |                  | 7        | 245   | 1       |
| 11258-1     |                  | 1        | -615  | DEL     |
|             |                  | 4        | 185   | 1       |
| 1126        |                  | 7        | 160   | 1       |
| 11260-1     |                  | 1        | 405   | 1       |
| 11261-1     |                  | 1        | -365  | 1       |
| 11261-3     |                  | 1        | -365A | 1       |
| 11263-1     |                  | 1        | 325   | 1       |
| 11265-1     |                  | 1        | 715   | 1       |
| 11267-1     |                  | 1        | 540   | 1       |
|             |                  | 1A       | -1    | RF      |
| 11268-1     |                  | 1A       | -45   | 1       |
| 11269-1     |                  | 7        | 195   | 1       |
| 11279-1     |                  | 1        | 130   | 1       |
| 11279-3     |                  | 1        | 105   | 1       |
| 11280-1     |                  | 1        | 120   | 1       |
|             |                  | 1        | 142   | 1       |
| 11281-1     |                  | 1        | 100   | 2       |
|             |                  | 3        | -185  | RF      |
|             |                  | 3A       | -165  | RF      |
| 11284-1     |                  | 3        | 70    | 2       |
|             |                  | 3A       | 65    | 2       |
| 11285-1     |                  | 1        | 160   | 1       |
| 11285-3     |                  | 1        | 150   | 1       |
| 11288-1     |                  | 1        | 445   | 1       |
| 11289-1     |                  | 1        | 460   | 1       |
| 11290-1     |                  | 1        | 125   | 1       |
|             |                  | 1        | 145   | 1       |
| 11291-1     |                  | 4        | -30   | 1       |
| 11291-3     |                  | 4        | 35    | 1       |
| 11291-7     |                  | 4        | -45   | 1       |
| 11291-9     |                  | 4        | -50   | 1       |
| 11294-1     |                  | 1        | 425   | 1       |
| 11298-1     |                  | 1        | -590  | DEL     |
|             |                  | 4        | 200   | 1       |
| 11321-1     |                  | 3        | 40    | 1       |
| 11327-1     |                  | 7        | 175   | 1       |
| 11334-1     |                  | 1        | 870   | 1       |
| 11335-1     |                  | 1        | -890  | 1       |
| 11340-3     |                  | 1        | 10    | 1       |
| 11376-1     |                  | 1        | 860   | 1       |
| 11376-3     |                  | 1        | -860A | 1       |
| 11377-1     |                  | 1        | -915  | 1       |
| 11378-1     |                  | 1        | -830A | 1       |
| 11378-3     |                  | 1        | -830B | 1       |
| 11389-1     |                  | 1        | 910A  | 1       |
| 11770-1     |                  | 1        | -920  | 1       |
| 11771-1     |                  | 1        | -830C | 1       |
| 1178-3      |                  | 1A       | 40    | 1       |
| 11784-1     |                  | 1        | 910B  | 1       |
| 11785-1     |                  | 3        | -135A | 1       |

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| PART NUMBER   | AIRLINE PART NO. | IPL FIG. | ITEM  | TTL REQ |
|---------------|------------------|----------|-------|---------|
| 11785-1       |                  | 3A       | -130A | 1       |
| 11811-1       |                  | 1        | 890A  | 1       |
| 11844-1       |                  | 1        | 870A  | 1       |
| 12252-1       |                  | 3A       | 35    | 1       |
| 12254-3       |                  | 1        | 95A   | 1       |
|               |                  | 3A       | -1    | RF      |
| 12255-1       |                  | 1        | 210   | 1       |
| 12257-1       |                  | 1        | -200  | 1       |
| 12310-1       |                  | 2        | 5     | 1       |
| 12321-1       |                  | 1B       | 55    | 1       |
|               |                  | 1B       | 55A   | 1       |
| 12321-5       |                  | 1B       | 15    | 1       |
| 12322-1       |                  | 1B       | -45   | 1       |
| 12349-1       |                  | 1B       | 65    | 1       |
| 12355-3       |                  | 1        | 540A  | 1       |
|               |                  | 1B       | -1    | RF      |
| 12356-1       |                  | 8        | -235  | 1       |
| 12356-3       |                  | 8        | -240  | 1       |
| 12406-1       |                  | 4        | 110   | 1       |
| 12424-1       |                  | 1B       | 25    | 1       |
| 12430-1       |                  | 4        | -130  | 1       |
| 12431-1       |                  | 1        | 840   | 6       |
| 12432-1       |                  | 1        | 685   | 1       |
| 12432-3       |                  | 1        | 680   | 1       |
| 12618-1       |                  | 1        | -830D | DEL     |
| 12618-3       |                  | 1        | -830E | DEL     |
| 12618-5       |                  | 1        | -910D | DEL     |
| 12628-1       |                  | 1        | -130A | DEL     |
| 12628-3       |                  | 1        | -105A | DEL     |
| 12629-1       |                  | 6        | -90   | DEL     |
| 12631-1       |                  | 1        | -910C | DEL     |
| 12635-1       |                  | 1        | -945  | DEL     |
| 12636-1       |                  | 1        | -950  | DEL     |
| 12665-1       |                  | 1        | 80    | 1       |
| 12685-1       |                  | 1        | -440  | 1       |
| 12688-1       |                  | 1        | 85    | 1       |
| 12693-1       |                  | 1B       | -60   | 1       |
| 12K OHM       |                  | 8        | 115   | 1       |
| 143 OHM       |                  | 8        | -250  | 1       |
| 150 OHM       |                  | 8        | 130   | 1       |
| 1B31          |                  | 8        | -230  | AR      |
| 1M OHM        |                  | 8        | 145   | 2       |
| 1N4005        |                  | 6        | -60   | DEL     |
| 1N755A        |                  | 8        | 70    | 1       |
| 1N914         |                  | 8        | 75    | 6       |
| 2-005E0540-80 |                  | 1        | 475   | 1       |
| 2-005E540-80  |                  | 3A       | -160  | RF      |
| 2-008E0540-80 |                  | 1        | 265   | 1       |
| 2-010E0540-80 |                  | 1        | 470   | 1       |
| 2-012E0540-80 |                  | 1        | 465   | 1       |
| 2-016E0540-80 |                  | 4        | 25    | 3       |

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**


| PART NUMBER   | AIRLINE PART NO. | IPL FIG. | ITEM  | TTL REQ |
|---------------|------------------|----------|-------|---------|
| 2-016E0540-80 |                  | 4        | -165  | DEL     |
| 20 OHM        |                  | 8        | -245  | 1       |
| 280001-11     |                  | 1        | -1H   | DEL     |
| 2M OHM        |                  | 8        | 105   | 4       |
| 2N7000        |                  | 8        | 85    | 6       |
| 3.3K OHM      |                  | 8        | 140   | 3       |
| 31-151-025    |                  | 6        | -45B  | DEL     |
| 31-282025     |                  | 6        | 45    | 1       |
| 317-1616-786  |                  | 1B       | -70   | 2       |
| 31818         |                  | 6        | -65   | DEL     |
| 3201          |                  | 1A       | -15A  | 2       |
| 3386P-200     |                  | 8        | 165   | 1       |
| 3386P1-200    |                  | 8        | -165A |         |
| 34105         |                  | 1B       | -50   | 3       |
|               |                  | 1B       | -75   | 3       |
| 352-0981-1    |                  | 1        | -560B | 4       |
| 3520-1038-01  |                  | 5        | -5B   | 1       |
| 3520-1054-01  |                  | 1        | -290A | 1       |
|               |                  | 5        | -1A   | RF      |
| 3520-1071-01  |                  | 5        | 10A   | 3       |
| 3575-0549-01  |                  | 1        | 890B  | 1       |
| 43-05-2       |                  | 8        | -210  | 4       |
| 430531        |                  | 3A       | 150   | 2       |
| 4606X102-223  |                  | 8        | 95    | 2       |
| 4610X101-103  |                  | 8        | -90   | 1       |
| 47 OHM        |                  | 8        | 150   | 1       |
| 5.6K OHM      |                  | 8        | 135   | 3       |
| 510K OHM      |                  | 8        | 110   | 1       |
| 511 OHM       |                  | 8        | 120   | 3       |
| 532T12MP95    |                  | 4        | -95   | 1       |
| 534-3201      |                  | 1A       | 15    | 2       |
| 55-0392-3     |                  | 1        | -870B | 1       |
| 600A10        |                  | 7        | 60    | 1       |
| 600A8         |                  | 7        | 35    | 1       |
| 62-0020-5     |                  | 4        | 160A  | 1       |
| 62-0136-9     |                  | 4        | -135  | 1       |
| 6MGMRG28N     |                  | 6        | 30    | 5       |
| 7-179BA       |                  | 8        | 225   | 1       |
| 7274-2-1      |                  | 7        | -180B | 1       |
| 7277-2-1      |                  | 7        | 180   | 1       |
| 750K OHM      |                  | 8        | 100   | 1       |
| 8-1343792-8   |                  | 8        | -25B  | 1       |
| 8.45K OHM     |                  | 8        | 160   | 1       |
| 886           |                  | 1        | -560A | 4       |
| 8876T13       |                  | 1        | 60    | 1       |
|               |                  | 1        | 625   | 1       |
|               |                  | 1        | 815   | 1       |
|               |                  | 7        | 250   | 1       |
| 94639A106     |                  | 1        | 560   | 4       |



**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

THIS PAGE IS INTENTIONALLY LEFT BLANK.

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

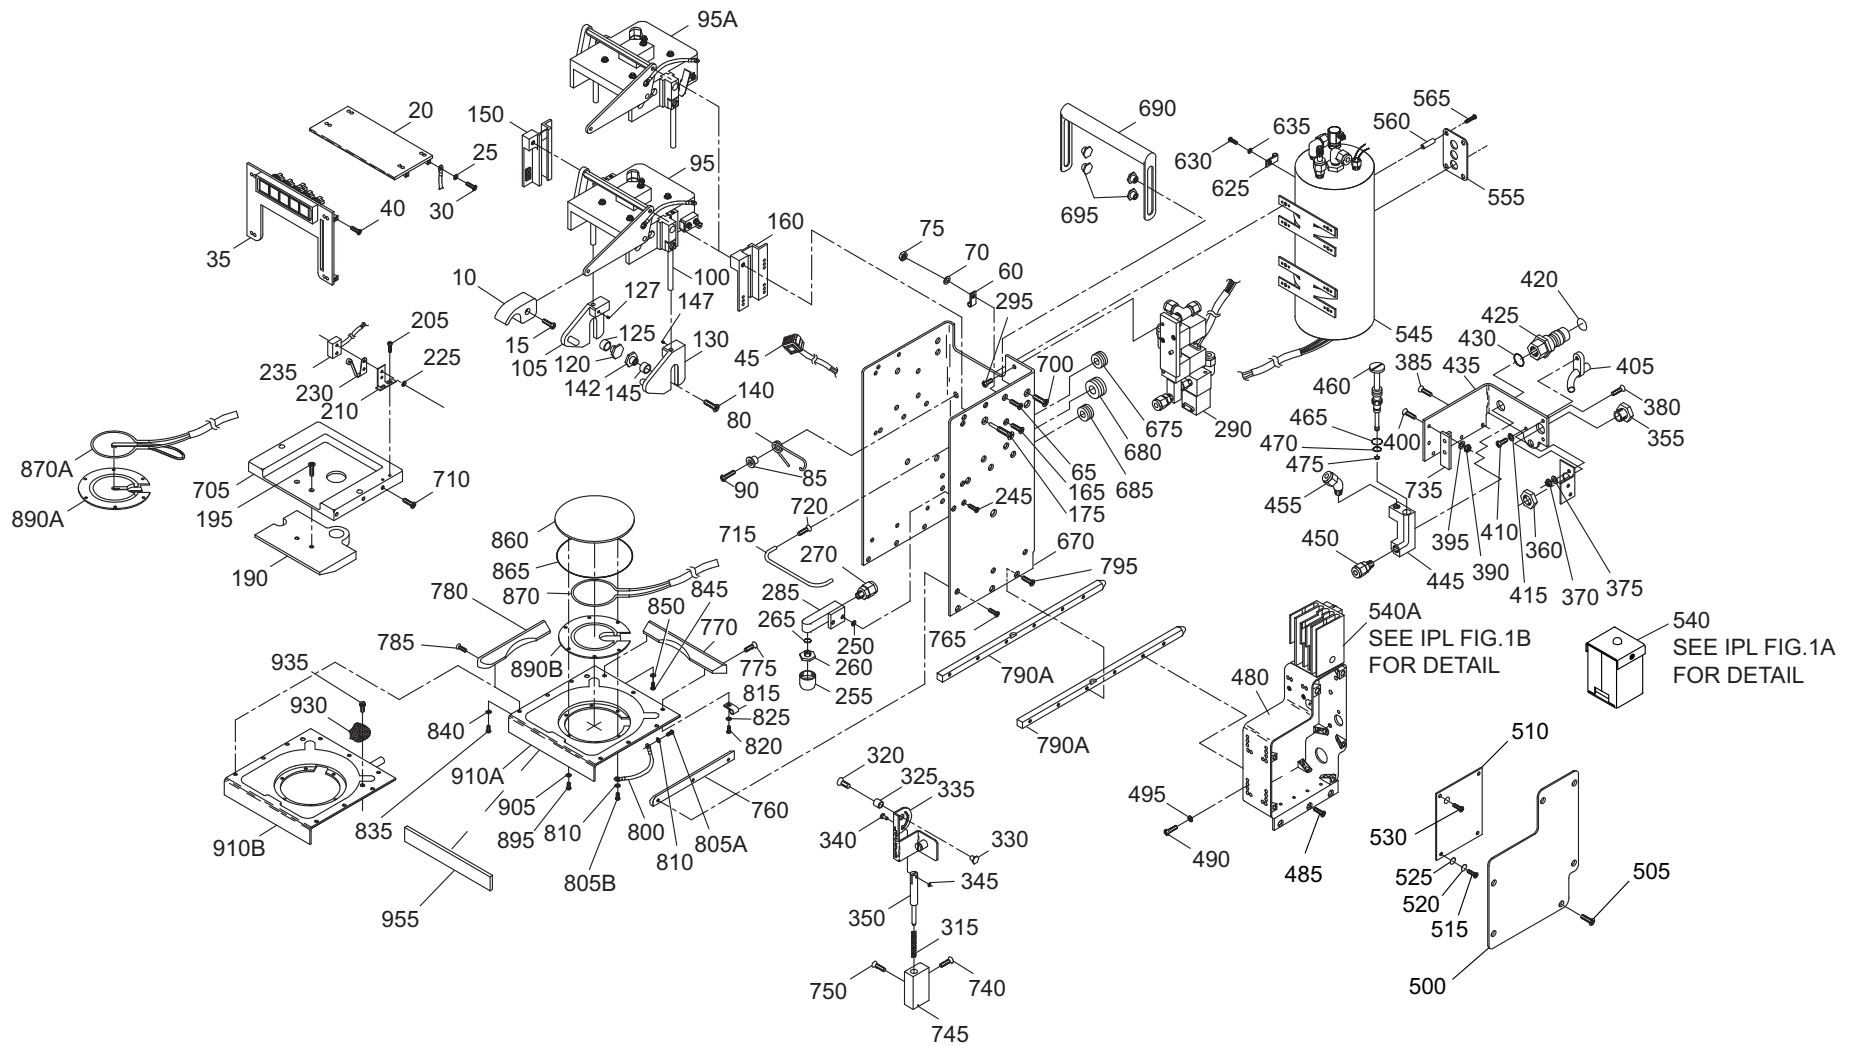

GRAPHIC 25-30-02-99B-013-A01

IPL Figure 1  
 Coffee Maker - Exploded View

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

TABLE 25-30-02-950-801-A01

| FIG.<br>ITEM | PART NUMBER   | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                               | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|---------------|---------------------|-------------------------------------------------------------|-------------|----------------|
| 1            |               |                     |                                                             |             |                |
| -1           | 11050-1       |                     | DELETED                                                     |             | DEL            |
| -1A          | 11050-3       |                     | DELETED                                                     |             | DEL            |
| -1B          | 11050-5       |                     | DELETED                                                     |             | DEL            |
| -1C          | 11050-7       |                     | DELETED                                                     |             | DEL            |
| -1D          | 11050-11      |                     | COFFEE MAKER ASSEMBLY                                       | A           | RF             |
| -1E          | 11050-31      |                     | DELETED                                                     |             | DEL            |
| -1F          | 11225-3       |                     | COFFEE MAKER ASSEMBLY                                       | B           | RF             |
| -1G          | 11225-31      |                     | COFFEE MAKER ASSEMBLY                                       | C           | RF             |
| -1H          | 280001-11     |                     | DELETED                                                     |             | DEL            |
| -5           | 11120-1       |                     | • ASSEMBLY, BREW CUP<br>(SEE IPL FIGURE 2 FOR DET BKDN)     |             | 1              |
| 10           | 11340-3       |                     | • ASSEMBLY, BREW KNOB, ONE PC                               |             | 1              |
|              |               |                     | ATTACHING PARTS                                             |             |                |
| 15           | MS51957-46    |                     | • SCREW, PAN HD (8-32 X 0.625)                              |             | 1              |
|              |               |                     | * * *                                                       |             |                |
| 20           | 11058-3       |                     | • COVER, SWITCH MOUNT                                       |             | 1              |
|              |               |                     | ATTACHING PARTS                                             |             |                |
| 25           | AN960D6L      |                     | • WASHER, FLAT (SUPSD BY ITEM 25A)                          |             | 1              |
| -25A         | NAS1149DN616H |                     | • WASHER, ALUMINIUM (NO. 6)<br>(SUPSDS ITEM 25)             |             | 1              |
| 30           | MS24693C26    |                     | • SCREW, FLAT HD (6-32 X 0.375)<br>(TPN MS24693-C26)        |             | 4              |
|              |               |                     | * * *                                                       |             |                |
| 35           | 11081-1       |                     | • ASSEMBLY, SWITCH MOUNT<br>(SEE IPL FIGURE 6 FOR DET BKDN) |             | 1              |
| -35A         | 11081-5       |                     | DELETED                                                     |             | DEL            |
|              |               |                     | ATTACHING PARTS                                             |             |                |
| 40           | MS24693C26    |                     | • SCREW, FLAT HD (6-32 X 0.375)<br>(TPN MS24693-C26)        |             | 4              |
|              |               |                     | * * *                                                       |             |                |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER   | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                                      | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|---------------|---------------------|----------------------------------------------------------------------------------------------------|-------------|----------------|
| 1            |               |                     |                                                                                                    |             |                |
| 45           | TE50448       |                     | • SOCKET HOUSING (J3) (TPN TE-50448)                                                               |             | 1              |
| -50          | TE50452       |                     | • SOCKET (TPN TE-50452)                                                                            |             | 12             |
| -55          | TU50034-4     |                     | • WHITE VARGLAS SILICONE RUBBER<br>SLEEVING NO. 4 (TPN TU-50034-4)                                 |             | 1              |
| 60           | 8876T13       |                     | • WIRE CLAMP 0.25 IN (0.635 CM)<br>(SUPSD BY ITEM 60A)                                             |             | 1              |
| -60A         | CCS25S8M0     |                     | • WIRE CLAMP 0.25 IN (0.635 CM)<br>(SUPSDS ITEM 60)<br>(SUPSD BY ITEMS 60B AND 60C)                |             | 1              |
| -60B         | CL3201        |                     | • WIRE CLAMP 0.25 IN (0.635 CM)<br>(TPN CL-3201) (SUPSDS ITEM 60A)                                 | B,C         | 1              |
| -60C         | CL320         |                     | • WIRE CLAMP 0.25 IN (0.635 CM)<br>(TPN CL-320) (SUPSDS ITEM 60A)                                  | A           | 1              |
|              |               |                     | ATTACHING PARTS                                                                                    |             |                |
| 65           | MS24693C50    |                     | • SCREW, FLAT HD (8-32 X 0.5)<br>(TPN MS24693-C50)                                                 |             | 1              |
| 70           | AN960-08      |                     | • WASHER, FLAT (SUPSD BY ITEM 70A)                                                                 |             | 1              |
| -70A         | NAS1149FN832P |                     | • WASHER, NO. 8 (SUPSDS ITEM 70)                                                                   |             | 1              |
| 75           | MS21042-08    |                     | • NUT, SELF-LOCKING (8-32)                                                                         |             | 1              |
|              |               |                     | * * *                                                                                              |             |                |
| 80           | 12665-1       |                     | • SPRING, BREW HEAD                                                                                |             | 1              |
| 85           | 12688-1       |                     | • BUSHING, TORSION SPRING                                                                          |             | 1              |
|              |               |                     | ATTACHING PARTS                                                                                    |             |                |
| 90           | MS24693C53    |                     | • SCREW FLAT HD (8-32 X 0.875)<br>(TPN MS24693-C53)                                                |             | 1              |
|              |               |                     | * * *                                                                                              |             |                |
| 95           | 11083-3       |                     | • ASSEMBLY, BREW HEAD<br>(PRE SB 25-30-02-9 & SB 25-30-02-11)<br>(SEE IPL FIGURE 3 FOR DET BKDN)   |             | 1              |
| 95A          | 12254-3       |                     | • ASSEMBLY, BREW HEAD<br>(POST SB 25-30-02-9 & SB 25-30-02-11)<br>(SEE IPL FIGURE 3A FOR DET BKDN) |             | 1              |
| 100          | 11281-1       |                     | • ROD, GUIDE RETAINER                                                                              |             | 2              |
| 105          | 11279-3       |                     | • BRACKET, POT RETAINER, LH                                                                        |             | 1              |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                           | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|-------------|---------------------|---------------------------------------------------------|-------------|----------------|
| 1            |             |                     |                                                         |             |                |
| -105A        | 12628-3     |                     | DELETED                                                 |             | DEL            |
|              |             |                     | ATTACHING PARTS                                         |             |                |
| -110         | AN565D8H4   |                     | DELETED, MOVED TO 127                                   |             | DEL            |
| -115         | MS24693C269 |                     | • SCREW, FLAT HD (10-32 X 0.3125)<br>(TPN MS24693-C269) |             | 1              |
| 120          | 11280-1     |                     | • BUSHING, RETAINER                                     |             | 1              |
| 125          | 11290-1     |                     | • BUSHING, GUIDE                                        |             | 1              |
|              |             |                     | * * *                                                   |             |                |
| 127          | AN565D8H4   |                     | • • SET SCREW                                           |             | 1              |
| 130          | 11279-1     |                     | • BRACKET, POT RETAINER, RH                             |             | 1              |
| -130A        | 12628-1     |                     | DELETED                                                 |             | DEL            |
|              |             |                     | ATTACHING PARTS                                         |             |                |
| -135         | AN565D8H4   |                     | DELETED, MOVED TO 147                                   |             | DEL            |
| 140          | MS24693C269 |                     | • SCREW, FLAT HD (10-32 X 0.3125)<br>(TPN MS24693-C269) |             | 1              |
| 142          | 11280-1     |                     | • BUSHING, RETAINER                                     |             | 1              |
| 145          | 11290-1     |                     | • BUSHING, GUIDE                                        |             | 1              |
|              |             |                     | * * *                                                   |             |                |
| 147          | AN565D8H4   |                     | • • SET SCREW                                           |             | 1              |
| 150          | 11285-3     |                     | • GUIDE, BREW HEAD SLOT, LH                             |             | 1              |
|              |             |                     | ATTACHING PARTS                                         |             |                |
| -155         | MS24693C51  |                     | • SCREW, FLAT HD (8-32 X 0.625)<br>(TPN MS24693-C51)    |             | 3              |
|              |             |                     | * * *                                                   |             |                |
| 160          | 11285-1     |                     | • GUIDE, BREW HEAD SLOT, RH                             |             | 1              |
|              |             |                     | ATTACHING PARTS                                         |             |                |
| 165          | MS24693C51  |                     | • SCREW, FLAT HD (8-32 X 0.625)<br>(TPN MS24693-C51)    |             | 3              |
|              |             |                     | * * *                                                   |             |                |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                      | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|-------------|---------------------|--------------------------------------------------------------------|-------------|----------------|
| 1            |             |                     |                                                                    |             |                |
| -170         | 11100-13    |                     | • BUSHING, SHAFT<br><br>ATTACHING PARTS                            |             | 2              |
| 175          | 11106-1     |                     | • SCREW, BREW HEAD HANDLE<br><br>* * *                             |             | 2              |
| -180         | OR50041-005 |                     | • O-RING (TPN OR-50041-005)                                        | C           | 1              |
| -185         | 11172-5     |                     | • FLOW RESTRICTOR                                                  | C           | 1              |
| 190          | 11117-1     |                     | • ASSEMBLY, LEVEL SENSOR (U101)<br><br>ATTACHING PARTS             |             | 1              |
| 195          | MS24693C49  |                     | • SCREW, FLAT HD (8-32 X 0.4375)<br>(TPN MS24693-C49)<br><br>* * * |             | 2              |
| -200         | 12257-1     |                     | • ASSEMBLY, LIMIT SWITCH ANGLE<br><br>ATTACHING PARTS              |             | 1              |
| 205          | MS51957-13  |                     | • SCREW, PAN HD (4-40 X 0.25)<br><br>* * *                         |             | 2              |
| 210          | 12255-1     |                     | • • LIMIT SWITCH ANGLE<br><br>ATTACHING PARTS                      |             | 1              |
| -215         | MS51959-8   |                     | DELETED, SUPPLIED WITH ITEM 235                                    |             | DEL            |
| -220         | MS35649-224 |                     | DELETED, SUPPLIED WITH ITEM 235                                    |             | DEL            |
| 225          | MS35333-69  |                     | • • WASHER (SUPSD BY ITEM 225A)                                    |             | 2              |
| -225A        | MS35338-134 |                     | • • WASHER, LOCK (SUPSDS ITEMS 225)<br><br>* * *                   |             | 2              |
| 230          | SW737       |                     | • • ACTUATOR SWITCH (TPN SW-737)                                   |             | 1              |
| 235          | 11245-1     |                     | • • ASSEMBLY, LIMIT SWITCH                                         |             | 1              |
| -240         | 11114-1     |                     | • ASSEMBLY, WATER FAUCET<br><br>ATTACHING PARTS                    |             | 1              |
| 245          | SC50268-25  |                     | • SCREW, FLAT HD, NYLOK (6-32 X 0.3125)<br>(TPN SC-50268-25)       |             | 2              |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER   | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                       | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|---------------|---------------------|-------------------------------------------------------------------------------------|-------------|----------------|
| 1            |               |                     |                                                                                     |             |                |
| 250          | AN960D6L      |                     | • WASHER, FLAT (SUPSD BY ITEM 250A)                                                 |             | 2              |
| -250A        | NAS1149DN616H |                     | • WASHER (NO. 6) (SUPSDS ITEM 250)                                                  |             | 2              |
|              |               |                     | * * *                                                                               |             |                |
| 255          | B129831A001   |                     | • • AERATOR (SUPSD BY ITEM 255A)                                                    |             | 1              |
| -255A        | MISC013       |                     | • • AERATOR (TPN MISC-013)<br>(SUPSDS ITEM 255)                                     |             | 1              |
| 260          | 11114-7       |                     | • • HEAD, FAUCET                                                                    |             | 1              |
| 265          | 2-008E0540-80 |                     | • • O-RING (SUPSD BY ITEM 265A)                                                     |             | 1              |
| -265A        | OR50041-008   |                     | • • O-RING (TPN OR-50041-008)<br>(SUPSDS ITEM 265)                                  |             | 1              |
| 270          | PF50261       |                     | • • MALE CONNECTOR (TPN PF-50261)                                                   |             | 1              |
| -275         | PF50262       |                     | • • • NUT (TPN PF-50262)                                                            |             | 1              |
| -280         | PF50254       |                     | • • • FERRULE SET (TPN PF-50254)                                                    |             | 1              |
| 285          | 11114-9       |                     | • • FAUCET SUBASSY                                                                  |             | 1              |
| 290          | 11122-1       |                     | • ASSEMBLY, FLOW CONTROL<br>(SEE IPL FIGURE 5 FOR DET BKDN)<br>(SUPSD BY ITEM 290A) |             | 1              |
| -290A        | 3520-1054-01  |                     | • ASSEMBLY, FLOW CONTROL<br>(SEE IPL FIGURE 5 FOR DET BKDN)<br>(SUPSDS ITEM 290)    |             | 1              |
|              |               |                     | ATTACHING PARTS                                                                     |             |                |
| 295          | MS51957-43    |                     | • SCREW, PAN HD (8-32 X 0.375)                                                      |             | 1              |
|              |               |                     | * * *                                                                               |             |                |
| -300         | TU50034-6     |                     | • WHITE VARGLAS SILICONE RUBBER<br>SLEEVING (6 IN) (152.4 MM)<br>(TPN TU-50034-6)   |             | 3              |
| -305         | 11172-1       |                     | • FLOW RESTRICTOR (POST SB 25-30-02-13)                                             | A,B         | 1              |
| -310         | 11085-1       |                     | • ASSEMBLY, LOCKING PIN                                                             |             | 1              |
| 315          | MS24585C265   |                     | • SPRING                                                                            |             | 1              |
|              |               |                     | ATTACHING PARTS                                                                     |             |                |
| 320          | MS24693C271   |                     | • SCREW, FLAT HD (10-32 X 0.4375)<br>(TPN MS24693-C271)                             |             | 1              |
| 325          | 11263-1       |                     | • BUSHING, LOCKING PIN                                                              |             | 1              |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER   | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|---------------|---------------------|--------------------------------------------------------------|-------------|----------------|
| 1            |               |                     |                                                              |             |                |
| 330          | 11087-1       |                     | • LOCKING PIN, POST<br>* * *                                 |             | 1              |
| 335          | 11085-3       |                     | • • ASSEMBLY, HANDLE                                         |             | 1              |
| 340          | 11170-1       |                     | • • PIN, GROOVE                                              |             | 1              |
| 345          | MS16633-4012  |                     | • • E-RING                                                   |             | 1              |
| 350          | 11085-5       |                     | • • PIN, LOCKING                                             |             | 1              |
| 355          | 11125-1       |                     | • BUSHING, GUIDE PIN<br>ATTACHING PARTS                      |             | 1              |
| 360          | 11132-1       |                     | • NUT, ALIGNMENT BUSHING<br>* * *                            |             | 1              |
| -365         | 11261-1       |                     | • ASSY, MOUNTING BRACKET (REAR DRAIN)                        | B,C         | 1              |
| -365A        | 11261-3       |                     | • ASSY, MOUNTING BRACKET (SUMP DRAIN)<br>ATTACHING PARTS     | A           | 1              |
| 370          | MS21042-08    |                     | • NUT, SELF-LOCKING (8-32)                                   |             | 2              |
| 375          | AN960-08      |                     | • WASHER, FLAT (SUPSD BY ITEM 375A)                          |             | 2              |
| -375A        | NAS1149FN832P |                     | • WASHER, NO. 8 (SUPSDS ITEM 375)                            |             | 2              |
| 380          | MS24693C50    |                     | • SCREW, FLAT HD (8-32 X 0.5)<br>(TPN MS24693-C50)           |             | 2              |
| 385          | MS24693C49    |                     | • SCREW, FLAT HD (8-32 X 0.4375)<br>(TPN MS24693-C49)        |             | 3              |
| 390          | MS21042-08    |                     | • NUT, SELF-LOCKING (8-32)                                   |             | 2              |
| 395          | AN960-08      |                     | • WASHER, FLAT (SUPSD BY ITEM 395A)                          |             | 2              |
| -395A        | NAS1149FN832P |                     | • WASHER, NO. 8 (SUPSDS ITEM 395)                            |             | 2              |
| 400          | MS24693C50    |                     | • SCREW, FLAT HD (8-32 X 0.50)<br>(TPN MS24693-C50)<br>* * * |             | 2              |
| 405          | 11260-1       |                     | • • ASSEMBLY, BRACKET, DRAIN TUBE<br>ATTACHING PARTS         | A           | 1              |
| 410          | MS51957-44    |                     | • • SCREW, PAN HD (8-32 X 0.4375)                            | A           | 1              |

- ITEM NOT ILLUSTRATED



**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER   | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                             | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|---------------|---------------------|-------------------------------------------------------------------------------------------|-------------|----------------|
| 1            |               |                     |                                                                                           |             |                |
| 415          | MS35338-137   |                     | • • WASHER, LOCKING (NO. 8)<br><br>* * *                                                  | A           | 1              |
| -420         | OR067         |                     | • • O-RING (TPN OR-067)                                                                   |             | 1              |
| 425          | 11294-1       |                     | • • PLUG, WATER INLET                                                                     |             | 1              |
| 430          | MS83248-1-110 |                     | • • O-RING (TPN MS83248/1-110)<br>(SUPSD BY ITEM 430A)                                    |             | 1              |
| -430A        | M83248-1-110  |                     | • • O-RING (TPN M83248/1-110)<br>(SUPSDS ITEM 430)                                        |             | 1              |
| 435          | 11075-1       |                     | • • BRACKET, MOUNTING                                                                     |             | 1              |
| -440         | 12685-1       |                     | • • ASSEMBLY, VALVE                                                                       |             | 1              |
| 445          | 11288-1       |                     | • • • MANIFOLD, INLET VENT DRAIN                                                          |             | 1              |
| 450          | PF50261       |                     | • • • MALE CONNECTOR (TPN PF-50261)                                                       |             | 1              |
| 455          | PF50259       |                     | • • • 45° ELBOW (TPN PF-50259)                                                            |             | 1              |
| 460          | 11289-1       |                     | • • • VALVE STEM ASSEMBLY                                                                 |             | 1              |
| 465          | 2-012E0540-80 |                     | • • • O-RING (SUPSD BY ITEM 465A)                                                         |             | 1              |
| -465A        | OR50041-012   |                     | • • • O-RING (TPN OR-50041-012)<br>(SUPSDS ITEM 465)                                      |             | 1              |
| 470          | 2-010E0540-80 |                     | • • • O-RING (SUPSD BY ITEM 470A)<br>(PRE SB 25-30-02-10)                                 |             | 1              |
| -470A        | OR50043-010   |                     | • • • O-RING (TPN OR-50043-010) (SUPSDS<br>ITEM 470) (POST SB 25-30-02-10)                |             | 1              |
| 475          | 2-005E0540-80 |                     | • • • O-RING (SUPSD BY ITEM 475A)                                                         |             | 1              |
| -475A        | OR50041-005   |                     | • • • O-RING (TPN OR-50041-005)<br>(SUPSDS ITEM 475)                                      |             | 1              |
| 480          | 11090-1       |                     | • ELECTRICAL ENCLOSURE ASSEMBLY<br>(SEE IPL FIGURE 7 FOR DET BKDN)<br><br>ATTACHING PARTS |             | 1              |
| 485          | MS24693C49    |                     | • SCREW, FLAT HD (8-32 X 0.4375)<br>(TPN MS24693-C49)                                     |             | 3              |
| 490          | MS51957-45    |                     | • SCREW, PAN HD (8-32 X 0.5)                                                              |             | 4              |
| 495          | AN960D8L      |                     | • WASHER, FLAT (SUPSD BY ITEM 495A)                                                       |             | 4              |
| -495A        | NAS1149DN816H |                     | • WASHER, ALUMINIUM (NO. 8)<br>(SUPSDS ITEM 495)<br><br>* * *                             | A,B         | 4              |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                                        | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|-------------|---------------------|------------------------------------------------------------------------------------------------------|-------------|----------------|
| 1            |             |                     |                                                                                                      |             |                |
| 500          | 11060-1     |                     | • COVER, ELECTRICAL ENCLOSURE<br><br>ATTACHING PARTS                                                 |             | 1              |
| 505          | MS24693C24  |                     | • SCREW, FLAT HD (6-32 X 0.25)<br>(TPN MS24693-C24)<br><br>* * *                                     |             | 6              |
| 510          | 11095-503   |                     | • ASSY, CIRCUIT CARD (PRE SB 25-30-02-13)<br>(SEE IPL FIGURE 8 FOR DET BKDN)                         | A,B         | 1              |
| -510A        | 11095-509   |                     | • ASSY, CIRCUIT CARD (POST SB 25-30-02-13)<br>(SEE IPL FIGURE 8 FOR DET BKDN)<br><br>ATTACHING PARTS | C           | 1              |
| 515          | MS24693C4   |                     | • SCREW (SUPSD BY ITEM 515A)                                                                         |             | 2              |
| -515A        | MS51957-16  |                     | • SCREW, PAN HD (4-40 X 0.4375)<br>(SUPSDS ITEM 515)                                                 |             | 2              |
| 520          | MS35338-135 |                     | • SSP-WASHER, LOCK SPRING, REGULAR                                                                   |             | 2              |
| 525          | MS15795-804 |                     | • WASHER, FLAT (0.125 X 0.03125)                                                                     |             | 2              |
| 530          | MS51957-14  |                     | • SCREW, PAN HD (4-40 X 0.3125)<br><br>* * *                                                         |             | 2              |
| -535         | MS18029-1S5 |                     | • COVER, TERMINAL BLOCK<br>(TPN MS18029-1S-5)                                                        |             | 1              |
| 540          | 11267-1     |                     | • RELAY ASSY (K1) (SUPSD BY ITEM 540A)<br>(SEE IPL FIGURE 1A FOR DET BKDN)                           |             | 1              |
| 540A         | 12355-3     |                     | • KIT, SOLID STATE RELAY (SUPSDS ITEM<br>540) (SEE IPL FIGURE 1B FOR DET BKDN)                       |             | 1              |
| 545          | 11051-1     |                     | • ASSEMBLY, TANK<br>(SEE IPL FIGURE 4 FOR DET BKDN)                                                  | A,B         | 1              |
| -545A        | 11051-15    |                     | • ASSEMBLY, TANK<br>(SEE IPL FIGURE 4 FOR DET BKDN)<br><br>ATTACHING PARTS                           | C           | 1              |
| -550         | MS51957-45  |                     | • SCREW, PAN HD (8-32 X 0.50)<br>(PRE SB 25-30-02-9) (SUPSD BY ITEM 550A)                            |             | 8              |
| -550A        | MS51957-45  |                     | • SCREW, PAN HD (8-32 X 0.50)<br>(POST SB 25-30-02-9) (SUPSDS ITEM 550)<br><br>* * *                 |             | 7              |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                          | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|-------------|---------------------|----------------------------------------------------------------------------------------|-------------|----------------|
| 1            |             |                     |                                                                                        |             |                |
| 555          | 11080-1     |                     | • COVER, THERMOSTAT                                                                    |             | 1              |
| 560          | 94639A106   |                     | • SPACER, (0.5 IN) (1.27 CM)<br>(SUPSD BY ITEM 560A)                                   |             | 4              |
| -560A        | 886         |                     | • SPACER, (0.5 IN) (1.27 CM)<br>(SUPSDS ITEM 560)<br>(SUPSD BY ITEM 560B)              |             | 4              |
| -560B        | 352-0981-1  |                     | • STANDOFF, THERMAL SWITCH<br>(SUPSDS ITEM 560A)                                       |             | 4              |
|              |             |                     | ATTACHING PARTS                                                                        |             |                |
| 565          | FN824C      |                     | • SCREW, NYLON, 6-32 X 0.75<br>(TPN FN-824-C) (SUPSD BY ITEM 565A)                     |             | 4              |
| -565A        | MS51957-32  |                     | • SCREW, PAN HD (6-32 X 0.75)<br>(SUPSDS ITEM 565)<br>(SUPSD BY ITEM 565B)             |             | 4              |
| -565B        | MS51957-33  |                     | • SCREW, PAN HD (6-32 X 0.875)<br>(SUPSDS ITEM 565A)                                   |             | 4              |
| -570         | MS35338-136 |                     | • WASHER, LOCK<br><br>* * *                                                            | B,C         | 4              |
| -575         | MS21042-04  |                     | DELETED (SEE IPL FIGURE 4)                                                             |             | DEL            |
| -580         | AN960C4L    |                     | DELETED (SEE IPL FIGURE 4)                                                             |             | DEL            |
| -585         | MS51957-13  |                     | DELETED (SEE IPL FIGURE 4)                                                             |             | DEL            |
| -590         | 11298-1     |                     | DELETED (SEE IPL FIGURE 4)                                                             |             | DEL            |
| -595         | MS21042-04  |                     | DELETED (SEE IPL FIGURE 4)                                                             |             | DEL            |
| -600         | AN960C4L    |                     | DELETED (SEE IPL FIGURE 4)                                                             |             | DEL            |
| -605         | MS51957-13  |                     | DELETED (SEE IPL FIGURE 4)                                                             |             | DEL            |
| -610         | OA250M      |                     | DELETED (SEE IPL FIGURE 4)                                                             |             | DEL            |
| -615         | 11258-1     |                     | DELETED (SEE IPL FIGURE 4)                                                             |             | DEL            |
| -620         | MS21042-06  |                     | DELETED (SEE IPL FIGURE 4)                                                             |             | DEL            |
| 625          | 8876T13     |                     | • WIRE CLAMP 0.25 IN (0.635 CM)<br>(SUPSD BY ITEM 625A)                                |             | 1              |
| -625A        | CCS25S8M0   |                     | • WIRE CLAMP 0.25 IN (0.635 CM)<br>(SUPSDS ITEM 625)<br>(SUPSD BY ITEMS 625B AND 625C) |             | 1              |
| -625B        | CL320       |                     | • WIRE CLAMP 0.25 IN (0.635 CM)<br>(TPN CL-320) (SUPSDS ITEM 625A)                     | A           | 1              |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER   | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                                                                | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|---------------|---------------------|------------------------------------------------------------------------------------------------------------------------------|-------------|----------------|
| 1            |               |                     |                                                                                                                              |             |                |
| -625C        | CL3201        |                     | <ul style="list-style-type: none"> <li>WIRE CLAMP 0.25 IN (0.635 CM) (TPN CL-3201) (SUPSDS ITEM 625A)</li> </ul>             | B,C         | 1              |
|              |               |                     | ATTACHING PARTS                                                                                                              |             |                |
| 630          | MS51957-26    |                     | <ul style="list-style-type: none"> <li>SCREW, PAN HD (6-32 X 0.25)</li> </ul>                                                |             | 1              |
| 635          | AN960C6L      |                     | <ul style="list-style-type: none"> <li>WASHER, FLAT (SUPSD BY ITEM 635A)</li> </ul>                                          |             | 1              |
| -635A        | NAS1149CN616R |                     | <ul style="list-style-type: none"> <li>WASHER (SUPSDS ITEM 635)</li> </ul>                                                   |             | 1              |
|              |               |                     | * * *                                                                                                                        |             |                |
| -640         | TU50034-1     |                     | <ul style="list-style-type: none"> <li>WHITE VARGLAS SILICONE RUBBER SLEEVING (4 IN) (101.6 MM) (TPN TU-50034-1)</li> </ul>  |             | 1              |
| -645         | TU50034-3     |                     | <ul style="list-style-type: none"> <li>WHITE VARGLAS SILICONE RUBBER SLEEVING (12 IN) (304.8 MM) (TPN TU-50034-3)</li> </ul> | B,C         | 1              |
| -650         | TU50229-2     |                     | <ul style="list-style-type: none"> <li>PTFE TUBE (0.25 X 0.125) (35.75 IN) (908 MM) (TPN TU-50229-2)</li> </ul>              |             | 1              |
| -655         | TU310         |                     | <ul style="list-style-type: none"> <li>HEAT SHRINKING TUBING (0.62 DIA) (TPN TU-310)</li> </ul>                              |             | 3              |
| -660         | TE097         |                     | <ul style="list-style-type: none"> <li>TERMINAL, RING, (16-22 GA) (TPN TE-097)</li> </ul>                                    |             | 3              |
| -665         | 11082-1       |                     | DELETED                                                                                                                      |             | DEL            |
| -665A        | 11082-3       |                     | <ul style="list-style-type: none"> <li>ASSEMBLY, HOUSING (SHORT BASE, SUMP DRAIN)</li> </ul>                                 | B           | 1              |
| -665B        | 11082-5       |                     | <ul style="list-style-type: none"> <li>ASSEMBLY, HOUSING (SHORT BASE, REAR DRAIN)</li> </ul>                                 | A           | 1              |
| -665C        | 11082-7       |                     | DELETED                                                                                                                      |             | DEL            |
| -665D        | 11082-9       |                     | DELETED                                                                                                                      |             | DEL            |
| -665E        | 11082-11      |                     | <ul style="list-style-type: none"> <li>ASSEMBLY, HOUSING (FAST BREW, SUMP DRAIN)</li> </ul>                                  | C           | 1              |
| 670          | 11055-1       |                     | <ul style="list-style-type: none"> <li>HOUSING, COFFEE MAKER</li> </ul>                                                      |             | 1              |
| 675          | GR50058       |                     | <ul style="list-style-type: none"> <li>GROMMET (TPN GR-50058)</li> </ul>                                                     |             | 1              |
| 680          | 12432-3       |                     | <ul style="list-style-type: none"> <li>GROMMET</li> </ul>                                                                    |             | 1              |
| 685          | 12432-1       |                     | <ul style="list-style-type: none"> <li>GROMMET</li> </ul>                                                                    |             | 1              |
| 690          | 11088-1       |                     | <ul style="list-style-type: none"> <li>ASSEMBLY, HANDLE</li> </ul>                                                           |             | 1              |
|              |               |                     | ATTACHING PARTS                                                                                                              |             |                |
| 695          | 11128-1       |                     | <ul style="list-style-type: none"> <li>ASSEMBLY, NUT STANDOFF</li> </ul>                                                     |             | 4              |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER  | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                      | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|--------------|---------------------|--------------------------------------------------------------------|-------------|----------------|
| 1            |              |                     |                                                                    |             |                |
| 700          | MS24693C270  |                     | • • SCREW, FLAT HD (10-32UNF X 0.375)<br>* * *                     |             | 4              |
| 705          | 11071-1      |                     | • • ASSEMBLY, PILLOW PACK PLATE<br>ATTACHING PARTS                 |             | 1              |
| 710          | MS24693C49   |                     | • • SCREW, FLAT HD (8-32 X 0.738)<br>* * *                         |             | 6              |
| 715          | 11265-1      |                     | • • REMOVAL HANDLE<br>ATTACHING PARTS                              |             | 1              |
| 720          | MS24693C49   |                     | • • SCREW, FLAT HD (8-32 X 0.738)<br>* * *                         |             | 2              |
| -725         | MS21076-08   |                     | • • NUT, PLATE (8-32)<br>ATTACHING PARTS                           |             | 2              |
| -730         | MS204264D3-4 |                     | • • RIVET SOLID<br>* * *                                           |             | 4              |
| 735          | 11076-1      |                     | • • ANGLE<br>ATTACHING PARTS                                       |             | 1              |
| 740          | MS24693C50   |                     | • • SCREW, FLAT HD (8-32UNC X 0.50)<br>* * *                       |             | 2              |
| 745          | 11067-1      |                     | • • BLOCK, LOCKING PIN ASSEMBLY<br>ATTACHING PARTS                 |             | 1              |
| 750          | MS24693C25   |                     | • • SCREW, FLAT HD (6-32UNC X 0.31)<br>(SUPSD BY ITEM 750A)        |             | 3              |
| -750A        | MS24693C49   |                     | • • SCREW, FLAT HD (8-32UNC X 0.738)<br>(SUPSDS ITEM 750)<br>* * * |             | 3              |
| -755         | 11067-3      |                     | DELETED                                                            |             | DEL            |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                                 | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|-------------|---------------------|-----------------------------------------------------------------------------------------------|-------------|----------------|
| 1            |             |                     |                                                                                               |             |                |
| 760          | 11061-1     |                     | • • SUPPORT, BASE PAN, LH<br>ATTACHING PARTS                                                  |             | 1              |
| 765          | MS24693C25  |                     | • • SCREW, FLAT HD (6-32UNC X 0.31)<br>* * *                                                  |             | 3              |
| 770          | 11063-1     |                     | • • SUPPORT, BASE PAN END<br>ATTACHING PARTS                                                  |             | 1              |
| 775          | MS24693C25  |                     | • • SCREW, FLAT HD (6-32UNC X 0.31)                                                           |             | 2              |
| -775A        | MS24693C25  |                     | DELETED<br>* * *                                                                              |             | DEL            |
| 780          | 11062-1     |                     | • • SUPPORT, BASE PAN, RH<br>ATTACHING PARTS                                                  |             | 1              |
| 785          | MS24693C25  |                     | • • SCREW, FLAT HD (6-32UNC X 0.31)<br>* * *                                                  |             | 3              |
| -790         | 11078-1     |                     | DELETED                                                                                       |             | DEL            |
| 790A         | 11110-1     |                     | • • RAIL, SUPPORT<br>ATTACHING PARTS                                                          |             | 2              |
| 795          | MS24693C49  |                     | • • SCREW, FLAT HD (8-32 X 0.738)<br>* * *                                                    |             | 6              |
| 800          | 11230-3     |                     | • • GROUND, WIRE ASSY (PRE SB 25-30-02-15)<br>(SUPSD BY ITEM 800A)                            |             | 1              |
| -800A        | 11230-1     |                     | • • GROUND, WIRE ASSY<br>(POST SB 25-30-02-15) (SUPSDS ITEM 800)<br>ATTACHING PARTS           |             | 1              |
| -805         | MS51957-27  |                     | • • SCREW, PAN HD (6-32UNC X 0.312)<br>(PRE SB 25-30-02-15)<br>(SUPSD BY ITEMS 805A AND 805B) |             | 2              |
| 805A         | MS51957-27  |                     | • • SCREW, PAN HD (6-32UNC X 0.312)<br>(POST SB 25-30-02-15) (SUPSDS ITEM 805)                |             | 1              |
| 805B         | MS51957-26  |                     | • • SCREW, PAN HD (6-32UNC X 0.25)<br>(POST SB 25-30-02-15) (SUPSDS ITEM 805)                 |             | 1              |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER   | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                                      | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|---------------|---------------------|----------------------------------------------------------------------------------------------------|-------------|----------------|
| 1            |               |                     |                                                                                                    |             |                |
| 810          | AN960D6L      |                     | • • WASHER, FLAT (PRE SB 25-30-02-15)<br>(SUPSD BY ITEM 810A)                                      |             | 2              |
| -810A        | NAS1149DN616H |                     | • • WASHER, FLAT (POST SB 25-30-02-15)<br>(SUPSDS ITEM 810)<br><br>* * *                           |             | 4              |
| 815          | 8876T13       |                     | • • WIRE CLAMP 0.25 IN (0.635 CM)<br>(SUPSD BY ITEM 815A)                                          |             | 1              |
| -815A        | CCS25S8M0     |                     | • • WIRE CLAMP 0.25 IN (0.635 CM)<br>(SUPSDS ITEM 815) (SUPSD BY ITEM 815B)                        |             | 1              |
| -815B        | CL315         |                     | • • CLAMP, NYLON, 0.125 IN (0.3175 CM)<br>(TPN CL-315) (POST SB 25-30-02-15)<br>(SUPSDS ITEM 815A) |             | 1              |
|              |               |                     | ATTACHING PARTS                                                                                    |             |                |
| 820          | MS51957-27    |                     | • • SCREW, PAN HD (6-32UNC X 0.312)<br>(SUPSD BY ITEM 820A)                                        | A,B         | 1              |
| -820A        | MS51957-28    |                     | • • SCREW, PAN HD (6-32UNC X 0.375)<br>(SUPSDS ITEM 820)                                           |             | 1              |
| 825          | AN960C6L      |                     | • • WASHER, FLAT (SUPSD BY ITEM 825A)                                                              |             | 1              |
| -825A        | NAS1149CN616R |                     | • • WASHER, FLAT (NO. 6) (SUPSDS ITEM 825)<br><br>* * *                                            |             | 1              |
| -830         | 11247-3       |                     | DELETED                                                                                            |             | DEL            |
| -830A        | 11378-1       |                     | • • ASSY, BASE PAN, HEATED (SUMP DRAIN)                                                            | B           | 1              |
| -830B        | 11378-3       |                     | • • ASSY, BASE PAN, HEATED (FAST BREW,<br>SUMP DRAIN)                                              | C           | 1              |
| -830C        | 11771-1       |                     | • • ASSY, BASE PAN, HEATER (REAR DRAIN)                                                            | A           | 1              |
| -830D        | 12618-1       |                     | DELETED                                                                                            |             | DEL            |
| -830E        | 12618-3       |                     | DELETED                                                                                            |             | DEL            |
|              |               |                     | ATTACHING PARTS                                                                                    |             |                |
| 835          | MS51957-26    |                     | • • SCREW, PAN HD (6-32UNC X 0.25)                                                                 |             | 6              |
| 840          | 12431-1       |                     | • • WASHER, BASE PAN                                                                               |             | 6              |
| 845          | MS51957-26    |                     | • • SCREW, PAN HD (6-32UNC X 0.25)                                                                 |             | 2              |
| -845A        | MS51957-26    |                     | DELETED                                                                                            |             | DEL            |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER   | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                         | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|---------------|---------------------|---------------------------------------------------------------------------------------|-------------|----------------|
| 1            |               |                     |                                                                                       |             |                |
| 850          | AN960C6L      |                     | • • WASHER, FLAT (SUPSD BY ITEM 850A)                                                 |             | 2              |
| -850A        | NAS1149CN616R |                     | • • WASHER, FLAT (SUPSDS ITEM 850)                                                    |             | 2              |
| -855         | AN960C6L      |                     | DELETED                                                                               |             | DEL            |
|              |               |                     | * * *                                                                                 |             |                |
| 860          | 11376-1       |                     | • • • COVER, HEATER (PRE SB 25-30-02-15)<br>(SUPSD BY ITEM 860A)                      |             | 1              |
| -860A        | 11376-3       |                     | • • • ASSY, COVER (POST SB 25-30-02-15)<br>(SUPSDS ITEM 860)                          |             | 1              |
| 865          | OR50042-044   |                     | • • • SILICON O-RING, 60 SHORE<br>(TPN OR-50042-044)                                  |             | 1              |
| 870          | 11334-1       |                     | • • • HEATER, CAL-ROD (W1)<br>(SUPSD BY ITEM 870B)                                    | A,B         | 1              |
| 870A         | 11844-1       |                     | • • • HEATER, CAL-ROD W/THERMOSTAT<br>(W1) (SUPSD BY ITEM 870B)                       | C           | 1              |
| -870B        | 55-0392-3     |                     | • • • HEATER, 35 WATT (W1)<br>(POST SB 25-30-02-15)<br>(SUPSDS ITEMS 870 AND 870A)    |             | 1              |
| -875         | TU50051       |                     | • • • SLEEVING VARGLAS (TPN TU-50051)                                                 |             | 1              |
| -880         | TU310         |                     | • • • TUBING HEAT SHRINK (TPN TU-310)                                                 |             | 3              |
| -885         | TE097         |                     | • • • TERMINAL, RING, 22-16 GAUGE, NO. 6<br>LUG (TPN TE-097)<br>(POST SB 25-30-02-15) |             | 2              |
| -890         | 11335-1       |                     | • • • HEATER PLATE, CAL-ROD<br>(SUPSD BY ITEM 890B)                                   | A,B         | 1              |
| 890A         | 11811-1       |                     | • • • HEATER PLATE W/SNAP DISK CHANNEL<br>(SUPSD BY ITEM 890B)                        | C           | 1              |
| 890B         | 3575-0549-01  |                     | • • • HEATER, RETAINER<br>(SUPSDS ITEMS 890 AND 890A)<br>(POST SB 25-30-02-15)        |             | 1              |
|              |               |                     | ATTACHING PARTS                                                                       |             |                |
| 895          | MS51957-27    |                     | • • • SCREW, PAN HD (6-32UNC X 0.312)<br>(PRE SB 25-30-02-15) (SUPSD BY ITEM<br>895A) |             | 5              |
| -895A        | MS51957-27    |                     | • • • SCREW, PAN HD (6-32UNC X 0.312)<br>(POST SB 25-30-02-15) (SUPSDS ITEM<br>895)   |             | 6              |
| -900         | MS51957-25    |                     | • • • SCREW, PAN HD                                                                   |             | 1              |

- ITEM NOT ILLUSTRATED




**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER   | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                         | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|---------------|---------------------|---------------------------------------------------------------------------------------|-------------|----------------|
| 1            |               |                     |                                                                                       |             |                |
| 905          | AN960C6L      |                     | • • • WASHER, FLAT (PRE SB 25-30-02-15)<br>(SUPSD BY ITEM 905A)                       |             | 5              |
| -905A        | NAS1149CN616R |                     | • • • WASHER, FLAT (NO. 6)<br>(POST SB 25-30-02-15)<br>(SUPSDS ITEM 905)<br><br>* * * |             | 7              |
| -910         | 11064-1       |                     | DELETED                                                                               |             | DEL            |
| 910A         | 11389-1       |                     | • • • BASE PAN, MACHINE                                                               | B,C         | 1              |
| 910B         | 11784-1       |                     | • • • BASE PAN, MACHINE, REAR DRAIN                                                   | A           | 1              |
| -910C        | 12631-1       |                     | DELETED                                                                               |             | DEL            |
| -910D        | 12618-5       |                     | DELETED                                                                               |             | DEL            |
| -915         | 11377-1       |                     | • • • • BASE PAN, HEATED, MACHINE                                                     | B,C         | 1              |
| -920         | 11770-1       |                     | • • • • BASE PAN, CAL-ROD, MACHINE, REAR<br>DRAIN                                     | A           | 1              |
| -925         | 11242-1       |                     | • • • • DRAIN TUBE                                                                    | A           | RF             |
| 930          | 11243-1       |                     | • • • • SCREEN DRAIN<br><br>ATTACHING PARTS                                           | A           | 1              |
| 935          | SC50265       |                     | • • • • SCREW, 8-32 HEX HD (TPN SC-50265)                                             | A           | 1              |
| -940         | NAS1329A08-75 |                     | • • • • RIVET-NUT<br><br>* * *                                                        | A           | RF             |
| -945         | 12635-1       |                     | DELETED                                                                               |             | DEL            |
| -950         | 12636-1       |                     | DELETED                                                                               |             | DEL            |
| 955          | 11211-3       |                     | • PLACARD                                                                             |             | 1              |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

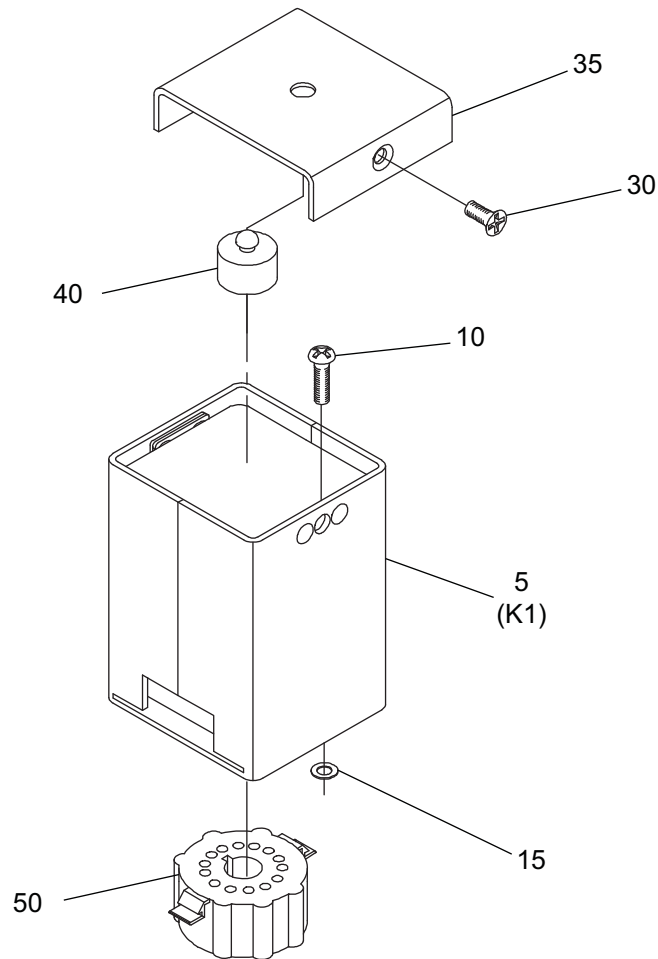

GRAPHIC 25-30-02-99B-014-A01

IPL Figure 1A  
Relay Assembly  
(SUPSD BY IPL FIGURE 1B)


**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

TABLE 25-30-02-950-802-A01

| FIG.<br>ITEM | PART NUMBER | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                 | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|-------------|---------------------|-------------------------------------------------------------------------------|-------------|----------------|
| 1A           |             |                     |                                                                               |             |                |
| -1           | 11267-1     |                     | RELAY ASSEMBLY (K1)<br>(SUPSD BY IPL FIGURE 1B)<br>(SEE IPL FIGURE 1 FOR NHA) |             | RF             |
| 5            | 11154-1     |                     | • HOUSING, RELAY ASSEMBLY<br><br>ATTACHING PARTS                              |             | 1              |
| 10           | MS51957-30  |                     | • SCREW                                                                       |             | 2              |
| 15           | 534-3201    |                     | • WASHER, FLAT<br>(SUPSD BY ITEM 15A)                                         |             | 2              |
| -15A         | 3201        |                     | • WASHER, FLAT (SUPSDS ITEM 15)<br><br>* * *                                  |             | 2              |
| -20          | 11154-3     |                     | • • HOUSING                                                                   |             | 1              |
| -25          | 11154-5     |                     | • • COVER HOUSING ASSEMBLY<br><br>ATTACHING PARTS                             |             | 1              |
| 30           | MS24693C26  |                     | • • SCREW<br><br>* * *                                                        |             | 2              |
| 35           | 11154-7     |                     | • • COVER                                                                     |             | 1              |
| 40           | 1178-3      |                     | • • RUBBER BUMPER                                                             |             | 1              |
| -45          | 11268-1     |                     | • SOCKET ASSEMBLY                                                             |             | 1              |
| 50           | 03093113    |                     | • • SOCKET                                                                    |             | 1              |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

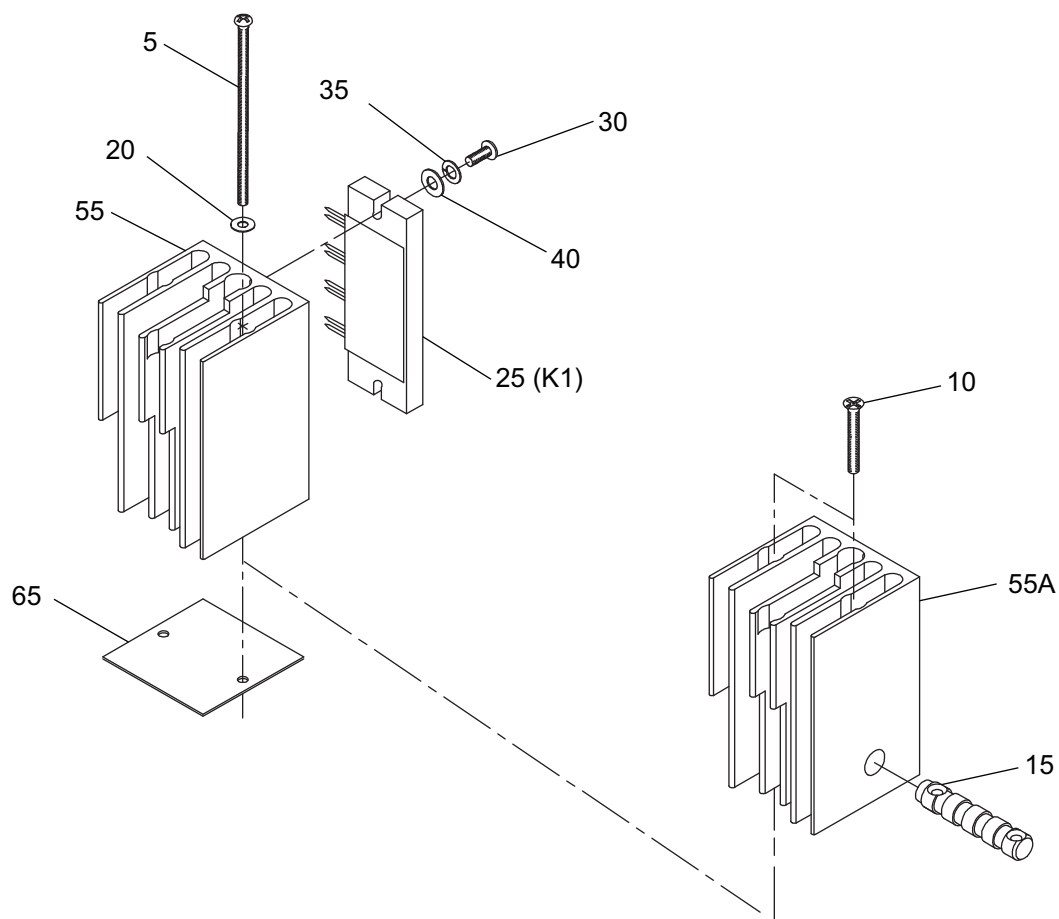

GRAPHIC 25-30-02-99B-015-A01

IPL Figure 1B  
Solid State Relay Assembly  
(SUPSDS IPL FIGURE 1A)


**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

TABLE 25-30-02-950-803-A0

| FIG.<br>ITEM | PART NUMBER   | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                  | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|---------------|---------------------|--------------------------------------------------------------------------------|-------------|----------------|
| 1B           |               |                     |                                                                                |             |                |
| -1           | 12355-3       |                     | KIT, SOLID STATE RELAY<br>(SUPSDS IPL FIGURE 1A)<br>(SEE IPL FIGURE 1 FOR NHA) |             | RF             |
| 5            | NAS1635-06-48 |                     | • SCREW (USED WITH ITEM 55 ONLY)                                               |             | 2              |
| 10           | MS24693C33    |                     | • SCREW, PAN HD (6-32 X 0.75)<br>(USED WITH ITEM 55A ONLY)                     |             | 2              |
| 15           | 12321-5       |                     | • HOLD DOWN BAR<br>(USED WITH ITEM 55A ONLY)                                   |             | 1              |
| 20           | AN960-6       |                     | • WASHER, FLAT (USED WITH ITEM 55 ONLY)                                        |             | 2              |
| 25           | 12424-1       |                     | • SOLID STATE RELAY ASSEMBLY (K1)                                              |             | 1              |
|              |               |                     | ATTACHING PARTS                                                                |             |                |
| 30           | MS51957-28    |                     | • SCREW, PAN HD (6-32 X 0.375)                                                 |             | 2              |
| 35           | MS35338-136   |                     | • WASHER, SELF LOCKING                                                         |             | 2              |
| 40           | AN960-6       |                     | • WASHER, FLAT (SUPSD BY ITEM 40A)                                             |             | 2              |
| -40A         | NAS1149CN632R |                     | • WASHER, FLAT (SUPSDS ITEM 40)                                                |             | 2              |
|              |               |                     | * * *                                                                          |             |                |
| -45          | 12322-1       |                     | • • SOLID STATE RELAY                                                          |             | 1              |
| -50          | 34105         |                     | • • TERMINAL, RING<br>(SUPSD BY ITEM 50A)                                      |             | 3              |
| -50A         | TE097         |                     | • • TERMINAL, RING (TPN TE-097)<br>(SUPSDS ITEM 50)                            |             | 3              |
| 55           | 12321-1       |                     | • HEAT SINK S.S. RELAY ASSEMBLY<br>(SUPSD BY ITEM 55A) (BEFORE 08/29/03)       |             | 1              |
| 55A          | 12321-1       |                     | • HEAT SINK S.S. RELAY ASSEMBLY<br>(SUPSDS ITEM 55) (AFTER 08/29/03)           |             | 1              |
| -60          | 12693-1       |                     | • INSULATOR, S.S. RELAY                                                        |             | 1              |
| 65           | 12349-1       |                     | • COVER PLATE RELAY<br>(USED WITH ITEM 55 ONLY)                                |             | 1              |
| -70          | 317-1616-786  |                     | • PIN (SUPSD BY ITEM 70A)                                                      |             | 2              |
| -70A         | CO6505-03     |                     | • CONNECTOR - 7 PIN<br>(TPN CO-6505-03) (SUPSDS ITEM 70)                       |             | 2              |
| -75          | 34105         |                     | • RING TERMINAL<br>(SUPSD BY ITEM 75A)                                         |             | 3              |
| -75A         | TE097         |                     | • TERMINAL, RING (TPN TE-097)<br>(SUPSDS ITEM 75)                              |             | 3              |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

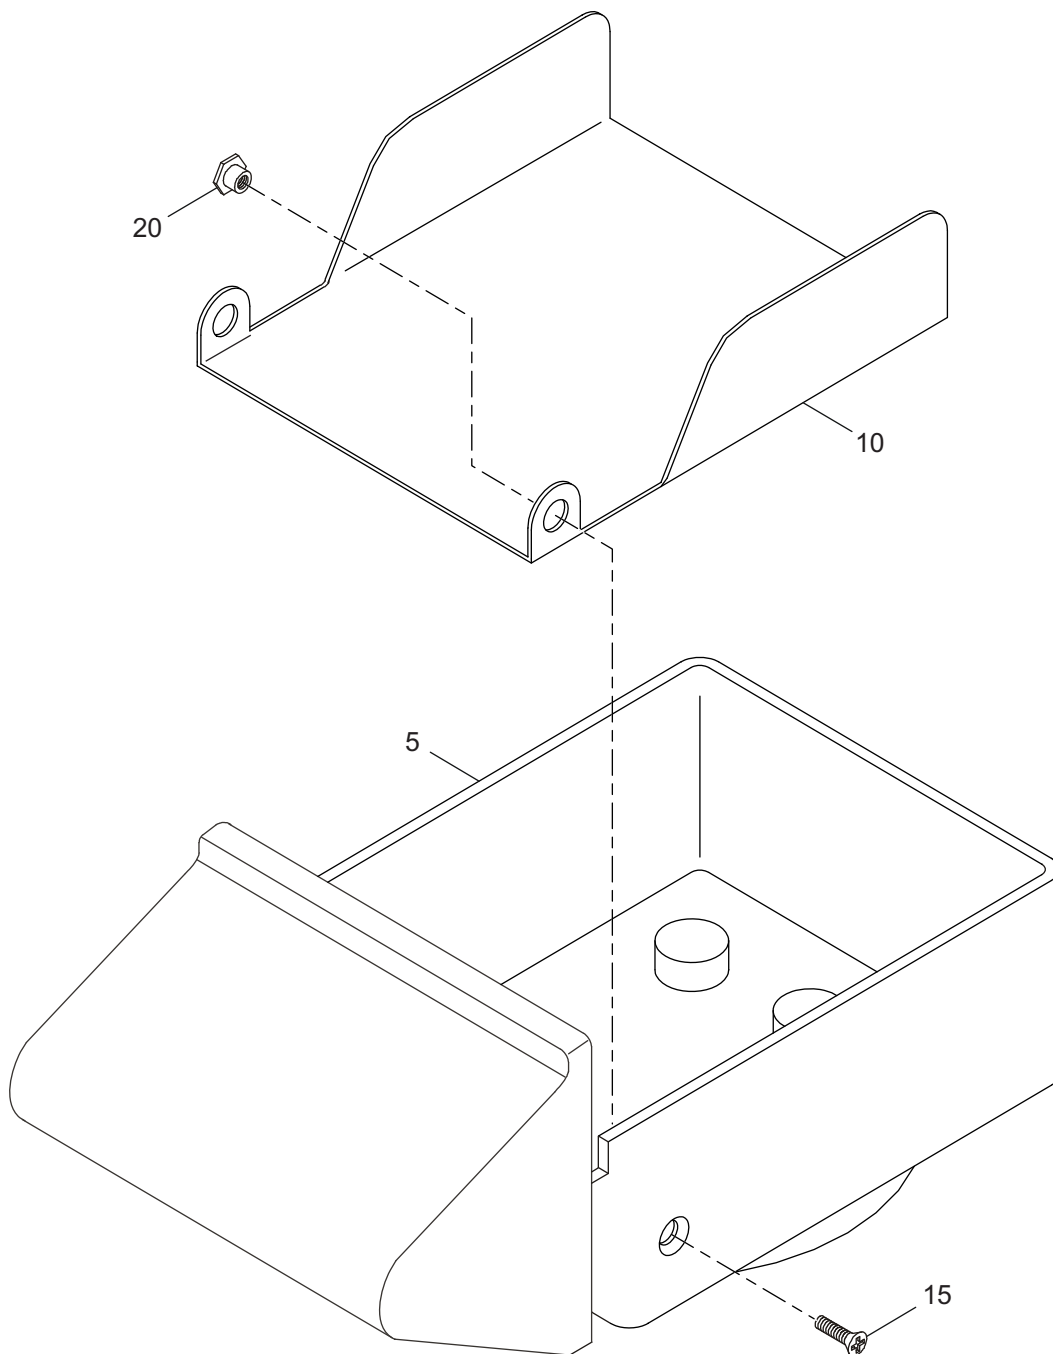

GRAPHIC 25-30-02-99B-016-A01

IPL Figure 2  
Brew Cup Assembly


**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

TABLE 25-30-02-950-804-A01

| FIG.<br>ITEM | PART NUMBER | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                      | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|-------------|---------------------|----------------------------------------------------|-------------|----------------|
| 2            |             |                     |                                                    |             |                |
| -1           | 11120-1     |                     | ASSEMBLY, BREW CUP<br>(SEE IPL FIGURE 1 FOR NHA)   |             | RF             |
| 5            | 12310-1     |                     | • CUP, BREW                                        |             | 1              |
| 10           | 11119-1     |                     | • SCREEN, BREW CUP                                 |             | 1              |
|              |             |                     | ATTACHING PARTS                                    |             |                |
| 15           | SC50268-26  |                     | • SCREW, NYLOK (6-32 X 0.375)<br>(TPN SC-50268-26) |             | 2              |
| 20           | 11124-1     |                     | • STANDOFF, BREW CUP                               |             | 2              |
|              |             |                     | * * *                                              |             |                |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

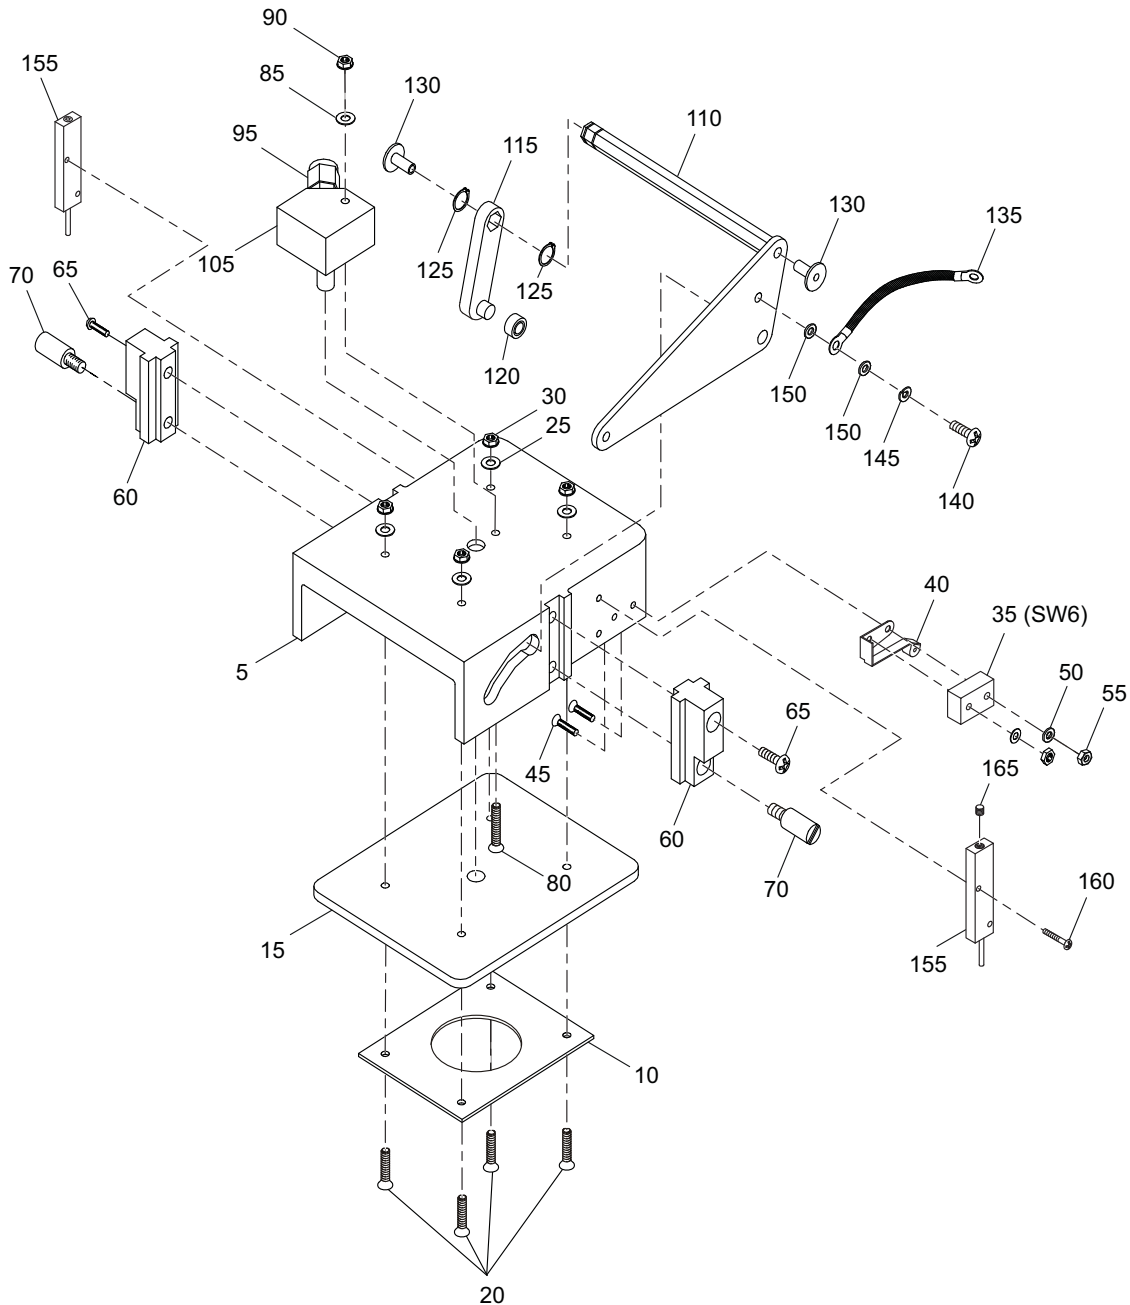

GRAPHIC 25-30-02-99B-017-A01

IPL Figure 3  
 Brew Head Assembly  
 (Pre SB 25-30-02-9 & SB 25-30-02-11)



**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

TABLE 25-30-02-950-805-A01

| FIG.<br>ITEM | PART NUMBER | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                             | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|-------------|---------------------|-------------------------------------------------------------------------------------------|-------------|----------------|
| 3            |             |                     |                                                                                           |             |                |
| -1           | 11083-3     |                     | ASSEMBLY, BREW HEAD<br>(PRE SB 25-30-02-9 & SB 25-30-02-11)<br>(SEE IPL FIGURE 1 FOR NHA) |             | RF             |
| 5            | 11070-1     |                     | • BREW HEAD                                                                               |             | 1              |
| 10           | 11074-1     |                     | • PLATE, RETAINER                                                                         |             | 1              |
| 15           | 11073-1     |                     | • GASKET                                                                                  |             | 1              |
|              |             |                     | ATTACHING PARTS                                                                           |             |                |
| 20           | MS24693C28  |                     | • SCREW, FLAT HD (6-32 X 0.50)                                                            |             | 4              |
| 25           | AN960C6L    |                     | • WASHER, FLAT                                                                            |             | 4              |
| 30           | MS21042-06  |                     | • NUT, SELF-LOCKING, HEX (6-32)                                                           |             | 4              |
|              |             |                     | * * *                                                                                     |             |                |
| 35           | 11245-1     |                     | • LIMIT SWITCH (SW6)                                                                      |             | 1              |
| 40           | 11321-1     |                     | • AUXILIARY ACTUATOR                                                                      |             | 1              |
|              |             |                     | ATTACHING PARTS                                                                           |             |                |
| 45           | MS51959-8   |                     | • SCREW                                                                                   |             | 2              |
| 50           | MS35333-69  |                     | • WASHER, STAR                                                                            |             | 2              |
| 55           | MS35649-224 |                     | • NUT (2-56)                                                                              |             | 2              |
|              |             |                     | * * *                                                                                     |             |                |
| 60           | 11072-3     |                     | • SLIDE                                                                                   |             | 2              |
|              |             |                     | ATTACHING PARTS                                                                           |             |                |
| 65           | MS51957-43  |                     | • SCREW, PAN HD (8-32 X 0.375)                                                            |             | 2              |
| 70           | 11284-1     |                     | • SCREW ROD GUIDE                                                                         |             | 2              |
|              |             |                     | * * *                                                                                     |             |                |
| -75          | 11069-1     |                     | • ASSEMBLY, WATER INLET                                                                   |             | 1              |
|              |             |                     | ATTACHING PARTS                                                                           |             |                |
| 80           | MS24693C33  |                     | • SCREW, FLAT HD (6-32 X 1.125)                                                           |             | 1              |
| 85           | AN960C6L    |                     | • WASHER, FLAT                                                                            |             | 1              |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER  | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                       | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|--------------|---------------------|---------------------------------------------------------------------|-------------|----------------|
| 3            |              |                     |                                                                     |             |                |
| 90           | MS21042-06   |                     | • NUT, SELF-LOCKING, HEX (6-32)<br><br>* * *                        |             | 1              |
| 95           | PF50261      |                     | • • CONNECTOR, MALE (TPN PF-50261)                                  |             | 1              |
| -96          | PF50254      |                     | • • • FERRULE SET (TPN PF-50254)                                    |             | 1              |
| -97          | PF50262      |                     | • • • NUT (TPN PF-50262)                                            |             | 1              |
| -100         | 11069-3      |                     | • • STEM                                                            |             | 1              |
| 105          | 11068-1      |                     | • • FITTING WATER INLET                                             |             | 1              |
| 110          | 11099-3      |                     | • ASSEMBLY, BREW HEAD HANDLE, RH                                    |             | 1              |
| 115          | 11099-1      |                     | • ASSEMBLY, BREW HEAD HANDLE, LH<br><br>ATTACHING PARTS             |             | 1              |
| 120          | 11100-11     |                     | • BUSHING, ROLLER                                                   |             | 2              |
| 125          | MS16624-4031 |                     | • RING, RETAINING - EXTERNAL                                        |             | 2              |
| 130          | 11100-13     |                     | • BUSHING, SHAFT<br>(REFERENCE IPL FIGURE 1, ITEM 170)<br><br>* * * |             | RF             |
| 135          | GS14-010-03  |                     | • GROUND WIRE ASSEMBLY<br>(SUPSD BY ITEM 135A)                      |             | 1              |
| -135A        | 11785-1      |                     | • GROUND STRAP (SUPSDS ITEM 135)<br><br>ATTACHING PARTS             |             | 1              |
| 140          | NAS1802-08-4 |                     | • BOLT (8-32 X 0.1875)                                              |             | 1              |
| 145          | MS35338-42   |                     | • WASHER, SELF-LOCKING (NO. 8)                                      |             | 1              |
| 150          | AN960C8L     |                     | • WASHER (NO. 8)<br><br>* * *                                       |             | 2              |
| 155          | 11134-1      |                     | • PLUNGER ASSEMBLY<br><br>ATTACHING PARTS                           |             | 2              |
| 160          | MS24693C4    |                     | • SCREW, FLAT HD (4-40 X 0.375)<br><br>* * *                        |             | 4              |


- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                               | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|-------------|---------------------|-------------------------------------------------------------|-------------|----------------|
| 3            |             |                     |                                                             |             |                |
| 165          | AN565D8H3   |                     | • • SCREW, SET (8-32)                                       |             | 2              |
| -170         | 11135-1     |                     | • • SPRING, PLUNGER                                         |             | 2              |
| -175         | 11136-1     |                     | • • PLUNGER                                                 |             | 2              |
| -180         | 11133-1     |                     | • • HOUSING, PLUNGER                                        |             | 2              |
| -185         | 11281-1     |                     | • ROD, GUIDE RETAINER<br>(REFERENCE IPL FIGURE 1, ITEM 100) |             | RF             |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

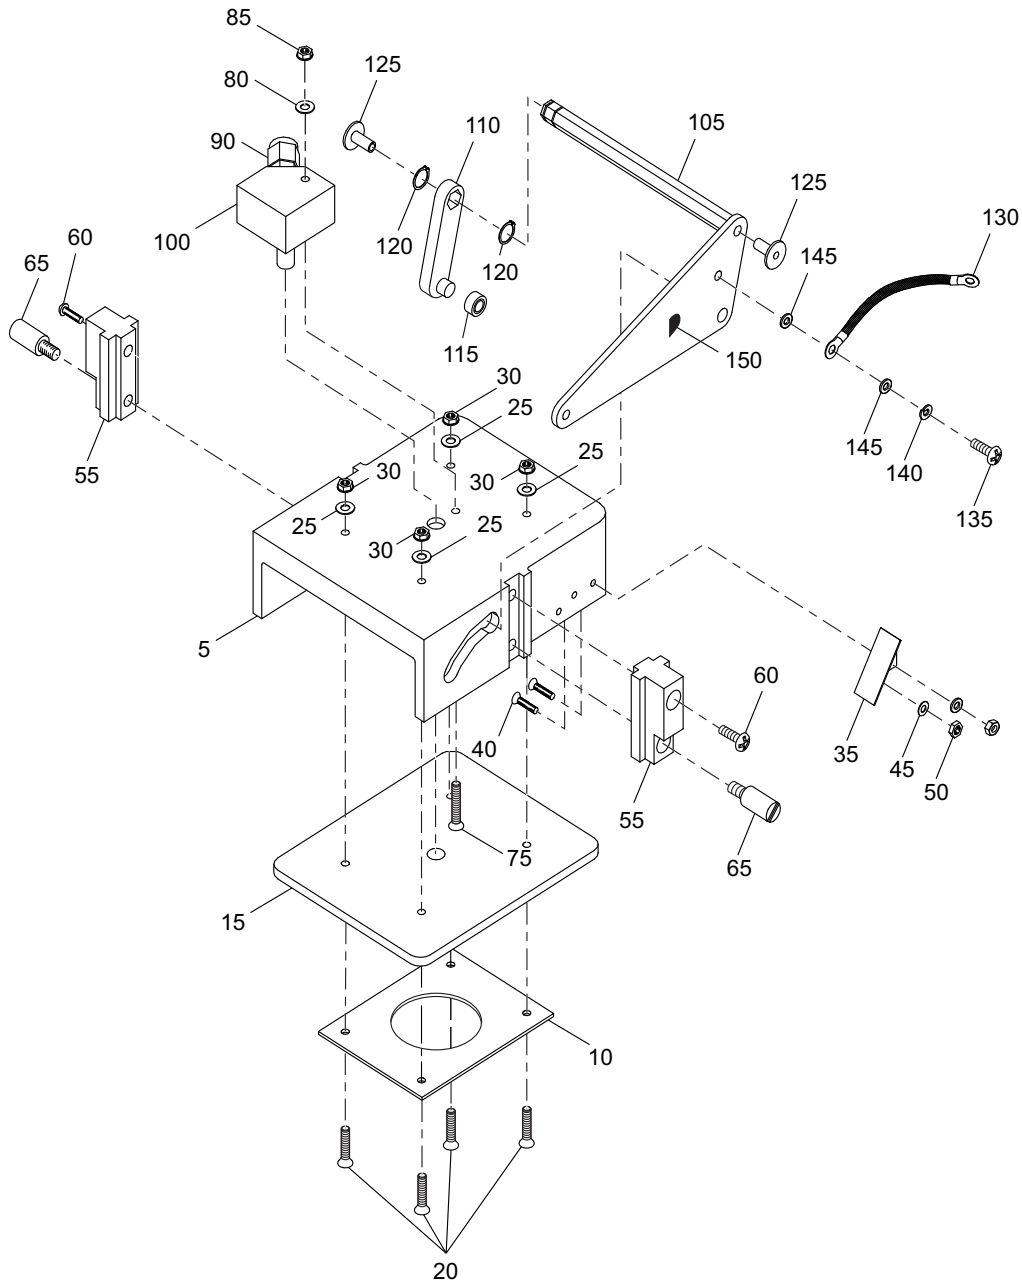

GRAPHIC 25-30-02-99B-018-A01

IPL Figure 3A  
Brew Head Assembly  
(Post SB 25-30-02-9 & SB 25-30-02-11)

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

TABLE 25-30-02-950-806-A01

| FIG.<br>ITEM | PART NUMBER   | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                                    | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|---------------|---------------------|--------------------------------------------------------------------------------------------------|-------------|----------------|
| 3A           |               |                     |                                                                                                  |             |                |
| -1           | 12254-3       |                     | ASSEMBLY, BREW HEAD, TALL<br>(POST SB 25-30-02-9 & SB 25-30-02-11)<br>(SEE IPL FIGURE 1 FOR NHA) |             | RF             |
| 5            | 11070-1       |                     | • BREW HEAD                                                                                      |             | 1              |
| 10           | 11074-1       |                     | • PLATE, RETAINER                                                                                |             | 1              |
| 15           | 11073-1       |                     | • GASKET                                                                                         |             | 1              |
|              |               |                     | ATTACHING PARTS                                                                                  |             |                |
| 20           | MS24693C28    |                     | • SCREW, FLAT HD (6-32 X 0.50)                                                                   |             | 4              |
| 25           | AN960C6L      |                     | • WASHER, FLAT (SUPSD BY ITEM 25A)                                                               |             | 4              |
| -25A         | NAS1149CN616R |                     | • WASHER, FLAT (NO. 6)<br>(SUPSDS ITEM 25)                                                       |             | 4              |
| 30           | MS21042-06    |                     | • NUT, SELF-LOCKING, HEX (6-32)                                                                  |             | 4              |
|              |               |                     | * * *                                                                                            |             |                |
| 35           | 12252-1       |                     | • ACTUATOR ANGLE                                                                                 |             | 1              |
|              |               |                     | ATTACHING PARTS                                                                                  |             |                |
| 40           | MS51959-3     |                     | • SCREW, FLAT HD (2-56 X 0.25)                                                                   |             | 2              |
| 45           | MS35333-69    |                     | • WASHER, STAR                                                                                   |             | 2              |
| 50           | MS35649-224   |                     | • NUT (2-56)                                                                                     |             | 2              |
|              |               |                     | * * *                                                                                            |             |                |
| 55           | 11072-3       |                     | • SLIDE                                                                                          |             | 2              |
|              |               |                     | ATTACHING PARTS                                                                                  |             |                |
| 60           | MS51957-43    |                     | • SCREW, PAN HD (8-32 X 0.375)                                                                   |             | 2              |
| 65           | 11284-1       |                     | • SCREW, ROD GUIDE                                                                               |             | 2              |
|              |               |                     | * * *                                                                                            |             |                |
| -70          | 11069-1       |                     | • ASSEMBLY, WATER INLET                                                                          |             | 1              |
|              |               |                     | ATTACHING PARTS                                                                                  |             |                |
| 75           | MS24693C33    |                     | • SCREW, FLAT HD (6-32 X 1.125)                                                                  |             | 1              |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER   | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                       | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|---------------|---------------------|---------------------------------------------------------------------|-------------|----------------|
| 3A           |               |                     |                                                                     |             |                |
| 80           | AN960C6L      |                     | • WASHER, FLAT (NO. 6)<br>(SUPSD BY ITEM 80A)                       |             | 1              |
| -80A         | NAS1149CN616R |                     | • WASHER, FLAT (NO. 6)<br>(SUPSDS ITEM 80)                          |             | 1              |
| 85           | MS21042-06    |                     | • NUT, SELF-LOCKING, HEX (6-32)<br><br>* * *                        |             | 1              |
| 90           | PF50261       |                     | • • CONNECTOR, MALE (TPN PF-50261)                                  |             | 1              |
| -91          | PF50254       |                     | • • • FERRULE SET (TPN PF-50254)                                    |             | 1              |
| -92          | PF50262       |                     | • • • NUT (TPN PF-50262)                                            |             | 1              |
| -95          | 11069-3       |                     | • • STEM                                                            |             | 1              |
| 100          | 11068-1       |                     | • • FITTING WATER INLET                                             |             | 1              |
| 105          | 11099-3       |                     | • ASSEMBLY, BREW HEAD HANDLE, RH                                    |             | 1              |
| 110          | 11099-1       |                     | • ASSEMBLY, BREW HEAD HANDLE, LH<br><br>ATTACHING PARTS             |             | 1              |
| 115          | 11100-11      |                     | • BUSHING, ROLLER                                                   |             | 2              |
| 120          | MS16624-4031  |                     | • RING, RETAINING - EXTERNAL                                        |             | 2              |
| 125          | 11100-13      |                     | • BUSHING, SHAFT<br>(REFERENCE IPL FIGURE 1, ITEM 170)<br><br>* * * |             | RF             |
| 130          | GS14-010-03   |                     | • ASSEMBLY, GROUND WIRE<br>(SUPSD BY ITEM 130A)                     |             | 1              |
| -130A        | 11785-1       |                     | • GROUND STRAP (SUPSDS ITEM 130)<br><br>ATTACHING PARTS             |             | 1              |
| 135          | NAS1802-08-4  |                     | • BOLT (8-32 X 0.18)                                                |             | 1              |
| 140          | MS35338-42    |                     | • WASHER, SELF-LOCKING (NO. 8)                                      |             | 1              |
| 145          | AN960C8L      |                     | • WASHER, FLAT (SUPSD BY ITEM 145A)                                 |             | 2              |
| -145A        | NAS1149CN816R |                     | • WASHER, FLAT (NO. 8)<br>(SUPSDS ITEM 145)<br><br>* * *            |             | 2              |
| 150          | 430531        |                     | • DECAL, DIE-CUT                                                    |             | 2              |


- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER  | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                                                                                                  | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|--------------|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|----------------|
| 3A           |              |                     |                                                                                                                                                                |             |                |
| -155         | 11172-5      |                     | <ul style="list-style-type: none"> <li>• FLOW RESTRICTOR<br/>(POST SB 25-30-02-13) (11225-31 ONLY)<br/>(REFERENCE IPL FIGURE 1, ITEM 185)</li> </ul>           |             | RF             |
| -160         | 2-005E540-80 |                     | <ul style="list-style-type: none"> <li>• O-RING (SUPSD BY ITEM 160A)<br/>(REFERENCE IPL FIGURE 1, ITEM 180)</li> </ul>                                         |             | RF             |
| -160A        | E540-2-005   |                     | <ul style="list-style-type: none"> <li>• O-RING (SUPSDS ITEM 160)<br/>(POST SB 25-30-02-13) (11225-31 ONLY)<br/>(REFERENCE IPL FIGURE 1, ITEM 180A)</li> </ul> |             | RF             |
| -165         | 11281-1      |                     | <ul style="list-style-type: none"> <li>• ROD, GUIDE RETAINER<br/>(REFERENCE IPL FIGURE 1, ITEM 100)</li> </ul>                                                 |             | RF             |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

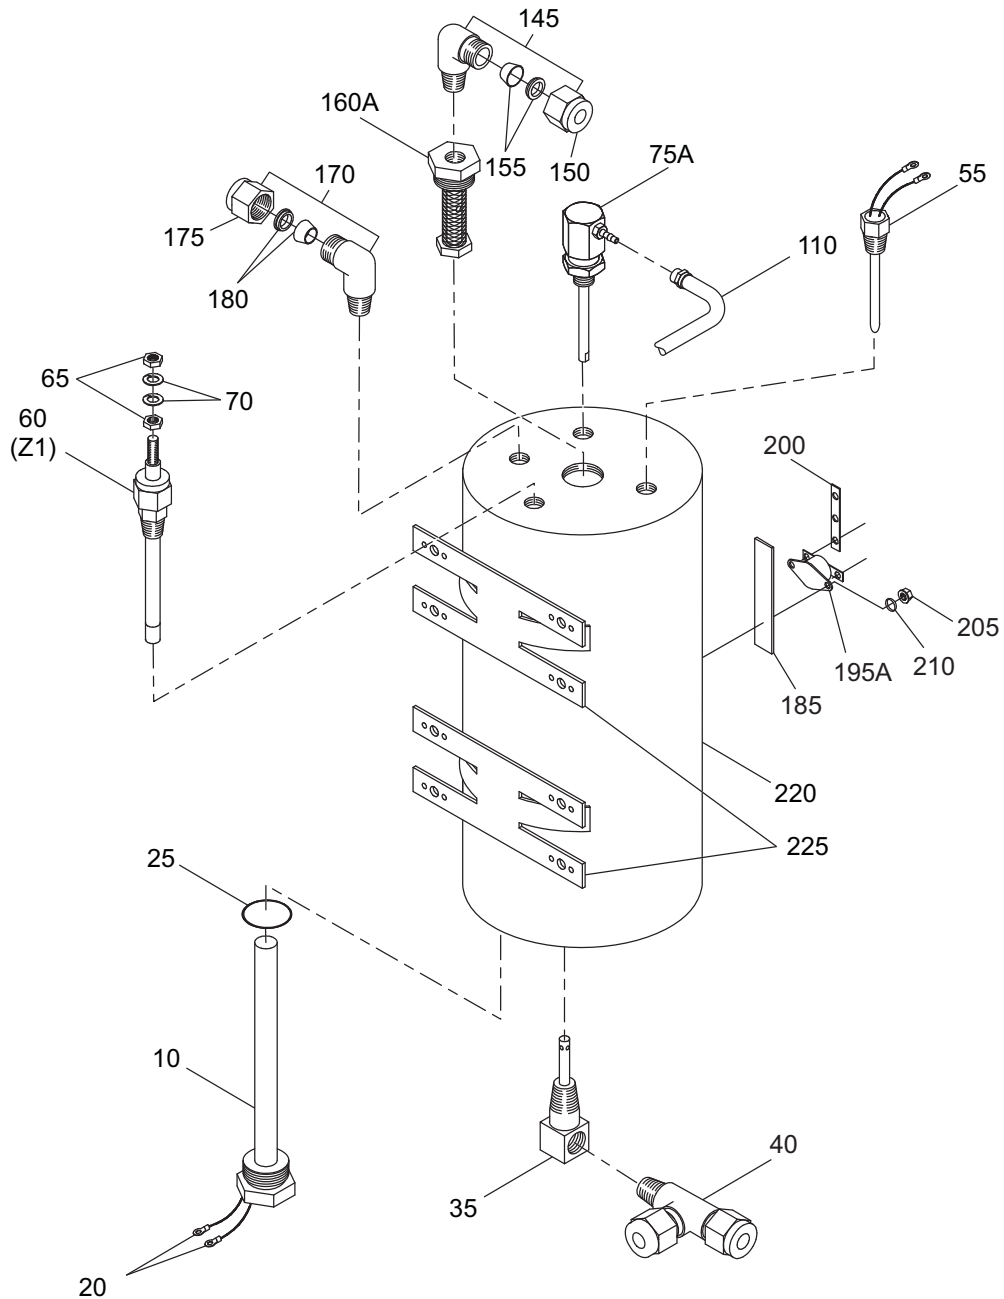

GRAPHIC 25-30-02-99B-019-A01

IPL Figure 4  
 Tank Assembly



**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

TABLE 25-30-02-950-807-A01

| FIG.<br>ITEM | PART NUMBER   | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                     | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|---------------|---------------------|-----------------------------------------------------------------------------------|-------------|----------------|
| 4            |               |                     |                                                                                   |             |                |
| -1           | 11051-1       |                     | TANK ASSEMBLY<br>(SEE IPL FIGURE 1 FOR NHA)                                       | A           | RF             |
| -1A          | 11051-15      |                     | TANK ASSEMBLY<br>(SEE IPL FIGURE 1 FOR NHA)                                       | B           | RF             |
| 10           | 11056-1       |                     | • HEATER, IMMERSION (H1, H2, H3)                                                  |             | 3              |
| -15          | TU310         |                     | • HEAT, SHRINK (TPN TU-310)                                                       |             | 6              |
| 20           | TE097         |                     | • TERMINAL, RING (TPN TE-097)                                                     |             | 6              |
| 25           | 2-016E0540-80 |                     | • O-RING (SUPSD BY ITEM 25A)                                                      |             | 3              |
| -25A         | OR50041-016   |                     | • O-RING, EPDM, BLACK<br>(TPN OR-50041-016) (SUPSDS ITEM 25)                      |             | 3              |
| -30          | 11291-1       |                     | • ASSEMBLY, FITTING FILLER TUBE<br>(PER SB 25-30-02-13)                           | A           | 1              |
| 35           | 11291-3       |                     | • ASSEMBLY, FITTING FILLER TUBE<br>(PER SB 25-30-02-13)                           | B           | 1              |
| 40           | PF50258       |                     | • • MALE BRANCH TEE (TPN PF-50258)                                                |             | 1              |
| -45          | 11291-7       |                     | • • FILLER TUBE SUBASSY                                                           | A           | 1              |
| -50          | 11291-9       |                     | • • FILLER TUBE SUBASSY                                                           | B           | 1              |
| 55           | 11057-1       |                     | • PROBE, TEMPERATURE (RTD1)                                                       |             | 1              |
| 60           | 11091-1       |                     | • PROBE, TANK LEVEL (Z1)                                                          |             | 1              |
|              |               |                     | ATTACHING PARTS                                                                   |             |                |
| 65           | NAS671C6      |                     | • NUT, HEX (6-32)                                                                 |             | 2              |
| 70           | MS35338-136   |                     | • WASHER, LOCKING                                                                 |             | 2              |
|              |               |                     | * * *                                                                             |             |                |
| -75          | 11205-1       |                     | • PRESSURE RELIEF ASSEMBLY<br>(SUPSD BY ITEM 75A)                                 |             | 1              |
| 75A          | VA50102       |                     | • VALVE, PRESSURE RELIEF, 90 TO 100 PSIG<br>CRACK (TPN VA-50102) (SUPSDS ITEM 75) |             | 1              |
| -80          | SS402-1       |                     | • • NUT (USE WITH ITEM 75)                                                        |             | 1              |
| -85          | SS400SET      |                     | • • FERRULE SET (USE WITH ITEM 75)                                                |             | 1              |
| -90          | SS400-2-4     |                     | • • ELBOW (USE WITH ITEM 75)                                                      |             | 1              |
| -95          | 532T12MP95    |                     | • • PRESSURE RELIEF VALVE, 95 PSIG<br>(USE WITH ITEM 75)                          |             | 1              |
| -100         | 11205-5       |                     | • • STREET ELBOW (USE WITH ITEM 75)                                               |             | 1              |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER   | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                   | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|---------------|---------------------|-----------------------------------------------------------------|-------------|----------------|
| 4            |               |                     |                                                                 |             |                |
| -105         | 11205-3       |                     | • • STEM (USE WITH ITEM 75)                                     |             | 1              |
| 110          | 12406-1       |                     | • ASSEMBLY, PRESSURE RELIEF HOSE<br>(USE WITH ITEM 75A)         |             | 1              |
| -115         | PF50262       |                     | • • NUT (TPN PF-50262)                                          |             | 1              |
| -120         | PF50254       |                     | • • FERRULE SET (TPN PF-50254)                                  |             | 1              |
| -125         | CL50010       |                     | • • CLAMP (TPN CL-50010)                                        |             | 1              |
| -130         | 12430-1       |                     | • • FITTING, BARBED                                             |             | 1              |
| -135         | 62-0136-9     |                     | • • GASKET                                                      |             | 1              |
| -140         | TU50020       |                     | • • TUBE (TPN TU-50020)                                         |             | AR             |
| 145          | PF50256       |                     | • ELBOW, MALE (TPN PF-50256)                                    |             | 1              |
| 150          | PF50262       |                     | • • NUT (TPN PF-50262)                                          |             | 1              |
| 155          | PF50254       |                     | • • FERRULE SET (TPN PF-50254)                                  |             | 1              |
| -160         | 11094-1       |                     | • FILTER OUTLET (SUPSD BY ITEM 160A)                            |             | 1              |
| 160A         | 62-0020-5     |                     | • FILTER ASSEMBLY (SUPSDS ITEM 160)                             |             | 1              |
| -165         | 2-016E0540-80 |                     | DELETED                                                         |             | DEL            |
| 170          | PF50256       |                     | • ELBOW (TPN PF-50256)                                          |             | 1              |
| 175          | PF50262       |                     | • • NUT (TPN PF-50262)                                          |             | 1              |
| 180          | PF50254       |                     | • • FERRULE SET (TPN PF-50254)                                  |             | 1              |
| 185          | 11258-1       |                     | • HEAT SINK                                                     |             | 1              |
| -190         | MS21042-06    |                     | • NUT, SELF-LOCKING (6-32)                                      |             | 6              |
| -195         | OA250M        |                     | • SNAP DISK (S1 TO S3)<br>(SUPSD BY ITEM 195A)                  |             | 3              |
| 195A         | TS50075       |                     | • THERMOSWITCH (S1, S2, S3)<br>(TPN TS-50075) (SUPSDS ITEM 195) |             | 3              |
| 200          | 11298-1       |                     | • BUSS BAR (BB1)                                                |             | 1              |
|              |               |                     | ATTACHING PARTS                                                 |             |                |
| 205          | MS21042-04    |                     | • NUT, SELF-LOCKING (4-40)                                      |             | 6              |
| 210          | AN960C4L      |                     | • WASHER, FLAT (SUPSD BY ITEM 210A)                             |             | 6              |
| -210A        | NAS1149CN416R |                     | • WASHER NO. 4 (SUPSDS ITEM 210)                                |             | 12             |
| -215         | MS51957-13    |                     | • SCREW, PAN HD (4-40 X 0.25)                                   |             | 6              |
|              |               |                     | * * *                                                           |             |                |


- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7     | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|-------------|---------------------|-----------------------------------|-------------|----------------|
| 4            |             |                     |                                   |             |                |
| 220          | 11051-9     |                     | • TANK SUBASSY                    |             | 1              |
| 225          | 11053-1     |                     | • • ATTACH MOUNTING, BRACKET TANK |             | 2              |
| -230         | 11052-1     |                     | • • MOUNTING, BRACKET ASSEMBLY    |             | 1              |
| -235         | 11051-13    |                     | • • TUBE (4.00 OD X 0.065 WALL)   |             | 1              |
| -240         | 11051-5     |                     | • • END CAP, UPPER                |             | 1              |
| -245         | 11051-7     |                     | • • END CAP, LOWER                |             | 1              |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

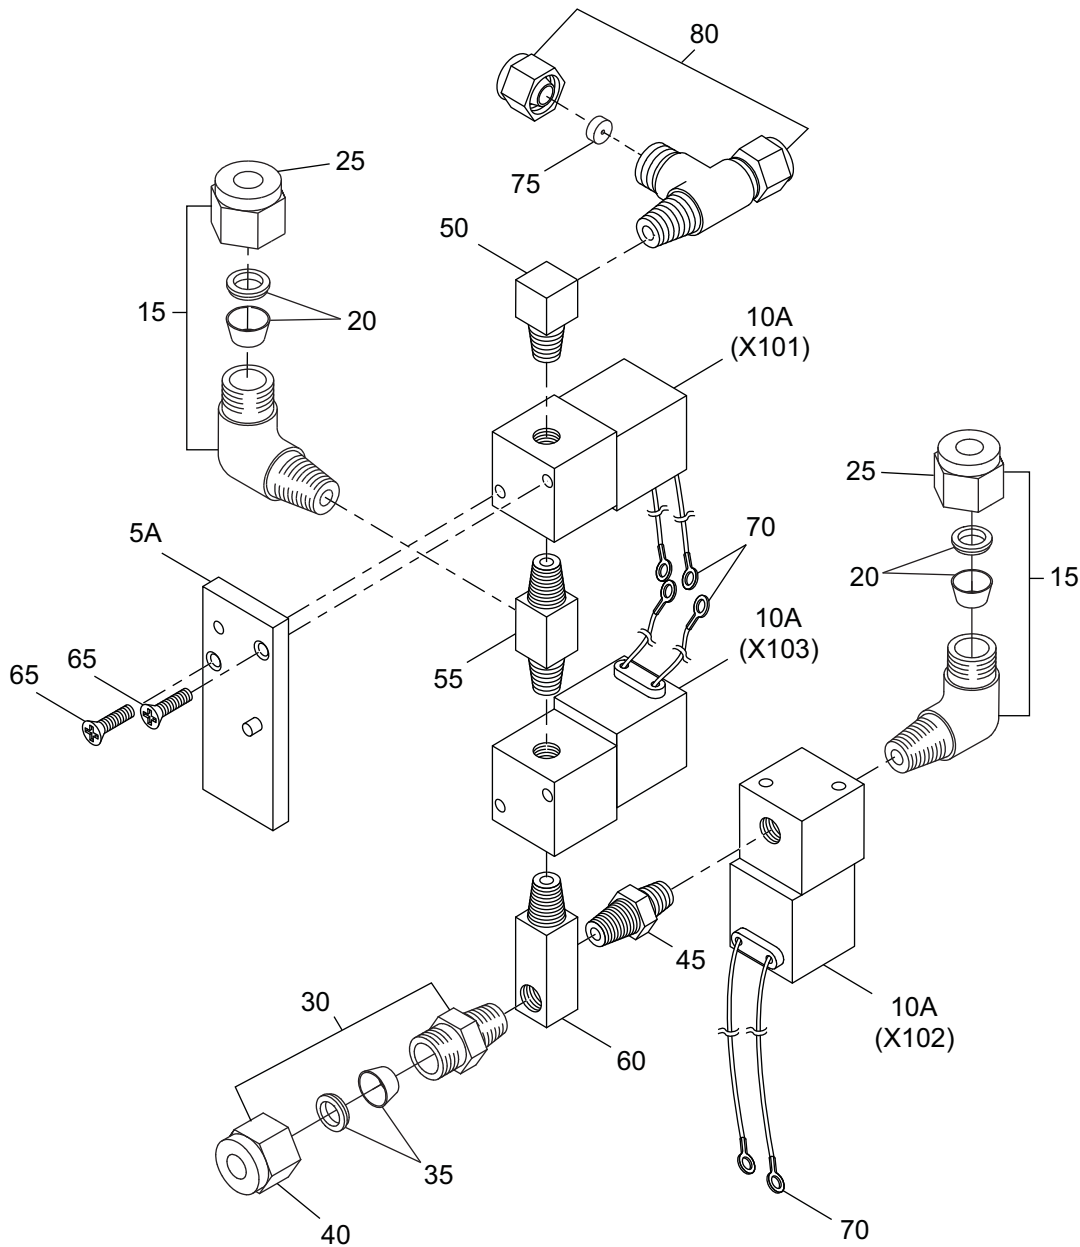

GRAPHIC 25-30-02-99B-020-A01

IPL Figure 5  
Flow Control Assembly

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

TABLE 25-30-02-950-808-A01

| FIG.<br>ITEM | PART NUMBER  | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                              | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|--------------|---------------------|----------------------------------------------------------------------------|-------------|----------------|
| 5            |              |                     |                                                                            |             |                |
| -1           | 11122-1      |                     | ASSEMBLY, FLOW CONTROL<br>(SEE IPL FIGURE 1 FOR NHA)<br>(SUPSD BY ITEM 1A) |             | RF             |
| -1A          | 3520-1054-01 |                     | ASSEMBLY, FLOW CONTROL<br>(SEE IPL FIGURE 1 FOR NHA)<br>(SUPSDS ITEM 1)    |             | RF             |
| -5           | 11107-1      |                     | • PLATE ASSEMBLY, SOLENOID MOUNTING<br>(SUPSD BY ITEM 5A)                  |             | 1              |
| 5A           | 11107-5      |                     | • PLATE ASSEMBLY, SOLENOID MOUNTING<br>(SUPSDS ITEM 5) (SUPSD BY ITEM 5B)  |             | 1              |
| -5B          | 3520-1038-01 |                     | • PLATE ASSEMBLY, ADAPTER<br>(SUPSDS ITEM 5A)                              |             | 1              |
| -10          | VA50104      |                     | • VALVE, SOLENOID (X101 THRU X103)<br>(TPN VA-50104) (SUPSD BY ITEM 10A)   |             | 3              |
| 10A          | 3520-1071-01 |                     | • VALVE ASSEMBLY, 2WAY (X101 THRU<br>X103) (SUPSDS ITEM 10)                |             | 3              |
| -13          | VA50129      |                     | • • VALVE, 2 WAY SOLENOID<br>(TPN VA-50129)                                |             | 1              |
| 15           | PF50256      |                     | • ELBOW, MALE, 90° (0.25 OD X 0.125)<br>(TPN PF-50256)                     |             | 2              |
| 20           | PF50254      |                     | • • FERRULE SET (TPN PF-50254)                                             |             | 1              |
| 25           | PF50262      |                     | • • NUT (TPN PF-50262)                                                     |             | 1              |
| 30           | PF50261      |                     | • CONNECTOR, MALE (0.25 OD X 0.125)<br>(TPN PF-50261)                      |             | 1              |
| 35           | PF50254      |                     | • • FERRULE SET (TPN PF-50254)                                             |             | 1              |
| 40           | PF50262      |                     | • • NUT (TPN PF-50262)                                                     |             | 1              |
| 45           | PF50264      |                     | • NIPPLE, HEX (TPN PF-50264)                                               |             | 1              |
| 50           | 11176-1      |                     | • ELBOW, STREET                                                            |             | 1              |
| 55           | 11102-1      |                     | • TEE                                                                      |             | 1              |
| 60           | 11111-1      |                     | • FITTING, WATER                                                           |             | 1              |
| 65           | MS24693C50   |                     | • SCREW, FLAT HD (8-32 X 0.50)<br>(SUPSD BY ITEM 65A)                      |             | 2              |
| -65A         | SC50277      |                     | • SCREW, FLAT HD (M3 X 0.50 X 12 L)<br>(TPN SC-50277) (SUPSDS ITEM 65)     |             | 2              |
| 70           | TE097        |                     | • TERMINAL, RING (TPN TE-097)                                              |             | 6              |
| 75           | 11172-1      |                     | • FLOW RESTRICTOR<br>(REFERENCE IPL FIGURE 1, ITEM 305)                    |             | RF             |

- ITEM NOT ILLUSTRATED

— — —


— — —

— — —

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

THIS PAGE IS INTENTIONALLY LEFT BLANK.

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

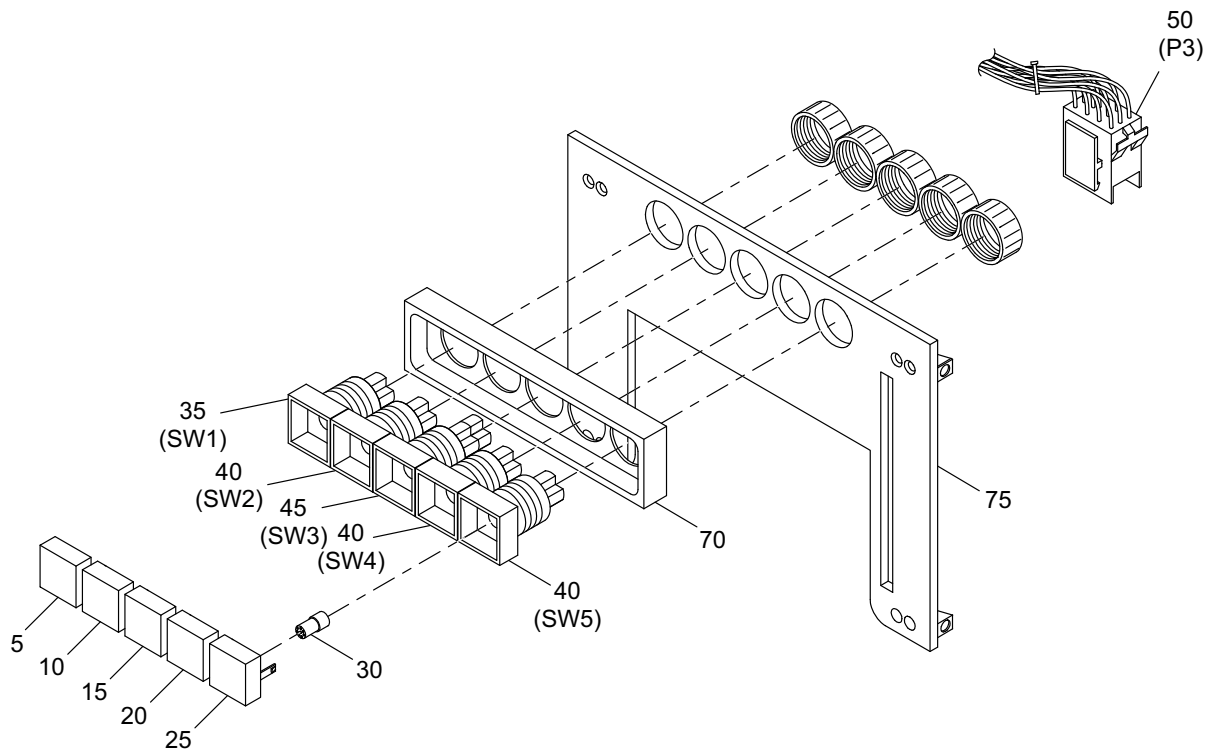

GRAPHIC 25-30-02-99B-021-A01

IPL Figure 6  
Switch Assembly



**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

TABLE 25-30-02-950-809-A01

| FIG.<br>ITEM | PART NUMBER  | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                               | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|--------------|---------------------|---------------------------------------------------------------------------------------------|-------------|----------------|
| 6            |              |                     |                                                                                             |             |                |
| -1           | 11081-1      |                     | ASSEMBLY, SWITCH MOUNT<br>(SEE IPL FIGURE 1 FOR NHA)                                        |             | RF             |
| -1A          | 11081-5      |                     | DELETED                                                                                     |             | DEL            |
| 5            | 11240-1      |                     | • LENS, ON/OFF                                                                              |             | 1              |
| 10           | 11240-2      |                     | • LENS, BREW                                                                                |             | 1              |
| 15           | 11240-3      |                     | • LENS, HOT PLATE                                                                           |             | 1              |
| -15A         | 11240-15     |                     | DELETED                                                                                     |             | DEL            |
| 20           | 11240-4      |                     | • LENS, HOT WATER                                                                           |             | 1              |
| 25           | 11240-5      |                     | • LENS, COLD LOW WATER                                                                      |             | 1              |
| 30           | 6MGMRG28N    |                     | • LAMP, LED, WARM WHITE<br>(PRE SB 25-30-02-7) (SUPSD BY ITEM 30A)                          |             | 5              |
| -30A         | 10-23161089  |                     | • LAMP, LED, WARM WHITE<br>(POST SB 25-30-02-7) (SUPSDS ITEM 30)<br>(SUPSD BY ITEM 30B)     |             | 5              |
| -30B         | LP50099-1089 |                     | • LED, WHITE DIFFUSE (36V)<br>(TPN LP-50099-1089) (POST SB 25-30-02-7)<br>(SUPSDS ITEM 30A) |             | 5              |
| 35           | SW50212      |                     | • SWITCH, 1PDT MAINTAIN (SW1)<br>(TPN SW-50212)                                             |             | 1              |
| 40           | SW50217      |                     | • SWITCH, 1PDT MOMENTARY (SW2, SW4,<br>SW5) (TPN SW-50217)                                  |             | 3              |
| 45           | 31-282025    |                     | • PUSH BUTTON ILLUMINATED (SW3)<br>(SUPSD BY ITEM 45A)                                      |             | 1              |
| -45A         | SW50279      |                     | • PUSH BUTTON ILLUMINATED (SW3)<br>(TPN SW-50279) (SUPSDS ITEM 45)                          |             | 1              |
| -45B         | 31-151-025   |                     | DELETED                                                                                     |             | DEL            |
| 50           | CO50422      |                     | • HOUSING CAP, 12 POSITION (P3)<br>(TPN CO-50422)                                           |             | 1              |
| -55          | TE50446      |                     | • PIN (TPN TE-50446)                                                                        |             | 12             |
| -60          | 1N4005       |                     | DELETED                                                                                     |             | DEL            |
| -65          | 31818        |                     | DELETED                                                                                     |             | DEL            |
| 70           | 11201-1      |                     | • SWITCH GUARD                                                                              |             | 1              |
| 75           | 11058-1      |                     | • PLATE, SWITCH MOUNT                                                                       |             | 1              |
| -80          | MS3367-4-9   |                     | • WIRE TIE, NYLON, 4 IN (101.60 MM)                                                         |             | 4              |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**


| FIG.<br>ITEM | PART NUMBER | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                       | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|-------------|---------------------|-------------------------------------------------------------------------------------|-------------|----------------|
| 6            |             |                     |                                                                                     |             |                |
| -85          | 11204-1     |                     | • SWITCH WIRING DIAGRAM (REF)<br>(REFER TO SCHEMATIC AND WIRING<br>DIAGRAM SECTION) |             | RF             |
| -90          | 12629-1     |                     | DELETED                                                                             |             | DEL            |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

THIS PAGE IS INTENTIONALLY LEFT BLANK.

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

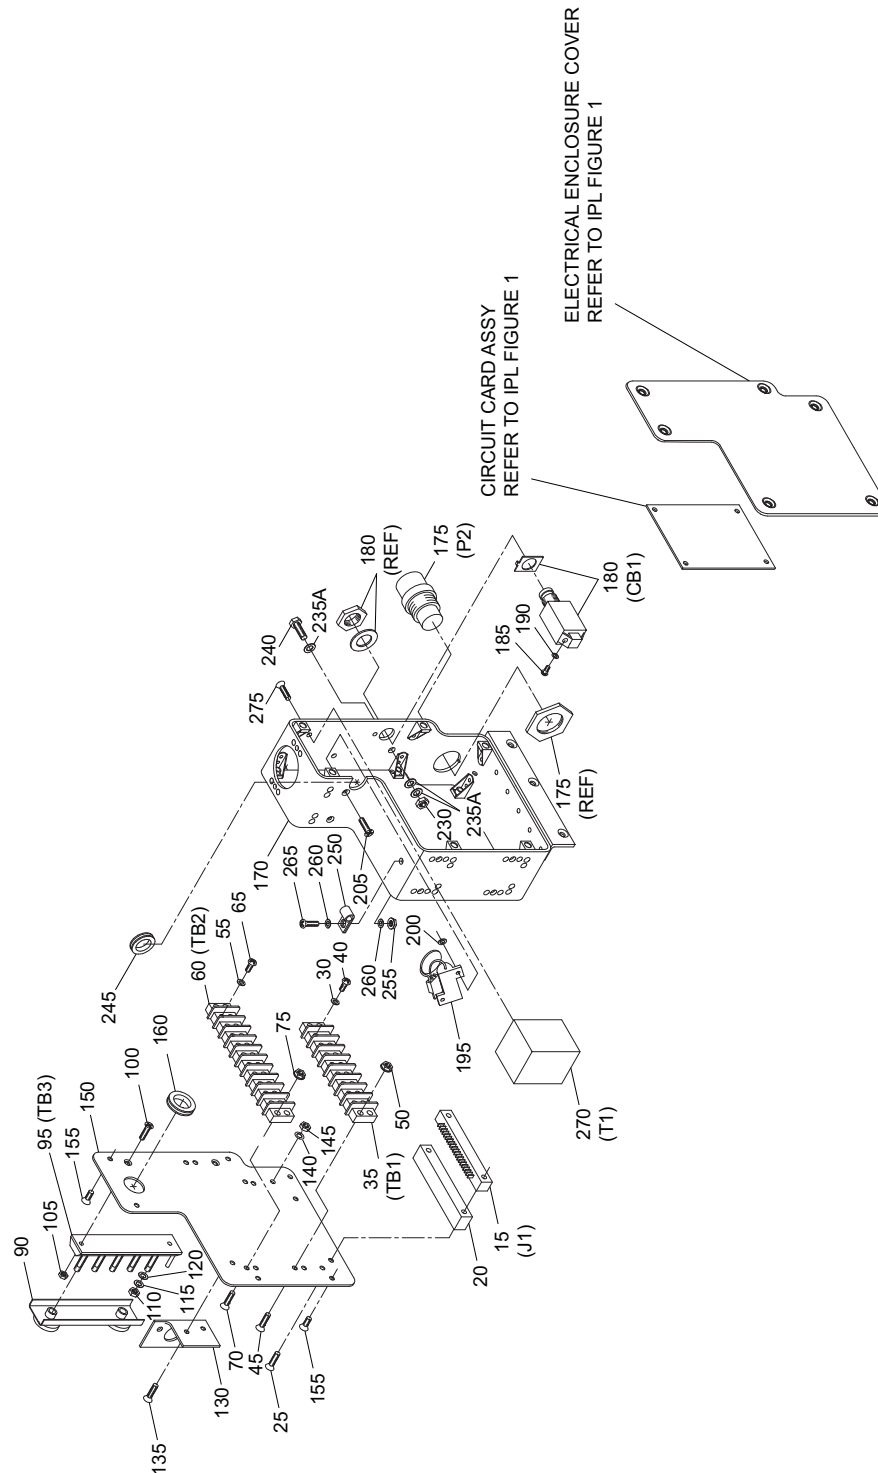

GRAPHIC 25-30-02-99B-022-A01

IPL Figure 7  
 Electrical Enclosure Assembly

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

TABLE 25-30-02-950-810-A01

| FIG.<br>ITEM | PART NUMBER | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                                         | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|-------------|---------------------|-------------------------------------------------------------------------------------------------------|-------------|----------------|
| 7            |             |                     |                                                                                                       |             |                |
| -1           | 11090-1     |                     | ELECTRICAL ENCLOSURE ASSEMBLY<br>(SEE IPL FIGURE 1 FOR NHA)                                           |             | RF             |
| -5           | 11090-301   |                     | • COVER, SUBASSY                                                                                      |             | 1              |
| -10          | 11093-1     |                     | • • CONNECTOR HARNESS ASSEMBLY                                                                        |             | 1              |
| 15           | C403B021R   |                     | • • • CONNECTOR (J1)<br>(SUPSD BY ITEM 15A)                                                           |             | 1              |
| -15A         | CO50414     |                     | • • • CONNECTOR (J1) (TPN CO-50414)<br>(SUPSDS ITEM 15)                                               |             | 1              |
| 20           | 11224-1     |                     | • • SUPPORT, CIRCUIT CARD                                                                             |             | 1              |
|              |             |                     | ATTACHING PARTS                                                                                       |             |                |
| 25           | MS24693C8   |                     | • • SCREW (4-40 X 0.75)                                                                               |             | 2              |
|              |             |                     | * * *                                                                                                 |             |                |
| 30           | MS35338-136 |                     | • • WASHER, LOCKING (NO. 6)                                                                           |             | 16             |
| 35           | 600A8       |                     | • • TERMINAL BLOCK (TB1)<br>(SUPSD BY ITEM 35A)                                                       |             | 1              |
| -35A         | TE50445-08  |                     | • • TERMINAL BLOCK (TB1)<br>(TPN TE-50445-08) (SUPSDS ITEM 35)                                        |             | 1              |
| 40           | KU63214     |                     | • • • SCREW, 6-32 X 0.25 IN NI PLATED<br>BRASS (SUPSD BY ITEM 40A)                                    |             | 16             |
| -40A         | SC50269     |                     | • • • SCREW, 6-32 X 0.25 IN NI PLATED<br>BRASS (PROVIDED WITH TB1)<br>(TPN SC-50269) (SUPSDS ITEM 40) |             | 16             |
|              |             |                     | ATTACHING PARTS                                                                                       |             |                |
| 45           | MS24693C28  |                     | • • SCREW, FLAT HD (6-32 X 0.5)                                                                       |             | 4              |
| 50           | MS21042-06  |                     | • • NUT, (6-32)                                                                                       |             | 4              |
|              |             |                     | * * *                                                                                                 |             |                |
| 55           | MS35338-136 |                     | • • WASHER, LOCKING (NO. 6)                                                                           |             | 20             |
| 60           | 600A10      |                     | • • TERMINAL BLOCK (TB2)<br>(SUPSD BY ITEM 60A)                                                       |             | 1              |
| -60A         | TE50445-10  |                     | • • TERMINAL BLOCK (TB2)<br>(TPN TE-50445-10) (SUPSDS ITEM 60)                                        |             | 1              |
| 65           | KU63214     |                     | • • • SCREW, 6-32 X 0.25 IN NI PLATED<br>BRASS (SUPSD BY ITEM 65A)                                    |             | 20             |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

| FIG.<br>ITEM | PART NUMBER   | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                                                                | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|---------------|---------------------|------------------------------------------------------------------------------------------------------------------------------|-------------|----------------|
| 7            |               |                     |                                                                                                                              |             |                |
| -65A         | SC50269       |                     | • • • SCREW, 6-32 X 0.25 IN NI PLATED<br>BRASS (TPN SC-50269) (PROVIDED<br>WITH TB2) (SUPSDS ITEM 65)<br><br>ATTACHING PARTS |             | 20             |
| 70           | MS24693C28    |                     | • • SCREW, FLAT HD (6-32 X 0.5)                                                                                              |             | 4              |
| 75           | MS21042-06    |                     | • • NUT, (6-32)<br><br>* * *                                                                                                 |             | 4              |
| -80          | 11246-1       |                     | • • STANDOFF ASSEMBLY<br><br>ATTACHING PARTS                                                                                 |             | 2              |
| -85          | SC50268-04    |                     | • • SCREW, FLAT HD (4-40 X 0.375 IN)<br>(TPN SC-50268-04)<br><br>* * *                                                       |             | 2              |
| 90           | MS18029-1S5   |                     | • • COVER, TERMINAL BLOCK<br>(TPN MS18029-1S-5)<br>(REFERENCE IPL FIGURE 1, ITEM 480)                                        |             | RF             |
| 95           | MS27212-1-5   |                     | • • TERMINAL BLOCK (TB3)<br><br>ATTACHING PARTS                                                                              |             | 1              |
| 100          | SC50268-04    |                     | • • SCREW, FLAT HD (4-40 X 0.375 IN)<br>(TPN SC-50268-04)<br>(SUPSD BY ITEM 100A)                                            |             | 2              |
| -100A        | MS24693C4     |                     | • • SCREW, FLAT HD (4-40 X 0.35 IN)<br>(SUPSDS ITEM 100)                                                                     |             | 2              |
| 105          | MS35649-244   |                     | • • NUT (4-40)                                                                                                               |             | 2              |
| 110          | NAS671C6      |                     | • • NUT (6-32)                                                                                                               |             | 5              |
| 115          | MS35338-136   |                     | • • WASHER, LOCKING (NO. 6)                                                                                                  |             | 5              |
| 120          | NAS1149CN616R |                     | • • WASHER, FLAT (NO. 6)                                                                                                     |             | 5              |
| -125         | TE097         |                     | • • TERMINAL, RING (TPN TE-097)<br><br>* * *                                                                                 |             | 10             |
| 130          | 11112-1       |                     | • • ANGLE<br><br>ATTACHING PARTS                                                                                             |             | 1              |
| 135          | MS24693C26    |                     | • • SCREW, FLAT HD (6-32 X 0.375)                                                                                            |             | 2              |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER   | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                      | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|---------------|---------------------|------------------------------------------------------------------------------------|-------------|----------------|
| 7            |               |                     |                                                                                    |             |                |
| 140          | AN960C6       |                     | • • WASHER, FLAT<br>(SUPSD BY ITEM 140A)                                           |             | 1              |
| -140A        | NAS1149CN632R |                     | • • WASHER, FLAT (NO. 6)<br>(SUPSDS ITEM 140)                                      |             | 1              |
| 145          | MS21042-06    |                     | • • NUT (6-32)                                                                     |             | 1              |
|              |               |                     | * * *                                                                              |             |                |
| 150          | 11098-1       |                     | • • COVER, BACK                                                                    |             | 1              |
|              |               |                     | ATTACHING PARTS                                                                    |             |                |
| 155          | MS24693C24    |                     | • • SCREW, FLAT HD (6-32 X 0.25)                                                   |             | 5              |
|              |               |                     | * * *                                                                              |             |                |
| 160          | 1126          |                     | • • GROMMET, 0.625 IN (15.875 MM)<br>(SUPSD BY ITEM 160A)                          |             | 1              |
| -160A        | GR50057       |                     | • • GROMMET, 0.625 IN (15.875 MM)<br>TPN GR-50057) (SUPSDS ITEM 160)               |             | 1              |
| -165         | 11090-303     |                     | • ENCLOSURE, SUBASSY                                                               |             | 1              |
| 170          | 11059-1       |                     | • • ENCLOSURE, ELECTRICAL                                                          |             | 1              |
| 175          | 11327-1       |                     | • • CONNECTOR ASSEMBLY (P2)                                                        |             | 1              |
| 180          | 7277-2-1      |                     | • • CIRCUIT BREAKER 1A (CB1)<br>(SUPSD BY ITEM 180A)                               |             | 1              |
| -180A        | MS26574-1     |                     | • • CIRCUIT BREAKER 1A (CB1)<br>(SUPSDS ITEM 180)                                  |             | 1              |
| -180B        | 7274-2-1      |                     | • • CIRCUIT BREAKER 1A (CB1)<br>(OPTIONAL TO ITEM 180A)                            |             | 1              |
| 185          | KU63214       |                     | • • • SCREW, 6-32 X 0.25 IN NI PLATED<br>BRASS (SUPSD BY ITEM 185A)                |             | 2              |
| -185A        | SC50269       |                     | • • • SCREW, 6-32 X 0.25 IN NI PLATED<br>BRASS (TPN SC-50269)<br>(SUPSDS ITEM 185) |             | 2              |
| 190          | MS35338-136   |                     | • • • WASHER, LOCKING (NO. 6)                                                      |             | 2              |
| 195          | 11269-1       |                     | • • SCR ASSEMBLY                                                                   |             | 1              |
|              |               |                     | ATTACHING PARTS                                                                    |             |                |
| 200          | MS21042-04    |                     | • • NUT, LOCKING (4-40)                                                            |             | 2              |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER   | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                            | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|---------------|---------------------|------------------------------------------------------------------------------------------|-------------|----------------|
| 7            |               |                     |                                                                                          |             |                |
| 205          | MS24693C4     |                     | • • SCREW, FLAT HD (4-40 X 0.375)<br><br>* * *                                           |             | 2              |
| -210         | RE50107       |                     | • • • RESISTOR, 16, 5W (R101)<br>(TPN RE-50107)                                          |             | 1              |
| -215         | IC50045       |                     | • • • SCR (Q101) (TPN IC-50045)                                                          |             | 1              |
| -220         | V250LA40A     |                     | • • • VARISTOR (CR101)<br>(SUPSD BY ITEM 220A)                                           |             | 1              |
| -220A        | RE50108       |                     | • • • VARISTOR (CR101) (TPN RE-50108)<br>(SUSPSDS ITEM 220)                              |             | 1              |
| -225         | TE215         |                     | • • TERMINAL RING (TPN TE-215)<br><br>ATTACHING PARTS                                    |             | 2              |
| 230          | MS21042-3     |                     | • • NUT, SELF-LOCKING (10-32)                                                            |             | 1              |
| -235         | AN960D10L     |                     | • • WASHER, FLAT (SUPSD BY ITEM 235A)                                                    |             | 2              |
| 235A         | NAS1149D0316H |                     | • • WASHER, ALUMINIUM (NO. 10)<br>(SUPSDS ITEM 235)                                      |             | 3              |
| 240          | MS51958-62    |                     | • • SCREW (SUPSD BY ITEM 240A)                                                           |             | 1              |
| -240A        | NAS1801-3-7   |                     | • • SCREW (SUPSDS ITEM 240)<br>(SUPSD BY ITEM 240B)                                      |             | 1              |
| -240B        | NAS1801-3-8   |                     | • • SCREW, HEX HD (10-32 X 0.437)<br>(SUPSDS ITEM 240A)<br><br>* * *                     |             | 1              |
| 245          | 1125          |                     | • GROMMET, 0.50 IN (12.7 MM)<br>(SUPSD BY ITEM 245A)                                     |             | 1              |
| -245A        | GR50054       |                     | • GROMMET, 0.50 IN (12.7 MM)<br>(TPN GR-50054) (SUPSDS ITEM 245)                         |             | 1              |
| 250          | 8876T13       |                     | • WIRE CLAMP, 0.25 IN (6.35 MM)<br>(SUPSD BY ITEM 250A)                                  |             | 1              |
| -250A        | CCS25S8M0     |                     | • WIRE CLAMP, 0.25 IN (6.35 MM)<br>(SUPSDS ITEM 250)<br>(SUPSD BY ITEM 250B)             |             | 1              |
| -250B        | CL320         |                     | • WIRE CLAMP 0.25 IN (6.35 MM)<br>(TPN CL-320) (SUPSDS ITEM 250A)<br><br>ATTACHING PARTS |             | 1              |
| 255          | MS21042-08    |                     | • NUT, SELF-LOCKING (8-32)                                                               |             | 1              |

- ITEM NOT ILLUSTRATED




**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER   | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7       | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|---------------|---------------------|-------------------------------------|-------------|----------------|
| 7            |               |                     |                                     |             |                |
| 260          | AN960-8       |                     | • WASHER, FLAT (SUPSD BY ITEM 260A) |             | 2              |
| -260A        | NAS1149FN832P |                     | • WASHER, NO. 8 (SUPSDS ITEM 260)   |             | 2              |
| 265          | MS51957-45    |                     | • SCREW, PAN HD (8-32 X 0.5)        |             | 1              |
|              |               |                     | * * *                               |             |                |
| 270          | TFMR50016     |                     | • TRANSFORMER (T1) (TPN TFMR-50016) |             | 1              |
|              |               |                     | ATTACHING PARTS                     |             |                |
| 275          | MS24693C25    |                     | • SCREW, FLAT HD (6-32 X 0.3125)    |             | 2              |
|              |               |                     | * * *                               |             |                |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

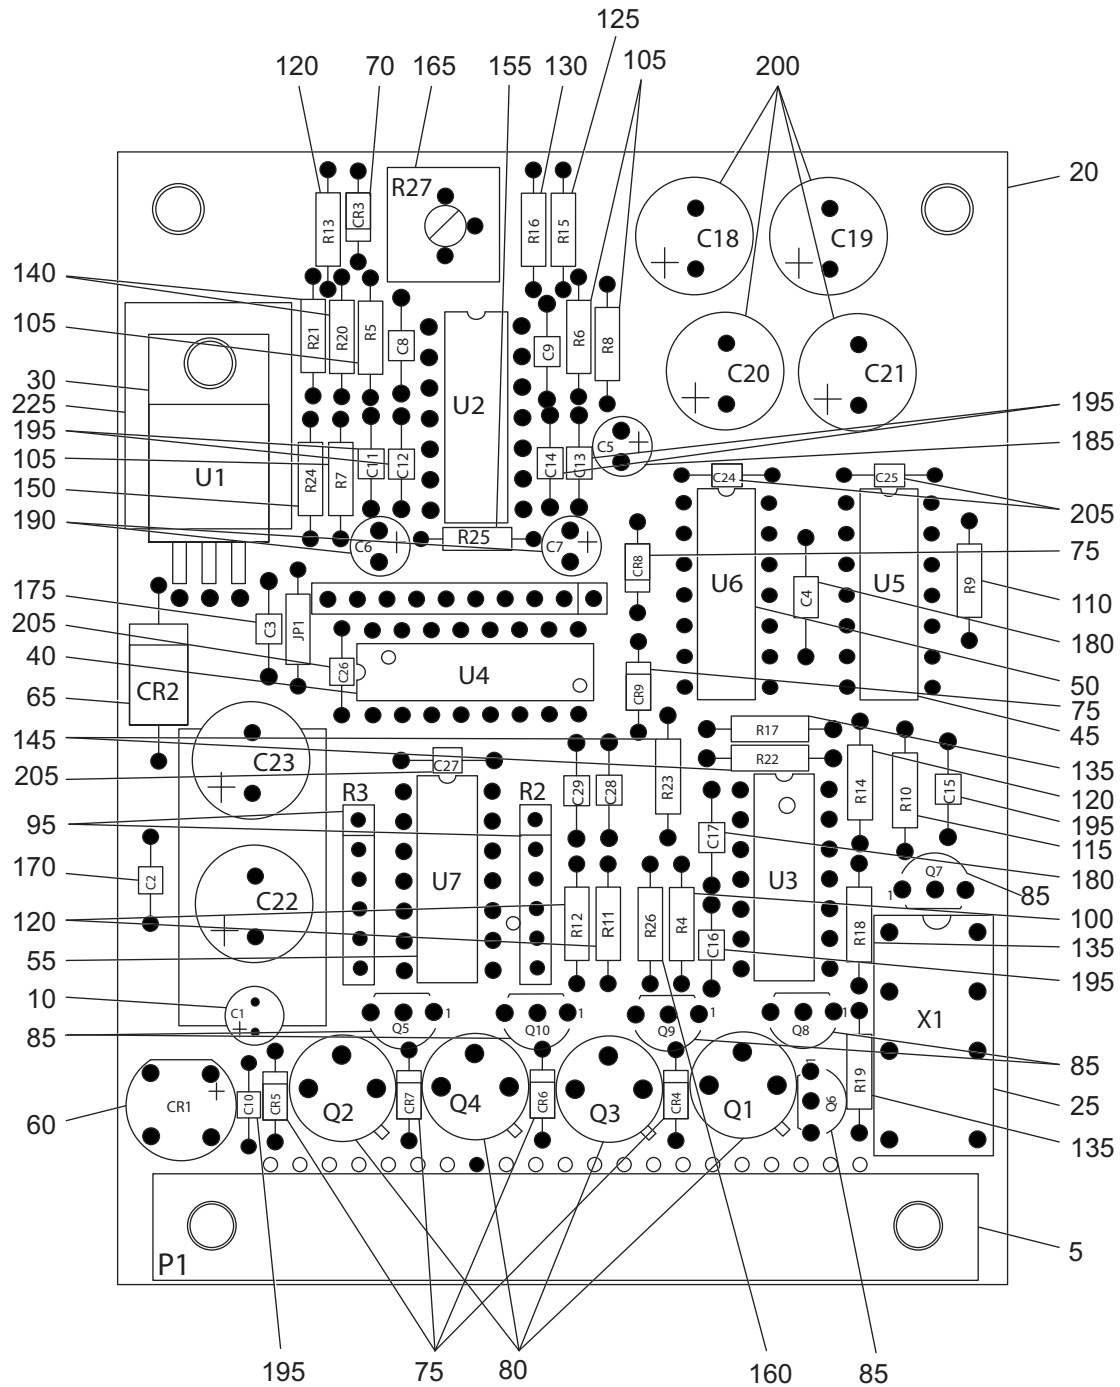

GRAPHIC 25-30-02-99B-023-A01

IPL Figure 8  
 Circuit Card Assembly

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

TABLE 25-30-02-950-811-A01

| FIG.<br>ITEM | PART NUMBER      | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                 | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|------------------|---------------------|-------------------------------------------------------------------------------|-------------|----------------|
| 8            |                  |                     |                                                                               |             |                |
| -1           | 11095-503        |                     | CIRCUIT CARD ASSEMBLY<br>(SEE IPL FIGURE 1 FOR NHA)                           | A           | RF             |
| -1A          | 11095-509        |                     | CIRCUIT CARD ASSEMBLY<br>(SEE IPL FIGURE 1 FOR NHA)                           | B           | RF             |
| 5            | 11206-1          |                     | • STIFFENER                                                                   |             | 1              |
| 10           | XAL50V330        |                     | • CAPACITOR, AL, 330 MFD, >50V (C1)<br>(SUPSD BY ITEM 10A)                    |             | 1              |
| -10A         | CA50146          |                     | • CAPACITOR, 330 UF, 50V (C1)<br>(SUPSDS ITEM 10) (TPN CA-50146)              |             | 1              |
| -15          | 11095-301        |                     | • CIRCUIT CARD SUBASSY<br>(SUPSD BY ITEM 15A)                                 |             | 1              |
| -15A         | 11095-301        |                     | DELETED (SUPSDS ITEM 15)                                                      |             | DEL            |
| 20           | 11095-E          |                     | • PRINTED CIRCUIT BOARD                                                       |             | 1              |
| 25           | T85N11D114-12    |                     | • RELAY (X1) (SUPSD BY ITEM 25A)                                              |             | 1              |
| -25A         | V23105A3003B201  |                     | • RELAY (X1) (SUPSDS ITEM 25)<br>(SUPSD BY ITEM 25B)                          |             | 1              |
| -25B         | 8-1343792-8      |                     | • RELAY (X1) (SUPSDS ITEM 25A)<br>(SUPSD BY ITEM 25C)                         |             | 1              |
| -25C         | V23105A50003A201 |                     | • RELAY (X1) (SUPSDS ITEM 25B)<br>(SUPSD BY ITEM 25D)                         |             | 1              |
| -25D         | RL50078          |                     | • RELAY (X1) (SUPSDS ITEM 25C)<br>(TPN RL-50078)                              |             | 1              |
| 30           | L7812CV          |                     | • REGULATOR, 12V, >1A (U1)                                                    |             | 1              |
| -35          | LM239AJ          |                     | • IC, DIP, QUAD COMPARATOR (U2, U3)                                           |             | 2              |
| -35A         | IC50126          |                     | • IC, DIP, QUAD COMPARATOR (U2, U3)<br>OPTIONAL (TPN IC-50126)                |             | 2              |
| 40           | CD4049UBF        |                     | • IC, DIP, CMOS, HEX INVERTER (U4)<br>(SUPSD BY ITEM 40A)                     |             | 1              |
| -40A         | CD4049UBF        |                     | • IC, DIP, CMOS, HEX INVERTER (U4)<br>(SUPSDS ITEM 40)<br>(SUPSD BY ITEM 40B) |             | 1              |
| -40B         | CD4049UBE        |                     | • IC, DIP, CMOS, HEX INVERTER (U4)<br>(SUPSDS ITEM 40A)                       |             | 1              |
| 45           | CD4011BF         |                     | • IC, DIP, CMOS, QUAD NAND (U5)<br>(SUPSD BY ITEM 45A)                        |             | 1              |
| -45A         | CD4011BF         |                     | • IC, DIP, CMOS, QUAD NAND (U5)<br>(SUPSDS ITEM 45) (SUPSD BY ITEM 45B)       |             | 1              |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                     | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|-------------|---------------------|-----------------------------------------------------------------------------------|-------------|----------------|
| 8            |             |                     |                                                                                   |             |                |
| -45B         | CD4011BE    |                     | • IC, DIP, CMOS, QUAD NAND (U5)<br>(SUPSDS ITEM 45A)                              |             | 1              |
| 50           | CD4082BF    |                     | • IC, DIP, CMOS, DUAL 4 INPUT AND (U6)<br>(SUPSD BY ITEM 50A)                     |             | 1              |
| -50A         | CD4082BF    |                     | • IC, DIP, CMOS, DUAL 4 INPUT AND (U6)<br>(SUPSDS ITEM 50)<br>(SUPSD BY ITEM 50B) |             | 1              |
| -50B         | CD4082BE    |                     | • IC, DIP, CMOS, DUAL 4 INPUT AND (U6)<br>(SUPSDS ITEM 50A)                       |             | 1              |
| 55           | CD4081BF    |                     | • IC, DIP, CMOS, QUAD AND (U7)<br>(SUPSD BY ITEM 55A)                             |             | 1              |
| -55A         | CD4081BF    |                     | • IC, DIP, CMOS, QUAD AND (U7)<br>(SUPSDS ITEM 55) (SUPSD BY ITEM 55B)            |             | 1              |
| -55B         | CD4081BE    |                     | • IC, DIP, CMOS, QUAD AND (U7)<br>(SUPSDS ITEM 55A)                               |             | 1              |
| 60           | W02G        |                     | • BRIDGE RECTIFIER, 1.5A (CR1)<br>(SUPSD BY ITEM 60B)                             |             | 1              |
| -60A         | W02F        |                     | • BRIDGE RECTIFIER, 1.5A (CR1)<br>(OPTIONAL TO ITEM 60)<br>(SUPSD BY ITEM 60B)    |             | 1              |
| -60B         | RC50223     |                     | • BRIDGE RECTIFIER (CR1)<br>(SUPSDS ITEMS 60 AND 60A)<br>(TPN RC-50223)           |             | 1              |
| 65           | 1.5KE39A    |                     | • DIODE, TRANSIENT SUPPRESSOR (CR2)                                               |             | 1              |
| 70           | 1N755A      |                     | • DIODE, ZENER (CR3)                                                              |             | 1              |
| 75           | 1N914       |                     | • DIODE (CR4 THRU CR9)<br>(SUPSD BY ITEM 75A)                                     |             | 6              |
| -75A         | RC50222     |                     | • DIODE (CR4 THRU CR9)<br>(SUPSDS ITEM 75) (TPN RC-50222)                         |             | 6              |
| 80           | RFL1N08     |                     | • TRANSISTOR, MOSFET (Q1 THRU Q4)<br>(SUPSD BY ITEM 80A)                          |             | 4              |
| -80A         | MPF960      |                     | • TRANSISTOR, MOSFET (Q1 THRU Q4)<br>(SUPSDS ITEM 80)<br>(SUPSD BY ITEM 80B)      |             | 4              |
| -80B         | ZVN4306A    |                     | • TRANSISTOR, MOSFET (Q1 THRU Q4)<br>(SUPSDS ITEM 80A)<br>(SUPSD BY ITEM 80C)     |             | 4              |
| -80C         | TR50065     |                     | • TRANSISTOR, MOSFET (Q1 THRU Q4)<br>(SUPSDS ITEM 80B) (TPN TR-50065)             |             | 4              |
| 85           | 2N7000      |                     | • TRANSISTOR, TMOS (Q5 THRU Q10)<br>(SUPSD BY ITEM 85A)                           |             | 6              |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER  | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                         | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|--------------|---------------------|---------------------------------------------------------------------------------------|-------------|----------------|
| 8            |              |                     |                                                                                       |             |                |
| -85A         | TR50064      |                     | • TRANSISTOR, TMOS (Q5 THRU Q10)<br>(SUPSDS ITEM 85) (TPN TR-50064)                   |             | 6              |
| -90          | 4610X101-103 |                     | • SIP NETWORK, 10K, 2%, 100PPM (R1)<br>(TPN 4610X-101-103)<br>(SUPSD BY ITEM 90A)     |             | 1              |
| -90A         | RE50332      |                     | • SIP RESISTOR, 10K (R1)<br>(TPN RE-50332) (SUPSDS ITEM 90)                           |             | 1              |
| 95           | 4606X102-223 |                     | • SIP NETWORK, 22K, 2%, 100PPM<br>(R2, R3) (TPN 4606X-102-223)<br>(SUPSD BY ITEM 95A) |             | 2              |
| -95A         | RE50331      |                     | • SIP RESISTOR, 22K (R2, R3)<br>(TPN RE-50331) (SUPSDS ITEM 95)                       |             | 2              |
| 100          | 750K OHM     |                     | • RESISTOR, 750K, 0.25W, 1%, 50PPM (R4)                                               |             | 1              |
| 105          | 2M OHM       |                     | • RESISTOR, 2M, 0.25W, 5% (R5 THRU R8)                                                |             | 4              |
| 110          | 510K OHM     |                     | • RESISTOR, 510K, 0.25W, 5% (R9)                                                      |             | 1              |
| 115          | 12K OHM      |                     | • RESISTOR, 12K, 0.25W, 5% (R10)                                                      |             | 1              |
| 120          | 511 OHM      |                     | • RESISTOR, 511, 0.25W, 1%, 50PPM<br>(R11 THRU R13)                                   |             | 3              |
| 125          | 11222        |                     | • RESISTOR, 513 ±1, 0.25W, 50PPM (R15)                                                |             | 1              |
| 130          | 150 OHM      |                     | • RESISTOR, 150, 0.25W, 1%, 50PPM (R16)                                               | A           | 1              |
| 135          | 5.6K OHM     |                     | • RESISTOR, 5.6K, 0.25W, 1%, 50PPM (R17<br>THRU R19)                                  |             | 3              |
| 140          | 3.3K OHM     |                     | • RESISTOR, 3.3K, 0.25W, 1%, 50PPM (R14,<br>R20, R21) (SUPSD BY ITEM 140A)            |             | 3              |
| -140A        | RE50330      |                     | • RESISTOR, 3.3K (R14, R20, R21)<br>(TPN RE-50330) (SUPSDS ITEM 140)                  |             | 3              |
| 145          | 1M OHM       |                     | • RESISTOR, 1M, 0.25W, 5% (R22, R23)                                                  |             | 2              |
| 150          | 47 OHM       |                     | • RESISTOR, 47, 0.25W, 1%, 50PPM (R24)                                                |             | 1              |
| 155          | 10 OHM       |                     | • RESISTOR, 10, 0.25W, 1%, 50PPM (R25)                                                | A           | 1              |
| 160          | 8.45K OHM    |                     | • RESISTOR, 8.45K, 0.25W, 1%, 50PPM<br>(R26) (SUPSD BY ITEM 160A)                     |             | 1              |
| -160A        | RE50330      |                     | • RESISTOR, 3.3K (R26) (TPN RE-50330)<br>(SUPSDS ITEM 160)                            |             | 1              |
| 165          | 3386P-200    |                     | • TRIMPOT, 20 OHM (R27) (SUPSD BY<br>ITEM 165A)                                       |             | 1              |
| -165A        | 3386P1-200   |                     | • TRIMPOT, 20 OHM (R27)<br>(TPN 3386P-1-200) (SUPSDS ITEM 165)                        |             | 1              |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7                                                     | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|-------------|---------------------|-----------------------------------------------------------------------------------|-------------|----------------|
| 8            |             |                     |                                                                                   |             |                |
| 170          | SA115E334M  |                     | • CAPACITOR, MONOLITHIC, 0.33 MFD, >50V (C2)                                      |             | 1              |
| 175          | SA115E224M  |                     | • CAPACITOR, MONOLITHIC, 0.22 MFD, >50V (C3)                                      |             | 1              |
| 180          | SA305E105M  |                     | • CAPACITOR, MONOLITHIC, 1.0 MFD, >50V (C4) (SUPSD BY ITEM 180A)                  |             | 1              |
| -180A        | CA50145     |                     | • CAPACITOR, MONOLITHIC, 1.0 MFD, 50V (C4, C17) (TPN CA-50145) (SUPSDS ITEM 180)  |             | 2              |
| 185          | .22M35      |                     | • CAPACITOR, TANTALUM DIP, 0.22 MFD, 35V (C5)                                     |             | 1              |
| 190          | .10M35      |                     | • CAPACITOR, TANTALUM DIP, 0.1 MFD, 35V (C6, C7)                                  |             | 2              |
| 195          | SA105C103M  |                     | • CAPACITOR, MONOLITHIC, 0.01 MFD >50V (C10 THRU C17) (SUPSD BY ITEM 195A)        |             | 8              |
| -195A        | CA50144     |                     | • CAPACITOR, MONOLITHIC, 0.01 MFD (C10 THRU C16) (TPN CA-50144) (SUPSDS ITEM 195) |             | 7              |
| 200          | XRL16V470   |                     | • CAPACITOR, AL, 470 MFD, 16V (C18 THRU C23) (SUPSD BY ITEM 200A)                 |             | 6              |
| -200A        | CA50143     |                     | • CAPACITOR, AL, 470 MFD, 16V (C18 THRU C21) (SUPSDS ITEM 200) (TPN CA-50143)     |             | 4              |
| 205          | SA115E104M  |                     | • CAPACITOR, MONOLITHIC, 0.1 MFD, >50V (C24 THRU C27) (SUPSD BY ITEM 205A)        |             | 4              |
| -205A        | SA105E104M  |                     | • CAPACITOR, MONOLITHIC, 0.1 MFD, >50V (C24 THRU C27) (SUPSDS ITEM 205)           |             | 4              |
| -210         | 43-05-2     |                     | • INSULATOR, TO-5 (USE WITH ITEM 80)                                              |             | 4              |
| -215         | KU63214     |                     | • SCREW, 6-32 X 0.25 NI PLATED BRASS (SUPSD BY ITEM 215A)                         |             | 1              |
| -215A        | SC50269     |                     | • SCREW, 6-32 X 0.25 NI PLATED BRASS (SUPSDS ITEM 215) (TPN SC-50269)             |             | 1              |
| -220         | MS21042-06  |                     | • NUT, HEX, SELF-LOCKING                                                          |             | 1              |
| 225          | 7-179BA     |                     | • HEAT SINK (TPN 7-179-BA) (SUPSD BY ITEM 225A)                                   |             | 1              |
| -225A        | TR50063     |                     | • HEAT SINK (TPN TR-50063) (SUPSDS ITEM 225)                                      |             | 1              |
| -230         | 1B31        |                     | • CONFORMAL COAT                                                                  |             | AR             |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
**COMPONENT MAINTENANCE MANUAL**  
**11050 AND 11225**

| FIG.<br>ITEM | PART NUMBER | AIRLINE<br>PART NO. | NOMENCLATURE<br>1 2 3 4 5 6 7           | EFF<br>CODE | UNITS/<br>ASSY |
|--------------|-------------|---------------------|-----------------------------------------|-------------|----------------|
| 8            |             |                     |                                         |             |                |
| -235         | 12356-1     |                     | • CCA LABEL                             | A           | 1              |
| -240         | 12356-3     |                     | • CCA LABEL                             | B           | 1              |
| -245         | 20 OHM      |                     | • RESISTOR, 20, 0.25W, 1%, 50PPM (R25)  | B           | 1              |
| -250         | 143 OHM     |                     | • RESISTOR, 143, 0.25W, 1%, 50PPM (R16) | B           | 1              |

- ITEM NOT ILLUSTRATED

**B/E AEROSPACE**  
COMPONENT MAINTENANCE MANUAL  
11050 AND 11225

THIS PAGE IS INTENTIONALLY LEFT BLANK.