



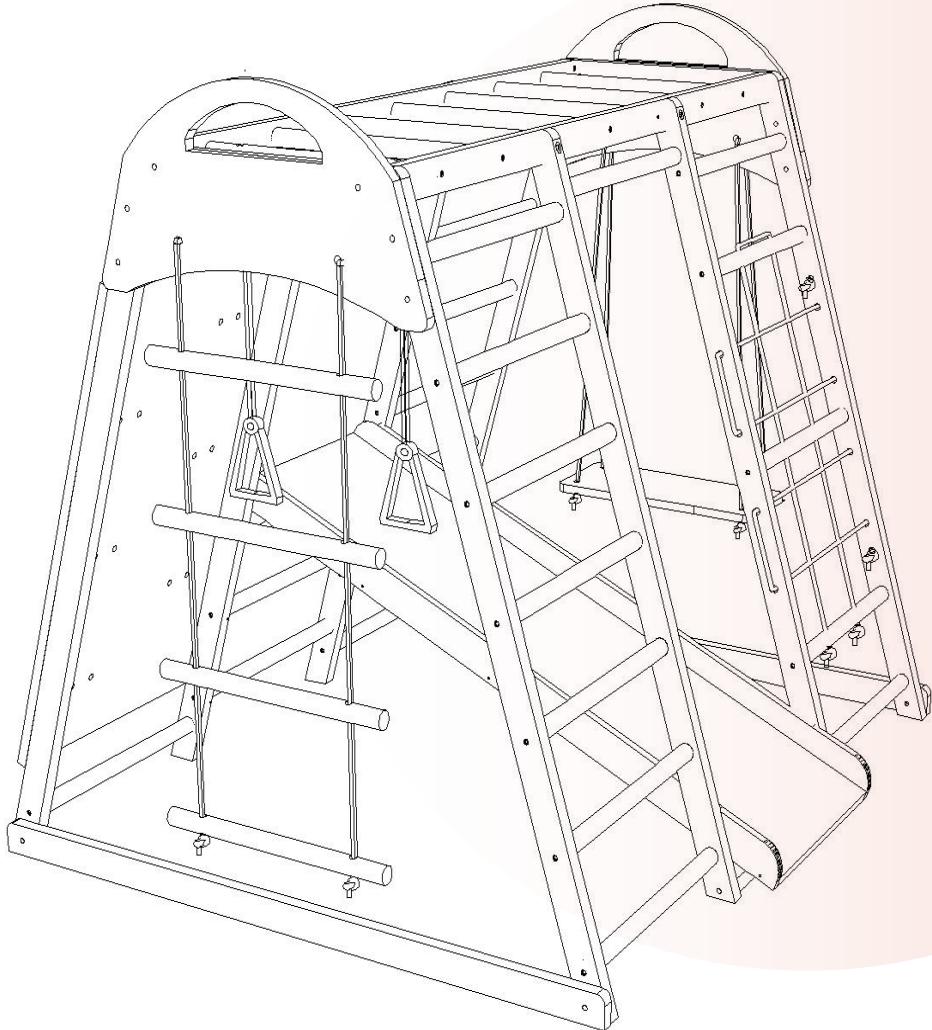
Multifunctional climbing frame

User's Manual

Congratulations for choosing this product.

Before using this product for the first time, please read the manual carefully and use the equipment only as described in the manual to avoid hazards and personal injury.

Please retain this manual for future reference.



CAUTION

**Read all precautions and instructions in this manual before using this equipment.
If you have any questions about this product, please consult your supplier in time.**

Contents

1.	BEFORE YOU BEGIN	3
1.1	Warnings	3
1.2	Precautions	3
2.	Part list	4
3.	Installation instruction	5
4.	Maintenance instructions	11

1. BEFORE YOU BEGIN

1.1 Warnings

Warning. The minimum user age is 3 years old; the maximum user age is 8 years old.

Warning. This activity toy is for indoor use.

Warning. The maximum user weight is 50kg.

Warning. Only for domestic use.

1.2 Precautions

- 1) It is recommended to place the activity toy on a level surface at least 2 m from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires.
- 2) For the safety of your child, the minimum clearance between the swing and the ground is 350mm, please adjust the height of the swing appropriately.
- 3) This activity toys shall not be installed over concrete, asphalt or any other hard surface.
- 4) Please do not turn slide toward sun to avoid prolonged direct sunlight.
- 5) It is not recommended that more than one user use the device at the same time, otherwise it may cause danger.
- 6) Please keep the assembly and installation instructions for further reference.
- 7) Do not make modifications to the structure of the toy or add accessories easily. For special requirements, please consult your supplier.
- 8) Contains small parts, the toy must be assembled by an adult, then use by children.
- 9) Toys must be used under the direct supervision of an adult.
- 10) Toys are for household use only.
- 11) The packaging part is not a toy, please do not take it out to play to avoid danger.

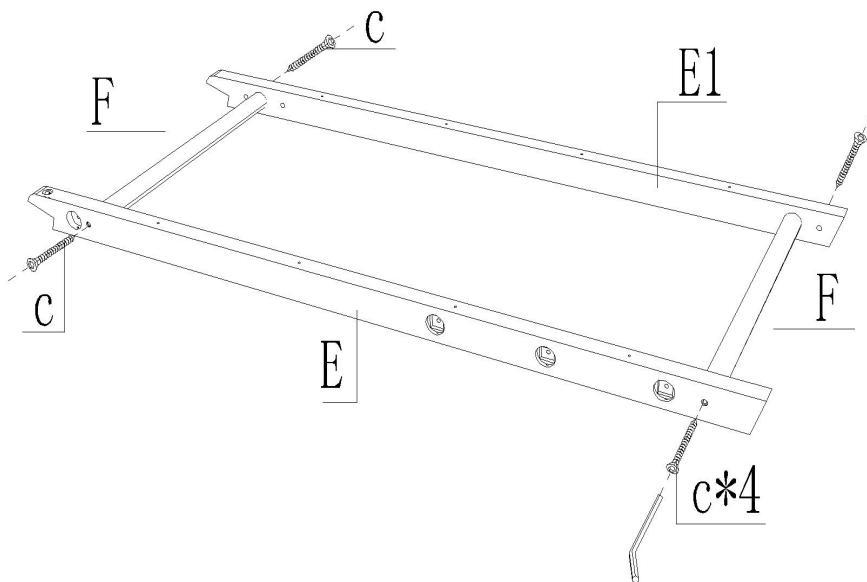
FAILURE TO ABIDE BY THIS INSTALLATION STEPS MAY CAUSE INCORRECT INSTALLATION. THUS, NEED TO RE-INSTALL, OR EVEN CAUSE THE DEVICE TO BE UNSTABLE, RESULTING IN MORE SERIOUS CONSEQUENCES.

2. Part list

A		1PCS	G1		1PCS
B		1PCS	I		2PCS
C		1PCS	K		1PCS
D		1PCS	K1		2PCS
D1		2PCS	L		1PCS
E		1PCS	a		20PCS
E1		1PCS			2PCS
E2		1PCS	b		12PCS
E3		6PCS			1PCS
F		7PCS	c		32PCS
G		1PCS			1PCS
			d		12PCS

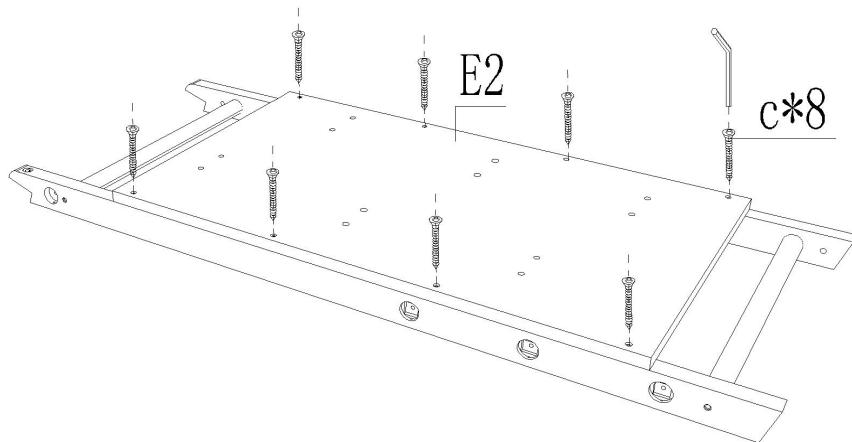
3. Installation instruction

STEP 1

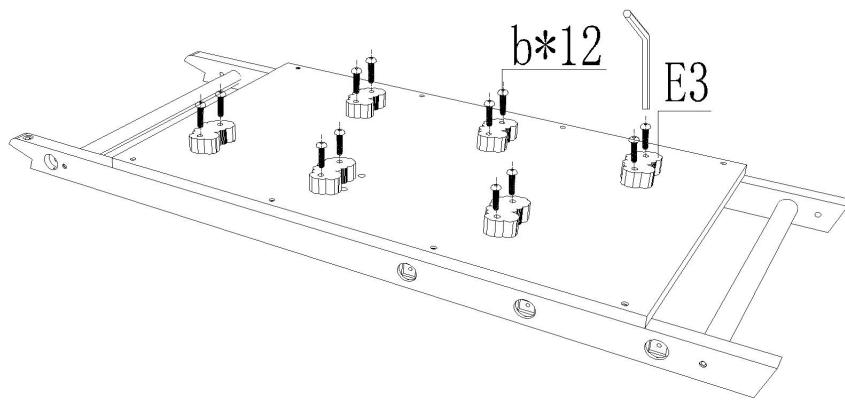


Prepare E and E1, connect them with two F round sticks, and fix them with 4 pieces of M5*35.

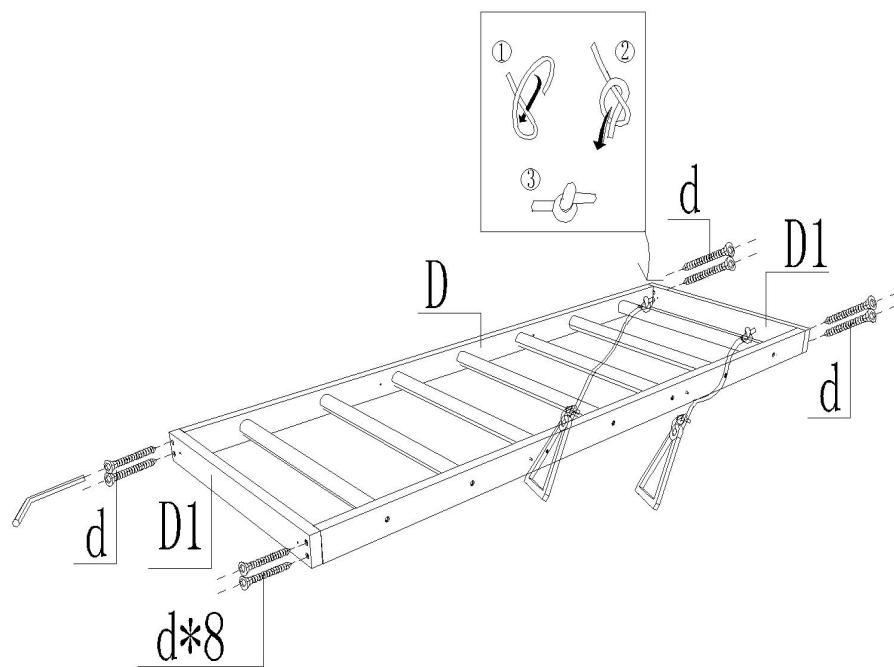
STEP 2



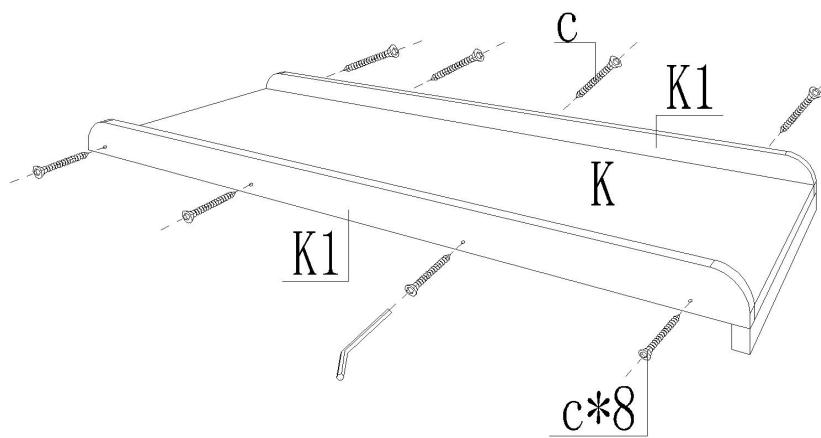
Connect board E2 to the part assembled in the first step and fix it with 8 pieces of M5*35 screws.

STEP 3

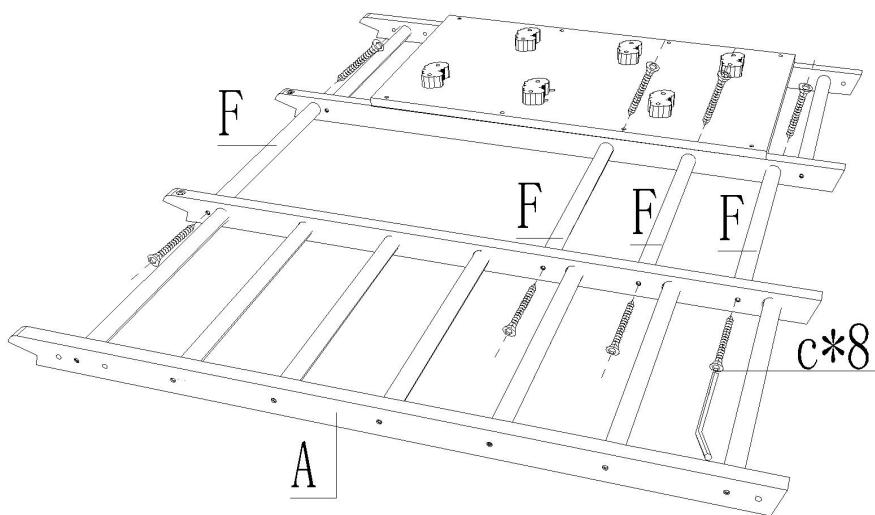
Install the climbing stone E3 on the part assembled in the second step, and then fix it with 12 pieces of **M8*35**.

STEP 4

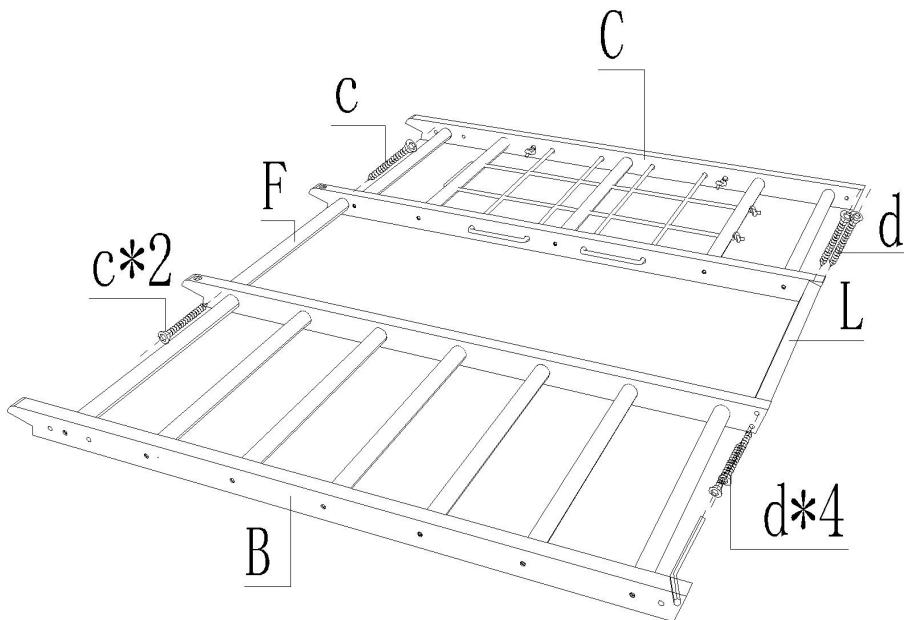
Connect D1 to the climbing ladder D and fix it with 4 pieces of M5*40. Set aside for further installation.

STEP 5

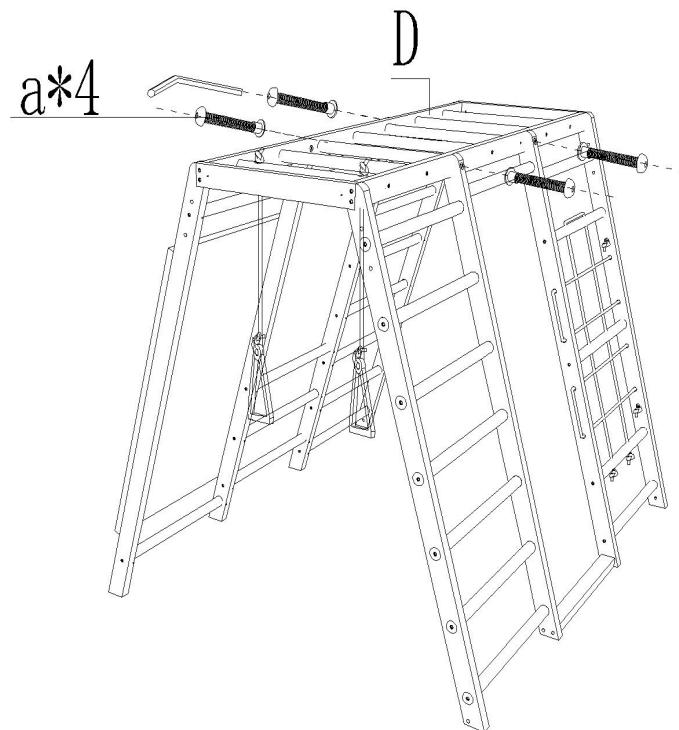
Connect the two slide side panels K1 to the slide K, and fix them with 8 pieces of M5*35 screws. Set aside for further installation.

STEP 6

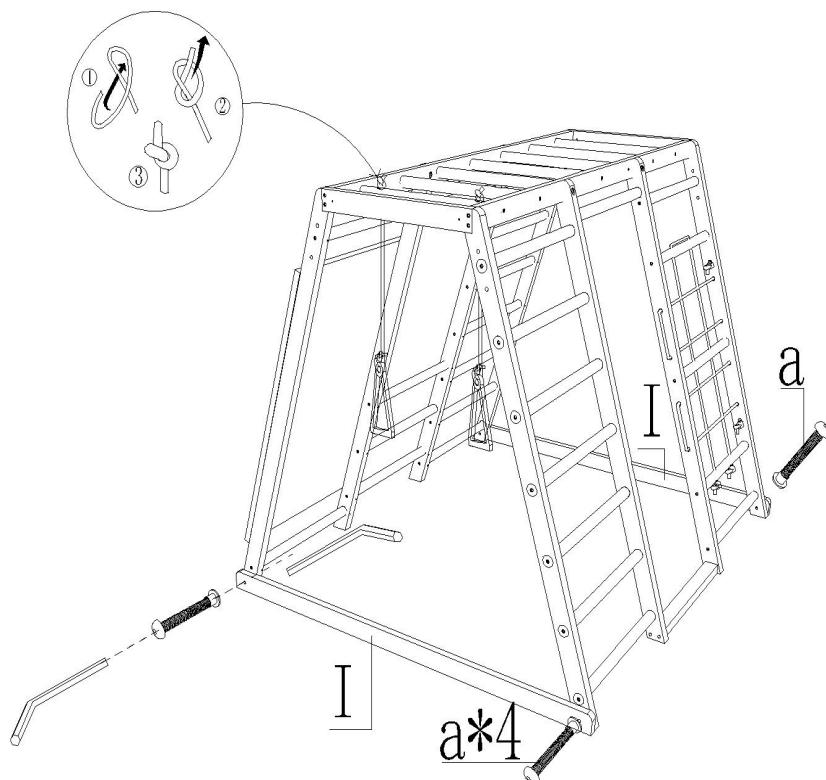
Connect 4 F round sticks between the part installed in the third step and part A, and connect with 8 pieces of M5*35 . Keep it aside for later use.

STEP 7

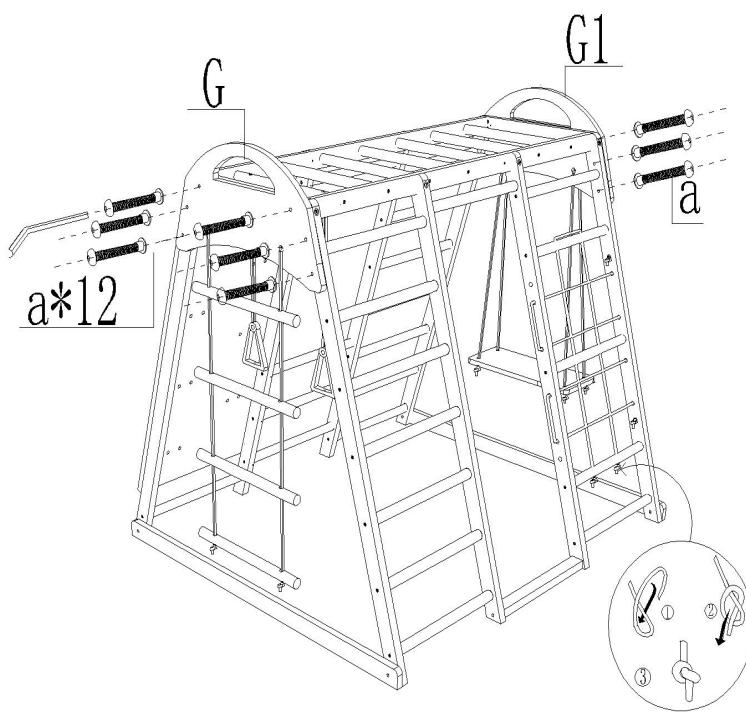
Connect the F round bar and the L part between the B part and the L part, And use two M5*35 and four M5*40 connection, Keep it aside for later use.

STEP 8

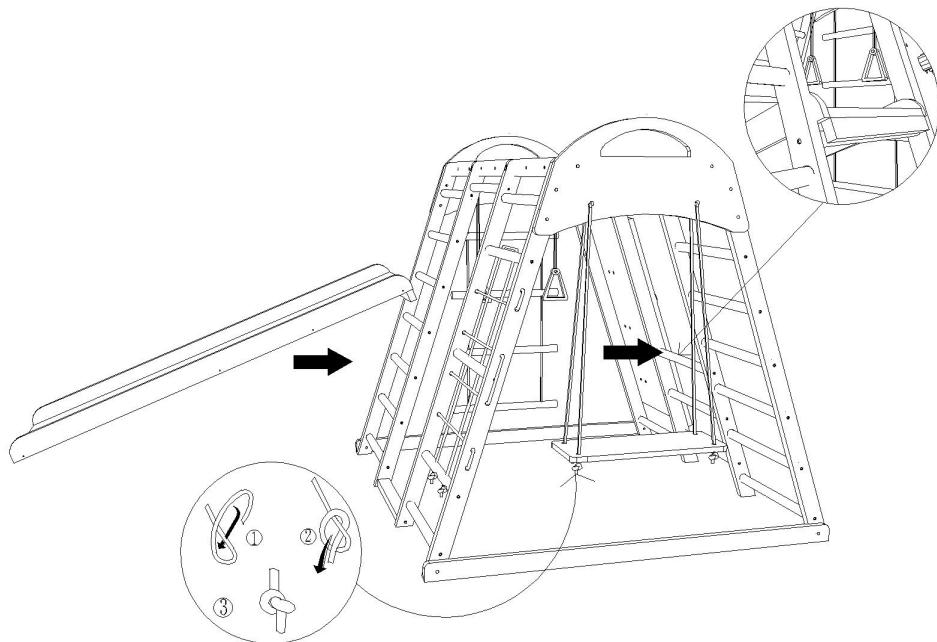
Connect the top of part D and with the climbing frame installed in step 6 and step 7 through 4 pieces of M6*35 screws.

STEP 9

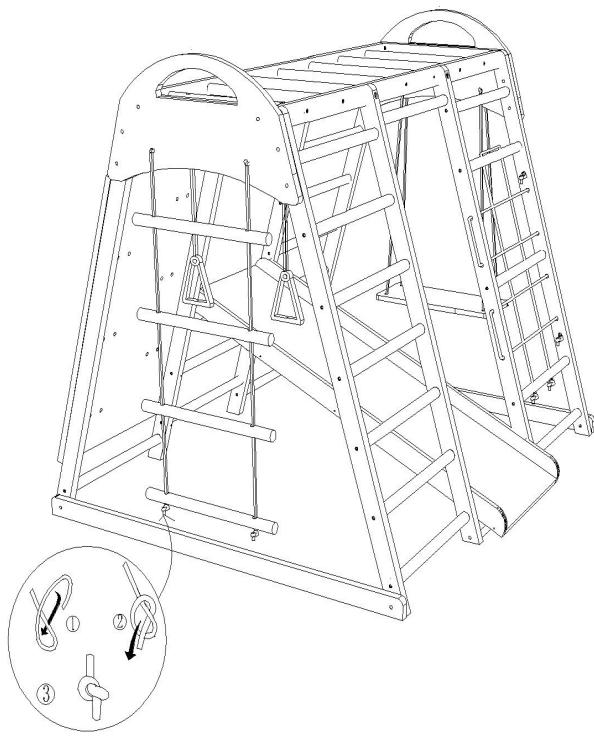
Use 4 pieces of M6*35 screws to fix the two beams I to the bottom of the climbing frame.

STEP 10

Install the G and G1 with climbing ladder and swing to the side of the climbing frame with 6 pieces of M6*35 screws.

STEP 11

When you need to use the slide, clip the wooden stick part of the slide to the F round stick.

STEP 11

The entire installation steps are complete, you can start playing.

Note: The length of the grid climbing rope is 5 meters, the soft ladder is 3 meters long, the pull ring is 1.8 meters long, and the swing rope is 4.5 meters long.

4. Maintenance instructions

At the beginning of each season as well as at regular intervals during the usage season, Product should be checked and you should follow maintenance instructions:

- check all nuts and bolts for tightness and tighten when required;
- oil all metallic moving parts;
- check all coverings for bolts and sharp edges and replace when required;
- check swing seats, chains, ropes and other means of attachments for evidence of deterioration;
- replace defective parts in accordance with the manufacturer's instructions.

The main parts (such as swing seat, supports, hand rings, slide, ladders.etc) should be checked and maintained at regular intervals.

If checks are not carried out, the activity toy could overturn or become a fall off hazard.