



MODEL: DS 19 - 6 DRAWERS DRESSER


SKU: WF317946

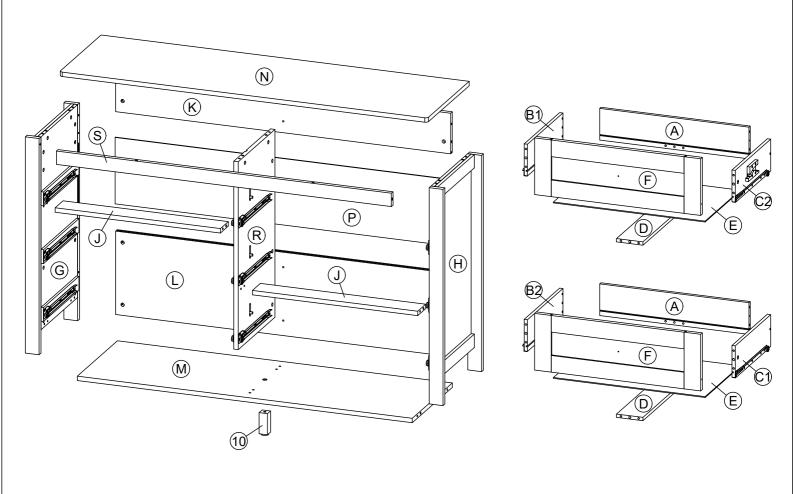


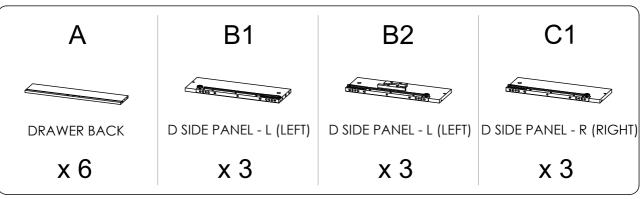


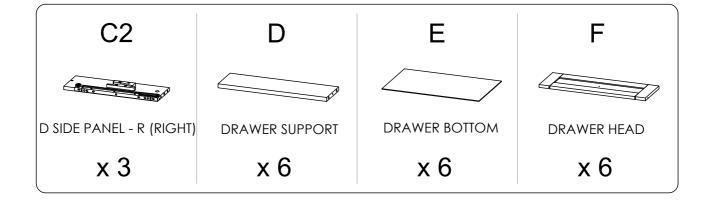


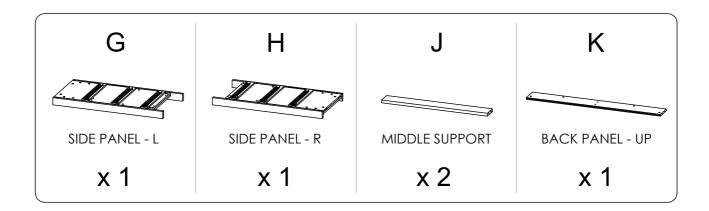


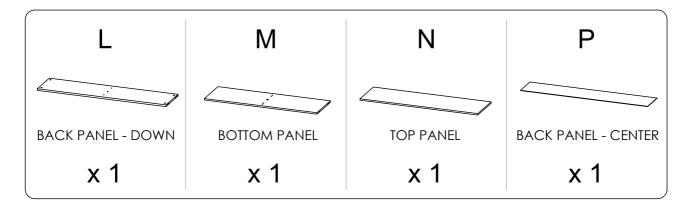


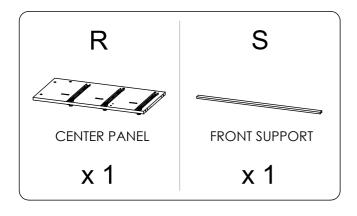


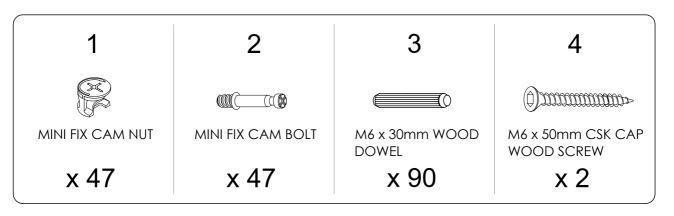


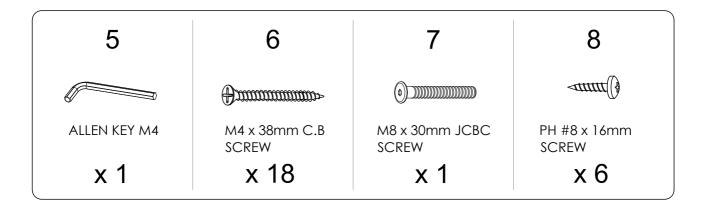

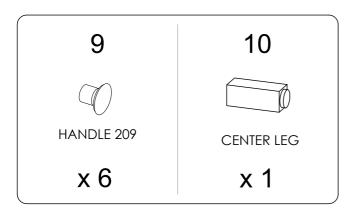


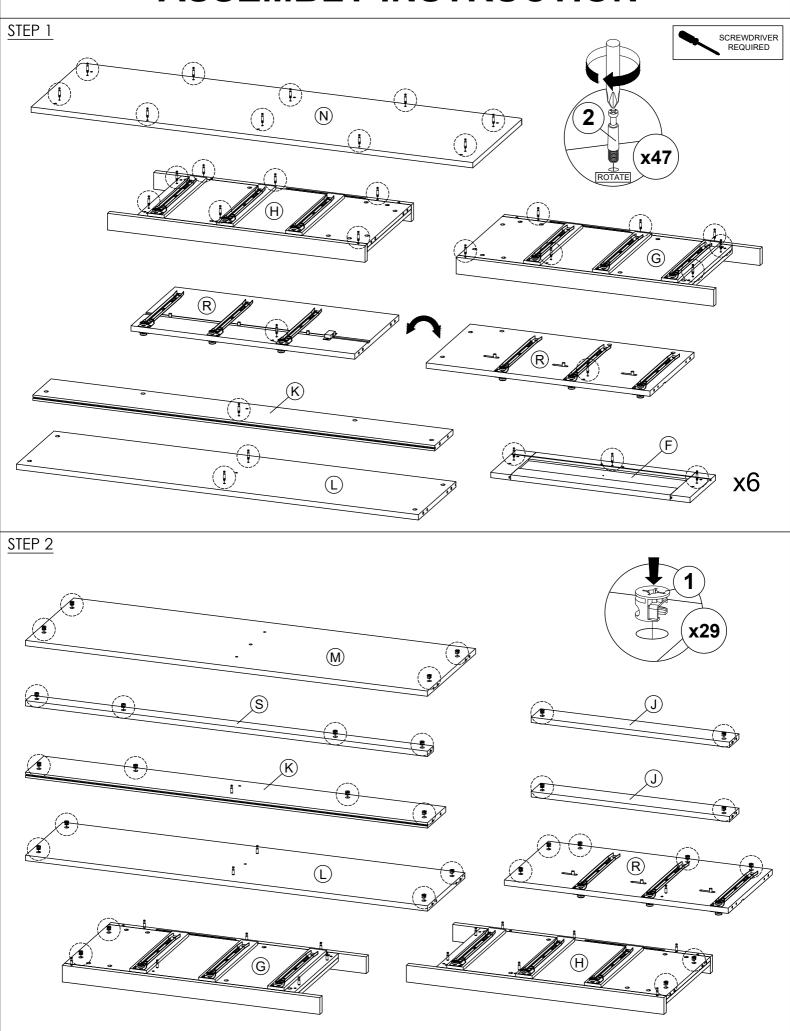


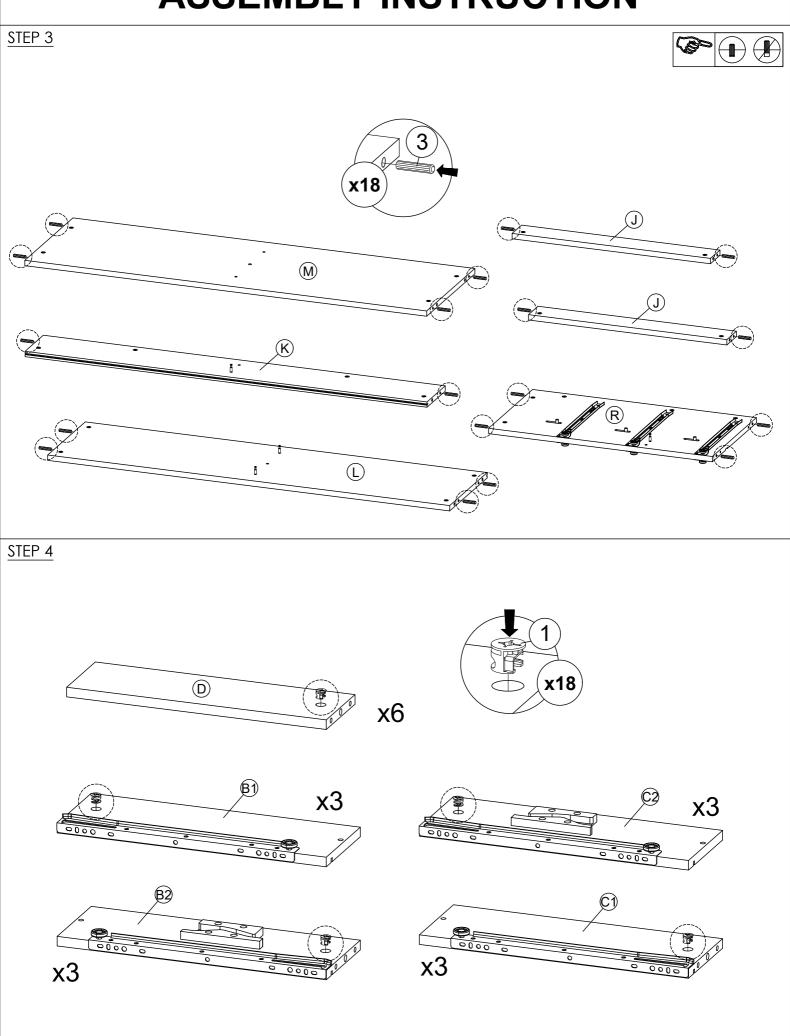


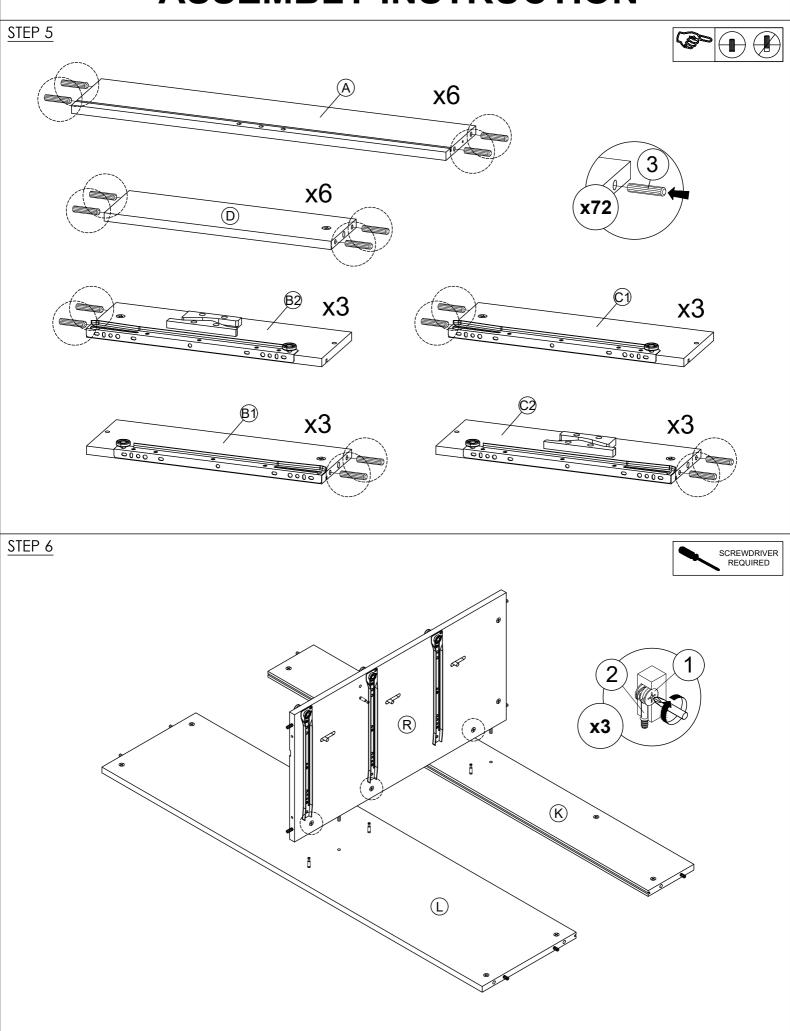



STEP 7

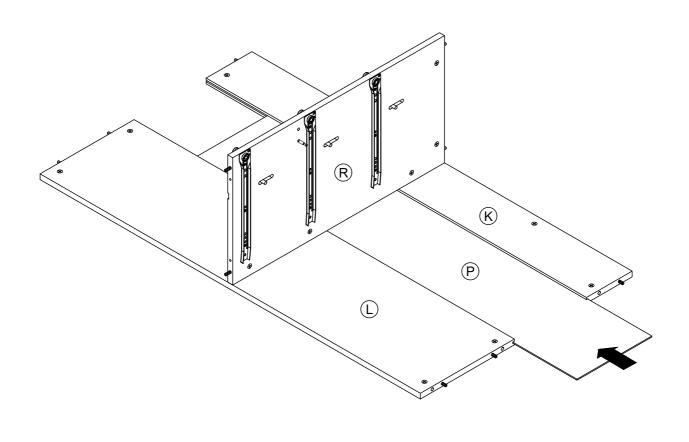


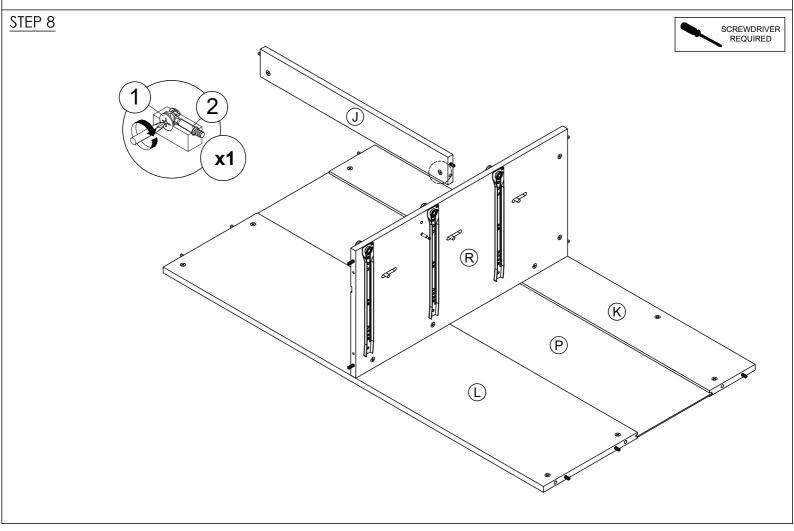


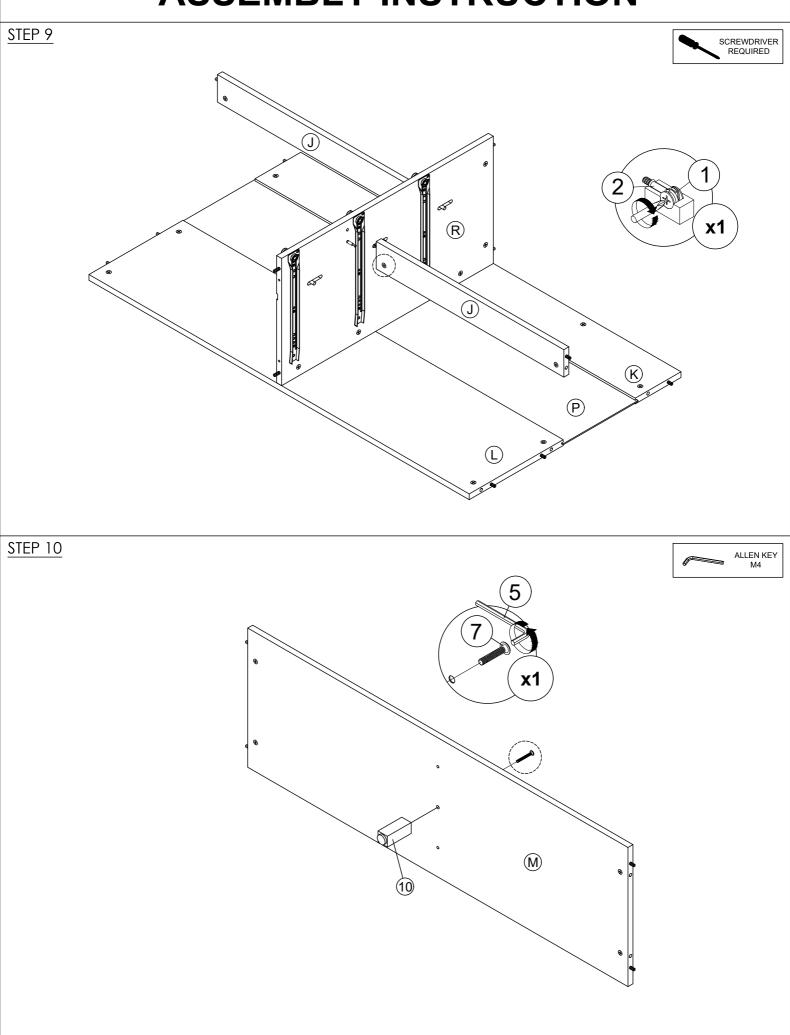

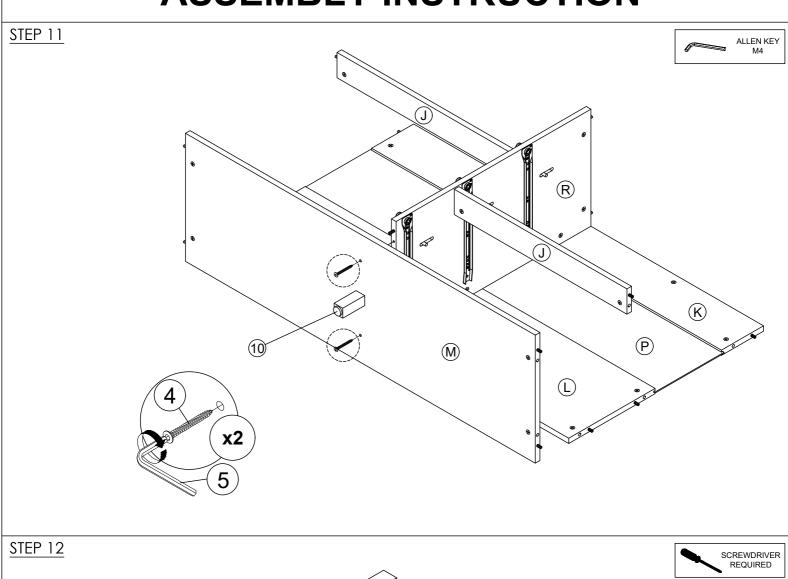

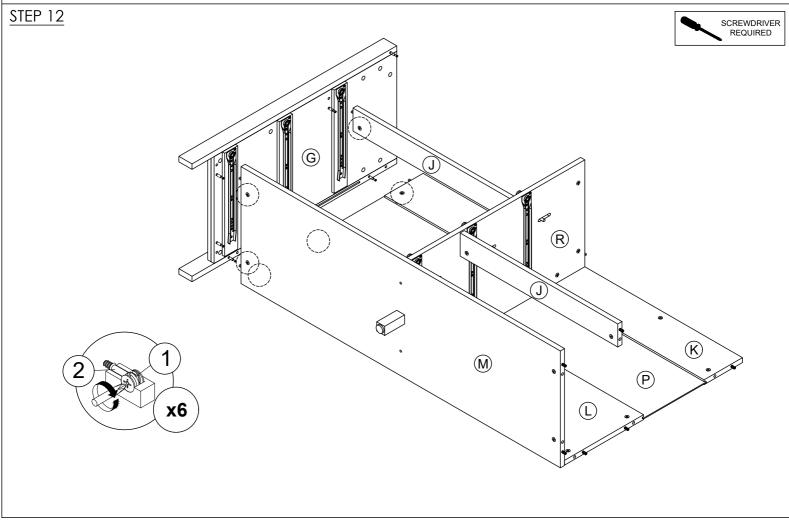


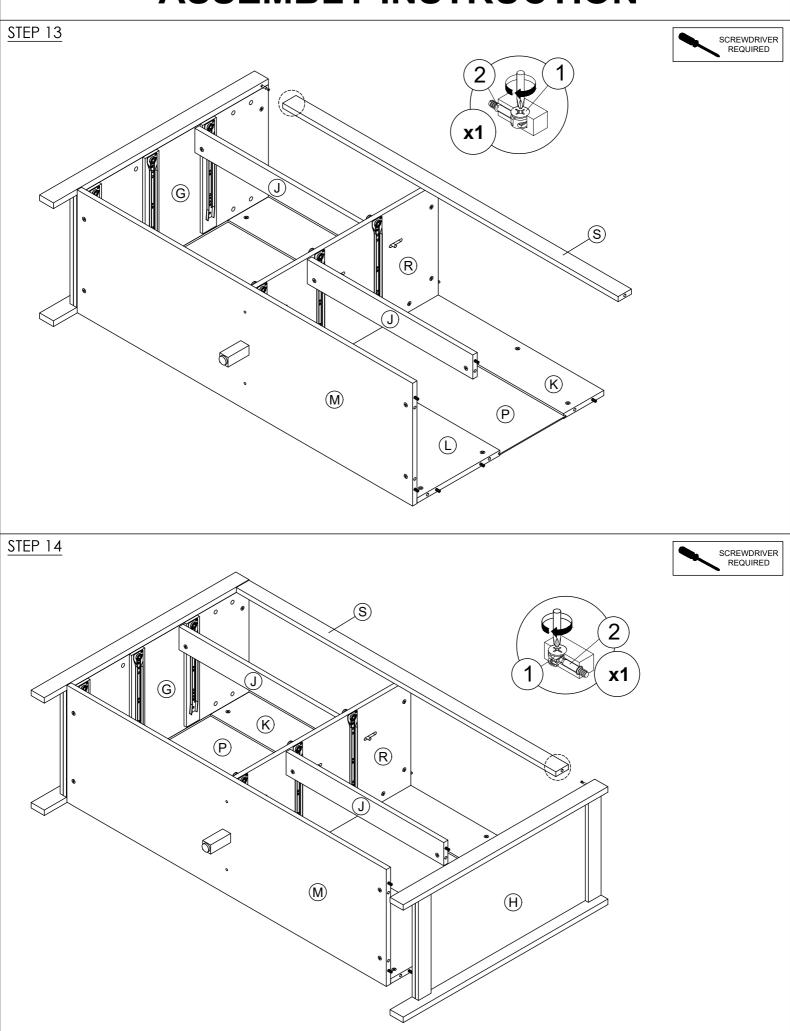

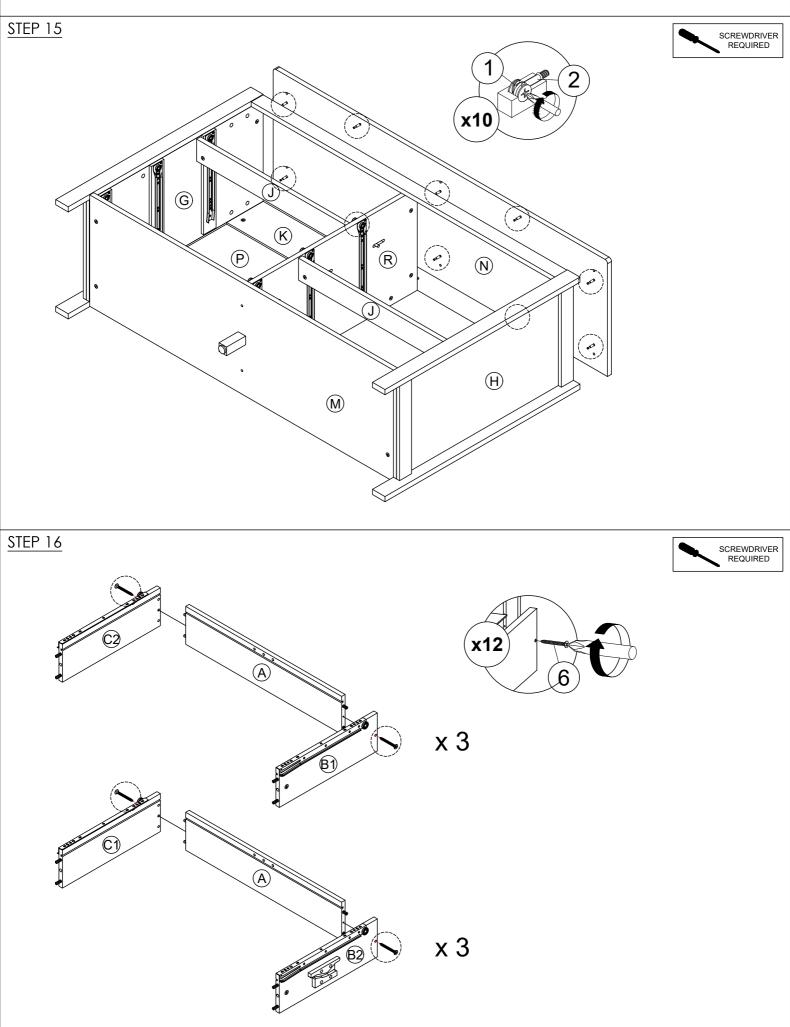








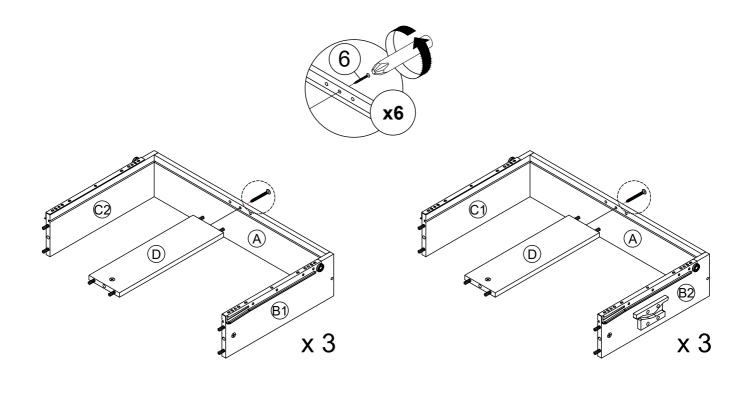



<u>STEP 18</u>

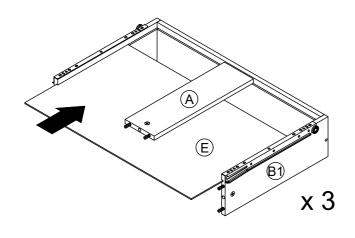

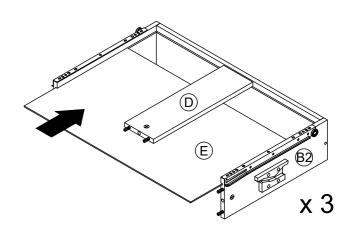

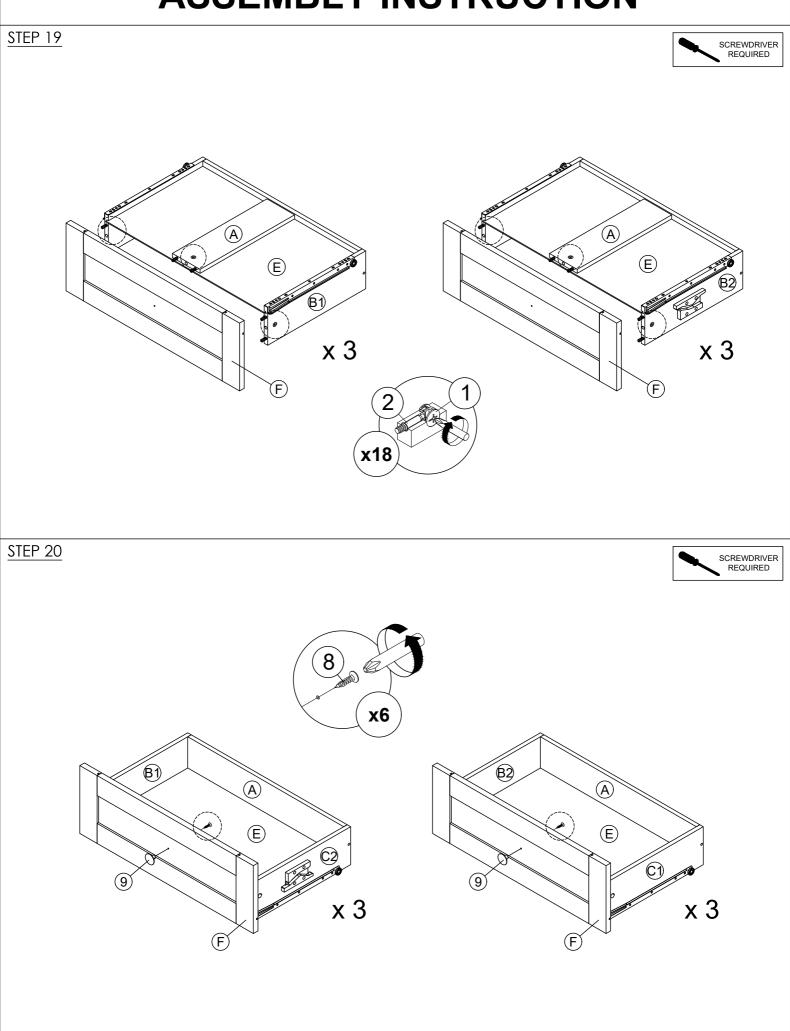

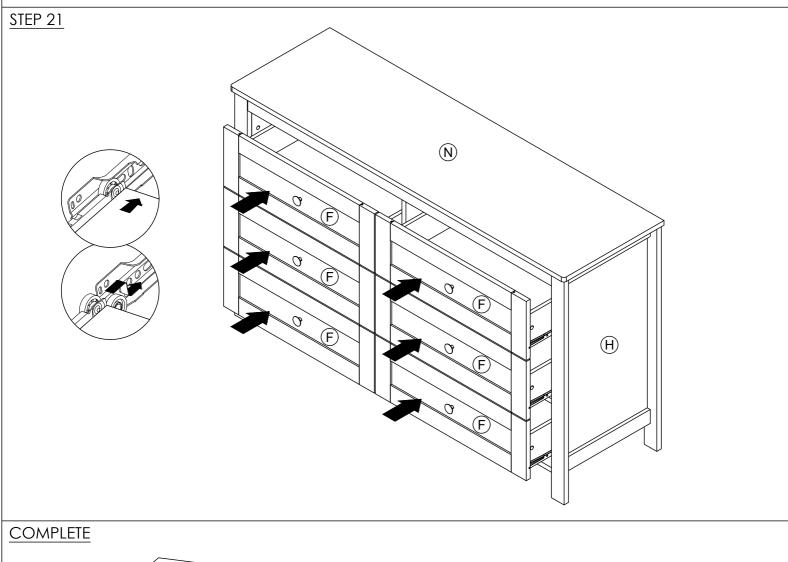

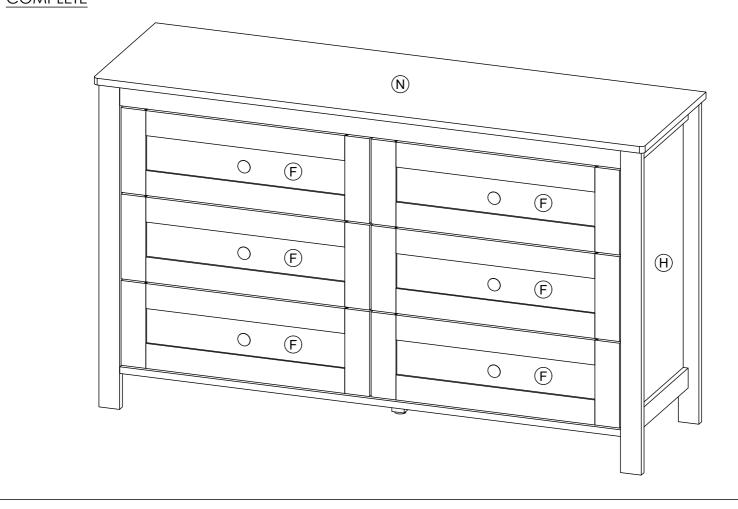

Removing The Drawers

- 1. Remove Drawer
- 2. Reset the interlocking bar by sliding the bar downward past the detent ball
- 3. Remove the remaining drawers by repeating Step 1 & 2

