



Quick Start Guide

快速操作指南

F-06A

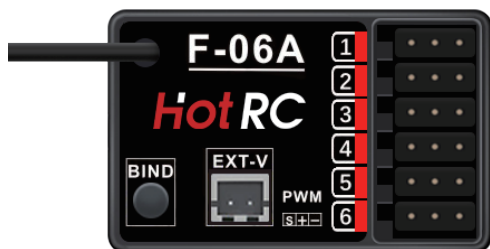

连接示意图/Connection Diagram

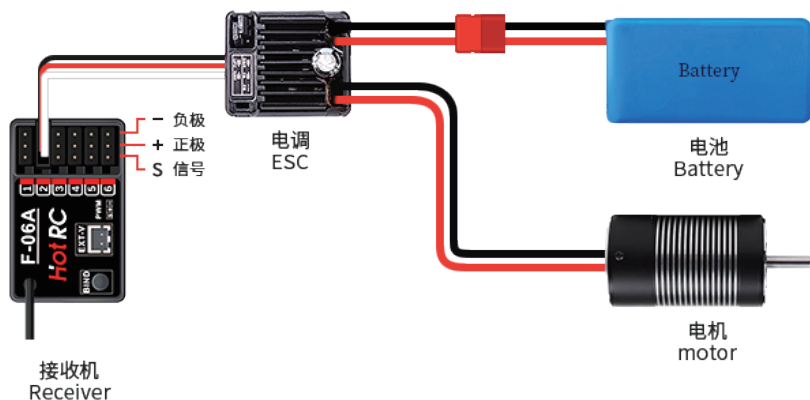

规格参数/Specifications

产品型号 Product Model	F-06A	通道数量 Number of channels	6
适用类型 Applicable types	车/船/飞机/坦克 Car/Ship/Plane/Tank	适用产品 Applicable Products	HOTRC全系遥控器 Suitable for hotrc full series transmitters
无线频率 Wireless frequency	2.4GHz	信号协议 Signal protocol	PWM
工作电流 Working current	35mA	输入电压 Input voltage	DC 4V-9V
端子间距 Plug spacing	zh 2.54mm	回传信息 Feedback	信号/电压(300m) Signal/Voltage
接收距离 Receiving distance	300-800m*	陀螺仪 gyroscope	无 no
产品尺寸 Size	32*19*13mm	产品重量 Weight	7.4g

注：遥控的距离仅供参考、实际使用情况会根据不同的环境会有差别。

Note: The remote control distance is for reference only, and the actual usage will vary depending on the environment.

对码步骤/Matching steps

非彩屏遥控器与接收机对码步骤；

适配型号：（CT-6A、DS600、CT-6C、CT-6S）

- | | |
|--------------------|--------------|
| A. 先将接收机通电； | 【接收机：绿灯慢闪状态】 |
| B. 短按一下接收机【BING】键； | 【接收机：绿灯快闪状态】 |
| C. 再将遥控器电源打开。 | 【接收机：绿灯常亮状态】 |

彩屏遥控器对码步骤；

适配型号：（HT-8A、HT-10A、HT-12A、CT-8B、CT-10B、CT-8A、CT-10A、CT-16、DS650、DS800、DS850）

- | | |
|--------------------|--------------|
| A. 先将接收机通电； | 【接收机：绿灯慢闪状态】 |
| B. 短按一下接收机【BING】键； | 【接收机：绿灯快闪状态】 |
| C. 遥控器界面进入对码设置。 | 【接收机：绿灯常亮状态】 |

※ 接收机灯状态： 【慢闪表示接收机无信号】
 【快闪表示进入对频状态】
 【常亮表示发射与接收连接状态】

Pairing Steps for Non-Color Screen Remote Controls and Receivers

Compatible Models: (CT-6A, DS600, CT-6C, CT-6S)

- A. First, power on the receiver;
- B. Briefly press the [BING] button on the receiver;
- C. Then turn on the remote control.

Pairing Steps for Color Screen Remote Controls

Compatible Models: (HT-8A, HT-10A, HT-12A, CT-8B, CT-10B, CT-8A, CT-10A, CT-16, DS650, DS800, DS850)

- A. First, power on the receiver;
- B. Briefly press the [BING] button on the receiver;
- C. Access the pairing settings on the remote control interface.

※ Receiver Light Status:

- 【Slow flashing indicates the receiver has no signal】
- 【Fast flashing indicates entry into the frequency pairing mode】
- 【Steady on indicates the transmitter and receiver are connected】

注意事项/Precautions

1. 标配接收机出厂未做防水处理、使用过程请注意防水!
 2. 接收机的天线需要特别防护、防止折断、安装位置需要注意磁场干扰!
 3. 接收机输入电压请勿超过9V、请使用稳定电源输入!
 4. 信号塔基站/磁场环境会对接收机的信号干扰影响、使用过程请注意!
 5. 数字舵机模式输出频率默认为: 330Hz; 脉冲宽度: 500-2500;
 6. 模拟舵机模式输出频率默认为: 50Hz; 脉冲宽度: 1000-2000;
 7. HOTRC品牌的接收机型号众多也可根据需求进行选配。
-
1. The receiver has not been waterproofed at the factory, please pay attention to waterproofing!
 2. The antenna of the receiver needs special protection, and the installation position should pay attention to magnetic field interference!
 3. The input voltage of the receiver should not exceed 9V, use a stable voltage input!
 4. Signal tower/magnetic field environment can interfere with the signal of the receiver!
 5. The default output frequency of the digital servo mode is 330Hz; Pulse width: 500-2500;
 6. The default output frequency of the simulating servo mode is 50Hz; Pulse width: 1000-2000;
 7. HOTRC brand receivers come in a wide range of models and can also be selected according to needs.