

BOILER RULES DIAGRAM

ESP_Boiler_Controller_01.02

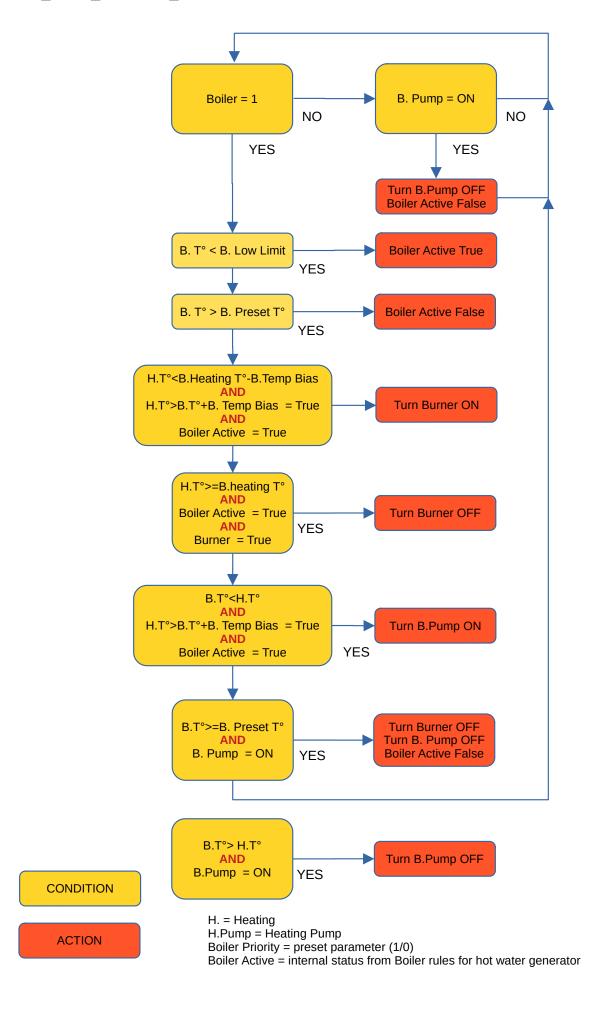

HEATING RULES DIAGRAM

ESP_Boiler_Controller_01.02

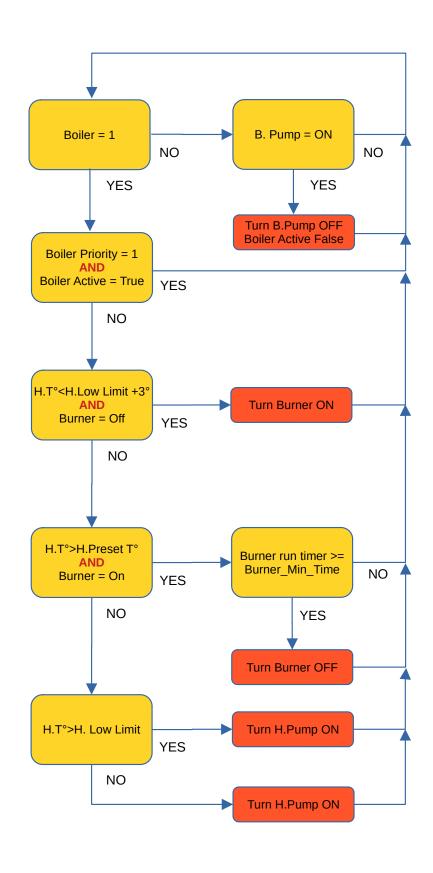

CONDITION

ACTION

H. = Heating H.Pump = Heating Pump Boiler Priority = preset parameter (1/0) Boiler Active = internal status from Boiler rules for hot water generator