

Multi-User Mode is enabled from the GUI as well as adding/removing users:

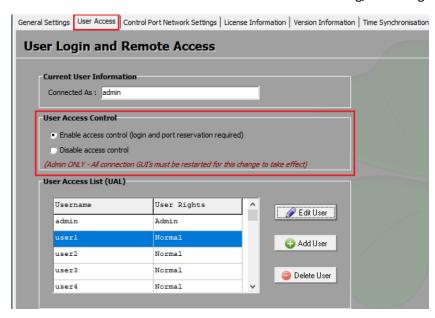

The list of users can be assigned to specific ports:

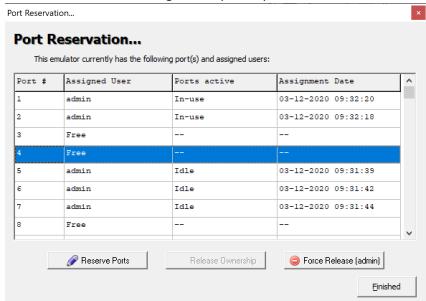

Note: Port Reservation is only accessible thru the GUI.

When Multi-User Mode is enabled, REST API command has the option of passing a "userToken", which is the user account name. For example, using user: "user1", a REST command would be constructed as follows:

http://<SNE IP Address>/api/maps/%7B894C30C9-BE6C-4FA9-8772-BFC5233FCACF%7D/start?userToken=user1

For more information on the REST API commands for the SNE. See SNE Swagger site:

http://<SNE IP Address>/swagger/index.html

Please check connectivity for each port reserved before running the API commands.

Verify each port link status reports: "Up".