
MRS. SPOCK – VERSION – GERMANY

TamaPoke

MANUAL

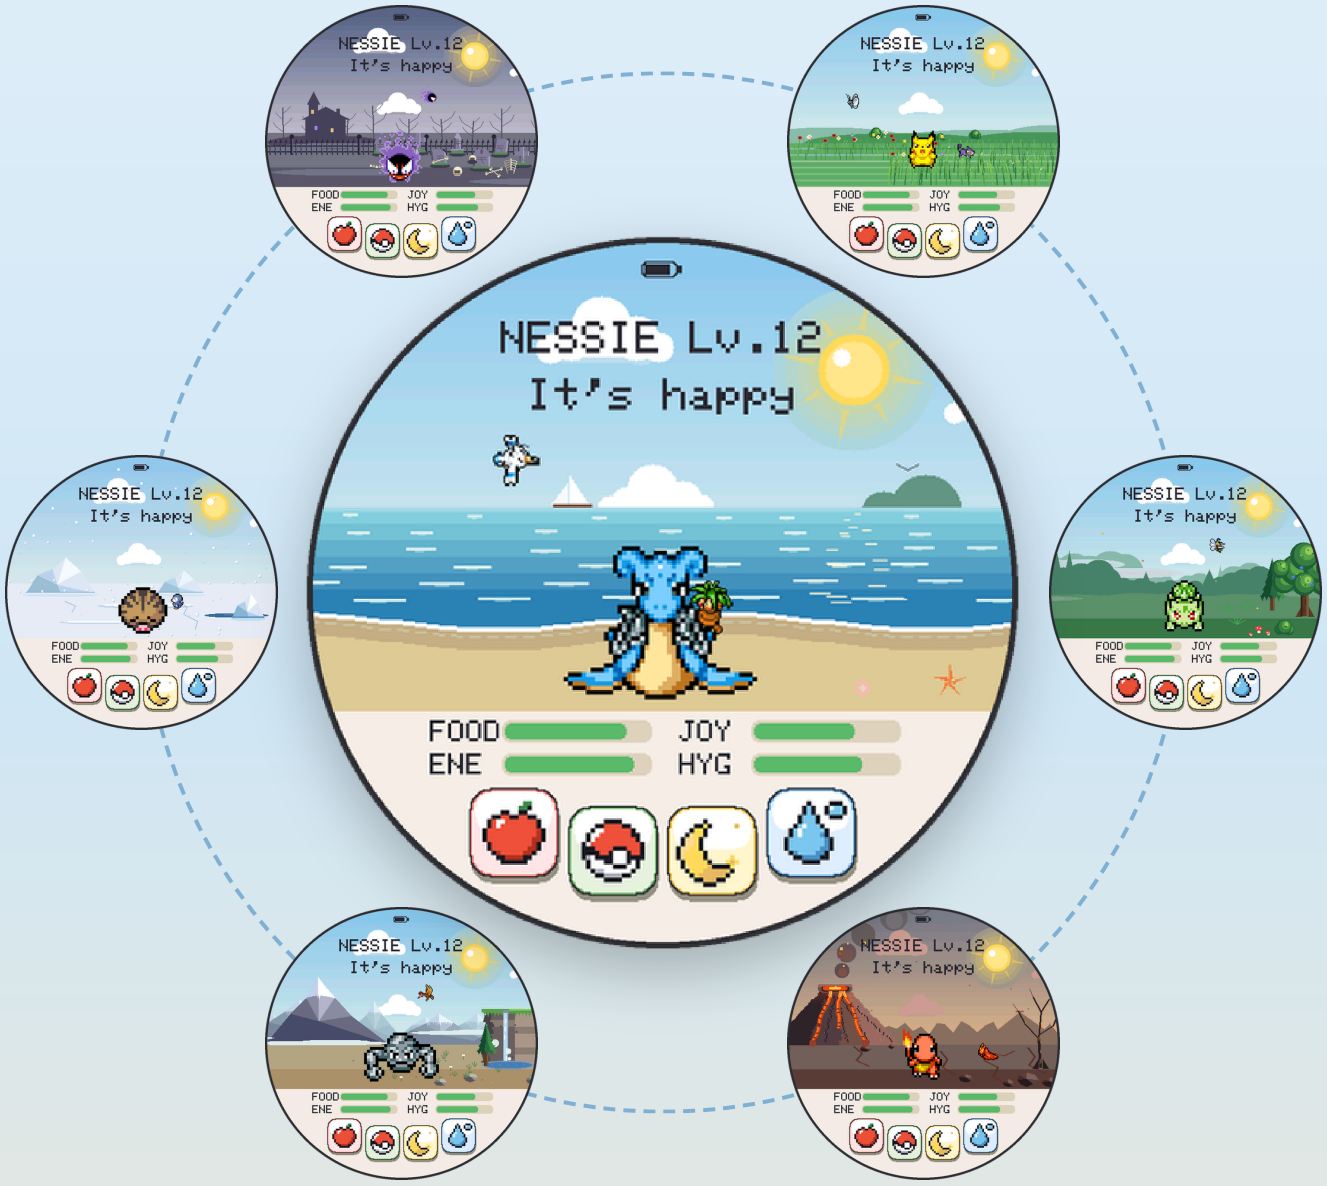


Firmware 6.65

TamaPoke Mrs. Spock


Manual · Mrs. Spock – Version – Germany · Firmware 6.65

1 · Switch on and start

- Press the **PWR** button. On the very first start, tap a starter.
- An egg appears on the screen: **tap it about 15 times** and it hatches.

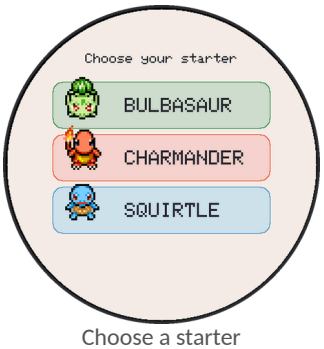

Choose a starter

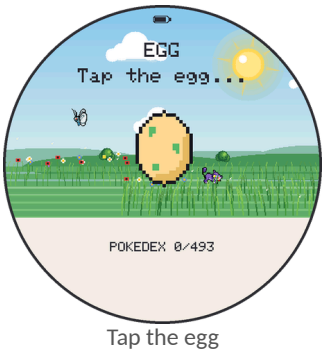

Tap the egg

2 · Everything starts at the main screen




▲ Swipe up
Status pages



◀ Swipe left
Pokédex



Main screen

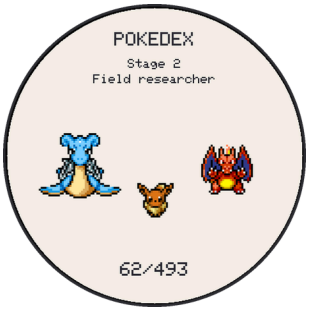

Swipe right ▶
Favourites title page



▼ Swipe down
Clock and settings

- **Tap the Pokémon**: pet it.
- **Hold the Pokémon for 3 seconds**: "release?" with YES / NO.
- Any swipe takes you back to the main screen.

3 · Care: the four buttons at the bottom

- **Food**: a choice appears (berries, candy), tap one.
- **Play**: ball game.
- **Light**: put to bed / wake up / nap.
- **Bath**: removes the droppings.



Main screen



Food choice




Hold 3 s

4 · Open the settings


- On the main screen **swipe down**: the clock appears.
- **Hold a finger on the upper half for 2 seconds**: the settings open.
- **HOUR / MIN** with − and +, **SOUND ON/OFF**, **Look A/B** (appearance), **language**; **OK** saves, a swipe cancels.
- **Hold the lower half for 2 seconds**: set the weekday with the arrows, **OK** saves.
- In the clock swipe left/right: **brightness** (battery operation only).
- **Hold to delete** (2 s): reset everything, then tap the numbers 1–6 in order.



Clock

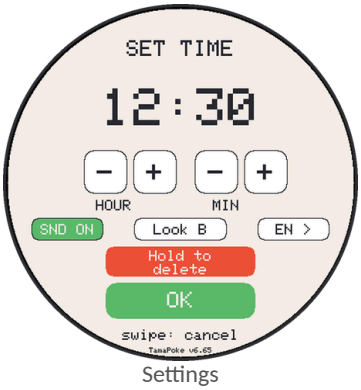

Settings

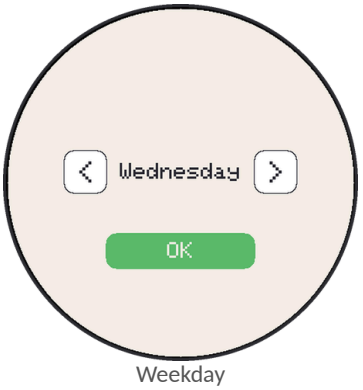

Weekday

5 · Change the name

- **Swipe up**: first status page (profile).
- **Tap the name at the top**: the keyboard opens.
- Tap letters, **<--** deletes, **OK** saves. “tap to go back” at the bottom cancels.
- Maximum 11 characters. In German UE, AE, OE become Ü, Ä, Ö.



Profile: tap the name



Keyboard

6 · Status pages (swipe up)


Swipe left/right to page through the five pages. A tap or a swipe up/down closes them.



1 Profile




2 Battle

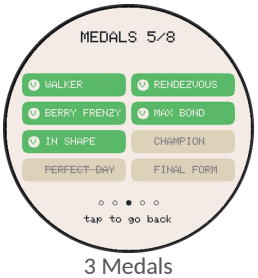

3 Medals



4 Progress

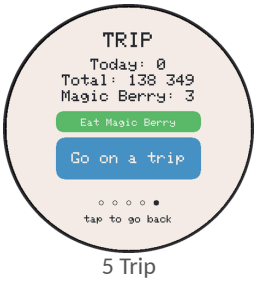

5 Trip

7 · Play, train, battle


- **Ball game** (button “Play”): move your finger left/right to move the Pokémon, tap at the bottom to launch the ball. Tap the header at the top to quit.
- **Training** (status page 2, button TRAINING): tap the bag as fast as you can for 10 seconds. Tap the top to quit.
- **Battle** (status page 2, button BATTLE): runs by itself.
- All only with an awake Pokémon and during the day.



Ball game



Training

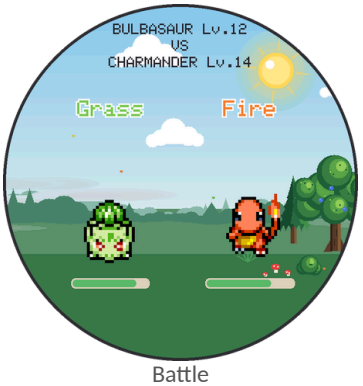


Battle

8 · Trip

- Status page 5, big button **“Go on a trip”**.
- **Upper half**: together with your Pokémon, the device counts your steps (carry it with you).
- **Lower half**: send the Pokémon off alone, it returns after 30–60 minutes.
- To end: tap the lower button, then tap again within 3 seconds.
- **“Eat Magic Berry”** (status page 5): choose the value you want.



Choice

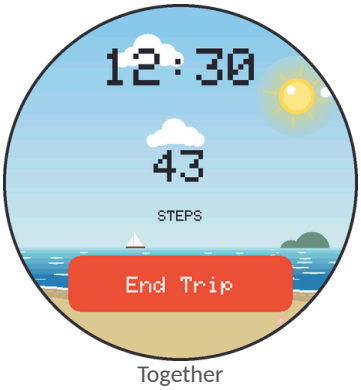

Together



Alone

9 · Pokémon search and meeting

- Status page 2, **Bluetooth button** in the middle. Put two devices side by side and tap the button on **both**.
- “Searching for Pokémon…” runs for 10 seconds at most. On success the Pokémon you met appears with a countdown.
- Then comes the **visit** (about 3 minutes): one Pokémon visits the other. Input is locked, only the swipe to the clock works. Do not switch the device off.
- Only with an awake Pokémon and during the day.



Search



Meeting



Visit

10 · Pokédex

- **Swipe left**: grid (4 × 4 per page), **swipe right**: title page with your favourites.
- In the grid: swipe left/right to page, tap the region name at the top to jump to the next region, tap at the bottom to leave the Pokédex.
- **Tap a discovered Pokémon**: “Profile & Medals”. **Tap the picture**: details (type, encounters, win rate …). Tap again: back to the picture.
- **Hold the picture for 2 seconds**: the “Choose slot” page opens, tap favourite slot 1, 2 or 3.




Grid




Profile & Medals



Details

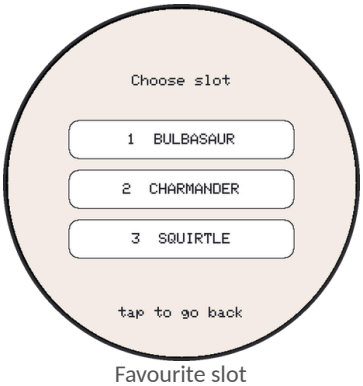

Favourite slot

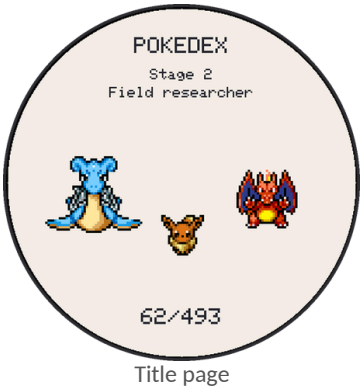

Title page

11 · Landscapes (View B)

The landscape depends on the Pokémon and shows day and night according to the clock. With “View A/B” in the settings you switch between the classic (A) and the modern look (B). The pictures show B.



Water / beach



Meadow



Forest



Volcano



Mountains




Snow



Graveyard

12 · Evolve

- When your Pokémon can evolve, a signal sounds and a red **“EVOLVE”** button appears on the main screen.
- Tap the button: “Evolve?” – then tap **EVOLVE** or **Keep form**.
- After “Keep form” the button does not come back by itself. Later: open **status page 4 (Progress)** and tap the green **“Evolve now!”** button.
- As long as the red button is there, other input is locked. Only the swipe to the clock works.

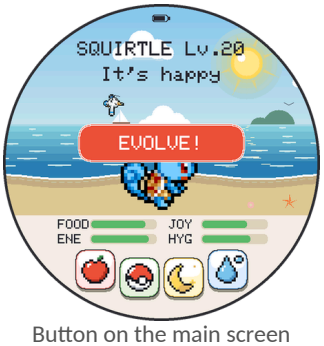

Button on the main screen



Status page 4: evolve later

13 · Other

- **PWR** short: display on/off. **PWR** about 4 seconds: switch the device off.
- Dark screen (after 90 s without touch): a tap wakes it.
- **Automatic switch-off**: after 5 minutes without touch the device switches itself off. Switch on with **PWR**. Exceptions: it stays on during a step-counter trip; with a USB cable and the clock view open it takes 10 minutes.