Ticco Ross

UNIT-808

Owner’s Manual

UNIT808

Ticco Ross

Operation Manual

Important Notes

- UNIT808 keeps everything you write (rhythms, tracks, knobs and switches) inside your DAW project or Live set. Save your project to keep it.
- Tempo and transport always follow your DAW.
- This manual describes version 0.2.0.

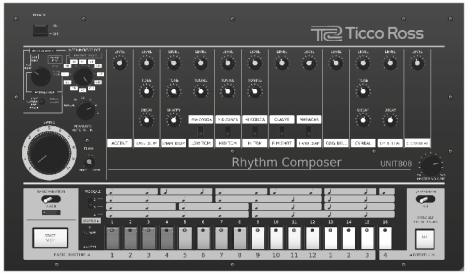


TABLE OF CONTENTS

INTRODUCTION **4**

BASIC COURSE **5**

Installation 5

Front Panel Layout 6

Writing Rhythm Patterns 7

Playing Rhythm Patterns 9

Intro / Fill In 10

Composing and Playing Rhythm Tracks 11

ADVANCED COURSE **12**

Control Descriptions 12

Step Number, 2nd Part, Pattern Clear 13

Pre-Scale, Swing and Flam 14

Sound Controls 14

Mute and Solo, Selecting with the Name Windows 15

Playing from MIDI 16

Running in a DAW, Saving, MIDI Mapping 16

How Each Voice Is Modelled 17

About Window, Window Size, Troubleshooting 18

Specifications 19

INTRODUCTION

The Ticco Ross UNIT808 is a computer-controlled Rhythm Composer for your computer, modelled on the 1981 classic. Its sounds are synthesized, not sampled: the same sound engine as the Ticco Ross UNIT 808 Max for Live device, built from analog-style circuits for every instrument.

Eleven sound channels play sixteen sounds: Bass Drum, Snare Drum, Low, Mid and Hi Tom or Conga, Rim Shot or Claves, Hand Clap or Maracas, Cow Bell, Cymbal, Open Hi-Hat and Closed Hi-Hat, plus ACcent. Each has its own LEVEL control, and most have TONE, TUNING, SNAPPY or DECAY controls.

In this manual each bar of music is called a “Rhythm Pattern”.

UNIT808 memorizes 12 Basic Rhythms and 4 Intro / Fill In patterns. Every one has two variations, A and B, and each variation has a 1st Part and an optional 2nd Part of up to 16 steps, so a rhythm can be up to 32 steps long. Twelve Rhythm Tracks chain the rhythms into songs.

The BASIC-VARIATION lever plays A, B or A then B; TAP plays a fill on the next bar, and MEASURES AUTO FILL IN plays one every 2, 4, 8, 12 or 16 bars.

UNIT808 always plays in time with your DAW: it starts when the song plays and follows the song’s tempo. The SWING control takes the place of the tempo knob, and FLAM sets the spacing of flammed hits.

It runs as an AU, VST3 or LV2 plug-in, or as a standalone application, on macOS, Windows and Linux.

This owner’s manual has two courses consisting of a Basic Course and an Advanced Course.

Installation

macOS

1. Download **UNIT808-0.2.0-macOS.pkg** and open it.
2. The installer is not signed: macOS blocks it the first time. Open System Settings → Privacy & Security and click **Open Anyway**.
3. Click **Customize** to skip the AU, the VST3 or the application if you like.

Installed to /Library/Audio/Plug-Ins/Components, /Library/Audio/Plug-Ins/VST3 and /Applications.

Windows

1. Run **UNIT808-0.2.0-Windows-Setup.exe**.
2. If SmartScreen appears, click **More info** → **Run anyway**.

The VST3 goes to C:\Program Files\Common Files\VST3, the application to the Start menu under Ticco Ross.

Linux

1. Unpack the **.tar.gz** and run **./install.sh**.

VST3 to ~/.vst3, LV2 to ~/.lv2, the application to ~/.local/bin/UNIT808.

Loading it in Ableton Live

1. Settings → Plug-Ins: turn on **Use Audio Units v2** (Mac) or **VST3**, then click **Rescan**.
2. In the browser, open Plug-Ins → Ticco Ross → **UNIT808** and drag it onto a MIDI track.
3. Press Play in Live. UNIT808 plays in time with the song.

Front Panel Layout

FRONT PANEL LAYOUT



Ⓒ **INSTRUMENT-SELECT** / RHYTHM TRACK

Ⓗ **LEVEL** Controls

Ⓐ **POWER** Switch

Ⓑ **MODE** Selector

Ⓓ **CLEAR** Button

Ⓔ **MEASURES AUTO FILL IN**

Ⓕ **SWING** Control

Ⓖ **FLAM** Control

Ⓜ **BASIC-VARIATION** Lever

Ⓝ Variation Indicators A / B

Ⓞ **START/STOP** Button

Ⓛ **TICCO ROSS** Logo (About)

Ⓘ **TONE · TUNING · SNAPPY · DECAY** Contı

Ⓙ **Sound Selector** Switches

Ⓚ **MASTER VOLUME** Control

Ⓢ **I/F-VARIATION** Lever

Ⓣ **TAP** (Intro Set / Fill In Trigger)

Ⓟ **PRE-SCALE** Switch


Ⓡ **STEP** Keys

Ⓠ 1st / 2nd PART Indicators

Writing Rhythm Patterns

We will write the Rhythm Pattern shown in Fig. 1 into Basic Rhythm 1, variation A, 1st Part.

Fig. 1

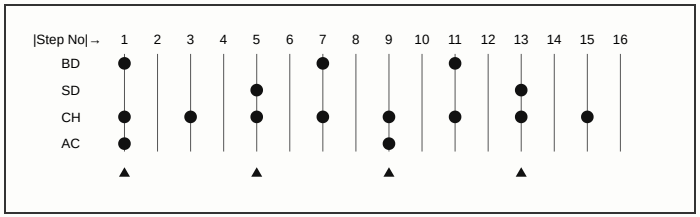

PROCEDURE

1. Load UNIT808 on a MIDI track (see INSTALLATION).
2. Set the MODE selector Ⓑ to MANUAL PLAY and press STEP key Ⓡ #1: Basic Rhythm 1 is chosen and its indicator lights.

   ** Click or drag towards any printed label around the MODE, INSTRUMENT-SELECT and AUTO FILL IN selectors to turn them there.*
3. Set the BASIC-VARIATION lever Ⓜ to A.
4. Set the MODE selector Ⓑ to 1st PART (PATTERN WRITE).
5. Turn INSTRUMENT-SELECT Ⓒ to BD (Bass Drum), or simply click the BASS DRUM name window on its channel.

   ** Every name window on the channels (ACCENT, BASS DRUM … CLS'D HIHAT, and LOW CONGA … MARACAS above) selects its instrument; the selected one has an orange frame.*

6. Press the STEP keys Ⓡ matching the dots in the score (Fig. 1).

   ** The indicators of the written steps light. Press a lit key again to erase the step.*

   ** To write many steps at once, press a key and drag across the others: every key you pass takes the same state as the first one.*

7. Repeat 5 – 6 for SD and CH. Then select AC (ACcent) and press keys #1 and #9.

   ** Every sound on an AC step plays at full level; the ACCENT control sets how much softer the other steps are.*

8. Press Play in your DAW. The playing step shows inverted, so you can follow it.

9. You can also write in real time: while the rhythm runs, press TAP Ⓣ on the beat. The selected instrument is written on the playing step.

10. To make a hit a **flam**, Option/Alt-click its STEP key: the step lights **blue**. Option/Alt-click again to make it a normal hit.

    ** Flams are per instrument: the snare can flam on a step while the bass drum on the same step does not. FLAM Ⓖ sets the spacing.*

** You have just written the Rhythm Pattern of Fig. 1.*

IMPORTANT NOTES

The BASIC-VARIATION lever chooses which variation you write: A, or B (AB writes A). The 2nd Part, the number of steps and clearing are described in the ADVANCED COURSE.

Playing Rhythm Patterns

PROCEDURE

1. Set the MODE selector Ⓑ to MANUAL PLAY.
2. Press STEP keys Ⓡ #1 – #12 to choose Basic Rhythm 1 – 12.

   ** While the rhythm runs, the new rhythm waits for the end of the bar (its indicator blinks), then takes over.*
3. Choose the variation with the BASIC-VARIATION lever Ⓜ:

   A … variation A, AB … A then B, B … variation B

   ** The A and B indicators Ⓝ show the variation that is playing; the 1st/2nd PART indicators Ⓠ show the part.*
4. Press Play in your DAW. The running light follows the playing step.

Intro / Fill In

STEP keys #13 – #16 hold four Intro / Fill In patterns, written like any rhythm (choose the key in MANUAL PLAY, then write it in 1st PART).

PROCEDURE

1. In MANUAL PLAY, press STEP key Ⓡ #13 – #16 to choose the fill.
2. Choose its variation with the I/F-VARIATION lever Ⓢ.
3. While the rhythm plays, press TAP Ⓣ (INTRO SET / FILL IN TRIGGER). The fill plays as the next bar, then the rhythm continues.

   * *The fill's indicator blinks while it waits.*

AUTO FILL IN

Turn MEASURES AUTO FILL IN Ⓔ to 16, 12, 8, 4 or 2: the fill plays automatically as the last bar of every 16, 12, 8, 4 or 2 bars. MANUAL turns it off.

Composing and Playing Rhythm Tracks

A Rhythm Track chains up to 64 rhythms into a song. There are 12 tracks: in COMPOSE and PLAY, INSTRUMENT-SELECT Ⓒ chooses the track (the orange RHYTHM TRACK numbers 1 – 12).

COMPOSE

1. Set MODE Ⓑ to COMPOSE and INSTRUMENT-SELECT Ⓒ to the track number.
2. Press CLEAR Ⓓ (TRACK CLEAR) to start an empty track.
3. Press a STEP key Ⓡ to choose a rhythm, set BASIC-VARIATION Ⓜ, and press TAP Ⓣ to add it as the next bar.
4. Repeat 3 for each bar of the song.

PLAY

1. Set MODE Ⓑ to PLAY and INSTRUMENT-SELECT Ⓒ to the track.
2. Press Play in your DAW. The rhythms play in order and the track starts again at the end.

   ** An empty track plays the rhythm chosen with the STEP keys, as in MANUAL PLAY.*

Control Descriptions

Ⓐ **POWER Switch**
Off silences UNIT808 and darkens the indicators. Your rhythms stay in memory.

Ⓑ **MODE Selector**
PATTERN CLEAR, 1st PART and 2nd PART (pattern write), MANUAL PLAY, PLAY and COMPOSE.

Ⓒ **INSTRUMENT-SELECT**
The instrument the STEP keys write (AC, BD, SD, LT, MT, HT, RS, CP, CB, CY, OH, CH). In PLAY and COMPOSE: the Rhythm Track 1 – 12. Its printed labels also mute and solo (see MUTE AND SOLO).

Ⓓ **CLEAR Button**
PATTERN CLEAR mode: clears the rhythm. COMPOSE: clears the track (TRACK CLEAR). 1st/2nd PART: sets the step number (see ADVANCED COURSE).

Ⓔ **MEASURES AUTO FILL IN**
MANUAL (off), 16, 12, 8, 4 or 2 bars.

Ⓕ **SWING Control**
Delays every second step: 0 = straight, 10 = heavy shuffle (the off-beat at 75 % of the pair). Tempo always follows your DAW.

Ⓖ **FLAM Control**
The time between the soft grace note and the main hit of flammed steps: TIGHT (5 ms) to LOOSE (40 ms).

Ⓗ **LEVEL Controls**
The level of each sound channel, and ACCENT. Drag up or down; double-click returns a control to its default. The name window under each channel selects that instrument for writing.

Ⓘ **TONE, TUNING, SNAPPY, DECAY**
Bass Drum tone and decay, Snare Drum tone and snappy, tom/conga tuning, Cymbal tone and decay, Open Hi-Hat decay.

Ⓙ **Sound Selector Switches**
Low/Mid/Hi Tom or Conga, Rim Shot or Claves, Hand Clap or Maracas. Up = the upper label.

Ⓚ **MASTER VOLUME**
The output level.

Ⓛ **Ticco Ross Logo**
Opens the About window.

Ⓜ **BASIC-VARIATION Lever**
A, AB (A then B) or B. When writing, A or B chooses the variation written.

Ⓝ **Variation Indicators**
Show the playing variation.

Ⓞ **START/STOP**
Shows your DAW's transport. In the standalone application it starts and stops; right-click it for the tempo.

Ⓟ **PRE-SCALE Switch**
The step length: 1 = 16th-note triplets, 2 = 32nd notes, 3 = 16th notes (normal), 4 = 8th-note triplets.

Ⓠ **1st / 2nd PART Indicators**
The part being written or played.

Ⓡ **STEP Keys**
Write steps (1st/2nd PART), choose rhythms 1 – 12 and fills 13 – 16 (MANUAL PLAY, PLAY, PATTERN CLEAR), choose the rhythm to add (COMPOSE).

Ⓢ **I/F-VARIATION Lever**
The variation of the intro / fill.

Ⓣ **TAP**
Fill in trigger (playing), tap-writing (1st/2nd PART), add the rhythm to the track (COMPOSE).

Step Number

Each part has 1 to 16 steps. In 1st or 2nd PART, press CLEAR Ⓓ (its lamp lights), then the STEP key of the last step. Shift-click a STEP key does the same. The steps after the last one stay dark.

2nd Part

Set MODE Ⓑ to 2nd PART and write as in 1st PART. As soon as the 2nd Part has a step, it is played after the 1st Part, giving a rhythm of up to 32 steps. Clear it (Alt-click CLEAR per instrument) and set its step number as you like; a 2nd Part that was never written is not played.

Clearing

- **A whole rhythm:** set MODE to PATTERN CLEAR, press the rhythm's STEP key, set BASIC-VARIATION (A, B, or AB for both) and press CLEAR Ⓓ.
- **One instrument of a part:** in 1st or 2nd PART select the instrument and Option/Alt-click CLEAR.
- **A track:** in COMPOSE press CLEAR (TRACK CLEAR).

** There is no undo; save your project first.*

Pre-Scale, Swing and Flam

PRE-SCALE Ⓟ sets the length of a step:

POSITION	STEP	16 STEPS =
1	16th-note triplet	2 ⅔ beats
2	32nd note	2 beats
3	16th note (normal)	one 4/4 bar
4	8th-note triplet	5 ⅓ beats

SWING Ⓕ delays every second step towards the next: at 0 the steps are even, at 10 the off-beat step comes 75 % of the way through the pair. Rhythms stay lined up with the bars of your song.

FLAM

A flammed step plays a soft grace note on the step and the main hit just after it, like a drummer's flam. Option/Alt-click a STEP key in 1st or 2nd PART to flam the selected instrument on that step (it lights blue). FLAM Ⓖ sets the gap, from TIGHT (5 ms) to LOOSE (40 ms).

Sound Controls

CHANNEL	CONTROLS	SWITCH
Bass Drum	Level, Tone, Decay	
Snare Drum	Level, Tone, Snappy	
Low / Mid / Hi	Level, Tuning	Tom or Conga
Rim Shot	Level	Rim Shot or Claves
Hand Clap	Level	Hand Clap or Maracas
Cow Bell	Level	
Cymbal	Level, Tone, Decay	
Open Hi-Hat	Level, Decay	
Closed Hi-Hat	Level	(a closed hi-hat cuts off the open one)

Mute and Solo

The printed labels around INSTRUMENT-SELECT Ⓒ (AC, BD, SD … CH) mute and solo the instruments, also while the rhythm plays:

- **Option/Alt-click** a label: mute that instrument. The label is dimmed.
- **Shift-click** a label: solo it. The label glows red. Several instruments can be soloed at once; then only they play.
- **Right-click** a label: a menu with Mute, Solo and Clear all mutes and solos.
- A plain click selects the instrument, as before.

** Muting AC plays the rhythm without accents. AC cannot be soloed.*

** Mutes and solos also apply to MIDI notes, are saved with your project and can be automated.*

Selecting with the Name Windows

Click a channel's name window (ACCENT, BASS DRUM, SNARE DRUM …, or LOW CONGA, CLAVES, MARACAS above) to select that instrument for writing, the same as turning INSTRUMENT-SELECT Ⓒ. The selected channel's window has an orange frame. Toms and congas share one row, so LOW TOM and LOW CONGA select the same instrument.

Playing from MIDI

MIDI notes play the sounds (General MIDI drum map). Velocity works like accent: with ACCENT at 0 every note plays at the same level, at 10 the level follows the velocity.

NOTE	SOUND
35, 36	Bass Drum
38, 40	Snare Drum
41, 43	Low Tom
45, 47	Mid Tom
48, 50	Hi Tom

NOTE	SOUND
37	Rim Shot
39	Hand Clap
56	Cow Bell
49, 51, 52, 55, 57, 59	Cymbal
42, 44 / 46	Closed / Open Hi-Hat

NOTE	SOUND
64	Low Conga
63	Mid Conga
62	Hi Conga
75	Claves
70	Maracas

* *Conga, claves and maracas notes play those sounds whatever the selector switches are set to.*

Running in a DAW

UNIT808 starts when your song plays and stops with it; START/STOP lights while it runs. It follows the song's tempo, and when you jump or loop it lines the rhythm up with the bar again. The standalone application has its own clock: press START/STOP, and right-click it to choose the tempo.

Saving and MIDI Mapping

Everything is saved with your project: rhythms, parts, step numbers, tracks, knobs, switches and levers. Every control is a plug-in parameter, so you can automate it and map it to a MIDI controller with your DAW's MIDI mapping (Ableton Live: press Cmd/Ctrl-M, click a control on the plug-in's device, move the hardware control).

How Each Voice Is Modelled

Every sound is synthesized while you play: no samples. The engine is the one in the UNIT 808 Max for Live device, built from the 808's circuit ideas.

- **Bass Drum:** a resonating filter (the 808's bridged-T network) struck by the trigger pulse. Its pitch starts high and drops in the first milliseconds for the punch, with a short click. TONE opens a low-pass filter, DECAY sets how long it rings.
- **Snare Drum:** two resonators (about 172 and 340 Hz) and high-passed noise. TONE sets the mix of the two resonators, SNAPPY the noise.
- **Toms:** a resonator whose pitch is higher while it is loud and slides down as it fades, with a little noise. **Congas** are higher, shorter and without noise.
- **Rim Shot:** two resonators (455 and 1667 Hz) through a very short gate. **Claves:** one high resonator (2.4 kHz).
- **Hand Clap:** filtered noise with three fast bursts and a reverb-like tail. **Maracas:** high-passed noise with a short envelope.
- **Cow Bell:** two square-wave oscillators (540 and 800 Hz) through a band-pass filter with a fast-then-slow decay.
- **Cymbal, Open and Closed Hi-Hat:** six square-wave oscillators that run all the time (205, 304, 370, 523, 540 and 800 Hz), split into frequency bands. CY TONE moves the bands; the cymbal mixes a short bright band and longer lower ones. A closed hi-hat cuts off the open one.
- **Accent:** accented steps play at full level; ACCENT sets how much softer the other steps are.

About Window

Click the Ticco Ross logo for the About window: version, build date, the format and host it runs in, the contact address, the Ticco Ross store, and a button that opens this manual. Click anywhere to close it.

Window Size

Drag the bottom-right corner to resize the window, from 40 % to 100 % of the full panel size.

Troubleshooting

PROBLEM	REMEDY
macOS won't open the installer	System Settings → Privacy & Security → Open Anyway.
UNIT808 is not in Live's browser	Settings → Plug-Ins: turn on Audio Units v2 or VST3, then Rescan.
No sound	Check POWER and MASTER VOLUME; check that the song plays and the rhythm has steps; check that no instrument is muted (dimmed label) or another soloed (red label).
The STEP keys do not write	Writing works in 1st PART and 2nd PART. In the other modes the keys choose rhythms.
A rhythm change waits	While playing, a new rhythm starts at the next bar (its indicator blinks).
The wrong variation is written	Check the BASIC-VARIATION lever: A or B (AB writes A).
A track does not play	MODE must be PLAY, and INSTRUMENT-SELECT must point at the track number.

Specifications

☐ UNIT808 ☐ Rhythm Composer

○ **Memory**
12 Basic Rhythms + 4 Intro / Fill In, each with variations A and B, each with a 1st and 2nd Part (1 – 16 steps each)

○ **Rhythm Tracks**
12 tracks × 64 bars

○ **Sound Source**
BD, SD, LT/LC, MT/MC, HT/HC, RS/CL, CP/MA, CB, CY, OH, CH, AC

○ **Controls**
POWER, MODE, INSTRUMENT-SELECT, CLEAR, MEASURES AUTO FILL IN, SWING, FLAM, 22 sound controls, 5 sound switches, MASTER VOLUME, BASIC-VARIATION, I/F-VARIATION, PRE-SCALE, START/STOP, STEP × 16, TAP

○ **Indicators**
Step × 16 (red; blue = flam), Variation A/B, 1st/2nd Part, Clear, Mute/Solo on the 12 instrument labels

○ **Timing**
Follows the DAW's tempo and transport; Pre-Scale × 4; Swing

○ **Formats**
macOS: AU, VST3, application
Windows: VST3, application
Linux: VST3, LV2, application

○ **Output**
Stereo

○ **Version**
0.2.0, built with JUCE 8.0.9
Plug-in IDs: manufacturer Tcro, plug-in U808 (AU type aumu)

○ **Contact**
ticcoross@gmail.com
ticcoross.gumroad.com

UNIT808

Ticco Ross

Operation Manual


Ticco Ross