TRANSISTOR LABS

UNIT-808

Owner’s Manual

UNIT808

TRANSISTOR LABS

Operation Manual

Important Notes

- UNIT808 keeps everything you write (rhythms, tracks, knobs and switches) inside your DAW project or Live set. Save your project to keep it.
- Tempo and transport always follow your DAW.
- This manual describes version 1.0.2.

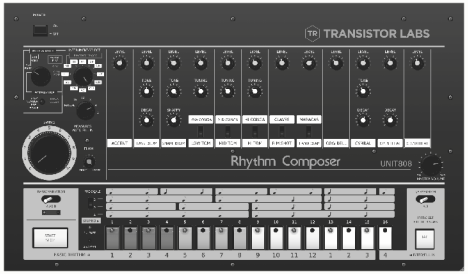


TABLE OF CONTENTS

INTRODUCTION **4**

BASIC COURSE **5**

Installation 5

Front Panel Layout 6

Writing Rhythm Patterns 7

Playing Rhythm Patterns 9

Intro / Fill In 10

Composing and Playing Rhythm Tracks 11

ADVANCED COURSE **12**

Control Descriptions 12

Step Number, 2nd Part, Clearing, Copy and Paste 13

Pre-Scale, Swing and Flam 14

Writing Flams 14

Sound Controls 15

Mute and Solo, Selecting with the Name Windows 15

Playing from MIDI 16

Running in a DAW, Saving, MIDI Mapping 16

How Each Voice Is Modelled 17

Inside the Box (Trimmers) 18

Exporting MIDI 20

About Window, Window Size, Troubleshooting 21

Specifications, System Requirements 22

INTRODUCTION

The Transistor Labs UNIT808 is a computer-controlled Rhythm Composer for your computer, modelled on the 1981 classic. Its sounds are synthesized, not sampled: the same sound engine as the UNIT 808 Max for Live device, built from analog-style circuits for every instrument.

Eleven sound channels play sixteen sounds: Bass Drum, Snare Drum, Low, Mid and Hi Tom or Conga, Rim Shot or Claves, Hand Clap or Maracas, Cow Bell, Cymbal, Open Hi-Hat and Closed Hi-Hat, plus ACcent. Each has its own LEVEL control, and most have TONE, TUNING, SNAPPY or DECAY controls.

In this manual each bar of music is called a “Rhythm Pattern”.

UNIT808 memorizes 12 Basic Rhythms and 4 Intro / Fill In patterns. Every one has two variations, A and B, and each variation has a 1st Part and an optional 2nd Part of up to 16 steps, so a rhythm can be up to 32 steps long. Twelve Rhythm Tracks chain the rhythms into songs.

The BASIC-VARIATION lever plays A, B or A then B; TAP plays a fill on the next bar, and MEASURES AUTO FILL IN plays one every 2, 4, 8, 12 or 16 bars.

UNIT808 always plays in time with your DAW: it starts when the song plays and follows the song’s tempo. The SWING control takes the place of the tempo knob, and FLAM sets the spacing of flammed hits.

It runs as an AU, VST3 or LV2 plug-in, or as a standalone application, on macOS, Windows and Linux.

This owner’s manual has two courses consisting of a Basic Course and an Advanced Course.

Installation

macOS

1. Download **UNIT808-1.0.2-macOS.pkg** and open it.
2. The installer is not signed: macOS blocks it the first time. Open System Settings → Privacy & Security and click **Open Anyway**.
3. Click **Customize** to skip the AU, the VST3 or the application if you like.

Installed to /Library/Audio/Plug-Ins/Components, /Library/Audio/Plug-Ins/VST3 and /Applications.

Windows

1. Run **UNIT808-1.0.2-Windows-Setup.exe**.
2. If SmartScreen appears, click **More info** → **Run anyway**.

The VST3 goes to C:\Program Files\Common Files\VST3, the application to the Start menu under Transistor Labs.

Linux

1. Unpack the **.tar.gz** and run **./install.sh**.

VST3 to ~/.vst3, LV2 to ~/.lv2, the application to ~/.local/bin/UNIT808.

Loading it in Ableton Live

1. Settings → Plug-Ins: turn on **Use Audio Units v2** (Mac) or **VST3**, then click **Rescan**.
2. In the browser, open Plug-Ins → Transistor Labs → **UNIT808** and drag it onto a MIDI track.
3. Press Play in Live. UNIT808 plays in time with the song.

Front Panel Layout

FRONT PANEL LAYOUT



Ⓒ **INSTRUMENT-SELECT** / RHYTHM TRACK

Ⓗ **LEVEL** Controls

Ⓐ **POWER** Switch (Inside)

Ⓑ **MODE** Selector

Ⓓ **CLEAR** Button

Ⓔ **MEASURES AUTO FILL IN**

Ⓕ **SWING** Control

Ⓖ **FLAM** Control

Ⓜ **BASIC-VARIATION** Lever

Ⓝ Variation Indicators A / B

Ⓞ **START/STOP** Button

Ⓛ **TRANSISTOR LABS** Logo (About)

Ⓘ **TONE · TUNING · SNAPPY · DECAY** Contı

Ⓙ **Sound Selector** Switches

Ⓚ **MASTER VOLUME** Control

Ⓢ **I/F-VARIATION** Lever

Ⓣ **TAP** (Intro Set / Fill In Trigger)

Ⓟ **PRE-SCALE** Switch


Ⓠ 1st / 2nd PART Indicators

Ⓡ **STEP** Keys

Writing Rhythm Patterns

We will write the Rhythm Pattern shown in Fig. 1 into Basic Rhythm 1, variation A, 1st Part.

Fig. 1

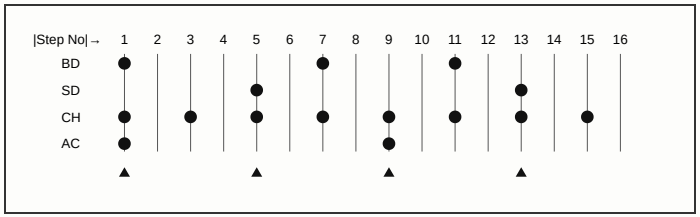

PROCEDURE

1. Load UNIT808 on a MIDI track (see INSTALLATION).
2. Set the MODE selector Ⓑ to MANUAL PLAY and press STEP key Ⓡ #1: Basic Rhythm 1 is chosen and its indicator lights.

   ** Click or drag towards any printed label around the MODE, INSTRUMENT-SELECT and AUTO FILL IN selectors to turn them there.*
3. Set the BASIC-VARIATION lever Ⓜ to A.
4. Set the MODE selector Ⓑ to 1st PART (PATTERN WRITE).
5. Turn INSTRUMENT-SELECT Ⓒ to BD (Bass Drum), or simply click the BASS DRUM name window on its channel.

   ** Every name window on the channels (ACCENT, BASS DRUM … CLS'D HIHAT, and LOW CONGA … MARACAS above) selects its instrument; the selected one has an orange frame.*

6. Press the STEP keys Ⓡ matching the dots in the score (Fig. 1).

   ** The indicators of the written steps light. Press a lit key again to erase the step.*

   ** To write many steps at once, press a key and drag across the others: every key you pass takes the same state as the first one.*

7. Repeat 5 – 6 for SD and CH. Then select AC (ACcent) and press keys #1 and #9.

   ** Every sound on an AC step plays at full level; the ACCENT control sets how much softer the other steps are.*

8. Press Play in your DAW. The playing step shows inverted, so you can follow it.

9. You can also write in real time: while the rhythm runs, press TAP Ⓣ on the beat. The selected instrument is written on the playing step.

10. To make a hit a **flam**, Option/Alt-click its STEP key: the step lights **blue**. Option/Alt-click again to make it a normal hit.

    ** Flams are per instrument: the snare can flam on a step while the bass drum on the same step does not. FLAM Ⓖ sets the spacing.*

** You have just written the Rhythm Pattern of Fig. 1.*

IMPORTANT NOTES

The BASIC-VARIATION lever chooses which variation you write: A, or B (AB writes A). The 2nd Part, the number of steps and clearing are described in the ADVANCED COURSE.

Playing Rhythm Patterns

PROCEDURE

1. Set the MODE selector Ⓑ to MANUAL PLAY.
2. Press STEP keys Ⓡ #1 – #12 to choose Basic Rhythm 1 – 12.

   ** While the rhythm runs, the new rhythm waits for the end of the bar (its indicator blinks), then takes over.*
3. Choose the variation with the BASIC-VARIATION lever Ⓜ:

   A … variation A, AB … A then B, B … variation B

   ** The A and B indicators Ⓝ show the variation that is playing; the 1st/2nd PART indicators Ⓠ show the part.*
4. Press Play in your DAW. The running light follows the playing step.

Intro / Fill In

STEP keys #13 – #16 hold four Intro / Fill In patterns, written like any rhythm (choose the key in MANUAL PLAY, then write it in 1st PART).

PROCEDURE

1. In MANUAL PLAY, press STEP key Ⓡ #13 – #16 to choose the fill.
2. Choose its variation with the I/F-VARIATION lever Ⓢ.
3. While the rhythm plays, press TAP Ⓣ (INTRO SET / FILL IN TRIGGER). The fill plays as the next bar, then the rhythm continues.

   * *The fill's indicator blinks while it waits.*

AUTO FILL IN

Turn MEASURES AUTO FILL IN Ⓔ to 16, 12, 8, 4 or 2: the fill plays automatically as the last bar of every 16, 12, 8, 4 or 2 bars. MANUAL turns it off.

Composing and Playing Rhythm Tracks

A Rhythm Track chains up to 64 rhythms into a song. There are 12 tracks: in COMPOSE and PLAY, INSTRUMENT-SELECT Ⓒ chooses the track (the orange RHYTHM TRACK numbers 1 – 12).

COMPOSE

1. Set MODE Ⓑ to COMPOSE and INSTRUMENT-SELECT Ⓒ to the track number.
2. Press CLEAR Ⓓ (TRACK CLEAR) to start an empty track.
3. Press a STEP key Ⓡ to choose a rhythm, set BASIC-VARIATION Ⓜ, and press TAP Ⓣ to add it as the next bar.
4. Repeat 3 for each bar of the song.

PLAY

1. Set MODE Ⓑ to PLAY and INSTRUMENT-SELECT Ⓒ to the track.
2. Press Play in your DAW. The rhythms play in order and the track starts again at the end.

   ** An empty track plays the rhythm chosen with the STEP keys, as in MANUAL PLAY.*

Control Descriptions

Ⓐ **POWER Switch**
Opens the circuit board inside with its 29 trimmers (see INSIDE THE BOX). UNIT808 keeps playing; the black POWER switch or the power supply inside closes it again.

Ⓑ **MODE Selector**
PATTERN CLEAR, 1st PART and 2nd PART (pattern write), MANUAL PLAY, PLAY and COMPOSE.

Ⓒ **INSTRUMENT-SELECT**
The instrument the STEP keys write (AC, BD, SD, LT, MT, HT, RS, CP, CB, CY, OH, CH). In PLAY and COMPOSE: the Rhythm Track 1 – 12. Its printed labels also mute and solo (see MUTE AND SOLO).

Ⓓ **CLEAR Button**
PATTERN CLEAR mode: clears the rhythm. COMPOSE: clears the track (TRACK CLEAR). 1st/2nd PART: sets the step number (see ADVANCED COURSE).

Ⓔ **MEASURES AUTO FILL IN**
MANUAL (off), 16, 12, 8, 4 or 2 bars.

Ⓕ **SWING Control**
Delays every second step: 0 = straight, 10 = heavy shuffle (the off-beat at 75 % of the pair). Tempo always follows your DAW.

Ⓖ **FLAM Control**
The time between the soft grace note and the main hit of flammed steps: TIGHT (5 ms) to LOOSE (40 ms).

Ⓗ **LEVEL Controls**
The level of each sound channel, and ACCENT. Drag up or down; double-click returns a control to its default. The name window under each channel selects that instrument for writing.

Ⓘ **TONE, TUNING, SNAPPY, DECAY**
Bass Drum tone and decay, Snare Drum tone and snappy, tom/conga tuning, Cymbal tone and decay, Open Hi-Hat decay.

Ⓙ **Sound Selector Switches**
Low/Mid/Hi Tom or Conga, Rim Shot or Claves, Hand Clap or Maracas. Up = the upper label.

Ⓚ **MASTER VOLUME**
The output level.

Ⓛ **Transistor Labs Logo**
Opens the About window.

Ⓜ **BASIC-VARIATION Lever**
A, AB (A then B) or B. When writing, A or B chooses the variation written.

Ⓝ **Variation Indicators**
Show the playing variation.

Ⓞ **START/STOP**
Shows your DAW's transport. In the standalone application it starts and stops; right-click it for the tempo.

Ⓟ **PRE-SCALE Switch**
The step length: 1 = 16th-note triplets, 2 = 32nd notes, 3 = 16th notes (normal), 4 = 8th-note triplets.

Ⓠ **1st / 2nd PART Indicators**
The part being written or played.

Ⓡ **STEP Keys**
Write steps (1st/2nd PART), choose rhythms 1 – 12 and fills 13 – 16 (MANUAL PLAY, PLAY, PATTERN CLEAR), choose the rhythm to add (COMPOSE).

Ⓢ **I/F-VARIATION Lever**
The variation of the intro / fill.

Ⓣ **TAP**
Fill in trigger (playing), tap-writing (1st/2nd PART), add the rhythm to the track (COMPOSE).

Step Number

Each part has 1 to 16 steps. In 1st or 2nd PART, press CLEAR Ⓓ (its lamp lights), then the STEP key of the last step. Shift-click a STEP key does the same. The steps after the last one stay dark.

2nd Part

Set MODE Ⓑ to 2nd PART and write as in 1st PART. As soon as the 2nd Part has a step, it is played after the 1st Part, giving a rhythm of up to 32 steps. Clear it (Alt-click CLEAR per instrument) and set its step number as you like; a 2nd Part that was never written is not played.

Clearing

- **A whole rhythm:** set MODE to PATTERN CLEAR, press the rhythm's STEP key, set BASIC-VARIATION (A, B, or AB for both) and press CLEAR Ⓓ.
- **One instrument of a part:** in 1st or 2nd PART select the instrument and Option/Alt-click CLEAR.
- **A track:** in COMPOSE press CLEAR (TRACK CLEAR).

** Clearing has no undo; save your project first.*

Copy and Paste

Whole rhythms and variations: in MANUAL PLAY, PLAY, PATTERN CLEAR or COMPOSE, **right-click a STEP key** Ⓡ (rhythm 1 – 12 or intro/fill 13 – 16) for: Copy rhythm, Copy variation A, Copy variation B, Paste rhythm, Paste to variation A / B, Undo paste. The key blinks after a paste.

Parts and instruments: in 1st or 2nd PART, **right-click CLEAR** Ⓓ (or a STEP key) for: Copy this part, Copy the selected instrument, Paste into this part, Paste into the selected instrument, Undo paste.

** Copies include accents, flams and step numbers. Each UNIT808 has its own clipboard; it is not saved with the project. Undo paste takes back the last paste.*

Pre-Scale, Swing and Flam

PRE-SCALE Ⓟ sets the length of a step:

POSITION	STEP	16 STEPS =
1	16th-note triplet	2 ⅔ beats
2	32nd note	2 beats
3	16th note (normal)	one 4/4 bar
4	8th-note triplet	5 ⅓ beats

SWING Ⓕ delays every second step towards the next: at 0 the steps are even, at 10 the off-beat step comes 75 % of the way through the pair. Rhythms stay lined up with the bars of your song.

Writing Flams

A flammed step plays a soft grace note on the step and the main hit just after it, like a drummer's flam. Flams belong to one instrument on one step: the snare can flam on a step while the bass drum on the same step plays a normal hit.

PROCEDURE

1. Set MODE Ⓑ to 1st PART or 2nd PART.
2. Turn INSTRUMENT-SELECT Ⓒ (or click a channel name) to the instrument you want to flam. Any instrument except AC can flam.
3. **Option/Alt-click** the STEP key Ⓡ of the step. The step is written (if it was empty) and its light turns **blue**.
4. Press play in your DAW and turn FLAM Ⓖ to set the gap between the grace note and the main hit: TIGHT (5 ms) to LOOSE (40 ms). One FLAM setting is used for all flams.

** To make a flam a normal hit again, Option/Alt-click the blue step: it turns red. A normal click clears the step. An accent (AC) on the same step makes both the grace note and the main hit louder. Flams work the same way with the STEP keys inside the box, are copied and pasted with the rhythm, and are exported to MIDI as two notes.*

Mute and Solo

The printed labels around INSTRUMENT-SELECT Ⓒ (AC, BD, SD … CH) mute and solo the instruments, also while the rhythm plays:

- **Shift-click** a label: mute that instrument. The label is dimmed.
- **Option/Alt-click** a label: solo it. The label glows red. Several instruments can be soloed at once; then only they play.
- **Right-click** a label: a menu with Mute, Solo and Clear all mutes and solos.
- A plain click selects the instrument, as before.

The channel name windows (ACCENT, BASS DRUM …, LOW CONGA … MARACAS) work the same way: Shift-click mutes, Option/Alt-click solos, right-click opens the menu; the dimmed or red state shows on the INSTRUMENT-SELECT labels.

** Muting AC plays the rhythm without accents. AC cannot be soloed.*

** Mutes and solos also apply to MIDI notes, are saved with your project and can be automated.*

Selecting with the Name Windows

Click a channel's name window (ACCENT, BASS DRUM, SNARE DRUM …, or LOW CONGA, CLAVES, MARACAS above) to select that instrument for writing (Shift-click and Option/Alt-click mute and solo it), the same as turning INSTRUMENT-SELECT Ⓒ. The selected channel's window has an orange frame. Toms and congas share one row, so LOW TOM and LOW CONGA select the same instrument.

Sound Controls

CHANNEL	CONTROLS	SWITCH
Bass Drum / Snare Drum	Level, Tone, Decay / Level, Tone, Snappy	
Low / Mid / Hi	Level, Tuning	Tom or Conga
Rim Shot / Hand Clap	Level	Rim Shot or Claves / Hand Clap or Maracas
Cow Bell / Cymbal	Level / Level, Tone, Decay	
Open / Closed Hi-Hat	Level, Decay / Level	(a closed hi-hat cuts off the open one)

Playing from MIDI

MIDI notes play the sounds (General MIDI drum map). Velocity works like accent: with ACCENT at 0 every note plays at the same level, at 10 the level follows the velocity.

NOTE	SOUND
35, 36	Bass Drum
38, 40	Snare Drum
41, 43	Low Tom
45, 47	Mid Tom
48, 50	Hi Tom

NOTE	SOUND
37	Rim Shot
39	Hand Clap
56	Cow Bell
49, 51, 52, 55, 57, 59	Cymbal
42, 44 / 46	Closed / Open Hi-Hat

NOTE	SOUND
64	Low Conga
63	Mid Conga
62	Hi Conga
75	Claves
70	Maracas

* *Conga, claves and maracas notes play those sounds whatever the selector switches are set to.*

Running in a DAW

UNIT808 starts when your song plays and stops with it; START/STOP lights while it runs. It follows the song's tempo, and when you jump or loop it lines the rhythm up with the bar again. The standalone application has its own clock: press START/STOP, and right-click it to choose the tempo.

Saving and MIDI Mapping

Everything is saved with your project: rhythms, parts, step numbers, tracks, knobs, switches and levers. Every control is a plug-in parameter, so you can automate it and map it to a MIDI controller with your DAW's MIDI mapping (Ableton Live: press Cmd/Ctrl-M, click a control on the plug-in's device, move the hardware control).


How Each Voice Is Modelled

Every sound is synthesized while you play: no samples. The engine is the one in the UNIT 808 Max for Live device, built from the 808's circuit ideas.

- **Bass Drum:** a resonating filter (the 808's bridged-T network) struck by the trigger pulse. Its pitch starts high and drops in the first milliseconds for the punch, with a short click. TONE opens a low-pass filter, DECAY sets how long it rings.
- **Snare Drum:** two resonators (about 172 and 340 Hz) and high-passed noise. TONE sets the mix of the two resonators, SNAPPY the noise.
- **Toms:** a resonator whose pitch is higher while it is loud and slides down as it fades, with a little noise. **Congas** are higher, shorter and without noise.
- **Rim Shot:** two resonators (455 and 1667 Hz) through a very short gate. **Claves:** one high resonator (2.4 kHz).
- **Hand Clap:** filtered noise with three fast bursts and a reverb-like tail. **Maracas:** high-passed noise with a short envelope.
- **Cow Bell:** two square-wave oscillators (540 and 800 Hz) through a band-pass filter with a fast-then-slow decay.
- **Cymbal, Open and Closed Hi-Hat:** six square-wave oscillators that run all the time (205, 304, 370, 523, 540 and 800 Hz), split into frequency bands. CY TONE moves the bands; the cymbal mixes a short bright band and longer lower ones. A closed hi-hat cuts off the open one.
- **Accent:** accented steps play at full level; ACCENT sets how much softer the other steps are.

Inside the Box

Flip the POWER switch Ⓐ to open the circuit board inside. UNIT808 keeps playing, so you can tune the sounds while the rhythm runs. Drag a trimmer up or down; a read-out shows its value; double-click returns it to its default. The 16 STEP keys on the lower board work just like the ones on the panel (writing, Shift / Alt, dragging, right-click menu) and their LEDs show the same state, with the 1st / 2nd PART lights beside them. To close the board, click the black POWER switch at top left or the power supply (the transformer on the left), or press Esc. Trimmers are saved with your project and can be automated. At their defaults UNIT808 sounds exactly like the UNIT 808 device.

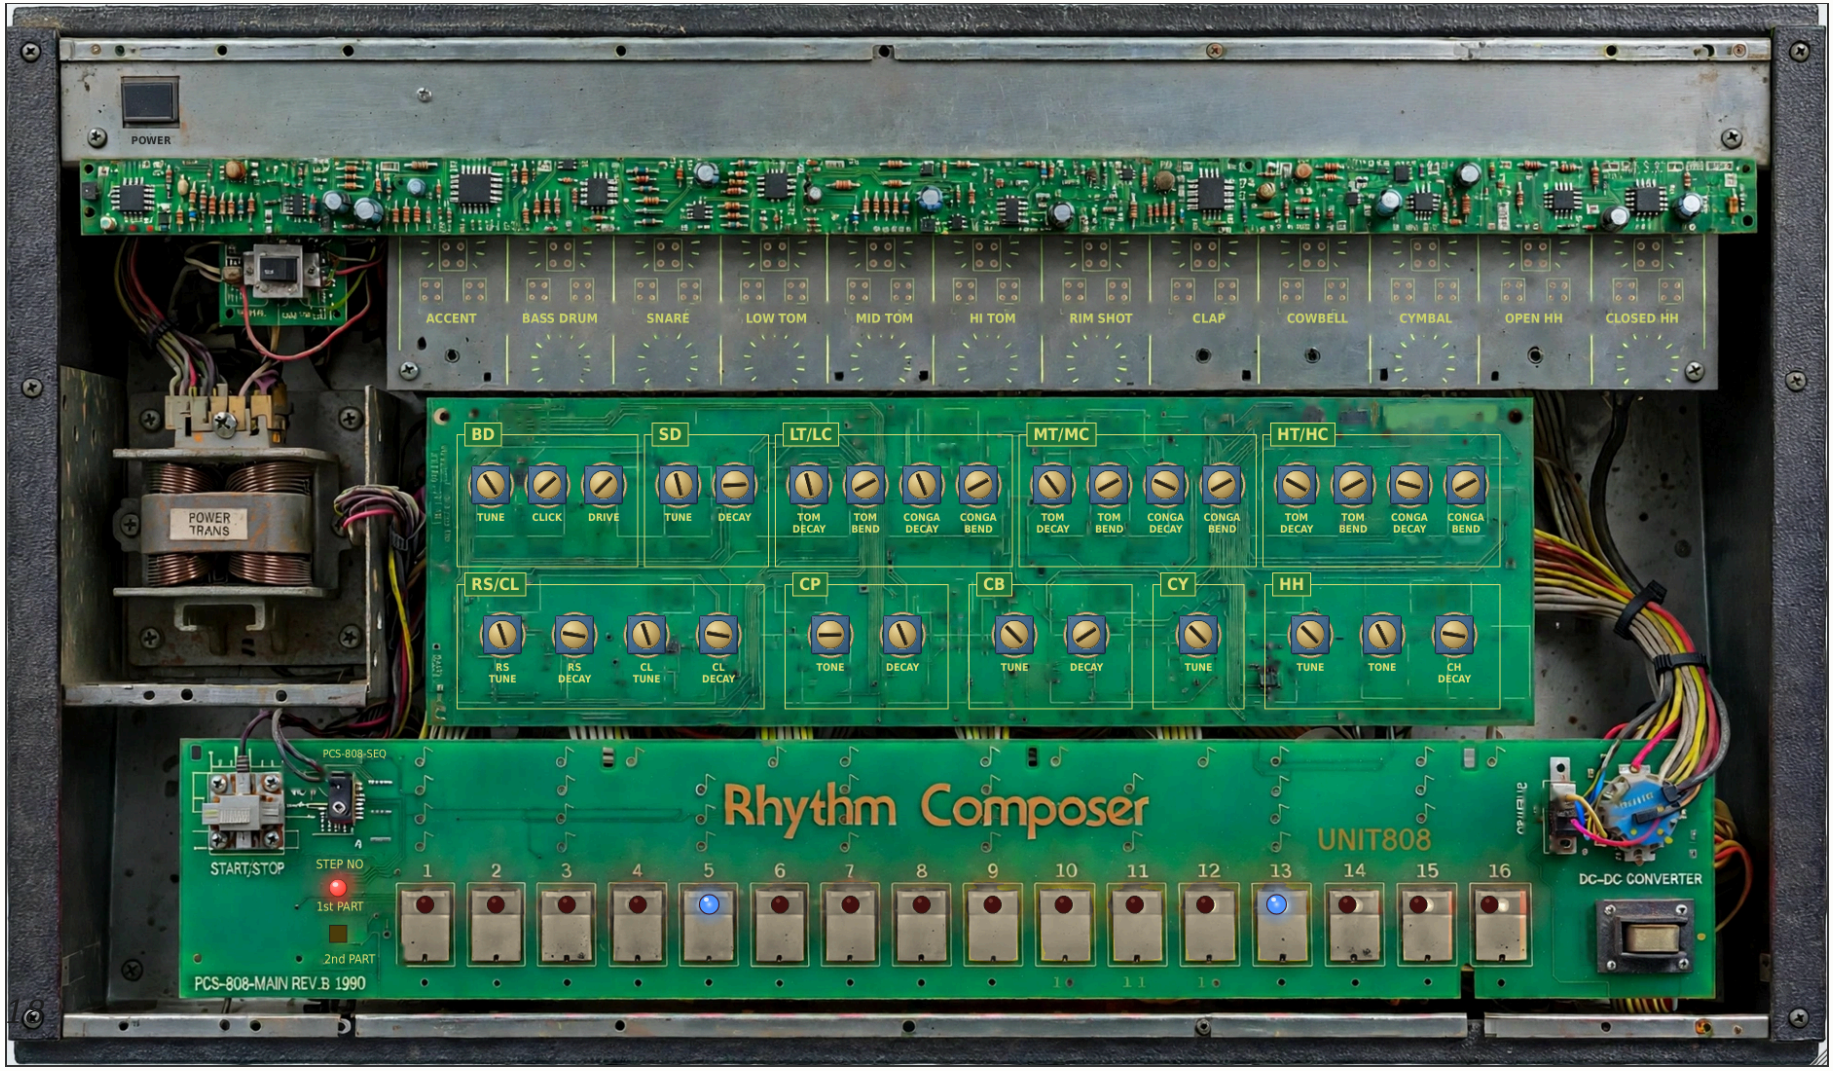

The Trimmers

BD	RANGE
TUNE	40 – 65 Hz (49.4)
CLICK	0 – 1 (0.01)
DRIVE	1 – 6 (1)

SD	RANGE
TUNE	0.8 – 1.25 × (1)
DECAY	0.5 – 2 × (0.73)

LT/LC · MT/MC · HT/HC	RANGE
TOM DECAY	20 – 400 ms (95 · 70 · 48)
TOM BEND	0 – 0.5 (0.03): pitch drop
CONGA DECAY	20 – 400 ms (86 · 44 · 38)
CONGA BEND	0 – 0.5 (0.03)

RS/CL	RANGE
RS TUNE, CL TUNE	0.7 – 1.4 × (1)
RS DECAY, CL DECAY	0.5 – 3 × (1)

CP	RANGE
TONE	600 – 5000 Hz (1300)
DECAY	10 – 300 ms (60): the reverb tail

CB	RANGE
TUNE	0.5 – 2 × (1)
DECAY	50 – 1200 ms (97)

CY	RANGE
TUNE	0.5 – 2 × (1)

HH (hi-hats)	RANGE
TUNE	0.5 – 2 × (1)
TONE	0.6 – 1.6 × (1)
CH DECAY	5 – 100 ms (24)


** Defaults in brackets. The congas use the panel's TUNING and LEVEL controls of their channel; their decay and bend are here.*

Exporting MIDI

UNIT808 turns its rhythms into standard MIDI clips you can drop into your DAW or save as .mid files.

- **A rhythm or a variation:** right-click a STEP key in MANUAL PLAY, PLAY, PATTERN CLEAR or COMPOSE and choose *Export rhythm* (variation A then B, with their 2nd parts), *Export variation A* or *Export variation B*.
- **A rhythm track (song):** in PLAY or COMPOSE the same menu offers *Export rhythm track* for the track INSTRUMENT-SELECT points at, bar by bar with its fills.
- **A part or one instrument:** in 1st or 2nd PART, right-click CLEAR and choose *Export this part* or *Export* the selected instrument.

The export window then shows the clip. **Drag the clip** onto a track in your DAW, or click **SAVE .MID FILE**. **WRITE SWING INTO THE NOTES** moves the notes the way SWING plays them (off: straight 16ths). **LEAVE OUT MUTED / SOLOED-OUT** exports only what you hear. Esc or a click outside closes the window.

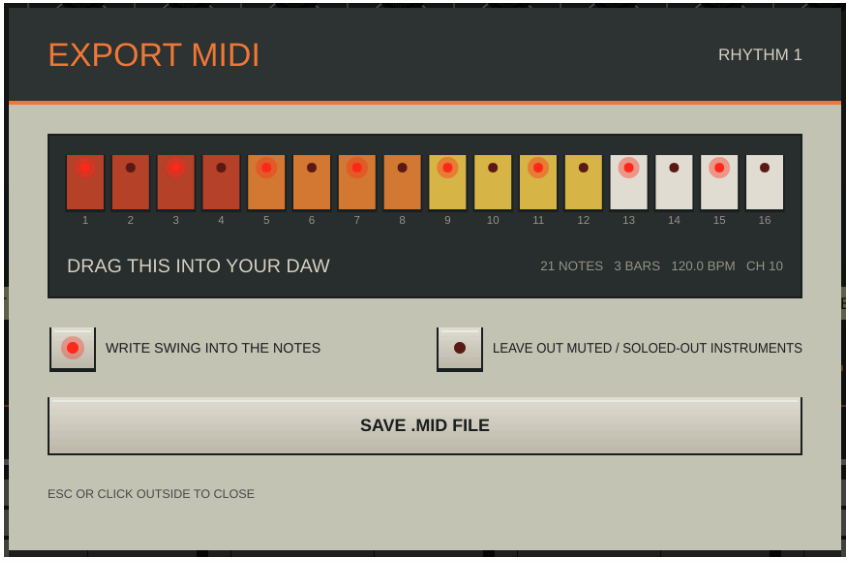

** Notes are General MIDI drums on channel 10, the same notes UNIT808 plays from: BD 36, SD 38, LT 41 (conga 64), MT 45 (63), HT 48 (62), RS 37 (claves 75), CP 39 (maracas 70), CB 56, CY 49, OH 46, CH 42; the toms, RS and CP follow their selector switches. Accented steps have velocity 127, the others 100; flams are a soft grace note and the main hit after the FLAM time. Tempo is the DAW's, 4/4, PRE-SCALE is respected.*

About Window

Click the Transistor Labs logo for the About window: version, build date, the format and host it runs in, the contact address, the Transistor Labs store, and a button that opens this manual. Click anywhere to close it.

Window Size

Drag the bottom-right corner to resize the window, from 40 % to 100 % of the full panel size.

Troubleshooting

PROBLEM	REMEDY
macOS won't open the installer	System Settings → Privacy & Security → Open Anyway.
UNIT808 is not in Live's browser	Settings → Plug-Ins: turn on Audio Units v2 or VST3, then Rescan.
No sound	Check MASTER VOLUME; check that the song plays and the rhythm has steps; check that no instrument is muted (dimmed label) or another soloed (red label).
The STEP keys do not write	Writing works in 1st PART and 2nd PART. In the other modes the keys choose rhythms.
A rhythm change waits	While playing, a new rhythm starts at the next bar (its indicator blinks).
The wrong variation is written	Check the BASIC-VARIATION lever: A or B (AB writes A).
An old song can't find UNIT808	1.0 is a new Transistor Labs plug-in: songs saved with 0.4.x need UNIT808 1.0 loaded again.
A track does not play	MODE must be PLAY, and INSTRUMENT-SELECT must point at the track number.

Specifications

☐ UNIT808 ☐ Rhythm Composer

○ **Memory**
12 Basic Rhythms + 4 Intro / Fill In, each with variations A and B, each with a 1st and 2nd Part (1 – 16 steps each)

○ **Rhythm Tracks**
12 tracks × 64 bars

○ **Sound Source**
BD, SD, LT/LC, MT/MC, HT/HC, RS/CL, CP/MA, CB, CY, OH, CH, AC

○ **Controls**
POWER, MODE, INSTRUMENT-SELECT, CLEAR, MEASURES AUTO FILL IN, SWING, FLAM, 22 sound controls, 5 sound switches, MASTER VOLUME, BASIC-VARIATION, I/F-VARIATION, PRE-SCALE, START/STOP, STEP × 16, TAP

○ **Trimmers**
29 (inside the box)

○ **Indicators**
Step × 16 (red; blue = flam), Variation A/B, 1st/2nd Part, Clear, Mute/Solo on the 12 instrument labels

○ **Timing**
Follows the DAW's tempo and transport; Pre-Scale × 4; Swing

○ **Formats**
macOS: AU, VST3, application
Windows: VST3, application
Linux: VST3, LV2, application

○ **Output**
Stereo

○ **Version**
1.0.2, built with JUCE 8.0.9
Plug-in IDs: manufacturer Trlb, plug-in U808 (AU type aumu)

○ **Maker**
Transistor Labs

○ **Contact**
ticcoross@gmail.com
ticcoross.gumroad.com

System Requirements

○ **macOS**
macOS 10.13 or later, Apple silicon or Intel (universal). AU or VST3 host, or the standalone application.

○ **Windows**
Windows 10 or 11, 64-bit. VST3 host, or the standalone application.

○ **Linux**
64-bit x86 with a VST3 or LV2 host, or the standalone application (JACK or ALSA).

○ **Computer**
Any recent CPU: UNIT808 uses about 4% of one core at 48 kHz. 4 GB RAM. A screen of 1280 × 800 or larger.

UNIT808

TRANSISTOR LABS

Operation Manual


TR
TRANSISTOR LABS