
Hept7 Switch — User Manual

Hept7 Switch turns **one footswitch press into seven CV signals at once**. You choose, for each of its **7 presets**, which of its **7 CV outputs** are on (10 V) or off (0 V), and then change between presets with a footswitch, a knob or the screen. Route the CV outputs to the on/off (or any CV-addressable) parameters of your plugins and a single press can turn a whole scene on.

It is the bigger sibling of Tetr4 Switch, and it has two things of its own: a **display** that shows the preset (and announces every change of it), and a **full-screen settings page** made for touch screens.

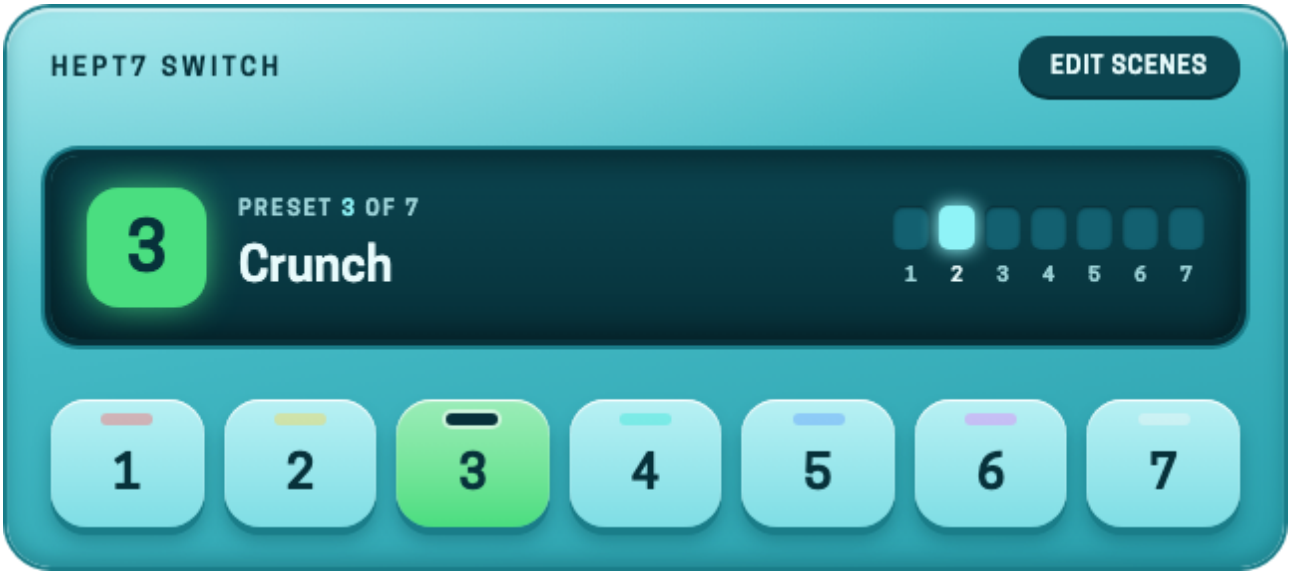

1. The plugin on the pedalboard

Item	What it does
Display, big number and name	The active preset. **The name is editable**: click it and type (up to 15 characters). It is also the text the device screen pop-up shows (see section 4).
Display, seven squares	The CV outputs that are on in the active preset.
Seven buttons	Select the preset. The button of the active preset lights up in its colour; each preset has the same colour as its footswitch LED on the device (red, yellow, green, cyan, blue, magenta, white).

Item	What it does
Edit scenes	Opens the settings page (section 2). The gear icon above the plugin opens it too.
Seven CV jacks	`CV Output 1` – `7`, in two columns.

The display announces every change of preset


Whenever the preset changes — from a footswitch, a knob, the buttons or a MIDI controller — the whole display takes the colour of the new preset for a moment, showing its number and name big:



This works on every device, including the **MOD Duo**, which has no screen for plugin pop-ups: it is how you see which preset a footswitch has just selected.


2. The settings page

Click **Edit scenes** (or the gear icon) to open a page that takes the whole screen and is made for touch: big cells, nothing smaller than a fingertip.

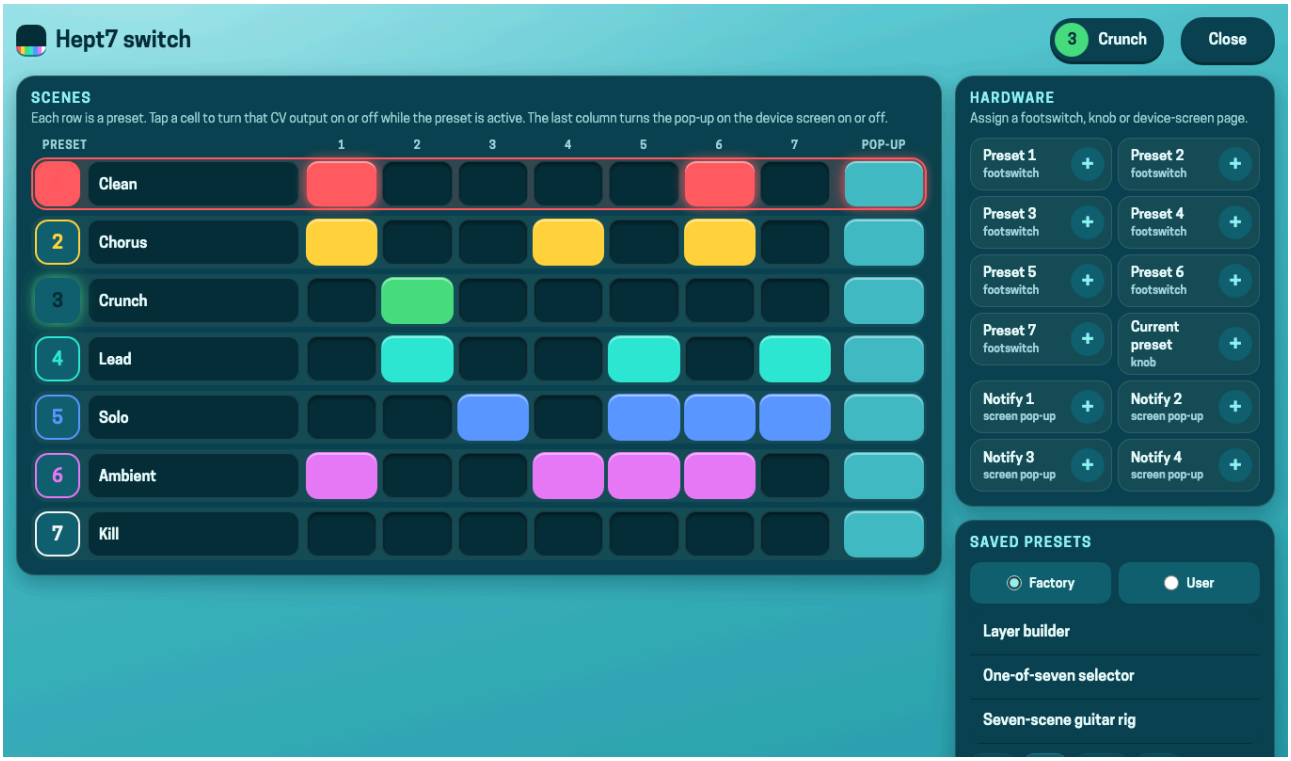

- **Scenes**: one row per preset. The round button on the left makes that preset the active one; the field next to it is its name; then one cell per CV output. A lit cell means that output is **on** while that preset is active. The row of the active preset is highlighted, and its lit cells are the CV signals actually leaving the plugin right now.
- **Pop-up** (last column): turns the device screen pop-up on or off for that preset (see section 4). It is on by default.
- **Hardware**: tiles to assign a footswitch, a knob or a device screen page to the plugin's controls (section 3). A tile shows a check mark once it is assigned.
- **Saved presets**: the factory presets (section 5) and your own presets.

On a **phone** the page shows one preset at a time: pick it on the numbered strip, edit its eight cells, and use *Switch to preset N* to make it play.

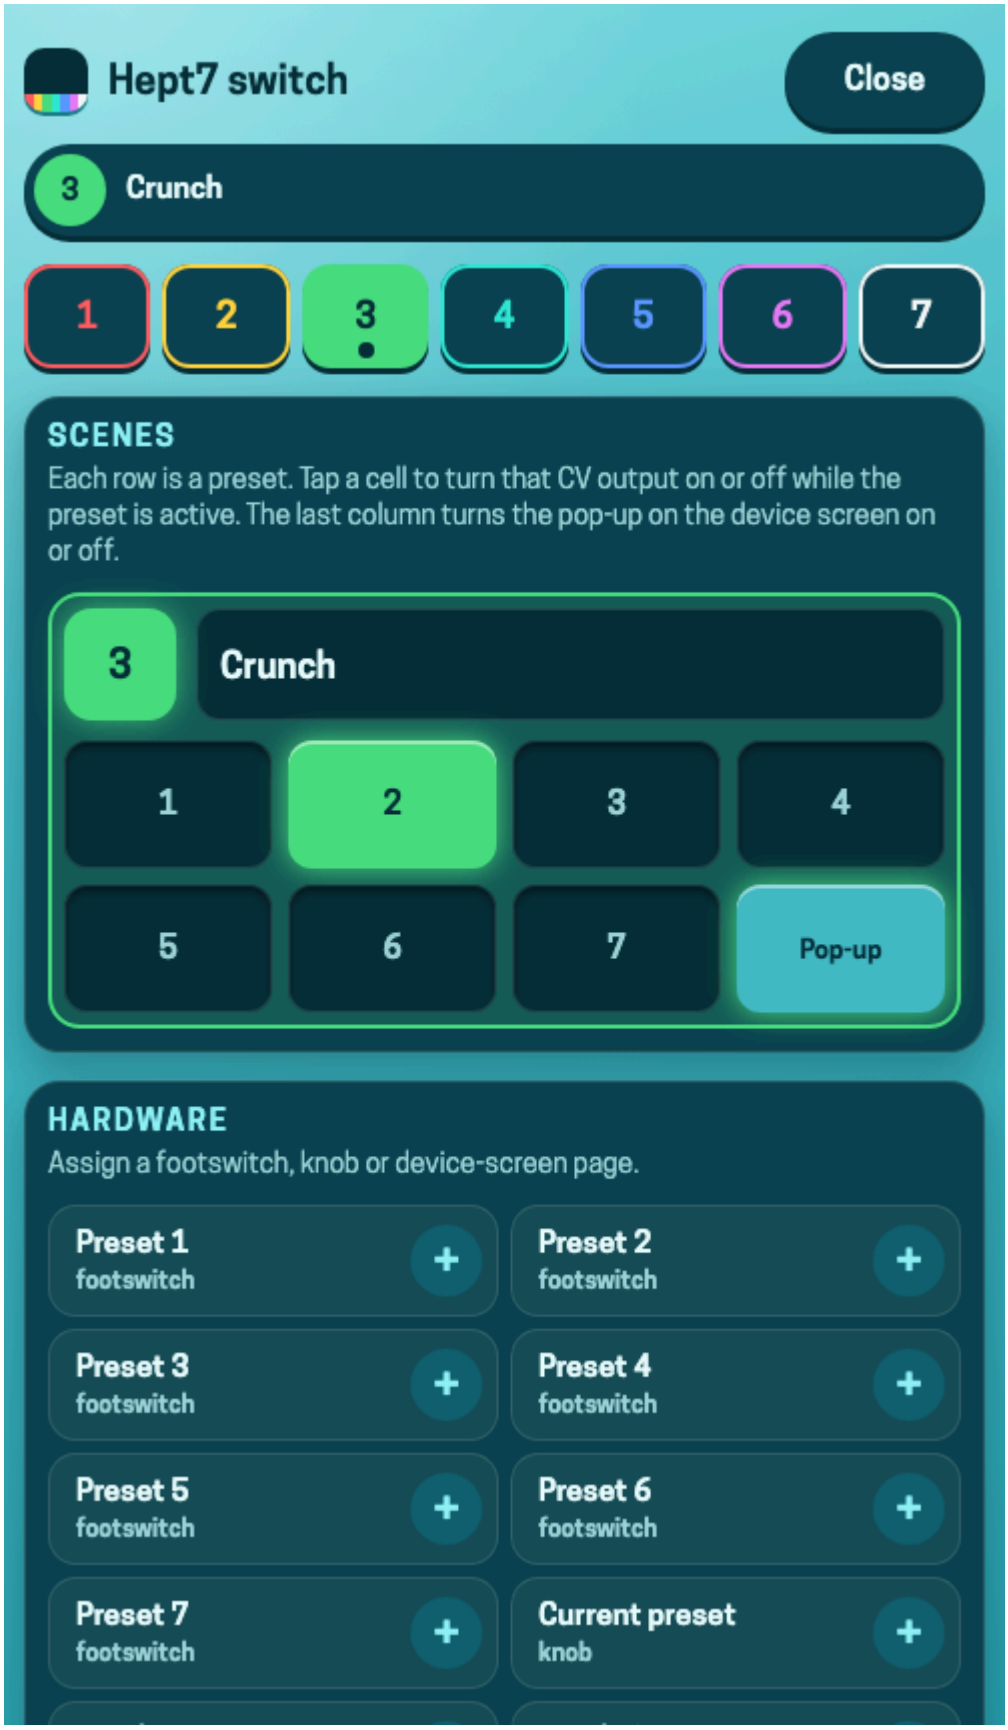

3. Switching presets with hardware

Assign one of the plugin's controls (the *Hardware* tiles, or the usual assignment dialog) to the control you want to use:

Control	Use
`Preset 1` – `7`	One footswitch per preset. Turning one on turns the others off.
`Current preset`	One knob (or CV/MIDI value) that selects among the seven presets.

4. The pop-up on the device screen

On devices with a screen that can show plugin pop-ups (MOD Dwarf), the name of the active preset is shown in a pop-up whenever the preset changes. As with Gossiper, the device only allows a pop-up on a page that has a control addressed to the plugin, so:

1. Assign one of `Assign to notify 1` – `4` to a control of the device page where you want to see the pop-up (use a second, third or fourth one for other pages).
2. Every change of preset now shows the name of the preset on that page.

The **Pop-up** cell of each preset turns it off for that preset only. The footswitch LEDs and the preset knob follow the preset as well, with the colour of each preset.

> The pop-up needs a firmware with the HMI feature. Without it (older firmware, or a MOD Duo) the plugin works the same, only without the pop-up and the LEDs: the display of the plugin is your feedback.

5. Factory presets

Preset	Idea
One-of-seven selector	Exactly one CV output is on at a time: preset N turns on output N. A 7-way selector.
Seven-scene guitar rig	Outputs 1 Compressor, 2 Overdrive, 3 Distortion, 4 Chorus, 5 Delay, 6 Reverb, 7 Boost, and the presets *Clean, Chorus, Crunch, Lead, Solo, Ambient, Kill* (everything off).
Layer builder	Preset N turns on outputs 1 to N: stack one more layer on every press.

6. Port reference

Port	Type	Description
`CV Output 1` – `7`	CV output	10 V while on in the active preset, 0 V otherwise.
`Preset 1` – `7`	Control input (toggle)	Footswitch selectors.
`Current preset`	Control input (enumeration)	Shows and selects the active preset.
`Assign to notify 1` – `4`	Control input	Assign to a device page so the pop-up shows there. No audio or CV effect.
`Preset N – Output M`	Control input (toggle)	Dip switch: is CV output M on while preset N is active?
`Preset N – Pop-up`	Control input (toggle)	Show the pop-up when preset N is selected?
Preset label 1–7	Plugin property (patch)	The name of each preset. Edited on the display or on the settings page.

Names use letters, digits, spaces and `+ - : _ .`; anything else is replaced with `_`. They are saved with the pedalboard and with the plugin presets.

7. Credits

Hept7 Switch is developed by Paulo Mateus (SrMouraSilva), see the plugins-lv2 repository.