Instructions

1) Download and install anaconda3 from given link(ignore step 1,3 if you already done)
   - link : https://www.filehorse.com/download-anaconda-64/download/

Make sure that like given in the image below, check first three checkboxes

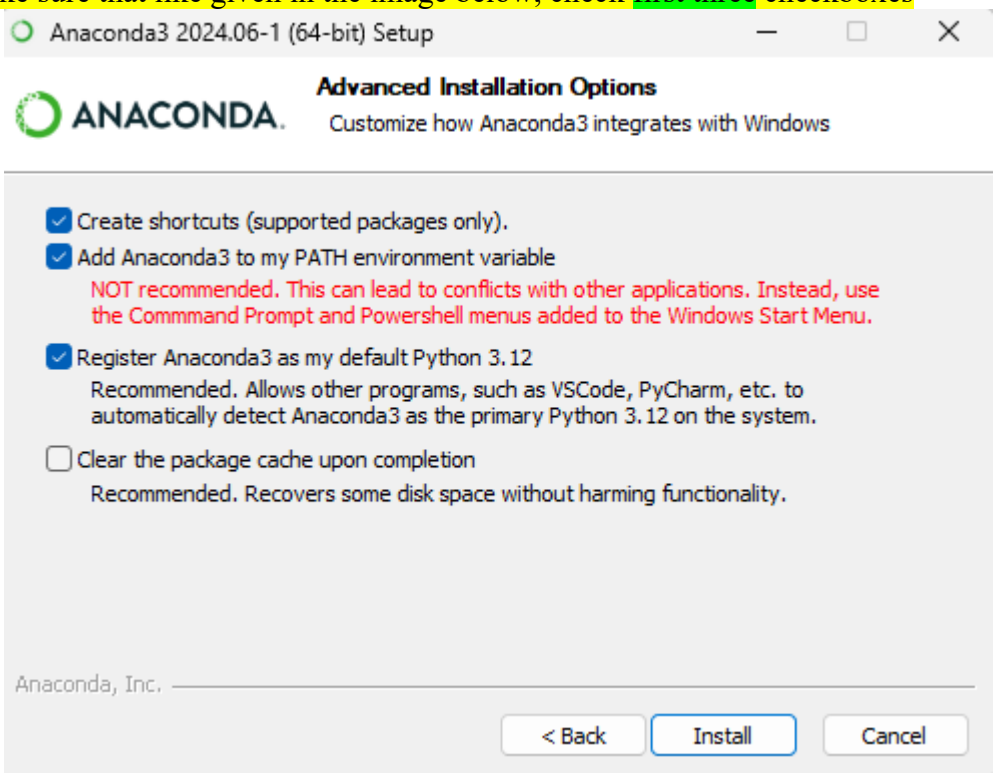

2) Extract “Fullcode.rar” file in a folder
3) Extract “firstenv.rar” file to location C->users->user (it may be vary based on your system)->anaconda3->envs
4) Open anaconda prompt
5) In prompt(cd) Navigate to ‘Fullcode/aira_admin’-folder
6) Run command: activate firstenv
7) Run command: python manage.py runserver <ip(wifinetwork):8000>
8) Install the RealVNC Viewer software from the Microsoft Store; this application is required to connect to the Pi.
9) Edit your Android mobile hotspot credentials as follows:
   Username: WiFi
   Password: 987654321
10) Power on your Pi
11) Turn your hotspot on.
12) Connect to PC/Laptop to this network
13) Open RealVNC viewer in your PC
14) To find your Raspberry Pi's IP address, use an IP scanner app on your smartphone/system to scan the network.

15) Enter the Raspberry Pi IP address in RealVNC Viewer
16) Enter the username and password in RealVNC Viewer:
    Pi Username: raspberry
    Pi Password: pi
17) Once you are connected to the Pi, open the browser and search for the link below to proceed.
    Link: **http://< IP >**