



Page: 1 of 14



Technical information subject to change without notice.

This document may also be changed without notice.

November 2018

 Created:
 2015-07-02
 By: TRo

 Changed:
 2018-11-07
 By: ASt

 Released:
 2018-11-07
 By: ASt

© pmdtechnologies ag

All texts, pictures and other contents published in this instruction manual are subject to the copyright of **pmd**, Siegen unless otherwise noticed. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopy, recording, or any information storage and retrieval system, without permission in writing from the publisher **pmd**.

Page: 2 of 14



Table of Contents

1.	Introduction		4
2.	Starting the	Royale viewer	4
		arting the Royale viewer on Windows	
		arting the Royale viewer on Android	
		arting the Royale viewer on Mac OS X	
0		arting the Royale viewer on Linux	
2	•	ting a camera with the Royale viewerttings	
	2.2.1.	Settings > Color Range	
	2.2.1.2.	Settings > Use Case (FPS)	
	2.2.1.3.	Settings > Exposure Time	
	2.2.1.4.	Settings > Camera Preset	
	2.2.1.5.	Settings > Auto Rotation	
	2.2.1.6.	Settings > Filter (Min/Max)	9
	2.2.1.7.	Settings > Data	9
	2.2.1.8.	Settings > Load File	10
	2.2.1.9.	Settings > Show Frustum	11
	2.2.1.10.	Settings > Lock View	11
	2.2.1.11.	Settings > Flip vertically	11
	2.2.1.12.	Settings > Flip horizontally	11
	2.2.1.13.	Settings > Show FPS	11
	2.2.1.14.	Settings > Show StreamID	11
	2.2.1.15.	Settings > Single Frame Recording	11
	2.2.1.16.	Settings > Check for updates on start	11
	2.2.2. Hel	lp menu	12
	2.2.2.1.	Help menu > Log	12
	2.2.2.2.	Help menu > Info	12
	2.2.2.3.	Help menu > Help	12
	2.2.2.4.	Help menu > About	12
2	.3. Comm	and line parameters	13
		uts	
2	.5. Mixed	Modes	14

Page: 3 of 14




1. Introduction

Royale provides its own visualization tool which is based on the Royale API. It will be installed with the standard Royale installation package and it can be used to display depth data from any calibrated camera.

2. Starting the Royale viewer

2.1.1. Starting the Royale viewer on Windows

The Royale viewer can be started using the "royaleviewer"- Desktop icon or the "royaleviewer" entry in the start menu (Windows 7).





2.1.2. Starting the Royale viewer on Android

Just tap the "royaleviewer" application. The look and feel is the same as on the x86 based OS.

Note that on Samsung Galaxy S7 devices, the point cloud visualization might look slightly different than on other platforms.

2.1.3. Starting the Royale viewer on Mac OS X

Click the royaleviewer-app in the /bin subfolder of your extracted package.

2.1.4. Starting the Royale viewer on Linux


To run the Royale viewer, please execute royaleviewer.sh in the /bin directory of the extracted Linux package. It will automatically set the right path to the necessary libraries.

Page: 4 of 14



2.2. Operating a camera with the Royale viewer

The application screen will open blank with the control buttons as shown below:

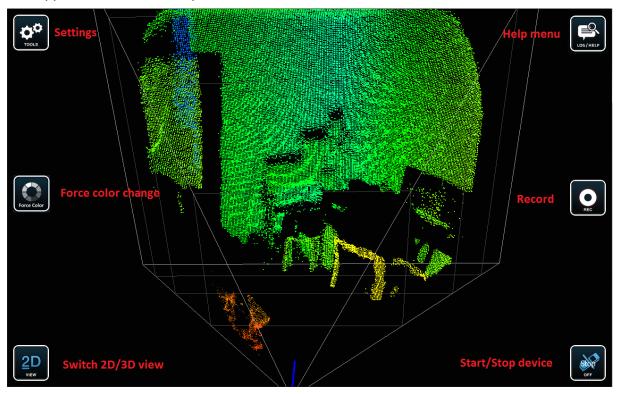

To start the data acquisition press "Start" in the lower right corner and wait for the camera to initialize.

To check if the camera was found and started click on the info button in the upper right corner. The Info-box can be closed by clicking on the Info button again.

At first you will see a color coded 2D visualization of the depth data.

You can switch to the 3D visualization by clicking on the button in the lower left corner.

Page: 5 of 14



Button	Function	
OFF	Switch to start/stop the processing and display of 3D data from the camera	
2D VIEW	Switch the visualization of 3D data between color coded 2D or 3D point-cloud view	
TOOLS	Settings for visualization and operation modes	
Force Color	Force an adaption of the color scheme to the current scene	
LOG/HELP	Help menu with Log which provides status and history info, camera info, user's guide, licenses info etc.	
0	Record (→ turns red if active) Records Royale recording format (.rrf) as default or single 3D point cloud (.ply) and a screenshot of the current view (.png) if selected in settings Output folders depend on OS:	
REC	Windows: DocumentsFolder/royale Linux:/path/to/homefolder/royale Mac OS X:/path/to/homefolder/royale Android:/storage/sdcard0/royale	


Page: 6 of 14



2.2.1. Settings


2.2.1.1. Settings > Color Range

The color scale can be adjusted and reset (auto-scale between min and max range).

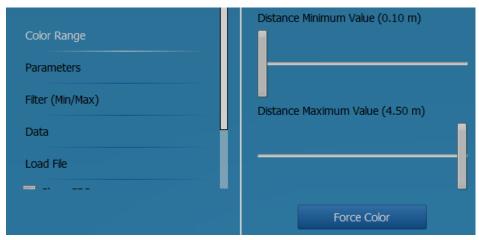

2.2.1.2. Settings > Use Case (FPS)

Selection of pre-defined operation modes. Please refer to the Royale documentation (HTML document in subfolder "doc") for further details on operation modes.

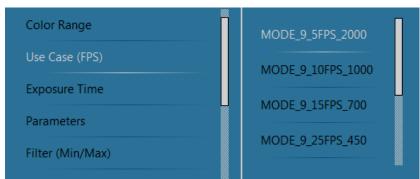


Page: 7 of 14



2.2.1.3. Settings > Exposure Time


Setting the exposure time between max (default) and min exposure time for the chosen operation mode.

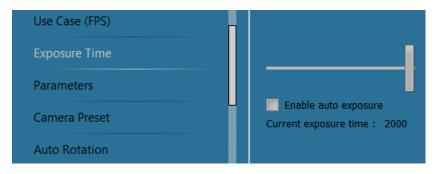

If "Enable auto exposure" is selected, the exposure time will automatically be adapted to the current scene.

2.2.1.4. Settings > Camera Preset

Affects 3D visualization only. If the 3D point cloud visualization is active (can be activated by the button in the lower left corner) the view can be switched to front view, side view or bird view here.

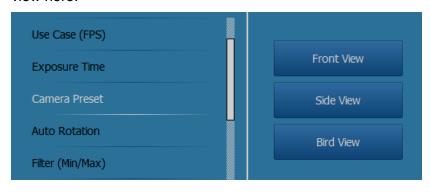


Page: 8 of 14




2.2.1.5. Settings > Auto Rotation

Affects 3D visualization only. If the 3D point cloud visualization is active, the view can be switched to rotate automatically. The parameters: the rotation center of the 3D point cloud and the rotation speed can be set here. The function Auto Rotation can be also activated through the mouse to directly double-click the view. During the auto rotation, the movement, zoom, and manual rotation of the view are still possible.

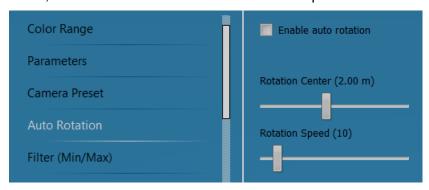

2.2.1.6. Settings > Filter (Min/Max)

The function Filter is disabled by default. The distance range can be adjusted when this function is enabled.

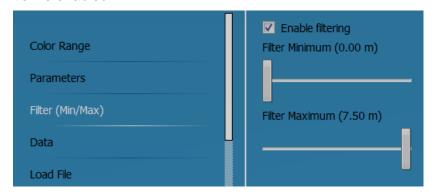

2.2.1.7. Settings > Data

Visualization can be switched between the color coded 3D data and Grayscale data formats.

Gray will show a gray scale IR image (2D) or be overlaid to the 3D point cloud)


Distance will show a color coded depth map (2D) or point cloud (3D)


Overlay shows a combination of a color coded depth and the gray image

Gray (uniform) (only available for 3D visualization) shows a uniform gray point cloud

Page: 9 of 14



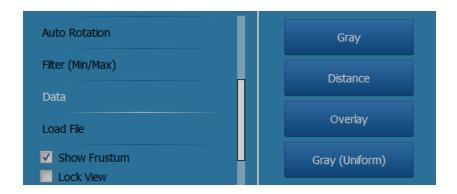

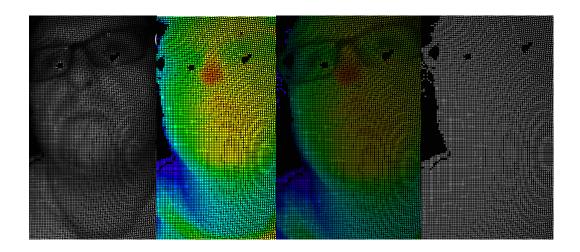

2.2.1.8. Settings > Load File

Loads .rrf (Royale recording files) files from default storage location that can be played with the viewer. Clicking the connect button during a playback will unload the current file. Afterwards you can connect to a live camera again.

To load a recording you can also drag a rrf file onto the viewer. It will then automatically open the dropped file.



Page: 10 of 14



The above control buttons have the following functions:

- The left button jumps backwards (-10% during playback e.g. 90 frames for a file with a total of 900 frames and 1 frame during pause)
- The middle button stops and starts the playback
- The right button jumps forward (+10% during playback e.g. 90 frames for a file with a total of 900 frames and 1 frame during pause)
- While paused, a specific frame can be selected by the slider

2.2.1.9. Settings > Show Frustum

Enables/Disables the viewing frustum in the 3D visualization

2.2.1.10. Settings > Lock View

Enables/Disables the synchronization of the changing for different streams in the 3D visualization and the Mixed Modes

2.2.1.11. Settings > Flip vertically

Flips the displayed data vertically in the 2D visualization

2.2.1.12. Settings > Flip horizontally

Flips the displayed data horizontally in the 2D visualization

2.2.1.13. Settings > Show FPS

Shows current FPS rate if checked

2.2.1.14. Settings > Show StreamID

Shows the stream IDs of the current streams

2.2.1.15. Settings > Single Frame Recording

Toggle if a single frame and a screenshot or a rrf file is recorded

2.2.1.16. Settings > Check for updates on start

Toggle to check for updates

Page: 11 of 14



2.2.2. Help menu

2.2.2.1. Help menu > Log

The Log tab provides status and history info. When there is new log and this tab is not open, the icon of Help menu will turn red to remind.

2.2.2.2. Help menu > Info

The Info tab provides camera info, incl.: the list of connected cameras and details of the started camera. In playback mode, the used camera of playback file will also be marked here.

2.2.2.3. Help menu > Help

The Help tab provides quick links to open user's guide (this document) and installation folder of Royale viewer directly. On Android, the quick links are not provided.

2.2.2.4. Help menu > About

The About tab provides icon and copyright notice of Royale viewer, icon and homepage of publishers and guick link to show related licenses.

Page: 12 of 14



2.3. Command line parameters

Some of the functionality the viewer offers can already be set before starting the viewer. Other functionality (like operating cameras as master/slave) is only available through these command line parameters:

Parameter	Function
rrf file_to_load.rrf	Specifies a recording file which will be loaded
cal calib_to_load.bin	Specify a different calibration file
ac	Automatically connects to a camera
mode "Use_Case"	Automatically sets a specified use case
ae	Starts with auto exposure enabled
slave	Opens the camera as a slave (please have a look at the documentation of your module to see if this is supported)
code	Provide a Royale access code

2.4. Shortcuts

Royale viewer offers shortcuts for most of the available functions:

Shortcut	Function
S	Start/Stop camera.
L	Open Help menu (if buttons are visible)
R	Start/Stop recording
Н	Hide/Show buttons
ESC	Quit Royale viewer.
F1/F2/F3/F4	Switch data to Gray/Distance/Overlay/Uniform
2/3	Switch view to 2D/3D
С	Force color range update
Space	Pause/Resume playback of file (only available during the playback of a file)
Left	Rewind 10% during playback e.g. 90 frames for a file with a total of 900 frames and 1 frame during pause (only available during the playback of a file)
Right	Forward 10% during playback e.g. 90 frames for a file with a total of 900 frames and 1 frame during pause (only available during the playback of a file)
Alt+Enter	Switch to fullscreen mode
Ctrl+O	Load a recording from a file


Page: 13 of 14




2.5. Mixed Modes

The mixed modes can be used to run two or more different modes at the same time, by capturing frames that fit into separate use cases.

In the Royale viewer application this is visualized like this:

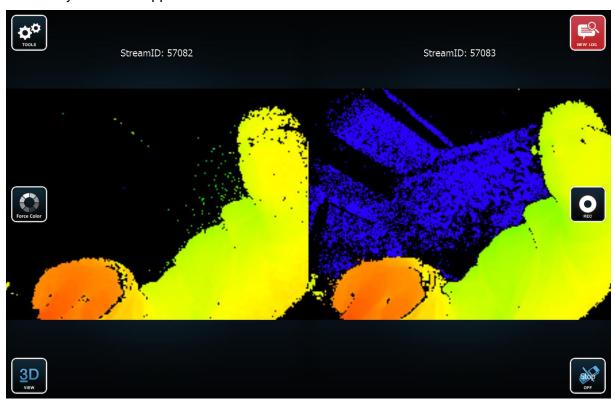

If you're using one of the mixed modes, some of the settings will require you to select a StreamId:

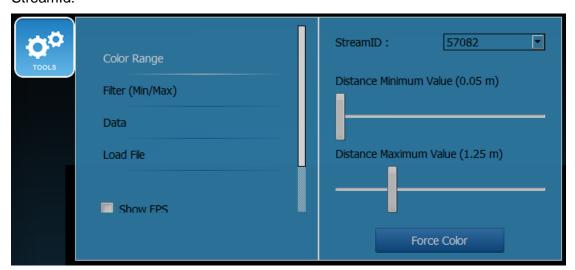

Page: 14 of 14