

# QMX+ Panadapter — User Guide

## (v1.16.2)

By Steffen Lav (OZ1LAV). Generated from the project README — for the live page, issues, and releases see <https://github.com/SteffenLav/qmx-panadapter>

---

The full documentation also lives online at [tab5.lav.dk](https://tab5.lav.dk) — the user guide, quick-start, and reference as searchable, cross-linked web pages, kept in sync with every release.

---

## Features

---

Everything below is in the firmware **today**. Nothing here needs a PC, and only the items marked (*needs WiFi*) need a network.

**Real-time panadapter** — Spectrum and waterfall across a 48 kHz window centred on the QMX VFO, at 30 Hz, with 12 kHz IF-offset compensation. Tap or drag to tune (mode-aware snapping), pinch to zoom  $\times 1$ – $\times 24$  with a true zoom-FFT, one-finger drag to pan and retune. Adaptive per-bin noise floor, flat-spectrum mode, adjustable waterfall black level and contrast, selectable FFT window, and a graphical S-meter calibrated in dBm. A colour band-plan strip tracks the VFO (IARU region 1/2/3, auto-selected from your grid) and can be dragged to scrub across the band.

**A spectrum that holds still** — From  $\times 2$  zoom up, the spectrum and waterfall stay where they are and the VFO marker moves across them, so a signal stays put on screen while you tune towards it and the waterfall's history stays lined up under the frequency it belongs to. It really does hold still: the picture never slides along with the dial. Tune far enough and your filter passband reaches the screen edge, keeps going, and once about half of it has slid off the display pages in one step, carrying part of the old screen across. The trigger is your filter passband rather than a percentage of the view, so it behaves the same in every mode. Tapping a spot moves only the marker when the spot is already on screen, and re-frames when it is not. On by default, and switchable. At  $\times 1$  the view stays centred on the dial, because the view is already the whole 48 kHz the radio sends. The band above dial+12 kHz is hatched on both screens — the radio genuinely cannot hear it, and drawing something there would be inventing signal.

**RIT** — Pull in a caller answering off your frequency without moving transmit: arm it, tap the caller, and a marker shows where you are listening while the gold line goes on meaning the dial. A long press parks the offset and restores it.

**Audio, and binaural CW** (*beta*) — The I/Q the radio already sends is turned into sound on the device. The **panoramic CW split** places two stations on different frequencies to the left and right of the stereo image instead of letting them land on top of each other, with **pan width**, **pan blend** and **overlap** adjustable live while you listen. This plays to something your ears do far better than any decoder: separating two sources by where they are coming from. A single-channel reader has to pull both signals out of one waveform; binaural CW hands the job to the part of your hearing that evolved for it, and two stations calling together stop being a jumble. Best at **300 Hz bandwidth and up** — **below 200 Hz there is little separation to be had**, because the signals then share too much of the audio passband for any amount of panning to pull them apart. Audio competes for resources, so **long-press the top bar on the Panadapter page** to open **Resource Management**, where it is switched on and off. This is a first implementation and is **beta**, with the same features planned for the web interface — sending only the I/Q to the PC and doing the work there. See [Audio](#).

**QMX CAT control** — Live frequency, mode (USB/LSB/CW/DiGi, plus AM on QMX firmware 1.04+), SSB filter bandwidth, CW passband, passband overlay, TX power and SWR readout, QMX volume in decibels matching the radio's own display, and an Antenna Tune button on 1.04+. Round-trip CAT latency under 50 ms. Band presets with per-band frequency recall, and 32 memory channels in a 4×8 grid holding any frequency and mode.

**FT8 and FT4, receive** — Continuous on-device decoding in the same view as the panadapter: FT8 (15 s slots) and FT4 (7.5 s slots). The decode list shows callsign, country, signal report, slot-timing offset (DT), audio tone (HZ), distance and bearing, with the station you are working held at the top. Include/exclude filters match anything in the message text, worked-before stations can be excluded band-by-band, and a pileup tracker collects everyone calling you.

**FT8 and FT4, transmit** — Tap a station and the correct *next* message is sent (WSJT-X double-click style); or call CQ from one of three editable presets, with an optional stop-after-N-calls limit. Full automatic exchange through to 73 and an ADIF entry, a resend if your partner never heard your final, a polite hold for a station already working someone else, grey-listing for stations that never answer, and an optional unattended auto-answer robot. Your TX tone is a permanent on-screen button with a live occupancy strip, drag-to-pick tone selection, **TX Hold**, and a cycling **TXCQ ANY / EVEN / ODD** time-window choice. ARRL Field Day exchange mode included.

**QSO logging and upload** — Every contact is written to an ADIF log on the device, with timestamp, callsign, grid, frequency, band, mode, both signal reports and distance (never a report that was not actually exchanged). Read the log on the Tab5 or in the browser, delete single records or all of them, and upload (*needs WiFi*) to **QRZ Logbook**, **eQSL**, **ARRL LoTW** and **your own Cloudlog or Wavelog** — LoTW QSOs are signed on the device itself with your own callsign certificate. A signal report or a park/summit reference can be corrected after the fact from the browser's log table. The browser's **ADIF restore** merges a previously downloaded (or any logger's) ADIF file back in — contacts already logged are skipped — so an erase-and-reinstall does not cost you your worked-station history. Or **restore straight from the microSD card**, on the Tab5 itself with no computer at all. **Search the log** on either screen — by callsign, country, band, mode, date or park — and in the browser **tick rows and export just those** as their own ADIF file.

**Live spots on the spectrum** (*needs WiFi*) — **POTA** park activations, and optionally **RBN** CW skimmer spots and **DX cluster** spots, drawn onto the trace at the frequency the station is actually using. The cluster is where phone activity comes from — skimmers are machines, and no machine recognises a callsign spoken into a microphone. One station is one entry, however many sources report it. Grey means you have already worked them on that band. Press and drag to pick one, lift to tune it *with the right mode*. Spots fade with age and are gone after 30 minutes; corner counts take you to the ones just off-screen.

**Knowing you are getting out** (*needs WiFi*) — **Who is hearing me** asks PSK Reporter which receivers have copied *your* call, with distance, bearing and the report they gave you. **SWR protection** cuts a transmission short and latches the transmitter off above your chosen limit, because an FT8 burst is thirteen seconds of key-down into whatever the antenna is doing.

**WSPR** — A third page, reached by the same swipe: **Panadapter** → **FT8/FT4** → **WSPR**.

WSPR is a propagation beacon rather than a contact mode — a very slow, very weak signal carrying only your callsign, grid and power, which stations worldwide report hearing, so over an evening you get a picture of where your antenna and your band actually reach at levels where nothing else would be heard at all. Nobody replies and nothing goes in your log. The page lists what was heard each two-minute cycle with the band, distance and bearing, and the furthest of the session. Receiving is the default; transmitting is opt-in, refuses to key without your callsign and grid, and has a transmit schedule and optional band hopping. **Calibrate Power** sweeps *Max. PA voltage* on a dummy load and measures real RF output at each step, per band. **Declared power** then only offers the standard WSPR dBm steps your calibration actually reaches — each one labelled with its real measured wattage, not a textbook figure — so what you declare (published worldwide with every spot) matches what actually goes out. A WSPR transmission keys the radio for about 110 seconds in every 120, so picking a low declared level for long beacon runs is how you protect the finals now, rather than a fixed voltage cut applied underneath you. **Output power**, a separate slider for every other mode (FT8, CW, SSB, ...), shares the same calibration but stays out of WSPR's way entirely — Declared power always owns the radio there. What you hear can be published to [wsprnet.org](http://wsprnet.org) (*needs WiFi*).

**Radio menus** — The QMX's own 80×24 menu system, on the Tab5 and in the browser, over the radio's *second* USB serial port so the panadapter keeps decoding while you are in there. For a QMX+ with no control panel it is the only way in. Leaving hands the radio back properly and restores your frequency and mode.

**Updating from the device** (*needs WiFi*) — A new release is fetched quietly in the background and offered once, in a window in the middle of the screen, with **Restart now** or **Later**. Nothing is ever installed without you asking, and the automatic download can be switched off if you are on a metered connection. The spectrum, waterfall and FT8 decoding keep running throughout.

**Activation logging** — Start a **POTA** or **SOTA** activation and every contact is stamped with the reference as it is logged, counted against the threshold, with chases tagged from spots already seen and a single-reference ADIF export for uploading.

**Bluetooth mouse** — A pointer that works *while the QMX stays plugged in*, which a USB mouse cannot do on this hardware. Pair once; it reconnects by itself. Move, click, and a wheel that scrolls whatever is under the pointer — **and over the spectrum or waterfall, that wheel tunes**: 10 Hz a click in CW and the digital modes, so a signal can be zero-beaten by ear, and 100 Hz in SSB (*Roy KIOER, John Dusek*). It stops at the band edges, and anything on top of the panadapter — a modal, the settings drawer — takes the wheel instead, so the dial never moves under something you are reading. **The mouse must be Bluetooth 4.0 or later (Bluetooth Low Energy)**. The Tab5's Bluetooth comes from a co-processor with no Bluetooth Classic radio, so an older Classic mouse cannot work and no firmware change can help — it never appears to the Tab5 at all. Most mice sold since about 2014 qualify; a dual-mode mouse works on its Low Energy channel.

**PSK Reporter spotting** (*needs WiFi*) — The stations you decode are reported to [PSK Reporter](#) the way WSJT-X does, so you appear on the map as a monitoring station. **On by default**; sends your call and grid plus each decoded station's call, grid, frequency, report and mode, batched at most once every five minutes — over the internet only, **never on the air**. One checkbox turns it off, and it is inert until your callsign and grid are set, and in simulation mode.

**Web UI** (*needs WiFi*) — The whole panadapter in any browser on the LAN: live spectrum and waterfall at ~10 fps, click or drag to tune, mouse-wheel pan and tune, band/mode/bandwidth/zoom control, a graphical S-meter and the whole-band plan strip. In FT8/FT4 mode it shows a live TX status banner and a **Call CQ** button instead of the stream. Also: the QSO log as a sortable table, config download/upload as an editable text file, a microSD file browser, screenshots, and the diagnostic log.

**Built-in user manual** — This entire guide is compiled into the firmware, so it opens instantly with no WiFi, no card and no download, and can never describe a different version than the one you are running. It opens at the chapter for the screen you are on, warning banners are tappable, and a **Need guidance?** panel lets you pick your symptom in plain words. See [Getting help](#).

**Time, with or without a network** — SNTP when WiFi is up (*needs WiFi*), the Tab5's own supercap-backed RTC across power-off, the QMX's clock as an offline fallback, GPS detected and phase-locked automatically if your QMX has one, and a manual set-and-sync panel. FT8/FT4 timing also self-corrects from the decoded band consensus when offline.

**Decoded CW** (*new in v1.11.1*) — In CW or CW-R, a line along the bottom of the panadapter shows the Morse the radio is decoding, with an estimate of the sending speed. The **QMX does the decoding itself** and hands the text over CAT, so it costs the panadapter no processing at all and does not touch the spectrum or FT8. Works on QMX firmware 1.03 and later, on the Tab5 and in the browser, and switches off in the settings drawer under Radio (*suggested by Uwe DL8UG*). With a card in the slot it is also written to `qmx-panadapter/cw-decode.txt` with timestamps, so a half-caught callsign can be resolved afterwards (*Michael K Johnson KZ4LY*).

**Frequency format** — The frequency readout, preset buttons, WSPR band picker, keypad and spectrum scale can be punctuated 14.074.000 (the default, and what the QMX shows on its own LCD) or 14,074,000 (*Don N2VGU*). Settings drawer, under Advanced.

**microSD station backup** — Insert a card (a plain FAT32 32 GB card is ideal) and your whole station is mirrored to `/qmx-panadapter/`: the ADIF log, a full config export, your LoTW certificate and key, the diagnostic log and a self-describing `README.txt`. Continuous with WiFi off (green **SD** dot); one complete backup per start-up with WiFi on (yellow dot), because the card and the WiFi co-processor share a bus. It restores too, which is the half that was missing: **Restore from SD** in the Tab5's own log window, or from the browser. And because the card mirrors the *present*, the copy from just before the log last got **smaller** is kept beside it as `qso.prev.adf` — so a deletion you notice two restarts later is still recoverable. **After inserting the SD card your Tab5 needs a restart** — the card is claimed during a short window early in boot, so one pushed in while it is running is not used until then. (*The card holds credentials — WiFi password, QRZ/eQSL logins, LoTW private key — so keep it physically secure.*)

**Diagnostics** — An always-on diagnostic log, nothing to enable: 5 MB in RAM, a rolling copy in flash that survives a power cut, and a full mirror to microSD if a card is in. Downloadable from the browser or over USB serial. **A crash survives the reboot** — if the Tab5 ever restarts unexpectedly, the next boot records what happened, in which part of the firmware and how far into the session, so a diagnostic download is enough to answer it.

**Practice mode** — A simulator with phantom stations that call CQ and reply through the real encode/decode pipeline, so you can rehearse a full QSO with **no radio connected** — and with a hard interlock that never keys a QMX even if one is attached.

**Touch, keyboard, mouse** — Edge-swipe navigation with breathing grip handles, an on-screen keyboard, and optional support for the M5Stack Tab5 70-key snap-on keyboard — which drives the radio's own menus, works in every window with buttons, scrolls the settings drawer and the manual, and carries Ctrl shortcuts you can reassign yourself. It can be attached or reattached at any time, not only at boot. A **Bluetooth keyboard** does the same: every text box, Enter and Esc in every window, Tab between fields and the arrow keys, with the on-screen keyboard stepping aside while one is connected. A keyboard and a mouse can be connected at once, in either order. [△](#) Bluetooth keyboards are **US layout only** — a Bluetooth keyboard reports key *positions* rather than characters, so letters, digits, Enter and the arrows are right on any keyboard while punctuation on a non-US layout will not be. Plus USB mouse support. *(The mouse and the QMX cannot share the single USB host port — the ESP32-P4's USB stack lacks the Transaction Translator a hub would need — so the mouse is for setup, log review and reading the manual with the radio unplugged.)*

**Settings you decide the shape of** — Every setting appears on the Tab5 and in the browser, and the drawer has a **Basic** and an **Advanced** view. Which sections appear in which is yours to set, from a **Tab5 config** button in the web UI's Settings window; a firmware update that adds a setting shows it rather than hiding it behind a layout saved before it existed.

**Built for the field** — WiFi is entirely optional, and can be given a static address if you want the browser bookmark to keep working; battery percentage with a charge limit for battery care; display sleep and a 180° flip for awkward mounting; config backup and restore as a text file; and a settings reset that does not need a reflash.

---

# Contents

---

## Chapters

|                                                                                                   |    |                                                                                  |     |
|---------------------------------------------------------------------------------------------------|----|----------------------------------------------------------------------------------|-----|
| <b>1. Quick Guide</b> .....                                                                       | 9  | <i>onboard decoder, decode list</i>                                              |     |
| <i>get on air in 10 minutes</i>                                                                   |    |                                                                                  |     |
| <b>2. Panadapter</b> .....                                                                        | 16 | <b>7. FT8 Transmit</b> .....                                                     | 60  |
| <i>spectrum, waterfall, zoom, touch-to-tune, S-meter, memory channels</i>                         |    | <i>reply, CQ-run, auto-QSO, ADIF logging</i>                                     |     |
| <b>3. Live spots</b> .....                                                                        | 35 | <b>8. Time sync</b> .....                                                        | 87  |
| <i>POTA, RBN and DX cluster callsigns drawn on the spectrum</i>                                   |    | <i>WiFi/SNTP, Tab5 RTC, POTA/offline use</i>                                     |     |
| <b>4. Spot map</b> .....                                                                          | 40 | <b>9. Settings</b> .....                                                         | 95  |
| <i>who is hearing YOU - RBN, PSK Reporter and WSPR reports of your own signal, on a world map</i> |    | <i>every drawer control, group by group</i>                                      |     |
| <b>5. Web UI</b> .....                                                                            | 45 | <b>10. WSPR</b> .....                                                            | 119 |
| <i>browser panadapter and remote control</i>                                                      |    | <i>two-minute propagation beacon - where your signal actually goes</i>           |     |
| <b>6. FT8 Receive</b> .....                                                                       | 52 | <b>11. Radio menus</b> .....                                                     | 130 |
|                                                                                                   |    | <i>the QMX's own menu system on the Tab5 - the only way into a headless QMX+</i> |     |
|                                                                                                   |    | <b>12. Reference</b> .....                                                       | 135 |
|                                                                                                   |    | <i>gestures, web API, hardware</i>                                               |     |

## Appendices

|                                          |     |                                            |     |
|------------------------------------------|-----|--------------------------------------------|-----|
| <b>Appendix A — Build from source</b> .. | 138 | <b>Appendix C — Roadmap</b> .....          | 141 |
| <b>Appendix B — Under the hood</b> ..... | 139 | <b>Appendix D — Related projects</b> ..... | 143 |
| <i>DSP, I/Q correction, quirks</i>       |     | <b>Appendix E — License</b> .....          | 147 |

---

# 1. Quick Guide

---

## Step 0 — Check your QMX firmware first

Power the QMX on by itself and read the firmware version off its own display at boot. You need **1.03.002 or newer**. If yours is older, update the QMX *before* connecting the Tab5 — everything that follows depends on it. This takes 10 seconds to verify and saves hours of debugging. Everything from **1.03.002** up to and including **1.04.010** works with the panadapter; on 1.04 the Tab5 additionally offers **AM mode** and an **Antenna Tune** button (SWR tune with a live power/SWR readout) — both stay hidden on 1.03.002, so there's no downside either way.

**Do not use 1.04.011 (19-Sep-2026) yet.** One operator reports no transmit output when the radio is keyed over CAT from the Tab5, and others report the radio's own Tune SWR and Hardware Test screens freezing until power-cycled. All of it clears on 1.04.010. Reported to QRP Labs; this note will go when there is a fix.

## Step 1 — Flash the Tab5 firmware

Use the one-click flasher in [tools/QMX-Panadapter flasher/](#) (also attached to each [release](#)):

1. Plug the Tab5 into your computer with a **USB-C data cable** — charge-only cables will not work.
2. Run the flasher:
  - **Windows** — double-click `flash.bat` (fetches esptool by itself on first run; nothing to install)
  - **macOS** — double-click `flash.command` (needs esptool once — `brew install esptool` recommended; `pip3 install esptool` often fails on recent macOS with an "externally-managed-environment" error). If macOS blocks the script, right-click → **Open**, or run `bash flash.command` in Terminal (no `chmod` needed).
  - **Linux** — `bash flash.command` (needs `pip3 install esptool`)
3. The flasher asks **normal or clean** (see below) — just press **Enter** for a normal flash.
4. Wait for SUCCESS. The Tab5 restarts on the new firmware.

**The firmware is already in the zip** — `bootloader.bin`, `partition-table.bin` and `qmx_panadapter.bin` sit next to the script, and those are what get flashed. Nothing is downloaded except `esptool` itself, once, if your computer doesn't already have it. So after the first successful run the flasher works with no internet at all.

**Normal vs clean flash.** Just before flashing, the flasher asks:

*Type E for a CLEAN/ERASE flash, or just Enter for a normal flash*

- **Normal (press Enter)** — updates the firmware and **keeps** all your saved settings (WiFi, callsign, grid, memory channels, ADIF log). This is what you want almost every time.
- **Clean (type E)** — wipes the whole chip first, so **every saved setting is permanently erased**: WiFi name *and* password, callsign/grid, all memory channels, and the logged QSOs. Use it only if something is stuck or corrupted (e.g. WiFi refuses to turn on no matter what). Back up first with **Config** ↓ (below) so you can restore in seconds afterwards.

**If the flash keeps failing, reboot the Tab5 and try again — before anything else.**

The Tab5's USB serial connection is produced by the ESP32-P4 itself rather than by a separate USB chip, so a busy running firmware can leave the COM port listed in Windows Device Manager while it no longer answers the flasher. A reboot clears it. After that, the usual causes are a charge-only cable or a serial monitor still holding the port. (*Samuel W7STF, after a 7-hour session.*)

Building from source? See [Build from source](#).

## Step 2 — Connect the cables

You need **two** USB connections, and the cable to the QMX is the one people get wrong:

| Connection   | Port on Tab5 | Cable                              | Carries                         |
|--------------|--------------|------------------------------------|---------------------------------|
| Tab5 → QMX   | USB-A (host) | USB-A → USB-C, full data cable     | I/Q audio (UAC) + CAT (CDC-ACM) |
| Tab5 → power | USB-C        | Any USB-C power cable (5 V / 2 A+) | Power                           |

**The #1 failure is a charge-only cable.** Many USB-C cables — especially thin ones bundled with phones and chargers — carry power only, no data lines. If you use one between the Tab5's USB-A port and the QMX, the Tab5 powers the QMX but sees no audio and no CAT: the spectrum stays flat and the top bar shows Band: ---. Use a cable you know does data (one that works for a USB stick or phone file transfer). When in doubt, swap the cable first.

**Power-on order matters.** Turn the **Tab5 on first** and let it finish loading, then turn the **QMX on**. Within a few seconds the top bar should populate Band / Mode / BW and the spectrum should come alive.

Once flashed you can power the Tab5 from any 5 V/2 A USB-C source or the internal battery — the laptop is only needed for flashing. For diagnostics the Tab5 also outputs a serial log over the USB-C data connection (useful if WiFi is not available), but for most users the built-in **diagnostic log** — always on, nothing to enable — is the easier path — see [Step 7](#).

### Step 3 — Find your way around

The whole app is driven by **one-finger swipes from the screen edges** and **taps on the top bar**. The settings drawer is always one swipe away — no hunting for hidden menus.

| Gesture        | From             | Does                              |
|----------------|------------------|-----------------------------------|
| Swipe →        | Left edge        | Cycle Panadapter → FT8/FT4 → WSPR |
| Swipe ←        | Right edge       | Open settings drawer              |
| Swipe ↑        | Bottom edge      | Open memory channel picker        |
| Tap or swipe ↓ | Any top-bar item | Open that item's selector         |

Slim "breathing" grip handles on each edge show where to swipe — faint enough not to clutter the display, visible if you look for them.

The top bar reads **Band · Mode · BW · Freq · Signal · Zoom** left to right. Tap any item to open a selector — **Freq** opens the frequency keypad; **Mode** switches USB/LSB/CW/DiGi; **BW** selects SSB filter width (USB/LSB only); **Band** jumps to a configured band; **Zoom** selects a zoom preset.

See the [full gesture table](#) in the Reference section.

## Step 3b — Choose FT8 or FT4 mode

FT8 is available on all HF bands; FT4 is available on select bands with published frequencies (20 m, 30 m, 40 m, etc.). To switch between them:

1. **In Panadapter mode:** Tap the **Mode** selector in the top bar, then choose **DiGi** (the digital mode group).
2. **In FT8 screen:** Tap the **Preset** frequency button to open the band/mode picker — you'll see **two columns**: FT8 (gold header) on the left, FT4 (cyan header) on the right. Tap any frequency in the FT4 column to switch modes.

The decode list, TX controls, and slot timing (countdown bar, which-parity-next) all adapt automatically to the active mode. Switching modes clears stale decodes from the previous mode so you don't work old QSOs.

### When to use each mode:

- **FT8** — Most populated band in SOTA/POTA; longer decode window gives more time to prepare replies on slow links or weak signals.
- **FT4** — Faster QSO cycle for busy bands (Field Day, major contests, 20 m pile-ups) and operators who prefer shorter waits between exchanges.

## Step 4 — Fill in your settings

**On first boot the Tab5 opens a setup prompt automatically** — it will ask for your callsign, grid square, and WiFi credentials before you reach the main screen. You can skip any field and fill it in later via the settings drawer.

To open the settings drawer at any time: swipe in from the right edge, or tap the right grip handle.

- **WiFi** — enter your SSID and password. Recommended for everyone: you get accurate UTC time (needed for FT8 slot timing), the browser web UI, and remote diagnostics. The **WiFi initiated** checkbox below the WiFi section is an on/off master switch — uncheck it for POTA or field use with no network.
- **Identity** (callsign + grid square) — *only required for FT8/FT4 transmit*. Enter your callsign and Maidenhead grid (4 or 6 characters, e.g. J045 or J045ab). The grid also drives the distance and bearing columns in the FT8 decode list.

Everything else — dB range, smoothing, colour map, brightness, IQ balance — has sane defaults. Adjust if you want to, but you don't need to on first use.

## Step 5 — Using the panadapter

Switch the QMX to any band and watch it come alive. This is the foundation of the device regardless of which modes you operate.

**Tap or drag to tune.** Touch anywhere on the spectrum or waterfall to place the cyan cursor. Drag and it snaps to a mode-aware grid — 10 Hz steps in CW, 250 Hz in SSB, 500 Hz for FT8/FT4 — so you can land precisely on a signal before lifting your finger. Lift, and the QMX retunes.

**Swipe fast to pan instead.** A quick horizontal swipe (rather than a held drag) slides the whole view left or right and retunes to wherever you let go — the fastest way to slide along a band. See [Touch-to-tune](#) for exactly how the two gestures are told apart.

**Or move precisely with the band-plan slider.** For a controlled move rather than a quick swipe, drag the framed "visible window" on the band-plan strip (along the bottom) to exactly where you want to be on the band — the spectrum, waterfall, and VFO all follow it, so you can place yourself precisely on a segment before you even tap a signal.

**Zoom in on a crowded band.** Pinch with two fingers to zoom up to  $\times 24$ . On a CW band at  $\times 8$  or higher you can resolve individual signals a few hundred Hz apart, read the spacing between callers, and pick your target before you tune. The frequency axis scales with you, down to Hz precision at high zoom. Double-tap anywhere to reset to the full 48 kHz view.

**Find your place on the band.** The thin band-plan strip along the bottom of the screen (just above the status bar) colour-codes the CW/Digi/Phone segments around you — pick your IARU region (or leave it on Auto) in the settings drawer → **Band-plan region**. The framed window on the strip is a **slider**: drag it (or tap anywhere on the strip) to move precisely to any spot on the band, and the spectrum, waterfall and VFO all follow along. You can also grab that slider from anywhere along the bottom status bar and drag sideways — a taller target — while a vertical up-swipe there still opens memory channels.

**Read your passband.** Two grey vertical lines on the spectrum mark your current filter edges. The BW label in the top bar shows the active width; tap it to choose 2.5 / 2.7 / 2.9 / 3.2 kHz in USB or LSB. A coloured tint fills the passband so you can always see exactly what slice of the band you're receiving.

**Watch the S-meter.** The Signal field in the top bar is a live tick-scale bar (S1 through S9+20), driven by the actual signal under your VFO cursor.

**Flat-spectrum mode.** Toggle **Flat spectrum** in the settings drawer to switch from absolute dBm to dB-above-local-noise-floor. Noise collapses to a calm baseline; real signals — including weak CW tones in the mud — pop sharply above it. Recommended on noisy bands.

**Save your spots.** Swipe up from the bottom edge to open the memory channel picker — a 4×8 grid of 32 channels. It doesn't greet you with blank cells: a fresh device arrives with a handful of **example channels already filled in**, and each one is **colour-coded by mode** (CW green, DiGi teal, USB brick-red, LSB purple) so you can read the whole grid at a glance without opening a single label. The very first time you open it, a quick **guided animation** walks you through the gestures — watch a channel slide to a new slot, then drop into the wastebin and vanish — so you learn "drag to move, drag to delete" in about ten seconds, once, and never again.

Then it's yours: **tap** a channel to recall it (the QMX retunes instantly), **tap an empty slot** to store the current frequency/mode, **long-press** to edit, **drag** a channel to reorganise the grid, and **drag onto the wastebin** (bottom-right cell) to delete it.

**Monitor from another room — or operate remotely.** Once WiFi is configured, open <http://<tab5-ip>> in any browser for a full-featured live panadapter with mouse-driven tuning, band/mode controls, and ADIF log download. The IP is shown in the bottom status bar. See [Web UI](#).

## Step 6 — FT8 (if that's your thing)

Swipe in from the **left edge** to switch to the FT8 screen. The Tab5 starts decoding 15-second slots immediately — no PC, no WSJT-X required.

1. Tap the **Preset** button and pick your band's conventional FT8 dial frequency (e.g. 14.074 MHz for 20 m).
2. Watch the decode list fill. CQ stations appear at the top sorted by SNR; exchanges and replies below.
3. To reply to a station: **hold your finger on their row** for ~250 ms. A dim highlight appears after ~80 ms so you can see which row you're targeting before the gate fires. Lift — a confirmation modal shows the exact message before anything is armed.
4. Tap **Auto Pounce** to hand the full QSO to the auto-engine (works through report → RR73 → 73 with patient retry), or **Transmit** for a single manual message.
5. To call CQ: tap **Call CQ**. The engine picks a clear audio slot, fires CQ, automatically answers the first caller, runs the full exchange, logs the QSO, and resumes calling CQ.

Every completed QSO is written to an ADIF log downloadable from the web UI. See [FT8 Transmit](#) for the full picture, including ARRL Field Day exchange mode and a no-radio-keyed practice/simulation mode.

## Step 7 — Something not working?

### Spectrum flat, top bar shows ---:

- Check the cable between Tab5 and QMX — almost always a charge-only cable.
- Make sure the QMX is powered on and not stuck in its own bootloader.
- Power cycle in order: Tab5 first, then QMX.

### For anything else:

1. The diagnostic log is **always on** — nothing to enable.
2. Reproduce the problem (let it run a minute; power-cycle the QMX if the issue is about connection).
3. Grab the log:
  - **Over WiFi:** in the web UI take **Files ▲** → **Diagnostic download ↓**. That one item fetches **both** logs — `qmx-log.txt`, the current session held in RAM, and `qmx-log-saved.txt`, the copy persisted to flash that survives a reboot or a flat battery. If the device restarted, the saved one is the interesting file. (Directly: `/api/log` and `/api/log/saved`.)
  - **microSD:** if a card is inserted, the log is mirrored to `/qmx-panadapter/qmx-log.txt` on the card — continuously with WiFi off, or up to the start-up backup with WiFi on (alongside the always-on flash-persisted copy, which is complete either way).
  - **Over USB (no WiFi needed):** capture the serial console with `tools/capture_serial_log.ps1`.
4. Open an [issue](#) and attach the log. It includes Tab5 and QMX firmware versions plus every CAT command exchanged — usually enough to pinpoint the problem immediately.

---

## Getting help

**This whole guide is inside the firmware.** No WiFi, no microSD card, no download: it works on the first boot, in a field with no signal, and it can never describe a different version than the one you are running. Swipe ← from the right edge to open the settings drawer; the top two buttons are the two ways in.

**User Manual — opens where you are.** Not a contents page to search: it opens the chapter covering the screen you were on — the panadapter chapter, the FT8 **receive** chapter, or the FT8 **transmit** chapter if a transmission is armed or running (someone mid-transmission is asking a different question). Inside: **Contents** is a two-column list — press and slide, and lifting your finger opens the highlighted chapter; **Back** returns to the previous page (shown only when there is one); **Exit** puts you back where you came from. Edge swipes and top-bar taps are stood down while the manual is open, so a stray touch cannot retune behind it. Holding the **User Manual** button for 3 s resets the reader; the manual itself is part of the firmware and cannot be lost.

**Need guidance? — describe the symptom, not the cause.** The second drawer button opens a short list headed "*What do you need help with?*", written the way you would say it out loud — "My radio is not showing up", "Nothing appears in the decode list", "It never transmits", "How do I change what my CQ says?", "Where are my contacts logged?" Pick the one that fits and the manual opens at the section that answers it. The list holds questions as well as faults, and it scrolls — keep going past the first few rows.

**Rows the Tab5 can see are happening now are highlighted and floated to the top:** no CAT link to the QMX, IQ mode never confirmed, an empty decode list while FT8 is running with the radio present, or WiFi switched on but not connected. WiFi switched **off** deliberately — POTA, battery — is not reported as a fault; that row stays as a normal question. **The device ranks, you choose:** a highlighted row is a suggestion, and it will never navigate for you on inference. The rows offered are scoped to the screen you opened the panel from, so FT8 never offers you spectrum symptoms.

**Warnings you can tap.** A warning you cannot act on is half a warning. The red "**QMX IQ mode not confirmed**" banner across the top of the screen is a button — tap it for the section on that exact fault. The "**Waiting for QMX**" message carries a small **Need help?** button; it says *help* rather than *what is wrong* on purpose, since a radio that is off is often off deliberately.

If a chapter does not answer your question, that is a documentation bug worth reporting — the wording of these rows is written from what operators actually say.

---

## 2. Panadapter

---

The panadapter is your primary view — a real-time spectrum analyser and waterfall for the QMX.

## 2.1. Layout

```
type: stack
title: The panadapter screen, top to bottom
row: 60 Top bar | frequency, mode, filter width, S-meter, zoom
row: 200 Spectrum | green trace, amber VFO cursor, tinted passband
row: 32 Frequency axis | absolute MHz labels
row: 370 Waterfall | newest row at the top, SDR gradient
row: 22 Band-plan strip | CW / Digi / Phone segments, with the visible span marked
row: 36 Status bar | battery, UTC clock, WiFi
note: amber | the VFO cursor sits at the dial frequency; in USB the passband tint runs
note: dim | in a digital mode the tint spans 150-3200 Hz, the QMX's one fixed digital
note: dim | the top-right 200 x 120 of the spectrum is a deadzone, so a tap near the di
```



## Status bar indicators:

Left to right: battery, the SD dot, the firmware version, the UTC clock, and the WiFi indicator with the network name and IP address.

| Item                                               | Meaning                                                                                                                                                                                                                                                                                                                                                                   |
|----------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Battery %                                          | Charge level (e.g. 88%, or 88% ⚡ while charging). (limit) is appended when charging has been deliberately capped at your Battery Care setting - it reads identically to "not charging" otherwise, and this tells you it's on purpose (v1.9.4)                                                                                                                             |
| <b>SD</b> (green dot)                              | A microSD card is mounted and being mirrored <b>continuously</b> — the case with WiFi off (see <a href="#">Settings</a> )                                                                                                                                                                                                                                                 |
| <b>SD</b> (yellow dot)                             | A card is present and your start-up backup is written, but continuous mirroring has stopped — the case with WiFi on. Your log, config and LoTW certificate are safe on the card; later QSOs are written at the next start-up                                                                                                                                              |
| UTC(GPS) /<br>UTC(NTP) /<br>UTC(FT8) /<br>UTC(FT4) | The time source <b>currently</b> in charge — GPS-disciplined QMX, WiFi/SNTP, or FT8/FT4 offline sync (RTC / manual show as UTC(RTC) / UTC(MAN))                                                                                                                                                                                                                           |
| Firmware version                                   | Currently flashed firmware version                                                                                                                                                                                                                                                                                                                                        |
| WiFi fan icon                                      | Link strength, at the right-hand end with the network name and IP address. The dot alone means a weak link (above 25 %), plus the first bow above 50 %, plus the second above 80 %; all three faint means connected but very weak, or off. From v1.3.4 this replaces the old -NN dBm figure — the width went to the network name, which is far more often too long to fit |

## 2.2. Touch Controls

### Tap to Tune

Tap anywhere on the spectrum or waterfall to jump to that frequency. The tap snaps to a frequency grid so you land on a sensible frequency rather than wherever your fingertip happened to be.

With a mouse the rule is simply the colour of the pointer: **white means clicking tunes, green means you are over something that will act instead** — a callsign, a top-bar control, an edge handle. Press and hold, or click and hold, and drag if you want to place the cursor before committing; a finger and a pointer behave identically.

#### Note - Fixed in v1.8.1

Before v1.8.1 a band across the upper part of the spectrum quietly refused to tune — the touch areas behind the top bar had been made shallower without the tune code being told, so that strip belonged to nobody. It looked as though tuning only worked near the centre frequency, while the waterfall was fine.

Callsigns from [Live Spots](#) are drawn over the spectrum and are the one exception: tapping a **callsign** tunes to that station and sets the mode, rather than tuning to the point you touched.

The snap step follows the **mode**, not the zoom level — a CW signal needs to be found to the hertz, an FT8 dial frequency does not:

| Mode                    | Snap step |
|-------------------------|-----------|
| CW / CW-R               | 10 Hz     |
| USB / LSB               | 500 Hz    |
| DiGi / FT8 / FT4 / RTTY | 500 Hz    |

### **Note - In CW the display allows for your CW offset — including when you change it**

A CW signal you can hear at 700 Hz is not on the dial frequency, so the spectrum, the waterfall and tap-to-tune all allow for the radio's **CW offset**. That figure is read from the radio, and since v1.8.5 it is **re-read every few seconds while you are in CW**, so changing CW offset or CW centre on the radio itself is followed within a few seconds.

Before that it was read only once when the Tab5 connected, so if you changed it afterwards the display kept compensating by the old value and tapping a signal tuned you slightly off frequency — you would then transmit off frequency as though XIT were on. Reported by Roy KI0ER.

| AM / FM | 1 kHz |

### **RIT — receiving off your transmit frequency**

Someone answering your call a couple of hundred hertz off your frequency is the ordinary case this is for: you want to hear them without moving your own transmit frequency, which everyone else is listening on.

1. Tap **RIT** at the top right of the spectrum. It turns amber and reads *click a signal* (in the browser) or waits for a tap.
2. Tap the caller on the spectrum or waterfall. The dial does **not** move. A dashed magenta line appears where you are now listening, in the spectrum and down the waterfall, and the filter window moves onto them.
3. It stays armed, so the next caller is another tap.
4. Tap **RIT** again to clear the offset and switch it off.

The offset is also printed beside its own marker over the waterfall, as +250 Hz, so you can read how far off you are listening without looking at the corner.

**Long-press RIT to park the offset instead of clearing it.** The offset is remembered and RIT switches off; long-press again and it comes back unchanged. The button reads **RIT (+250)** in brackets while an offset is parked. This is for a round robin or a net where one station is off frequency: you drop the offset when the turn passes back to the stations who are on frequency, and pick it up again without re-dialling anything (suggested by Roy KI0ER). A parked offset is discarded when you retune — it belonged to that one station.

If you never use RIT, the button can be hidden: **Settings -> Radio -> Show RIT button** (also in the web settings). It is shown by default. If an offset is actually engaged the button appears regardless of that setting — the radio listening away from your dial is not something to leave unsaid on screen.

The gold line goes on marking the **dial** — which is where you transmit — so seeing both lines at once tells you transmit has not followed your receiver. Tuning anywhere by any means clears RIT, on the assumption that you have moved on.

While RIT is armed, taps use a 10 Hz grid whatever the mode. The normal grid above exists to land the dial on a tidy frequency; RIT is a fine adjustment onto one caller's tone, and SSB's 250 Hz step would leave only a handful of usable offsets. The range is  $\pm 500$  Hz — tapping further away clamps to the limit and says so.

Available in the browser too, where a click does the same thing. The offset itself is shared, so setting it on either screen shows on both; the *armed* state is per-screen, because arming changes what a click does and a click in a browser is not a finger on the Tab5.

The grid is anchored to absolute frequency, not to where your finger first touched, so the cursor always lands on the same set of points no matter where the drag began.

## Pinch to Zoom

Use two fingers to pinch in (zoom out) or pinch out (zoom in). The display centers on the passband width — in USB/LSB modes, the passband center stays on screen even when the VFO is off to the side.

### **Note - The darker band at each end of a zoomed view (improved in v1.8.3)**

Zooming filters the signal before it is re-analysed, and that filter starts rolling off just inside the edge of what is drawn — so the outer part of a zoomed view is slightly attenuated. It is a property of the filter, not a fault, and it has behaved this way since zoom was added.

v1.8.3 doubles the length of that filter, which roughly **halves the width of the darkened band** at each side. The alternative — widening the filter instead — was rejected deliberately: it would trade the dark edge for false signals appearing where nothing is transmitting. Measured and reported by Samuel W7STF, whose own estimate of the affected width was accurate.

## Pan (One-Finger Drag)

Drag horizontally with one finger to scroll the spectrum left/right. Release to tune to the new center frequency.

## Band-Plan Strip

Along the bottom of the screen — just above the status bar, below the waterfall — is a thin coloured strip showing where you are within the band at a glance. Each colour zone marks the conventional segment (CW, Digi, Phone) for your selected region (auto / ITU Region 1/2/3, set in settings).

The **visible-span block** inside the strip shows the exact portion of the band the spectrum and waterfall are currently displaying — it narrows as you zoom in and shifts as you pan.

A **passband sub-block** inside the visible-span block mirrors the current filter width at band scale (grey tint), so you can see how your passband sits within the CW/Digi/Phone zones.

### Tap and drag do different things, on purpose:

- **Tap** anywhere on the strip to jump to that frequency. Tapping says *go there*.
- **Drag the visible-span block** to move the window along the band. Dragging says *look there*. The block, the VFO marker and the passband all travel together as one piece, keeping the dial exactly where it sits inside the window, and the radio follows. Let go and it stays where you put it.

The filter passband and the CW/Digi/Phone labels hide while you drag and fade back in when you let go, so you can see the VFO marker arrive at its new home.

**The grab area is taller than the strip looks.** The strip itself is only a few millimetres, which is not a finger, so touches are accepted for about 8 mm of the waterfall directly above it as well. Tap-to-tune gives up that last centimetre of the waterfall — nothing interesting lives there, and it is the difference between catching the handle first time and getting a tune cursor instead.

**Drag from the bottom bar too.** The visible-span block acts as a slider handle that reaches *below* the thin strip: touch on or just under it — anywhere along the bottom status bar — and **drag sideways** to scrub the band, exactly like dragging the strip itself. This gives you a much taller grab target. It coexists with the memory-picker gesture on the same row: a **sideways** drag retunes the band-plan, while a **vertical up-swipe** still opens the memory picker.

The strip updates live as you zoom, pan, or change bands.

**Outside a band**, the strip reads "**Out of band — drag to tune**" in one flat colour instead of the CW/Digi/Phone zones, and returns to normal as soon as you are back inside a band. The frequency marker is hidden while you are out, because there is no band plan to position it against.

**Out of band the strip becomes a coarse tuner** (v1.8.3). Inside a band the strip is a *map* — where you touch is the frequency you get. Outside one there is no map to touch, so it works the other way round: a handle sits in the middle of the strip, and you **drag it off centre to move the dial**. Let go and it springs back to the middle, ready for the next pull.

- Dragging all the way to either edge moves by **half of what is currently on screen**, so two drags in the same direction overlap rather than skipping a gap. Nothing can scroll past unseen.
- It follows the zoom: zoomed in, the same drag is a finer step.
- A plain **tap** out of band does nothing on purpose — with no band plan behind it, a tapped position has no frequency to mean.

Suggested by Samuel W7STF, who pointed out that a row saying only "out of band" earns nothing when Band: --- in the top-left already tells you that.

## Memory Channels

Swipe ↑ from the bottom edge to open the memory picker — a 4×8 grid of 32 channels, each free to hold any frequency/mode (not tied to a band). Each channel stores:

- Frequency
- Mode (USB, LSB, CW, DiGi)
- Label (your own name for the channel)

Each button shows the mode colour (CW = green, DiGi = teal, USB = brick red, LSB = purple) so you can tell mode at a glance without reading the label.

**Recall:** Tap a filled channel to immediately retune to it.

**Tap an empty slot** to create a new channel there directly — the frequency keypad opens straight away.

**Long-press + drag a filled channel** to move it to a different empty slot — no editing needed, the data follows your finger. Release on an empty slot to drop.

**Long-press in place** to open the editor (change name, frequency, or mode).

Entering a frequency outside the legal amateur band edges is rejected immediately with an error — the pad stays open so you can correct it without starting over.

## 2.3. Top Bar

Tap any item to open its selector:

| Item           | Purpose                                                                                                                  |
|----------------|--------------------------------------------------------------------------------------------------------------------------|
| <b>14.074</b>  | Frequency. Tap to open the frequency keypad.                                                                             |
| <b>USB</b>     | Mode. Tap to open the picker: USB, LSB, CW, DiGi — plus <b>AM</b> once the connected QMX reports 1.04 or newer firmware. |
| <b>2.5 kHz</b> | Bandwidth (SSB only). Tap to choose 2.5, 2.7, 2.9, or 3.2 kHz.                                                           |
| <b>S7</b>      | S-meter. Shows received signal strength. Display only — there is nothing to tap.                                         |
| <b>1.0x</b>    | Zoom level. Tap to choose x1, x2, x4, x8, x16 or x24. Pinching sets any value in between.                                |

## 2.4. Spectrum & Waterfall

The **spectrum** shows signal power in dBm (default range –130 to –30 dBm) as a green curve with a dim fill. Each frame is smoothed per-bin with an exponential moving average —  $\alpha = 0.4$  by default, adjustable in the drawer — which balances a stable picture against a snappy response to CW keying and SSB attack transients.

The scale labels down the right-hand edge are **worked out from the dB range you set** (v1.8.3): the firmware picks round values that fit inside your Min and Max, choosing a finer step for a narrow range. Before this they were fixed at –40 to –120 regardless, so any range other than the default was described by labels that did not belong to it (found by Samuel W7STF running –118/–13). At the default range the labels are unchanged.

The **frequency axis** shows absolute MHz labels across whatever span is on screen, refreshed on every CAT frequency update. At high zoom the labels resolve to kHz or Hz precision. With **Still Spectrum** on — the default above  $\times 1$  — the axis stays put as you tune and the VFO marker moves along it; with it off, the axis is centred on the QMX VFO.

The **waterfall** runs newest row at the top, in a thermal SDR palette (black -> dark blue -> teal -> green -> yellow -> red). Four colour maps are available in the drawer:

**Thermal, Viridis, Turbo** and **Grayscale**.

**The waterfall floor tracks the band automatically.** Its black level follows a running median sampled only from bins *inside the passband*, EMA-smoothed, so the background colour follows conditions instead of sitting at a fixed anchor. Bins outside the passband are drawn darker and excluded from that calculation, so they cannot wash out dim in-band signals.

**Flat-spectrum mode** (drawer toggle, persisted) switches both spectrum and waterfall to a per-bin adaptive display: every bin renders as dB *above its own running noise floor*. Real signals — weak CW tones especially — stand out sharply against a calm baseline, which is why it is the mode to reach for on a noisy band. The dB-range sliders have no effect while it is on, and the axis shows relative dB above floor rather than absolute dBm.

**The picture is cleared when it would otherwise mislead.** Switching between Panadapter, FT8 and FT4, or changing band, clears the waterfall and resets the spectrum baseline, so stale signals from the old band cannot linger in the new one. The noise floor recalibrates and a new baseline settles in about a second.

**Waterfall controls** (in settings):

- **Black level** — how far above noise-floor to go black (default 9 dB)
- **Contrast** — dB span of the colour ramp (default 45 dB)
- **FFT window** — Blackman-Harris, Hann, or Nuttall (default Blackman-Harris)

#### **Note - Adaptive floor was removed in v1.8.3**

That slider could not change anything: the per-bin noise floor it blended towards is re-seeded many times a second, so both ends of it produced the same picture. It has been taken out of the drawer, as it already had been from the browser. The stored value is still kept and still exported with your configuration, so the control can come back the day the underlying floor tracking runs.

## **2.5. Frequency Keypad**

Tap the **frequency** on the top bar to open the keypad. Enter frequency in MHz format:

- **14.074** for 14.074 MHz
- **1.832** for 1.832 MHz
- **14.074.250** for 14,074,250 Hz — a third group is hertz within the kilohertz

Each group after a **.** is padded to three digits, so **14.07** is 14.070 MHz, not 14.007. Type a number with **no . at all** and it is taken as plain hertz.

The digit layout toggles between **10 Key** (calculator order, 7-8-9 on the top row) and **Phone** (1-2-3 on the top row). Pick whichever your fingers already know — the choice persists across reboots.

**Resize the keypad:** Pinch it or swipe up/down on it to toggle between the normal and a compact layout. Your choice is remembered across reboots. The compact layout reveals more of the spectrum behind it.

**Reposition the keypad:** Drag it by the **"Enter freq"** title label (the only non-button area at the top of the panel) to move it anywhere on screen, clamped to stay fully visible. The position is remembered so it reopens exactly where you left it.

The background behind the keypad is intentionally semi-transparent (40% dim) so the spectrum and waterfall stay visible while you're entering a frequency.

**Cancel and Enter are the only exits** — tapping outside the keypad does nothing, so an accidental background touch cannot silently discard what you were typing.

## 2.6. Memory Channels

32 memory channels (4×8 grid), free to hold any frequency/mode — not tied to a band. Each stores frequency, mode, and name. Swipe up from the bottom edge to open the memory picker.

Each slot shows its **label in large text**, with the mode and frequency dimmed beneath. Mode is also colour-coded — CW (green), DiGi (teal), USB (brick red), LSB (purple) — so the grid is scannable at a glance without reading every label.

**To recall a channel:** Tap it. The QMX retunes immediately.

**To create a new channel (empty slot):** Tap the empty slot — the frequency/mode picker opens directly, pre-filled with the current VFO so you can adjust both before naming it. No long-press needed.

**To edit an existing channel:** Long-press it in place. Change the name, frequency, or mode, then tap **Save**.

**To move a channel to a different slot:** Long-press and drag it to any empty slot. Release to drop. Only the data moves — the grid positions stay fixed.

**To save the current QMX frequency/mode to a slot:**

1. Swipe ↑ to open the memory picker
2. Long-press the slot you want to overwrite

3. The current frequency/mode pre-fills the editor — adjust the label if you like, then tap **Save**

**To delete a channel — drag it onto the wastebin:** the bottom-right cell (channel 32) is a **wastebin**. Long-press any filled channel and drag it onto the wastebin to delete it (it fades out). This is the way to clear a slot you no longer want.

**Example channels on first use.** A brand-new device ships with a few example channels already filled in (rather than 32 blank cells), so the grid is explorable straight away. These only seed empty slots — they never overwrite anything you've saved.

**First-run tour.** The very first time you open the memory picker, a brief (~10-second) one-time animation shows that channels can be **dragged** to move them and **dropped on the wastebin** to delete them. It plays once and never again.

**Out-of-band frequencies are rejected immediately** — if you enter a frequency outside a recognised amateur band, the keypad stays open so you can correct it rather than silently saving a wrong value.

## 2.7. Band Presets

Tap the **band name** on the top bar to switch between configured bands. The band selector shows:

- **160m, 80m, 60m, 40m, 30m, 20m, 17m, 15m, 12m, 10m, 6m** — standard bands (whichever your radio has configured)
- **11m** — the CB segment (26.9–27.5 MHz), shown on QMX+ radios that expose it
- **Custom** — user-added bands (via settings)

On radios with many configured bands (QMX+), the picker lays the bands out in **two side-by-side columns** so every band is visible without scrolling. Selecting a band jumps to the **nearest** band centre, so closely-spaced bands like 10 m and 11 m are no longer confused for one another.

Switching bands **remembers the last frequency you visited on each band**, so you can flip between 20m and 40m without losing your place.

## 2.8. Zoom & Pan

The QMX sends a 48 kHz-wide slice of I/Q, so **×1 shows 48 kHz** centred on the dial. Zooming narrows that window with a true zoom-FFT — you get finer resolution, not a stretched picture.

The zoom level is displayed on the top bar (e.g. **2.0x**). Tap it to choose a preset:

| Zoom | Visible span                                 |
|------|----------------------------------------------|
| ×1   | 48 kHz — the whole slice                     |
| ×2   | 24 kHz                                       |
| ×4   | 12 kHz                                       |
| ×8   | 6 kHz — CW pile-up detail                    |
| ×16  | 3 kHz                                        |
| ×24  | 2 kHz — individual CW signals well separated |

Pinching sets any value in between; double-tap returns to ×1 and re-centres.

| Gesture                          | Effect                                                         |
|----------------------------------|----------------------------------------------------------------|
| One-finger fast horizontal swipe | Pan ("stroll") the view — retunes to the new centre on release |
| Pinch (two fingers)              | Zoom ×1.0 – ×24.0                                              |
| Two-finger drag                  | Pan the zoomed window                                          |
| Double-tap                       | Reset zoom and pan to ×1.0, centred                            |
| Top-bar <b>Zoom</b> -> tap       | Pick a preset                                                  |

**One-finger pan (stroll).** A fast horizontal swipe — more than about 70 px of movement within the first 250 ms of touching down — slides the spectrum and waterfall under your finger in real time, with a live frequency tooltip, and retunes to wherever you release. It works at any zoom level, alongside the two-finger pinch and pan, and it is the quickest way to move along a band without dropping into a deliberate tune-drag.

At zoom levels above  $\times 1$  the display **centres on the passband**, not the VFO dial — which matters in USB and LSB, where the passband sits to one side of the carrier. It re-centres whenever you change mode, filter width or zoom, so the active receive area stays on screen, and the passband lines and frequency axis track correctly at every zoom level. What happens as you *tune* is governed by **Still Spectrum**, below.

The zoom level is **persisted**, and comes back at full zoom-FFT resolution on the next boot.

## 2.9. Still Spectrum

By default the spectrum and waterfall **hold still and the VFO marker moves across them**, so a signal stays where you last saw it while you tune towards it. This is how a Flex behaves, and it is what makes the waterfall readable as history: a signal's past sits directly above its present, under the frequency it belongs to, instead of the whole picture sliding sideways every time you touch the dial.

The view re-frames only when you tune far enough to need it:

| Where you are                         | What the display does                                                             |
|---------------------------------------|-----------------------------------------------------------------------------------|
| Inside the view                       | nothing moves at all                                                              |
| Your passband reaches the screen edge | still nothing — it keeps holding, and your passband begins to slide off the edge  |
| Half a passband width past that       | a page, carrying part of the old screen across so you can see where you came from |

The trigger is **your filter passband reaching the edge of the screen**, not a fixed percentage of the view. That distinction matters because the passband is not centred on the dial — in USB it runs roughly +200 to +2900 Hz — so a percentage rule re-frames too early at one edge and too late at the other, and mirrors itself in LSB. RIT is counted in, since it changes what you are actually listening to.

The display holds completely still right up to the page — it is never dragged along by the tuning. The cost is that your passband slides off the screen edge for a moment before the jump, which is why the allowance is **half** a filter width and not a whole one: long enough that a station right at the edge can still be worked, short enough that you are not tuning blind. How far you can tune between pages therefore depends on your filter — roughly a screen-width less half a filter, so about 4.7 kHz of a 6 kHz view on a 2.7 kHz SSB filter.

**Picking a spot brings it into view only if it is not already usable where it is.** Tap a spot that is comfortably on screen and the display does not move at all — only the VFO marker jumps to it, which is the whole point of holding still. Tap one that is off screen, or so close to an edge that your passband would not fit, and the display re-frames on it rather than leaving it stuck at the edge.

Changing mode, filter width or zoom re-centres the view on the passband, as before.

Switch it off under **Settings -> Radio & display -> Still spectrum**, and the display returns to re-centring on the dial at every step with the marker in the middle.

### **Warning - ×1 is always dial-centred**

Holding a view still needs somewhere for it to stay while the capture window slides underneath it. At ×1 the view is already the whole 48 kHz the radio sends, so there is no room and the setting has nothing to work with. Zoom to **×2 or beyond** for the still display.

## **2.10. The Hatched Region**

The QMX's local oscillator sits **12 kHz below the dial**. The 48 kHz it delivers therefore covers **dial–36 kHz to dial+12 kHz** — all of it real, but only 12 kHz of it above the frequency you are tuned to.

Above dial+12 kHz there is no data, and there never was. That part of the display is drawn **hatched** and does not respond to tapping, on the Tab5 and in the browser alike, with a caption saying why it is empty.

Before v1.10.5 the display filled that quarter of the ×1 view by wrapping the bottom of the band into it, and the frequency scale labelled it as dial+12 to +24. The signals shown there were real, but they were about 48 kHz from where the scale claimed — so tapping one tuned you to the wrong place entirely.

If a signal you want falls into the hatching, tune down or zoom in. The radio cannot hear above dial+12 kHz, and no display setting can change that.

## **2.11. Decoded CW**

In **CW or CW-R**, a single line along the bottom of the waterfall shows the Morse the radio is decoding — on the Tab5 and in the browser alike.

The decoding is not done by the Tab5. **The QMX has its own CW decoder** and hands the text over the CAT link, so this costs the panadapter nothing: no audio processing, no effect on the spectrum, no effect on FT8. It works on QMX firmware 1.03 and later — there is nothing to enable on the radio for most people, since its own **Decoder -> Enable Rx** setting is on by default (*suggested by Uwe DL8UG*).

The line reads:

```
CW ~18wpm:  CQ CQ DE OZ1LAV OZ1LAV K
```

- The **green header** carries the estimated sending speed and never moves. The number is zero-padded, so the text after it does not shift as the estimate crosses ten.
- The **cyan text** is what the radio decoded, in a fixed grid of 72 characters.
- When the line fills, it **wraps and writes over the oldest end** rather than scrolling. Nothing slides sideways, so a callsign you are half-way through reading stays where it is. Two blank spaces travel ahead of the writing position — after the first wrap, that gap is what tells new text from old.

**It is written to the microSD card too**, if one is in the slot: everything decoded goes to `qmx-panadapter/cw-decode.txt` with a timestamp on each line, so a callsign you only half-caught can be resolved afterwards (*Michael K Johnson KZ4LY*). The line on screen holds one screenful; the card holds the session.

With WiFi on, the card is written every 30 seconds rather than continuously, so the last few characters of a session may still be in memory when you pull the card. Switch the radio off and give it half a minute if you want the very end of an over.

While the web page is open the card writes wait, because writing the card stalls the spectrum stream for several seconds on this hardware. They go through anyway after three minutes, so nothing is lost — but if you want the transcript fully up to date, close the browser tab and give it half a minute.

**About the speed.** It is a *throughput* figure: characters per unit time, counting the gaps between words and between overs. During a real exchange it therefore reads **lower** than the other operator is actually sending, and only approaches their true speed during continuous sending. The radio hands over finished characters, so the element timing a true speed measurement needs is already gone. That is why it is shown with a ~, and why it reads ?? rather than guessing when there is not enough to go on.

**About the noise.** With no signal the decoder chews on noise. Two kinds of rubbish are filtered out before anything reaches the screen:

- \* — the decoder's marker for a symbol it could not resolve. Measured on a live band it was the single most common thing arriving, and it is never part of real text, so it is dropped outright.
- Long runs of **E** and **T** — the two shortest Morse symbols, so noise lands on them more often than on anything longer, and worst just after switching to CW while the decoder settles. A long run is dropped; a short one is kept, because those are real letters and words like TEST and BETTER must survive.

A dropped run leaves one space behind, so words either side of it are not welded together.

**Turning it off.** Settings drawer -> **Radio** -> **Show decoded CW**, beside CW centre and the transmit offset. It is on by default and the setting is shared with the browser.

## 2.12. S-Meter

The **Signal** field in the top bar is a tick-scale bar labelled S1, S3, S5, S7, S9, +10, +20, with a moving green bar beneath it.

- **S1 to S9** — standard S-units, -130 to -73 dBm
- **+10 / +20** — above S9, in 10 dB steps

The scale is **S9 = -73 dBm**, 6 dB per S-unit below S9 and 1 dB per unit above it.

The reading is the peak level in a  $\pm 64$ -bin window centred on the **IF-shifted VFO bin** — corrected for the QMX's +12 kHz IF offset, so it measures the signal actually under your cursor rather than the DC/local-oscillator spike sitting at the centre of the spectrum. It stays live during FT8 capture.

It is a readout, not a control: there is nothing to tap, and there is no peak-hold mode.

## 2.13. Settings Drawer

Swipe ← from the right edge to open the settings drawer, or tap the right grip handle.

It is grouped — **Station, Device, Radio, Network, Display, FT8, WSPR, Spectrum** — with a **BASIC / ADVANCED** button at the top. Basic shows what an operating session needs; Advanced holds everything, including the tuning and calibration controls you set once. Which sections sit in which view is yours to change, from the web UI's **Settings** -> **Tab5 config**.

**Every control, group by group, is documented once in Settings** — deliberately in one place rather than summarised here as well.

**Next:** Learn about [FT8 Receive](#) or [Web UI](#).

## Touch-to-tune

Tap anywhere on the spectrum or waterfall to place the cyan tune cursor. Drag and the cursor snaps grid-point to grid-point — you can see exactly which frequency will be tuned before you lift. The snap grid is **mode-aware**:

**Tune vs. pan — how your finger is read.** A quick horizontal swipe (more than ~70 px within 250 ms) pans the view instead of tuning — see [Zoom & Pan](#). A slower touch-and-hold (250 ms without that much movement) locks into tune mode, after which dragging moves the snap cursor as described below. In short: swipe fast to pan, hold-then-drag to tune.

| Mode              | Snap step |
|-------------------|-----------|
| CW / CW-R         | 10 Hz     |
| USB / LSB         | 250 Hz    |
| FT8 / DiGi / RTTY | 500 Hz    |
| AM                | 1 kHz     |

The grid is anchored to absolute frequency (e.g. ...200 / 300 / 400 Hz), not to your touch start point, so the cursor always lands on the same set of grid points regardless of where your finger first touches.

A floating frequency tooltip above the cursor shows the target frequency in real time while dragging. Lift → CAT `FA` command is sent and the QMX retunes. What the display does next depends on **Still spectrum**, below.

Taps always tune to exactly where you touched (snapped to the mode-aware grid above). The old **Snap to signal** option — which hunted for the strongest bin near your tap — was removed in v0.19.4; predictable tuning won.

**Passband indicator.** Two grey vertical lines mark your current filter edges. A faint coloured tint fills the passband. The amber VFO marker shows where the QMX is tuned; in CW mode it sits at dial + CW pitch offset so it marks the actual received tone frequency, not the suppressed carrier. The offset comes from the radio and is re-read every few seconds while you are in CW, so changing it on the radio is followed rather than leaving the display compensating by a stale figure.

**Still spectrum.** By default, from  $\times 2$  zoom up, the spectrum and waterfall **hold still and the VFO marker moves across them**, so a signal stays where you last saw it while you tune towards it and the waterfall's history stays lined up under the frequency it belongs to.

The display is never dragged along by the dial. It holds, completely, until it pages in one step:

| Where you are                         | What the display does                          |
|---------------------------------------|------------------------------------------------|
| Your passband is inside the view      | nothing moves — only the marker                |
| Your passband reaches the screen edge | still nothing — it begins to slide off         |
| Half a passband width past that       | a page, carrying part of the old screen across |

Half a filter width is the whole allowance, and it is a deliberate compromise: long enough that a station right at the edge can still be worked, short enough that you are not tuning blind for long. How far you get between pages depends on your filter — roughly a screen-width less half a filter, so about 4.7 kHz of a 6 kHz view on a 2.7 kHz SSB filter.

**Tapping a spot** moves only the VFO marker when that spot is already comfortably on screen — the picture stays put, which is the point of the feature. If the spot is off screen, or so close to an edge that your passband would not fit, the display re-frames on it instead of leaving it stranded at the edge.

Switch it off under **Settings** → **Radio & display** → **Still spectrum**. At  $\times 1$  the view is already the whole 48 kHz the radio sends, so it stays centred on the dial.

**The hatched region.** The QMX's local oscillator sits 12 kHz below the dial, so the 48 kHz it delivers covers dial–36 kHz to dial+12 kHz — there is no data above dial+12, and that part of the display is hatched and inert. Before v1.10.5 it was filled by wrapping the bottom of the band into it and labelling it as dial+12 to +24, so tapping a signal there tuned you about 48 kHz away.

 Full chapter: [tab5.lav.dk/guide/panadapter](http://tab5.lav.dk/guide/panadapter)

---

## 3. Live spots

---

Live spots put other stations **on your spectrum**, at the frequency they are actually operating on, so you can see who is where without leaving the radio.

Two sources feed the same display:

| Source                              | What it tells you                                    | Default             |
|-------------------------------------|------------------------------------------------------|---------------------|
| <b>POTA</b> (Parks On The Air)      | Park activations currently spotted, any mode         | <b>On</b>           |
| <b>RBN</b> (Reverse Beacon Network) | CW stations the skimmer network is hearing right now | <b>Off</b> (opt-in) |

Both need WiFi. Nothing here transmits, and nothing here touches the radio until you tap a spot.

---

### 3.1. What you see

Spots are drawn **over the spectrum**, the way a FlexRadio or similar SDR shows them — the callsign sits around the middle of the spectrum with a thin vertical line dropping from it down to the frequency axis, so the line points at the frequency the station is on. The line is only 2 px wide, so the trace stays readable underneath.

**Colour tells you what a spot means:**

| Colour              | Meaning                                                  |
|---------------------|----------------------------------------------------------|
| <b>Amber</b>        | A POTA activation                                        |
| <b>Bright green</b> | An RBN (CW skimmer) spot                                 |
| <b>Grey</b>         | You have <b>already worked this station on this band</b> |

Grey is the useful one: it answers "do I need this station?" at a glance. It is band-aware, so the same operator on a different band is *not* greyed out — that is a new band-slot.

**Spots fade as they age.** A spot is a claim about *now*, and an old one pointing at an empty frequency is worse than no spot at all:

- Under 5 minutes old — full brightness
- Around 15 minutes — about half faded

- 30 minutes — gone

The callsign and its line always fade together.

**Off-screen counts.** When there are spots on your band that fall outside the window you are looking at, a small count appears in the bottom corner of the spectrum — < spots (3) on the low side, spots (5) > on the high side. It says "spots" in words rather than a bare <3, because a lone number against the edge of the spectrum tells you neither what it counts nor that you can tap it. These are **scoped to the band you are on**, so the arrow never points at something on 40 m while you are on 20 m. Each is coloured like the spot it will take you to.

**Crowded bands.** Only so many callsigns fit legibly side by side, so on a busy segment the closest-spaced spots lose their name — and a spot with no name is not drawn at all, rather than leaving a line pointing at nothing. Stations you have **not** worked are labelled in preference to ones you have, and fresher spots in preference to older ones.

### 3.2. Tapping a spot

**Tap a callsign** and the radio tunes to it *and* switches mode:

| Spot mode            | Radio goes to                           |
|----------------------|-----------------------------------------|
| CW                   | CW                                      |
| FT8, FT4, other data | DiGi                                    |
| SSB                  | USB above 10 MHz, LSB below             |
| Unknown              | Frequency only — the mode is left alone |

Bandwidth is deliberately **not** forced. The QMX keeps a filter per mode and loads it when the mode changes, so the right width follows by itself.

**Tap an off-screen count** (< spots (3) / spots (5) >) and you jump to the nearest spot on that side, which brings it into view. Those counts have a deliberately large touch area — the visible text is small, but the target around it is not.

Tapping the spectrum anywhere else still tunes normally, and pinch-zoom and the one-finger pan are unaffected. Only the callsigns themselves and the two counts are spot targets.

**A callsign's target is the text, and nothing above or below it.** That matters because a long callsign is a wide label sitting over the trace, and a click inside it goes to *that station* rather than to the frequency under your pointer. If a signal you want is behind a label, aim at the same column higher or lower in the spectrum and it tunes there normally.

In the browser, hovering a callsign shows you a marker at that station's real frequency with its name, so you can see where the click will take you before you commit. On the Tab5 the two gestures are already distinct: tuning to a point needs a brief hold, while a callsign is a quick tap.

---

### 3.3. Turning it on and off

**Settings drawer** (swipe in from the right edge) — **Live spots** section:

| Control                      | Default   | What it does                                                                         |
|------------------------------|-----------|--------------------------------------------------------------------------------------|
| <b>Live spots (POTA)</b>     | On        | The whole feature. Off leaves the spectrum completely clean                          |
| <b>Add RBN (CW skimmers)</b> | Off       | Adds RBN as a second source. Needs your callsign set                                 |
| <b>DX cluster spots</b>      | Off       | Human-typed spots — the only source of SSB activity. A second connection, so opt-in  |
| <b>SOTA spots (summits)</b>  | Off       | Summit activations from spothole.app, a volunteer-run server. Opt-in for that reason |
| <b>Mode filter the spots</b> | <b>On</b> | Shows only spots you can work in the mode you are in                                 |

Every one is saved and appears in the configuration file you can download and restore from the web UI, under [settings].

**About the mode filter**, since it is on by default and changes what you see: tapping a spot sets the **mode** as well as the frequency, so an unfiltered lane can drop a CW operator into FT8 without warning — which is exactly what happened to Michael KZ4LY, and why this exists. With it on, changing mode changes which spots are on screen, and the off-screen counts change with them. A spot whose mode is unknown is always shown, so nothing is hidden on a guess. Switch it **off** and every spot is shown, with a two-letter tag on the label (CW, SB, FT) telling you what tapping it will do — deliberately absent when the filter is on, because then every spot is already your mode.

The spots overlay belongs to the **Panadapter** page. It is not drawn on the FT8 screen.

---

### 3.4. About RBN

RBN is **off by default, on purpose**. It is a continuous global feed rather than an occasional fetch, and it arrives over a persistent connection on the part of this board that has historically been the most delicate. Off by default means it can never affect anyone who has not asked for it.

If you do switch it on:

- **Your callsign is required.** The feed asks for one when connecting; it is how RBN attributes load, not a password. Set it under **Callsign & Grid**.
  - **Only your current band is kept.** RBN reports the whole world, and the display can only show one band at a time, so spots outside the band you are on are discarded as they arrive. Changing band clears the picture and it refills within a few seconds.
  - **Duplicates are merged.** The same CQ is typically reported by ten or more skimmers; you see one entry per station, at the best reported signal.
  - **RBN spots** are held for up to **10 minutes** after any skimmer last heard them — shorter than the 30 minutes above, because an active caller is re-spotted every couple of minutes and silence means they have stopped.
  - It is the **CW/RTTY** skimmer feed. RBN runs a separate FT8/FT4 feed that the panadapter deliberately does not subscribe to — you are already decoding those yourself, far better, from the antenna.
- 

### 3.5. About the DX cluster — where phone spots come from

RBN cannot show you an SSB station. It is a network of **automated skimmers**, and a skimmer decodes CW, RTTY, FT8 and FT4 — machine-readable modes. There is no such thing as an SSB skimmer, because no machine can recognise a callsign spoken into a microphone. So every phone station on the band is invisible to it.

A **DX cluster** is people typing. That is the whole difference, and it is why this exists as a third source:

- **Phone spots** — SSB activity you cannot see any other way.
- **Park and summit references** — a human writes POTA ES-2081 in the comment, so a cluster spot can also tag your chase in the log.
- **Everything else people bother to spot** — DX, contest activity, anything worth telling other operators about.

Switch it on with **DX cluster spots (phone)**, next to the other two sources in the settings drawer, or from the web UI. Like RBN it is **off by default**: it is a second continuous connection, and the same caution applies.

Things worth knowing:

- **Your callsign is required**, for the same reason as RBN — the node asks for one to identify the connection.
- **Only your current band is kept**, again like RBN.
- **Mode is worked out for you**. Most cluster spots carry no mode field at all. If the spotter typed one (LSB, CW, FT8) it is used; otherwise the frequency is looked up in your band plan — 14.020 is CW, 14.285 is phone. The same inference you would make reading the line yourself.
- **Skimmer spots relayed onto the cluster are ignored**. Some nodes forward RBN traffic; those entries would duplicate what RBN already gives you, so they are dropped rather than drawn twice.
- Spots are held for up to **15 minutes** — longer than RBN, because a human spot describes something slower-moving than a skimmer's automatic report.

#### Note - Not every node is equally busy

Cluster nodes vary enormously. In testing, one node produced two spots in four minutes while another produced seventy-five in fifteen. A quiet node looks exactly like a broken connection, so give it a few minutes before concluding anything.

### 3.6. About SOTA — summit activations

SOTA spots come from [spothole.app](https://spothole.app), an aggregator run by Ian Renton M0TRT, used with his permission. That is worth knowing because it shapes how the Tab5 treats it:

- **Off by default**, so nobody polls somebody else's hobby server without choosing to.
- **Fetches once every two minutes**, which is plenty for activations that last an hour.
- **When it is unreachable, nothing happens**. The spots already on screen stay until they age out normally — no banner, no error, nothing to dismiss. A volunteer server being down for an afternoon is an ordinary state, not a fault in your radio.

Almost every SOTA spot carries a portable suffix — EA2GM/P rather than EA2GM — because the operator is on a summit rather than at home. That is why the callsign shown is the one that was spotted, exactly as spotted.

**SOTA is nearly all CW and SSB.** Of a typical sample, none are in a digital mode. So a summit will rarely appear in your FT8 log; the value of the source is seeing where the activity is on the spectrum, and being able to tap it.

---

### 3.7. Refresh and timing

- POTA is fetched about **once a minute** — spot rates on that service change on that sort of timescale, and the fetch briefly pauses the web UI's spectrum stream so the two never compete for the link.
- RBN and the DX cluster arrive continuously and are merged into the display every **10 seconds**.
- Ageing is re-evaluated every second, so spots dim and disappear on their own even when nothing new arrives.

If spots never appear at all, check in this order: WiFi connected (bottom bar), **Live spots** switched on, and — for RBN only — a callsign set.

Other stations drawn straight onto your spectrum at the frequency they are actually using — **POTA** park activations, **RBN** skimmer reports, and **DX cluster** spots, which are where phone activity comes from (no machine recognises a callsign spoken into a microphone, so SSB is invisible to RBN).

Grey means you have already worked them on that band. Press and drag to pick one, and lift to tune it with the right mode. One station is one entry, however many sources report it. Each source switches on separately in **Network** → **Live spots**.

 Full chapter: [tab5.lav.dk/guide/spots](https://tab5.lav.dk/guide/spots)

---

## 4. Spot map

---

The **Live Spots** lane answers "who can I work?". The **spot map** answers the other question: **who is hearing me?**

It is a full-screen map of the stations that have reported *your* signal — the CW skimmer that copied your CQ, the FT8 station whose decode of you reached PSK Reporter, the WSPR receiver that logged your beacon — each drawn as a line from your grid square to theirs.

This is Uwe DL8UG's work, contributed to the project.

#### **Note - Always on, no setting to find**

The three feeds below connect from the moment the Tab5 boots and stay connected — there is nothing to switch on. Earlier versions asked you to enable it first and only ran the feeds while the map was open; both of those were tried and dropped, in that order, on the operator's own instruction, once he found the list was still empty the first few minutes after opening it either way. See [What it costs, running all the time](#).

### **4.1. Opening it**

**Open the settings drawer and tap SelfSpotter** — the button right below **Need guidance?**, near the top of the drawer. The map opens over whatever page you were on, and **Exit** (top right) closes it. A Bluetooth keyboard's `Esc` closes it too.

#### **Note - Not a swipe any more**

Earlier versions opened this with a swipe down from the top edge of the screen. That gesture collided with the top bar's own Band/Mode/BW/Zoom taps and was easy to trigger by accident, so it was replaced with the drawer button above.

The button works from the panadapter, FT8 and WSPR pages alike — the drawer itself opens the same way from any of them (swipe in from the right edge).

The header shows your **callsign, dial frequency, and the current UTC date and time** — so a screenshot of the map stands on its own without needing anything else to say when or where it was taken.

There is nothing to switch on first — the feeds have been running since boot (see below), so the map is never starting from a cold, empty world.

## 4.2. What feeds it

Three sources, all of them reports of **your own** transmissions:

| Source             | Where it comes from                              | How fresh      |
|--------------------|--------------------------------------------------|----------------|
| <b>CW (RBN)</b>    | A Reverse Beacon Network skimmer copying your CQ | as it happens  |
| <b>Digi (PSKR)</b> | PSK Reporter's live feed, over MQTT              | as it happens  |
| <b>WSPR</b>        | wsprnet.org, polled every 3 minutes              | trails a cycle |

All three need WiFi. **None of them transmits anything** — they are lookups of what other people have already published about you.

A report stays on the map for **half an hour**, then drops off. The map is a picture of who is hearing you *now*.

The **Source** checkboxes in the left sidebar show or hide each one. **Flush**, in the header beside **Exit**, empties the map immediately so you can start a fresh picture — useful when you change band. It does not stop any of the feeds; they simply begin filling it again. *(Contributed by Uwe DL8UG. It was in the sidebar until v1.14.4.)*

---

## 4.3. The three tabs

**MAP** draws a line from your position to each station that reported you, over a world map — filled land, lighter than the sea, with a coastline outline on top. Line colour matches the source: **blue** for CW, **amber** for digital, **green** for WSPR. A line older than 30 minutes fades rather than disappearing, so a quiet stretch still shows what was heard recently. Your own position is a dot, drawn on top of everything.

- **Drag** with one finger to pan.
- **Pinch** with two fingers to zoom, up to 50×. Zoom is anchored on your own station, so your QTH stays put while the world grows around it.

**LIST** is the same data as a table — **RECEIVER, GRID, COUNTRY, MODE, BAND, FREQUENCY, SNR, KM** and **AGE** — when you want the numbers rather than the picture. Every column is sortable; tap a header to sort by it.

**GRID** is the locator the receiving station itself sent, not one worked backwards from a position, so it is blank for CW skimmers: they report a callsign and not a location.

**COUNTRY** names the *country*, which can differ from the DXCC entity the map plots — a Hawaiian station's marker sits on Hawaii, while its country reads United States.

**CONDITIONS** is HF propagation from hamqsl.com: day and night ratings per band group, plus solar flux, A and K index, sunspot number, geomagnetic field and signal noise. It refreshes about hourly, which is as often as the source updates.

---

#### 4.4. What you must set first

**Your grid square.** The map draws lines *from* you, so without it there is nothing to draw from — the sidebar says so in red, and the map stays empty. Set it in **Settings -> Station -> Callsign & Grid square**.

**Your callsign**, for the same reason: it is what the three feeds are asked about.

**QRZ.com callbook credentials are optional.** RBN reports name the skimmer that heard you, not where it is, so the map looks that up on QRZ to place it. Without credentials an RBN line still gets drawn, using the centre of the skimmer's DXCC entity — right country, wrong town. PSK Reporter and WSPR carry a grid square in the report itself and never need the lookup.

These are set **in the web UI, not on the Tab5** — open `http://<tab5-ip>` in a browser and use **Miscellaneous -> Set QRZ Callbook login**. They are your QRZ.com username and password for the Callsign Lookup service, which is a different thing from the QRZ Logbook API key used for uploading contacts.

---

#### 4.5. What it costs, running all the time

Worth knowing, since there is no longer a setting to weigh this against:

**It holds a connection on your behalf, permanently.** From boot, the Tab5 holds a live session to PSK Reporter's broker subscribed to your callsign, and polls RBN and wsprnet. That used to be something you asked for first; now it starts with everything else.

**It costs memory that other things need.** Measured on the bench, running the feeds costs about 6.6 KB of internal RAM and 2.6 KB of the DMA pool — and that DMA pool is the one that microSD mounts, USB and encrypted uploads draw on when they need it. Every unit pays this now, whether or not the map is ever opened.

The feeds run whether the map is on screen or not — opening it doesn't start them and closing it doesn't stop them — so the picture is already populated with whatever has come in since boot the first time you look, rather than starting from nothing.

---

## 4.6. If the map stays empty

**Nobody has heard you yet.** The commonest answer, and not a fault: the map only fills once you have actually transmitted and somebody has reported it. Call CQ, or let WSPR or FT8 run for a few cycles, then look again.

**No grid square set** — the sidebar says so in red. See section 4.

**WiFi is down.** All three feeds need it.

**Only some sources are ticked.** Check the **Source** boxes in the sidebar.

**You are running CW but RBN spots are absent** — a skimmer has to actually copy you. RBN coverage is thinner on some bands and at some hours than others.

Live spots answer "who can I work?". The spot map answers the other question: **who is hearing me?** A full-screen map of the stations that reported *your* signal — the CW skimmer that copied your CQ, the FT8 station whose decode of you reached PSK Reporter, the WSPR receiver that logged your beacon — each a line from your grid square to theirs. Contributed by **Uwe DL8UG**.

**Tap SelfSpotter in the settings drawer** (right below "Need guidance?") to open it, from any page. Tabs for the map, a table of the same data, and HF band conditions. Drag to pan, pinch to zoom around your own QTH. The LIST tab's table is sortable: **RECEIVER, GRID, COUNTRY, MODE, BAND, FREQUENCY, SNR, KM** and **AGE**. **GRID** is the locator the receiving station itself sent, so it is blank for CW skimmers, which report a callsign and not a location. **COUNTRY** comes from Uwe DL8UG's 18,365-prefix table and names the *country* a spotting station belongs to, which can differ from the DXCC entity its own marker uses on the map (Hawaii plots at its own coordinates but reads United States in this column).

**Always running, no setting to find.** The feeds (RBN, PSK Reporter, wsprnet) connect from the moment the Tab5 boots and stay connected the whole session — there used to be an opt-in switch for this, dropped once it became clear the map was worth having populated the moment you looked. Needs your callsign and grid square.

 Full chapter: [tab5.lav.dk/guide/spot-map](http://tab5.lav.dk/guide/spot-map)

---

## 5. Web UI

---


With the Tab5 on WiFi, open `http://<tab5-ip>` in any modern browser. The IP is shown in the bottom status bar on the Tab5.

The browser panadapter is a full-featured view in its own right — not just a window onto the Tab5. On a larger monitor you get more spectrum history, a bigger waterfall canvas, and mouse controls that are faster than touch for precise tuning. It shows live spectrum at  $\approx 10$  fps via WebSocket, full waterfall history ( $\sim 50$  s), the same thermal palette and floor maths, a graphical S-meter, and a top bar with Band / Mode / BW / Zoom controls. The bottom bar shows battery percentage, firmware version, a live UTC clock, and WiFi SSID + RSSI. To its right: download/upload buttons (ADIF, QRZ, eQSL — see [QSO logging](#)), **Files**  $\blacktriangle$   $\rightarrow$  **Diagnostic download**  $\downarrow$  for the diagnostic logs, **Config**  $\downarrow$  / **Config**  $\uparrow$  to back up / restore / edit all settings (see [Config backup, restore & edit](#)), and **Tab5Shot** which opens a live `/ss.bmp` screenshot in a new tab.

**microSD file browser (new in v1.3.0).** **Files**  $\rightarrow$  **SD Files** in the bottom bar opens `http://<tab5-ip>/files` — browse the microSD card from any computer without pulling it: download your logs and config backups, upload files, delete. Card access is coordinated with the WiFi link the same way the automatic backup is, so it's safe to use mid-session.

**Remote QMX power-cycle relay (v1.10.9, sequenced in this release).** **Miscellaneous**  $\blacktriangle$   $\rightarrow$  **Remote relay** pulses one of two Tab5 GPIO pins (GPIO53 or GPIO54 — the board's otherwise-unused Grove/EXT header). Drive an optoisolator from the pin and take its output to your QMX's PWR\_ON/GND **signals**, and you can power-cycle the radio from anywhere on the LAN — the missing piece for a fully remote firmware upgrade, since a Tab5 flash always needs the QMX power-cycled afterward. **Pulse** fires a single pulse for the chosen duration and level — since PWR\_ON is a toggle, this turns the QMX off *or* back on with no way to tell which from the LAN. **Power-cycle QMX** runs the whole sequence instead: off-pulse, wait, on-pulse, wait, then checks over CAT and tells you "QMX responded" or "no response from QMX". Scriptable as `POST /api/cmd {"action":"gpio_pulse", ...}` (single pulse) or `{"action":"gpio_power_cycle", "pin":53, "level":1, "ms":1000}` (the full sequence).

**Building the interface — Randy N4OPI's design**, published here with his permission. Two components and a connector, plus one modification inside the radio.

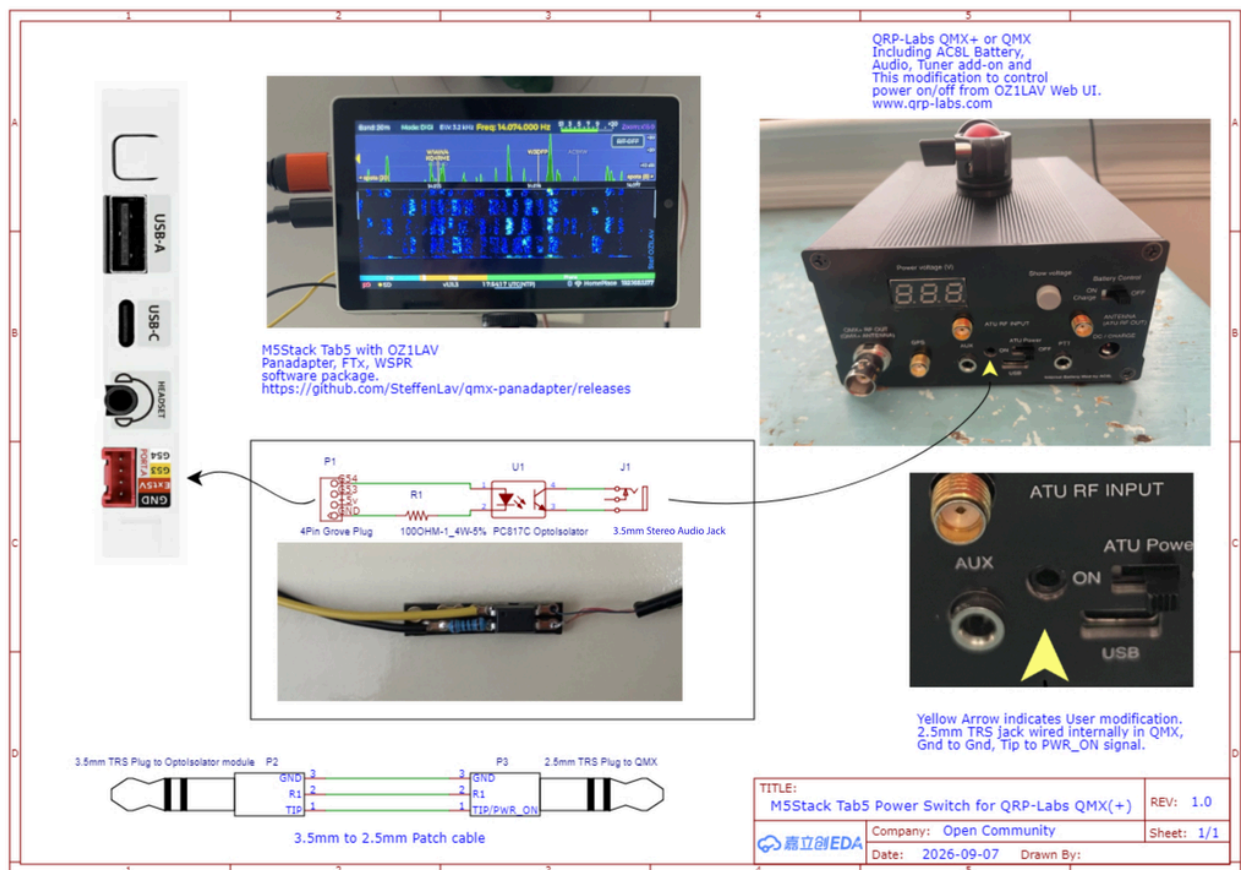

The QMX has **no PWR\_ON/GND jack from the factory** — fitting one is the job. Wire a **2.5 mm TRS jack** into the case with **tip to PWR\_ON** and **sleeve to GND** (Randy brought his out on the rear panel beside the ATU RF input). Then build the interface: a **4-pin Grove plug** into the Tab5's EXT socket, the chosen pin (**G53** or **G54**) through **R1, 100 Ω ¼ W** into a **PC817C optoisolator**, and the optoisolator's phototransistor across **J1, a 3.5 mm stereo audio jack** on the module, which reaches the radio's 2.5 mm jack through a **3.5 mm to 2.5 mm TRS patch lead** — so a pulse briefly connects PWR\_ON to GND. The EXT 5V pin is unused, and the phototransistor side is polarity-sensitive — follow the schematic. Randy: *"with just 2 components it could just as easily be connected point to point and sealed up inside a piece of heatshrink tubing. Make sure you insulate your wires so the heatshrink doesn't squeeze them together and create a short."* Settings that work: the pin you wired, active level **High, 2000 ms**.

The optoisolator is what keeps the Tab5 and the radio electrically apart, and it is why only **G53/G54** are offered: they sit on a *keyed* connector and are held as driven outputs from boot. The bottom-edge Dupont pins would give a neater cable run, but that connector is unkeyed and sits beside 12 V IN — Randy's own reason for dropping the idea — and G0/G1 are the snap-on keyboard's I2C bus.

**Whole-band plan strip & adjustable split (new in v0.20.0).** Along the bottom of the browser view (above the status bar), a colour-coded CW/Digi/Phone strip spans the entire band with a draggable "visible window" (drag or tap to retune) and a VFO marker, mirroring the Tab5's own strip. Drag the divider between the spectrum and the waterfall to give either more room — the split is remembered in the browser. **Tab5Shot** now captures any open pop-up (band/mode dropdown) too, and the frequency keypad is draggable with a standard 10-key layout.

**In FT8/FT4 mode the live stream pauses (new in v0.20.0).** The browser stops streaming the spectrum/waterfall and shows a notice plus the log and upload controls instead. While you're operating digital modes the stream would compete with the on-device decoder and the WiFi link, so pausing it keeps FT8 decoding and WiFi noticeably steadier. Switch the Tab5 back to Panadapter mode and the stream resumes automatically.

**Live TX status, and Call CQ from the browser.** In FT8/FT4 mode that same panel carries a **TX status banner** (v1.3.6) mirroring the Tab5's own label — red while transmitting including the "call 2 of 4" counter, amber armed, green on QSO complete, orange on timeout, plus the persistent "CQ stopped after N calls - no answer"; the browser tab title shows a red dot while transmitting, visible even in a background tab. Under it is a **Call CQ** button (v1.5.0, Dennis WN4FLA), so a CQ run that timed out or reached its call limit can be restarted without walking back to the radio. It **confirms first** — it keys the radio, and a mis-click from another room should not put a carrier on the air — then uses exactly what the Tab5 would: the active CQ preset, the current TX tone (honouring TX Hold) and the TXCQ ANY/EVEN/ODD parity, sharing one code path with the Tab5's own button so the two cannot drift. The request is handed to the display task, so the button greys out for a moment; watch the banner rather than the button. A request arriving while the Tab5 is not in FT8 is discarded, never queued. Replies and pounces are still initiated on the Tab5, where the decode list is.

**Click or drag to tune.** Click or drag on the spectrum or waterfall — a cyan cursor appears with a live frequency readout and commits on release.

**Mouse-wheel to pan or tune.** Rolling the mouse wheel over the spectrum or waterfall **pans** the view when zoomed in, letting you survey the band without touching the Tab5. At zoom ×1 the wheel **tunes** with mode-aware snap (CW 10 Hz, SSB 500 Hz, DiGi 100 Hz, AM 1 kHz).

**Band / Mode / BW / Zoom** dropdown pills in the top bar send commands to the QMX via `/api/cmd` — the same effect as using the Tab5 top bar.

**Zoom sync.** The browser renders the same zoomed window as the Tab5.

**QSO log — download, view, edit.** Once you have logged at least one completed FT8 QSO, a "**QSO Logs (N) ▲**" menu appears in the bottom bar of the web UI. **ADIF download** ↓ fetches your `qso.adf` file directly. **View / edit log** (v1.3.5) opens the whole log as a table in the browser — click any column header to sort (click again to reverse; sorting by date groups an activation's QSOs together), delete a single record with the ✕ on its row, or **Delete all** to clear the log (it asks you to type `DELETE`, because there is no undo — download the ADIF first if you want a copy). **Search** (v1.11.0) filters as you type across callsign, band, mode, date, grid and reference, and says plainly when nothing matches — the answer to "have I worked this one". **Tick rows and press Export selected** to save just those contacts as their own ADIF file; the header tick box takes everything currently shown, so a search plus one tick gives you a single day, band or park. The menu is only shown when the log contains data.

Three columns can be corrected by clicking them: the two **reports**, and **Their ref** — the park or summit the *other* station was activating. That last one is how a Park-to-Park contact gets into the log at all: while you are operating, the other activator's park number is on the POTA spots page on your phone and not in anything the radio sends, so you note it down and enter it when you get home (*Don Adams WB0LQW*). It also fills itself in when the contact came from a spot, and it does that whether or not you were activating — the ADIF field records *their* activity, and a hunter's log should say which park they worked. It is Park-to-Park only when you were in a park as well, which is why the column is not called that. **An empty cell is not a fault:** the reference is matched from the POTA spot feed on the exact callsign, and not every digital-mode activator registers the activation — some just start calling `CQ POTA` — so where there is no spot there is no reference, which is better than a wrong one (*Don Adams WB0LQW*). Type the reference alone — `US-1241`, `G/LD-049`, `DLFF-0123` — and the Tab5 works out the programme (POTA, SOTA or WWFF) from its shape and writes both `SIG` and `SIG_INFO`; clear the reference and both go again. Nothing else is editable: callsign, band, mode, date and time are what QRZ, eQSL and LoTW match a contact on, so a wrong one is a delete-and-re-log.

**QRZ / eQSL upload.** Two more buttons appear alongside the ADIF link once you have logged QSOs — see [QSO logging](#) for the full picture.

## Config backup, restore & edit

The **Config** ↓ / **Config** ↑ buttons in the bottom bar let you save every setting to a plain text file, edit it on your PC, restore it, or share parts of it.

- **Config** ↓ downloads `qmx-config.txt` — a human-readable [INI-style](#) file with everything the Tab5 remembers, grouped into sections:
  - `[settings]` — callsign, grid, WiFi SSID/password, CW pitch, IF trim, IQ balance, flat-spectrum, zoom, colour map, brightness, dB range, EMA, GPS toggle, keypad layout, QRZ key, eQSL user/pass.
  - `[cq]` — the three FT8 CQ-message presets and which is active.
  - `[ft8_filters]` — the CQ-run include/exclude filter terms and toggles.
  - `[memories]` — the 32 memory channels, one per line: `slot = freq_hz, mode, label`.
- **Config** ↑ picks an edited file and **merges** it back: only the keys and sections present in the file are changed — everything else is left as-is. Unknown keys are ignored (so a file from a newer firmware still loads). Memory channels apply immediately; other settings take effect after a restart.

Three things you can do with it:

1. **Back up before a clean flash.** Hit **Config** ↓ first, do the clean/erase flash, then **Config** ↑ to restore everything in seconds — instead of re-typing it all on glass.
2. **Edit in a text editor instead of on the touchscreen.** Faster for callsign, grid, CQ messages, or punching in a batch of memory channels.
3. **Share a band plan.** Copy just the `[memories]` section into a message — another operator pastes it into their file and uploads it to get the same channels (their other settings untouched).

The downloaded file contains your **WiFi password** and **QRZ/eQSL credentials in clear text** (so it works as a full backup). Keep it private; strip those lines before sharing a file with anyone.

## Endpoints

| Endpoint         | Method | Returns                                                                                |
|------------------|--------|----------------------------------------------------------------------------------------|
| /                | GET    | Browser panadapter (HTML)                                                              |
| /api/status      | GET    | JSON status (see below)                                                                |
| /api/cmd         | POST   | Send Band/Mode/BW/Zoom commands                                                        |
| /api/log         | GET    | Diagnostic log download (qmx-log.txt)                                                  |
| /api/log/saved   | GET    | Flash-persisted diagnostic log from before the last reboot/power-off                   |
| /api/adif        | GET    | ADIF QSO log download (qso.adf)                                                        |
| /api/adif/clear  | POST   | Wipe ADIF log and worked-call cache; resets the QRZ/eQSL/LotW upload positions         |
| /api/adif/delete | POST   | Delete one record: ?idx=<n>&call=<CALL> — both must match the record or it answers 409 |
| /api/qrz_key     | POST   | Save QRZ Logbook API key (body = raw key text)                                         |
| /api/qrz_upload  | POST   | Upload pending QSOs to QRZ Logbook; returns {uploaded, failed, error}                  |
| /api/eqsl_creds  | POST   | Save eQSL username/password (JSON body {"user", "pswd"})                               |
| /api/eqsl_upload | POST   | Upload pending QSOs to eQSL (batched); returns {uploaded, failed, error}               |
| /api/config      | GET    | Download all settings + memory channels as editable INI (qmx-config.txt)               |
| /api/config      | POST   | Upload an INI config; merges into NVS; returns {applied}                               |
| /ss.bmp          | GET    | 1280×720 RGB565 BMP screenshot                                                         |
| /ws              | WS     | Binary spectrum stream (~10 fps)                                                       |

## /api/status

```
{
  "battery": { "level": 100, "mv": 8320, "charging": true, "present": true,
               "limit": false },
  "wifi": { "ssid": "MyNet", "rssi": -44, "ip": "192.168.1.213" },
  "freq_hz": 14074000,
  "mode": "USB",
  "band": "20m",
  "passband_hz": 2700,
  "signal_dbm": -87.4,
  "zoom": 1.0,
  "pan_bins": 0,
  "flat_mode": false,
  "utc_epoch": 1750000000,
  "qso_count": 12,
  "qrz_key_set": false,
  "eqsl_creds_set": false,
  "tab5_fw": "v0.18.8",
  "qmx_fw": "1_03_002QMX"
}
```

Polled at 1 Hz by the landing page; safe to consume from monitoring scripts, home automation, etc. `qmx_fw` is read from the QMX via the `vn`; CAT command at link-up (empty until the radio responds). `signal_dbm` is the peak dBm around the IF-shifted VFO bin (null if DSP has no data yet). `qrz_key_set` / `eqsl_creds_set` tell the web UI whether to prompt for credentials before the next upload.

## /ws — binary spectrum WebSocket

Single-client endpoint. Each binary frame is 1026 bytes:

| Bytes  | Meaning                                                                                 |
|--------|-----------------------------------------------------------------------------------------|
| 0      | Frame type: <code>0x01</code> = spectrum                                                |
| 1      | Zoom decimation factor (1 = base 1024-bin spectrum, >1 = zoom-FFT with that decimation) |
| 2–1025 | 1024 unsigned bytes, one per bin, quantised –130 dBm (0) to –30 dBm (255)               |

Bins are pre-shifted server-side so byte 2 is the leftmost screen pixel. Push rate  $\approx 10$  fps.

## Screenshots

```
Invoke-WebRequest -Uri "http://192.168.1.213/ss.bmp" -OutFile screenshot.bmp
```

### Who is hearing me

(needs WiFi) **Miscellaneous** → **Who is hearing me** asks PSK Reporter which receivers have copied **your** callsign recently, and lists them by distance with the country, bearing, and the signal report they gave you.

This is the reverse of the reports the panadapter *sends*, and the two are separate settings — you can have either without the other. Switch it on in the browser under **Settings** → **Spots & reporting**; there is deliberately no Tab5 control, because the answer is a table of distances and bearings that wants a screen you are already sitting in front of.

It answers the one question no amount of local processing can: **am I actually getting out?** The valuable case is the mismatch. Stations you can hear that cannot hear you is a transmit-side problem — antenna, power, a bad connector — and from the receiving side alone that looks exactly like a dead band.

It is read-only, and asks at most once every five minutes because that is the rate PSK Reporter requests. An empty list is the normal answer until you have transmitted: nobody can report hearing a station that has not been on the air.

---

## 6. FT8 Receive

---

The panadapter includes **on-device FT8 and FT4 decoders** with real-time spectrum waterfall and a live list of heard stations.

### 6.1. FT8 & FT4 View

Swipe → from the left edge to reach the FT8/FT4 view (the edge cycles Panadapter -> FT8/FT4 -> WSPR). The same decode list and waterfall work for both modes — switch modes via the **Preset** dropdown in the left pane (top).

#### FT4 notes:

- Decodes refresh roughly twice as fast as FT8 because slots are 7.5 seconds
- Slot countdown shows 7.5 s instead of 15 s

- All filtering, priority, and auto-reply features work identically in FT4
- Time-sync from decoded signal timing works in both FT4 and FT8 (the bottom-bar clock shows UTC(FT4) when synced from an FT4 decode)
- **v0.19.4 made FT4 reliable**: a memory-placement fault previously killed decoding on every other slot (FT8's longer slots mostly hid it), the EVEN/ODD slot markers were on the wrong 15-second grid, and the slot clock could visibly jump between slots — all fixed; if FT4 seemed deaf or erratic on an earlier version, update the firmware

You'll see:

- **Decode list** (left pane) — every station heard, ordered so the ones that matter to you are at the top (see [Decode List](#) below)
- **Waterfall** (right pane) — same real-time spectrum as panadapter mode
- **Call CQ button** — start a CQ (requires QMX on the air)
- **Options button** — include/exclude stations, prioritise by SNR/distance, show only CQ callers

## 6.2. Decode List

The list shows every decoded FT8 message:

| Column         | Meaning                                                                                                                                                    |
|----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>SL</b>      | Slot parity: <b>E</b> (blue) or <b>O</b> (amber)                                                                                                           |
| <b>CALL</b>    | Their callsign                                                                                                                                             |
| <b>MESSAGE</b> | The full decoded message text                                                                                                                              |
| <b>COUNTRY</b> | Country, spelled out where it fits and shortened where it does not - never a 3-letter code (v1.15.0)                                                       |
| <b>SNR</b>     | Signal-to-noise estimate, colour-banded by strength                                                                                                        |
| <b>TONE</b>    | The station's audio tone within the FT8 passband (v1.3.1)                                                                                                  |
| <b>DT</b>      | Slot-timing offset in seconds, relative to the band — an on-time station reads ~0.0 (v1.3.1)                                                               |
| <b>KM / MI</b> | Great-circle distance from your grid. A ~ means the station never sent a grid, so the distance is worked out from its country and is approximate (v1.14.4) |
| <b>HRD</b>     | Times decoded since last appearance                                                                                                                        |

The **BRG** column was removed in v1.14.4 to make room for spelled-out country names; a bearing is derivable from the distance and the map.

All three lists — this one, the SelfSpotter LIST tab and WSPR — use the same column order and capitalised headings since v1.15.1, so the same kind of information sits in the same place whichever screen you are on.

**Own call highlight** — your callsign is shown in **inverted colours** (red fill, white text) so you spot replies to you instantly.

**How the list is ordered.** Top to bottom:

1. **The station you are working** (asked for by Don WB0LQW) — during an exchange there are several transmissions each way, and the partner's messages used to sort down-screen where you had to hunt for them. Now *everything* from them stays at the top: their reply to you, their CQ while you are mid-exchange, and a message they send to a third station — which is exactly when you most want to see it. It covers a hand-typed reply as well as an automatic exchange, and matches on their **callsign**, so a third station merely mentioning them is not promoted. It releases the moment the QSO completes (their closing 73 contains your callsign, so rule 2 keeps it up there anyway).
2. **Messages addressed to you** — anything containing your callsign.
3. **CQ calls.**
4. **Everything else, strongest signal first.**

**Stale entries** — the list is a live picture of who's on frequency now; stations not heard again within **2 minutes** drop off automatically.

**During your own CQ run** — stations transmitting on *your* transmit slot (which you can't hear while transmitting) are hidden from the list and return when the run ends; other stations' CQ rows are hidden during a run as before.

**Nonstandard callsigns** — special-event and compound calls now resolve to the full callsign instead of showing <...>, once the station has been heard in full.

## 6.3. FT8 Options

Tap the **Options** button to open the Options modal:

- **Include callsigns** — only show these calls (space or comma-separated)
- **Include callsigns containing** — show any call with these substrings (e.g., /P for portable)
- **Exclude callsigns** — hide these calls

- **Exclude if contains** — hide any call matching these substrings
- **Exclude worked before** — skip calls you've already logged QSOs with
- **Show only CQ callers** — hide replies, show only CQ messages
- **Skip TX1** — when you pounce a station, open with your signal report straight away instead of the grid exchange, for a quicker QSO (falls back to the normal grid exchange if the station has dropped out of the decode list)
- **Allow grey-listing** — off by default. A station that times out two of your pounces in a row is set aside: the robot and Auto-work-pileup skip it, its decode row turns **violet**, and tapping it offers to clear it from the grey-list instead of opening the TX dialog. Handy on a busy band where one station simply never comes back. The list is held in memory only and forgotten at power-off
- **Auto-reply priority** — Strongest SNR, Weakest SNR, Most distant grid
- **Robot mode** — auto-answer CQ (disabled by default; see [FT8 Transmit](#))

All filters persist across sessions. Toggle any filter on/off to enable or disable it without erasing the criteria.

## 6.4. Decoding Performance

On a reasonably busy band, expect roughly **15–20 distinct messages per slot** in either mode. That is messages, not contacts — one QSO produces several.

Decoding uses **both processor cores**: the decode task works one half of the candidate list on core 1 while a helper takes the other half on core 0, and both run against a waterfall that was built during the capture rather than after it. That is what makes the results appear a second or two into the following slot instead of most of the way through it.

### What limits it:

- **LDPC error correction is heavy**, and most candidates the search finds are false alarms that use the full iteration budget before being discarded
- **The spectrum and waterfall** are being drawn from the same audio at the same time
- **USB audio must be serviced continuously** — a gap there costs decodes far more than a slow decoder does

**FT4 advantage:** because FT4 slots are half as long (7.5 s vs 15 s), you get refresh feedback roughly twice as fast, which feels snappier on a crowded band even though the per-slot decode count is the same.

The panadapter prioritises **receive latency** (decode every 15 s, not accumulate) over volume.

## 6.5. Real-Time Waterfall

Unlike WSJT-X (which buffers a whole 15-second capture), the Tab5 **builds the waterfall on-the-fly** as audio arrives. You see CW and other traffic in real time, and FT8 stations appear instantly as their symbol blocks are decoded.

The waterfall also shows **non-FT8 activity**:

- CW (carrier lines)
- SSB (broader vertical smears)
- RTTY (FSK sidebands)
- Interference (wideband noise)

## 6.6. Tap to Reply

Tap any FT8 row in the decode list to **prepare a reply**:

1. A confirmation modal pops up showing your message
2. You can review the target callsign, grid, and SNR
3. Tap **Transmit** to send, or **Cancel** to abort

The reply always follows FT8 protocol (correct parity, proper message sequence) — you can't accidentally send a garbled or out-of-order message.

**Pile-up list.** If a station answers you while you're busy with another contact, they used to disappear from the list once they stopped transmitting. They're now remembered in a **Pileup** list — the **ADIF-log** button on the FT8 screen turns into a **Pileup** button (a different colour) whenever callers are waiting. Tap it to see who's called you, tap a station to work them, or tap the X to dismiss one. See [FT8 Transmit](#) for the full workflow.

## 6.7. Auto-Reply (Robot Mode)

 **Experimental** — enabled via a checkbox in the Options modal.

When robot mode is on, the Tab5 **automatically replies to CQ** without waiting for you to tap. It scans each FT8 slot for CQ callers matching your filters, picks the highest-priority station, and sends a full QSO exchange (TX1 -> wait for report -> TX2 -> wait for RR73 -> TX3). Everything is logged to ADIF.

**Important:** Robot mode **keys the QMX for real** — your signal goes on the air. Never leave it unattended unless you're confident in your filters and your station is in a safe state.

## 6.8. Search & Window

The decoder uses an **FFT-based search window** to find candidate tone blocks, at whichever tone spacing the active mode uses — **6.25 Hz** for FT8's 8 tones, **20.83 Hz** for FT4's 4.

**Frequency stability:** The QMX's USB audio clock isn't bit-exact 48 kHz, so decodes slide slowly over time. The panadapter **re-locks to UTC boundaries every 15 seconds** (the slot boundary), preventing long-term drift.

## 6.9. Time Sync for FT8

FT8 requires **UTC time accurate to  $\pm 1$  second** for slot synchronisation. The panadapter gets time from:

1. **WiFi + SNTP** (if available) — most accurate, syncs every ~hour
2. **Tab5 RTC** (if set) — accurate to  $\pm 1$  min, no internet needed (POTA)
3. **QMX GPS** (if QMX has GPS) — re-syncs the RTC every 5 minutes
4. **Manual** — you can set time via the settings drawer

See [Time Sync](#) for details.

---

**Next:** Learn about [FT8 Transmit](#) or go back to [Panadapter](#).



Live FT8 reception on 20 m (v0.15.7). Left pane: MODE / Preset freq / UTC / slot countdown with parity and progress bar / TX parity preference / operator identity / Call CQ / decode summary. Right pane: scrollable decode list.

Swipe in from the **left edge** to switch to the FT8 screen. The Tab5 decodes 15-second FT8 slots directly on the ESP32-P4 — no PC, no WSJT-X.

## Prerequisites

- **WiFi configured** — recommended for accurate UTC time. Without it the Tab5 falls back to its supercap RTC or the QMX clock. See [Time sync](#).
- **Callsign and grid** set in the drawer → **Identity** if you want distance/bearing columns or plan to transmit.

## The FT8 screen

**Left pane:** MODE label · **Preset** frequency button (tap to pick a band's conventional FT8 dial frequency) · UTC clock · 15-second slot countdown with current parity (EVEN blue / ODD amber) and a gliding progress bar · **live mini occupancy strip** (the audio window as 50 Hz cells, same data and colours as the tone picker) · **TXCQ ANY / EVEN / ODD** parity-preference button (one button, cycles) · **TX nnnn Hz** tone button · **Call CQ** button · last-slot decode summary and TX status.

**Right pane — decode list:**

| Column  | Content                                                                                                                                                               |
|---------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SL      | Slot parity: <b>E</b> (blue, :00/:30) or <b>O</b> (amber, :15/:45)                                                                                                    |
| CALL    | Extracted callsign                                                                                                                                                    |
| MESSAGE | Full decoded FT8 message text                                                                                                                                         |
| COUNTRY | Country, spelled out where it fits and shortened where it does not - never a 3-letter code. 227 DXCC entities, with 18,365 further prefixes resolved at country level |
| SNR     | FFT-based estimate, colour-banded: green $\geq 0$ / white $-5..-1$ / orange $-15..-6$ / grey $< -15$                                                                  |
| DT      | Slot-timing offset in seconds, relative to the band — an on-time station reads $\sim 0.0$                                                                             |
| HZ      | The station's audio tone (its offset within the FT8 passband)                                                                                                         |
| KM      | Great-circle distance from your grid. A leading $\sim$ means the station sent no grid and the distance comes from its country — approximate, and marked as such       |
| HRD     | Times decoded since last appearance                                                                                                                                   |

CQ calls always appear at the top sorted strongest-SNR first; all other rows follow by SNR descending.

**Row colour scheme** (CALL + MESSAGE columns): **white** for ordinary traffic, **green** for plain cq calls, **dim grey** for callsigns already worked **on the current band** (a station you worked on 20 m still shows normally on 40 m — see [Reply filter](#) for hiding them entirely), and **inverted red fill + white text** for any message containing your own callsign — your highest-priority rows literally pop off the screen instead of relying on red-on-black text, which field testing found hard to read at a glance.

**Live view.** Stations not re-decoded within 60 seconds drop off the list automatically, even while the band is quiet — the list is who's on frequency *now*, not a cumulative history. (The "Active: N" counter that used to say so was dropped in v1.3.4; the wrapping TX/QSO status text took its line.)

## Performance

On a busy 20 m FT8 slot the decoder regularly yields 25–50 callsigns per slot. Both EVEN and ODD slots decode every cycle via a ping-pong dual-buffer architecture — a TX slot never causes the opposite parity to be skipped. Heap is stable across long sessions (≈39 KB internal RAM free, 25 MB PSRAM free during decoding).

---

## 7. FT8 Transmit

---

The panadapter **keys the QMX and transmits full FT8/FT4 QSOs** — reply to CQ, run your own CQ, auto-answer (robot mode), or conduct a full exchange.

### 7.1. FT8 vs FT4 — Which to Use?

Both modes transmit via the same CAT interface; the difference is **slot length and symbol rate**:

| Feature                  | FT8                              | FT4                       |
|--------------------------|----------------------------------|---------------------------|
| Slot length              | 15 seconds                       | 7.5 seconds               |
| Symbols transmitted      | 79                               | 105                       |
| Symbol duration          | 160 ms                           | 48 ms                     |
| QSO time (full exchange) | ~90 sec (6 slots)                | ~45 sec (6 slots)         |
| Use case                 | Weak signal, SOTA/POTA           | Busy bands, contests      |
| Preset picker            | Panadapter mode -> Freq dropdown | FT8 mode -> Preset picker |

#### Choose FT4 when:

- The band is crowded (faster exchanges, less QRM)
- You're in a contest (time is critical)
- You want quicker pileup resolution

#### Choose FT8 when:

- Signal is marginal (longer decode window tolerates more QRN)

- You're portable/POTA (less pressure to transmit fast)
- You prefer the relaxed pace

FT4 has full feature parity with FT8, including time-sync from decoded signals (fixed in v0.19.3 — the time-sync modal shows "FT4" when appropriate and the bottom-bar clock correctly reads UTC(FT4) while in FT4 mode).

## 7.2. Switching Between FT8 and FT4

### In FT8 screen (left pane):

- Tap the **Preset** dropdown (shows current frequency/mode)
- Select an FT4 frequency to switch to FT4
- Select an FT8 frequency to switch back

### In Panadapter screen:

- Tap the **Band preset dropdown** (top left)
- Some bands have both FT8 and FT4 frequencies listed
- Tap the FT4 variant to switch

Your **settings are sticky** — when you switch back to FT8 or FT4, the panadapter remembers your last frequency, bandwidth, and filter settings for each mode.

The **decode list and pileup are cleared** on the switch (v1.3.3). The two modes use different slot lengths, so stations decoded under the old timing describe a band the new mode cannot hear — and leaving them on screen meant you could tap one and try to work a station that was no longer there.

## 7.3. Modes of Transmission

### 7.0.1. Reply to a CQ

In FT8 view, tap a CQ row in the decode list. A confirmation modal appears:

```
type: panel
title: Confirm FT8 Transmission
row: K9ZZ EN52 -07 2138 Hz
row: W1AW FN31 -12 1406 Hz <- the row you picked
row: SV1ENG JN37 -09 1869 Hz
row: TX1: W1AW OZ1LAV J045
buttons: Cancel!, Auto Pounce, Transmit+
note: dim | drag up or down the list to move the highlight before you lift your finger
note: amber | Transmit sends this message once; Auto Pounce runs the whole exchange for
```

- **Transmit** (green) — send this one message on the next correct slot
- **Auto Pounce** (blue) — handle the entire exchange automatically (TX1 -> wait for report -> TX2 -> wait for RR73 -> TX3 73)
- **▲ / ▼ Nudge** — move the target to the row above or below, without closing the modal and redoing the selection gesture
- **Cancel** — abort

**Transmit is intelligent (v1.3.0)** — it builds the correct *next* message from what that station last sent, exactly like a WSJT-X double-click: their CQ -> your grid (or your report, with Skip TX1 on), their grid -> your report, their report -> R+your report, their R-report -> RR73, their RR73/73 -> 73. You can run a whole QSO one Transmit tap at a time — and sending the closing RR73/73 **logs the QSO to ADIF** just like an automatic contact. Auto Pounce is offered on any first reply; once you're mid-exchange with a station, its rows offer Transmit only.

**A quick tap is enough** — you do not need to hold a row before releasing. Hold-and-drag still works for selecting across rows in a busy list.

The reply follows **correct FT8/FT4 parity** — if you're replying to an even slot, you transmit on the odd slot, and vice versa. For FT4 the countdown timer correctly counts down in 7.5-second slot increments, not 15-second FT8 ones.

**Skip TX1 (faster pounce).** With **Skip TX1** enabled in the Options modal, pouncing a station opens with your signal report straight away instead of the grid exchange — saving one round trip. If the station has already dropped out of the decode list, it falls back to the normal grid exchange automatically.

**If your target is working someone else**, the panadapter holds instead of keying up over their exchange — the status shows "working *call* - waiting" with a **TAP TO CANCEL** line. Waiting costs nothing (a hold doesn't count toward the timeout), but if you'd rather move on, tap the status to cancel the pounce and pick a different station; the abandoned exchange stays resumable for a few minutes via the resume prompt.

## Working a pile-up

When you call CQ (or work a busy run), more than one station may answer at once — and a caller who replies while you're mid-QSO with someone else used to vanish from the live decode list as soon as they stopped transmitting. They are now kept in a **Pileup** list so you don't lose them:

- Whenever one or more stations are waiting, the **ADIF-log** button on the FT8 screen becomes a **Pileup** button in a distinct colour, and reverts once the list empties.
- Tap **Pileup** to see everyone who has called you and isn't worked yet.
- **Hold the button to open the ADIF log** — the log stays reachable even while the button reads "Pileup" (a one-time hint appears the first time it flips).
- Tap a station in the list to work them (the same confirmation modal as a decode-list tap), or tap the small ✕ to dismiss them without working them. The reply is the correct **next** message for that station, built from whatever they actually last transmitted — usually a signal report for someone who has just called you, but an R+report if they came back later with a report of their own (v1.3.2; the same laddering as tapping a decode-list row).
- A station is removed from the list automatically once you start a QSO with them, and a just-completed contact's trailing 73 can't put them back.
- Stations you've worked before still appear in the pileup unless **Exclude worked-before** is checked — the pileup follows the same rule as the auto-answer.

The pile-up tracker never transmits on its own — it only remembers callers; you choose who to work. If you'd rather it *did*, check **Auto-work pileup** in the Options modal: the strongest waiting caller is pounced automatically when your current QSO completes — or immediately, if you enable it with callers already waiting and nothing else in progress. It carries the same unattended-TX warning as the robot.

## Pick callers myself

Normally, while you are calling CQ, the first station to answer starts the exchange straight away. Check **Pick callers myself** in the Options modal and that no longer happens: an answering station waits in the pile-up until *you* tap them, and from that point the exchange runs automatically as usual.

Only the *choice* becomes manual. You are not signing up to type anything, or to send each message by hand.

Two things it deliberately does:

- **It keeps calling CQ while you decide.** The pile-up carries on building, which is usually what you want when activating — and a radio that fell silent while you thought about it would look like it had stopped working.
- **It overrides Auto-work pileup.** Both settings decide who to work next, so if you have asked to choose, nothing else picks for you a moment later.

Off unless you turn it on, so nothing changes for anyone who does not want it.

## 7.2. Call CQ

Tap the **Call CQ** button. A modal opens:

```
type: panel
title: CQ Messages (check the active)
row: [x] CQ OZ1LAV J065
row: [ ] CQ DX OZ1LAV J065
row: [ ] CQ POTA OZ1LAV J065
buttons: Cancel!, + call grid, Save+
note: dim | CQ stop and Listen sit top-right and apply on the tap - no Save needed
```

Choose a preset (or edit/save a new one), then tap **Transmit**. The QMX starts calling CQ and listening for replies.

**CQ tone selection** — the panadapter automatically picks a quiet frequency (6.25 Hz tone spacing, 200–2800 Hz audio range, no other stations nearby). If your chosen tone gets busy during a QSO, the panadapter **auto-relocates to the nearest clear frequency** to avoid stepping on other stations.

**CQ auto-stop** — by default the panadapter keeps calling until someone answers. If you'd rather call a few times and then pause (a common courtesy on a quiet band), long-press **Call CQ** and tap the **CQ stop** button at the top-right of the preset editor: it cycles through never / 1 / 2 / 3 / 4 / 5 / 10 calls and applies immediately, no Save needed. While calling, the TX status shows the progress ("call 2 of 4"); after the last unanswered call the panadapter listens through one more receive slot (an answer to your final call still starts the QSO normally), then stops and goes idle. Applies to every CQ run, including the automatic resume after a completed or timed-out QSO — each fresh CQ sequence starts the count over.

**Listening slot** - while you are transmitting you are deaf to your own time window, so the occupancy picture for the window you transmit in is the one that goes stale. The **Listen** button in the preset editor (under **CQ stop**) can spend one slot receiving after every 3, 5 or 10 calls. Off by default, because it changes your on-air cadence, and like CQ stop it applies on the tap with no Save needed.

### 7.3. Auto-Reply (Robot Mode)

 **Requires explicit checkbox in the Options modal** to enable.

When robot mode is on and you're idle, the panadapter scans every FT8 decode for CQ callers matching your filters, picks the highest-priority match (Strongest SNR, Weakest SNR, or Most distant grid — your choice), and starts a full QSO:

1. **TX1** — send your call, grid
2. **RX** — wait for their report
3. **TX2** — send their report + your call back
4. **RX** — wait for RR73 or 73
5. **TX3** — send 73 or RR73 (exchange complete)
6. **Log** — ADIF entry created, move to next CQ

## Pause — skip one transmission

---

Sometimes you want to *listen* on your own slot: to check the frequency is still clear, or to hear whether the station you are working is actually answering you rather than someone else.

**Pause** sits with Re-send, RR73 and 73 in the mid-QSO row, and it is on the browser page as well as the Tab5 (v1.16.2). It skips exactly one transmission and leaves the exchange intact — unlike **Cancel**, which ends it.

- It shows a **pause** symbol normally and a **play** symbol on yellow while a transmission is being skipped, so you can see the state at a glance.
- Press it again and the pause is taken straight back, re-arming the transmission if the slot still has room.
- It works while **calling CQ** as well as mid-exchange.
- A slot you skip on purpose **does not count** against the six cycles before the Tab5 gives up on a contact. Pausing can never cost you the QSO.

*Asked for by Randy N4OPI, who works his station from another room; the countdown behaviour was caught by Gyula HA3HZ.*

**An experienced caller who skips a step is followed** (v1.8.5): if someone answers your CQ with a **report** instead of a grid — common from operators who already know they have you — the reply acknowledges it with R plus your report and waits for RR73, rather than sending another bare report and losing a cycle. Reported by Gyula HA3HZ, who saw it twice. Tapping **Transmit** by hand always did the right thing here; it was only the automatic run that was a rung behind.

**A busy pick is abandoned, not waited for** (Roy KI0ER's reasoning adopted verbatim): when *you* pounce on a station that turns out to be mid-QSO with someone else, the Tab5 politely holds — a deliberate pounce means you want *that* station. But the robot picked its target off a list, so when its pick engages a third station the robot **moves on to a different CQ caller** instead of idling through someone else's QSO. No grey-list strike: busy is not unresponsive.

Each QSO takes **~90 seconds** (6 FT8 slots × 15 s/slot). If a station doesn't respond in 4 slots, the panadapter times out and resumes scanning CQ.

**Important:** Robot mode **transmits on the air unattended**. Never enable it unless:

- Your station is physically attended
- Your filters are tested and correct
- Your antenna/SWR is known good
- Your QMX power is set appropriately

A permanent on-screen warning appears whenever robot mode is available.

**Four things now switch it off for you**, all of them because the alternative is transmitting when you did not expect it (Roy KI0ER):

- **It waits before its first call.** Straight after a band change or a restart nothing has been heard yet, so both transmit windows are unmapped and a tone would be chosen from no information at all. It holds, showing *"Auto-answer: listening before first call"*, until it has heard both windows.
- **Cancelling a transmission switches it off.** Tapping the TX indicator to stop a transmission disarms it, abandons the QSO **and** turns auto-answer off — so halting a transmission to go and check your antenna does what you expect, rather than the radio starting again a cycle later.
- **A band change switches it off**, whichever way you changed band — the band buttons, the web page, a spot, a memory recall, or the radio's own knob. Few stations have an automatic ATU, so the antenna is usually not tuned for the new band yet.
- **It is off at every startup**, however the last session ended. Unattended transmission is never the state the panadapter powers up in; switching it on is a deliberate act, once per session.

Each of these says on screen why it stood down.

## 7.4. FT8 Simulation Mode (Practice QSOs)

 **For practice only** — no real stations involved, radio never keys up. Since v1.3.0 the simulator needs **no QMX connected at all** — no radio, no antenna, zero RF.

Enable **FT8 Simulation Mode** in the settings drawer to practice everything: manual step-by-step Transmit, Auto Pounce, CQ-runs, pileups, and Field Day exchanges. Useful for:

- Learning the full FT8 exchange sequence
- Testing your setup without risking interference
- Verifying ADIF logging works correctly
- Practicing the pileup tools on a genuine pileup

### How it works:

- **Six phantom stations** (three US, three DX) call CQ on their own tones — every message is real FT8, synthesized to actual GFSK audio and decoded through the same receive pipeline real RF uses
- Tap a CQ to pounce (auto or fully manual — they answer either), or **Call CQ** yourself and **four phantoms answer at once**, building a real pileup

- Phantoms are **patient like real operators**: each repeats its message every cycle, up to four times, before giving up and going back to CQing; one you're working stops CQing; one you've worked stops answering your CQs (toggle sim off/on to reset)
- Their replies match **what you actually transmitted** — grid gets a report, a report gets a roger, RR73 gets a courtesy 73
- The **Fast pounce** toggle is honoured, so you can watch what it changes: decodes surface just before the slot boundary with it on, just after with it off
- Swiping to the Panadapter and back clears the phantom rows and pileup for a fresh session, and **turning simulation mode off also clears them** (v1.3.3) — phantom stations no longer linger in a list that is supposed to be real, where they were still tappable

#### Note - Fixed in v1.3.3

With **Fast pounce** turned *off* — which is the default — the phantoms never answered at all, so every practice pounce simply timed out. If you tried the simulator before v1.3.3 and concluded the phantom stations were ignoring you, that was this, not you.

**Visual indicator:** When simulation mode is active, a **10 px red border pulses around the entire screen** (breathing red frame). This is your visual reminder that you're in practice mode — if the red frame is gone, simulation is off and real stations are in play.

**The interlock is in the firmware, not just the UI.** While simulation is on, every CAT command that would key the radio is skipped and logged instead — so a QMX that happens to be connected is never keyed, regardless of what the screen is showing.

#### Important:

- The QMX is **never keyed** in simulation mode, no matter what
- QSOs are logged as real ADIF entries — deliberately, so the logging/upload paths get exercised too. When you're done, the ADIF viewer shows a **"Del N test"** button (only while practice contacts exist — they're recognized by their missing frequency): two taps deletes them all
- All other features (panadapter, web UI, settings) work normally

## 7.5. ARRL Field Day Mode

During [ARRL Field Day](#), tick **Field Day mode** in the Options modal and fill in the two fields beside it:

- **Class** — your number of transmitters plus the category letter, written together: 16A, 5B, 1D. It is not a power rating.
- **Section** — your ARRL/RAC section, e.g. EMA, WCF, NNJ.

This switches the FT8 exchange from grid-and-signal-report to Field Day's class+section format, using the standard FT8 message type WSJT-X uses for FD (WA9XYZ KA1ABC R 16A EMA). Both pounce and CQ-run follow the convention automatically: the opening message is unchanged — FT8's CQ format has no room for class and section — and the *report-equivalent* step carries them instead, with the receiving side echoing back R-prefixed.

While the mode is on, **Call CQ** tags your CQ as `CQ FD <call> <grid>`, using the same modifier mechanism as `CQ POTA` or `CQ DX`, so other Field Day stations know to expect this exchange. It **replaces** any other modifier for as long as the mode is enabled — FT8 allows exactly one. The CQ preset editor reflects that: the three presets are dimmed and locked while FD mode is on, since their own modifier cannot apply, and a live preview line shows exactly what will go out.

Completed Field Day contacts log the standard ADIF contest fields — `CONTEST_ID=ARRL-FD`, your section and theirs — alongside the usual call, frequency and time, so they import cleanly into contest-logging software.

## 7.6. Fox/Hound (DXpedition) Mode

Big DXpeditions run FT8 in **Fox/Hound** mode, where one station (the *Fox*) works five callers at a time from below 1000 Hz while everybody chasing it (the *Hounds*) calls from above 1000 Hz. It is not the ordinary FT8 exchange: a hound that answers the Fox has to **move onto the Fox's frequency** to do it, because the Fox listens only to its own narrow slice.

Set **Fox/Hound (DXpedition)** in the Options window to one of three positions:

- **Off** — normal FT8. Nothing changes.
- **Guided** — the Tab5 tells you when it can see a Fox, and you tap it to call. Every transmission stays your decision.
- **Automatic** — the Tab5 calls a Fox it recognises and runs the whole exchange.

Whichever you choose, the awkward part is handled for you: your first call goes out **above 1000 Hz** on a clear slot, and the moment the Fox answers you with a report, your reply is **moved down onto the Fox's own frequency** — which is the step that makes the contact possible at all. The Fox's `RR73` ends it, and the Tab5 then returns to its calling tone ready for the next one.

**The Tab5 does not send 73 to a Fox.** The Fox's frequency is the scarcest thing on the band during a DXpedition and a courtesy 73 there is just clutter. The contact is complete, and logged, on the Fox's RR73.

**How a Fox is recognised — and where it trusts you instead.** For anything it does *by itself*, the Tab5 is strict: not frequency alone (plenty of ordinary stations work below 1000 Hz) but a station down there visibly working a **queue** — several different callsigns inside a few minutes, a pattern nothing else on the band produces. Until it has seen that, automatic mode will not call anything a Fox.

**A tap from you needs no such evidence.** While Fox/Hound is enabled, tapping any station in the Fox region runs the Fox/Hound exchange, because enabling the mode is your declaration that you are chasing a DXpedition — the same way WSJT-X's Hound tick works. The machine is deliberately more cautious than you are.

The catch is leaving the mode on after the DXpedition has finished: a tap at an ordinary station low in the passband would then QSY onto their frequency and skip your 73. So the transmit-confirmation window **tells you before you commit** — it adds a line reading "*as HOUND — will QSY onto 500 Hz, no 73 sent*" whenever Fox/Hound rules are about to apply. If you see that on a station you did not think was a DXpedition, set Fox/Hound back to **Off**.

Three of the Tab5's usual courtesies stand down while a Fox contact runs, and all three would otherwise work against you:

- it **keeps calling** while the Fox is busy with other stations — a Fox is always busy, and waiting for a free frequency means never calling at all;
- it **does not re-send** a closing message, because the Fox never asks for one;
- it **does not grey-list** the Fox for ignoring you, which in a pileup of hundreds is entirely normal.

Automatic mode will not call a Fox already in your log on that band, so it works one contact and then leaves the DXpedition alone.

#### **Note - Hound only — the Tab5 cannot be a Fox**

A Fox transmits up to five signals simultaneously. The Tab5 keys the QMX one tone at a time over CAT, so a multi-signal transmission is not something this radio can be asked for. This is a hardware limit, not a missing feature.

## 7.7. Message Status

The FT8 left pane shows a **status label** indicating what's happening:

| Status                      | Meaning                                     |
|-----------------------------|---------------------------------------------|
| <b>ACTIVE</b> (red)         | Transmitting right now                      |
| <b>ARMED</b> (amber)        | Ready to transmit next slot                 |
| <b>QSO Complete</b> (green) | Exchange finished, logged to ADIF           |
| <b>QSO Timeout</b> (orange) | No response after 4 slots, exchange aborted |
| (dim white)                 | Idle, no active QSO                         |

Tap the status label to **abort** the current QSO (only works if ARMED or ACTIVE; once COMPLETE, it's logged).

**Resume after timeout** — if a QSO times out because the partner faded, and they come back within ~5 minutes calling you, the exchange **resumes where it left off** automatically (or tap their row to resume manually) instead of restarting from scratch.

**If they never heard your final** (v1.3.4) — a partner who does not decode your closing 73/RR73 keeps sending you their report, waiting for it. The Tab5 now notices: if the station just worked comes back with a report rather than RR73/73/RRR, the final is sent again, up to three times within four minutes, *before* anything else can start a new contact. The QSO is not logged a second time. Taking over by hand no longer produces a duplicate entry either — the same callsign on the same band inside ten minutes is recognised as the same contact.

## 7.8. Power & SWR Readout

After each transmit burst, the status bar briefly shows:

Last TX: 5.2W SWRx1.25 [N=79]

- **5.2W** — average output power measured via QMX PC; CAT command
- **SWRx1.25** — SWR measured via QMX SW; CAT command (only valid during TX)
- **[N=79]** — number of symbols transmitted
  - FT8: always 79 symbols (~12.7 s at 160 ms/symbol)
  - FT4: always 105 symbols (~5.0 s at 48 ms/symbol)

These readings are **informational only** — the panadapter does not enforce limits. Monitor your antenna system independently.

## 7.9. CQ Presets

You can save up to 3 custom CQ messages:

1. Tap **Call CQ**
2. Tap **Edit Presets** (or long-press the active preset)
3. Type your message: callsign, modifier (optional), grid
4. Tap **Save**

Presets persist across power cycles. Common modifiers:

- **DX** — calling DX only
- **POTA** — Parks on the Air activation
- **SOTA** — Summits on the Air activation
- *(blank)* — standard CQ

The preset editor's top-right **CQ stop** button sets the CQ auto-stop limit (see [Call CQ](#) above) — it cycles never / 1–5 / 10 and applies on tap, independent of Save/Cancel.

## 7.10. Frequency & Tone Control

Your transmit tone is chosen for you by default — the nearest clear 50 Hz slot, scanned against the stations currently decoded. You can see it, move it, and from v1.3.4 pin it.

**The TX tone button** is in the FT8 left pane, to the right of the **TXCQ** parity button, and always shows a number (1500 Hz until you change it). Tap it to open the picker.

**The mini occupancy strip** sits directly under the slot countdown in the same pane: the same 50 Hz grid and the same colours as the picker's full-size strip, so where the band is busy — and where you are in it — is answerable at a glance without opening anything.

**Both time windows, always** (asked for by Roy K10ER). The strip is **two rows — EVEN above, ODD below**, marked E and O in the same blue/orange the slot countdown uses. Two stations only collide if they transmit in the *same* window, and only you know which window you are about to pounce into — so both pictures are on screen **before** you choose, not after a transmission has fixed your window. Your white marker sits on your own window's row once one is locked (both rows until then), and your partner's pink sits in *their* window. The picker's full-size strip is split the same way, and its verdict says where your pick stands: "*Clear in EVEN — busy in ODD*".

In the picker:

| Control                | What it does                                                                                                                                  |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Occupancy strip</b> | The whole 200-2800 Hz window as 52 slots. <b>Green</b> free, <b>red</b> occupied, <b>white</b> you, <b>pink</b> your QSO partner              |
| <b>Touch and drag</b>  | Drag along the strip to pick a slot. The bar turns grey and follows your finger, the readout tracks it live, and it commits when you lift off |
| <b>-50 / +50</b>       | Nudge one slot at a time                                                                                                                      |
| <b>Find clear slot</b> | Jumps to the nearest free slot, scanning outward from where you are                                                                           |
| <b>TX Hold</b>         | Pins the tone: every CQ and every reply goes out on it. See below                                                                             |
| <b>Apply nnnn Hz</b>   | Commits the tone and the hold setting                                                                                                         |

The readout states in words whether your chosen slot is clear or occupied, and lists the nearest free slots as numbers.

**Apply whenever you like, including in the middle of a transmission.** If a burst is on the air the change is accepted and applied the moment that burst ends — the transmission in progress finishes on the old tone, because stopping it half way would send a corrupted frame, and the very next message carries your new one.

That used to be a refusal, and it mattered more than it sounds (Roy K10ER). A burst covers about 12.6 s of a 15 s slot and you transmit every other slot, so roughly four attempts in ten landed mid-burst and were rejected — leaving the QSO running on the offset it started with. Your choice depended on your timing, which is not a choice.

Slot parity is untouched, so moving your tone mid-QSO does not disturb the exchange — your partner tracks the slot, not the frequency. Nothing in FT8 requires either station to stay on the offset it began on, only to stay in its time window. This is the same freedom WSJT-X gives you, and it is the way out from under a station that has landed on top of you.

**TX Hold** is WSJT-X's "Hold Tx Freq". With it **off** — the default — each transmission takes the nearest clear slot, and a CQ that gets clashed relocates itself on the next cycle. With it **on**, the tone you picked is the tone used for everything, a clash is reported but never acted on, and nothing moves you off the slot you chose. The line under the checkbox says which of the two you are getting. Both the tone and the hold setting survive a power cycle.

#### **Note - The strip shows decoded stations, not raw spectrum**

A station too weak to decode will not appear as occupied, and an all-grey strip means nothing has been heard yet rather than "the band is clear".

#### **Note - Occupancy is per time window**

Two stations only collide if they transmit in the *same* slot, so a tone busy in the odd window may be completely free for you in the even one. The strip accounts for this whenever your own transmit window is known — that is, once a reply or a CQ is armed, since a reply inherits the opposite of your partner's slot and a CQ carries your TXCQ EVEN/ODD choice. With TXCQ ANY and nothing armed there is nothing to work from, so both windows are shown combined. When the window *is* known, the free-slot line names it.

### **Waiting for a busy station**

On a crowded band several stations answer the same CQ and the caller works one of them. If that is not you, the Tab5 no longer keeps calling: while their last decoded message is addressed to somebody else, **nothing is transmitted**, and the status line shows `working <call> - waiting`. As soon as they send 73 or RR73, or call CQ again, it picks up where it left off.

**You are not committed to the wait** (Roy K10ER's report). The status line carries a **TAP TO CANCEL** line while the hold is on; tapping it drops the pounce so you are free to work somebody else. The abandoned exchange stays resumable for a few minutes, in case the station frees up and you want back in.

This also protects the grey-list. Giving up on a station used to count against it, so a popular station could end up permanently skipped by the robot and Auto-work-pileup for no reason other than being busy. A wait is not a failed attempt. The wait is capped at about six minutes so a station that vanishes mid-exchange still times out normally.

To tune to a different frequency while CQ is running:

1. Tap the **Freq** label on the top bar
2. Enter a new frequency
3. The CQ continues on the new frequency next slot

## 7.11. ADIF Logging

Every completed QSO is **automatically logged to ADIF** on the Tab5's internal storage:

- **Callsign**, grid, report (SNR), time (UTC)
- **Frequency**, mode (FT8)
- **Duration** (QSO start to finish)
- **Operator** (your callsign)

Download the log via the web UI (**QSO Logs** menu -> **ADIF download** ↓) or Settings -> ADIF Log.

## 7.12. Upload to QRZ, eQSL, LoTW & Cloudlog

Via the web UI:

1. Open the **QSO Logs** menu in the bottom bar and click **QRZ upload** ↑, **eQSL upload** ↑, **LoTW setup** (reads **LoTW** ↑ once configured), or **Cloudlog upload** ↑
2. Enter your API key (QRZ), username/password (eQSL), the guided certificate setup (LoTW), or your server address and API key (Cloudlog) when first prompted — credentials are saved for future sessions
3. Click again to upload

See [Web UI -> LoTW Upload](#) for the LoTW certificate setup details.

### Cloudlog and Wavelog

Cloudlog and Wavelog are the only logbooks here that you host yourself, so you supply the address as well as the API key. Both use the same interface, so either works.

You are asked for three things: the server address, your API key, and the station profile ID (the number in the Cloudlog URL — leave it as 1 if you only have one).

**Plain `http://` is allowed, but only to a server on the same network as the Tab5**, and only to a numeric address such as `http://192.168.1.20`. That covers the usual case of a Cloudlog running on a machine at home with no certificate. Anything else needs `https://`.

Two things follow from that, both deliberate:

- The check is made **every time you upload**, not once when you save the address. So if you set it up at home and then operate from a park, the upload refuses rather than sending your API key across a network you do not control. Upload when you get home and it goes through.
- For plain `http://` the address must be numeric, not a name. A name has to be looked up, and what answers the lookup away from home need not be your server. Use `https://` if you want to use a hostname.

If your server is on your own network this is the only upload that needs no internet connection at all, which suits POTA and SOTA better than the other three. Contacts are sent in batches, and Cloudlog does its own duplicate checking, so uploading again after a failure is harmless.

Logs are batched — each upload session records which QSOs have been sent, so re-running skips already-submitted entries.

Uploads work **while FT8 or FT4 is actively running** — the panadapter briefly steps the FFT and SD-archive activity aside for the duration of the HTTPS transfer, then resumes automatically. You typically miss one FT8 slot and won't notice. A progress result is shown once the upload completes.

## 7.13. Troubleshooting

### "QMX not responding to TX command"

- Check USB cable (must be data cable, not charge-only)
- Verify QMX is in the correct mode (USB/LSB/CW/DiGi, not AM)
- Try a manual `tx;` command via the web UI's CAT tab

### "⚠️ **FREQ BUSY** warning, but no other station is there"

- The clash detector reserves a  $\pm 50$  Hz guard band around each decoded station, so it flags a neighbour that is close rather than exactly on you
- It counts only stations **in your own transmit window** (it used to count both windows, so it could warn about a station that could never collide with you; Roy K10ER caught it)
- The warning names the frequency. Tap **TX nnnn Hz** and either **Find clear slot** or drag to a green slot on the occupancy strip
- Remember the strip only knows about stations it has *decoded* — a very weak one will not show

### "QSO timeout — no response"

- The called station didn't hear you (too weak, bad timing, etc.)
- Try a different station, or switch to manual mode and check levels first
- See [Troubleshooting](#) for more

---

**Next:** Set up [Time Sync](#) for accurate FT8 timing, or explore the [Web UI](#).

The Tab5 transmits FT8 via the QMX's `TA<freq>; CAT` command — no PC audio path, no WSJT-X. The QMX does all DDS synthesis and envelope shaping; the Tab5 sends the 79 tone-frequency commands at 160 ms cadence, bracketed by `TX; / TA0; / RX;`.

### Replying to a station

1. In the decode list, **hold your finger on a row** for ~250 ms. A dim highlight appears after ~80 ms so you can see which row you're targeting. List scroll locks once the gate fires; drag up or down to land on the right row.
2. **Lift** — a confirmation modal shows the exact message that will go on air, the audio frequency, and the target slot parity.
3. Tap **Auto Pounce** to hand the full QSO to the auto-engine, or **Transmit** for a single manual message.
4. Tap **Cancel** (in the modal, or the armed indicator in the left pane) to disarm without transmitting.

**Transmit is intelligent (v1.3.0):** it builds the correct *next* message for that station from what they last sent — the same semantics as a WSJT-X double-click. Their CQ → your grid (or your report directly, if **Skip TX1** is on); their grid → your report; their report → R+your report; their R-report → RR73; their RR73/73 → 73. The report value is always your live measurement of their signal. You can walk an entire QSO step by step with nothing but Transmit taps — and when you send the closing RR73/73, the QSO **logs to ADIF** exactly like an auto-engine contact. Auto Pounce is offered on any first reply; mid-QSO rows get Transmit only.

Slot parity is set automatically — if you heard them on an EVEN slot, your reply goes on ODD so they're listening when you transmit.

**The auto-engine** works the full exchange: TX1 (grid) → wait for their report → TX2 (R+report) → wait for RR73/73 → TX3 (73) → DONE. At every step it re-sends the current message for up to 4 consecutive slots if the other station doesn't respond. If no reply comes after 4 slots, the QSO times out (orange status, tap to clear).

**Skip TX1 (faster pounce).** With **Skip TX1** enabled in the Options editor, a pounce opens with your signal report immediately instead of the grid exchange — saving one round trip. If the station has already aged out of the decode list, it falls back to the normal grid TX1 automatically.

## Working a pile-up

When you call CQ or work a run, more than one station may answer at once — and a caller who replies while you're mid-QSO with someone else used to vanish from the live decode list once they stopped transmitting. They're now held in a **Pileup** list so you don't lose them:

- Whenever callers are waiting, the **ADIF-log** button on the FT8 screen becomes a **Pileup** button in a distinct colour, reverting once the list empties.
- Tap **Pileup** to see everyone who has called you and isn't worked yet. Tap a station to work them (the same confirmation modal as a decode-list tap), or tap the ✕ to dismiss one.
- **Hold the button to open the ADIF log** — the log is always reachable this way, even while the button reads "Pileup" (v1.3.0; a one-time hint appears the first time the button flips).
- A station is removed from the list automatically once you start a QSO with them, and a just-completed contact's trailing 73 can't put them back.

- Working a caller from the pileup sends the correct *next* message for that station, built from whatever they actually last transmitted — the same laddering as tapping a decode-list row (v1.3.2). Previously it always opened with a signal report, which could never produce the R+report a station needs when they come back minutes later with a report of their own.
- Worked-before stations appear in the pileup unless **Exclude worked-before** is checked — the pileup follows the same rule as the auto-answer, so dupes you're willing to work stay visible.

The tracker never transmits on its own — it only remembers callers; you choose who to work. If you'd rather it *did* transmit, check **Auto-work pileup** in the Options editor: when your current QSO completes (or immediately, if you check it with callers already waiting and nothing else going on), the strongest waiting caller is pounced automatically, draining the pile one contact at a time. It carries the same unattended-TX warning as the robot.

## Calling CQ — CQ-run mode

Tap **Call CQ**. No confirmation modal. The engine:

1. Scans the current decode list for occupied 50 Hz audio bins.
2. Picks the nearest unoccupied bin to 1500 Hz (standard FT8 sub-band centre).
3. Arms the CQ on the matching slot parity and waits for the boundary.

From there it's fully automatic:

- The opposite-parity slot is decoded while CQ runs so replies are never missed.
- The moment a station replies with your callsign, CQing stops and the exchange starts automatically — best-SNR caller chosen if multiple stations answer simultaneously.
- After the exchange completes (RR73 → 73 → logged), CQ resumes on the same frequency.
- A mid-exchange timeout also resumes CQ rather than dropping the frequency.
- While CQ-run is active, other stations' cq rows are hidden so replies to you stand out.

Tap **Cancel** in the TX status bar at any time to stop.

## FT8 Options

Tap **Options** in the left pane to open the FT8 Options panel — everything that only means anything in FT8 mode, in one place rather than scattered through a general settings list (v1.9.4; was called **Filter**, renamed because the panel already held real behaviour toggles like Auto-work pileup and grey-listing, not just filters). Controls which stations CQ-run auto-answers, which rows appear in the decode list, and (on the web UI) the CQ message presets too.

The web UI has the same panel behind its own **Options** button, shown only in FT8 mode next to **TX tone** — CQ messages and FT8 filters were pulled out of the general Settings list into it. The button carries a count badge of how many settings are currently on rather than a plain active/inactive colour (a colour would always read "on" for anyone who runs filters permanently, which tells you nothing); hovering it lists which ones. Inside the panel, an active checkbox gets an amber border/fill in addition to its own tick mark, so "what's already set" is never a colour-only signal.

- **Include 1 / Include 2** — if either field has text, only messages containing one of its terms are eligible. Space- or comma-separated (e.g. POTA SOTA OR JA, VK), matched against the *whole* decoded message text so POTA/SOTA tags, grid squares, country prefixes, /P suffixes etc. all work.
- **Exclude 1 / Exclude 2** — messages containing any of these terms are skipped even if they'd otherwise match.
- **Exclude plain CQ callers** — hides bare cq ... rows so only replies and exchanges remain visible.
- **Exclude worked-before** — hides callsigns already worked **on the current band** (per-band, from your ADIF log) from the list and from CQ-run auto-replies; the same station on a different band is treated as not worked.
- **Skip TX1** — when you pounce a station, open with your signal report instead of the grid exchange for a quicker QSO (falls back to the grid exchange if the station has aged out of the decode list).
- **Allow grey-listing** — off by default. When enabled, a station that times out two of your pounces in a row is set aside: the robot and Auto-work-pileup skip it, its decode row turns violet, and tapping it offers to clear it rather than opening the TX dialog. Useful on a busy band where one station simply never comes back. The list lives in RAM only and is forgotten at power-off.

Tap **Save** to persist (NVS) and apply immediately.

## Auto-answer CQ (robot)

⚠ **Transmits unattended — never leave it running unsupervised.** When enabled, the robot picks a CQ caller every slot (filtered the same way as above, plus a worked-before skip) and runs the full exchange itself — no per-QSO confirmation, no tap required. Pick a **Priority**: Strongest signal, Weakest signal, or Most distant grid. Same TX1→report→RR73→73→ADIF-log flow as a manually-tapped reply; you just aren't the one tapping. You remain responsible for everything it transmits under your callsign, same as any other unattended digital-mode software.

## TX status indicator

The left pane shows a persistent status line below the slot countdown:

| Colour                                                | Meaning                                                                                                                                                                                                                                                                           |
|-------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Red                                                   | TRANSMITTING: <message> — burst in progress, with your <b>audio tone on its own line</b> ; tap to abort                                                                                                                                                                           |
| Amber                                                 | TX armed: <message> then nnnn Hz → EVEN/ODD, ~Ns — waiting for slot; tap to cancel                                                                                                                                                                                                |
| Red-orange ⚠<br>FREQ BUSY                             | Your tone is occupied ( $\pm 50$ Hz guard), and the warning names the frequency so you can act on it. During CQ-run this self-heals — the next cycle hops to the nearest clear tone automatically. Mid-exchange you can now move it yourself: see <b>TX audio frequency</b> below |
| Amber, working<br><call> - waiting<br>+ TAP TO CANCEL | The station you are calling is mid-exchange with somebody else. Nothing is transmitted until they sign off or call CQ again — or tap to cancel the pounce and work someone else (v1.3.5). See <b>Waiting for a busy station</b> below                                             |
| Green                                                 | QSO complete                                                                                                                                                                                                                                                                      |
| Orange                                                | QSO timed out — tap to clear                                                                                                                                                                                                                                                      |
| Dim white                                             | FT8 engine status passthrough (capturing / decoding / symbol count / ...)                                                                                                                                                                                                         |

## TX audio frequency

Your transmit tone is chosen automatically — the nearest clear 50 Hz slot to 1500 Hz, scanned against the stations currently decoded. From v1.3.3 you can both **see** it and **change** it.

The **TX nnnn Hz** button in the FT8 left pane always shows it — to the right of the txcq parity button — and tapping it opens the picker. A **mini occupancy strip** under the slot countdown shows the same picture at a glance. (Before v1.3.4 this was a chip that appeared only while a CQ or QSO was running, and the tone was also repeated on the TX status line.)

| Control                | What it does                                                                                                                                     |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Occupancy strip</b> | The whole 200-2800 Hz window as 52 slots. <b>Green</b> free, <b>red</b> occupied, <b>white</b> you, <b>pink</b> your QSO partner                 |
| <b>Touch and drag</b>  | Pick a slot by dragging along the strip. The bar goes grey and follows your finger, the readout tracks it live, and it commits when you lift off |
| <b>-50 / +50</b>       | Nudge one slot at a time                                                                                                                         |
| <b>Find clear slot</b> | Scans outward from where you are and jumps to the nearest free slot                                                                              |
| <b>Apply nnnn Hz</b>   | Sends it to the radio                                                                                                                            |

The readout also says in words whether the slot you have picked is clear or occupied, and the free slots nearest you are listed as numbers underneath.

It applies **between** bursts. If a burst is on the air, Apply refuses and tells you to try again after it — the same rule WSJT-X operators are used to. Slot parity is untouched, so moving your tone mid-QSO does not disturb the exchange; your partner tracks the slot, not the frequency.

**The strip shows decoded stations, not raw spectrum.** A station too weak to decode will not show as occupied, and an all-grey strip means nothing has been heard yet rather than "the band is clear".

## QSO override buttons

During an active auto-QSO exchange (any state between first reply and final 73), three buttons appear in the left pane:

| Button                                 | What it does                                                                                                                                                                              |
|----------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Re-send / &lt;field&gt;</b> (amber) | Re-arms the current outgoing message immediately. The label shows what will go out — e.g. <b>Re-send / JO45</b> when waiting for their report, <b>Re-send / -07</b> when waiting for RR73 |
| <b>RR73</b> (blue)                     | Skips straight to RR73, bypassing the report step                                                                                                                                         |
| <b>73</b> (green)                      | Fires the 73 sign-off and closes the QSO immediately                                                                                                                                      |

These are deliberate operator nudges for busy-band edge cases where the auto-engine falls a slot behind or you can see the exchange is further along than the state machine knows. The auto-engine handles the normal case; these exist for when a quick nudge is faster than waiting through the 4-slot retry cycle.

## TX power / SWR readout

After each burst the Tab5 queries PC; / SW; for instantaneous forward power and SWR and shows the result briefly in the status line: Last TX: X.XW SWRx.xx [Ns]. If SWR > 4.0 (indicating the QMX SWR-protection latch tripped), the firmware automatically cycles TX; / 150 ms / RX; to clear the latch so the radio is ready for the next TX slot without operator intervention.

## CQ message presets

Long-press the **Call CQ** button to open the preset editor. Three message slots with radio buttons — check the active one. A + <call> <grid> quick-insert appends your identity. Standard CQ constructions (CQ DX 0Z1LAV J065FR, CQ P0TA ...) and ≤13-char free text both encode via the general ft8\_lib encoder. Presets persist to NVS. The Call CQ button label shows the selected message; a short tap transmits it.

**CQ auto-stop** (v1.3.5, Don WB0LQW's "I usually send CQ 2-4 times and then pause"). The editor's top-right **CQ stop** button cycles never / 1 / 2 / 3 / 4 / 5 / 10 calls and applies the moment you tap it — no Save needed. While calling, the TX status shows the counter live ("call 2 of 4"). After the last unanswered call the Tab5 listens through one more receive slot — an answer to your final call still starts the QSO normally — then stops and goes idle. The limit applies to every CQ run, including the automatic resume after a completed or timed-out contact; each fresh sequence starts the count over. Persists across power cycles and travels in the config backup.

## QSO logging (ADIF)

Every completed FT8 QSO — pounce or CQ-run — is automatically written to an ADIF v3.1.4 file at `/spiffs/qso.adf` on the Tab5's internal flash. The log survives reboots and re-flashes.

**Download.** The web UI bottom bar shows the **QSO Logs** menu once the first QSO is logged. **ADIF download** ↓ fetches `qso.adf` for import into any logging software (WSJT-X, Log4OM, DXKeeper, ...) or for POTA.app, which has no upload API (see below); **View / edit log** opens it as a sortable table with per-record delete and Delete-all — see [Web UI](#).

**View and edit on the Tab5.** The **ADIF Log** button on the FT8 screen (long-press always works, even while it reads "Pileup") opens the on-device viewer: a Today/All filter with a POTA activation counter (the title turns green at 10 QSOs today), long-press a row to delete that single record, and — new in v1.3.5 — **Delete all**, next to Close: the first tap arms it and shows the live count ("ALL 34?"), a second tap within five seconds erases the log, waiting disarms it. Clearing the log (from either the Tab5 or the browser) also resets the QRZ/eQSL/LoTW upload positions, so QSOs logged afterwards upload normally. The clear-first workflow is the practical POTA tool: start the activation with an empty log and the ADIF at the end is exactly what you submit.

**Upload to QRZ Logbook / eQSL — directly from the Tab5.** Two more buttons appear next to the ADIF download link once you've logged a QSO: **"QRZ ↑"** and **"eQSL ↑"**. Tap either the first time and it prompts for credentials (QRZ: API key from *Logbook Data* → *API Key* on qrz.com; eQSL: your username and password — eQSL has no API-key scheme) and saves them on the Tab5, not just in the browser. Every tap after that uploads everything logged since the last successful upload — no need to re-enter credentials, and no risk of duplicate uploads, since the Tab5 tracks how far it's gotten into the log. If a record is rejected (bad credentials, quota, etc.) the run stops and reports the reason rather than skipping past it; fix the cause and tap again to resume from where it left off. eQSL accepts a whole batch of QSOs per request; QRZ's API takes one at a time, so a big log takes one HTTP round trip per QSO.

**Upload to ARRL LoTW — also directly from the Tab5.** The Tab5 signs your QSOs on-device with your own LoTW callsign certificate, so no TQSL and no PC are involved. The bottom bar shows "**LoTW setup**" until it is configured, then "**LoTW ↑**".

Setup is a two-page guided flow. Page one points you at ARRL's own "Save the Callsign Certificate" instructions — you export a .p12 file from TQSL, which most people did once, years ago. Page two takes that file, its password, and your DXCC entity number:

| Field                       | Notes                                                                                                                                                                                                            |
|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>.p12 file + password</b> | Parsed <b>in your browser</b> , not on the Tab5 — the password never reaches the device. Only the certificate and key are sent                                                                                   |
| <b>DXCC entity number</b>   | Required. The same one your TQSL station location uses (Denmark = 221, USA = 291)                                                                                                                                |
| <b>CQ zone / ITU zone</b>   | Optional                                                                                                                                                                                                         |
| <b>US state / county</b>    | <b>US stations only</b> (v1.3.3). Without them your QSOs earn no Worked All States and no county credit — for you or for the stations you work. The county is the name on its own (Arlington), not VA, Arlington |

Every tap of **LoTW ↑** afterwards signs and uploads everything logged since the last successful upload. Ctrl-click **LoTW ↑** to re-run setup — a certificate is typically valid three years. Re-importing the *same* certificate no longer re-uploads your whole log; only an actually-changed certificate resets the upload position, since a new key means everything has to be re-signed.

Uploads are queued at ARRL's end. If a QSO does not appear immediately, check [the LoTW queue status](#) before assuming a problem — the queue has run hours behind at busy times. LoTW rejects a malformed file at upload time, so anything that reaches the queue was signed correctly.

**POTA.app** has no upload API at all (browser login or email only), so use the ADIF download above for that.

### Fields in each record:

| ADIF field          | Content                                                                                                                                                                                                                       |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CALL                | Their callsign                                                                                                                                                                                                                |
| FREQ                | Dial frequency in MHz (3 d.p., e.g. 14.074)                                                                                                                                                                                   |
| BAND                | Amateur band (e.g. 20M)                                                                                                                                                                                                       |
| MODE                | FT8, or MFSK for an FT4 contact — ADIF defines FT8 as a mode in its own right but FT4 only as a submode of MFSK, and this is the form WSJT-X writes and other software expects to read ( <i>Don Adams WB0LQW</i> )            |
| SUBMODE             | FT4 on an FT4 contact, absent otherwise. Never a copy of MODE: QRZ rejects that pairing outright                                                                                                                              |
| RST_SENT            | Our SNR estimate (e.g. -07). <b>Omitted entirely if no report was exchanged</b> — writing a placeholder 599 into an FT8 log, as versions before v1.3.4 did, fabricates a measurement that then gets uploaded to QRZ/eQSL/LoTW |
| RST_RCVD            | Signal report received                                                                                                                                                                                                        |
| QSO_DATE            | UTC date YYYYMMDD                                                                                                                                                                                                             |
| TIME_ON             | UTC time HHMMSS                                                                                                                                                                                                               |
| STATION_CALLSIGN    | Your callsign (from Identity in the drawer). This is the ADIF field POTA reads; the older MY_CALL spelling made POTA warn " <i>No station_callsign field, assuming operator ...</i> " on every upload                         |
| MY_GRIDSQUARE       | Your grid                                                                                                                                                                                                                     |
| GRIDSQUARE          | Their grid (from the decoded FT8 message)                                                                                                                                                                                     |
| MY_SIG, MY_SIG_INFO | The programme and reference <b>you</b> were activating (POTA / us-1241), when an activation is set — this is what POTA and SOTA credit the activation from                                                                    |

| ADIF field                                                              | Content                                                                                                                                                                                                                                                                                                                                                                                                   |
|-------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SIG, SIG_INFO                                                           | The programme and reference <b>they</b> were activating. Filled in automatically when the QSO came from a spot, or by hand afterwards in <b>View / edit log</b> — and correct to record whether or not you were activating too; it is a Park-to-Park contact only when both of you were. Absent when the other station never registered the activation, which is why the column can be legitimately empty |
| CONTEST_ID,<br>STX_STRING,<br>SRX_STRING,<br>ARRL_SECT,<br>MY_ARRL_SECT | Field Day mode only: contest ID ARRL-FD, your/their literal <class> <section> exchange text, and their/your section alone                                                                                                                                                                                                                                                                                 |

**Clear.** `GET /api/adif/clear` from the web UI wipes the file and resets the worked-call cache.

Set your callsign and grid in the settings drawer → **Identity** before your first QSO so they appear correctly in logged records.

## 8. Time sync

FT8 requires accurate UTC time — within  $\pm 1$  second of the real thing. The panadapter syncs time from multiple sources in priority order.

### 8.1. Time Sources (Priority Order)

1. **GPS-disciplined QMX** (auto-detected) — phase-locked to the GPS second, ~10 ms, works offline
2. **WiFi + SNTP** (if available) — ~10 ms, re-syncs every ~1 hour
3. **Tab5 RTC** (if set) — persists across power cycles ( $\pm 1$  min accuracy)
4. **FT8/FT4-derived** — offline fallback only (ignored while GPS/SNTP is up)
5. **Manual set** — enter time manually via the settings drawer

GPS and SNTP are the two accurate sources and are used whenever present; if you're offline with neither, the panadapter falls back to the RTC (or FT8-derived / manual).

## 8.2. Offline (POTA / Portable)

If you're operating **without WiFi** (POTA, portable, SOTA):

1. **Set the Tab5 RTC before you leave home** (settings -> Time)
2. The RTC is powered by a **supercap battery** and holds time for **30–40 hours** without power
3. When you turn the Tab5 on in the field, it reads the RTC immediately
4. **Turn the QMX on whenever you like — you do not have to do anything about its clock.** A QMX without GPS comes up at 00:00 and its clock free-runs, so the panadapter does not take the time from it while the Tab5's own clock is good. It sets the radio's clock instead, and only when the radio is more than a few seconds out.
5. Optional: if your QMX has GPS, the panadapter syncs the RTC from QMX GPS every 5 minutes

No internet needed — FT8 timing works offline.

### Note - Why step 4 says that

Earlier versions took the time from a GPS-less QMX when there was no WiFi, which meant switching the radio on in the field replaced your accurate RTC time with the radio's 00:00 — and FT8 stopped decoding. Reported by Don WB0LQW. The Tab5's supercap RTC is the better clock of the two offline, so it now wins, and the radio gets set from it.

If you have no accurate time at all — the RTC was never set, or it has been unpowered for more than a day or two — then a QMX reading *is* used, because something is better than nothing. Failing that, set the clock by hand (**FT8 -> Options -> Sync Time**), which also accepts seconds.

### Warning - The date is checked separately from the time

The QMX, its GPS and the hours/minutes/seconds boxes all give only a **time of day**. If the Tab5 has been off longer than its clock lasts and there is no internet, the date it has is simply the last day it was used — so a perfectly set time can still be logged under the wrong day. Reported by Don WB0LQW, whose POTA log came out two days behind.

So when the date cannot be checked, the Tab5 asks about a minute after it starts: **"Is today's date right?"** Step it with **- day / + day** if needed and tap **This date is right**. If WiFi comes up while the question is on screen, it closes by itself. QSOs are still logged if you do not answer — nothing is ever held back.

The **Set and Sync the Clock** window also shows the date on its second line, marked (*unverified*) when it has not been checked. Tap that line to change it.

## 8.3. WiFi + SNTP

When WiFi is active:

1. The panadapter connects to an SNTP server (default pool.ntp.org)
2. Gets the current UTC time
3. Sets the system clock and writes it to the Tab5 RTC
4. Checks periodically (~hourly) and re-syncs if time has drifted

SNTP sync is **automatic** — you don't need to do anything. The bottom bar shows the current time (updates every second).

## 8.4. QMX GPS Time Sync (auto-detected)

If your QMX has **internal GPS** (QMX+ models often do), there is **nothing to enable** — the Tab5 detects it automatically:

1. At connect, it catches the QMX's  $\overline{\text{TM}}$ ; seconds *flip* (the true GPS second boundary) and compares it against SNTP.
2. If they agree tightly — **and the Tab5 has not itself set that radio's clock** — the QMX is flagged GPS-disciplined and the clock is **phase-locked to that second edge** (~10 ms, drift-free), not just set to the whole second. Re-locks every 5 minutes.
3. If they don't agree (a non-GPS QMX with a free-running RTC), it's used only as a low-priority offline fallback.

A GPS-disciplined QMX shows **UTC(GPS)** in the bottom bar and is a top-tier source (as good as SNTP); a non-GPS QMX shows **UTC(QMX)** and only helps when offline.

#### **Note - Why step 2 asks who set the clock**

The Tab5 pushes its own time into a non-GPS QMX to set that radio's clock — which leaves the radio agreeing with the Tab5 *because the Tab5 put it there*. Until v1.8.5 a close-enough agreement was taken as proof of GPS, so a radio with no GPS at all could be labelled UTC(GPS), and worse, the Tab5 then stopped maintaining the clock of the one radio that had no other source. A clock the Tab5 has set is no longer accepted as evidence about itself. The flag clears when the radio's clock is plainly its own again — a QMX's clock is not kept across a power cycle, so switching it off and on is what re-arms detection.

#### **Note - The label needs the radio to still be there**

A remembered verdict says *this radio is GPS-disciplined*, not *GPS is keeping time right now*. With the QMX unplugged the Tab5 has no GPS of its own, so the label falls back to whatever is actually in charge — usually UTC(NTP). Reported by Don N2VGU, whose Tab5 read UTC(GPS) with the radio disconnected; the time was correct throughout, only the label was wrong.

## **8.5. Setting the time by hand**

**There is no "Set Manual Time" control in the settings drawer.** Earlier versions of this guide said there was, and there never has been on recent firmware — Don WB0LQW went looking for it during a POTA activation and could not find it. Apologies. The clock is set from the FT8 screen:

1. Switch to **FT8**
2. Tap **Options** (left pane)
3. Tap **Sync Time** (bottom right of the modal)
4. A panel appears with three boxes: **[HH] : [MM] : [SS]**
5. Tap **HH** or **MM** to type them on the numpad (0–23, 0–59)
6. **Hold the SS box and let go exactly on the minute** — the seconds are set to 00 the instant you release
7. Tap **Apply**

Step 6 is the one that matters off-grid. FT8 needs the clock right to about a second, and until v1.8.1 the seconds could not be set at all — hours and minutes were editable and the seconds were not, which left no way to get inside a second with no WiFi and no GPS.

The clock is set **when you release**, not when you tap Apply. The release is the measurement, so an Apply a few seconds later would be a few seconds late. Use a watch with a second hand, or listen for the gap between FT8 transmissions. While you hold the box it turns amber and tells you what letting go will do.

If you have typed hours and minutes first, those are used. If you have not, the Tab5 takes the nearest minute to its own clock — so this corrects the seconds without disturbing an hour and minute that are already right.

The time is written to the RTC as well as the system clock, so it survives a power-off.

## 8.6. FT8-Derived Sync (Offline Fallback)

The panadapter can also **estimate the UTC offset** from decoded FT8/FT4 signal timing and nudge the clock:

1. Decode several messages (requires on-air activity)
2. Measure their timing relative to the slot boundary
3. Estimate the error and apply a damped correction

**This runs only as an offline fallback.** While SNTP or a GPS-disciplined QMX is available they are authoritative and FT8-derived sync is **ignored** — deliberately. The FT8 slot offset the device measures is dominated by  $\sim 1/2$  second of one-way *receive audio latency* (QMX SDR + USB buffering), which is **not** a clock error; letting it pull the clock would actually drag your transmit timing late. So it only touches the clock when you're off-grid with no SNTP/GPS.

Most useful when: WiFi is unavailable, no GPS QMX, and your RTC has drifted.

### Fine-Tune Time with "Sync Time" (FT8 Only)

In **FT8 mode**, the Options modal includes a **"Sync Time" button** that opens an interactive time-setting panel:

1. Tap the **Options** button (FT8 screen, left pane)
2. Tap the **Sync Time** button (bottom right of the modal)

3. A panel appears with three fields: **[HH] : [MM] : [SS]**
  - **HH / MM** (hours/minutes) — tap to edit via numpad (0–23, 0–59)
  - **SS** (seconds) — auto-syncs from FT8 signals (blue frame = actively syncing, grey = locked). **Hold it and release on the minute** to set the seconds to 00 yourself, which is what you want when there are no FT8 signals to sync from
4. Tap **Apply** to write the time to the RTC and system clock

The **SS field** updates automatically from decoded FT8 messages — each decode gives a sub-second correction estimate. Tap **SS** to toggle between auto-syncing (blue) and locked (grey). While locked, seconds still count at the captured offset, so you don't lose precision after locking.

**Use case:** You're operating portable without WiFi, your RTC is ~5 seconds off, and there's on-air FT8 activity. Set HH/MM manually, let SS auto-sync to the decoded signal timing for a few seconds, lock it, and you're done — FT8 timing is now precise.

FT8-derived sync shows **SS (sub-second)** in the bottom bar when active.

## 8.7. Bottom Bar Time Display

The center of the bottom bar shows the current UTC time and which source is active:

| Indicator                  | Meaning                                                                     | Updates                                  |
|----------------------------|-----------------------------------------------------------------------------|------------------------------------------|
| <b>UTC(GPS)</b>            | GPS-disciplined QMX, auto-detected, phase-locked to the GPS second (~10 ms) | Every 5 min                              |
| <b>UTC(NTP)</b>            | WiFi + SNTP                                                                 | ~1 hour                                  |
| <b>UTC(FT4) / UTC(FT8)</b> | FT4/FT8-derived offline sync                                                | Continuous (when decoding, offline only) |
| <b>UTC(RTC)</b>            | Tab5 supercap RTC                                                           | At boot                                  |
| <b>UTC(MAN)</b>            | Manual time set                                                             | On-demand                                |
| <b>UTC(QMX)</b>            | Non-GPS QMX RTC fallback (offline only)                                     | Every 5 min                              |
| <b>UTC</b>                 | Fallback (no sync source)                                                   | —                                        |

The suffix tells you at a glance which source is **currently in charge** (the active authority, not merely the last one that wrote the clock). A GPS-disciplined QMX (UTC(GPS)) and WiFi/SNTP (UTC(NTP)) are both accurate — if you see either, you're set. If you're off-grid you'll see UTC(FT8)/UTC(FT4) (on-air digital activity), UTC(QMX) (non-GPS QMX clock), or UTC(RTC) (the supercap RTC you set before leaving home).

## 8.8. Slot Timing

FT8 operates on **15-second slot boundaries** aligned to UTC. The panadapter:

1. Reads the current system time
2. Waits until the next 15-second boundary (hh:mm:00, hh:mm:15, hh:mm:30, hh:mm:45)
3. Starts a 15-second capture window
4. Decodes the received FT8
5. Transmits (if armed) at the start of the next boundary

This alignment is **automatic** — you don't configure slots. But **time accuracy is critical**:

- $\pm 500$  ms error -> can miss decodes or transmit off-slot
- $\pm 1$  s error -> very few decodes, transmit often off-time
- $\pm 2$  s error or worse -> FT8 doesn't work

## 8.9. Time Sources Summary

| Source             | Accuracy                                | Updates     | Works Offline?          |
|--------------------|-----------------------------------------|-------------|-------------------------|
| <b>QMX GPS</b>     | ~10 ms (auto-detected, tick phase-lock) | every 5 min | Yes (if QMX has GPS)    |
| <b>SNTP</b>        | $\pm 10$ ms                             | ~1 hour     | No                      |
| <b>RTC</b>         | $\pm 1$ min                             | at boot     | Yes (30–40 h)           |
| <b>Manual</b>      | $\pm 1$ sec                             | on-demand   | Yes (until power cycle) |
| <b>FT8-derived</b> | offline fallback only                   | continuous  | Yes                     |

**Next:** Configure [Settings](#) or troubleshoot [Time Sync Problems](#).

The Tab5 needs accurate UTC for FT8 slot timing. Sources in priority order (highest first):

| Source                   | When applied                                                                                                                                                                                                                                                                                                                                                             |
|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>SNTP (WiFi)</b>       | Always authoritative whenever WiFi is connected and has synced at least once — sets system clock, Tab5 RTC, and NVS                                                                                                                                                                                                                                                      |
| <b>Tab5 RTC</b>          | RX8130CE supercap-backed (~30–40 h retention) — applied at boot before QMX or WiFi are available                                                                                                                                                                                                                                                                         |
| <b>QMX <sup>TM</sup></b> | Offline fallback only — applied when WiFi is down or has never synced (field/POTA with no WiFi)                                                                                                                                                                                                                                                                          |
| <b>FT8 signal timing</b> | Sub-second correction from the decoded signal population's average timing, auto-applied continuously every slot while FT8 is decoding (damped, so a noisy single slot can't yank the clock) — deliberately tracks who you're actually trying to work, not absolute GPS/NTP truth. A manual one-shot version is also available via the <b>Sync Time</b> modal (see below) |
| <b>Manual</b>            | Full HH:MM override in the <b>Sync Time</b> modal — for rare POTA sessions with neither WiFi nor QMX clock                                                                                                                                                                                                                                                               |

Each accepted sync writes through to the RX8130CE so the clock persists across power-off. The Tab5 also polls <sup>TM</sup> every 5 minutes in the background to catch QMX GPS lock events.

**For POTA / no-WiFi use:** uncheck **WiFi initiated** in the settings drawer. Time comes from the QMX on USB connect (or the supercap RTC if the Tab5 was recently synced). FT8 slot timing will be accurate from either source.

## FT8 time calibration modal

On the FT8 screen, tap **Options** → **Sync Time** to open the time calibration modal. It shows three large boxes: **[HH] : [MM] : [SS]**.

- **HH / MM** — pre-filled from the current UTC clock. Tap either box to edit it with a numpad. Use this for rare POTA situations where neither WiFi nor the QMX clock is available.

- **SS** — auto-syncs continuously from decoded FT8 signals. Each slot, every successfully decoded station contributes a timing sample; a robust outlier-rejecting average (median  $\pm$  a tolerance window) across all of them sets the correction, so one bad decode can't throw off the reading. The box border flashes bright blue for ~30 ms each time a fresh measurement lands — a visual heartbeat that sync is active — and the hint below reads "**Flash: FT8 synced...**". A blue frame means it is actively tracking; tap SS to lock it.
  - **Apply** — if only SS was synced (HH and MM untouched), `time_sync_apply_correction_ms()` nudges the system clock by the measured sub-second offset and writes through to the RTC. If HH or MM was edited, `time_sync_set_manual()` sets the full time. The bottom bar shows **UTC(FT8)** after an FT8-derived correction, or **UTC(manual)** after a full manual set.
- 

## 9. Settings

---

Swipe in from the right edge to open the settings drawer. All settings are saved automatically.

The top two buttons are not settings but the two ways into help: **User Manual**, which opens this guide at the chapter for the screen you came from, and **Need guidance?**, which lists symptoms and questions in plain words. See [Getting Help](#).

### 9.1. Basic and Advanced

The drawer is grouped under headings — **Station**, **Device**, **Radio**, **Network**, **Display**, **FT8**, **WSPR** and **Spectrum** — and the button beside the **Settings** title chooses how much of it you see. It reads **BASIC** or **ADVANCED**; tapping it swaps between them. (It said EXPERT until v1.10.0, which described the reader rather than the contents.)

Advanced holds everything. Basic holds the sections an operating session actually reaches — Activation, QMX volume, RF gain, SWR protection, Antenna Tune, WiFi setup, Display brightness, and the FT8 group's distance and reporting options, plus the four WSPR sections when you are on the WSPR page. That is what Basic is *for*: it is the operating set, not a beginner mode. Nothing is lost in Basic; it is only hidden.

**Which sections appear in which view is yours to set** (v1.10.0). In the web UI, open **Settings** and click **Tab5 config** next to Save: every section in the Tab5's drawer is listed in drawer order with a **Basic** and an **Advanced** tick. A section can be in both, in one, or in neither — neither being a legitimate answer meaning you never want to see it. It is deliberately edited from the browser rather than from the Tab5, so it stays out of the way of anyone who just wants to operate.

A firmware update that adds a new setting **shows** it rather than hiding it behind a layout you saved before it existed — the device records which sections were known when you saved, so anything newer than that takes the shipped default instead of reading as "unticked".

This layout is stored on the device and is deliberately **not** part of a config backup: it is a preference about the menu, not a station or radio setting.

## 9.2. Radio

These reach the QMX itself over the CAT link.

**QMX volume** — the radio's own AF gain, in decibels, the same number the QMX shows on its LCD when you click its volume knob. Read back from the radio when you open the drawer, so it agrees with the rig even if you last changed it there.

**QMX RF gain** — the per-band RF gain from the radio's Band Configuration, 0–99 dB (the QMX default is 54). Because it is **per band**, the Tab5 reads it from the radio rather than remembering a number that would belong to whichever band you were on last; it shows "reading..." until the radio answers, and **"radio not connected"** if the radio is not there at all. Until v1.8.3 it could stick on "reading..." for a whole session: the value was only ever repainted when you *next* opened the drawer, so a single unanswered query left it stuck (reported by Samuel W7STF). It now fills itself in as soon as the radio replies. It writes when you let go of the slider, not while you drag, because this is stored configuration rather than a session setting. Changing it moves the noise floor, so the flat-spectrum reference is re-learned.

**Show decoded CW** — the line along the bottom of the panadapter carrying the Morse the radio is decoding, in CW/CW-R. On by default. The QMX does the decoding itself, so switching this off frees no processing — only the screen space; see the Decoded CW section of the [Panadapter](#) guide for what the line shows and how the noise is filtered. The same setting is in the browser under **Radio & display**.

**CW profiles** — a CW centre frequency together with the filter widths to offer with it, so a setup you use often is one tap rather than two menus on the radio (suggested by Uwe DL8UG: *"setting this on the QMX is always a bit of a chore, and half the time you do not have the right values in your head anyway"*).

There are four slots. Edit them in the **browser's Settings window**, under **CW profiles**: a name, a centre frequency, and a tick for each width you want the bandwidth list to offer. Apply one from the button beside it, or from **CW profiles** in the Tab5's settings drawer, where the four slots appear as four buttons.

- The centre must be **500–950 Hz in steps of 25**, which is what the radio accepts. Anything else is corrected as you leave the box, so what you see is what will be stored.
- Names are cut to nine characters — that is what fits on the Tab5's buttons.
- Leave the centre empty to clear a slot.

#### **Warning - Applying a profile changes your radio's stored configuration**

It writes the CW centre and all eight filter rows, then asks the radio to reload — which takes about a second, and briefly interrupts reception. It is a deliberate, once-a-session action rather than something to tap while operating. Every write is read back and retried, and the bandwidth list is re-read from the radio afterwards, so what the Tab5 offers is what the radio really has.

Note that setting the CW centre also moves the radio's CW offset and sidetone with it, which is the QMX's own behaviour and not something the panadapter chooses.

**CW transmit offset** — transmit a little away from the station you are listening to, so a QRP call is not buried in the pile of everyone zero-beating the DX (suggested by Roy KI0ER). The centre of the slider is off, and the sign chooses whether you transmit above or below.

**Keep it small: around 100 Hz or less is typical, and the slider stops at  $\pm 300$ .** The point is to land inside the other station's filter, not outside it — most CW operators run a 500 Hz filter or narrower, 200 Hz is not unusual, and the passband is not equally usable right to its edge: the tone gets muddy and a QRP signal has least energy exactly where the filter is already attenuating (Michael KZ4LY). Roy KI0ER uses +60 Hz on his own rig. Earlier versions of this page suggested 400–600 Hz, which is outside many operators' filters altogether.

### **Note - Your QMX may keep showing two frequencies afterwards**

The offset works by putting the radio in split — receive on VFO A, transmit on VFO B. When you switch the offset off, the panadapter returns VFO B to VFO A and drops split, and it confirms both by reading the radio back.

The QMX's own LCD may nevertheless keep showing a second frequency until you change band or power-cycle it. That is a display artifact: nothing repaints the second row of the LCD when the VFO mode returns to A over CAT (confirmed by Stan KC7XE, and known on the QRP Labs list). **You are not transmitting off frequency** — VFO B equals VFO A and split is off.

Do not use the `MU;` command to tidy it up. It does clear the display, but it also silently drops the radio's I/Q mode, and the panadapter's spectrum goes flat while the radio keeps streaming audio as though nothing had happened.

The QMX has no XIT, so this is done with **split**: you receive on VFO A and transmit on VFO B, which the Tab5 holds at your receive frequency plus the offset. Set it once and it follows you — a tap on the panadapter, a spot, a memory recall, a band change, the web page, and the radio's own tuning knob. It applies in **CW and CW-R only**, and leaving CW clears it. If you are running your own split, the Tab5 leaves it alone.

**Let me use the QMX menus** — hands the radio back. The QMX's own menu, and its Band Configuration terminal application, talk over the same USB serial port the Tab5 polls several times a second, so the two fight over it. Tap this before using the radio's own menus: the Tab5 stops sending anything, the spectrum freezes, and a blue bar across the top says so and gives the radio back when you tap it. Resuming re-checks IQ mode, which a trip through the radio's menu can switch off.

While the radio is released the Tab5 will not transmit — an armed FT8 burst and Antenna Tune are both refused rather than keying a radio you are holding.

**Radio menus** — the QMX's own menu system on the Tab5's screen, so you do not have to reach the radio at all. Unlike the button above it, this does **not** stop the panadapter: it uses the radio's *second* USB serial port, so CAT keeps running while you are in the menus. You have to switch that port on once, on the radio — System config -> GPS & Ser. ports -> USB serial ports -> 2. For a QMX+ with no control panel this is the only way into its menus. See [Radio Menus](#).

### 9.3. Operator Info

**Callsign** — Your amateur radio callsign (required for FT8/FT4 logging).

**Grid Square** — Your Maidenhead grid square (e.g., JO45; required for FT8/FT4 exchanges).

### 9.4. WiFi

Tap **WiFi setup** in the settings drawer to open the WiFi window.

**WiFi On/Off** — the WiFi icon button in the WiFi window (shown with a diagonal red slash when off). Toggling it takes effect immediately — off disconnects and stays off; on reconnects right away. Turning WiFi off is useful for field operation (no WiFi overhead, extended battery life).

**SSID** — Your WiFi network name. Tap **Scan** to list nearby networks and pick one (as of v1.3.6 this also works when your stored network is out of range — hotels, POTA sites — where it previously always reported "No networks found").

**Password** — Your WiFi password (pre-filled with your saved password; tap the eye icon to show/hide it). Tap **Save** to store it and connect.

Once connected, the settings show your **IP address** — use this to access the web UI from a browser.

**Static IP address / Subnet mask / Gateway / DNS server** — set in the web UI's Settings window under **WiFi** (there is no Tab5 equivalent for typing them — four addresses on glass is no kindness). **Leave the address empty for DHCP**, which is what every unit does by default, so nothing changes unless you fill it in. It takes effect the next time the Tab5 connects.

**Leave the mask, gateway and DNS blank unless you have a reason not to.** They are filled in from the address the Tab5 currently holds, so on an ordinary network you only have to type the address itself — and on anything that is not a plain 255.255.255.0 network, that is also the part most easily got wrong by hand.

**An address on the wrong network is refused.** The Tab5 compares what you type against the network it is on and will not accept an address that would put it somewhere else, telling you both. If you are deliberately setting a unit up for a different network, confirm when it asks and it will be stored as typed.

**Use DHCP** — a button in the Tab5's settings drawer, under **WiFi setup**. It appears only when a static address is configured. One tap arms it, a second clears the address and restarts on DHCP. This is the way back if a static address ever leaves the web page unreachable, and it needs nothing but the Tab5 itself. The bottom bar always shows the address the unit actually has.

## 9.5. Time Sync

**SNTP Server** — NTP pool (usually `pool.ntp.org`). Change only if you have a local NTP server.

**Setting the time by hand** — there is no control for this in the drawer, despite what earlier versions of this guide said. The clock is set from the FT8 screen: **Options -> Sync Time**. See [Setting the time by hand](#), which also covers setting the seconds — the part that matters with no WiFi and no GPS.

**FT8-Derived Sync** — Estimates the UTC offset from decoded FT8 signal timing. **Offline fallback only**: it is automatically ignored while SNTP or GPS is available (those are authoritative), and only nudges the clock when you're off-grid with no better source. See [Time Sync](#).

**QMX GPS** — Detected **automatically**, no setting to toggle. If your QMX (typically a QMX+) is GPS-disciplined, the Tab5 recognises it at connect by comparing the QMX's own second-tick against SNTP, and then phase-locks to the GPS second boundary (~10 ms) as an offline time source. On a non-GPS QMX nothing happens. The bottom-bar clock shows **UTC(GPS)** when a GPS-disciplined QMX is the active source. A clock the Tab5 has itself pushed into the radio is never accepted as evidence of GPS — see [Time Sync](#).

## 9.6. Display

**Flip 180°** — Invert the display for upside-down mounting or cable routing.

**QMX volume** — The radio's own AF gain, **in decibels: the same number the QMX shows on its own LCD**, not a percentage. Available in both Panadapter and FT8 modes. It reads the radio back each time you open the drawer, so if you turn the volume with the rig's own knob the slider follows instead of disagreeing with it. This exists mainly for QMX+ builds with no control panel, where there is no volume knob at all (Randy N4OPI's request). Nothing is sent to the radio until you move the slider, so switching on can never change your volume unexpectedly.

The slider runs 0–50 dB rather than the QMX's full 0–199 dB protocol range, so the useful part of the travel is not crammed into a couple of centimetres. 50 dB is Randy N4OPI's figure from a real radio with the antenna connected — an earlier "not loud enough" reading turned out to have been taken with the antenna off, where the missing loudness was band noise, not gain. If you turn the radio past 50 dB with its own knob the slider knob sits at the end of its travel, but the number still shows the radio's true dB — it has to agree with the LCD.

Two things worth knowing, both from Randy N4OPI's side-by-side check against a real QMX (the numbers do read identically): the QMX only shows the figure on its own LCD when you give its knob a click, and the Tab5 slider reads the radio when the drawer *opens* — so if you turn the rig's knob while the drawer is on screen, the slider catches up the next time you open it rather than tracking live.

**Display sleep** — Dropdown (Off / 1 / 2 / 5 / 10 / 30 min). After the chosen idle time the backlight turns off; FT8, the radio link, and the web UI keep running. Tap the screen to wake — the wake tap is swallowed, so it can't tune or press anything. A **two-finger double-tap** blanks the display immediately.

**Brightness** — Screen brightness (0–100%).

**Frequency format** — How a frequency is punctuated, everywhere it is shown: the readout in the top bar, the FT8/FT4 preset button and its band lists, the WSPR band picker, the frequency keypad and the scale under the spectrum.

The default, 14.074.000, is what the Tab5 has always shown and what the QMX shows on its own LCD. It is not a national convention — Icom, Yaesu and Kenwood group a frequency the same way, using the periods as visual anchors between MHz, kHz and Hz rather than as a decimal point. Matching the radio sitting next to the Tab5 is why it is the default.

The alternative, 14,074,000, is US written grammar: a comma every three digits (*Don N2VGU, who reads and writes frequencies that way and whose instruments offer the choice*). It changes as soon as you pick it — there is nothing to restart.

**Spectrum Mode** —

- **Normal** — absolute dBm scale
- **Flat** — relative to per-bin noise floor (signals pop above baseline)

## 9.7. Battery Care

**Charge Limit** — Optionally stop charging once the battery reaches a set percentage (default **80%**), to reduce long-term wear on the pack. Enable it and choose the target in the settings drawer; charging restarts automatically if the level later falls well below the target (5% hysteresis). Leave it off to always charge to 100%.

**Accurate charge reading while charging** — the displayed battery percentage (and the charge-limit trigger) now compensate for the voltage rise that occurs while charging current is flowing. Previously this made the reading jump around while plugged in, and made the charge limit either stick just short of the target or oscillate; both are fixed.

**"(limit)" on the battery reading** (v1.9.4) — once the cap trips, the battery text on both the Tab5 and the web UI grows a `(limit)` suffix. Without it, "capped on purpose at 80%" and "not charging for some other reason" looked identical.

## 9.8. Waterfall Controls

**Black Level (dB)** — How far above noise floor to show as black (default 9 dB). Lower = more colour detail.

**Contrast (dB)** — Span of the colour ramp (default 45 dB). Lower = more contrast, higher = more gradation.

**FFT Window** —

- **Blackman-Harris** (default) — best frequency resolution
- **Hann** — smoother peaks
- **Nuttall** — sharpest edges

**Waterfall scroll speed** — 1× to 4× (default 1×). How many rows the waterfall advances per render, independent of the spectrum and S-meter update rate, which stay unchanged either way.

**Spur suppression** — **withdrawn in v1.8.9**. The control is no longer in the drawer.

At some dial frequencies the QMX puts a comb of evenly spaced artifacts into the spectrum, and this setting was meant to remove them. It only ever worked at zoom ×1: above that the display is drawn from a second, finer analysis that the suppression never reached, so turning it on or off made no difference at all — and zooming in is exactly what you do when you are looking at a spur.

It also matters less than the original measurements suggested. Those were taken with the antenna disconnected, where the strongest tooth stood nearly 40 dB above the noise. With a real antenna on the same radio it measures about 23 dB, because band noise rises and buries the weaker teeth.

Nothing is lost by its absence, and the work is kept for a future release.

Wherever something is being removed, the thin line under the frequency labels turns teal. You can always see what is being touched.

### **Note - The 25 Hz nudge is real**

Learning a frequency briefly moves the radio 25 Hz and puts it back. You may hear it on CW. It happens once per frequency, about two seconds after you stop tuning, and not at all on a frequency already learned. This is why the feature is off by default.

## **9.9. Panadapter & Zoom**

**Still spectrum** (*Radio & display, on by default*) — the spectrum and waterfall hold still and the VFO marker moves across them, so a signal stays where you last saw it while you tune towards it. Switch it off and the display re-centres on the dial at every step with the marker in the middle. Applies from **×2 zoom up**; at ×1 the view is already the whole 48 kHz the radio sends, so there is no room to hold it still. The full behaviour, including when the view re-frames, is in [Panadapter -> Still Spectrum](#).

**Tune snap** (*Advanced*) — the grid a tap on the spectrum lands on, in SSB and the digital modes: **Off**, 250 Hz, 500 Hz or 1 kHz. The default is 500 Hz, which is what earlier versions always did.

Choose **Off** to tune exactly where you tap (asked for by Samuel W7STF). The grid exists because SSB stations sit on whole kilohertz and the ones that stray are usually at the half, so landing on a round number is normally what you want — but it is a preference, and now it is one you can set. CW keeps its own 10 Hz grid, AM and FM their 1 kHz, and tap-to-RIT overrides all of them, because an offset onto one caller's tone needs resolution rather than tidiness.

**Distance in Miles** — show distances in miles instead of kilometres, in the FT8 decode list **and on the WSPR page** (off by default). Until v1.12.0 the WSPR list and its Best DX panel always printed kilometres regardless of this setting, and the control was not reachable from the WSPR page at all.

**Band-plan region** — Sets which region's band plan drives the coloured CW/Digi/Phone strip along the bottom of the screen. **Auto** derives it from your grid square; you can also force Region 1/2/3.

**Band Presets** — Add or remove custom bands. Standard bands (160–10 m) are always available.

## 9.10. Bluetooth mouse and keyboard

A Bluetooth mouse is the one pointer that works **while the QMX is plugged in**. A USB mouse cannot: the radio occupies the Tab5's only USB host, and sharing it through a hub does not work on this hardware — both devices end up disabled. A Bluetooth mouse never touches that port, so the radio keeps its connection.

For anyone operating with cold or unsteady hands, that is the point: every menu, button and drawer control becomes a click instead of a precise tap on glass.

### Warning - The mouse must be Bluetooth 4.0 or later

Only **Bluetooth Low Energy** mice work. The Tab5 gets its Bluetooth from a co-processor that has no Bluetooth Classic radio in it at all, so an older Classic mouse cannot be made to work by any firmware change.

Most mice sold since about 2014 are Low Energy. Look for **Bluetooth 4.0** or later on the box. A dual-mode mouse works on its Low Energy channel.

**How to tell which problem you have.** A Classic mouse never appears to the Tab5 at all — the Bluetooth symbol keeps looking and never turns blue, because the Tab5 listens only for mice that announce themselves the Low Energy way. A mouse that *does* connect but moves the pointer oddly is a different matter, and that one is worth reporting.

### Setting it up

1. Tick **Bluetooth mouse -> Enable** in the settings drawer.
2. **Restart the Tab5.** Bluetooth can only start once the radio link to the wireless co-processor is up, so the switch takes effect on the next boot — the toast says so at the time.
3. Put the mouse into pairing mode and wait a few seconds. It connects on its own.

You only do this once. The pairing is stored, survives a reboot and a firmware update, and the mouse reconnects by itself from then on.

**The Bluetooth symbol in the bottom bar** sits just left of the WiFi indicator and has three states:

| Symbol      | Meaning                             |
|-------------|-------------------------------------|
| Dim grey    | Bluetooth is switched off           |
| Pale        | On and looking for a device         |
| <b>Blue</b> | A mouse or keyboard is ready to use |

**What works:** moving the pointer, left click, and the scroll wheel — the wheel scrolls whatever is under the pointer, so the decode list, the settings drawer and the manual all scroll.

#### **Note - The pointer disappears when the mouse sleeps**

A Bluetooth mouse switches itself off after about half a minute of not being moved, to save its battery. The pointer vanishes with it and comes back the instant you touch the mouse — reconnecting takes under a third of a second. This is the mouse looking after its own battery, not a fault.

### **A Bluetooth keyboard**

A Bluetooth keyboard works the same way and needs no separate setting — the same **Bluetooth -> Enable** switch covers both. Pair it and it types into every text field, exactly as the snap-on keyboard does: **Enter** presses Save in any window, **Esc** presses Cancel, **Tab** moves to the next field, and the arrow keys move the cursor.

**A keyboard and a mouse can be connected at the same time**, in either order.

**The on-screen keyboard steps aside** whenever a Bluetooth keyboard is connected. That is most of the reason to have one: the on-screen keyboard covers a large part of the display, and with a real keyboard you get that space back.

#### **Warning - US keyboard layout only for now**

A Bluetooth keyboard sends key *positions* rather than characters, and the Tab5 currently reads them through a US layout. Letters, digits, **Enter**, **Tab**, **Esc** and the arrow keys are the same on every layout, so typing a callsign, a grid, a frequency or a password works on any keyboard. Some punctuation on a non-US layout will produce a different character. National layouts are planned.

#### **Note - A sleeping keyboard costs you nothing**

Like the mouse, a Bluetooth keyboard switches itself off when idle. Pressing any key wakes it, and reconnecting takes a few seconds — but anything you type while it is waking up is held and delivered once the link is back, so you do not lose the first characters.

## 9.11. Firmware updates

### **Warning - The next update after v1.14.4 needs a USB-C cable, once**

v1.14.4 is the last release that installs over the air for a while. The one after it claims 2.81 MB of flash that no partition has ever used, which means rewriting the partition table — and an over-the-air update can only ever write the app, never the map of the flash. That is deliberate: it is what stops a failed download taking the layout with it.

So the next firmware arrives as a **flasher download** — the same USB-C data cable and the same `flash.bat` / `flash.command` you used the first time. One time, and everything after it is over the air again.

**Your settings and your log are kept.** Press **Enter** at the flash-type prompt. Do *not* press **E** — that erases the whole chip, including your QSO log and your LoTW private key, and it is not needed here.

The Tab5 will tell you when the time comes: the update window says so instead of offering a download, and it refuses to fetch an image it cannot install.

**Updating is one route, and you are always asked (v1.14.4)** — when a newer release appears, the version at the bottom of the screen changes to show it. Tap it, and a window opens with **Download now**. The download runs in the background, and when it finishes the same window offers **Restart now**.

Nothing is fetched and nothing is installed until you press something. The earlier "download updates in the background" option is gone: it had been suppressed by a memory guard for months and never actually ran, so removing it made the behaviour match what it had always been in practice.

△ Applying an update [Keeping It Up To Date](#).

---

## 9.12. Live Spots

Draws other stations on the spectrum at the frequency they are operating on. Full details, including what the colours mean, in [Live Spots](#).

**Live spots (POTA)** — On by default. Fetches Parks On The Air activations about once a minute and draws them over the spectrum. Needs WiFi. Switching it off leaves the spectrum completely clean.

**RBN spots (CW skimmers)** — **Off** by default, and deliberately so: RBN is a continuous global feed over a persistent connection, unlike POTA's occasional fetch. Adds stations the skimmer network is hearing right now, filtered to the band you are on. **Requires your callsign** to be set (the feed asks for one on connect — it identifies you, it is not a password).

**DX cluster spots (phone)** — **Off** by default, same reasoning: a second persistent connection. This is the source that carries **SSB**. Skimmers are machines, and no machine recognises a callsign spoken into a microphone, so phone activity is structurally invisible to RBN however long you leave it on. A cluster is people typing, so it carries voice contacts, and park and summit references written into the comment. Mode is worked out from the spotter's comment, or from your band plan when the comment does not say. Relayed skimmer spots are dropped, so the cluster cannot double what RBN is already showing.

Whatever you switch on, **one station is one entry**: the same callsign within 2 kHz is merged, an activation spot outranks a plain sighting, and a dropped duplicate folds back in as corroboration — drawn brighter, meaning a receiver copied them just now rather than someone having typed it an hour ago.

### 9.13. Spot Map

There is no setting here any more — the full-screen map of stations that have reported *your* signal runs its feeds from boot, always, and opens from the **SelfSpotter** button in the drawer (below **Need guidance?**), not a setting or a switch. Full details in [Spot Map](#), including what running the feeds all the time costs.

Wants **your grid square** (the map draws lines from it) and **your callsign** (it is what the feeds are asked about). QRZ callbook credentials are optional and only place RBN skimmers more precisely.

### 9.14. FT8 Settings

**FT8 On/Off** — Globally enable/disable FT8 mode.

**Field Day Mode** — ARRL Field Day mode (on/off, class, section).

**Simulation Mode** — Practice QSOs with six phantom stations — no QMX needed at all, radio never keyed (red breathing border on screen). See [FT8 Transmit](#).

**Fast pounce (early decode)** — On by default. Decodes surface ~1.8 s *before* the slot boundary (WSJT-X style), so a fresh CQ can be answered in the very next slot and mid-QSO replies land on the beat. Trade-off: the capture window closes early, so a station transmitting late in the slot can occasionally be missed. ⚠️ *Not yet A/B-verified on a live band — if your decodes-per-slot drop with it on, turn it off and please report your numbers.*

**Distance in miles** — Show the decode list's distance column in miles instead of kilometres.

**Report to PSK Reporter** — **On by default.** Uploads the stations you decode to [PSK Reporter](#), the same as WSJT-X, so you appear on the map as a monitoring station and other operators can see where they were heard.

What is sent, over the internet only and **never on the air**: your callsign and grid square, and for each station you decode their callsign, their grid (if their message contained one), the frequency, the signal report and the mode. Reports are batched and sent at most once every five minutes.

It does nothing at all until both your **callsign and grid** are set, and it is disabled outright in **Simulation Mode**, so practice contacts can never reach the public map. Uncheck this box to switch it off entirely.

The first report goes out 5–5½ minutes after switching on, so nothing appears immediately. To check it is working, look for **QMX Panadapter** under "Software in use" at [pskreporter.info/cgi-bin/pskstats.pl](https://pskreporter.info/cgi-bin/pskstats.pl).

**FT8 Filters** — Include/exclude stations, set auto-reply priority, enable robot mode, grey-listing (see [FT8 Receive](#) for details).

**Keyboard** — M5Stack Tab5 snap-on keyboard support (if connected). See [The snap-on keyboard](#) below for everything it can do.

## 9.15. WSPR

The **WSPR** group appears only while the WSPR page is up, and holds **Allow transmitting**, **Declared power**, **Transmit schedule**, **Band hopping** and **Publish spots to wsprnet**. They are described where they make sense — see [WSPR](#).

## 9.16. The snap-on keyboard

If the M5Stack Tab5 70-key snap-on keyboard is attached it is detected and needs no configuration. It does considerably more than fill in text fields.

**Snap it on any time** (v1.9.4) — attaching it after boot works too, found and ready to type within a couple of seconds; the same is true of taking it off and reattaching mid-session. Its two LEDs are deliberately dark once it's found - the keyboard works identically regardless of when it was attached, so there's nothing left for a light to usefully distinguish.

**Typing.** Any window with text fields takes the keyboard directly — WiFi setup, your callsign and grid, CQ messages, FT8 filters, memory channels. **Tab** moves between fields, **Enter** saves and **Escape** cancels.

### Getting around.

| Key                 | Does                                                                                         |
|---------------------|----------------------------------------------------------------------------------------------|
| Arrows              | Scroll the settings drawer and the manual. Press repeatedly and it scrolls further each time |
| Page Up / Page Down | Move a whole screen                                                                          |
| Enter               | The confirming button of whatever is open — Save, Transmit, Yes                              |
| Escape              | Closes whatever is in front of you, including the settings drawer and the memory page        |

**Shortcuts.** Hold **Ctrl** and press a letter:

|                               |                           |                              |                               |
|-------------------------------|---------------------------|------------------------------|-------------------------------|
| <b>Ctrl+R</b> Radio menus     | <b>Ctrl+M</b> User manual | <b>Ctrl+H</b> Need guidance? | <b>Ctrl+L</b> QSO log         |
| <b>Ctrl+K</b> Memory channels | <b>Ctrl+P</b> Panadapter  | <b>Ctrl+F</b> FT8            | <b>Ctrl+S</b> Settings drawer |
| <b>Ctrl+D</b> Display off     |                           |                              |                               |

Any key wakes the display again afterwards.

**Changing them.** The web page has a shortcuts editor — **Miscellaneous ▶ Keyboard shortcuts**. There are 25 actions to choose from, including zoom, brightness, releasing the radio to its own front panel, and every setup window. **Alt** is left completely unused so you can put your own bindings there without disturbing anything. See [The web interface](#).

#### **Note - Nothing that transmits can be given a shortcut**

Deliberately. A button you deliberately press is one thing; a two-key combination that a slipped finger can produce is another. Calling CQ, transmitting and tuning stay where you can see them.

This keyboard has no Shift and no Fn key — **Sym** and **Aa** are handled inside the keyboard itself, so **Ctrl** and **Alt** are what shortcuts can use.

## **9.17. Audio & DSP**

**IQ Balance** — Adaptive I/Q phase correction (usually on). Suppresses mirror-image signals.

## **9.18. Diagnostic Logging**

The diagnostic log is **always on** — there is nothing to enable. All firmware log output is captured to a 5 MB memory ring, with a rolling copy persisted to internal flash (survives a reboot or power-off) and, if a microSD card is inserted, mirrored to the card as well (see [microSD Auto-Archive](#) for when the card copy is written — the flash copy is always complete). Download via:

- Web UI: open the **Files** menu in the bottom bar and click **Diagnostic download** ↓ (downloads both the live session log and the flash-persisted copy from before the last reboot)
- microSD card: `/qmx-panadapter/qmx-log.txt`
- USB serial: `tools/capture_serial_log.ps1`

Useful for troubleshooting rare issues.

## 9.19. microSD Auto-Archive — Station Backup

Insert a microSD card (FAT32 or exFAT, any size — a plain 32 GB FAT32 card is ideal) and it automatically mirrors your whole station to `/qmx-panadapter/` on the card. It's a **grab-and-go backup**: pull the card into a PC (or another Tab5) to back up or move your setup — no computer needed in the field.

| File                                                      | Contents                                                                            |
|-----------------------------------------------------------|-------------------------------------------------------------------------------------|
| <code>qso.adi</code>                                      | ADIF QSO log — after each new entry with WiFi off, otherwise at the next start-up   |
| <code>qso.prev.adi</code>                                 | The QSO log as it was just before it last got <b>smaller</b> — see below            |
| <code>qmx-config.txt</code>                               | All settings + memory channels, as INI text (restore via <b>Config</b> upload)      |
| <code>lotw_cert.b64</code> ,<br><code>lotw_key.b64</code> | Your LoTW signing certificate + private key, so a restored device can sign for LoTW |
| <code>qmx-log.txt (+.1)</code>                            | Diagnostic log, rolling (rotated at 5 MB)                                           |
| <code>README.txt</code>                                   | A plain-text description of every file, written on each mount                       |

**After inserting the SD card your Tab5 needs a restart.** The Tab5 can only claim the card during a short window early in boot, so a card pushed in while it is running is not used until you restart.

### Benefits of a microSD card

The Tab5 works perfectly well without one. With a card in, you also get:

- **A full diagnostic history instead of the last few minutes.** Without a card, the log that survives a restart is held in a small area of internal flash and is overwritten roughly every 11 minutes of busy operating. On the card it is kept whole — so if something goes wrong overnight, or an hour ago, the evidence is still there when you come to report it.
- **A grab-and-go station backup.** Your QSO log, every setting, your WiFi details and your LoTW certificate and key, mirrored automatically. Move the card to another Tab5 and your station comes with it, with no computer involved.
- **A safety net for the QSO log.** The copy from just before the log last got *smaller* is kept beside it as `qso.prev.adi`, so a deletion you only notice two restarts later is still recoverable.

- **Somewhere to put things.** Browse, download, upload and delete everything on the card from any computer at `http://qmx.local/files` — without pulling it out.

A plain 32 GB FAT32 card is ideal. There is no benefit to a fast or expensive one: the Tab5 writes a few kilobytes a minute.

**After inserting the SD card your Tab5 needs a restart.**

### When the mirror runs

The microSD card and the WiFi co-processor share a bus on this hardware and cannot both use it reliably. Rather than fail at an unpredictable moment, the Tab5 picks the behaviour that works:

|                                | What happens                                                                                                                                                    | SD dot        |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|
| <b>WiFi off</b><br>(POTA/SOTA) | Continuous mirroring the whole time the card is in                                                                                                              | <b>Green</b>  |
| <b>WiFi on</b>                 | One complete backup within a few seconds of switching on, then file mirroring stops — but the diagnostic log and the CW transcript keep going, every 30 seconds | <b>Yellow</b> |

Either way your QSO log, config, and LoTW certificate and key are backed up. With WiFi on, QSOs made later in that session reach the card at the **next start-up** — so if you have been operating with WiFi up and want them on the card now, restart the Tab5.

If no card is inserted the dot is absent, which is not an error.

**While a browser is watching the spectrum, those 30-second writes wait.** The card and the WiFi co-processor share a bus, and writing the card holds the spectrum stream for several seconds — long enough to look like the web page has frozen. The writes go through regardless after three minutes, so a crash still reaches the card; close the browser tab if you want the card fully current sooner.

 **The card holds credentials.** A full backup that can *restore* a station necessarily includes secrets: `qmx-config.txt` stores your WiFi password and QRZ/eQSL logins in clear text, and `lotw_key.b64` is your LoTW **private key**. Keep the card as physically secure as a house key. (The on-card `README.txt` repeats this warning.)

The diagnostic log is always-on regardless of whether an SD card is present. If no card is inserted, the log still persists to internal flash (see [Diagnostic Logging](#) above) and survives a power-off.

## Restoring the log from the card

The card copy used to be one-way: the Tab5 wrote `qso.adi` to it and could never read it back, so a log lost to an erase-and-reinstall needed a computer, a browser, and knowing the file was on the card at all. It now restores from the device itself.

- **On the Tab5:** open the log window (**ADIF Log**) and press **Restore from SD**.
- **In the browser:** **QSO Logs ▲** -> **↳ Restore from SD card**.

Both merge: contacts already in the log are skipped, nothing is duplicated, and nothing already logged is lost — so it is safe to press twice. You are told what happened, including how many were already there and how many could not be read.

`qso.prev.adi` — **the copy from before**. The card mirrors the *present*, so a QSO deleted before a restart is gone from the card at the next start-up too. Whenever the log about to be written is **smaller** than the one already on the card, the older copy is kept as `qso.prev.adi` first. Normal logging grows the file and never disturbs it, so it holds the last larger version for as long as it takes you to notice.

To use it, copy `qso.prev.adi` off the card (**Files ▲** -> **SD Files** in the browser, or a card reader) and restore it with **ADIF restore ↑**.

## 9.20. Activation (POTA / SOTA)

When you are activating a park or a summit, every contact you make has to be logged as belonging to **that reference** — it is what POTA and SOTA read to credit the activation, for you and for the people who worked you.

Open **Activation (POTA/SOTA)** in the settings drawer, pick the scheme, type the reference, and tap **Start activation**. From then on every logged QSO carries it automatically. There is nothing to remember per contact.

The screen shows your **contact count against the threshold** — ten for POTA, four for SOTA — and turns green when you reach it. That number is read from the log itself, so it survives a reboot and can never disagree with what was actually written.

**Stopping matters as much as starting.** While a session is running the main button is a red **Stop activation**, and the drawer button itself shows the live reference rather than a generic label. The failure that actually happens is driving home with it still switched on, quietly stamping every later contact with a park you have left.

The session persists across a restart on purpose — a battery change in the field should not lose it — but it is deliberately **not** included in a config backup, so restoring an old backup can never re-activate a park you are nowhere near.

**Chasing** works without any setup: if you work a station the panadapter has seen spotted at a park or summit, that reference is written into your log entry automatically.

**Uploading just one activation:** the web UI's ADIF download can be limited to a single reference, so you get that park's log rather than your entire file.

---

## 9.21. SWR protection

While transmitting, the QMX reports its SWR back over the control link. If the reading reaches the limit you set here the transmitter is **latched off** — nothing will transmit again until you clear it by tapping the red warning on the FT8 screen.

Choose **Off**, **2.0:1**, **2.5:1**, **3.0:1** or **4.0:1**. The default is **3.0:1**.

**In FT8 the burst is cut short;** the SWR is sampled part-way through and the transmission stops there. **In FT4 the check happens after the burst**, so the one burst completes and every later one is blocked. That is not an oversight: FT4 symbols are 48 ms and a control-link query takes about 50 ms, so asking mid-burst would disturb the transmission it is trying to protect. A reading is only acted on if there is real power behind it — the radio can report a meaningless ratio when the amplifier is not actually loaded. That is high enough not to trip on a merely mediocre match, and low enough to stop a burst going into a disconnected antenna, a wrong-band antenna or a damaged feedline — which is how this usually goes wrong in the field. An FT8 transmission is nearly thirteen seconds of continuous key-down, so there is real time to save.

The latch is deliberately sticky. A bad antenna does not repair itself, and resuming automatically would simply transmit into the same fault on the next slot.

### Note - Set it to Off if you use a tuner

With a matched antenna the protection never fires, but if you are deliberately loading something unusual you may prefer no interference at all.

---

## 9.22. Who has heard me (last 24 h)

This asks PSK Reporter which receivers have copied **your** callsign recently. It is the reverse of the reports the panadapter *sends*, and the two are separate settings — you can have either without the other.

It answers a question no amount of local processing can: **am I actually getting out?** The valuable case is the mismatch. Stations you can hear that cannot hear you is a transmit-side problem — antenna, power, a bad connector — and from the receiving side alone it looks exactly like a dead band.

**This one lives in the browser, not on the Tab5.** There is no drawer control for it — the answer is a list of stations with distances and bearings, which wants a screen you are already sitting in front of. In the web UI open **Settings -> Spots & reporting** and tick **Who has heard me (last 24 h)**, then **Miscellaneous -> Who has heard me (24 h)** for the list: receiver, country, distance, bearing and the signal report they gave you, sorted by distance.

It is read-only and asks at most once every five minutes, which is the rate PSK Reporter requests.

### **Note - An empty list is the normal answer if you have not transmitted**

Nobody can report hearing you until you have been on the air. Give it a few minutes after a CQ run.

## 9.23. ADIF & Logging

**ADIF Log** — View the QSO log on-device. The viewer shows a proper column table:

| Column  | Content                                                                           |
|---------|-----------------------------------------------------------------------------------|
| Call    | Callsign                                                                          |
| Grid    | Their Maidenhead grid square, when they sent one                                  |
| Country | DXCC entity (looked up from the callsign prefix)                                  |
| Mode    | FT8 or FT4                                                                        |
| Band    | Band (20m, 40m, ...)                                                              |
| Date    | UTC date                                                                          |
| Time    | UTC time                                                                          |
| Sent    | Your signal report (SNR)                                                          |
| Rcvd    | Their signal report (SNR)                                                         |
| Ref     | The park or summit <i>they</i> were activating, when the contact came from a spot |

A sticky header row stays pinned while you scroll. Even-numbered rows are lightly shaded so long logs stay easy to scan.

**Search** — the field under the title filters the list as you type. It matches **callsign, country, mode, band, date, grid and the park/summit reference**, on any part of a word, and several words must all match: `ha3 20m` finds HA3-prefix contacts on 20 m only. Country is searchable even though the ADIF file does not store it — it comes from the same prefix lookup the Country column shows, so the two can never disagree.

If nothing matches, the list says so in as many words: *"Nothing matches X — so this one has not been worked."* That is the question the search exists to answer. The decode list already greys out a station you have worked, but only while that station happens to be on the air; this asks the same question whenever you like (*Gyula HA3HZ*).

Tapping the field brings up the keyboard, and the window moves up and shortens so the matches stay visible while you type. Clear the field to see the whole log again; the search also clears itself each time you open the window.

**Today/All filter** — the viewer opens on **Today** (falling back to All when nothing was logged today). The toggle button shows the view you *switch to* by pressing it; the title shows the current view with counts.

**POTA activation counter** — in the Today view the title reads "Today: N (M total)" and turns **green** once today reaches 10 QSOs — a valid POTA activation.

**Delete a single record** — **long-press** a QSO row: the row highlights red and list scrolling locks. Drag up/down to move the highlight, then release — a Delete/Cancel bar appears at the bottom. **Delete** removes just that one record (useful for duplicates).

**Restore from SD** — the middle button reads the QSO log back off the microSD card. See [Restoring the log from the card](#) below; there is nothing to choose, and contacts already logged are skipped, so pressing it twice does nothing.

**Delete all** — the red-bordered button at the bottom-left erases the **whole** log. Two-tap confirm: the first tap arms it (the label changes to "ALL N?"), a second tap within 5 seconds deletes; wait and it disarms itself. There is no undo — download the ADIF from the web UI first if you want a copy. Handy before a POTA activation: start with an empty log and the ADIF at the end is exactly the file you submit.

Anything this window does — a restore, a delete — reports back in a small panel with an **OK** button rather than a message that fades on its own. The result of something you asked for is worth reading, and dismissing it is how you say you did.

Use the web UI to download the full ADIF file for import into WSJT-X, EQSL, or any other logging software — or view and edit it in the browser (**QSO Logs -> View / edit log**).

**Exclude Worked Before** — When FT8 filtering, skip stations you've already logged QSOs with (requires you to import your own prior ADIF log first).

## 9.24. Config Import/Export

**Config Download** — Export all settings + memory channels + ADIF log as a text file (INI format).

**Config Upload** — Restore settings from a backup file (settings only; memory channels merge).

Use this to:

- Back up your settings before a factory reset
- Transfer settings to another Tab5
- Recover from accidental changes

## 9.25. Resets — in the browser, not the drawer

**These two live in the browser, not in the drawer** — a reset you can trigger by mistake on a touchscreen in the field is a worse idea than one that needs a computer. Both are in the web UI's **Miscellaneous ▲** menu.

**Reset settings** — Erases the stored settings and memory channels, returning everything to defaults, and reboots. Use if something is stuck in a state you cannot get out of. Take a **Config ↓** backup first and you can restore it in seconds.

**Reset WiFi** — Erases the WiFi credentials and the stored radio/link state. This is the one for a WiFi setup that will not come up no matter what you enter.

**Neither of them touches your QSO log.** The ADIF log lives in a separate area of flash that is deliberately left alone, so a reset cannot cost you contacts — and neither can a firmware update, which is why a normal flash keeps your log. The only things that erase the log are the **Delete all** button in the ADIF viewer, the same in the web log viewer, and a **clean/erase flash** from the flasher.

---

**Next:** Troubleshoot an issue via [Troubleshooting](#) or explore the [API](#).

The settings drawer, opened by swiping in from the right edge. It is grouped — **Station, Device, Radio, Network, Display, FT8, WSPR, Spectrum** — with a **BASIC / ADVANCED** button that keeps the list short until you need it to be long. Which sections sit in which view is yours to set, from the web UI's **Settings → Tab5 config**. Changes save themselves; there is no OK button to hunt for.

 Every control, group by group: [tab5.lav.dk/guide/settings](http://tab5.lav.dk/guide/settings)

---

## 10. WSPR

**WSPR** (Weak Signal Propagation Reporter, pronounced "whisper") answers one question: *where does my signal actually go?* You transmit a very short, very slow beacon carrying only your callsign, grid and power — and stations all over the world that hear it report the fact. Over a few hours you get a map of what your antenna and your band are really doing, at power levels where nothing else would be heard at all.

It is not a contact mode. Nobody replies, there is no exchange, and nothing goes in your log. That is the point: it measures propagation instead of working people.

Swipe → from the left edge to cycle **Panadapter** -> **FT8/FT4** -> **WSPR** and back.

---

## 10.1. The two-minute rhythm

Everything in WSPR is built on a **two-minute cycle**, aligned to UTC. A transmission starts a second or two after each even minute and lasts about 110 seconds, so one cycle carries exactly one beacon.

That slow rhythm is why the page looks calm compared with the FT8 screen. There is no countdown urging you on and no QSO furniture, because there is nothing to answer. The countdown at the top left simply tells you where you are in the current window.

**Your clock has to be right.** WSPR's decoder searches only a narrow slice of time either side of the cycle boundary, so a clock that is out by more than a couple of seconds will hear nothing and be heard by nobody. The Tab5 keeps itself right from SNTP over WiFi, from the QMX's own clock, or from its internal RTC — see [Time Sync](#). If you are running with no network and no GPS, check the clock before you trust an empty screen.

---

## 10.2. Reading the page

The left pane is a log, not a live list of who is on frequency. Spots stay where they are and new cycles are added — an opening band looks different from a closing one only over time, so the page is arranged to let you see that.

| Column         | Meaning                                                                                                                                                                                                                                                                                                                                                                      |
|----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>S</b>       | The letter this station is marked with on the waterfall for that cycle — see <a href="#">Which trace is which</a> below. Blank once the cycle it belongs to has scrolled out of the picture                                                                                                                                                                                  |
| <b>UTC</b>     | The cycle this spot came from                                                                                                                                                                                                                                                                                                                                                |
| <b>CALL</b>    | The station heard                                                                                                                                                                                                                                                                                                                                                            |
| <b>GRID</b>    | Their Maidenhead locator, as transmitted                                                                                                                                                                                                                                                                                                                                     |
| <b>COUNTRY</b> | Country from the callsign prefix, spelled out where it fits and shortened where it does not - never a 3-letter code                                                                                                                                                                                                                                                          |
| <b>BND</b>     | The band it was heard on, in metres. Blank for spots recorded before v1.10.5, and worth having the moment band hopping is on                                                                                                                                                                                                                                                 |
| <b>PWR</b>     | The power <b>they declared</b> , not a measurement                                                                                                                                                                                                                                                                                                                           |
| <b>SNR</b>     | Signal-to-noise, in the WSPR convention (a 2500 Hz reference — figures around -25 dB are entirely normal and perfectly decodable)                                                                                                                                                                                                                                            |
| <b>TONE</b>    | Where in the 200 Hz sub-band they were heard                                                                                                                                                                                                                                                                                                                                 |
| <b>DR</b>      | Drift: how far the sender moved during the transmission. A stable, oven- or GPS-referenced transmitter reads +0; a crystal warming through the burst reads +1 or -2. Whole Hz, which is what wsprnet publishes, and a coarser measurement than TONE beside it - it is the difference between two half-window estimates, so read a trend across several spots rather than one |
| <b>DT</b>      | How far into the two-minute cycle that transmission actually started, in seconds. <b>Nominal is +1.0</b> , because a WSPR transmission begins one second into its even minute — so a value far from that is the other station's clock rather than anything at your end                                                                                                       |
| <b>KM</b>      | Great-circle distance from your grid. The heading reads <b>MI</b> if you have chosen miles — see <a href="#">Settings</a> . A leading ~ means the distance came from the station's country rather than its grid                                                                                                                                                              |

Below the list:

- **DX** — the furthest station of the session, which is usually the number you actually want.
- **WSPRNET** — whether spots are being published, and how many can be. "**N of M publishable**" is the publication gate: a station is only sent to wsprnet once it has been heard **more than once**, so N is how many of the M calls heard so far are eligible. This is also why a site like wspr.rocks can show fewer unique calls than this page reports hearing — it only ever received the publishable ones.
- **Flush** — empties the decode list. It asks first, because the list is also the upload queue: anything not yet sent to wsprnet goes with it, and the publishable count resets.

#### **Tip - With a mouse, point at a trace to see whose it is**

Hovering a trace on the waterfall names the station, its tone and its signal report, beside the pointer. It matches within about half a WSPR signal's width, so you have to be on the trace rather than near it. There is no hover on a touchscreen, so this adds to the list rather than replacing it — everything it shows is in the table underneath.

The right pane shows the captured 200 Hz window for the cycle just decoded. WSPR's whole sub-band is narrower than a single FT8 signal, so this is a very close-up view: individual beacons appear as near-horizontal lines, and a sloping line is a drifting transmitter.

**On a cycle you transmit, the waterfall does not advance** — the receiver is stood down for the whole two minutes, so there is nothing to draw. Rather than leave the previous cycle's picture sitting there looking frozen, the display lays down its cycle-boundary marker and keeps the last received image below it, so you can still see what was there before you transmitted. The status line reads **transmitting** throughout.

**The panadapter spectrum is not available while WSPR runs.** The receiver takes the IQ stream for the whole cycle, so there is nothing left to draw a live spectrum from. This is expected, not a fault.

**Which trace is which**

Each time a cycle finishes, the traces the decoder examined are lettered on the waterfall — **A, B, C... from left to right by tone** — and the cycle's UTC time is printed at the left end of the row. The same letter appears in the list's **S** column, so a line of text and a mark on the carpet are the same station, and you can tell at a glance which of five traces produced the report you are reading.

The letters describe the cycle **below** the boundary line they sit under, since that is the cycle that just finished. They scroll down the carpet with it and are gone once it leaves the picture, which is why an older row's **S** column is blank.

- **A ? is a trace the decoder tried and could not read.** That is worth seeing: it is the difference between "nothing was there" and "something was there and was too weak", which is the whole question when you are judging an antenna or a band. It usually means a signal a few dB below the decode threshold, but a birdie or a carrier sitting in the sub-band will also collect one.
  - **Not everything gets a mark.** The candidate finder always returns a full quota of possibilities, most of which are its own noise floor rather than signals, so a ? is only drawn for a candidate well above the middle of that cycle's crop. Expect a handful, not a row of punctuation.
  - **A mark that cannot be placed honestly is left out.** Where several traces are too close together to letter separately, decoded stations are placed first and the rest are dropped rather than nudged aside — a marker pointing at the wrong trace is worse than no marker.
  - The letter is drawn a couple of Hz above the tone in the table. A WSPR transmission is four tones about 4.4 Hz wide and the reported frequency is the lowest of them, so the mark sits on the middle of the trace rather than its left-hand edge.
-

**Changing band** — tap the button at the top of the left pane and a list drops below it. Touch a line and it lights up; if it is the wrong one, keep your finger down and drag until you are on the one you want, then lift to choose it. Releasing outside the list chooses nothing. The band you are on is named in amber.

#### **Warning - Use *this* button, not the top bar**

On the WSPR page the top bar's **Band**, **Mode**, **BW** and **Zoom** are greyed out and do nothing: they belong to the panadapter's idea of the radio, while this page owns the dial. Only **Freq** stays live, so a beacon found off the standard dial frequency can still be chased by typing it in.

On **v1.12.0 only**, the top bar's Band control overlapped this panel and took the touch — picking a band from it wrote an FT8 frequency to the radio while WSPR carried on capturing and labelling its spots with the band it thought it was on. If you used the WSPR page on that release, check which band your radio is actually on.

### **10.3. Settings**

All of WSPR's settings live in the **settings drawer** (swipe ← from the right edge) under **WSPR**, and appear only while the WSPR page is up. The page itself keeps just one control — the **TX** button — because that is the only one you reach while a session is running.

#### **Transmitting is the TX button, and nothing else**

There is no separate "allow transmitting" setting. The **TX** button on the page is the only control, so there is nothing that can disagree with it.

**It is off every time you open the WSPR page**, whatever you did last session. A beacon that resumes on its own because of how you left it a week ago is not a decision you made, so the page always starts as a pure receiver — which is a perfectly good way to use WSPR — and transmitting is something you switch on deliberately each time.

**Your callsign and grid must be set**, in **Station -> Callsign & Grid square**. Without them there is no transmission at all — the same rule FT8 follows. WSPR sends your callsign to every station that hears you and publishes it to a public database, so it uses the identity you entered and nothing else.

## Calibrate Power

Before Declared power can offer anything real, the current band needs calibrating.

**Calibrate Power** sweeps the QMX's *Max. PA voltage* on a **dummy load** — not the antenna — and records the real RF output at each step with the radio's own PC; readback. The result is saved for that band and used from then on.

(v1.14.4) The sweep **stops at your own Max. PA voltage**, and the window shows that figure before you start — so a 9 V QMX, or one you have deliberately limited, is never driven past the setting you chose. It also **stops early once the measured power stops rising**, which is what happens above your supply voltage: on an 8 V supply every step above ~8 V would otherwise re-measure the same watts for minutes of pointless key-down. Bruce N9JCV found both.

Because the sweep can end early, a shorter results table is normal rather than a failure — the window says which of the two limits ended it.

You reach it two ways: the "**Calibrate this band**" button that appears in place of Declared power (or Output power, on other modes) whenever the current band has no data yet, or "**Recalibrate this band**" in the same place once it does — for redoing a band after a change to your antenna or feedline.

## Declared power

This is **a claim, not a measurement** — every station that hears you publishes it worldwide, where other operators use it to reason about propagation. But once the band is calibrated, the dropdown only offers the standard WSPR dBm steps your radio actually reaches, and each one is labelled with the **real measured wattage**, not the textbook figure the step's name implies. Picking "33 dBm" no longer means finding out afterwards that the radio actually did something else.

**This is also where you protect the finals now.** WSPR transmits for about **110 seconds out of every 120** — nothing else this radio does comes close, and QRP Labs warn about exactly this kind of sustained duty cycle in the QMX manual. There is no separate switch for it any more: picking a low declared level (a few hundred milliwatts is plenty to be heard) keeps the finals cool for the length of a beacon run, the same way choosing any other setting on this dropdown does. Anything above 1 W gets a plain warning label, rather than a guard acting on your behalf underneath you.

**During each transmission the Tab5 asks the radio what it actually put out**, and shows the answer under the dropdown — "*radio measured 1.6 W last burst = 32 dBm*" — so you can see whether a burst matched what you declared.

**Switching transmit off stops a burst that is already on the air.** The **TX** button keys the radio down at once rather than waiting for the two-minute cycle to end.

## Output power

A separate slider, filed next to Calibrate Power, sets the radio's output for every mode **other** than WSPR — FT8, CW, SSB, and so on. It shares the same per-band calibration but is a genuinely different control: WSPR's Declared power always owns the radio while WSPR is running, so the Output power slider doesn't appear on this page at all. Leaving WSPR hands control back to it immediately.

## Running WSPR from a lower supply voltage

**A low declared power reduces the heat in the finals. It does not remove it from the radio.** The QMX limits PA voltage with a pass transistor, so the difference between your supply and the PA voltage in force is dropped inside the radio as heat instead — measured on a bench QMX, holding the PA at 6 V against a 12 V supply cut the finals' own heat by 76% but total heat by only 18%. That trade is worth making — the PA transistors are the fragile, hard-to-replace part — but it is not the whole answer.

**If you intend to beacon on WSPR for hours, feed the QMX from a lower supply.** The QMX accepts **6.0 to 12.0 V**, and running it at around 9 V means less voltage to throw away as heat anywhere in the radio. This is the one thing that helps which no firmware setting can do for you.

## Transmit schedule (*changed in v1.14.5*)

Two numbers describe one repeating group: **Transmit cycles**, then **Receive cycles**.

Set transmit to 2 and receive to 8, and the beacon transmits for two cycles, listens for eight, and repeats for ever. The period is simply the two added together — ten cycles, twenty minutes — and the Tab5 spells it out under the two controls as you change them:

Transmit 2, then listen 8 — repeating every 20 min. Transmitting 20% of the time.

| Transmit | Receive | Pattern, repeating | Period |
|----------|---------|--------------------|--------|
| 1        | 4       | Tx Rx Rx Rx Rx     | 10 min |
| 1        | 9       | Tx Rx ×9           | 20 min |
| 2        | 8       | Tx Tx Rx ×8        | 20 min |
| 2        | 3       | Tx Tx Rx Rx Rx     | 10 min |

Setting transmit to **Receive only** never keys the radio, and greys out the receive count — with no transmission there is no group to space out.

**Why two numbers and not a duty cycle.** This used to be "1 in N" plus a separate "bursts per transmission", and that pair had no agreed meaning. "1 in 5" plainly means one cycle in five, and with a single burst that is exactly what it did — but ask for two bursts and the phrase stops saying anything. Does the group grow into the listening time, or is the listening time kept? Two people can read it two ways, and did. Two counts cannot be read two ways.

**Your existing setting is carried over exactly.** A Tab5 upgrading from v1.14.4 or earlier keeps the schedule it was already running, cycle for cycle — the old "1 in 5" becomes 1 transmit and 4 receive, which is the same thing said plainly.

**Transmitting more means keying the finals more.** Two cycles in a row give a distant receiver a second chance at you when the first falls in a fade, which is why the QMX's own beacon offers it — and it doubles your share of key-down time. Pick the declared power to match; see **Declared power** above.

## Band hopping

Tap **Choose bands...** and tick the bands you want. **Ticking two or more turns hopping on**; leaving one ticked keeps you on that band. There is no separate on/off switch, because the list of bands already says what you want.

Only the bands your radio can actually reach are offered. A QMX is built with a fixed set of filters, so the list is asked of the radio rather than assumed — the bench QMX offers 60/40/30/20/17/15 while a QMX+ covers 160–6 m.

Hopping changes band **between** cycles, never during one, and the waterfall's noise floor is reset on each hop so a quiet band is not painted against the last one's noise.

## Publish spots to wsprnet

Off by default. When on, the stations you hear are uploaded to **wspnnet.org**, where they join the public database. This is how WSPR is useful to anyone other than you: your receiver becomes one of the reporting stations that lets other operators see where *their* signals went.

It needs WiFi and your callsign and grid.

---

## 10.4. Transmitting

With a callsign and grid set and a transmit count other than **Receive only**, the **TX** button on the page arms the station. Which cycles actually transmit is decided by the transmit schedule, and the button shows what is happening.

**The countdown on the button is the time until a real transmission.** The schedule is worked out in advance, so **TX ON next 6:14** means a burst is coming in six minutes and fourteen seconds — not that a cycle boundary is due and might or might not be used.

A few things worth knowing before you leave it running:

- **Your radio is keyed for real**, for about 110 seconds at a time. Make sure it is connected to an antenna or a dummy load, and that the power it is producing matches what you declared.
  - **SWR protection still applies.** If the SWR limit in **Radio -> SWR protection** is exceeded, transmitting stops.
  - **The Tab5 wakes up on the page you left it on, but not transmitting.** It returns to the WSPR page after a power cycle and starts receiving; the **TX** button is off, so it will not resume beaconding on its own. Switch it on again when you are ready.
  - **Split stops it, and says so.** WSPR is transmitted on the dial frequency, and the spot you publish names that frequency. If your radio is in split it keys VFO B while still reporting VFO A, so every spot would name somewhere the signal never was. Before each transmission the Tab5 asks the radio, and if split is on it holds the burst and shows **TX held - radio is in SPLIT, clear VFO B**. It will not clear it for you: that is your setting, and on the QMX split cannot be cleared over the cable anyway — use the radio's own menu or power-cycle it.
  - **Simulation mode blocks every byte.** If you want to watch the mechanics without keying anything, turn on **FT8 Simulation Mode** in the drawer; it interlocks WSPR TX as well.
-

## 10.5. From the browser

The web UI mirrors whatever page the Tab5 is on. Switch it to WSPR with the **Switch to WSPR** link in the bottom bar, and the browser shows the same page the Tab5 does: a **MODE: WSPR** heading, the band selection, the **TX** button with its countdown, the finals-guard voltage, best DX, stations heard per cycle, the wsprnet publishing status — and the table of spots.

The table is shown only while the Tab5 is on the WSPR page, because that is the only time the receiver is running — on any other page it would be a frozen list that looked live.

Transmitting from the browser uses your stored callsign, grid and declared power. They cannot be overridden per request: what goes on the air is the identity you set on the device.

---

## 10.6. If nothing is decoded

WSPR is quiet by nature — an empty screen for one cycle means very little. Before assuming a fault:

- **Check the clock.** The bottom bar shows the time source. A clock more than a couple of seconds out will decode nothing.
- **Check the band and the hour.** WSPR follows propagation; 20 m at midnight will be emptier than 40 m.
- **Check the dial.** Each band has exactly one WSPR sub-band, and the picker only offers those — but if you tuned the radio by hand afterwards, you may not be on it.
- **Give it several cycles.** At two minutes each, four cycles is eight minutes. That is a normal amount of patience for this mode.

See also [Troubleshooting](#).

A propagation beacon rather than a contact mode: a very slow, very weak signal carrying only your callsign, grid and declared power, reported by stations worldwide. Swipe → from the left edge cycles **Panadapter** → **FT8/FT4** → **WSPR**. Receiving is the default and worth doing on its own; transmitting is opt-in.

**Calibrate Power** measures what your QMX actually does, on your antenna system, at every setting — instead of guessing from a rule of thumb. From the drawer (**Radio** → **Antenna Tune** → **Calibrate Power**, or "Calibrate this band" the first time you open Declared power / Output power on an uncalibrated band), it sweeps *Max. PA voltage* through 45 points on a **dummy load** and records the real RF output at each with the QMX's own **PC**; readback. Takes a few minutes per band; results are saved per band and used from then on.

**Declared power** (the WSPR drawer) then only offers the standard dBm steps your calibration actually reaches on the current band — no more picking "37 dBm" and transmitting something else entirely. Each step's wattage is the *real measured* figure, not the textbook one, so what you see is what goes out and what gets published to wsprnet with every spot. A WSPR transmission keys the radio for about **110 seconds out of every 120**, so this is also where you protect the finals now: pick a low declared level for long beacon runs, rather than relying on a fixed halving the firmware used to apply underneath you. Anything above 1 W gets a plain warning instead.

**Output power**, a separate slider filed with Calibrate Power, does the same job for every *other* mode (FT8, CW, SSB, ...) — it has nothing to do with WSPR's own declared level and doesn't appear on the WSPR page, since Declared power always owns the radio there.

 The full chapter: [tab5.lav.dk/guide/wspr](http://tab5.lav.dk/guide/wspr)

---

## 11. Radio menus

---

The QMX's own menu system, on the Tab5's screen — the same 80×24 terminal you would get from a laptop running PuTTY, without the laptop.

This exists because a QMX+ with no control panel has **no other way in**. If you built a headless radio to save weight and space, this is how you reach Configuration, Band config, System config and everything else.

It is equally useful on a radio that *does* have a panel: two lines of LCD and a rotary encoder is a slow way to move around a deep menu, and the Tab5 shows the whole thing at once.

---

### 11.1. First: give the radio a second serial port

The terminal runs on the QMX's **second** USB serial port, and that port is off by default. You only have to do this once — the setting survives a power cycle.

On the radio: **System config -> GPS & Ser. ports -> USB serial ports -> 2**

#### Note - Why a second port, and not the one already in use

The QMX manual is explicit that leaving a terminal session without choosing *Exit terminal* leaves the radio refusing CAT commands. On the port the panadapter is already using, that would take the whole display down with it.

On its own port it cannot. CAT frequency, mode and the S-meter were measured running normally for the entire length of a terminal session — the panadapter keeps working while you are in the menus.

If the port has not been enabled, the Tab5 tells you so rather than failing quietly — and it puts **the whole menu path on screen**, in both the Tab5 panel and the browser, laid out to be followed while you are looking at the radio. The person who needs that instruction is the one who never read this page, so it belongs where the failure happens rather than in a message that disappears. (*Michael KZ4LY*)

---

### 11.2. Opening it

=== "On the Tab5"

```
**Settings drawer -> Radio -> Radio menus**
```

The keys are along the top, all the same size: **\*\*▲ ▼ ◀ ▶\*\***, **\*\*Enter\*\***, **\*\*Back\*\***, **\*\*BS\*\***, the **\*\*keyboard\*\*** toggle, and **\*\*Close\*\***.

**\*\*With the snap-on keyboard attached you can skip all of that\*\*** and drive the radio's menus directly: arrows to move, Enter to select, digits to type into a numeric field, Backspace to delete, and **\*\*Esc** to leave the screen**\*\***. Typing a value is far quicker than the on-screen keys.

Or open it without touching the screen at all: **\*\*Ctrl+R\*\***.

=== "In the browser"

**\*\*Radio ▶ Radio menus\*\***

The on-screen buttons work, and so does your actual keyboard – arrow keys, Enter, Esc, and typing. For entering a value into a menu field, the keyboard is much the faster route.

The radio's menus **cascade**: opening a submenu draws a new box over the top of the one you came from, so you can see the path you took. The highlighted row is where you are.

---

### 11.3. Leaving it

Use **Close**.

The Tab5 walks the radio back out through its own *Exit terminal* item — it reads the screen to find it, so it still works however deep in the menus you were. That matters: simply dropping the connection is what leaves a QMX ignoring CAT.

Two things happen automatically so you cannot get stuck:

- If you close the browser tab, the session is closed for you.
- If nothing happens for **two minutes**, the Tab5 hands the radio back by itself. You will see "*session timed out — closed*". Open it again to carry on.

**You come back to the frequency and mode you left.** A trip through the radio's own menus can move the dial on its own — go into Hardware Tests -> Diagnostics to read the supply voltage, come out, and the radio is on 160 m whatever band you started on (*Randy N4OPI*). On closing, the Tab5 puts the frequency and mode back if they moved, along with re-enabling I/Q mode and re-reading the noise floor.

#### **Note - If you changed band on purpose**

That gets put back too — the Tab5 cannot tell a band you chose in Band Configuration from one the menus changed behind your back. Set the band again from the Tab5 afterwards.

### Tip - Where you land

A session opens on the **first** menu item, not on *Exit terminal* — even though *Exit terminal* is where the previous session left the highlight. That is deliberate: otherwise your first Enter would drop you straight back out.

## 11.4. Typing and editing a value

A **block cursor** shows where you are typing — in a field like one of the Messages, that is the difference between editing and guessing. (*Randy N4OPI*)

**BS deletes leftward.** Land on a value, backspace away the digits you don't want, and type the new ones — the cursor sits on the rightmost digit to begin with. In the browser both your Backspace and Delete keys do this.

### Note - There is an on-screen keyboard

Tap the **keyboard button** in the top row and a full QWERTY appears along the bottom. It types straight into whatever field the radio has open — there is no separate text box to fill in first. Tap the keyboard button on the keyboard itself (bottom left) to put it away again.

Useful on a Tab5 without the snap-on keyboard, which otherwise has no way to type a value at all. (*Randy N4OPI, Michael KZ4LY*)

### Tip - Band config tables: E and D change a setting, and the arrows do not move you

In the **band config** table the Enable/Disable entries accept either ◀ ▶ or the letters **E** and **D** — type them straight in from the on-screen keyboard. Because those fields use the arrows to change the *value*, the arrows will not move you to the next column while you are sitting on one: step onto a numeric column first, then move across.

That is the radio's own behaviour, not a Tab5 limitation, and it explains something that otherwise reads as the arrows being broken in tables. (*Stan Dye KC7XE.*)

### Tip - Longer values are backspace-and-retype, not arrow-adjust

Short values — one or two digits — change with ◀ ▶. Anything longer, and anything inside a table, does not: on those the arrows do nothing at all, and in a table they move between columns, which is the radio's own intended behaviour.

For those, use **BS** and type the value instead. Max. PA voltage, the band config columns, CAT Config -> Timeout, System config -> TCXO frequency and the Virtual U3S values all edit this way. (*Randy N4OPI worked this out from PuTTY and told us — it is how the radio has always behaved, not a Tab5 limitation.*)

## 11.5. What it does not do

- **It does not transmit.** Nothing here keys the radio.
- **It does not know what you changed.** If you alter something the panadapter displays — a filter, a band setting — the Tab5 finds out the same way it always does, from its next CAT poll.
- **It is the radio's interface, not ours.** What the menus contain, and what each item does, is documented in the QRP Labs QMX operating manual.

The QMX's own menu system, on the Tab5's screen, over the radio's **second** USB serial port — so CAT keeps running and the panadapter does not stop. Switch that port on once, on the radio: **System config** → **GPS & Ser. ports** → **USB serial ports** → **2**. For a QMX+ with no control panel this is the only way into its menus.

 The full chapter: [tab5.lav.dk/guide/radio-menus](http://tab5.lav.dk/guide/radio-menus)

## 12. Reference

### Gestures

| Gesture                           | Where                                      | Effect                                                      |
|-----------------------------------|--------------------------------------------|-------------------------------------------------------------|
| Tap                               | Spectrum / waterfall                       | Tune to tapped frequency (snapped)                          |
| Touch + drag (hold ~250 ms first) | Spectrum / waterfall                       | Cyan cursor snaps grid-to-grid; tunes on release            |
| Fast one-finger horizontal swipe  | Spectrum / waterfall, any zoom             | Pan/"stroll" the view; retunes to the new centre on release |
| Double-tap                        | Spectrum / waterfall                       | Reset zoom and pan to $\times 1.0$ / centred                |
| Pinch (two fingers)               | Spectrum / waterfall                       | Zoom $\times 1.0$ – $\times 24.0$                           |
| Two-finger drag                   | Spectrum / waterfall (zoomed)              | Pan the zoomed window                                       |
| Swipe → from left edge            | Left edge strip                            | Cycle Panadapter → FT8/FT4 → WSPR                           |
| Swipe ← from right edge           | Right edge strip                           | Open settings drawer                                        |
| Tap right grip handle             | Right edge                                 | Open settings drawer (alternative)                          |
| Swipe →                           | Open drawer, or spectrum while drawer open | Close settings drawer                                       |
| Swipe ↑ from bottom edge          | Bottom edge strip                          | Open memory channel picker                                  |
| Tap or swipe ↓                    | Top-bar item (Band/Mode/BW/Freq/Zoom)      | Open that item's selector                                   |


| Gesture                | Where               | Effect                                                                                                |
|------------------------|---------------------|-------------------------------------------------------------------------------------------------------|
| Touch and hold ~250 ms | FT8 decode list row | Dim preview at ~80 ms; full selection at 250 ms (scroll locks, drag moves highlight, lift to confirm) |
| Quick swipe            | FT8 decode list     | Scroll the list normally                                                                              |

## Per-unit IF calibration

The QMX's +12 kHz IF injection varies slightly between units. If signals appear consistently shifted left or right of where the QMX is actually tuned, open the settings drawer → **IF calibration** slider ( $\pm 100$  Hz, persisted to NVS). Default 0. Reported by Ken KF0AYY, whose unit needed about  $-55$  Hz to centre correctly.

## Hardware

- **M5Stack Tab5** — ESP32-P4 v1.3 (ECO2), ST7121 or ST7123 5" 720×1280 MIPI-DSI touch display, 32 MB PSRAM, ESP32-C6 co-processor for WiFi
- **QRP Labs QMX or QMX+** — firmware 1.03.002 up to 1.04.010 (1.04 unlocks AM mode + Antenna Tune; 1.04.011 is not recommended yet)
- **USB-A → USB-C data cable** between Tab5 USB-A host port and QMX (full data, not charge-only)
- **USB-C power supply** for the Tab5 (5 V / 2 A or better, or internal battery)

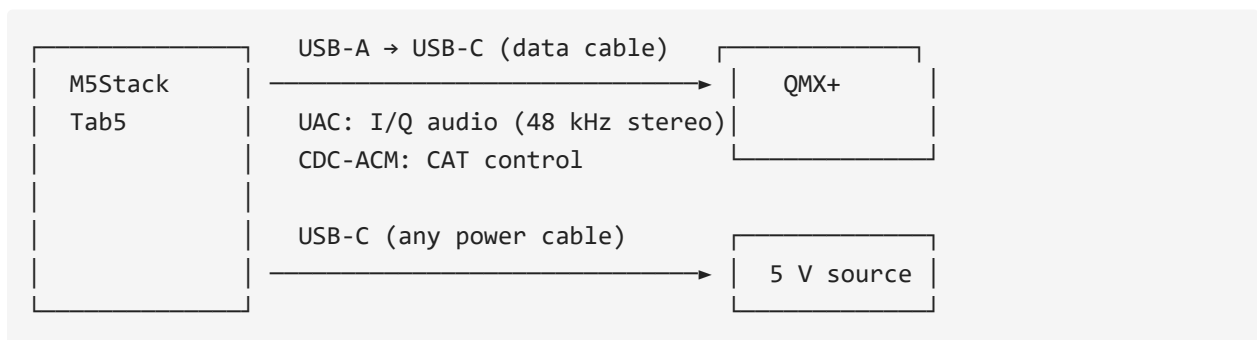

## What works without the QMX connected

| Works without QMX                  | Needs QMX connected                          |
|------------------------------------|----------------------------------------------|
| UI, settings drawer, gestures      | Spectrum + waterfall (no I/Q = flat line)    |
| WiFi, web UI, screenshots          | Top bar Band / Mode / BW                     |
| Callsign / grid / WiFi credentials | Tap-to-tune, mode popup (CAT writes)         |
| Brightness, colour map, dB range   | S-meter, FT8 decode/TX, QMX firmware readout |

If the spectrum is flat and the top bar shows ---, that is almost always the radio not being seen over USB — which loops back to the cable (or the QMX being off / in flash mode).

## Spectrum signal shifted / mirrored, tunable across the whole 48 kHz window

This means the QMX never confirmed IQ mode for the session — without it the radio streams plain (non-IQ) audio instead of a centred baseband, so the signal appears at the wrong place and slides across the full 48 kHz window as you tune. As of v0.19.3 the Tab5 retries the IQ-mode handshake automatically at connect (up to 4 attempts) and this resolves itself almost every time; if it still fails after all retries, a red banner appears across the top of the screen telling you so immediately, instead of leaving you to figure it out from a shifted waterfall. If you see the banner, power-cycle the QMX (forces a fresh handshake on reconnect) or check the QMX's own **System Config** → **IQ Mode** setting.

## Reporting hardware issues

Near the top of the boot log you will see:

```
I (xxxx) bsp_info: === TAB5 BSP INFO ===
I (xxxx) bsp_info: chip:      ESP32-P4 rev v1.3
I (xxxx) bsp_info: psram:    30 MB
I (xxxx) bsp_info: panel:    ST7123 (inferred from touch)
I (xxxx) bsp_info: touch:    ST7123 @ 0x55
I (xxxx) bsp_info: heap:     230.5 kB internal free, 28.80 MB PSRAM free
I (xxxx) bsp_info: idf:      v5.4.4
I (xxxx) bsp_info: firmware: v0.21.0
I (xxxx) bsp_info: =====
```

When opening a hardware issue, paste this block — the `panel` and `touch` lines are the first thing needed to identify which Tab5 hardware revision you have.

**Note on `reset_reason`:** a deliberate reset-button force-off returns `panic/exception`, not `external-pin/power-on`. A genuine firmware crash always prints a Guru Meditation register + backtrace dump immediately *before* the reboot. No backtrace = abrupt power-off, not a crash.

## Appendix — Technical Reference

*The sections below are the remaining, more technical parts of the same project README (build instructions, internal design notes, roadmap) — included here so the links above resolve, rather than dead-ending. Skip ahead if you only want operating instructions.*

### Appendix A — Build from source

Requires **ESP-IDF v5.4.4** — pinned; do not upgrade. ESP32-P4 v1.3 silicon requires `CONFIG_ESP32P4_REV_MIN_0=y` and CPU capped at 360 MHz, both baked into `sdkconfig`.

```
# Activate the IDF environment, then:
idf.py build flash monitor
```

Or with the `qmx` PowerShell helper — add to your `$PROFILE` and adjust the COM port:

```
function qmx {
    param([string]$cmd = "fm")
    if (-not $env:IDF_PATH) { & C:\esp\v5.4.4\esp-idf\export.ps1 }
    switch ($cmd) {
        "b" { idf.py build }
        "f" { idf.py flash }
        "m" { python -m esp_idf_monitor -p COM3 build\qmx_panadapter.elf }
        "fm" { idf.py flash; python -m esp_idf_monitor -p COM3
            build\qmx_panadapter.elf }
        "bfm" { idf.py build flash; python -m esp_idf_monitor -p COM3
            build\qmx_panadapter.elf }
    }
}
```

Exit monitor: ctrl+T then ctrl+X.

---

## Appendix B — Under the hood

---

### I/Q balance correction

The QMX presents I/Q audio with a small but measurable amplitude imbalance and quadrature error between channels. Without correction, every signal produces a mirror image across the centre frequency (~30 dB weaker), cluttering the waterfall on a busy band.

A blind adaptive Gram-Schmidt orthogonaliser runs sample-by-sample in the audio pipeline before the FFT. It maintains running estimates of:

- **DC offset** on each channel ( $\tau = 1$  s)
- **Power** in I and Q ( $\tau = 200$  ms)
- **Cross-product** I·Q ( $\tau = 1$  s) — non-zero cross-product means the channels are not orthogonal

Correction per sample:

```
i_out = i
q_out = (q - K_phi · i) × K_amp
```

No calibration step needed; the estimator converges on ambient band noise within a few seconds of any signal. A two-speed startup runs all alphas at 8× for the first 2 s of real signal after each reset (effective convergence ~125 ms), then drops to steady-state. Toggle in the settings drawer; re-enabling resets the estimator so it reconverges from a clean state.

### Quirks and trade-offs

**PI4IO expander must be initialised before display bring-up.** The Tab5's PI4IO I/O expander holds `LCD_RST` and `TP_RST` low at chip power-on. Without explicit init, on a true cold boot the panel never comes out of reset and the DSI FIFO hangs. Soft resets mask this because the expander retains state across ESP32 resets. `display_init` calls `bsp_i2c_init()` + `bsp_io_expander_pi4ioe_init()` first, then waits 120 ms.

**Patched components in components/. espressif\_\_usb\_host\_uac/** has

`create_background_task = true` — required for UAC and CDC-ACM to coexist on the same USB host. `espressif__esp_lcd_touch_st7123/` makes `FW_VERSION_REG` the only mandatory register read (ST7121 NACKs the others and also adds a `max_touches > 10` bounds clamp). Do not replace either with the registry version without re-applying the patches.

**LVGL software rotation (~50% FPS cost).** The panel is natively portrait; landscape is achieved via `lv_display_set_rotation(LV_DISPLAY_ROTATION_90)`. Every flush goes through `rotate90_rgb565`. ~13 fps landscape vs ~22 fps portrait — acceptable for a panadapter. PPA hardware rotation conflicts with the USB host stack over DW-GDMA channels and silently kills UAC + CDC-ACM; do not set `CONFIG_LVGL_PORT_ENABLE_PPA=y`. A full native-landscape rewrite would recover the lost FPS but isn't planned — accepted as a permanent trade-off.

**IDLE watchdog disabled.** The LVGL rotation pipeline keeps CPU0 busy past the default watchdog window. `CONFIG_ESP_TASK_WDT_CHECK_IDLE_TASK_CPU0/CPU1` are off; the app-task watchdog (30 s) is still active.

**Cross-thread CAT writes must go through the poll task.** Writing CAT commands directly from the LVGL thread races the FA/MD/FW poll on the same CDC pipe — commands interleave and the QMX returns `?`; . Pattern: stash the request in a `volatile` and let `poll_task` drain it on its next cycle. See `s_pending_ssb_bw / cat_request_ssb_bandwidth()` in `cat.c`.

**SSB filter bandwidth needs three coordinated writes.** `MMSSB|Filter RX=<hz>;` commits the value (persists, shows in QMX menu); `MMSSB|Bandwidth=<hz>;` applies it live; FW; polling must be suspended while the width is pinned because reading the filter makes the QMX revert it. Dead ends: `FW<nnnn>;` CAT set returns `?`; re-asserting the same mode digit does not reload the filter; `Bandwidth` write alone reverts on the next poll.

**HTTPS needs mbedtls allocating from PSRAM, not internal RAM.** The QRZ/eQSL upload features (v0.16.2) are this firmware's first-ever outbound HTTPS connections — SNTP, the only prior network client, is UDP. With the default `CONFIG_MBEDTLS_MEM_ALLOC_MODE=MBEDTLS_INTERNAL_MEM_ALLOC`, the TLS handshake's 16 KB+ buffers competed for the ~200 KB internal DRAM already under pressure from USB host/audio/FFT/LVGL and every connection failed with `ESP_ERR_HTTP_CONNECT`. Fixed by switching to `MBEDTLS_EXTERNAL_MEM_ALLOC` in `sdkconfig`, which moves those buffers into the 28 MB of free PSRAM instead.

## Project layout

|                           |                                                        |
|---------------------------|--------------------------------------------------------|
| main/                     |                                                        |
| main.c                    | app_main, task launch, orchestration                   |
| display/display.c         | BSP bring-up (PI4IO + LCD + touch)                     |
| ui/ui.c                   | LVGL widgets, touch handler, canvases                  |
| ui/ft8_screen_view.c      | FT8 decode list, touch-drag row selection              |
| ui/ft8_tx_modal.c         | TX confirmation modal                                  |
| cat/cat.c                 | USB CDC-ACM + Kenwood CAT                              |
| audio/audio.c             | USB UAC + ring buffer producer                         |
| dsp/dsp.c                 | FFT, spectrum mutex, DC blocker                        |
| dsp/iq_balance.c          | Gram-Schmidt I/Q correction                            |
| ft8_tx.c                  | FT8 TX engine (build/arm/run/abort)                    |
| ft8_test.c                | FT8 slot loop (RX decode / TX burst)                   |
| ft8_qso.c                 | Auto QSO state machine                                 |
| ft8_sim.c                 | FT8 simulation mode: phantom-station practice QSOs     |
| ft8_status.c              | Mutex-protected FT8 status string                      |
| adif/adif_log.c           | ADIF QSO logging                                       |
| adif/qrz_upload.c         | QRZ Logbook API upload (one record per request)        |
| adif/eqsl_upload.c        | eQSL.cc upload (batched, multiple records per request) |
| rtc/rtc.c                 | RX8130CE supercap RTC driver                           |
| time_sync/time_sync.c     | Time sync orchestrator                                 |
| render/render.c           | 30 Hz render task, EMA smoothing                       |
| render/render_waterfall.c | Waterfall scroll (double-height canvas)                |
| screenshot/screenshot.c   | RGB565 framebuffer capture for /ss.bmp                 |
| storage/settings.c        | NVS-backed settings with debounced flush               |
| wifi/wifi.c               | C6 co-processor WiFi + SNTP                            |
| net/webserver.c           | HTTP server + WebSocket                                |
| util/fps.c                | FPS counter                                            |
| util/diag_log.c           | Diagnostic log ring buffer (vprintf hook)              |

---

## Appendix C — Roadmap

The full per-version changelog — every release from v0.1.0 onward — lives in [docs/version-history.md](#). This section tracks only what's planned next.

### Next up

**v1.15.0 is here.** Next on the bench:

- **Web-UI audio streaming.** Listen to the receiver in any browser on your LAN — demodulated on the Tab5, no PC. Already working in development; held back for quality tuning and an overnight streaming soak. Server mode (screen off, device just serves) rides along.
- **CW page.** Canned-message CW TX memories first; decoded-CW display after (the QMX decodes internally — mirroring it over CAT looks cheap).
- **Binaural CW audio.** Asked for by Roy KI0ER, and shaped by Don N2VGU and Michael KZ4LY: a stereo sound stage so two stations a few tens of hertz apart land in different places in your head, with the **stage width a setting** rather than a fixed angle. The DSP is small — the Tab5 already receives I and Q separately — but it needs the Tab5's own audio output path, which is the same rework the CW page waits on.

Uwe DL8UG pointed at the KX2's "AFX MD Delay" — Elecraft's own quasi-stereo mode, a fixed delay on one channel applied to the whole receive audio, sold on *reducing operating fatigue* rather than separating signals. It's a genuinely different, much cheaper technique (no I/Q phase math, just a delay line) that solves comfort, not the "which station is where" separation the stage-width idea above targets. Worth keeping as a candidate first step or a companion to the real thing, not a replacement for it.

- **Tab5 audio output rework.** The blocker under both of the above: the output task must not run at all in FT8/FT4 (Michael KZ4LY's suggestion), since merely existing at a higher priority than the FFT consumer cost decode yield.

## Longer term

- **CW decoder.** Goertzel-based, text scrolling under the spectrum. The QMX already does this internally — question is whether to mirror its output via CAT or run a parallel decoder on the Tab5.
- **Tab5 speaker / headphone audio.** Demodulated CW/SSB passband audio out of the Tab5's own jack, so the operator can monitor without the QMX's audio path.
- **Extended waterfall history.** PSRAM has room for several minutes of scrollback; two-finger drag to scrub through history.
- **QDX / QDX-M support.** Asked for repeatedly. The QDX is I/Q over USB like the QMX, so receive is close; transmit needs a different route, because the QDX has no equivalent of the CAT tone command the Tab5 uses to key FT8. See [docs/qdx-vs-qmx-comparison.md](#).
- **JS8 / RTTY modes.** See [docs/js8-feasibility.md](#) and [docs/rtty-feasibility.md](#).
- **DSP polish.** Noise reduction, auto-notch.

---

## Appendix D — Related projects

---

- [Video demo](#) by Bruce N9JCV — a hands-on walkthrough of the software, filmed on his phone
  - [DX-FT8](#) by Barb (WB2CBA) — open-hardware FT8 tablet transceiver; an inspiring reference for a similar use-case
  - [qrp\\_companion](#) by Zhenxing Han (N6HAN) — Tab5 companion for QMX with audio + CAT; source of the polling audio task pattern and battery readout approach
  - [ft8\\_lib](#) by Karlis Goba — FT8 encoder/decoder vendored as `components/ft8_lib`
-

# Glossary

---

## Common terms and acronyms used in this guide:

| Term           | Meaning                                                                                                                                              |
|----------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>ADIF</b>    | Amateur Data Interchange Format — the standard log-file format for QSO records (exported by the panadapter, uploaded to QRZ/eQSL)                    |
| <b>AM</b>      | Amplitude Modulation — a voice mode. Receive only on the QMX+, and only on firmware 1_04 and later                                                   |
| <b>ARRL</b>    | American Radio Relay League — the US national amateur radio society, which runs Logbook of The World                                                 |
| <b>CAT</b>     | Computer-Aided Transceiver — radio control protocol (Kenwood-style commands via serial/USB)                                                          |
| <b>CDC-ACM</b> | Communications Device Class / Abstract Control Model — USB standard for serial ports                                                                 |
| <b>CQ</b>      | General call to any station (not directed at anyone specific)                                                                                        |
| <b>CW</b>      | Continuous Wave — Morse code mode                                                                                                                    |
| <b>dBm</b>     | Decibel-milliwatts — absolute signal power (0 dBm = 1 mW); used on the spectrum scale and S-meter                                                    |
| <b>DSP</b>     | Digital Signal Processing — mathematical signal analysis and filtering                                                                               |
| <b>DX</b>      | A distant station, or distance worked. <b>BEST DX</b> on the WSPR page is the furthest station that heard you, or that you heard, this session       |
| <b>DXCC</b>    | DX Century Club — the ARRL award programme, and by extension its list of ~340 "entities" (countries plus separately-counted islands and territories) |
| <b>eQSL</b>    | Electronic QSL — online service for confirming and exchanging QSO records                                                                            |
| <b>FFT</b>     | Fast Fourier Transform — algorithm that converts time-domain audio into a frequency spectrum                                                         |

| Term                     | Meaning                                                                                                                                                                              |
|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>FT8 / FT4</b>         | Digital modes for weak-signal HF communication (15-second vs 7.5-second slots). Both fully supported (FT4 re-enabled in v0.21.0).                                                    |
| <b>GFSK</b>              | Gaussian Frequency-Shift Keying — the modulation scheme FT8 and FT4 use                                                                                                              |
| <b>GPIO</b>              | General-Purpose Input/Output — microcontroller pins for digital signals                                                                                                              |
| <b>I2C / SPI</b>         | Serial communication protocols for connecting peripherals (sensors, displays, etc.)                                                                                                  |
| <b>IF</b>                | Intermediate Frequency — the QMX presents the VFO signal at a +12 kHz offset in baseband                                                                                             |
| <b>IQ</b>                | In-phase / Quadrature — stereo representation of RF signals (real + imaginary parts)                                                                                                 |
| <b>LDPC</b>              | Low-Density Parity-Check — the error-correcting code used in FT8/FT4 decoding                                                                                                        |
| <b>LoTW</b>              | Logbook of The World — ARRL's online QSO-confirmation service                                                                                                                        |
| <b>LSB / USB (mode)</b>  | Lower / Upper Sideband — the two SSB voice modes (note: "USB" also means Universal Serial Bus, below)                                                                                |
| <b>LVGL</b>              | Light and Versatile Graphics Library — open-source embedded UI toolkit used for the display                                                                                          |
| <b>Maidenhead / grid</b> | The locator system amateurs use for position, e.g. J065. Four characters is a ~100 km square, six is finer. FT8 and WSPR both carry one                                              |
| <b>NVS</b>               | Non-Volatile Storage — persistent memory on the ESP32 (survives power cycles)                                                                                                        |
| <b>PA</b>                | Power Amplifier — the radio's final transmit stage. <b>Max. PA voltage</b> sets how hard it is driven, and so how much power comes out; see <a href="#">WSPR</a> and Calibrate Power |
| <b>POTA</b>              | Parks on the Air — portable operating activity from designated parks                                                                                                                 |

| Term                | Meaning                                                                                                                                                     |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>PSK Reporter</b> | A worldwide database of who heard whom. The panadapter can send it your decodes, and reads it back to show who has heard <b>you</b>                         |
| <b>PSRAM</b>        | Pseudo-SRAM — extra RAM on the Tab5 (used for large buffers like waterfall history)                                                                         |
| <b>QMX / QMX+</b>   | QRP Labs HF transceiver — the radio this panadapter controls and receives audio from                                                                        |
| <b>QRP</b>          | Low-power operating, conventionally 5 W or less. QRP Labs, who make the QMX, are named for it                                                               |
| <b>QRZ</b>          | QRZ.com Logbook — online logbook and callsign service for uploading QSOs                                                                                    |
| <b>QSO</b>          | Radio contact / conversation between two stations                                                                                                           |
| <b>RBN</b>          | Reverse Beacon Network — automated receivers ("skimmers") that continuously report the CW and digital signals they hear. One of SelfSpotter's three sources |
| <b>RIT</b>          | Receiver Incremental Tuning — shifts what you <i>hear</i> without moving what you would <i>transmit</i> on. The QMX has RIT but no XIT                      |
| <b>RTC</b>          | Real-Time Clock — battery-backed timer on the Tab5 (keeps time during power-off)                                                                            |
| <b>SNR</b>          | Signal-to-Noise Ratio — signal strength relative to the noise floor; the FT8/FT4 signal report                                                              |
| <b>SNTP</b>         | Simple Network Time Protocol — synchronizes the system clock via WiFi/internet                                                                              |
| <b>SOTA</b>         | Summits on the Air — portable operating activity from mountain summits                                                                                      |
| <b>SSB</b>          | Single Sideband — the voice-mode family (USB / LSB)                                                                                                         |
| <b>SSID</b>         | The name of a WiFi network                                                                                                                                  |
| <b>STFT</b>         | Short-Time Fourier Transform — sliding-window FFT used to build the waterfall                                                                               |
| <b>SWR</b>          | Standing Wave Ratio — antenna impedance matching metric (1.0 = perfect)                                                                                     |

| Term           | Meaning                                                                                                                                                                                                                                |
|----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>TX / RX</b> | Transmit / Receive — keying the radio and listening                                                                                                                                                                                    |
| <b>UAC</b>     | USB Audio Class — standard for streaming audio over USB                                                                                                                                                                                |
| <b>USB</b>     | Universal Serial Bus — physical connector and protocol (carries both audio and CAT commands). In a radio context, "USB" can also mean Upper Sideband — see SSB.                                                                        |
| <b>UTC</b>     | Coordinated Universal Time — timezone-independent time standard for FT8 slot alignment                                                                                                                                                 |
| <b>VFO</b>     | Variable Frequency Oscillator — the radio's tuning dial / frequency setting                                                                                                                                                            |
| <b>WSJT-X</b>  | The desktop program most FT8 and WSPR operators use. The panadapter does the same job without a PC, and its decodes and reports are meant to be comparable                                                                             |
| <b>WSPR</b>    | Weak Signal Propagation Reporter, said "whisper" — a beacon mode carrying only callsign, grid and power. Nobody replies; stations worldwide report hearing you, so you learn where your signal actually goes. See <a href="#">WSPR</a> |

---

## Contributing

This is a solo project — all coding is done by the author (OZ1LAV) at his own pace, and **pull requests are not being accepted right now**. Bug reports, feature requests, and field reports are very welcome, though, via [GitHub Issues](#) or the [QRPLabs Groups.io thread](#). See [CONTRIBUTING.md](#) for details.

---

## Appendix E — License

MIT (see LICENSE). Copyright © 2026 Steffen Lav (OZ1LAV).