

QMX+ Panadapter — User Guide

(v1.17.1)

By Steffen Lav (OZ1LAV). Generated from the project README — for the live page, issues, and releases see <https://github.com/SteffenLav/qmx-panadapter>

The full documentation also lives online at tab5.lav.dk — the user guide, quick-start, and reference as searchable, cross-linked web pages, kept in sync with every release.

Features

Everything below is in the firmware **today**. Nothing here needs a PC, and only the items marked (*needs WiFi*) need a network.

Real-time panadapter — Spectrum and waterfall across a 48 kHz window centred on the QMX VFO, at 30 Hz, with 12 kHz IF-offset compensation. Tap or drag to tune (mode-aware snapping), pinch to zoom $\times 1$ – $\times 24$ with a true zoom-FFT, one-finger drag to pan and retune. Adaptive per-bin noise floor, flat-spectrum mode, adjustable waterfall black level and contrast, selectable FFT window, and a graphical S-meter calibrated in dBm. A colour band-plan strip tracks the VFO (IARU region 1/2/3, auto-selected from your grid) and can be dragged to scrub across the band.

A spectrum that holds still — From $\times 2$ zoom up, the spectrum and waterfall stay where they are and the VFO marker moves across them, so a signal stays put on screen while you tune towards it and the waterfall's history stays lined up under the frequency it belongs to. It really does hold still: the picture never slides along with the dial. Tune far enough and your filter passband reaches the screen edge, keeps going, and once about half of it has slid off the display pages in one step, carrying part of the old screen across. The trigger is your filter passband rather than a percentage of the view, so it behaves the same in every mode. Tapping a spot moves only the marker when the spot is already on screen, and re-frames when it is not. On by default, and switchable. At $\times 1$ the view stays centred on the dial, because the view is already the whole 48 kHz the radio sends. The band above dial+12 kHz is hatched on both screens — the radio genuinely cannot hear it, and drawing something there would be inventing signal.

RIT — Pull in a caller answering off your frequency without moving transmit: arm it, tap the caller, and a marker shows where you are listening while the gold line goes on meaning the dial. A long press parks the offset and restores it.

Audio, and binaural CW (beta) — The I/Q the radio already sends is turned into sound on the device. The **panoramic CW split** places two stations on different frequencies to the left and right of the stereo image instead of letting them land on top of each other, with **pan width**, **pan blend** and **overlap** adjustable live while you listen. This plays to something your ears do far better than any decoder: separating two sources by where they are coming from. A single-channel reader has to pull both signals out of one waveform; binaural CW hands the job to the part of your hearing that evolved for it, and two stations calling together stop being a jumble. Best at **300 Hz bandwidth and up — below 200 Hz there is little separation to be had**, because the signals then share too much of the audio passband for any amount of panning to pull them apart. Audio competes for resources, so open **Audio Settings** from the settings drawer, where it is switched on and off. This is a first implementation and is **beta**, with the same features planned for the web interface — sending only the I/Q to the PC and doing the work there. See [Audio](#).

Receive from the 3.5 mm jack (beta — Tony, @tony1tf, #17) — The panadapter can take its signal from the Tab5's own headphone jack instead of the radio's USB audio. Tony asked for an audio input for digital modes and then ran a test build on his own Tab5 to find where the jack lands: the mic ring arrives on the audio chip's third channel, which is the fact the feature is built on. The jack is one real audio channel, not I/Q, so the second channel is synthesised by a 255-tap filter that builds the quadrature pair the decoders need. There is a level meter, a clip indicator and the jack wiring drawn on screen. ⚠ **No signal has been decoded through it yet** — the path runs and the levels read correctly, and that is the whole of what is proven. 🚫 In this mode the USB radio connection is off by design, so CAT, the S-meter and the band/mode display go quiet. Changing the source needs a restart, which the Tab5 performs itself on **Save**. See [Audio](#).

QMX CAT control — Live frequency, mode (USB/LSB/CW/DiGi, plus AM on QMX firmware 1.04+), SSB filter bandwidth, CW passband, passband overlay, TX power and SWR readout, QMX volume in decibels matching the radio's own display, and an Antenna Tune button on 1.04+. Round-trip CAT latency under 50 ms. Band presets with per-band frequency recall, and 32 memory channels in a 4×8 grid holding any frequency and mode.

FT8 and FT4, receive — Continuous on-device decoding in the same view as the panadapter: FT8 (15 s slots) and FT4 (7.5 s slots). **JS8** is a third sub-mode of this page - see below. The decode list shows callsign, country, signal report, slot-timing offset (DT), audio tone (HZ), distance and bearing, with the station you are working held at the top. Include/exclude filters match anything in the message text, worked-before stations can be excluded band-by-band, and a pileup tracker collects everyone calling you.

FT8 and FT4, transmit — Tap a station and the correct *next* message is sent (WSJT-X double-click style); or call CQ from one of three editable presets, with an optional stop-after-N-calls limit. Full automatic exchange through to 73 and an ADIF entry, a resend if your partner never heard your final, a polite hold for a station already working someone else, grey-listing for stations that never answer, and an optional unattended auto-answer robot. Your TX tone is a permanent on-screen button with a live occupancy strip, drag-to-pick tone selection, **TX Hold**, and a cycling **TXCQ ANY / EVEN / ODD** time-window choice. ARRL Field Day exchange mode included.

QSO logging and upload — Every contact is written to an ADIF log on the device, with timestamp, callsign, grid, frequency, band, mode, both signal reports and distance (never a report that was not actually exchanged). Read the log on the Tab5 or in the browser, delete single records or all of them, and upload (*needs WiFi*) to **QRZ Logbook**, **eQSL**, **ARRL LoTW** and **your own Cloudlog or Wavelog** — LoTW QSOs are signed on the device itself with your own callsign certificate. A signal report or a park/summit reference can be corrected after the fact from the browser's log table. The browser's **ADIF restore** merges a previously downloaded (or any logger's) ADIF file back in — contacts already logged are skipped — so an erase-and-reinstall does not cost you your worked-station history. Or **restore straight from the microSD card**, on the Tab5 itself with no computer at all. **Search the log** on either screen — by callsign, country, band, mode, date or park — and in the browser **tick rows and export just those** as their own ADIF file.

Live spots on the spectrum (*needs WiFi*) — **POTA** park activations, and optionally **RBN** CW skimmer spots and **DX cluster** spots, drawn onto the trace at the frequency the station is actually using. The cluster is where phone activity comes from — skimmers are machines, and no machine recognises a callsign spoken into a microphone. One station is one entry, however many sources report it. Grey means you have already worked them on that band. Press and drag to pick one, lift to tune it *with the right mode*. Spots fade with age and are gone after 30 minutes; corner counts take you to the ones just off-screen.

Knowing you are getting out (*needs WiFi*) — **Who is hearing me** asks PSK Reporter which receivers have copied *your* call, with distance, bearing and the report they gave you. **SWR protection** cuts a transmission short and latches the transmitter off above your chosen limit, because an FT8 burst is thirteen seconds of key-down into whatever the antenna is doing.

JS8 — a keyboard mode, on the device (*beta*) — JS8 carries **free text** on FT8's modulation, so stations hold short conversations rather than trading a fixed exchange. All of it runs on the Tab5: sync, LDPC error correction and the CRC check on receive, the encoder and transmitter on send. It is a sub-mode of the FT8/FT4 page - pick **JS8** in the preset picker - and adds a **Conversation** tab beside **Stations**, so you can read what has been said as well as who is on the band. To send, tap **Free text** under Call CQ, or use the composer on the web page; both report how many frames the message takes and how many seconds it holds the frequency before the radio is keyed. Directed messages and heartbeats are shown with the sender's callsign and grid. Full detail in [JS8](#).

WSPR — A third page, reached by the same swipe: **Panadapter** → **FT8/FT4/JS8** → **WSPR**. WSPR is a propagation beacon rather than a contact mode — a very slow, very weak signal carrying only your callsign, grid and power, which stations worldwide report hearing, so over an evening you get a picture of where your antenna and your band actually reach at levels where nothing else would be heard at all. Nobody replies and nothing goes in your log. The page lists what was heard each two-minute cycle with the band, distance and bearing, and the furthest of the session. Receiving is the default; transmitting is opt-in, refuses to key without your callsign and grid, and has a transmit schedule and optional band hopping. **Calibrate Power** sweeps *Max. PA voltage* on a dummy load and measures real RF output at each step, per band. **Declared power** then only offers the standard WSPR dBm steps your calibration actually reaches — each one labelled with its real measured wattage, not a textbook figure — so what you declare (published worldwide with every spot) matches what actually goes out. A WSPR transmission keys the radio for about 110 seconds in every 120, so picking a low declared level for long beacon runs is how you protect the finals now, rather than a fixed voltage cut applied underneath you. **Output power**, a separate slider for every other mode (FT8, CW, SSB, ...), shares the same calibration but stays out of WSPR's way entirely — Declared power always owns the radio there. What you hear can be published to [wsprnet.org](#) (*needs WiFi*).

Radio menus — The QMX's own 80×24 menu system, on the Tab5 and in the browser, over the radio's *second* USB serial port so the panadapter keeps decoding while you are in there. For a QMX+ with no control panel it is the only way in. Leaving hands the radio back properly and restores your frequency and mode.

CW keyer speed (*Ralph Hellmig*) — A slider in the settings drawer directly above IF calibration, and the same control on the web page. It sets the radio's keyer speed over CAT and then shows what the radio actually took, because the radio is the authority here and does not store the value itself.  **A speed of 0 means a straight key**, not "no speed set". See [Radio Menus](#).

A GPS of your own, and a sky view — Two receivers work, and both are confirmed on hardware: an **M5Stack Unit GPS v1.1** on PORT.A and a **Module GPS v2.1** on the 30-pin M-Bus. Either gives you UTC **and the full date** with no internet and no radio — every other offline source on this device gives a time of day only, so the day itself was always a guess. Your station grid fills itself from the fix, and never overwrites a grid you typed by hand. **GPS Stats** is a page of its own under Radio in the drawer and on the web: the satellites in use drawn on an elevation-ring sky view, with the fix, the satellite count and which receiver is answering. The clock now also says whether the time came from a GPS on the Tab5 or from the radio. See [Time sync](#).

Updating from the device (*needs WiFi*) — A new release is fetched quietly in the background and offered once, in a window in the middle of the screen, with **Restart now** or **Later**. Nothing is ever installed without you asking, and the automatic download can be switched off if you are on a metered connection. The spectrum, waterfall and FT8 decoding keep running throughout.

Activation logging — Start a **POTA** or **SOTA** activation and every contact is stamped with the reference as it is logged, counted against the threshold, with chases tagged from spots already seen and a single-reference ADIF export for uploading.

Bluetooth mouse — A pointer that works *while the QMX stays plugged in*, which a USB mouse cannot do on this hardware. Pair once; it reconnects by itself. Move, click, and a wheel that scrolls whatever is under the pointer — **and over the spectrum or waterfall, that wheel tunes**: 10 Hz a click in CW and the digital modes, so a signal can be zero-beaten by ear, and 100 Hz in SSB (*Roy KIOER, John Dusek*). It stops at the band edges, and anything on top of the panadapter — a modal, the settings drawer — takes the wheel instead, so the dial never moves under something you are reading. **The mouse must be Bluetooth 4.0 or later (Bluetooth Low Energy)**. The Tab5's Bluetooth comes from a co-processor with no Bluetooth Classic radio, so an older Classic mouse cannot work and no firmware change can help — it never appears to the Tab5 at all. Most mice sold since about 2014 qualify; a dual-mode mouse works on its Low Energy channel.

PSK Reporter spotting (*needs WiFi*) — The stations you decode are reported to [PSK Reporter](#) the way WSJT-X does, so you appear on the map as a monitoring station. **On by default**; sends your call and grid plus each decoded station's call, grid, frequency, report and mode, batched at most once every five minutes — over the internet only, **never on the air**. One checkbox turns it off, and it is inert until your callsign and grid are set, and in simulation mode.

Web UI (*needs WiFi*) — The whole panadapter in any browser on the LAN: live spectrum and waterfall at ~10 fps, click or drag to tune, mouse-wheel pan and tune, band/mode/bandwidth/zoom control, a graphical S-meter and the whole-band plan strip. In FT8/FT4 mode it shows a live TX status banner and a **Call CQ** button instead of the stream. Also: the QSO log as a sortable table, config download/upload as an editable text file, a microSD file browser, screenshots, and the diagnostic log.

Built-in user manual — This entire guide is compiled into the firmware, so it opens instantly with no WiFi, no card and no download, and can never describe a different version than the one you are running. It opens at the chapter for the screen you are on, warning banners are tappable, and a **Need guidance?** panel lets you pick your symptom in plain words. See [Getting help](#).

Time and date, with or without a network — SNTP when WiFi is up (*needs WiFi*), the Tab5's own supercap-backed RTC across power-off, the QMX's clock as an offline fallback, GPS detected and phase-locked automatically if your QMX has one, and a manual set-and-sync panel. FT8/FT4 timing also self-corrects from the decoded band consensus when offline.

A GPS of your own (*new in v1.16.12*) — Plug an **M5Stack Unit GPS v1.1** into PORT.A and set **Settings** ▶ **Device** ▶ **Port mode** to *Unit GPS v1.1*: the satellite gives you UTC **and the full date**, offline, with nothing to answer. A GPS-equipped QMX+ on radio firmware 1.04_004 or later now hands over the date too, so that route is also complete offline. The date itself is no longer taken on trust from a running clock — see [Time sync](#).

Decoded CW (*new in v1.11.1*) — In CW or CW-R, a line along the bottom of the panadapter shows the Morse the radio is decoding, with an estimate of the sending speed. The **QMX does the decoding itself** and hands the text over CAT, so it costs the panadapter no processing at all and does not touch the spectrum or FT8. Works on QMX firmware 1.03 and later, on the Tab5 and in the browser, and switches off in the settings drawer under Radio (*suggested by Uwe DL8UG*). With a card in the slot it is also written to `qmx-panadapter/cw-decode.txt` with timestamps, so a half-caught callsign can be resolved afterwards (*Michael K Johnson KZ4LY*).

Frequency format — The frequency readout, preset buttons, WSPR band picker, keypad and spectrum scale can be punctuated 14.074.000 (the default, and what the QMX shows on its own LCD) or 14,074,000 (*Don N2VGU*). Settings drawer, under Advanced.

microSD station backup — Insert a card (a plain FAT32 32 GB card is ideal) and your whole station is mirrored to `/qmx-panadapter/`: the ADIF log, a full config export, your LoTW certificate and key, the diagnostic log and a self-describing `README.txt`. Continuous with WiFi off; one complete backup per start-up with WiFi on, because the card and the WiFi co-processor share a bus. The **SD** dot is green while writes are reaching the card and yellow when nothing has landed lately. It restores too, which is the half that was missing: **Restore from SD** in the Tab5's own log window, or from the browser. And because the card mirrors the *present*, the copy from just before the log last got **smaller** is kept beside it as `qso.prev.adf` — so a deletion you notice two restarts later is still recoverable. **After inserting the SD card your Tab5 needs a restart** — the card is claimed during a short window early in boot, so one pushed in while it is running is not used until then. (*The card holds credentials — WiFi password, QRZ/eQSL logins, LoTW private key — so keep it physically secure.*)

Diagnostics — An always-on diagnostic log, nothing to enable: 5 MB in RAM, a rolling copy in flash that survives a power cut, and a full mirror to microSD if a card is in. Downloadable from the browser or over USB serial. **A crash survives the reboot** — if the Tab5 ever restarts unexpectedly, the next boot records what happened, in which part of the firmware and how far into the session, so a diagnostic download is enough to answer it.

Practice mode — A simulator with phantom stations that call CQ and reply through the real encode/decode pipeline, so you can rehearse a full QSO with **no radio connected** — and with a hard interlock that never keys a QMX even if one is attached.

Touch, keyboard, mouse — Edge-swipe navigation with breathing grip handles, an on-screen keyboard, and optional support for the M5Stack Tab5 70-key snap-on keyboard — which drives the radio's own menus, works in every window with buttons, scrolls the settings drawer and the manual, and carries Ctrl shortcuts you can reassign yourself. It can be attached or reattached at any time, not only at boot. A **Bluetooth keyboard** does the same: every text box, Enter and Esc in every window, Tab between fields and the arrow keys, with the on-screen keyboard stepping aside while one is connected. A keyboard and a mouse can be connected at once, in either order. [△](#) Bluetooth keyboards are **US layout only** — a Bluetooth keyboard reports key *positions* rather than characters, so letters, digits, Enter and the arrows are right on any keyboard while punctuation on a non-US layout will not be. Plus USB mouse support. *(The mouse and the QMX cannot share the single USB host port — the ESP32-P4's USB stack lacks the Transaction Translator a hub would need — so the mouse is for setup, log review and reading the manual with the radio unplugged.)*

Settings you decide the shape of — Every setting appears on the Tab5 and in the browser, and the drawer has a **Basic** and an **Advanced** view. Which sections appear in which is yours to set, from a **Tab5 config** button in the web UI's Settings window; a firmware update that adds a setting shows it rather than hiding it behind a layout saved before it existed.

Built for the field — WiFi is entirely optional, and can be given a static address if you want the browser bookmark to keep working; battery percentage with a charge limit for battery care; display sleep and a 180° flip for awkward mounting; config backup and restore as a text file; and a settings reset that does not need a reflash.

Contents

Chapters

1. Quick Guide	10	8. JS8	90
<i>get on air in 10 minutes</i>		<i>keyboard mode on the device - decode, free text, CQ (beta)</i>	
2. Panadapter	17	9. Time sync	94
<i>spectrum, waterfall, zoom, touch-to-tune, S-meter, memory channels</i>		<i>WiFi/SNTP, Tab5 RTC, POTA/offline use</i>	
3. Live spots	36	10. Settings	107
<i>POTA, RBN and DX cluster callsigns drawn on the spectrum</i>		<i>every drawer control, group by group</i>	
4. Spot map	41	11. WSPR	135
<i>who is hearing YOU - RBN, PSK Reporter and WSPR reports of your own signal, on a world map</i>		<i>two-minute propagation beacon - where your signal actually goes</i>	
5. Web UI	46	12. Radio menus	145
<i>browser panadapter and remote control</i>		<i>the QMX's own menu system on the Tab5 - the only way into a headless QMX+</i>	
6. FT8 Receive	54	13. Troubleshooting	150
<i>onboard decoder, decode list</i>		<i>symptoms, causes and what to do</i>	
7. FT8 Transmit	62	14. Reference	164
<i>reply, CQ-run, auto-QSO, ADIF logging</i>		<i>gestures, web API, hardware</i>	

Appendices

Appendix A — Build from source ..	164	Appendix C — Roadmap	164
Appendix B — Under the hood	164	Appendix D — Related projects	164
<i>DSP, I/Q correction, quirks</i>		Appendix E — License	164

1. Quick Guide

Step 0 — Check your QMX firmware first

Power the QMX on by itself and read the firmware version off its own display at boot. You need **1.03.002 or newer**. If yours is older, update the QMX *before* connecting the Tab5 — everything that follows depends on it. This takes 10 seconds to verify and saves hours of debugging. Everything from **1.03.002** up to and including **1.04.010** works with the panadapter; on 1.04 the Tab5 additionally offers **AM mode** and an **Antenna Tune** button (SWR tune with a live power/SWR readout) — both stay hidden on 1.03.002, so there's no downside either way.

Do not use 1.04.011 (19-Sep-2026) yet. One operator reports no transmit output when the radio is keyed over CAT from the Tab5, and others report the radio's own Tune SWR and Hardware Test screens freezing until power-cycled. All of it clears on 1.04.010. Reported to QRP Labs; this note will go when there is a fix.

Step 1 — Flash the Tab5 firmware

Use the one-click flasher in [tools/QMX-Panadapter flasher/](#) (also attached to each [release](#)):

1. Plug the Tab5 into your computer with a **USB-C data cable** — charge-only cables will not work.
2. Run the flasher:
 - **Windows** — double-click `flash.bat` (fetches esptool by itself on first run; nothing to install)
 - **macOS** — double-click `flash.command` (needs esptool once — `brew install esptool` recommended; `pip3 install esptool` often fails on recent macOS with an "externally-managed-environment" error). If macOS blocks the script, right-click → **Open**, or run `bash flash.command` in Terminal (no `chmod` needed).
 - **Linux** — `bash flash.command` (needs `pip3 install esptool`)
3. The flasher asks **normal or clean** (see below) — just press **Enter** for a normal flash.
4. Wait for SUCCESS. The Tab5 restarts on the new firmware.

The firmware is already in the zip — `bootloader.bin`, `partition-table.bin` and `qmx_panadapter.bin` sit next to the script, and those are what get flashed. Nothing is downloaded except `esptool` itself, once, if your computer doesn't already have it. So after the first successful run the flasher works with no internet at all.

Normal vs clean flash. Just before flashing, the flasher asks:

Type E for a CLEAN/ERASE flash, or just Enter for a normal flash

- **Normal (press Enter)** — updates the firmware and **keeps** all your saved settings (WiFi, callsign, grid, memory channels, ADIF log). This is what you want almost every time.
- **Clean (type E)** — wipes the whole chip first, so **every saved setting is permanently erased**: WiFi name *and* password, callsign/grid, all memory channels, and the logged QSOs. Use it only if something is stuck or corrupted (e.g. WiFi refuses to turn on no matter what). Back up first with **Config** ↓ (below) so you can restore in seconds afterwards.

If the flash keeps failing, reboot the Tab5 and try again — before anything else.

The Tab5's USB serial connection is produced by the ESP32-P4 itself rather than by a separate USB chip, so a busy running firmware can leave the COM port listed in Windows Device Manager while it no longer answers the flasher. A reboot clears it. After that, the usual causes are a charge-only cable or a serial monitor still holding the port. (*Samuel W7STF, after a 7-hour session.*)

Building from source? See [Build from source](#).

Step 2 — Connect the cables

You need **two** USB connections, and the cable to the QMX is the one people get wrong:

Connection	Port on Tab5	Cable	Carries
Tab5 → QMX	USB-A (host)	USB-A → USB-C, full data cable	I/Q audio (UAC) + CAT (CDC-ACM)
Tab5 → power	USB-C	Any USB-C power cable (5 V / 2 A+)	Power

The #1 failure is a charge-only cable. Many USB-C cables — especially thin ones bundled with phones and chargers — carry power only, no data lines. If you use one between the Tab5's USB-A port and the QMX, the Tab5 powers the QMX but sees no audio and no CAT: the spectrum stays flat and the top bar shows Band: ---. Use a cable you know does data (one that works for a USB stick or phone file transfer). When in doubt, swap the cable first.

Power-on order matters. Turn the **Tab5 on first** and let it finish loading, then turn the **QMX on**. Within a few seconds the top bar should populate Band / Mode / BW and the spectrum should come alive.

Once flashed you can power the Tab5 from any 5 V/2 A USB-C source or the internal battery — the laptop is only needed for flashing. For diagnostics the Tab5 also outputs a serial log over the USB-C data connection (useful if WiFi is not available), but for most users the built-in **diagnostic log** — always on, nothing to enable — is the easier path — see [Step 7](#).

Step 3 — Find your way around

The whole app is driven by **one-finger swipes from the screen edges** and **taps on the top bar**. The settings drawer is always one swipe away — no hunting for hidden menus.

Gesture	From	Does
Swipe →	Left edge	Cycle Panadapter → FT8/FT4/JS8 → WSPR
Swipe ←	Right edge	Open settings drawer
Swipe ↑	Bottom edge	Open memory channel picker
Tap or swipe ↓	Any top-bar item	Open that item's selector

Slim "breathing" grip handles on each edge show where to swipe — faint enough not to clutter the display, visible if you look for them.

The top bar reads **Band · Mode · BW · Freq · Signal · Zoom** left to right. Tap any item to open a selector — **Freq** opens the frequency keypad; **Mode** switches USB/LSB/CW/DiGi; **BW** selects SSB filter width (USB/LSB only); **Band** jumps to a configured band; **Zoom** selects a zoom preset.

See the [full gesture table](#) in the Reference section.

Step 3b — Choose FT8 or FT4 mode

FT8 is available on all HF bands; FT4 is available on select bands with published frequencies (20 m, 30 m, 40 m, etc.). To switch between them:

1. **In Panadapter mode:** Tap the **Mode** selector in the top bar, then choose **DiGi** (the digital mode group).
2. **In FT8 screen:** Tap the **Preset** frequency button to open the band/mode picker — you'll see **two columns**: FT8 (gold header) on the left, FT4 (cyan header) on the right. Tap any frequency in the FT4 column to switch modes.

The decode list, TX controls, and slot timing (countdown bar, which-parity-next) all adapt automatically to the active mode. Switching modes clears stale decodes from the previous mode so you don't work old QSOs.

When to use each mode:

- **FT8** — Most populated band in SOTA/POTA; longer decode window gives more time to prepare replies on slow links or weak signals.
- **FT4** — Faster QSO cycle for busy bands (Field Day, major contests, 20 m pile-ups) and operators who prefer shorter waits between exchanges.

Step 4 — Fill in your settings

On first boot the Tab5 opens a setup prompt automatically — it will ask for your callsign, grid square, and WiFi credentials before you reach the main screen. You can skip any field and fill it in later via the settings drawer.

To open the settings drawer at any time: swipe in from the right edge, or tap the right grip handle.

- **WiFi** — enter your SSID and password. Recommended for everyone: you get accurate UTC time (needed for FT8 slot timing), the browser web UI, and remote diagnostics. The **WiFi initiated** checkbox below the WiFi section is an on/off master switch — uncheck it for POTA or field use with no network.
- **Identity** (callsign + grid square) — *only required for FT8/FT4 transmit*. Enter your callsign and Maidenhead grid (4 or 6 characters, e.g. J045 or J045ab). The grid also drives the distance and bearing columns in the FT8 decode list.

Everything else — dB range, smoothing, colour map, brightness, IQ balance — has sane defaults. Adjust if you want to, but you don't need to on first use.

Step 5 — Using the panadapter

Switch the QMX to any band and watch it come alive. This is the foundation of the device regardless of which modes you operate.

Tap or drag to tune. Touch anywhere on the spectrum or waterfall to place the cyan cursor. Drag and it snaps to a mode-aware grid — 10 Hz steps in CW, 250 Hz in SSB, 500 Hz for FT8/FT4 — so you can land precisely on a signal before lifting your finger. Lift, and the QMX retunes.

Swipe fast to pan instead. A quick horizontal swipe (rather than a held drag) slides the whole view left or right and retunes to wherever you let go — the fastest way to slide along a band. See [Touch-to-tune](#) for exactly how the two gestures are told apart.

Or move precisely with the band-plan slider. For a controlled move rather than a quick swipe, drag the framed "visible window" on the band-plan strip (along the bottom) to exactly where you want to be on the band — the spectrum, waterfall, and VFO all follow it, so you can place yourself precisely on a segment before you even tap a signal.

Zoom in on a crowded band. Pinch with two fingers to zoom up to $\times 24$. On a CW band at $\times 8$ or higher you can resolve individual signals a few hundred Hz apart, read the spacing between callers, and pick your target before you tune. The frequency axis scales with you, down to Hz precision at high zoom. Double-tap anywhere to reset to the full 48 kHz view.

Find your place on the band. The thin band-plan strip along the bottom of the screen (just above the status bar) colour-codes the CW/Digi/Phone segments around you — pick your IARU region (or leave it on Auto) in the settings drawer → **Band-plan region**. The framed window on the strip is a **slider**: drag it (or tap anywhere on the strip) to move precisely to any spot on the band, and the spectrum, waterfall and VFO all follow along. You can also grab that slider from anywhere along the bottom status bar and drag sideways — a taller target — while a vertical up-swipe there still opens memory channels.

Read your passband. Two grey vertical lines on the spectrum mark your current filter edges. The BW label in the top bar shows the active width; tap it to choose 2.5 / 2.7 / 2.9 / 3.2 kHz in USB or LSB. A coloured tint fills the passband so you can always see exactly what slice of the band you're receiving.

Watch the S-meter. The Signal field in the top bar is a live tick-scale bar (S1 through S9+20), driven by the actual signal under your VFO cursor.

Flat-spectrum mode. Toggle **Flat spectrum** in the settings drawer to switch from absolute dBm to dB-above-local-noise-floor. Noise collapses to a calm baseline; real signals — including weak CW tones in the mud — pop sharply above it. Recommended on noisy bands.

Save your spots. Swipe up from the bottom edge to open the memory channel picker — a 4×8 grid of 32 channels. It doesn't greet you with blank cells: a fresh device arrives with a handful of **example channels already filled in**, and each one is **colour-coded by mode** (CW green, DiGi teal, USB brick-red, LSB purple) so you can read the whole grid at a glance without opening a single label. The very first time you open it, a quick **guided animation** walks you through the gestures — watch a channel slide to a new slot, then drop into the wastebin and vanish — so you learn "drag to move, drag to delete" in about ten seconds, once, and never again.

Then it's yours: **tap** a channel to recall it (the QMX retunes instantly), **tap an empty slot** to store the current frequency/mode, **long-press** to edit, **drag** a channel to reorganise the grid, and **drag onto the wastebin** (bottom-right cell) to delete it.

Monitor from another room — or operate remotely. Once WiFi is configured, open <http://<tab5-ip>> in any browser for a full-featured live panadapter with mouse-driven tuning, band/mode controls, and ADIF log download. The IP is shown in the bottom status bar. See [Web UI](#).

Step 6 — FT8 (if that's your thing)

Swipe in from the **left edge** to switch to the FT8 screen. The Tab5 starts decoding 15-second slots immediately — no PC, no WSJT-X required.

1. Tap the **Preset** button and pick your band's conventional FT8 dial frequency (e.g. 14.074 MHz for 20 m).
2. Watch the decode list fill. CQ stations appear at the top sorted by SNR; exchanges and replies below.
3. To reply to a station: **hold your finger on their row** for ~250 ms. A dim highlight appears after ~80 ms so you can see which row you're targeting before the gate fires. Lift — a confirmation modal shows the exact message before anything is armed.
4. Tap **Auto Pounce** to hand the full QSO to the auto-engine (works through report → RR73 → 73 with patient retry), or **Transmit** for a single manual message.
5. To call CQ: tap **Call CQ**. The engine picks a clear audio slot, fires CQ, automatically answers the first caller, runs the full exchange, logs the QSO, and resumes calling CQ.

Every completed QSO is written to an ADIF log downloadable from the web UI. See [FT8 Transmit](#) for the full picture, including ARRL Field Day exchange mode and a no-radio-keyed practice/simulation mode.

Step 7 — Something not working?

Spectrum flat, top bar shows ---:

- Check the cable between Tab5 and QMX — almost always a charge-only cable.
- Make sure the QMX is powered on and not stuck in its own bootloader.
- Power cycle in order: Tab5 first, then QMX.

For anything else:

1. The diagnostic log is **always on** — nothing to enable.
2. Reproduce the problem (let it run a minute; power-cycle the QMX if the issue is about connection).
3. Grab the log:
 - **Over WiFi:** in the web UI take **Files ▲** → **Diagnostic download ↓**. That one item fetches **both** logs — `qmx-log.txt`, the current session held in RAM, and `qmx-log-saved.txt`, the copy persisted to flash that survives a reboot or a flat battery. If the device restarted, the saved one is the interesting file. (Directly: `/api/log` and `/api/log/saved`.)
 - **microSD:** if a card is inserted, the log is mirrored to `/qmx-panadapter/qmx-log.txt` on the card — continuously with WiFi off, or up to the start-up backup with WiFi on (alongside the always-on flash-persisted copy, which is complete either way).
 - **Over USB (no WiFi needed):** capture the serial console with `tools/capture_serial_log.ps1`.
4. Open an [issue](#) and attach the log. It includes Tab5 and QMX firmware versions plus every CAT command exchanged — usually enough to pinpoint the problem immediately.

Getting help

This whole guide is inside the firmware. No WiFi, no microSD card, no download: it works on the first boot, in a field with no signal, and it can never describe a different version than the one you are running. Swipe ← from the right edge to open the settings drawer; the top two buttons are the two ways in.

User Manual — opens where you are. Not a contents page to search: it opens the chapter covering the screen you were on — the panadapter chapter, the FT8 **receive** chapter, or the FT8 **transmit** chapter if a transmission is armed or running (someone mid-transmission is asking a different question). Inside: **Contents** is a two-column list — press and slide, and lifting your finger opens the highlighted chapter; **Back** returns to the previous page (shown only when there is one); **Exit** puts you back where you came from. Edge swipes and top-bar taps are stood down while the manual is open, so a stray touch cannot retune behind it. Holding the **User Manual** button for 3 s resets the reader; the manual itself is part of the firmware and cannot be lost.

Need guidance? — describe the symptom, not the cause. The second drawer button opens a short list headed "*What do you need help with?*", written the way you would say it out loud — "My radio is not showing up", "Nothing appears in the decode list", "It never transmits", "How do I change what my CQ says?", "Where are my contacts logged?" Pick the one that fits and the manual opens at the section that answers it. The list holds questions as well as faults, and it scrolls — keep going past the first few rows.

Rows the Tab5 can see are happening now are highlighted and floated to the top: no CAT link to the QMX, IQ mode never confirmed, an empty decode list while FT8 is running with the radio present, or WiFi switched on but not connected. WiFi switched **off** deliberately — POTA, battery — is not reported as a fault; that row stays as a normal question. **The device ranks, you choose:** a highlighted row is a suggestion, and it will never navigate for you on inference. The rows offered are scoped to the screen you opened the panel from, so FT8 never offers you spectrum symptoms.

Warnings you can tap. A warning you cannot act on is half a warning. The red "**QMX IQ mode not confirmed**" banner across the top of the screen is a button — tap it for the section on that exact fault. The "**Waiting for QMX**" message carries a small **Need help?** button; it says *help* rather than *what is wrong* on purpose, since a radio that is off is often off deliberately.

If a chapter does not answer your question, that is a documentation bug worth reporting — the wording of these rows is written from what operators actually say.

2. Panadapter

The panadapter is your primary view — a real-time spectrum analyser and waterfall for the QMX.

2.1. Layout

```
type: stack
title: The panadapter screen, top to bottom
row: 60 Top bar | frequency, mode, filter width, S-meter, zoom
row: 200 Spectrum | green trace, amber VFO cursor, tinted passband
row: 32 Frequency axis | absolute MHz labels
row: 370 Waterfall | newest row at the top, SDR gradient
row: 22 Band-plan strip | CW / Digi / Phone segments, with the visible span marked
row: 36 Status bar | battery, UTC clock, WiFi
note: amber | the VFO cursor sits at the dial frequency; in USB the passband tint runs
note: dim | in a digital mode the tint spans 150-3200 Hz, the QMX's one fixed digital -
note: dim | the top-right 200 x 120 of the spectrum is a deadzone, so a tap near the di
```



Status bar indicators:

Left to right: battery, the SD dot, the firmware version, the UTC clock, and the WiFi indicator with the network name and IP address.

Item	Meaning
Battery %	Charge level (e.g. 88%, or 88% ⚡ while charging). (limit) is appended when charging has been deliberately capped at your Battery Care setting - it reads identically to "not charging" otherwise, and this tells you it's on purpose (v1.9.4)
SD (green dot)	A card is mounted and writes are reaching it — something landed in the last 90 seconds (see Settings)
SD (yellow dot)	A card is mounted but nothing has been written lately . Either there is genuinely nothing to write, or writes are failing — see Troubleshooting
SD (grey dot, struck through)	No card in the slot. Not an error
UTC(GPS) / UTC(NTP) / UTC(FT8) / UTC(FT4)	The time source currently in charge — GPS-disciplined QMX, WiFi/SNTP, or FT8/FT4 offline sync (RTC / manual show as UTC(RTC) / UTC(MAN))
Firmware version	Currently flashed firmware version
WiFi fan icon	Link strength, at the right-hand end with the network name and IP address. The dot alone means a weak link (above 25 %), plus the first bow above 50 %, plus the second above 80 %; all three faint means connected but very weak, or off. From v1.3.4 this replaces the old -NN dBm figure — the width went to the network name, which is far more often too long to fit

2.2. Touch Controls

Tap to Tune

Tap anywhere on the spectrum or waterfall to jump to that frequency. The tap snaps to a frequency grid so you land on a sensible frequency rather than wherever your fingertip happened to be.

With a mouse the rule is simply the colour of the pointer: **white means clicking tunes, green means you are over something that will act instead** — a callsign, a top-bar control, an edge handle. Press and hold, or click and hold, and drag if you want to place the cursor before committing; a finger and a pointer behave identically.

Note - Fixed in v1.8.1

Before v1.8.1 a band across the upper part of the spectrum quietly refused to tune — the touch areas behind the top bar had been made shallower without the tune code being told, so that strip belonged to nobody. It looked as though tuning only worked near the centre frequency, while the waterfall was fine.

Callsigns from [Live Spots](#) are drawn over the spectrum and are the one exception: tapping a **callsign** tunes to that station and sets the mode, rather than tuning to the point you touched.

The snap step follows the **mode**, not the zoom level — a CW signal needs to be found to the hertz, an FT8 dial frequency does not:

Mode	Snap step
CW / CW-R	10 Hz
USB / LSB	500 Hz
DiGi / FT8 / FT4 / RTTY	500 Hz

Note - In CW the display allows for your CW offset — including when you change it

A CW signal you can hear at 700 Hz is not on the dial frequency, so the spectrum, the waterfall and tap-to-tune all allow for the radio's **CW offset**. That figure is read from the radio, and since v1.8.5 it is **re-read every few seconds while you are in CW**, so changing CW offset or CW centre on the radio itself is followed within a few seconds.

Before that it was read only once when the Tab5 connected, so if you changed it afterwards the display kept compensating by the old value and tapping a signal tuned you slightly off frequency — you would then transmit off frequency as though XIT were on. Reported by Roy KI0ER.

| AM / FM | 1 kHz |

RIT — receiving off your transmit frequency

Someone answering your call a couple of hundred hertz off your frequency is the ordinary case this is for: you want to hear them without moving your own transmit frequency, which everyone else is listening on.

1. Tap **RIT** at the top right of the spectrum. It turns amber and reads *click a signal* (in the browser) or waits for a tap.
2. Tap the caller on the spectrum or waterfall. The dial does **not** move. A dashed magenta line appears where you are now listening, in the spectrum and down the waterfall, and the filter window moves onto them.
3. It stays armed, so the next caller is another tap.
4. Tap **RIT** again to clear the offset and switch it off.

The offset is also printed beside its own marker over the waterfall, as +250 Hz, so you can read how far off you are listening without looking at the corner.

Long-press RIT to park the offset instead of clearing it. The offset is remembered and RIT switches off; long-press again and it comes back unchanged. The button reads **RIT (+250)** in brackets while an offset is parked. This is for a round robin or a net where one station is off frequency: you drop the offset when the turn passes back to the stations who are on frequency, and pick it up again without re-dialling anything (suggested by Roy KI0ER). A parked offset is discarded when you retune — it belonged to that one station.

If you never use RIT, the button can be hidden: **Settings -> Radio -> Show RIT button** (also in the web settings). It is shown by default. If an offset is actually engaged the button appears regardless of that setting — the radio listening away from your dial is not something to leave unsaid on screen.

The gold line goes on marking the **dial** — which is where you transmit — so seeing both lines at once tells you transmit has not followed your receiver. Tuning anywhere by any means clears RIT, on the assumption that you have moved on.

While RIT is armed, taps use a 10 Hz grid whatever the mode. The normal grid above exists to land the dial on a tidy frequency; RIT is a fine adjustment onto one caller's tone, and SSB's 250 Hz step would leave only a handful of usable offsets. The range is ± 500 Hz — tapping further away clamps to the limit and says so.

Available in the browser too, where a click does the same thing. The offset itself is shared, so setting it on either screen shows on both; the *armed* state is per-screen, because arming changes what a click does and a click in a browser is not a finger on the Tab5.

The grid is anchored to absolute frequency, not to where your finger first touched, so the cursor always lands on the same set of points no matter where the drag began.

Pinch to Zoom

Use two fingers to pinch in (zoom out) or pinch out (zoom in). The display centers on the passband width — in USB/LSB modes, the passband center stays on screen even when the VFO is off to the side.

Note - The darker band at each end of a zoomed view (improved in v1.8.3)

Zooming filters the signal before it is re-analysed, and that filter starts rolling off just inside the edge of what is drawn — so the outer part of a zoomed view is slightly attenuated. It is a property of the filter, not a fault, and it has behaved this way since zoom was added.

v1.8.3 doubles the length of that filter, which roughly **halves the width of the darkened band** at each side. The alternative — widening the filter instead — was rejected deliberately: it would trade the dark edge for false signals appearing where nothing is transmitting. Measured and reported by Samuel W7STF, whose own estimate of the affected width was accurate.

Pan (One-Finger Drag)

Drag horizontally with one finger to scroll the spectrum left/right. Release to tune to the new center frequency.

Band-Plan Strip

Along the bottom of the screen — just above the status bar, below the waterfall — is a thin coloured strip showing where you are within the band at a glance. Each colour zone marks the conventional segment (CW, Digi, Phone) for your selected region (auto / ITU Region 1/2/3, set in settings).

The **visible-span block** inside the strip shows the exact portion of the band the spectrum and waterfall are currently displaying — it narrows as you zoom in and shifts as you pan.

A **passband sub-block** inside the visible-span block mirrors the current filter width at band scale (grey tint), so you can see how your passband sits within the CW/Digi/Phone zones.

Tap and drag do different things, on purpose:

- **Tap** anywhere on the strip to jump to that frequency. Tapping says *go there*.
- **Drag the visible-span block** to move the window along the band. Dragging says *look there*. The block, the VFO marker and the passband all travel together as one piece, keeping the dial exactly where it sits inside the window, and the radio follows. Let go and it stays where you put it.

The filter passband and the CW/Digi/Phone labels hide while you drag and fade back in when you let go, so you can see the VFO marker arrive at its new home.

The grab area is taller than the strip looks. The strip itself is only a few millimetres, which is not a finger, so touches are accepted for about 8 mm of the waterfall directly above it as well. Tap-to-tune gives up that last centimetre of the waterfall — nothing interesting lives there, and it is the difference between catching the handle first time and getting a tune cursor instead.

Drag from the bottom bar too. The visible-span block acts as a slider handle that reaches *below* the thin strip: touch on or just under it — anywhere along the bottom status bar — and **drag sideways** to scrub the band, exactly like dragging the strip itself. This gives you a much taller grab target. It coexists with the memory-picker gesture on the same row: a **sideways** drag retunes the band-plan, while a **vertical up-swipe** still opens the memory picker.

The strip updates live as you zoom, pan, or change bands.

Outside a band, the strip reads "**Out of band — drag to tune**" in one flat colour instead of the CW/Digi/Phone zones, and returns to normal as soon as you are back inside a band. The frequency marker is hidden while you are out, because there is no band plan to position it against.

Out of band the strip becomes a coarse tuner (v1.8.3). Inside a band the strip is a *map* — where you touch is the frequency you get. Outside one there is no map to touch, so it works the other way round: a handle sits in the middle of the strip, and you **drag it off centre to move the dial**. Let go and it springs back to the middle, ready for the next pull.

- Dragging all the way to either edge moves by **half of what is currently on screen**, so two drags in the same direction overlap rather than skipping a gap. Nothing can scroll past unseen.
- It follows the zoom: zoomed in, the same drag is a finer step.
- A plain **tap** out of band does nothing on purpose — with no band plan behind it, a tapped position has no frequency to mean.

Suggested by Samuel W7STF, who pointed out that a row saying only "out of band" earns nothing when Band: --- in the top-left already tells you that.

Memory Channels

Swipe ↑ from the bottom edge to open the memory picker — a 4×8 grid of 32 channels, each free to hold any frequency/mode (not tied to a band). Each channel stores:

- Frequency
- Mode (USB, LSB, CW, DiGi)
- Label (your own name for the channel)

Each button shows the mode colour (CW = green, DiGi = teal, USB = brick red, LSB = purple) so you can tell mode at a glance without reading the label.

Recall: Tap a filled channel to immediately retune to it.

Tap an empty slot to create a new channel there directly — the frequency keypad opens straight away.

Long-press + drag a filled channel to move it to a different empty slot — no editing needed, the data follows your finger. Release on an empty slot to drop.

Long-press in place to open the editor (change name, frequency, or mode).

Entering a frequency outside the legal amateur band edges is rejected immediately with an error — the pad stays open so you can correct it without starting over.

2.3. Top Bar

Tap any item to open its selector:

Item	Purpose
14.074	Frequency. Tap to open the frequency keypad.
USB	Mode. Tap to open the picker: USB, LSB, CW, DiGi — plus AM once the connected QMX reports 1.04 or newer firmware.
2.5 kHz	Bandwidth (SSB only). Tap to choose 2.5, 2.7, 2.9, or 3.2 kHz.
S7	S-meter. Shows received signal strength. Display only — there is nothing to tap.
1.0x	Zoom level. Tap to choose x1, x2, x4, x8, x16 or x24. Pinching sets any value in between.

2.4. Spectrum & Waterfall

The **spectrum** shows signal power in dBm (default range –130 to –30 dBm) as a green curve with a dim fill. Each frame is smoothed per-bin with an exponential moving average — $\alpha = 0.4$ by default, adjustable in the drawer — which balances a stable picture against a snappy response to CW keying and SSB attack transients.

The scale labels down the right-hand edge are **worked out from the dB range you set** (v1.8.3): the firmware picks round values that fit inside your Min and Max, choosing a finer step for a narrow range. Before this they were fixed at –40 to –120 regardless, so any range other than the default was described by labels that did not belong to it (found by Samuel W7STF running –118/–13). At the default range the labels are unchanged.

The **frequency axis** shows absolute MHz labels across whatever span is on screen, refreshed on every CAT frequency update. At high zoom the labels resolve to kHz or Hz precision. With **Still Spectrum** on — the default above $\times 1$ — the axis stays put as you tune and the VFO marker moves along it; with it off, the axis is centred on the QMX VFO.

The **waterfall** runs newest row at the top, in a thermal SDR palette (black -> dark blue -> teal -> green -> yellow -> red). Four colour maps are available in the drawer:

Thermal, Viridis, Turbo and **Grayscale**.

The waterfall floor tracks the band automatically. Its black level follows a running median sampled only from bins *inside the passband*, EMA-smoothed, so the background colour follows conditions instead of sitting at a fixed anchor. Bins outside the passband are drawn darker and excluded from that calculation, so they cannot wash out dim in-band signals.

Flat-spectrum mode (drawer toggle, persisted) switches both spectrum and waterfall to a per-bin adaptive display: every bin renders as dB *above its own running noise floor*. Real signals — weak CW tones especially — stand out sharply against a calm baseline, which is why it is the mode to reach for on a noisy band. The dB-range sliders have no effect while it is on, and the axis shows relative dB above floor rather than absolute dBm.

The picture is cleared when it would otherwise mislead. Switching between Panadapter, FT8 and FT4, or changing band, clears the waterfall and resets the spectrum baseline, so stale signals from the old band cannot linger in the new one. The noise floor recalibrates and a new baseline settles in about a second.

Waterfall controls (in settings):

- **Black level** — how far above noise-floor to go black (default 9 dB)
- **Contrast** — dB span of the colour ramp (default 45 dB)
- **FFT window** — Blackman-Harris, Hann, or Nuttall (default Blackman-Harris)

Note - Adaptive floor was removed in v1.8.3

That slider could not change anything: the per-bin noise floor it blended towards is re-seeded many times a second, so both ends of it produced the same picture. It has been taken out of the drawer, as it already had been from the browser. The stored value is still kept and still exported with your configuration, so the control can come back the day the underlying floor tracking runs.

2.5. Frequency Keypad

Tap the **frequency** on the top bar to open the keypad. Enter frequency in MHz format:

- **14.074** for 14.074 MHz
- **1.832** for 1.832 MHz
- **14.074.250** for 14,074,250 Hz — a third group is hertz within the kilohertz

Each group after a **.** is padded to three digits, so **14.07** is 14.070 MHz, not 14.007. Type a number with **no . at all** and it is taken as plain hertz.

The digit layout toggles between **10 Key** (calculator order, 7-8-9 on the top row) and **Phone** (1-2-3 on the top row). Pick whichever your fingers already know — the choice persists across reboots.

Resize the keypad: Pinch it or swipe up/down on it to toggle between the normal and a compact layout. Your choice is remembered across reboots. The compact layout reveals more of the spectrum behind it.

Reposition the keypad: Drag it by the **"Enter freq"** title label (the only non-button area at the top of the panel) to move it anywhere on screen, clamped to stay fully visible. The position is remembered so it reopens exactly where you left it.

The background behind the keypad is intentionally semi-transparent (40% dim) so the spectrum and waterfall stay visible while you're entering a frequency.

Cancel and Enter are the only exits — tapping outside the keypad does nothing, so an accidental background touch cannot silently discard what you were typing.

2.6. Memory Channels

32 memory channels (4×8 grid), free to hold any frequency/mode — not tied to a band. Each stores frequency, mode, and name. Swipe up from the bottom edge to open the memory picker.

Each slot shows its **label in large text**, with the mode and frequency dimmed beneath. Mode is also colour-coded — CW (green), DiGi (teal), USB (brick red), LSB (purple) — so the grid is scannable at a glance without reading every label.

To recall a channel: Tap it. The QMX retunes immediately.

To create a new channel (empty slot): Tap the empty slot — the frequency/mode picker opens directly, pre-filled with the current VFO so you can adjust both before naming it. No long-press needed.

To edit an existing channel: Long-press it in place. Change the name, frequency, or mode, then tap **Save**.

To move a channel to a different slot: Long-press and drag it to any empty slot. Release to drop. Only the data moves — the grid positions stay fixed.

To save the current QMX frequency/mode to a slot:

1. Swipe ↑ to open the memory picker
2. Long-press the slot you want to overwrite

3. The current frequency/mode pre-fills the editor — adjust the label if you like, then tap **Save**

To delete a channel — drag it onto the wastebin: the bottom-right cell (channel 32) is a **wastebin**. Long-press any filled channel and drag it onto the wastebin to delete it (it fades out). This is the way to clear a slot you no longer want.

Example channels on first use. A brand-new device ships with a few example channels already filled in (rather than 32 blank cells), so the grid is explorable straight away. These only seed empty slots — they never overwrite anything you've saved.

First-run tour. The very first time you open the memory picker, a brief (~10-second) one-time animation shows that channels can be **dragged** to move them and **dropped on the wastebin** to delete them. It plays once and never again.

Out-of-band frequencies are rejected immediately — if you enter a frequency outside a recognised amateur band, the keypad stays open so you can correct it rather than silently saving a wrong value.

2.7. Band Presets

Tap the **band name** on the top bar to switch between configured bands. The band selector shows:

- **160m, 80m, 60m, 40m, 30m, 20m, 17m, 15m, 12m, 10m, 6m** — standard bands (whichever your radio has configured)
- **11m** — the CB segment (26.9–27.5 MHz), shown on QMX+ radios that expose it
- **Custom** — user-added bands (via settings)

On radios with many configured bands (QMX+), the picker lays the bands out in **two side-by-side columns** so every band is visible without scrolling. Selecting a band jumps to the **nearest** band centre, so closely-spaced bands like 10 m and 11 m are no longer confused for one another.

Switching bands **remembers the last frequency you visited on each band**, so you can flip between 20m and 40m without losing your place.

2.8. Zoom & Pan

The QMX sends a 48 kHz-wide slice of I/Q, so **×1 shows 48 kHz** centred on the dial. Zooming narrows that window with a true zoom-FFT — you get finer resolution, not a stretched picture.

The zoom level is displayed on the top bar (e.g. **2.0x**). Tap it to choose a preset:

Zoom	Visible span
×1	48 kHz — the whole slice
×2	24 kHz
×4	12 kHz
×8	6 kHz — CW pile-up detail
×16	3 kHz
×24	2 kHz — individual CW signals well separated

Pinching sets any value in between; double-tap returns to ×1 and re-centres.

Gesture	Effect
One-finger fast horizontal swipe	Pan ("stroll") the view — retunes to the new centre on release
Pinch (two fingers)	Zoom ×1.0 – ×24.0
Two-finger drag	Pan the zoomed window
Double-tap	Reset zoom and pan to ×1.0, centred
Top-bar Zoom -> tap	Pick a preset

One-finger pan (stroll). A fast horizontal swipe — more than about 70 px of movement within the first 250 ms of touching down — slides the spectrum and waterfall under your finger in real time, with a live frequency tooltip, and retunes to wherever you release. It works at any zoom level, alongside the two-finger pinch and pan, and it is the quickest way to move along a band without dropping into a deliberate tune-drag.

At zoom levels above $\times 1$ the display **centres on the passband**, not the VFO dial — which matters in USB and LSB, where the passband sits to one side of the carrier. It re-centres whenever you change mode, filter width or zoom, so the active receive area stays on screen, and the passband lines and frequency axis track correctly at every zoom level. What happens as you *tune* is governed by **Still Spectrum**, below.

The zoom level is **persisted**, and comes back at full zoom-FFT resolution on the next boot.

2.9. Still Spectrum

By default the spectrum and waterfall **hold still and the VFO marker moves across them**, so a signal stays where you last saw it while you tune towards it. This is how a Flex behaves, and it is what makes the waterfall readable as history: a signal's past sits directly above its present, under the frequency it belongs to, instead of the whole picture sliding sideways every time you touch the dial.

The view re-frames only when you tune far enough to need it:

Where you are	What the display does
Inside the view	nothing moves at all
Your passband reaches the screen edge	still nothing — it keeps holding, and your passband begins to slide off the edge
Half a passband width past that	a page, carrying part of the old screen across so you can see where you came from

The trigger is **your filter passband reaching the edge of the screen**, not a fixed percentage of the view. That distinction matters because the passband is not centred on the dial — in USB it runs roughly +200 to +2900 Hz — so a percentage rule re-frames too early at one edge and too late at the other, and mirrors itself in LSB. RIT is counted in, since it changes what you are actually listening to.

The display holds completely still right up to the page — it is never dragged along by the tuning. The cost is that your passband slides off the screen edge for a moment before the jump, which is why the allowance is **half** a filter width and not a whole one: long enough that a station right at the edge can still be worked, short enough that you are not tuning blind. How far you can tune between pages therefore depends on your filter — roughly a screen-width less half a filter, so about 4.7 kHz of a 6 kHz view on a 2.7 kHz SSB filter.

Picking a spot brings it into view only if it is not already usable where it is. Tap a spot that is comfortably on screen and the display does not move at all — only the VFO marker jumps to it, which is the whole point of holding still. Tap one that is off screen, or so close to an edge that your passband would not fit, and the display re-frames on it rather than leaving it stuck at the edge.

Changing mode, filter width or zoom re-centres the view on the passband, as before.

Switch it off under **Settings -> Radio & display -> Still spectrum**, and the display returns to re-centring on the dial at every step with the marker in the middle.

Warning - ×1 is always dial-centred

Holding a view still needs somewhere for it to stay while the capture window slides underneath it. At ×1 the view is already the whole 48 kHz the radio sends, so there is no room and the setting has nothing to work with. Zoom to **×2 or beyond** for the still display.

2.10. The Hatched Region

The QMX's local oscillator sits **12 kHz below the dial**. The 48 kHz it delivers therefore covers **dial–36 kHz to dial+12 kHz** — all of it real, but only 12 kHz of it above the frequency you are tuned to.

Above dial+12 kHz there is no data, and there never was. That part of the display is drawn **hatched** and does not respond to tapping, on the Tab5 and in the browser alike, with a caption saying why it is empty.

Before v1.10.5 the display filled that quarter of the ×1 view by wrapping the bottom of the band into it, and the frequency scale labelled it as dial+12 to +24. The signals shown there were real, but they were about 48 kHz from where the scale claimed — so tapping one tuned you to the wrong place entirely.

If a signal you want falls into the hatching, tune down or zoom in. The radio cannot hear above dial+12 kHz, and no display setting can change that.

2.11. Decoded CW

In **CW or CW-R**, a single line along the bottom of the waterfall shows the Morse the radio is decoding — on the Tab5 and in the browser alike.

The decoding is not done by the Tab5. **The QMX has its own CW decoder** and hands the text over the CAT link, so this costs the panadapter nothing: no audio processing, no effect on the spectrum, no effect on FT8. It works on QMX firmware 1.03 and later — there is nothing to enable on the radio for most people, since its own **Decoder -> Enable Rx** setting is on by default (*suggested by Uwe DL8UG*).

The line reads:

```
CW ~18wpm:  CQ CQ DE OZ1LAV OZ1LAV K
```

- The **green header** carries the estimated sending speed and never moves. The number is zero-padded, so the text after it does not shift as the estimate crosses ten.
- The **cyan text** is what the radio decoded, in a fixed grid of 72 characters.
- When the line fills, it **wraps and writes over the oldest end** rather than scrolling. Nothing slides sideways, so a callsign you are half-way through reading stays where it is. Two blank spaces travel ahead of the writing position — after the first wrap, that gap is what tells new text from old.

It is written to the microSD card too, if one is in the slot: everything decoded goes to `qmx-panadapter/cw-decode.txt` with a timestamp on each line, so a callsign you only half-caught can be resolved afterwards (*Michael K Johnson KZ4LY*). The line on screen holds one screenful; the card holds the session.

With WiFi on, the card is written every 30 seconds rather than continuously, so the last few characters of a session may still be in memory when you pull the card. Switch the radio off and give it half a minute if you want the very end of an over.

While the web page is open the card writes wait, because writing the card stalls the spectrum stream for several seconds on this hardware. They go through anyway after three minutes, so nothing is lost — but if you want the transcript fully up to date, close the browser tab and give it half a minute.

About the speed. It is a *throughput* figure: characters per unit time, counting the gaps between words and between overs. During a real exchange it therefore reads **lower** than the other operator is actually sending, and only approaches their true speed during continuous sending. The radio hands over finished characters, so the element timing a true speed measurement needs is already gone. That is why it is shown with a ~, and why it reads ?? rather than guessing when there is not enough to go on.

About the noise. With no signal the decoder chews on noise. Two kinds of rubbish are filtered out before anything reaches the screen:

- * — the decoder's marker for a symbol it could not resolve. Measured on a live band it was the single most common thing arriving, and it is never part of real text, so it is dropped outright.
- Long runs of **E** and **T** — the two shortest Morse symbols, so noise lands on them more often than on anything longer, and worst just after switching to CW while the decoder settles. A long run is dropped; a short one is kept, because those are real letters and words like TEST and BETTER must survive.

A dropped run leaves one space behind, so words either side of it are not welded together.

Turning it off. Settings drawer -> **Radio** -> **Show decoded CW**, beside CW centre and the transmit offset. It is on by default and the setting is shared with the browser.

2.12. S-Meter

The **Signal** field in the top bar is a tick-scale bar labelled S1, S3, S5, S7, S9, +10, +20, with a moving green bar beneath it.

- **S1 to S9** — standard S-units, -130 to -73 dBm
- **+10 / +20** — above S9, in 10 dB steps

The scale is **S9 = -73 dBm**, 6 dB per S-unit below S9 and 1 dB per unit above it.

The reading is the peak level in a ± 64 -bin window centred on the **IF-shifted VFO bin** — corrected for the QMX's +12 kHz IF offset, so it measures the signal actually under your cursor rather than the DC/local-oscillator spike sitting at the centre of the spectrum. It stays live during FT8 capture.

It is a readout, not a control: there is nothing to tap, and there is no peak-hold mode.

2.13. Settings Drawer

Swipe ← from the right edge to open the settings drawer, or tap the right grip handle.

It is grouped — **Station, Device, Radio, Network, Display, FT8, WSPR, Spectrum** — with a **BASIC / ADVANCED** button at the top. Basic shows what an operating session needs; Advanced holds everything, including the tuning and calibration controls you set once. Which sections sit in which view is yours to change, from the web UI's **Settings** -> **Tab5 config**.

Every control, group by group, is documented once in Settings — deliberately in one place rather than summarised here as well.

Next: Learn about [FT8 Receive](#) or [Web UI](#).

Touch-to-tune

Tap anywhere on the spectrum or waterfall to place the cyan tune cursor. Drag and the cursor snaps grid-point to grid-point — you can see exactly which frequency will be tuned before you lift. The snap grid is **mode-aware**:

Tune vs. pan — how your finger is read. A quick horizontal swipe (more than ~70 px within 250 ms) pans the view instead of tuning — see [Zoom & Pan](#). A slower touch-and-hold (250 ms without that much movement) locks into tune mode, after which dragging moves the snap cursor as described below. In short: swipe fast to pan, hold-then-drag to tune.

Mode	Snap step
CW / CW-R	10 Hz
USB / LSB	250 Hz
FT8 / DiGi / RTTY	500 Hz
AM	1 kHz

The grid is anchored to absolute frequency (e.g. ...200 / 300 / 400 Hz), not to your touch start point, so the cursor always lands on the same set of grid points regardless of where your finger first touches.

A floating frequency tooltip above the cursor shows the target frequency in real time while dragging. Lift → CAT `FA` command is sent and the QMX retunes. What the display does next depends on **Still spectrum**, below.

Taps always tune to exactly where you touched (snapped to the mode-aware grid above). The old **Snap to signal** option — which hunted for the strongest bin near your tap — was removed in v0.19.4; predictable tuning won.

Passband indicator. Two grey vertical lines mark your current filter edges. A faint coloured tint fills the passband. The amber VFO marker shows where the QMX is tuned; in CW mode it sits at dial + CW pitch offset so it marks the actual received tone frequency, not the suppressed carrier. The offset comes from the radio and is re-read every few seconds while you are in CW, so changing it on the radio is followed rather than leaving the display compensating by a stale figure.

Still spectrum. By default, from $\times 2$ zoom up, the spectrum and waterfall **hold still and the VFO marker moves across them**, so a signal stays where you last saw it while you tune towards it and the waterfall's history stays lined up under the frequency it belongs to.

The display is never dragged along by the dial. It holds, completely, until it pages in one step:

Where you are	What the display does
Your passband is inside the view	nothing moves — only the marker
Your passband reaches the screen edge	still nothing — it begins to slide off
Half a passband width past that	a page, carrying part of the old screen across

Half a filter width is the whole allowance, and it is a deliberate compromise: long enough that a station right at the edge can still be worked, short enough that you are not tuning blind for long. How far you get between pages depends on your filter — roughly a screen-width less half a filter, so about 4.7 kHz of a 6 kHz view on a 2.7 kHz SSB filter.

Tapping a spot moves only the VFO marker when that spot is already comfortably on screen — the picture stays put, which is the point of the feature. If the spot is off screen, or so close to an edge that your passband would not fit, the display re-frames on it instead of leaving it stranded at the edge.

Switch it off under **Settings** → **Radio & display** → **Still spectrum**. At $\times 1$ the view is already the whole 48 kHz the radio sends, so it stays centred on the dial.

The hatched region. The QMX's local oscillator sits 12 kHz below the dial, so the 48 kHz it delivers covers dial−36 kHz to dial+12 kHz — there is no data above dial+12, and that part of the display is hatched and inert. Before v1.10.5 it was filled by wrapping the bottom of the band into it and labelling it as dial+12 to +24, so tapping a signal there tuned you about 48 kHz away.

 Full chapter: tab5.lav.dk/guide/panadapter

3. Live spots

Live spots put other stations **on your spectrum**, at the frequency they are actually operating on, so you can see who is where without leaving the radio.

Two sources feed the same display:

Source	What it tells you	Default
POTA (Parks On The Air)	Park activations currently spotted, any mode	On
RBN (Reverse Beacon Network)	CW stations the skimmer network is hearing right now	Off (opt-in)

Both need WiFi. Nothing here transmits, and nothing here touches the radio until you tap a spot.

3.1. What you see

Spots are drawn **over the spectrum**, the way a FlexRadio or similar SDR shows them — the callsign sits around the middle of the spectrum with a thin vertical line dropping from it down to the frequency axis, so the line points at the frequency the station is on. The line is only 2 px wide, so the trace stays readable underneath.

Colour tells you what a spot means:

Colour	Meaning
Amber	A POTA activation
Bright green	An RBN (CW skimmer) spot
Grey	You have already worked this station on this band

Grey is the useful one: it answers "do I need this station?" at a glance. It is band-aware, so the same operator on a different band is *not* greyed out — that is a new band-slot.

Spots fade as they age. A spot is a claim about *now*, and an old one pointing at an empty frequency is worse than no spot at all:

- Under 5 minutes old — full brightness
- Around 15 minutes — about half faded

- 30 minutes — gone

The callsign and its line always fade together.

Off-screen counts. When there are spots on your band that fall outside the window you are looking at, a small count appears in the bottom corner of the spectrum — < spots (3) on the low side, spots (5) > on the high side. It says "spots" in words rather than a bare <3, because a lone number against the edge of the spectrum tells you neither what it counts nor that you can tap it. These are **scoped to the band you are on**, so the arrow never points at something on 40 m while you are on 20 m. Each is coloured like the spot it will take you to.

Crowded bands. Only so many callsigns fit legibly side by side, so on a busy segment the closest-spaced spots lose their name — and a spot with no name is not drawn at all, rather than leaving a line pointing at nothing. Stations you have **not** worked are labelled in preference to ones you have, and fresher spots in preference to older ones.

3.2. Tapping a spot

Tap a callsign and the radio tunes to it *and* switches mode:

Spot mode	Radio goes to
CW	CW
FT8, FT4, other data	DiGi
SSB	USB above 10 MHz, LSB below
Unknown	Frequency only — the mode is left alone

Bandwidth is deliberately **not** forced. The QMX keeps a filter per mode and loads it when the mode changes, so the right width follows by itself.

Tap an off-screen count (< spots (3) / spots (5) >) and you jump to the nearest spot on that side, which brings it into view. Those counts have a deliberately large touch area — the visible text is small, but the target around it is not.

Tapping the spectrum anywhere else still tunes normally, and pinch-zoom and the one-finger pan are unaffected. Only the callsigns themselves and the two counts are spot targets.

A callsign's target is the text, and nothing above or below it. That matters because a long callsign is a wide label sitting over the trace, and a click inside it goes to *that station* rather than to the frequency under your pointer. If a signal you want is behind a label, aim at the same column higher or lower in the spectrum and it tunes there normally.

In the browser, hovering a callsign shows you a marker at that station's real frequency with its name, so you can see where the click will take you before you commit. On the Tab5 the two gestures are already distinct: tuning to a point needs a brief hold, while a callsign is a quick tap.

3.3. Turning it on and off

Settings drawer (swipe in from the right edge) — **Live spots** section:

Control	Default	What it does
Live spots (POTA)	On	The whole feature. Off leaves the spectrum completely clean
Add RBN (CW skimmers)	Off	Adds RBN as a second source. Needs your callsign set
DX cluster spots	Off	Human-typed spots — the only source of SSB activity. A second connection, so opt-in
SOTA spots (summits)	Off	Summit activations from spothole.app, a volunteer-run server. Opt-in for that reason
Mode filter the spots	On	Shows only spots you can work in the mode you are in

Every one is saved and appears in the configuration file you can download and restore from the web UI, under [settings].

About the mode filter, since it is on by default and changes what you see: tapping a spot sets the **mode** as well as the frequency, so an unfiltered lane can drop a CW operator into FT8 without warning — which is exactly what happened to Michael KZ4LY, and why this exists. With it on, changing mode changes which spots are on screen, and the off-screen counts change with them. A spot whose mode is unknown is always shown, so nothing is hidden on a guess. Switch it **off** and every spot is shown, with a two-letter tag on the label (CW, SB, FT) telling you what tapping it will do — deliberately absent when the filter is on, because then every spot is already your mode.

The spots overlay belongs to the **Panadapter** page. It is not drawn on the FT8 screen.

3.4. About RBN

RBN is **off by default, on purpose**. It is a continuous global feed rather than an occasional fetch, and it arrives over a persistent connection on the part of this board that has historically been the most delicate. Off by default means it can never affect anyone who has not asked for it.

If you do switch it on:

- **Your callsign is required.** The feed asks for one when connecting; it is how RBN attributes load, not a password. Set it under **Callsign & Grid**.
 - **Only your current band is kept.** RBN reports the whole world, and the display can only show one band at a time, so spots outside the band you are on are discarded as they arrive. Changing band clears the picture and it refills within a few seconds.
 - **Duplicates are merged.** The same CQ is typically reported by ten or more skimmers; you see one entry per station, at the best reported signal.
 - **RBN spots** are held for up to **10 minutes** after any skimmer last heard them — shorter than the 30 minutes above, because an active caller is re-spotted every couple of minutes and silence means they have stopped.
 - It is the **CW/RTTY** skimmer feed. RBN runs a separate FT8/FT4 feed that the panadapter deliberately does not subscribe to — you are already decoding those yourself, far better, from the antenna.
-

3.5. About the DX cluster — where phone spots come from

RBN cannot show you an SSB station. It is a network of **automated skimmers**, and a skimmer decodes CW, RTTY, FT8 and FT4 — machine-readable modes. There is no such thing as an SSB skimmer, because no machine can recognise a callsign spoken into a microphone. So every phone station on the band is invisible to it.

A **DX cluster** is people typing. That is the whole difference, and it is why this exists as a third source:

- **Phone spots** — SSB activity you cannot see any other way.
- **Park and summit references** — a human writes POTA ES-2081 in the comment, so a cluster spot can also tag your chase in the log.
- **Everything else people bother to spot** — DX, contest activity, anything worth telling other operators about.

Switch it on with **DX cluster spots (phone)**, next to the other two sources in the settings drawer, or from the web UI. Like RBN it is **off by default**: it is a second continuous connection, and the same caution applies.

Things worth knowing:

- **Your callsign is required**, for the same reason as RBN — the node asks for one to identify the connection.
- **Only your current band is kept**, again like RBN.
- **Mode is worked out for you**. Most cluster spots carry no mode field at all. If the spotter typed one (LSB, CW, FT8) it is used; otherwise the frequency is looked up in your band plan — 14.020 is CW, 14.285 is phone. The same inference you would make reading the line yourself.
- **Skimmer spots relayed onto the cluster are ignored**. Some nodes forward RBN traffic; those entries would duplicate what RBN already gives you, so they are dropped rather than drawn twice.
- Spots are held for up to **15 minutes** — longer than RBN, because a human spot describes something slower-moving than a skimmer's automatic report.

Note - Not every node is equally busy

Cluster nodes vary enormously. In testing, one node produced two spots in four minutes while another produced seventy-five in fifteen. A quiet node looks exactly like a broken connection, so give it a few minutes before concluding anything.

3.6. About SOTA — summit activations

SOTA spots come from spothole.app, an aggregator run by Ian Renton M0TRT, used with his permission. That is worth knowing because it shapes how the Tab5 treats it:

- **Off by default**, so nobody polls somebody else's hobby server without choosing to.
- **Fetches once every two minutes**, which is plenty for activations that last an hour.
- **When it is unreachable, nothing happens**. The spots already on screen stay until they age out normally — no banner, no error, nothing to dismiss. A volunteer server being down for an afternoon is an ordinary state, not a fault in your radio.

Almost every SOTA spot carries a portable suffix — EA2GM/P rather than EA2GM — because the operator is on a summit rather than at home. That is why the callsign shown is the one that was spotted, exactly as spotted.

SOTA is nearly all CW and SSB. Of a typical sample, none are in a digital mode. So a summit will rarely appear in your FT8 log; the value of the source is seeing where the activity is on the spectrum, and being able to tap it.

3.7. Refresh and timing

- POTA is fetched about **once a minute** — spot rates on that service change on that sort of timescale, and the fetch briefly pauses the web UI's spectrum stream so the two never compete for the link.
- RBN and the DX cluster arrive continuously and are merged into the display every **10 seconds**.
- Ageing is re-evaluated every second, so spots dim and disappear on their own even when nothing new arrives.

If spots never appear at all, check in this order: WiFi connected (bottom bar), **Live spots** switched on, and — for RBN only — a callsign set.

Other stations drawn straight onto your spectrum at the frequency they are actually using — **POTA** park activations, **RBN** skimmer reports, and **DX cluster** spots, which are where phone activity comes from (no machine recognises a callsign spoken into a microphone, so SSB is invisible to RBN).

Grey means you have already worked them on that band. Press and drag to pick one, and lift to tune it with the right mode. One station is one entry, however many sources report it. Each source switches on separately in **Network** → **Live spots**.

 Full chapter: tab5.lav.dk/guide/spots

4. Spot map

The **Live Spots** lane answers "who can I work?". The **spot map** answers the other question: **who is hearing me?**

It is a full-screen map of the stations that have reported *your* signal — the CW skimmer that copied your CQ, the FT8 station whose decode of you reached PSK Reporter, the WSPR receiver that logged your beacon — each drawn as a line from your grid square to theirs.

This is Uwe DL8UG's work, contributed to the project.

Note - Always on, no setting to find

The three feeds below connect from the moment the Tab5 boots and stay connected — there is nothing to switch on. Earlier versions asked you to enable it first and only ran the feeds while the map was open; both of those were tried and dropped, in that order, on the operator's own instruction, once he found the list was still empty the first few minutes after opening it either way. See [What it costs, running all the time](#).

4.1. Opening it

Open the settings drawer and tap SelfSpotter — the button right below **Need guidance?**, near the top of the drawer. The map opens over whatever page you were on, and **Exit** (top right) closes it. A Bluetooth keyboard's `Esc` closes it too.

Note - Not a swipe any more

Earlier versions opened this with a swipe down from the top edge of the screen. That gesture collided with the top bar's own Band/Mode/BW/Zoom taps and was easy to trigger by accident, so it was replaced with the drawer button above.

The button works from the panadapter, FT8 and WSPR pages alike — the drawer itself opens the same way from any of them (swipe in from the right edge).

The header shows your **callsign, dial frequency, and the current UTC date and time** — so a screenshot of the map stands on its own without needing anything else to say when or where it was taken.

There is nothing to switch on first — the feeds have been running since boot (see below), so the map is never starting from a cold, empty world.

4.2. What feeds it

Three sources, all of them reports of **your own** transmissions:

Source	Where it comes from	How fresh
CW (RBN)	A Reverse Beacon Network skimmer copying your CQ	as it happens
Digi (PSKR)	PSK Reporter's live feed, over MQTT	as it happens
WSPR	wsprnet.org, polled every 3 minutes	trails a cycle

All three need WiFi. **None of them transmits anything** — they are lookups of what other people have already published about you.

A report stays on the map for **half an hour**, then drops off. The map is a picture of who is hearing you *now*.

The **Source** checkboxes in the left sidebar show or hide each one. **Flush**, in the header beside **Exit**, empties the map immediately so you can start a fresh picture — useful when you change band. It does not stop any of the feeds; they simply begin filling it again. *(Contributed by Uwe DL8UG. It was in the sidebar until v1.14.4.)*

4.3. The three tabs

MAP draws a line from your position to each station that reported you, over a world map — filled land, lighter than the sea, with a coastline outline on top. Line colour matches the source: **blue** for CW, **amber** for digital, **green** for WSPR. A line older than 30 minutes fades rather than disappearing, so a quiet stretch still shows what was heard recently. Your own position is a dot, drawn on top of everything.

- **Drag** with one finger to pan.
- **Pinch** with two fingers to zoom, up to 50×. Zoom is anchored on your own station, so your QTH stays put while the world grows around it.

LIST is the same data as a table — **RECEIVER, GRID, COUNTRY, MODE, BAND, FREQUENCY, SNR, KM** and **AGE** — when you want the numbers rather than the picture. Every column is sortable; tap a header to sort by it.

GRID is the locator the receiving station itself sent, not one worked backwards from a position, so it is blank for CW skimmers: they report a callsign and not a location.

COUNTRY names the *country*, which can differ from the DXCC entity the map plots — a Hawaiian station's marker sits on Hawaii, while its country reads United States.

CONDITIONS is HF propagation from hamqsl.com: day and night ratings per band group, plus solar flux, A and K index, sunspot number, geomagnetic field and signal noise. It refreshes about hourly, which is as often as the source updates.

4.4. What you must set first

Your grid square. The map draws lines *from* you, so without it there is nothing to draw from — the sidebar says so in red, and the map stays empty. Set it in **Settings -> Station -> Callsign & Grid square**.

Your callsign, for the same reason: it is what the three feeds are asked about.

QRZ.com callbook credentials are optional. RBN reports name the skimmer that heard you, not where it is, so the map looks that up on QRZ to place it. Without credentials an RBN line still gets drawn, using the centre of the skimmer's DXCC entity — right country, wrong town. PSK Reporter and WSPR carry a grid square in the report itself and never need the lookup.

These are set **in the web UI, not on the Tab5** — open `http://<tab5-ip>` in a browser and use **Miscellaneous -> Set QRZ Callbook login**. They are your QRZ.com username and password for the Callsign Lookup service, which is a different thing from the QRZ Logbook API key used for uploading contacts.

4.5. What it costs, running all the time

Worth knowing, since there is no longer a setting to weigh this against:

It holds a connection on your behalf, permanently. From boot, the Tab5 holds a live session to PSK Reporter's broker subscribed to your callsign, and polls RBN and wsprnet. That used to be something you asked for first; now it starts with everything else.

It costs memory that other things need. Measured on the bench, running the feeds costs about 6.6 KB of internal RAM and 2.6 KB of the DMA pool — and that DMA pool is the one that microSD mounts, USB and encrypted uploads draw on when they need it. Every unit pays this now, whether or not the map is ever opened.

The feeds run whether the map is on screen or not — opening it doesn't start them and closing it doesn't stop them — so the picture is already populated with whatever has come in since boot the first time you look, rather than starting from nothing.

4.6. If the map stays empty

Nobody has heard you yet. The commonest answer, and not a fault: the map only fills once you have actually transmitted and somebody has reported it. Call CQ, or let WSPR or FT8 run for a few cycles, then look again.

No grid square set — the sidebar says so in red. See section 4.

WiFi is down. All three feeds need it.

Only some sources are ticked. Check the **Source** boxes in the sidebar.

You are running CW but RBN spots are absent — a skimmer has to actually copy you. RBN coverage is thinner on some bands and at some hours than others.

Live spots answer "who can I work?". The spot map answers the other question: **who is hearing me?** A full-screen map of the stations that reported *your* signal — the CW skimmer that copied your CQ, the FT8 station whose decode of you reached PSK Reporter, the WSPR receiver that logged your beacon — each a line from your grid square to theirs. Contributed by **Uwe DL8UG**.

Tap SelfSpotter in the settings drawer (right below "Need guidance?") to open it, from any page. Tabs for the map, a table of the same data, and HF band conditions. Drag to pan, pinch to zoom around your own QTH. The LIST tab's table is sortable: **RECEIVER, GRID, COUNTRY, MODE, BAND, FREQUENCY, SNR, KM** and **AGE**. **GRID** is the locator the receiving station itself sent, so it is blank for CW skimmers, which report a callsign and not a location. **COUNTRY** comes from Uwe DL8UG's 18,365-prefix table and names the *country* a spotting station belongs to, which can differ from the DXCC entity its own marker uses on the map (Hawaii plots at its own coordinates but reads United States in this column).

Always running, no setting to find. The feeds (RBN, PSK Reporter, wsprnet) connect from the moment the Tab5 boots and stay connected the whole session — there used to be an opt-in switch for this, dropped once it became clear the map was worth having populated the moment you looked. Needs your callsign and grid square.

 Full chapter: tab5.lav.dk/guide/spot-map

5. Web UI

With the Tab5 on WiFi, open `http://<tab5-ip>` in any modern browser. The IP is shown in the bottom status bar on the Tab5.

The browser panadapter is a full-featured view in its own right — not just a window onto the Tab5. On a larger monitor you get more spectrum history, a bigger waterfall canvas, and mouse controls that are faster than touch for precise tuning. It shows live spectrum at ≈ 10 fps via WebSocket, full waterfall history (~ 50 s), the same thermal palette and floor maths, a graphical S-meter, and a top bar with Band / Mode / BW / Zoom controls. The bottom bar shows battery percentage, firmware version, a live UTC clock, and WiFi SSID + RSSI. To its right: download/upload buttons (ADIF, QRZ, eQSL — see [QSO logging](#)), **Files** ▲ → **Diagnostic download** ↓ for the diagnostic logs, **Config** ↓ / **Config** ↑ to back up / restore / edit all settings (see [Config backup, restore & edit](#)), and **Tab5Shot** which opens a live `/ss.bmp` screenshot in a new tab.

microSD file browser (new in v1.3.0). **Files** → **SD Files** in the bottom bar opens `http://<tab5-ip>/files` — browse the microSD card from any computer without pulling it: download your logs and config backups, upload files, delete. Card access is coordinated with the WiFi link the same way the automatic backup is, so it's safe to use mid-session.


Eject microSD and Restart the Tab5 (new in v1.16.11). Both are in the settings drawer. **Eject microSD** finishes the write in progress, closes the card and tells you when it is safe to pull it out — in a window that stays until you close it, not a message that fades while you are looking at the card slot. **Restart the Tab5** reboots cleanly from the screen. The card is also released automatically before a firmware update: before v1.16.11 a reset caught the card mid-transaction and, since the Tab5 cannot power the card down on its own, it stayed unreachable until the whole unit was powered off.

Remote QMX power-cycle relay (v1.10.9, sequenced in this release). Miscellaneous

▲ → **Remote relay** pulses one of two Tab5 GPIO pins (GPIO53 or GPIO54 — the board's otherwise-unused Grove/EXT header). Drive an optoisolator from the pin and take its output to your QMX's PWR_ON/GND **signals**, and you can power-cycle the radio from anywhere on the LAN — the missing piece for a fully remote firmware upgrade, since a Tab5 flash always needs the QMX power-cycled afterward. **Pulse** fires a single pulse for the chosen duration and level — since PWR_ON is a toggle, this turns the QMX off *or* back on with no way to tell which from the LAN. **Power-cycle QMX** runs the whole sequence instead: off-pulse, wait, on-pulse, wait, then checks over CAT and tells you "QMX responded" or "no response from QMX". Scriptable as `POST /api/cmd`

`{"action":"gpio_pulse", ...}` (single pulse) or `{"action":"gpio_power_cycle", "pin":53, "level":1, "ms":1000}` (the full sequence).

Building the interface — Randy N4OPI's design, published here with his permission. Two components and a connector, plus one modification inside the radio.

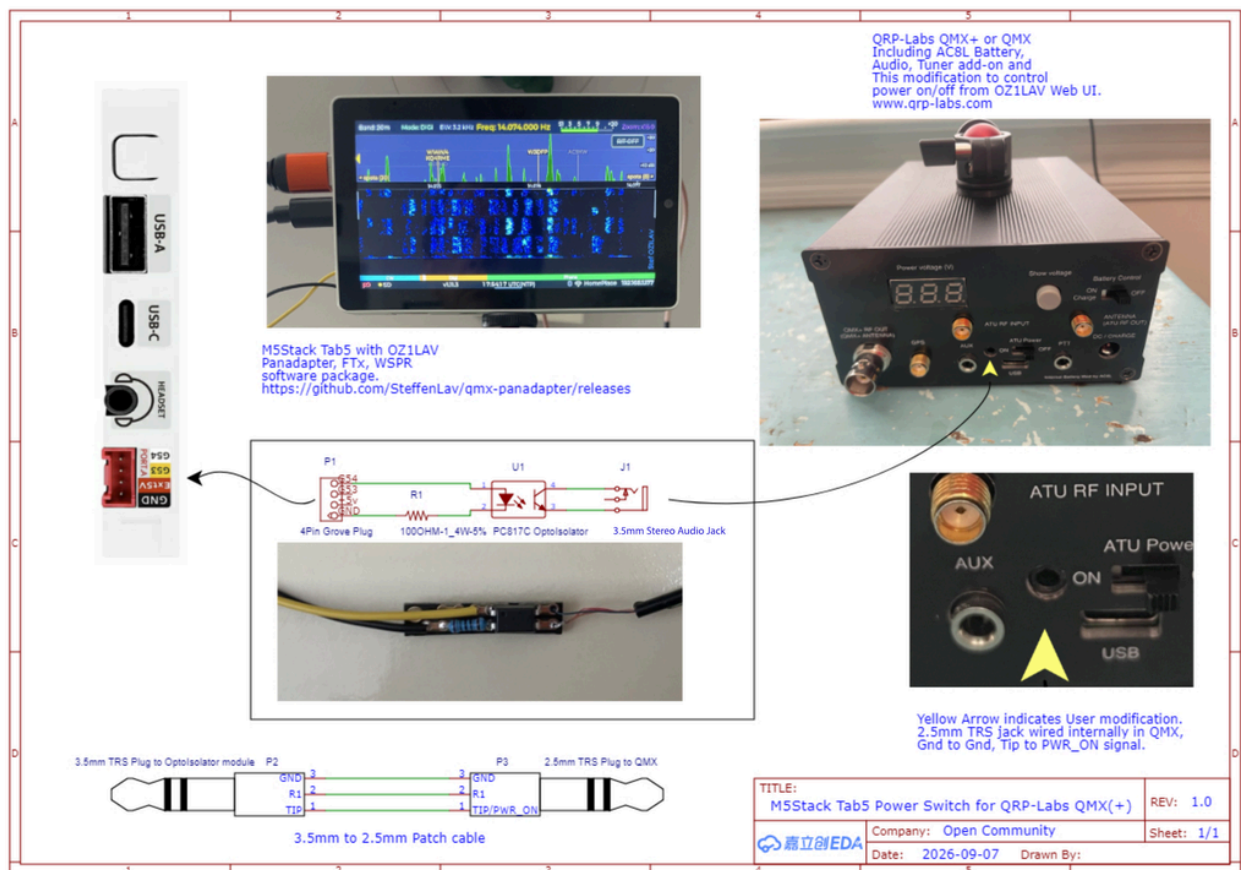

The QMX has **no PWR_ON/GND jack from the factory** — fitting one is the job. Wire a **2.5 mm TRS jack** into the case with **tip to PWR_ON** and **sleeve to GND** (Randy brought his out on the rear panel beside the ATU RF input). Then build the interface: a **4-pin Grove plug** into the Tab5's EXT socket, the chosen pin (**G53** or **G54**) through **R1, 100 Ω ¼ W** into a **PC817C optoisolator**, and the optoisolator's phototransistor across **J1, a 3.5 mm stereo audio jack** on the module, which reaches the radio's 2.5 mm jack through a **3.5 mm to 2.5 mm TRS patch lead** — so a pulse briefly connects PWR_ON to GND. The EXT 5V pin is unused, and the phototransistor side is polarity-sensitive — follow the schematic. Randy: *"with just 2 components it could just as easily be connected point to point and sealed up inside a piece of heatshrink tubing. Make sure you insulate your wires so the heatshrink doesn't squeeze them together and create a short."* Settings that work: the pin you wired, active level **High, 2000 ms**.

The optoisolator is what keeps the Tab5 and the radio electrically apart, and it is why only **G53/G54** are offered: they sit on a *keyed* connector and are held as driven outputs from boot. The bottom-edge Dupont pins would give a neater cable run, but that connector is unkeyed and sits beside 12 V IN — Randy's own reason for dropping the idea — and G0/G1 are the snap-on keyboard's I2C bus.

Whole-band plan strip & adjustable split (new in v0.20.0). Along the bottom of the browser view (above the status bar), a colour-coded CW/Digi/Phone strip spans the entire band with a draggable "visible window" (drag or tap to retune) and a VFO marker, mirroring the Tab5's own strip. Drag the divider between the spectrum and the waterfall to give either more room — the split is remembered in the browser. **Tab5Shot** now captures any open pop-up (band/mode dropdown) too, and the frequency keypad is draggable with a standard 10-key layout.

In FT8/FT4 mode the live stream pauses (new in v0.20.0). The browser stops streaming the spectrum/waterfall and shows a notice plus the log and upload controls instead. While you're operating digital modes the stream would compete with the on-device decoder and the WiFi link, so pausing it keeps FT8 decoding and WiFi noticeably steadier. Switch the Tab5 back to Panadapter mode and the stream resumes automatically.

Live TX status, and Call CQ from the browser. In FT8/FT4 mode that same panel carries a **TX status banner** (v1.3.6) mirroring the Tab5's own label — red while transmitting including the "call 2 of 4" counter, amber armed, green on QSO complete, orange on timeout, plus the persistent "CQ stopped after N calls - no answer"; the browser tab title shows a red dot while transmitting, visible even in a background tab. Under it is a **Call CQ** button (v1.5.0, Dennis WN4FLA), so a CQ run that timed out or reached its call limit can be restarted without walking back to the radio. It **confirms first** — it keys the radio, and a mis-click from another room should not put a carrier on the air — then uses exactly what the Tab5 would: the active CQ preset, the current TX tone (honouring TX Hold) and the TXCQ ANY/EVEN/ODD parity, sharing one code path with the Tab5's own button so the two cannot drift. The request is handed to the display task, so the button greys out for a moment; watch the banner rather than the button. A request arriving while the Tab5 is not in FT8 is discarded, never queued. Replies and pounces are still initiated on the Tab5, where the decode list is.

Click or drag to tune. Click or drag on the spectrum or waterfall — a cyan cursor appears with a live frequency readout and commits on release.

Mouse-wheel to pan or tune. Rolling the mouse wheel over the spectrum or waterfall **pans** the view when zoomed in, letting you survey the band without touching the Tab5. At zoom ×1 the wheel **tunes** with mode-aware snap (CW 10 Hz, SSB 500 Hz, DiGi 100 Hz, AM 1 kHz).

Band / Mode / BW / Zoom dropdown pills in the top bar send commands to the QMX via `/api/cmd` — the same effect as using the Tab5 top bar.

Zoom sync. The browser renders the same zoomed window as the Tab5.

QSO log — download, view, edit. Once you have logged at least one completed FT8 QSO, a "**QSO Logs (N) ▲**" menu appears in the bottom bar of the web UI. **ADIF download** ↓ fetches your `qso.adf` file directly. **View / edit log** (v1.3.5) opens the whole log as a table in the browser — click any column header to sort (click again to reverse; sorting by date groups an activation's QSOs together), delete a single record with the ✕ on its row, or **Delete all** to clear the log (it asks you to type `DELETE`, because there is no undo — download the ADIF first if you want a copy). **Search** (v1.11.0) filters as you type across callsign, band, mode, date, grid and reference, and says plainly when nothing matches — the answer to "have I worked this one". **Tick rows and press Export selected** to save just those contacts as their own ADIF file; the header tick box takes everything currently shown, so a search plus one tick gives you a single day, band or park. The menu is only shown when the log contains data.

Three columns can be corrected by clicking them: the two **reports**, and **Their ref** — the park or summit the *other* station was activating. That last one is how a Park-to-Park contact gets into the log at all: while you are operating, the other activator's park number is on the POTA spots page on your phone and not in anything the radio sends, so you note it down and enter it when you get home (*Don Adams WB0LQW*). It also fills itself in when the contact came from a spot, and it does that whether or not you were activating — the ADIF field records *their* activity, and a hunter's log should say which park they worked. It is Park-to-Park only when you were in a park as well, which is why the column is not called that. **An empty cell is not a fault:** the reference is matched from the POTA spot feed on the exact callsign, and not every digital-mode activator registers the activation — some just start calling `CQ POTA` — so where there is no spot there is no reference, which is better than a wrong one (*Don Adams WB0LQW*). Type the reference alone — `US-1241`, `G/LD-049`, `DLFF-0123` — and the Tab5 works out the programme (POTA, SOTA or WWFF) from its shape and writes both `SIG` and `SIG_INFO`; clear the reference and both go again. Nothing else is editable: callsign, band, mode, date and time are what QRZ, eQSL and LoTW match a contact on, so a wrong one is a delete-and-re-log.

QRZ / eQSL upload. Two more buttons appear alongside the ADIF link once you have logged QSOs — see [QSO logging](#) for the full picture.

Config backup, restore & edit

The **Config** ↓ / **Config** ↑ buttons in the bottom bar let you save every setting to a plain text file, edit it on your PC, restore it, or share parts of it.

- **Config** ↓ downloads `qmx-config.txt` — a human-readable [INI-style](#) file with everything the Tab5 remembers, grouped into sections:
 - `[settings]` — callsign, grid, WiFi SSID/password, CW pitch, IF trim, IQ balance, flat-spectrum, zoom, colour map, brightness, dB range, EMA, GPS toggle, keypad layout, QRZ key, eQSL user/pass.
 - `[cq]` — the three FT8 CQ-message presets and which is active.
 - `[ft8_filters]` — the CQ-run include/exclude filter terms and toggles.
 - `[memories]` — the 32 memory channels, one per line: `slot = freq_hz, mode, label`.
- **Config** ↑ picks an edited file and **merges** it back: only the keys and sections present in the file are changed — everything else is left as-is. Unknown keys are ignored (so a file from a newer firmware still loads). Memory channels apply immediately; other settings take effect after a restart.

Three things you can do with it:

1. **Back up before a clean flash.** Hit **Config** ↓ first, do the clean/erase flash, then **Config** ↑ to restore everything in seconds — instead of re-typing it all on glass.
2. **Edit in a text editor instead of on the touchscreen.** Faster for callsign, grid, CQ messages, or punching in a batch of memory channels.
3. **Share a band plan.** Copy just the `[memories]` section into a message — another operator pastes it into their file and uploads it to get the same channels (their other settings untouched).

The downloaded file contains your **WiFi password** and **QRZ/eQSL credentials in clear text** (so it works as a full backup). Keep it private; strip those lines before sharing a file with anyone.

Endpoints

Endpoint	Method	Returns
/	GET	Browser panadapter (HTML)
/api/status	GET	JSON status (see below)
/api/cmd	POST	Send Band/Mode/BW/Zoom commands
/api/log	GET	Diagnostic log download (qmx-log.txt)
/api/log/saved	GET	Flash-persisted diagnostic log from before the last reboot/power-off
/api/adif	GET	ADIF QSO log download (qso.adf)
/api/adif/clear	POST	Wipe ADIF log and worked-call cache; resets the QRZ/eQSL/LotW upload positions
/api/adif/delete	POST	Delete one record: ?idx=<n>&call=<CALL> — both must match the record or it answers 409
/api/qrz_key	POST	Save QRZ Logbook API key (body = raw key text)
/api/qrz_upload	POST	Upload pending QSOs to QRZ Logbook; returns {uploaded, failed, error}
/api/eqsl_creds	POST	Save eQSL username/password (JSON body {"user", "pswd"})
/api/eqsl_upload	POST	Upload pending QSOs to eQSL (batched); returns {uploaded, failed, error}
/api/config	GET	Download all settings + memory channels as editable INI (qmx-config.txt)
/api/config	POST	Upload an INI config; merges into NVS; returns {applied}
/ss.bmp	GET	1280×720 RGB565 BMP screenshot
/ws	WS	Binary spectrum stream (~10 fps)

/api/status

```
{
  "battery": { "level": 100, "mv": 8320, "charging": true, "present": true,
               "limit": false },
  "wifi": { "ssid": "MyNet", "rssi": -44, "ip": "192.168.1.213" },
  "freq_hz": 14074000,
  "mode": "USB",
  "band": "20m",
  "passband_hz": 2700,
  "signal_dbm": -87.4,
  "zoom": 1.0,
  "pan_bins": 0,
  "flat_mode": false,
  "utc_epoch": 1750000000,
  "qso_count": 12,
  "qrz_key_set": false,
  "eqsl_creds_set": false,
  "tab5_fw": "v0.18.8",
  "qmx_fw": "1_03_002QMX"
}
```

Polled at 1 Hz by the landing page; safe to consume from monitoring scripts, home automation, etc. `qmx_fw` is read from the QMX via the `vn`; CAT command at link-up (empty until the radio responds). `signal_dbm` is the peak dBm around the IF-shifted VFO bin (null if DSP has no data yet). `qrz_key_set` / `eqsl_creds_set` tell the web UI whether to prompt for credentials before the next upload.

/ws — binary spectrum WebSocket

Single-client endpoint. Each binary frame is 1026 bytes:

Bytes	Meaning
0	Frame type: <code>0x01</code> = spectrum
1	Zoom decimation factor (1 = base 1024-bin spectrum, >1 = zoom-FFT with that decimation)
2–1025	1024 unsigned bytes, one per bin, quantised –130 dBm (0) to –30 dBm (255)

Bins are pre-shifted server-side so byte 2 is the leftmost screen pixel. Push rate ≈ 10 fps.

Screenshots

```
Invoke-WebRequest -Uri "http://192.168.1.213/ss.bmp" -OutFile screenshot.bmp
```

Who is hearing me

(needs WiFi) **Miscellaneous** → **Who is hearing me** asks PSK Reporter which receivers have copied **your** callsign recently, and lists them by distance with the country, bearing, and the signal report they gave you.

This is the reverse of the reports the panadapter *sends*, and the two are separate settings — you can have either without the other. Switch it on in the browser under **Settings** → **Spots & reporting**; there is deliberately no Tab5 control, because the answer is a table of distances and bearings that wants a screen you are already sitting in front of.

It answers the one question no amount of local processing can: **am I actually getting out?** The valuable case is the mismatch. Stations you can hear that cannot hear you is a transmit-side problem — antenna, power, a bad connector — and from the receiving side alone that looks exactly like a dead band.

It is read-only, and asks at most once every five minutes because that is the rate PSK Reporter requests. An empty list is the normal answer until you have transmitted: nobody can report hearing a station that has not been on the air.

6. FT8 Receive

The panadapter includes **on-device FT8 and FT4 decoders** with real-time spectrum waterfall and a live list of heard stations.

6.1. FT8 & FT4 View

Swipe → from the left edge to reach the FT8/FT4 view (the edge cycles Panadapter -> FT8/FT4/JS8 -> WSPR). The same decode list and waterfall serve all three modes — FT8, FT4 and **JS8** — switched with the **Preset** dropdown in the left pane (top). JS8 adds a Conversation tab and free-text sending; see [JS8](#).

FT4 notes:

- Decodes refresh roughly twice as fast as FT8 because slots are 7.5 seconds

- Slot countdown shows 7.5 s instead of 15 s
- All filtering, priority, and auto-reply features work identically in FT4
- Time-sync from decoded signal timing works in both FT4 and FT8 (the bottom-bar clock shows UTC(FT4) when synced from an FT4 decode)
- **v0.19.4 made FT4 reliable**: a memory-placement fault previously killed decoding on every other slot (FT8's longer slots mostly hid it), the EVEN/ODD slot markers were on the wrong 15-second grid, and the slot clock could visibly jump between slots — all fixed; if FT4 seemed deaf or erratic on an earlier version, update the firmware

You'll see:

- **Decode list** (left pane) — every station heard, ordered so the ones that matter to you are at the top (see [Decode List](#) below)
- **Waterfall** (right pane) — same real-time spectrum as panadapter mode
- **Call CQ button** — start a CQ (requires QMX on the air)
- **Options button** — include/exclude stations, prioritise by SNR/distance, show only CQ callers

6.2. Decode List

The list shows every decoded FT8 message:

Column	Meaning
SL	Slot parity: E (blue) or O (amber)
CALL	Their callsign
MESSAGE	The full decoded message text
COUNTRY	Country, spelled out where it fits and shortened where it does not - never a 3-letter code (v1.15.0)
SNR	Signal-to-noise estimate, colour-banded by strength
ZONE	The station's audio tone within the FT8 passband (v1.3.1)
DT	Slot-timing offset in seconds, relative to the band — an on-time station reads ~0.0 (v1.3.1)
KM / MI	Great-circle distance from your grid. A ~ means the station never sent a grid, so the distance is worked out from its country and is approximate (v1.14.4)
HRD	Times decoded since last appearance

The **BRG** column was removed in v1.14.4 to make room for spelled-out country names; a bearing is derivable from the distance and the map.

All three lists — this one, the SelfSpotter LIST tab and WSPR — use the same column order and capitalised headings since v1.15.1, so the same kind of information sits in the same place whichever screen you are on.

Own call highlight — your callsign is shown in **inverted colours** (red fill, white text) so you spot replies to you instantly.

How the list is ordered. Top to bottom:

1. **The station you are working** (asked for by Don WB0LQW) — during an exchange there are several transmissions each way, and the partner's messages used to sort down-screen where you had to hunt for them. Now *everything* from them stays at the top: their reply to you, their CQ while you are mid-exchange, and a message they send to a third station — which is exactly when you most want to see it. It covers a hand-typed reply as well as an automatic exchange, and matches on their **callsign**, so a third station merely mentioning them is not promoted. It releases the moment the QSO completes (their closing 73 contains your callsign, so rule 2 keeps it up there anyway).
2. **Messages addressed to you** — anything containing your callsign.
3. **CQ calls**.
4. **Everything else, strongest signal first**.

Stale entries — the list is a live picture of who's on frequency now; stations not heard again within **2 minutes** drop off automatically.

During your own CQ run — stations transmitting on *your* transmit slot (which you can't hear while transmitting) are hidden from the list and return when the run ends; other stations' CQ rows are hidden during a run as before.

Nonstandard callsigns — special-event and compound calls now resolve to the full callsign instead of showing <...>, once the station has been heard in full.

6.3. FT8 Options

Tap the **Options** button to open the Options modal:

- **Include callsigns** — only show these calls (space or comma-separated)
- **Include callsigns containing** — show any call with these substrings (e.g., /P for portable)
- **Exclude callsigns** — hide these calls
- **Exclude if contains** — hide any call matching these substrings
- **Exclude worked before** — skip calls you've already logged QSOs with
- **Show only CQ callers** — hide replies, show only CQ messages
- **Show CQs in my run** — off by default. While you are running your own CQ, other stations' plain CQ calls are hidden so that replies addressed to you are not buried under unrelated traffic. Turn this on to keep seeing them, so you can spot a station worth breaking off for during your listening slot. It changes the list only; it does not change who the robot or Auto-work-pileup will answer
- **Skip TX1** — when you pounce a station, open with your signal report straight away instead of the grid exchange, for a quicker QSO (falls back to the normal grid exchange if the station has dropped out of the decode list)

- **Allow grey-listing** — off by default. A station that times out two of your pounces in a row is set aside: the robot and Auto-work-pileup skip it, its decode row turns **violet**, and tapping it offers to clear it from the grey-list instead of opening the TX dialog. Handy on a busy band where one station simply never comes back. The list is held in memory only and forgotten at power-off
- **Auto-reply priority** — Strongest SNR, Weakest SNR, Most distant grid
- **Robot mode** — auto-answer CQ (disabled by default; see [FT8 Transmit](#))

All filters persist across sessions. Toggle any filter on/off to enable or disable it without erasing the criteria.

6.4. Decoding Performance

On a reasonably busy band, expect roughly **15–20 distinct messages per slot** in either mode. That is messages, not contacts — one QSO produces several.

Decoding uses **both processor cores**: the decode task works one half of the candidate list on core 1 while a helper takes the other half on core 0, and both run against a waterfall that was built during the capture rather than after it. That is what makes the results appear a second or two into the following slot instead of most of the way through it.

What limits it:

- **LDPC error correction is heavy**, and most candidates the search finds are false alarms that use the full iteration budget before being discarded
- **The spectrum and waterfall** are being drawn from the same audio at the same time
- **USB audio must be serviced continuously** — a gap there costs decodes far more than a slow decoder does

FT4 advantage: because FT4 slots are half as long (7.5 s vs 15 s), you get refresh feedback roughly twice as fast, which feels snappier on a crowded band even though the per-slot decode count is the same.

The panadapter prioritises **receive latency** (decode every 15 s, not accumulate) over volume.

6.5. Real-Time Waterfall

Unlike WSJT-X (which buffers a whole 15-second capture), the Tab5 **builds the waterfall on-the-fly** as audio arrives. You see CW and other traffic in real time, and FT8 stations appear instantly as their symbol blocks are decoded.

The waterfall also shows **non-FT8 activity**:

- CW (carrier lines)
- SSB (broader vertical smears)
- RTTY (FSK sidebands)
- Interference (wideband noise)

6.6. Tap to Reply

Tap any FT8 row in the decode list to **prepare a reply**:

1. A confirmation modal pops up showing your message
2. You can review the target callsign, grid, and SNR
3. Tap **Transmit** to send, or **Cancel** to abort

The reply always follows FT8 protocol (correct parity, proper message sequence) — you can't accidentally send a garbled or out-of-order message.

Pile-up list. If a station answers you while you're busy with another contact, they used to disappear from the list once they stopped transmitting. They're now remembered in a **Pileup** list — the **ADIF-log** button on the FT8 screen turns into a **Pileup** button (a different colour) whenever callers are waiting. Tap it to see who's called you, tap a station to work them, or tap the ✕ to dismiss one. See [FT8 Transmit](#) for the full workflow.

6.7. Auto-Reply (Robot Mode)

 **Experimental** — enabled via a checkbox in the Options modal.

When robot mode is on, the Tab5 **automatically replies to CQ** without waiting for you to tap. It scans each FT8 slot for CQ callers matching your filters, picks the highest-priority station, and sends a full QSO exchange (TX1 -> wait for report -> TX2 -> wait for RR73 -> TX3). Everything is logged to ADIF.

Important: Robot mode **keys the QMX for real** — your signal goes on the air. Never leave it unattended unless you're confident in your filters and your station is in a safe state.

6.8. Search & Window

The decoder uses an **FFT-based search window** to find candidate tone blocks, at whichever tone spacing the active mode uses — **6.25 Hz** for FT8's 8 tones, **20.83 Hz** for FT4's 4.

Frequency stability: The QMX's USB audio clock isn't bit-exact 48 kHz, so decodes slide slowly over time. The panadapter **re-locks to UTC boundaries every 15 seconds** (the slot boundary), preventing long-term drift.

6.9. Time Sync for FT8

FT8 requires **UTC time accurate to ± 1 second** for slot synchronisation. The panadapter gets time from:

1. **WiFi + SNTP** (if available) — most accurate, syncs every ~hour
2. **Tab5 RTC** (if set) — accurate to ± 1 min, no internet needed (POTA)
3. **QMX GPS** (if QMX has GPS) — re-syncs the RTC every 5 minutes
4. **Manual** — you can set time via the settings drawer

See [Time Sync](#) for details.

Next: Learn about [FT8 Transmit](#) or go back to [Panadapter](#).

SL	CALL	MESSAGE	COUNTRY	SNR	KM	BRG	HRD
○	DL5DQZ	CQ DL5DQZ JO61	Germany	-5 dB	472	175°	8
○	SQ9FVE	CQ SQ9FVE JO90	Poland	-6 dB	726	140°	21
○	PD0XTL	CQ PD0XTL JO21	Netherlands	-7 dB	680	229°	8
○	IK2UJS	CQ IK2UJS JN55	Italy	-14 dB	1142	186°	24
○	IK4LZH	CQ IK4LZH JN54	Italy	-18 dB	1253	185°	2
○	PD1ADA	G0ABI PD1ADA JO21	Netherlands	+0 dB	680	229°	7
○	DL9AJ	XE1YD DL9AJ JO52	Germany	-1 dB	371	195°	4
○	F8BJE	W0VIX F8BJE JN27	France	-9 dB	1049	212°	5
○	DC1AVL	TA4INO DC1AVL JO30	Germany	-9 dB	686	214°	4
○	G0ANH	DL6RDE G0ANH 73	England	-14 dB	--	--	1
○	F1PSX	N5CH F1PSX JN08	France	-14 dB	1119	229°	5
○	F5OYA/P	EA5PC F5OYA/P JN13	France	-15 dB	1518	210°	2
○	MI9PBM	G8IXM MI9PBM -07	N. Ireland	-15 dB	--	--	19
○	UB8CPH	G6INI UB8CPH -10	Russia	-16 dB	--	--	10
○	S57XX	RA1QX S57XX 73	Slovenia	-16 dB	--	--	9
○	<...>	TM150BEL <...> 73	--	-18 dB	--	--	1

Live FT8 reception on 20 m (v0.15.7). Left pane: MODE / Preset freq / UTC / slot countdown with parity and progress bar / TX parity preference / operator identity / Call CQ / decode summary. Right pane: scrollable decode list.

Swipe in from the **left edge** to switch to the FT8 screen. The Tab5 decodes 15-second FT8 slots directly on the ESP32-P4 — no PC, no WSJT-X.

Prerequisites

- **WiFi configured** — recommended for accurate UTC time. Without it the Tab5 falls back to its supercap RTC or the QMX clock. See [Time sync](#).
- **Callsign and grid** set in the drawer → **Identity** if you want distance/bearing columns or plan to transmit.

The FT8 screen

Left pane: MODE label · **Preset** frequency button (tap to pick a band's conventional FT8 dial frequency) · UTC clock · 15-second slot countdown with current parity (EVEN blue / ODD amber) and a gliding progress bar · **live mini occupancy strip** (the audio window as 50 Hz cells, same data and colours as the tone picker) · **TXCQ ANY / EVEN / ODD** parity-preference button (one button, cycles) · **TX nnnn Hz** tone button · **Call CQ** button · last-slot decode summary and TX status.

Right pane — decode list:

Column	Content
SL	Slot parity: E (blue, :00/:30) or O (amber, :15/:45)
CALL	Extracted callsign
MESSAGE	Full decoded FT8 message text
COUNTRY	Country, spelled out where it fits and shortened where it does not - never a 3-letter code. 227 DXCC entities, with 18,365 further prefixes resolved at country level
SNR	FFT-based estimate, colour-banded: green ≥ 0 / white $-5..-1$ / orange $-15..-6$ / grey < -15
DT	Slot-timing offset in seconds, relative to the band — an on-time station reads ~ 0.0
HZ	The station's audio tone (its offset within the FT8 passband)
KM	Great-circle distance from your grid. A leading $\sim$ means the station sent no grid and the distance comes from its country — approximate, and marked as such
HRD	Times decoded since last appearance

CQ calls always appear at the top sorted strongest-SNR first; all other rows follow by SNR descending.

Row colour scheme (CALL + MESSAGE columns): **white** for ordinary traffic, **green** for plain CQ calls, **dim grey** for callsigns already worked **on the current band** (a station you worked on 20 m still shows normally on 40 m — see [Reply filter](#) for hiding them entirely), and **inverted red fill + white text** for any message containing your own callsign — your highest-priority rows literally pop off the screen instead of relying on red-on-black text, which field testing found hard to read at a glance.

Live view. Stations not re-decoded within 60 seconds drop off the list automatically, even while the band is quiet — the list is who's on frequency *now*, not a cumulative history. (The "Active: N" counter that used to say so was dropped in v1.3.4; the wrapping TX/QSO status text took its line.)

Performance

On a busy 20 m FT8 slot the decoder regularly yields 25–50 callsigns per slot. Both EVEN and ODD slots decode every cycle via a ping-pong dual-buffer architecture — a TX slot never causes the opposite parity to be skipped. Heap is stable across long sessions (≈39 KB internal RAM free, 25 MB PSRAM free during decoding).

7. FT8 Transmit

The panadapter **keys the QMX and transmits full FT8/FT4 QSOs** — reply to CQ, run your own CQ, auto-answer (robot mode), or conduct a full exchange.

7.1. FT8 vs FT4 — Which to Use?

Both modes transmit via the same CAT interface; the difference is **slot length and symbol rate**:

Feature	FT8	FT4
Slot length	15 seconds	7.5 seconds
Symbols transmitted	79	105
Symbol duration	160 ms	48 ms
QSO time (full exchange)	~90 sec (6 slots)	~45 sec (6 slots)
Use case	Weak signal, SOTA/POTA	Busy bands, contests
Preset picker	Panadapter mode -> Freq dropdown	FT8 mode -> Preset picker

Choose FT4 when:

- The band is crowded (faster exchanges, less QRM)
- You're in a contest (time is critical)
- You want quicker pileup resolution

Choose FT8 when:

- Signal is marginal (longer decode window tolerates more QRN)
- You're portable/POTA (less pressure to transmit fast)
- You prefer the relaxed pace

FT4 has full feature parity with FT8, including time-sync from decoded signals (fixed in v0.19.3 — the time-sync modal shows "FT4" when appropriate and the bottom-bar clock correctly reads UTC(FT4) while in FT4 mode).

7.2. Switching Between FT8 and FT4

In FT8 screen (left pane):

- Tap the **Preset** dropdown (shows current frequency/mode)
- Select an FT4 frequency to switch to FT4
- Select an FT8 frequency to switch back

In Panadapter screen:

- Tap the **Band preset dropdown** (top left)
- Some bands have both FT8 and FT4 frequencies listed
- Tap the FT4 variant to switch

Your **settings are sticky** — when you switch back to FT8 or FT4, the panadapter remembers your last frequency, bandwidth, and filter settings for each mode.

The **decode list and pileup are cleared** on the switch (v1.3.3). The two modes use different slot lengths, so stations decoded under the old timing describe a band the new mode cannot hear — and leaving them on screen meant you could tap one and try to work a station that was no longer there.

7.3. Modes of Transmission

7.0.1. Reply to a CQ

In FT8 view, tap a CQ row in the decode list. A confirmation modal appears:

```
type: panel
title: Confirm FT8 Transmission
row: K9ZZ EN52 -07 2138 Hz
row: W1AW FN31 -12 1406 Hz <- the row you picked
row: SV1ENG JN37 -09 1869 Hz
row: TX1: W1AW OZ1LAV J045
buttons: Cancel!, Auto Pounce, Transmit+
note: dim | drag up or down the list to move the highlight before you lift your finger
note: amber | Transmit sends this message once; Auto Pounce runs the whole exchange for
```

- **Transmit** (green) — send this one message on the next correct slot
- **Auto Pounce** (blue) — handle the entire exchange automatically (TX1 -> wait for report -> TX2 -> wait for RR73 -> TX3 73)
- **▲ / ▼ Nudge** — move the target to the row above or below, without closing the modal and redoing the selection gesture
- **Cancel** — abort

Transmit is intelligent (v1.3.0) — it builds the correct *next* message from what that station last sent, exactly like a WSJT-X double-click: their CQ -> your grid (or your report, with Skip TX1 on), their grid -> your report, their report -> R+your report, their R-report -> RR73, their RR73/73 -> 73. You can run a whole QSO one Transmit tap at a time — and sending the closing RR73/73 **logs the QSO to ADIF** just like an automatic contact. Auto Pounce is offered on any first reply; once you're mid-exchange with a station, its rows offer Transmit only.

A quick tap is enough — you do not need to hold a row before releasing. Hold-and-drag still works for selecting across rows in a busy list.

The reply follows **correct FT8/FT4 parity** — if you're replying to an even slot, you transmit on the odd slot, and vice versa. For FT4 the countdown timer correctly counts down in 7.5-second slot increments, not 15-second FT8 ones.

Skip TX1 (faster pounce). With **Skip TX1** enabled in the Options modal, pouncing a station opens with your signal report straight away instead of the grid exchange — saving one round trip. If the station has already dropped out of the decode list, it falls back to the normal grid exchange automatically.

If your target is working someone else, the panadapter holds instead of keying up over their exchange — the status shows "working *call* - waiting" with a **TAP TO CANCEL** line. Waiting costs nothing (a hold doesn't count toward the timeout), but if you'd rather move on, tap the status to cancel the pounce and pick a different station; the abandoned exchange stays resumable for a few minutes via the resume prompt.

Working a pile-up

When you call CQ (or work a busy run), more than one station may answer at once — and a caller who replies while you're mid-QSO with someone else used to vanish from the live decode list as soon as they stopped transmitting. They are now kept in a **Pileup** list so you don't lose them:

- Whenever one or more stations are waiting, the **ADIF-log** button on the FT8 screen becomes a **Pileup** button in a distinct colour, and reverts once the list empties.
- Tap **Pileup** to see everyone who has called you and isn't worked yet.
- **Hold the button to open the ADIF log** — the log stays reachable even while the button reads "Pileup" (a one-time hint appears the first time it flips).

- Tap a station in the list to work them (the same confirmation modal as a decode-list tap), or tap the small ✕ to dismiss them without working them. The reply is the correct **next** message for that station, built from whatever they actually last transmitted — usually a signal report for someone who has just called you, but an R+report if they came back later with a report of their own (v1.3.2; the same laddering as tapping a decode-list row).
- A station is removed from the list automatically once you start a QSO with them, and a just-completed contact's trailing 73 can't put them back.
- Stations you've worked before still appear in the pileup unless **Exclude worked-before** is checked — the pileup follows the same rule as the auto-answer.

The pile-up tracker never transmits on its own — it only remembers callers; you choose who to work. If you'd rather it *did*, check **Auto-work pileup** in the Options modal: the strongest waiting caller is pounced automatically when your current QSO completes — or immediately, if you enable it with callers already waiting and nothing else in progress. It carries the same unattended-TX warning as the robot.

Pick callers myself

Normally, while you are calling CQ, the first station to answer starts the exchange straight away. Check **Pick callers myself** in the Options modal and that no longer happens: an answering station waits in the pile-up until *you* tap them, and from that point the exchange runs automatically as usual.

Only the *choice* becomes manual. You are not signing up to type anything, or to send each message by hand.

Two things it deliberately does:

- **It keeps calling CQ while you decide.** The pile-up carries on building, which is usually what you want when activating — and a radio that fell silent while you thought about it would look like it had stopped working.
- **It overrides Auto-work pileup.** Both settings decide who to work next, so if you have asked to choose, nothing else picks for you a moment later.

Off unless you turn it on, so nothing changes for anyone who does not want it.

7.2. Call CQ

Tap the **Call CQ** button. A modal opens:

```
type: panel
title: CQ Messages (check the active)
row: [x] CQ OZ1LAV J065
row: [ ] CQ DX OZ1LAV J065
row: [ ] CQ POTA OZ1LAV J065
buttons: Cancel!, + call grid, Save+
note: dim | CQ stop and Listen sit top-right and apply on the tap - no Save needed
```

Choose a preset (or edit/save a new one), then tap **Transmit**. The QMX starts calling CQ and listening for replies.

CQ tone selection — the panadapter automatically picks a quiet frequency (6.25 Hz tone spacing, 200–2800 Hz audio range, no other stations nearby). If your chosen tone gets busy during a QSO, the panadapter **auto-relocates to the nearest clear frequency** to avoid stepping on other stations.

CQ auto-stop — by default the panadapter keeps calling until someone answers. If you'd rather call a few times and then pause (a common courtesy on a quiet band), long-press **Call CQ** and tap the **CQ stop** button at the top-right of the preset editor: it cycles through never / 1 / 2 / 3 / 4 / 5 / 10 calls and applies immediately, no Save needed. While calling, the TX status shows the progress ("call 2 of 4"); after the last unanswered call the panadapter listens through one more receive slot (an answer to your final call still starts the QSO normally), then stops and goes idle. Applies to every CQ run, including the automatic resume after a completed or timed-out QSO — each fresh CQ sequence starts the count over.

Listening slot - while you are transmitting you are deaf to your own time window, so the occupancy picture for the window you transmit in is the one that goes stale. The **Listen** button in the preset editor (under **CQ stop**) can spend one slot receiving after every 3, 5 or 10 calls. Off by default, because it changes your on-air cadence, and like CQ stop it applies on the tap with no Save needed.

7.3. Auto-Reply (Robot Mode)

 **Requires explicit checkbox in the Options modal** to enable.

When robot mode is on and you're idle, the panadapter scans every FT8 decode for CQ callers matching your filters, picks the highest-priority match (Strongest SNR, Weakest SNR, or Most distant grid — your choice), and starts a full QSO:

1. **TX1** — send your call, grid
2. **RX** — wait for their report
3. **TX2** — send their report + your call back
4. **RX** — wait for RR73 or 73
5. **TX3** — send 73 or RR73 (exchange complete)
6. **Log** — ADIF entry created, move to next CQ

Pause — skip one transmission

Sometimes you want to *listen* on your own slot: to check the frequency is still clear, or to hear whether the station you are working is actually answering you rather than someone else.

Pause sits with Re-send, RR73 and 73 in the mid-QSO row, and it is on the browser page as well as the Tab5 (v1.16.2). It skips exactly one transmission and leaves the exchange intact — unlike **Cancel**, which ends it.

- It shows a **pause** symbol normally and a **play** symbol on yellow while a transmission is being skipped, so you can see the state at a glance.
- Press it again and the pause is taken straight back, re-arming the transmission if the slot still has room.
- It works while **calling CQ** as well as mid-exchange.
- A slot you skip on purpose **does not count** against the six cycles before the Tab5 gives up on a contact. Pausing can never cost you the QSO.

Asked for by Randy N4OPI, who works his station from another room; the countdown behaviour was caught by Gyula HA3HZ.

An experienced caller who skips a step is followed (v1.8.5): if someone answers your CQ with a **report** instead of a grid — common from operators who already know they have you — the reply acknowledges it with R plus your report and waits for RR73, rather than sending another bare report and losing a cycle. Reported by Gyula HA3HZ, who saw it twice. Tapping **Transmit** by hand always did the right thing here; it was only the automatic run that was a rung behind.

A busy pick is abandoned, not waited for (Roy K10ER's reasoning adopted verbatim): when *you* pounce on a station that turns out to be mid-QSO with someone else, the Tab5 politely holds — a deliberate pounce means you want *that* station. But the robot picked its target off a list, so when its pick engages a third station the robot **moves on to a different CQ caller** instead of idling through someone else's QSO. No grey-list strike: busy is not unresponsive.

Each QSO takes **~90 seconds** (6 FT8 slots × 15 s/slot). If a station doesn't respond in 4 slots, the panadapter times out and resumes scanning CQ.

Important: Robot mode **transmits on the air unattended**. Never enable it unless:

- Your station is physically attended
- Your filters are tested and correct
- Your antenna/SWR is known good
- Your QMX power is set appropriately

A permanent on-screen warning appears whenever robot mode is available.

Four things now switch it off for you, all of them because the alternative is transmitting when you did not expect it (Roy K10ER):

- **It waits before its first call.** Straight after a band change or a restart nothing has been heard yet, so both transmit windows are unmapped and a tone would be chosen from no information at all. It holds, showing *"Auto-answer: listening before first call"*, until it has heard both windows.
- **Cancelling a transmission switches it off.** Tapping the TX indicator to stop a transmission disarms it, abandons the QSO **and** turns auto-answer off — so halting a transmission to go and check your antenna does what you expect, rather than the radio starting again a cycle later.
- **A band change switches it off**, whichever way you changed band — the band buttons, the web page, a spot, a memory recall, or the radio's own knob. Few stations have an automatic ATU, so the antenna is usually not tuned for the new band yet.
- **It is off at every startup**, however the last session ended. Unattended transmission is never the state the panadapter powers up in; switching it on is a deliberate act, once per session.

Each of these says on screen why it stood down.

7.4. FT8 Simulation Mode (Practice QSOs)

⚠ **For practice only** — no real stations involved, radio never keys up. Since v1.3.0 the simulator needs **no QMX connected at all** — no radio, no antenna, zero RF.

Enable **FT8 Simulation Mode** in the settings drawer to practice everything: manual step-by-step Transmit, Auto Pounce, CQ-runs, pileups, and Field Day exchanges. Useful for:

- Learning the full FT8 exchange sequence
- Testing your setup without risking interference
- Verifying ADIF logging works correctly
- Practicing the pileup tools on a genuine pileup

How it works:

- **Six phantom stations** (three US, three DX) call CQ on their own tones — every message is real FT8, synthesized to actual GFSK audio and decoded through the same receive pipeline real RF uses
- Tap a CQ to pounce (auto or fully manual — they answer either), or **Call CQ** yourself and **four phantoms answer at once**, building a real pileup
- Phantoms are **patient like real operators**: each repeats its message every cycle, up to four times, before giving up and going back to CQing; one you're working stops CQing; one you've worked stops answering your CQs (toggle sim off/on to reset)
- Their replies match **what you actually transmitted** — grid gets a report, a report gets a roger, RR73 gets a courtesy 73
- The **Fast pounce** toggle is honoured, so you can watch what it changes: decodes surface just before the slot boundary with it on, just after with it off
- Swiping to the Panadapter and back clears the phantom rows and pileup for a fresh session, and **turning simulation mode off also clears them** (v1.3.3) — phantom stations no longer linger in a list that is supposed to be real, where they were still tappable

Note - Fixed in v1.3.3

With **Fast pounce** turned *off* — which is the default — the phantoms never answered at all, so every practice pounce simply timed out. If you tried the simulator before v1.3.3 and concluded the phantom stations were ignoring you, that was this, not you.

Visual indicator: When simulation mode is active, a **10 px red border pulses around the entire screen** (breathing red frame). This is your visual reminder that you're in practice mode — if the red frame is gone, simulation is off and real stations are in play.

The interlock is in the firmware, not just the UI. While simulation is on, every CAT command that would key the radio is skipped and logged instead — so a QMX that happens to be connected is never keyed, regardless of what the screen is showing.

Important:

- The QMX is **never keyed** in simulation mode, no matter what
- QSOs are logged as real ADIF entries — deliberately, so the logging/upload paths get exercised too. When you're done, the ADIF viewer shows a **"Del N test"** button (only while practice contacts exist — they're recognized by their missing frequency): two taps deletes them all
- All other features (panadapter, web UI, settings) work normally

7.5. ARRL Field Day Mode

During [ARRL Field Day](#), tick **Field Day mode** in the Options modal and fill in the two fields beside it:

- **Class** — your number of transmitters plus the category letter, written together: 16A, 5B, 1D. It is not a power rating.
- **Section** — your ARRL/RAC section, e.g. EMA, WCF, NNJ.

This switches the FT8 exchange from grid-and-signal-report to Field Day's class+section format, using the standard FT8 message type WSJT-X uses for FD (WA9XYZ KA1ABC R 16A EMA). Both pounce and CQ-run follow the convention automatically: the opening message is unchanged — FT8's CQ format has no room for class and section — and the *report-equivalent* step carries them instead, with the receiving side echoing back R-prefixed.

While the mode is on, **Call CQ** tags your CQ as CQ FD <call> <grid>, using the same modifier mechanism as CQ POTA or CQ DX, so other Field Day stations know to expect this exchange. It **replaces** any other modifier for as long as the mode is enabled — FT8 allows exactly one. The CQ preset editor reflects that: the three presets are dimmed and locked while FD mode is on, since their own modifier cannot apply, and a live preview line shows exactly what will go out.

Completed Field Day contacts log the standard ADIF contest fields — `CONTEST_ID=ARRL-FD`, your section and theirs — alongside the usual call, frequency and time, so they import cleanly into contest-logging software.

7.6. Fox/Hound (DXpedition) Mode

Big DXpeditions run FT8 in **Fox/Hound** mode, where one station (the *Fox*) works five callers at a time from below 1000 Hz while everybody chasing it (the *Hounds*) calls from above 1000 Hz. It is not the ordinary FT8 exchange: a hound that answers the Fox has to **move onto the Fox's frequency** to do it, because the Fox listens only to its own narrow slice.

Set **Fox/Hound (DXpedition)** in the Options window to one of three positions:

- **Off** — normal FT8. Nothing changes.
- **Guided** — the Tab5 tells you when it can see a Fox, and you tap it to call. Every transmission stays your decision.
- **Automatic** — the Tab5 calls a Fox it recognises and runs the whole exchange.

Whichever you choose, the awkward part is handled for you: your first call goes out **above 1000 Hz** on a clear slot, and the moment the Fox answers you with a report, your reply is **moved down onto the Fox's own frequency** — which is the step that makes the contact possible at all. The Fox's RR73 ends it, and the Tab5 then returns to its calling tone ready for the next one.

The Tab5 does not send 73 to a Fox. The Fox's frequency is the scarcest thing on the band during a DXpedition and a courtesy 73 there is just clutter. The contact is complete, and logged, on the Fox's RR73.

How a Fox is recognised — and where it trusts you instead. For anything it does *by itself*, the Tab5 is strict: not frequency alone (plenty of ordinary stations work below 1000 Hz) but a station down there visibly working a **queue** — several different callsigns inside a few minutes, a pattern nothing else on the band produces. Until it has seen that, automatic mode will not call anything a Fox.

A tap from you needs no such evidence. While Fox/Hound is enabled, tapping any station in the Fox region runs the Fox/Hound exchange, because enabling the mode is your declaration that you are chasing a DXpedition — the same way WSJT-X's Hound tick works. The machine is deliberately more cautious than you are.

The catch is leaving the mode on after the DXpedition has finished: a tap at an ordinary station low in the passband would then QSY onto their frequency and skip your 73. So the transmit-confirmation window **tells you before you commit** — it adds a line reading "*as HOUND — will QSY onto 500 Hz, no 73 sent*" whenever Fox/Hound rules are about to apply. If you see that on a station you did not think was a DXpedition, set Fox/Hound back to **Off**.

Three of the Tab5's usual courtesies stand down while a Fox contact runs, and all three would otherwise work against you:

- it **keeps calling** while the Fox is busy with other stations — a Fox is always busy, and waiting for a free frequency means never calling at all;
- it **does not re-send** a closing message, because the Fox never asks for one;
- it **does not grey-list** the Fox for ignoring you, which in a pileup of hundreds is entirely normal.

Automatic mode will not call a Fox already in your log on that band, so it works one contact and then leaves the DXpedition alone.

Note - Hound only — the Tab5 cannot be a Fox

A Fox transmits up to five signals simultaneously. The Tab5 keys the QMX one tone at a time over CAT, so a multi-signal transmission is not something this radio can be asked for. This is a hardware limit, not a missing feature.

7.7. Message Status

The FT8 left pane shows a **status label** indicating what's happening:

Status	Meaning
ACTIVE (red)	Transmitting right now
ARMED (amber)	Ready to transmit next slot
QSO Complete (green)	Exchange finished, logged to ADIF
QSO Timeout (orange)	No response after 4 slots, exchange aborted
<i>(dim white)</i>	Idle, no active QSO

Tap the status label to **abort** the current QSO (only works if ARMED or ACTIVE; once COMPLETE, it's logged).

Resume after timeout — if a QSO times out because the partner faded, and they come back within ~5 minutes calling you, the exchange **resumes where it left off** automatically (or tap their row to resume manually) instead of restarting from scratch.

If they never heard your final (v1.3.4, extended in v1.16.8) — a partner who does not decode your closing 73/RR73 keeps sending you their report, waiting for it. The Tab5 notices: if a station just worked comes back with a report rather than RR73/73/RRR, the final is sent again, up to six times within five minutes, *before* anything else can start a new contact. This now tracks **up to four partners at once** rather than only the most recent one — finishing a QSO and immediately working the next caller in a pileup no longer drops the first station's re-sends. The QSO is not logged a second time. Taking over by hand no longer produces a duplicate entry either — the same callsign on the same band inside ten minutes is recognised as the same contact.

7.8. Power & SWR Readout

After each transmit burst, the status bar briefly shows:

Last TX: 5.2W SWRx1.25 [N=79]

- **5.2W** — average output power measured via QMX PC; CAT command
- **SWRx1.25** — SWR measured via QMX SW; CAT command (only valid during TX)
- **[N=79]** — number of symbols transmitted
 - FT8: always 79 symbols (~12.7 s at 160 ms/symbol)
 - FT4: always 105 symbols (~5.0 s at 48 ms/symbol)

These readings are **informational only** — the panadapter does not enforce limits. Monitor your antenna system independently.

7.9. CQ Presets

You can save up to 3 custom CQ messages:

1. Tap **Call CQ**
2. Tap **Edit Presets** (or long-press the active preset)
3. Type your message: callsign, modifier (optional), grid
4. Tap **Save**

Presets persist across power cycles. Common modifiers:

- **DX** — calling DX only
- **POTA** — Parks on the Air activation
- **SOTA** — Summits on the Air activation
- *(blank)* — standard CQ

The preset editor's top-right **CQ stop** button sets the CQ auto-stop limit (see [Call CQ](#) above) — it cycles never / 1–5 / 10 and applies on tap, independent of Save/Cancel.

7.10. Frequency & Tone Control

Your transmit tone is chosen for you by default — the nearest clear 50 Hz slot, scanned against the stations currently decoded. You can see it, move it, and from v1.3.4 pin it.

The TX tone button is in the FT8 left pane, to the right of the **txcq** parity button, and always shows a number (1500 Hz until you change it). Tap it to open the picker.

The mini occupancy strip sits directly under the slot countdown in the same pane: the same 50 Hz grid and the same colours as the picker's full-size strip, so where the band is busy — and where you are in it — is answerable at a glance without opening anything.

Both time windows, always (asked for by Roy K10ER). The strip is **two rows — EVEN above, ODD below**, marked **E** and **O** in the same blue/orange the slot countdown uses. Two stations only collide if they transmit in the *same* window, and only you know which window you are about to pounce into — so both pictures are on screen **before** you choose, not after a transmission has fixed your window. Your white marker sits on your own window's row once one is locked (both rows until then), and your partner's pink sits in *their* window. The picker's full-size strip is split the same way, and its verdict says where your pick stands: "*Clear in EVEN — busy in ODD*".

The picker **repaints every second while it is open**, so the occupancy you are choosing against is the live picture rather than a snapshot taken when you tapped the button. If it has just told you something in words, that message stays on screen for a few seconds rather than being overwritten by the next repaint.

In the picker:

Control	What it does
Occupancy strip	The whole 200-2800 Hz window as 52 slots. Green free, red occupied, white you, pink your QSO partner
Touch and drag	Drag along the strip to pick a slot. The bar turns grey and follows your finger, the readout tracks it live, and it commits when you lift off
-50 / +50	Nudge one slot at a time
Find clear slot	Jumps to the nearest free slot, scanning outward from where you are
TX Hold	Pins the tone: every CQ and every reply goes out on it. See below
Apply nnnn Hz	Commits the tone and the hold setting

The readout states in words whether your chosen slot is clear or occupied, and lists the nearest free slots as numbers.

Apply whenever you like, including in the middle of a transmission. If a burst is on the air the change is accepted and applied the moment that burst ends — the transmission in progress finishes on the old tone, because stopping it half way would send a corrupted frame, and the very next message carries your new one.

That used to be a refusal, and it mattered more than it sounds (Roy KI0ER). A burst covers about 12.6 s of a 15 s slot and you transmit every other slot, so roughly four attempts in ten landed mid-burst and were rejected — leaving the QSO running on the offset it started with. Your choice depended on your timing, which is not a choice.

Slot parity is untouched, so moving your tone mid-QSO does not disturb the exchange — your partner tracks the slot, not the frequency. Nothing in FT8 requires either station to stay on the offset it began on, only to stay in its time window. This is the same freedom WSJT-X gives you, and it is the way out from under a station that has landed on top of you.

TX Hold is WSJT-X's "Hold Tx Freq". With it **off** — the default — each transmission takes the nearest clear slot, and a CQ that gets clashed relocates itself on the next cycle. With it **on**, the tone you picked is the tone used for everything, a clash is reported but never acted on, and nothing moves you off the slot you chose. The line under the checkbox says which of the two you are getting. Both the tone and the hold setting survive a power cycle.

Note - The strip shows decoded stations, not raw spectrum

A station too weak to decode will not appear as occupied, and an all-grey strip means nothing has been heard yet rather than "the band is clear".

Note - Occupancy is per time window

Two stations only collide if they transmit in the *same* slot, so a tone busy in the odd window may be completely free for you in the even one. The strip accounts for this whenever your own transmit window is known — that is, once a reply or a CQ is armed, since a reply inherits the opposite of your partner's slot and a CQ carries your TXCQ EVEN/ODD choice. With TXCQ ANY and nothing armed there is nothing to work from, so both windows are shown combined. When the window *is* known, the free-slot line names it.

Waiting for a busy station

On a crowded band several stations answer the same CQ and the caller works one of them. If that is not you, the Tab5 no longer keeps calling: while their last decoded message is addressed to somebody else, **nothing is transmitted**, and the status line shows `working <call> - waiting`. As soon as they send 73 or RR73, or call CQ again, it picks up where it left off.

You are not committed to the wait (Roy K10ER's report). The status line carries a **TAP TO CANCEL** line while the hold is on; tapping it drops the pounce so you are free to work somebody else. The abandoned exchange stays resumable for a few minutes, in case the station frees up and you want back in.

This also protects the grey-list. Giving up on a station used to count against it, so a popular station could end up permanently skipped by the robot and Auto-work-pileup for no reason other than being busy. A wait is not a failed attempt. The wait is capped at about six minutes so a station that vanishes mid-exchange still times out normally.

Warning - Fixed in v1.16.4 — the six-minute cap did not work

Before v1.16.4 that cap never actually took effect: the counter reset itself instead of stopping, so the Tab5 could wait **more than half an hour** for a station working somebody else. Worse, each held slot cancelled the call it had just queued, so it never got back to calling them either — which is why it could look like the radio had simply given up and gone quiet (*Gyula HA3HZ*). Both are the same fault, and both are fixed.

To tune to a different frequency while CQ is running:

1. Tap the **Freq** label on the top bar
2. Enter a new frequency
3. The CQ continues on the new frequency next slot

7.11. ADIF Logging

Every completed QSO is **automatically logged to ADIF** on the Tab5's internal storage:

- **Callsign**, grid, report (SNR), time (UTC)
- **Frequency**, mode (FT8)
- **Duration** (QSO start to finish)
- **Operator** (your callsign)

Download the log via the web UI (**QSO Logs** menu -> **ADIF download** ↓) or Settings -> ADIF Log.

7.12. Upload to QRZ, eQSL, LoTW & Cloudlog

Via the web UI:

1. Open the **QSO Logs** menu in the bottom bar and click **QRZ upload** ↑, **eQSL upload** ↑, **LoTW setup** (reads **LoTW** ↑ once configured), or **Cloudlog upload** ↑
2. Enter your API key (QRZ), username/password (eQSL), the guided certificate setup (LoTW), or your server address and API key (Cloudlog) when first prompted — credentials are saved for future sessions
3. Click again to upload

See [Web UI -> LoTW Upload](#) for the LoTW certificate setup details.

Cloudlog and Wavelog

Cloudlog and Wavelog are the only logbooks here that you host yourself, so you supply the address as well as the API key. Both use the same interface, so either works.

You are asked for three things: the server address, your API key, and the station profile ID (the number in the Cloudlog URL — leave it as 1 if you only have one).

Plain `http://` is allowed, but only to a server on the same network as the Tab5, and only to a numeric address such as `http://192.168.1.20`. That covers the usual case of a Cloudlog running on a machine at home with no certificate. Anything else needs `https://`.

Two things follow from that, both deliberate:

- The check is made **every time you upload**, not once when you save the address. So if you set it up at home and then operate from a park, the upload refuses rather than sending your API key across a network you do not control. Upload when you get home and it goes through.
- For plain `http://` the address must be numeric, not a name. A name has to be looked up, and what answers the lookup away from home need not be your server. Use `https://` if you want to use a hostname.

If your server is on your own network this is the only upload that needs no internet connection at all, which suits POTA and SOTA better than the other three. Contacts are sent in batches, and Cloudlog does its own duplicate checking, so uploading again after a failure is harmless.

Logs are batched — each upload session records which QSOs have been sent, so re-running skips already-submitted entries.

Uploads work **while FT8 or FT4 is actively running** — the panadapter briefly steps the FFT and SD-archive activity aside for the duration of the HTTPS transfer, then resumes automatically. You typically miss one FT8 slot and won't notice. A progress result is shown once the upload completes.

7.13. Troubleshooting

"QMX not responding to TX command"

- Check USB cable (must be data cable, not charge-only)
- Verify QMX is in the correct mode (USB/LSB/CW/DiGi, not AM)
- Try a manual `TX;` command via the web UI's CAT tab

"⚠️ **FREQ BUSY** warning, but no other station is there"

- The clash detector reserves a ± 50 Hz guard band around each decoded station, so it flags a neighbour that is close rather than exactly on you
- It counts only stations **in your own transmit window** (it used to count both windows, so it could warn about a station that could never collide with you; Roy KI0ER caught it)
- The warning names the frequency. Tap **TX nnnn Hz** and either **Find clear slot** or drag to a green slot on the occupancy strip
- Remember the strip only knows about stations it has *decoded* — a very weak one will not show

"QSO timeout — no response"

- The called station didn't hear you (too weak, bad timing, etc.)
- Try a different station, or switch to manual mode and check levels first
- See [Troubleshooting](#) for more

Next: Set up [Time Sync](#) for accurate FT8 timing, or explore the [Web UI](#).

The Tab5 transmits FT8 via the QMX's `TA<freq>;` CAT command — no PC audio path, no WSJT-X. The QMX does all DDS synthesis and envelope shaping; the Tab5 sends the 79 tone-frequency commands at 160 ms cadence, bracketed by `TX; / TA0; / RX;`.

Replying to a station

1. In the decode list, **hold your finger on a row** for ~250 ms. A dim highlight appears after ~80 ms so you can see which row you're targeting. List scroll locks once the gate fires; drag up or down to land on the right row.

2. **Lift** — a confirmation modal shows the exact message that will go on air, the audio frequency, and the target slot parity.
3. Tap **Auto Pounce** to hand the full QSO to the auto-engine, or **Transmit** for a single manual message.
4. Tap **Cancel** (in the modal, or the armed indicator in the left pane) to disarm without transmitting.

Transmit is intelligent (v1.3.0): it builds the correct *next* message for that station from what they last sent — the same semantics as a WSJT-X double-click. Their CQ → your grid (or your report directly, if **Skip TX1** is on); their grid → your report; their report → R+your report; their R-report → RR73; their RR73/73 → 73. The report value is always your live measurement of their signal. You can walk an entire QSO step by step with nothing but Transmit taps — and when you send the closing RR73/73, the QSO **logs to ADIF** exactly like an auto-engine contact. Auto Pounce is offered on any first reply; mid-QSO rows get Transmit only.

Slot parity is set automatically — if you heard them on an EVEN slot, your reply goes on ODD so they're listening when you transmit.

The auto-engine works the full exchange: TX1 (grid) → wait for their report → TX2 (R+report) → wait for RR73/73 → TX3 (73) → DONE. At every step it re-sends the current message for up to 4 consecutive slots if the other station doesn't respond. If no reply comes after 4 slots, the QSO times out (orange status, tap to clear).

Skip TX1 (faster pounce). With **Skip TX1** enabled in the Options editor, a pounce opens with your signal report immediately instead of the grid exchange — saving one round trip. If the station has already aged out of the decode list, it falls back to the normal grid TX1 automatically.

Working a pile-up

When you call CQ or work a run, more than one station may answer at once — and a caller who replies while you're mid-QSO with someone else used to vanish from the live decode list once they stopped transmitting. They're now held in a **Pileup** list so you don't lose them:

- Whenever callers are waiting, the **ADIF-log** button on the FT8 screen becomes a **Pileup** button in a distinct colour, reverting once the list empties.
- Tap **Pileup** to see everyone who has called you and isn't worked yet. Tap a station to work them (the same confirmation modal as a decode-list tap), or tap the **X** to dismiss one.

- **Hold the button to open the ADIF log** — the log is always reachable this way, even while the button reads "Pileup" (v1.3.0; a one-time hint appears the first time the button flips).
- A station is removed from the list automatically once you start a QSO with them, and a just-completed contact's trailing 73 can't put them back.
- Working a caller from the pileup sends the correct *next* message for that station, built from whatever they actually last transmitted — the same laddering as tapping a decode-list row (v1.3.2). Previously it always opened with a signal report, which could never produce the R+report a station needs when they come back minutes later with a report of their own.
- Worked-before stations appear in the pileup unless **Exclude worked-before** is checked — the pileup follows the same rule as the auto-answer, so dupes you're willing to work stay visible.

The tracker never transmits on its own — it only remembers callers; you choose who to work. If you'd rather it *did* transmit, check **Auto-work pileup** in the Options editor: when your current QSO completes (or immediately, if you check it with callers already waiting and nothing else going on), the strongest waiting caller is pounced automatically, draining the pile one contact at a time. It carries the same unattended-TX warning as the robot.

Calling CQ — CQ-run mode

Tap **Call CQ**. No confirmation modal. The engine:

1. Scans the current decode list for occupied 50 Hz audio bins.
2. Picks the nearest unoccupied bin to 1500 Hz (standard FT8 sub-band centre).
3. Arms the CQ on the matching slot parity and waits for the boundary.

From there it's fully automatic:

- The opposite-parity slot is decoded while CQ runs so replies are never missed.
- The moment a station replies with your callsign, CQing stops and the exchange starts automatically — best-SNR caller chosen if multiple stations answer simultaneously.
- After the exchange completes (RR73 → 73 → logged), CQ resumes on the same frequency.
- A mid-exchange timeout also resumes CQ rather than dropping the frequency.
- While CQ-run is active, other stations' cq rows are hidden so replies to you stand out.

Tap **Cancel** in the TX status bar at any time to stop.

FT8 Options

Tap **Options** in the left pane to open the FT8 Options panel — everything that only means anything in FT8 mode, in one place rather than scattered through a general settings list (v1.9.4; was called **Filter**, renamed because the panel already held real behaviour toggles like Auto-work pileup and grey-listing, not just filters). Controls which stations CQ-run auto-answers, which rows appear in the decode list, and (on the web UI) the CQ message presets too.

The web UI has the same panel behind its own **Options** button, shown only in FT8 mode next to **TX tone** — CQ messages and FT8 filters were pulled out of the general Settings list into it. The button carries a count badge of how many settings are currently on rather than a plain active/inactive colour (a colour would always read "on" for anyone who runs filters permanently, which tells you nothing); hovering it lists which ones. Inside the panel, an active checkbox gets an amber border/fill in addition to its own tick mark, so "what's already set" is never a colour-only signal.

- **Include 1 / Include 2** — if either field has text, only messages containing one of its terms are eligible. Space- or comma-separated (e.g. POTA SOTA or JA, VK), matched against the *whole* decoded message text so POTA/SOTA tags, grid squares, country prefixes, /P suffixes etc. all work.
- **Exclude 1 / Exclude 2** — messages containing any of these terms are skipped even if they'd otherwise match.
- **Exclude plain CQ callers** — hides bare cq ... rows so only replies and exchanges remain visible.
- **Show CQs in my run** — off by default. While you run your own CQ, other stations' plain cq ... rows are hidden so replies addressed to you are not buried. Turn this on to keep seeing them, so an interesting station calling CQ in your listening slot is something you can break off and work. Display only — it does not change who the robot or Auto-work-pileup answers.
- **Exclude worked-before** — hides callsigns already worked **on the current band** (per-band, from your ADIF log) from the list and from CQ-run auto-replies; the same station on a different band is treated as not worked.
- **Skip TX1** — when you pounce a station, open with your signal report instead of the grid exchange for a quicker QSO (falls back to the grid exchange if the station has aged out of the decode list).
- **Allow grey-listing** — off by default. When enabled, a station that times out two of your pounces in a row is set aside: the robot and Auto-work-pileup skip it, its decode row turns violet, and tapping it offers to clear it rather than opening the TX dialog. Useful on a busy band where one station simply never comes back. The list lives in RAM only and is forgotten at power-off.

Tap **Save** to persist (NVS) and apply immediately.

Auto-answer CQ (robot)

⚠ **Transmits unattended — never leave it running unsupervised.** When enabled, the robot picks a CQ caller every slot (filtered the same way as above, plus a worked-before skip) and runs the full exchange itself — no per-QSO confirmation, no tap required. Pick a **Priority**: Strongest signal, Weakest signal, or Most distant grid. Same TX1→report→RR73→73→ADIF-log flow as a manually-tapped reply; you just aren't the one tapping. You remain responsible for everything it transmits under your callsign, same as any other unattended digital-mode software.

TX status indicator

The left pane shows a persistent status line below the slot countdown:

Colour	Meaning
Red	TRANSMITTING: <message> — burst in progress, with your audio tone on its own line ; tap to abort
Amber	TX armed: <message> then nnnn Hz → EVEN/ODD, ~Ns — waiting for slot; tap to cancel
Red-orange ⚠ FREQ BUSY	Your tone is occupied (± 50 Hz guard), and the warning names the frequency so you can act on it. During CQ-run this self-heals — the next cycle hops to the nearest clear tone automatically. Mid-exchange you can now move it yourself: see TX audio frequency below
Amber, working <call> - waiting + TAP TO CANCEL	The station you are calling is mid-exchange with somebody else. Nothing is transmitted until they sign off or call CQ again — or tap to cancel the pounce and work someone else (v1.3.5). See Waiting for a busy station below
Green	QSO complete
Orange	QSO timed out — tap to clear
Dim white	FT8 engine status passthrough (capturing / decoding / symbol count / ...)

TX audio frequency

Your transmit tone is chosen automatically — the nearest clear 50 Hz slot to 1500 Hz, scanned against the stations currently decoded. From v1.3.3 you can both **see** it and **change** it.

The **TX nnnn Hz** button in the FT8 left pane always shows it — to the right of the **txcq** parity button — and tapping it opens the picker. The picker repaints every second while it is open (v1.16.10), so you are choosing against the live occupancy rather than a snapshot taken when you tapped it. A **mini occupancy strip** under the slot countdown shows the same picture at a glance. (Before v1.3.4 this was a chip that appeared only while a CQ or QSO was running, and the tone was also repeated on the TX status line.)

Control	What it does
Occupancy strip	The whole 200-2800 Hz window as 52 slots. Green free, red occupied, white you, pink your QSO partner
Touch and drag	Pick a slot by dragging along the strip. The bar goes grey and follows your finger, the readout tracks it live, and it commits when you lift off
-50 / +50	Nudge one slot at a time
Find clear slot	Scans outward from where you are and jumps to the nearest free slot
Apply nnnn Hz	Sends it to the radio

The readout also says in words whether the slot you have picked is clear or occupied, and the free slots nearest you are listed as numbers underneath.

It applies **between** bursts. If a burst is on the air, Apply refuses and tells you to try again after it — the same rule WSJT-X operators are used to. Slot parity is untouched, so moving your tone mid-QSO does not disturb the exchange; your partner tracks the slot, not the frequency.

The strip shows decoded stations, not raw spectrum. A station too weak to decode will not show as occupied, and an all-grey strip means nothing has been heard yet rather than "the band is clear".

QSO override buttons

During an active auto-QSO exchange (any state between first reply and final 73), three buttons appear in the left pane:

Button	What it does
Re-send / <field> (amber)	Re-arms the current outgoing message immediately. The label shows what will go out — e.g. Re-send / JO45 when waiting for their report, Re-send / -07 when waiting for RR73
RR73 (blue)	Skips straight to RR73, bypassing the report step
73 (green)	Fires the 73 sign-off and closes the QSO immediately

These are deliberate operator nudges for busy-band edge cases where the auto-engine falls a slot behind or you can see the exchange is further along than the state machine knows. The auto-engine handles the normal case; these exist for when a quick nudge is faster than waiting through the 4-slot retry cycle.

TX power / SWR readout

After each burst the Tab5 queries PC; / SW; for instantaneous forward power and SWR and shows the result briefly in the status line: Last TX: X.XW SWRx.xx [Ns]. If SWR > 4.0 (indicating the QMX SWR-protection latch tripped), the firmware automatically cycles TX; / 150 ms / RX; to clear the latch so the radio is ready for the next TX slot without operator intervention.

CQ message presets

Long-press the **Call CQ** button to open the preset editor. Three message slots with radio buttons — check the active one. A + <call> <grid> quick-insert appends your identity. Standard CQ constructions (CQ DX 0Z1LAV J065FR, CQ P0TA ...) and ≤13-char free text both encode via the general ft8_lib encoder. Presets persist to NVS. The Call CQ button label shows the selected message; a short tap transmits it.

CQ auto-stop (v1.3.5, Don WB0LQW's "I usually send CQ 2-4 times and then pause"). The editor's top-right **CQ stop** button cycles never / 1 / 2 / 3 / 4 / 5 / 10 calls and applies the moment you tap it — no Save needed. While calling, the TX status shows the counter live ("call 2 of 4"). After the last unanswered call the Tab5 listens through one more receive slot — an answer to your final call still starts the QSO normally — then stops and goes idle. The limit applies to every CQ run, including the automatic resume after a completed or timed-out contact; each fresh sequence starts the count over. Persists across power cycles and travels in the config backup.

QSO logging (ADIF)

Every completed FT8 QSO — pounce or CQ-run — is automatically written to an ADIF v3.1.4 file at `/spiffs/qso.adf` on the Tab5's internal flash. The log survives reboots and re-flashes.

Download. The web UI bottom bar shows the **QSO Logs** menu once the first QSO is logged. **ADIF download** ↓ fetches `qso.adf` for import into any logging software (WSJT-X, Log4OM, DXKeeper, ...) or for POTA.app, which has no upload API (see below); **View / edit log** opens it as a sortable table with per-record delete and Delete-all — see [Web UI](#).

View and edit on the Tab5. The **ADIF Log** button on the FT8 screen (long-press always works, even while it reads "Pileup") opens the on-device viewer: a Today/All filter with a POTA activation counter (the title turns green at 10 QSOs today), long-press a row to delete that single record, and — new in v1.3.5 — **Delete all**, next to Close: the first tap arms it and shows the live count ("ALL 34?"), a second tap within five seconds erases the log, waiting disarms it. Clearing the log (from either the Tab5 or the browser) also resets the QRZ/eQSL/LoTW upload positions, so QSOs logged afterwards upload normally. The clear-first workflow is the practical POTA tool: start the activation with an empty log and the ADIF at the end is exactly what you submit.

Upload to QRZ Logbook / eQSL — directly from the Tab5. Two more buttons appear next to the ADIF download link once you've logged a QSO: **"QRZ ↑"** and **"eQSL ↑"**. Tap either the first time and it prompts for credentials (QRZ: API key from *Logbook Data* → *API Key* on qrz.com; eQSL: your username and password — eQSL has no API-key scheme) and saves them on the Tab5, not just in the browser. Every tap after that uploads everything logged since the last successful upload — no need to re-enter credentials, and no risk of duplicate uploads, since the Tab5 tracks how far it's gotten into the log. If a record is rejected (bad credentials, quota, etc.) the run stops and reports the reason rather than skipping past it; fix the cause and tap again to resume from where it left off. eQSL accepts a whole batch of QSOs per request; QRZ's API takes one at a time, so a big log takes one HTTP round trip per QSO.

Upload to ARRL LoTW — also directly from the Tab5. The Tab5 signs your QSOs on-device with your own LoTW callsign certificate, so no TQSL and no PC are involved. The bottom bar shows "**LoTW setup**" until it is configured, then "**LoTW ↑**".

Setup is a two-page guided flow. Page one points you at ARRL's own "Save the Callsign Certificate" instructions — you export a .p12 file from TQSL, which most people did once, years ago. Page two takes that file, its password, and your DXCC entity number:

Field	Notes
.p12 file + password	Parsed in your browser , not on the Tab5 — the password never reaches the device. Only the certificate and key are sent
DXCC entity number	Required. The same one your TQSL station location uses (Denmark = 221, USA = 291)
CQ zone / ITU zone	Optional
US state / county	US stations only (v1.3.3). Without them your QSOs earn no Worked All States and no county credit — for you or for the stations you work. The county is the name on its own (Arlington), not VA,Arlington

Every tap of **LoTW ↑** afterwards signs and uploads everything logged since the last successful upload. Ctrl-click **LoTW ↑** to re-run setup — a certificate is typically valid three years. Re-importing the *same* certificate no longer re-uploads your whole log; only an actually-changed certificate resets the upload position, since a new key means everything has to be re-signed.

Uploads are queued at ARRL's end. If a QSO does not appear immediately, check [the LoTW queue status](#) before assuming a problem — the queue has run hours behind at busy times. LoTW rejects a malformed file at upload time, so anything that reaches the queue was signed correctly.

POTA.app has no upload API at all (browser login or email only), so use the ADIF download above for that.

Fields in each record:

ADIF field	Content
CALL	Their callsign
FREQ	Dial frequency in MHz (3 d.p., e.g. 14.074)
BAND	Amateur band (e.g. 20M)
MODE	FT8, or MFSK for an FT4 contact — ADIF defines FT8 as a mode in its own right but FT4 only as a submode of MFSK, and this is the form WSJT-X writes and other software expects to read (<i>Don Adams WB0LQW</i>)
SUBMODE	FT4 on an FT4 contact, absent otherwise. Never a copy of MODE: QRZ rejects that pairing outright
RST_SENT	Our SNR estimate (e.g. -07). Omitted entirely if no report was exchanged — writing a placeholder 599 into an FT8 log, as versions before v1.3.4 did, fabricates a measurement that then gets uploaded to QRZ/eQSL/LoTW
RST_RCVD	Signal report received
QSO_DATE	UTC date YYYYMMDD
TIME_ON	UTC time HHMMSS
STATION_CALLSIGN	Your callsign (from Identity in the drawer). This is the ADIF field POTA reads; the older MY_CALL spelling made POTA warn " <i>No station_callsign field, assuming operator ...</i> " on every upload
MY_GRIDSQUARE	Your grid
GRIDSQUARE	Their grid (from the decoded FT8 message)
MY_SIG, MY_SIG_INFO	The programme and reference you were activating (POTA / us-1241), when an activation is set — this is what POTA and SOTA credit the activation from

ADIF field	Content
SIG, SIG_INFO	The programme and reference they were activating. Filled in automatically when the QSO came from a spot, or by hand afterwards in View / edit log — and correct to record whether or not you were activating too; it is a Park-to-Park contact only when both of you were. Absent when the other station never registered the activation, which is why the column can be legitimately empty
CONTEST_ID, STX_STRING, SRX_STRING, ARRL_SECT, MY_ARRL_SECT	Field Day mode only: contest ID ARRL-FD, your/their literal <class> <section> exchange text, and their/your section alone

Clear. GET `/api/adif/clear` from the web UI wipes the file and resets the worked-call cache.

Set your callsign and grid in the settings drawer → **Identity** before your first QSO so they appear correctly in logged records.

8. JS8

JS8 Normal runs on the Tab5 itself — the decoder, the error correction and the transmitter, with no PC in the loop. JS8 is a keyboard mode built on FT8's modulation: it carries free text rather than the fixed exchange FT8 uses, so stations hold short conversations with each other.

JS8 is **new in v1.17.0 and declared a beta**. What is proven and what is not is spelled out in [section 6](#). Read that before relying on it.

8.1. Selecting JS8

Swipe → from the left edge to reach the FT8/FT4/JS8 view, then pick **JS8** from the **Preset** dropdown in the left pane. The dropdown is three wide now — FT8, FT4 and JS8.

Only **JS8 Normal** is supported: 15-second slots, the same slot length as FT8. The faster and slower JS8 speeds (Fast, Turbo, Slow) are not implemented, and Turbo cannot be reached over CAT in any case.

⚠ **JS8 and FT4 share two of their calling frequencies.** If you were expecting FT4 activity on a frequency and see JS8 instead, that is why — the modes overlap on the band plan, not a fault.

8.2. The Stations and Conversation tabs

With JS8 selected, the right pane carries two tappable tabs:

- **Stations** — who is on the band. Each station that has identified itself, with its grid and how long ago it was heard.
- **Conversation** — what has been said, newest first, with four columns: **AGE**, **Hz**, **CALL** and **MESSAGE**.

Rows are tappable in both. The same two views appear in the browser, so you can watch a conversation from a laptop while the Tab5 sits with the radio.

8.3. What the decoder reads

Three kinds of JS8 traffic arrive:

- **Directed messages** — a message aimed at a particular station, shown with the sender's callsign.
- **Heartbeats** — the periodic HB `<call> <grid>` that JS8 stations send to say they are listening.
- **Free text** — a plain message, which JS8 splits across as many 15-second slots as it needs. The Tab5 joins the pieces back together and shows the message once it is whole, with a partial line while the rest is still arriving.

A free-text frame carries **no callsign of its own** — that is how JS8 works, not a limitation here. The Tab5 names a free-text message after a station that identified itself on the same audio frequency, and if two stations are close enough together to be equally plausible it shows the **frequency instead of a name**. A wrong callsign on somebody's message is worse than no callsign, so it declines to guess.

8.4. Sending free text

On the Tab5: tap **Free text**, the button under Call CQ. It is shown in JS8 only. Type the message, and the window tells you how many frames it takes and how many seconds it holds the frequency *before* anything is keyed, along with the text exactly as it will go out. **Send** starts it; **Stop TX** aborts a run that is already going out, and stays reachable while transmitting.

In the browser: the same composer sits under the conversation pane on the FT8/JS8 page, with the same plan line and the same Send and Stop.

The text is upper-cased, runs of spaces are collapsed and anything JS8 cannot carry is dropped. That is the encoder's own rule, and what the plan line shows you is the encoder's answer rather than a second copy of the rule — so what you read is what goes on the air.

⚠ **A long message is a long transmission.** One frame goes out per 15-second slot, so a twelve-frame message holds the frequency for three minutes. Read the plan line before you send.

The same three actions are scriptable, which is how the feature worked before the composer existed:

```
POST /api/cmd {"action": "js8_text", "text": "HELLO FROM THE PANADAPTER"}
```

- `{"action": "js8_text_plan", "text": "..."}` reports the frame count and the seconds **without transmitting**.
- `{"action": "js8_text_cancel"}` stops a run that is already going out.

Progress is in `/api/status` under `ft8.ftx_sent` and `ft8.ftx_total`.

8.5. Calling CQ

The **Call CQ** control works in JS8 as it does in FT8, and sends `CQ <your call> <your grid>`.

Your grid goes on the air as **four characters**, always. If you have entered a six-character grid it is truncated for transmission — a six-character grid in a JS8 CQ is read by other stations as a callsign, which makes the call unintelligible.

8.6. What is proven, and what is not

Stated plainly, because "beta" on its own tells you nothing:

Proven on air:

- Receiving. Real stations decoded off air, including other people's free text arriving intact.
- Sending free text. A real JS8Call at the other end reassembled a three-frame message and displayed it complete, with the end-of-message marker it draws for a finished transmission.
- Calling CQ. A CQ from the Tab5 was decoded by a second station.

Not proven:

- **A full automatic two-way JS8 QSO has not been completed.** That is the next piece of work.
- **Compound callsigns** (G0ABC/P, W1ABC/4) are not handled.
- The fix that stops a message being shown under the wrong callsign (section 3) was built from a real on-air case but has **not** itself been re-tested on air — reproducing it needs a third station on a nearby frequency, which is not something that can be arranged to order.

8.7. Signal reports

JS8 signal reports come from the same measurement as FT8's and are calibrated against `jt9`, the reference decoder from the WSJT-X family, using 154 paired decodes of the same recordings. A report here should be within a decibel or two of what WSJT-X or JS8Call would say about the same signal.

JS8 Normal runs on the Tab5 itself - decoder, error correction and transmitter, no PC. JS8 is a keyboard mode on FT8's modulation: it carries free text instead of FT8's fixed exchange, so stations hold short conversations.

Pick **JS8** from the **Preset** dropdown in the FT8 view - the dropdown is three wide now. Only **JS8 Normal** (15-second slots) is supported; Fast, Turbo and Slow are not, and Turbo is unreachable over CAT anyway.

With JS8 selected the right pane carries two tappable tabs: **Stations** (who is on the band, with grid and age) and **Conversation** (what has been said - AGE, Hz, CALL, MESSAGE). Both appear in the browser too.

⚠ **JS8 is new in v1.17.0 and declared a beta.** Receiving is proven on air, sending free text is proven on air, and a CQ from the Tab5 was decoded by a second station. **A full automatic two-way JS8 QSO has not been completed**, and compound callsigns are not handled.

Sending free text. Tap **Free text** under Call CQ on the Tab5 (JS8 only), or use the composer under the conversation pane on the web page. Both report how many frames the message takes and how many seconds it holds the frequency before anything is keyed, and show the normalised text the encoder will actually send - upper-cased, whitespace collapsed, unsendable characters dropped. One frame per 15-second slot, so a twelve-frame message is three minutes of transmitting. **Stop TX** aborts a run in flight and stays reachable while transmitting. Scriptable as `POST /api/cmd {"action":"js8_text","text":"..."}`, with `js8_text_plan` for the frame/second count without transmitting and `js8_text_cancel` to stop.

A free-text frame carries **no callsign** - that is JS8's design. The Tab5 names a message after a station that identified itself on the same audio frequency, and shows the **frequency instead of a name** when two stations are equally plausible. A wrong callsign on somebody else's words is worse than none.

Your grid goes on the air as **four characters** always: a six-character grid in a JS8 CQ is read by other stations as a callsign.

Full detail, including exactly what is and is not proven: the JS8 chapter of the user guide.

9. Time sync

FT8 requires accurate UTC time — within ± 1 second of the real thing. The panadapter syncs time from multiple sources in priority order.

9.1. Time Sources (Priority Order)

1. **Unit GPS v1.1 on PORT.A** (if selected in Settings -> Device -> Port mode) — satellite UTC **including the full date**, phase-locked to the second, works offline
2. **GPS-disciplined QMX** (auto-detected) — phase-locked to the GPS second, ~10 ms, works offline; on radio firmware 1.04_004 and later it brings the **date** as well
3. **WiFi + SNTP** (if available) — ~10 ms, re-syncs every ~1 hour
4. **Tab5 RTC** (if set) — persists across power cycles (± 1 min accuracy)
5. **FT8/FT4-derived** — offline fallback only (ignored while GPS/SNTP is up)
6. **Manual set** — enter time manually via the settings drawer

GPS and SNTP are the accurate sources and are used whenever present; if you're offline with neither, the panadapter falls back to the RTC (or FT8-derived / manual). The Unit GPS outranks the others while it has a fresh lock — see [Unit GPS Time Source](#).

Note - Both GPS sources show UTC(GPS)

A Unit GPS and a GPS-disciplined QMX are both GPS, so the clock suffix is the same word for both. Which one you have is told apart by the **GPS indicator** on the bottom bar (see [Bottom Bar Time Display](#)) and by the apply lines in the log, not by a different suffix.

Unit GPS Time Source (PORT.A)

With **Settings -> Device -> Port mode** set to *Unit GPS v1.1*, the M5Stack Unit GPS on PORT.A disciplines the clock. It is the only offline source that brings the **date** with it, so it answers the "Is today's date right?" question by itself.

What it needs	Port mode = <i>Unit GPS v1.1</i> , the Unit GPS plugged into PORT.A, sky view for the antenna
What it gives	UTC time and the full date , from the satellite's RMC sentence
Priority	Highest, while it has a fresh lock (see the table above)
Date	Verified automatically on every accepted fix — the modal does not appear
Accuracy	Phase-locked to the second; no measured figure is documented yet, and none will be until it has been measured against a reference on hardware

The bottom-bar **GPS indicator** — one GPS symbol, coloured by state, the same construction as the Bluetooth glyph beside it — shows what the *receiver* is doing, which is a different question from the clock suffix (which shows who is *disciplining* the clock). The colour is the whole message:

Symbol	Meaning
amber	Running, no fresh fix yet — antenna unplugged, indoors, or still acquiring
green	Locked: a fresh fix, and this is the clock's authority
red	Had a lock, it has gone stale (cable out, sky lost) — the clock falls back to whatever else is live
<i>(hidden)</i>	Port mode is Relay — there is no receiver to describe

Locking takes 30 s to a few minutes from cold with a clear sky. **Switch the mode before plugging the GPS in** (enable-then-plug); see [Settings](#) for why.

Module GPS v2.1 on the 30-pin bus

Warning - Works, but there is no control for it on screen

A **Module GPS v2.1 (M5Stack M003-V21)** stacked on the 30-pin bus is handled by the same driver as the Unit GPS — it is the same AT6668 receiver, and the only difference is which pin the data arrives on (GPIO38). The receiver has now been run on hardware and delivers NMEA, but there is still no control for it on screen: it is switched on over the API only:

```
POST /api/cmd {"action":"gnss_mbus","on":true}
```

Set DIP switch 6 on the module — the first switch of the group the silkscreen labels "RXD" — and leave every other switch off. The groups are named from the host's side, not the module's: the module's data output drives the host's *receive* line, so it is the RXD group that selects it. The TXD group produces nothing at all.

Being on the 30-pin bus, it does not conflict with the PORT.A relay, so both can be fitted at once.

Measured on the bench with the antenna at a window: a lock, a fix 64 ms old, about 530 bytes per second of well-formed NMEA, and the clock taking it every second. Indoors it sat without a fix for three minutes, which is normal for this receiver.

9.2. Offline (POTA / Portable)

If you're operating **without WiFi** (POTA, portable, SOTA):

0. **Best: take a Unit GPS.** With Port mode set to *Unit GPS v1.1*, the satellite gives you time **and the date** with no internet, no RTC remembered from home and no question to answer — see [Unit GPS Time Source](#). Everything below is what to do when you have no Unit GPS.
1. **Set the Tab5 RTC before you leave home** (settings -> Time)
2. The RTC is powered by a **supercap battery** and holds time for **30–40 hours** without power
3. When you turn the Tab5 on in the field, it reads the RTC immediately
4. **Turn the QMX on whenever you like — you do not have to do anything about its clock.** A QMX without GPS comes up at 00:00 and its clock free-runs, so the panadapter does not take the time from it while the Tab5's own clock is good. It sets the radio's clock instead, and only when the radio is more than a few seconds out.
5. Optional: if your QMX has GPS, the panadapter syncs the RTC from QMX GPS every 5 minutes

No internet needed — FT8 timing works offline.

Note - Why step 4 says that

Earlier versions took the time from a GPS-less QMX when there was no WiFi, which meant switching the radio on in the field replaced your accurate RTC time with the radio's 00:00 — and FT8 stopped decoding. Reported by Don WB0LQW. The Tab5's supercap RTC is the better clock of the two offline, so it now wins, and the radio gets set from it.

If you have no accurate time at all — the RTC was never set, or it has been unpowered for more than a day or two — then a QMX reading *is* used, because something is better than nothing. Failing that, set the clock by hand (**FT8 -> Options -> Sync Time**), which also accepts seconds.

Warning - The date is checked separately from the time

The QMX, its GPS and the hours/minutes/seconds boxes all give only a **time of day**. If the Tab5 has been off longer than its clock lasts and there is no internet, the date it has is simply the last day it was used — so a perfectly set time can still be logged under the wrong day. Reported by Don WB0LQW, whose POTA log came out two days behind.

So when the date cannot be checked, the Tab5 asks about a minute after it starts: **"Is today's date right?"** Step it with **- day / + day** if needed and tap **This date is right**. If the Tab5 asked by itself and WiFi then comes up, the question closes by itself; if **you** opened the window to change the date, it stays open until you are done with it. QSOs are still logged if you do not answer — nothing is ever held back.

The Tab5's own clock surviving a power-off is **not** taken as proof that the date is right. That clock keeps running as long as its small battery holds, but it says nothing about who last wrote it — another firmware flashed onto the same Tab5 can leave a date decades out with the battery perfectly healthy, which is what happened to royord. The clock is trusted only when this firmware's own record agrees with it, the clock has not gone backwards since that record, and the gap is short enough that somebody has plausibly been watching.

The **Unit GPS on PORT.A is the exception**: its sentences carry the satellite date, so the date is verified by the fix itself and the question never has to be asked. See [Unit GPS Time Source](#).

The **Set and Sync the Clock** window also shows the date on its second line, marked (*unverified*) when it has not been checked. Tap that line to change it.

9.3. WiFi + SNTP

When WiFi is active:

1. The panadapter connects to an SNTP server (default pool.ntp.org)
2. Gets the current UTC time
3. Sets the system clock and writes it to the Tab5 RTC
4. Checks periodically (~hourly) and re-syncs if time has drifted

SNTP sync is **automatic** — you don't need to do anything. The bottom bar shows the current time (updates every second).

9.4. QMX GPS Time Sync (auto-detected)

If your QMX has **internal GPS** (QMX+ models often do), there is **nothing to enable** — the Tab5 detects it automatically:

1. **On radio firmware 1.04_004 and later it asks the GPS receiver directly** (GP;). A reply settles two things at once: this radio *has* a GPS — the receiver's own answer, not a guess — and **today's date**, which the radio's clock has never carried. Both work offline and on the first try.
2. It then catches the QMX's TM; seconds *flip* (the true GPS second boundary) and **phase-locks the clock to that edge** (~10 ms, drift-free), not just to the whole second. Re-locks every 5 minutes.
3. On older radio firmware, or a radio with no GPS, there is no GP; answer. Then the TM; flip is compared against SNTP: if they agree tightly — **and the Tab5 has not itself set that radio's clock** — the QMX is flagged GPS-disciplined. If they don't agree (a non-GPS QMX with a free-running RTC), it's used only as a low-priority offline fallback, and the check is **repeated every 5 minutes** until it does agree.

Note - Why the time still comes from TM; when GP; is the receiver

GP; is asked for the **date** and for the GPS answer, not for the clock phase. Measured on the bench against a reference: the second boundary GP; reports is roughly **a second behind** UTC, because a GPS receiver emits the sentence for one second during the next one. The radio's own clock, set from the satellite at power-on, is within about **100 ms** — an order of magnitude better. So the date comes from the receiver and the phase comes from the radio, each from whichever is actually good at it.

Note - A GPS that locks late is no longer missed (v1.16.3)

Before v1.16.3 that check ran **once**, about 45 seconds after boot, and its verdict stuck for the whole session. A receiver still hunting for satellites at that moment was written off as "no GPS" and never looked at again, short of a reboot. That is not a rare case: a cold start, or an antenna that has just been moved, can easily take longer than 45 seconds.

Measured on the bench: a QMX+ with a genuine fix failed the one-shot three times, then locked — and the panadapter picked it up **25 minutes after boot**, which the old code could never have reached. If your GPS takes its time, you no longer have to do anything.

A GPS-disciplined QMX shows **UTC(GPS)** in the bottom bar and is a top-tier source (as good as SNTP); a non-GPS QMX shows **UTC(QMX)** and only helps when offline.

Note - Why step 2 asks who set the clock

The Tab5 pushes its own time into a non-GPS QMX to set that radio's clock — which leaves the radio agreeing with the Tab5 *because the Tab5 put it there*. Until v1.8.5 a close-enough agreement was taken as proof of GPS, so a radio with no GPS at all could be labelled UTC(GPS), and worse, the Tab5 then stopped maintaining the clock of the one radio that had no other source. A clock the Tab5 has set is no longer accepted as evidence about itself. The flag clears when the radio's clock is plainly its own again — a QMX's clock is not kept across a power cycle, so switching it off and on is what re-arms detection.

Note - The label needs the radio to still be there

A remembered verdict says *this radio is GPS-disciplined*, not *GPS is keeping time right now*. With the QMX unplugged the Tab5 has no GPS of its own, so the label falls back to whatever is actually in charge — usually UTC(NTP). Reported by Don N2VGU, whose Tab5 read UTC(GPS) with the radio disconnected; the time was correct throughout, only the label was wrong.

9.5. Setting the time by hand

There is no "Set Manual Time" control in the settings drawer. Earlier versions of this guide said there was, and there never has been on recent firmware — Don WB0LQW went looking for it during a POTA activation and could not find it. Apologies. The clock is set from the FT8 screen:

1. Switch to **FT8**
2. Tap **Options** (left pane)
3. Tap **Sync Time** (bottom right of the modal)
4. A panel appears with three boxes: **[HH] : [MM] : [SS]**
5. Tap **HH** or **MM** to type them on the numpad (0–23, 0–59)
6. **Hold the SS box and let go exactly on the minute** — the seconds are set to 00 the instant you release
7. Tap **Apply**

Step 6 is the one that matters off-grid. FT8 needs the clock right to about a second, and until v1.8.1 the seconds could not be set at all — hours and minutes were editable and the seconds were not, which left no way to get inside a second with no WiFi and no GPS.

The clock is set **when you release**, not when you tap Apply. The release is the measurement, so an Apply a few seconds later would be a few seconds late. Use a watch with a second hand, or listen for the gap between FT8 transmissions. While you hold the box it turns amber and tells you what letting go will do.

If you have typed hours and minutes first, those are used. If you have not, the Tab5 takes the nearest minute to its own clock — so this corrects the seconds without disturbing an hour and minute that are already right.

The time is written to the RTC as well as the system clock, so it survives a power-off.

9.6. FT8-Derived Sync (Offline Fallback)

The panadapter can also **estimate the UTC offset** from decoded FT8/FT4 signal timing and nudge the clock:

1. Decode several messages (requires on-air activity)
2. Measure their timing relative to the slot boundary
3. Estimate the error and apply a damped correction

This runs only as an offline fallback. While SNTP or a GPS-disciplined QMX is available they are authoritative and FT8-derived sync is **ignored** — deliberately. The FT8 slot offset the device measures is dominated by $\sim\frac{1}{2}$ second of one-way *receive audio latency* (QMX SDR + USB buffering), which is **not** a clock error; letting it pull the clock would actually drag your transmit timing late. So it only touches the clock when you're off-grid with no SNTP/GPS.

Most useful when: WiFi is unavailable, no GPS QMX, and your RTC has drifted.

Fine-Tune Time with "Sync Time" (FT8 Only)

In **FT8 mode**, the Options modal includes a **"Sync Time" button** that opens an interactive time-setting panel:

1. Tap the **Options** button (FT8 screen, left pane)
2. Tap the **Sync Time** button (bottom right of the modal)
3. A panel appears with three fields: **[HH] : [MM] : [SS]**
 - **HH / MM** (hours/minutes) — tap to edit via numpad (0–23, 0–59)
 - **SS** (seconds) — auto-syncs from FT8 signals (blue frame = actively syncing, grey = locked). **Hold it and release on the minute** to set the seconds to 00 yourself, which is what you want when there are no FT8 signals to sync from
4. Tap **Apply** to write the time to the RTC and system clock

The **SS field** updates automatically from decoded FT8 messages — each decode gives a sub-second correction estimate. Tap **SS** to toggle between auto-syncing (blue) and locked (grey). While locked, seconds still count at the captured offset, so you don't lose precision after locking.

Use case: You're operating portable without WiFi, your RTC is ~ 5 seconds off, and there's on-air FT8 activity. Set HH/MM manually, let SS auto-sync to the decoded signal timing for a few seconds, lock it, and you're done — FT8 timing is now precise.

FT8-derived sync shows **SS (sub-second)** in the bottom bar when active.

9.7. Bottom Bar Time Display

The center of the bottom bar shows the current UTC time and which source is active:

Indicator	Meaning	Updates
UTC(GPS)	GPS: either the Unit GPS on PORT.A, or a GPS-disciplined QMX (auto-detected, phase-locked to the GPS second, ~10 ms)	every fix / every 5 min
UTC(NTP)	WiFi + SNTP	~1 hour
UTC(FT4) / UTC(FT8)	FT4/FT8-derived offline sync	Continuous (when decoding, offline only)
UTC(RTC)	Tab5 supercap RTC	At boot
UTC(MAN)	Manual time set	On-demand
UTC(QMX)	Non-GPS QMX RTC fallback (offline only)	Every 5 min
UTC	Fallback (no sync source)	—

The suffix tells you at a glance which source is **currently in charge** (the active authority, not merely the last one that wrote the clock). A GPS source (UTC(GPS)) and WiFi/SNTP (UTC(NTP)) are both accurate — if you see either, you're set. If you're off-grid you'll see UTC(FT8)/UTC(FT4) (on-air digital activity), UTC(QMX) (non-GPS QMX clock), or UTC(RTC) (the supercap RTC you set before leaving home).

At the right-hand end of the bar, just left of the Bluetooth glyph, sits the **GPS indicator** when Port mode is *Unit GPS v1.1*: one GPS symbol, coloured by state, with no words beside it — the Bluetooth glyph's construction. It reports the **receiver**, not the clock: amber while it is acquiring, green when locked, red when a lock has gone stale. The suffix only says UTC(GPS) when the symbol is green — the two never disagree, because the suffix is derived from the same lock the symbol shows.

9.8. Slot Timing

FT8 operates on **15-second slot boundaries** aligned to UTC. The panadapter:

1. Reads the current system time
2. Waits until the next 15-second boundary (hh:mm:00, hh:mm:15, hh:mm:30, hh:mm:45)

3. Starts a 15-second capture window
4. Decodes the received FT8
5. Transmits (if armed) at the start of the next boundary

This alignment is **automatic** — you don't configure slots. But **time accuracy is critical**:

- ± 500 ms error -> can miss decodes or transmit off-slot
- ± 1 s error -> very few decodes, transmit often off-time
- ± 2 s error or worse -> FT8 doesn't work

8b. GPS Stats - the sky view (new in v1.17.0)

Tap the UTC clock on the bottom bar, or open **Radio** -> **GPS Stats** in the drawer, and the Tab5 draws what the GPS receiver can see:

- A **sky view** - the satellites in use plotted by bearing and elevation, with elevation rings and the compass axes drawn behind them
- The fix itself, the satellite count, and **which receiver answered**
- The same page is in the browser, composed by the device so the two cannot drift

The bottom-bar clock now distinguishes its source: **U-GPS** for a GPS attached to the Tab5, **GPS** for a GPS-equipped QMX+ answering over CAT.

Two receivers work, and both are confirmed on hardware:

Receiver	Where	How to enable
Unit GPS v1.1	PORT.A	Drawer -> Port mode (relay / Unit GPS) -> <i>Unit GPS v1.1</i>
Module GPS v2.1	30-pin M-Bus	DIP switch 6

⚠ On the Module GPS v2.1 the silkscreen DIP labels read backwards until you realise the groups are named from the **host's** side, not the module's. v1.16.12 shipped with this receiver supported in code but never run on hardware; it runs now.

Your grid fills itself from the fix. If the GPS has a position, the station grid is filled in for you - and a grid you have typed by hand is never overwritten.

⊖ The Unit GPS and the remote power-cycle relay share PORT.A. One cable, two uses: the relay cannot fire while the GPS owns the port, so unplug the GPS before switching back.

9.9. Time Sources Summary

Source	Accuracy	Updates	Works Offline?
Unit GPS (PORT.A)	phase-locked to the second — no measured figure documented yet	every fix (1 Hz)	Yes (plus the date)
QMX GPS	~10 ms (auto-detected, tick phase-lock)	every 5 min	Yes (if QMX has GPS)
SNTP	±10 ms	~1 hour	No
RTC	±1 min	at boot	Yes (30–40 h)
Manual	±1 sec	on-demand	Yes (until power cycle)
FT8-derived	offline fallback only	continuous	Yes

Next: Configure [Settings](#) or troubleshoot [Time Sync Problems](#).

The Tab5 needs accurate UTC for FT8 slot timing. Sources in priority order (highest first):

Source	When applied
Unit GPS (PORT.A)	M5Stack Unit GPS v1.1, selected under Settings ▶ Device ▶ Port mode — satellite UTC including the full date , offline, ranked above every other source while it has a fresh lock
GPS-equipped QMX+	Auto-detected, no setting. Phase-locked to the radio's GPS second (~10 ms, drift-free) and, on radio firmware 1.04_004 and later, carrying the date as well — so an offline QMX+ with a sky view answers the date question by itself. As good as SNTP; re-locks every 5 minutes
SNTP (WiFi)	Always authoritative whenever WiFi is connected and has synced at least once — sets system clock, Tab5 RTC, and NVS
Tab5 RTC	RX8130CE supercap-backed (~30–40 h retention) — applied at boot before QMX or WiFi are available, and only when this firmware's own record agrees with it (see below)
QMX TM ; (no GPS)	Offline fallback only — applied when WiFi is down or has never synced (field/POTA with no WiFi)
FT8 signal timing	Sub-second correction from the decoded signal population's average timing, auto-applied continuously every slot while FT8 is decoding (damped, so a noisy single slot can't yank the clock) — deliberately tracks who you're actually trying to work, not absolute GPS/NTP truth. A manual one-shot version is also available via the Sync Time modal (see below)
Manual	Full HH:MM override in the Sync Time modal — for rare POTA sessions with neither WiFi nor QMX clock

Each accepted sync writes through to the RX8130CE so the clock persists across power-off. The Tab5 also polls the radio every 5 minutes in the background to catch QMX GPS lock events.

The date is checked separately from the time, and the supercap clock is not taken on trust. Every source above except the two GPS ones gives a time of day only, so a perfectly set clock can still log under the wrong day. The Tab5 asks **"Is today's date right?"** about a minute after it starts when it cannot establish the date itself. The RX8130CE still running is *not* proof: it says the battery held, not who last wrote it, and another firmware flashed onto the same Tab5 can leave a date decades out with the battery perfectly healthy. The clock is believed only when this firmware's own record backs it up, has not gone backwards, and is recent enough that somebody has plausibly been watching.

For POTA / no-WiFi use: uncheck **WiFi initiated** in the settings drawer. Time comes from the QMX on USB connect (or the supercap RTC if the Tab5 was recently synced). FT8 slot timing will be accurate from either source.

FT8 time calibration modal

On the FT8 screen, tap **Options** → **Sync Time** to open the time calibration modal. It shows three large boxes: **[HH] : [MM] : [SS]**.

- **HH / MM** — pre-filled from the current UTC clock. Tap either box to edit it with a numpad. Use this for rare POTA situations where neither WiFi nor the QMX clock is available.
- **SS** — auto-syncs continuously from decoded FT8 signals. Each slot, every successfully decoded station contributes a timing sample; a robust outlier-rejecting average (median $\pm$ a tolerance window) across all of them sets the correction, so one bad decode can't throw off the reading. The box border flashes bright blue for ~30 ms each time a fresh measurement lands — a visual heartbeat that sync is active — and the hint below reads **"Flash: FT8 synced..."**. A blue frame means it is actively tracking; tap SS to lock it.
- **Apply** — if only SS was synced (HH and MM untouched), `time_sync_apply_correction_ms()` nudges the system clock by the measured sub-second offset and writes through to the RTC. If HH or MM was edited, `time_sync_set_manual()` sets the full time. The bottom bar shows **UTC(FT8)** after an FT8-derived correction, or **UTC(manual)** after a full manual set.

10. Settings

Swipe in from the right edge to open the settings drawer. All settings are saved automatically.

The top two buttons are not settings but the two ways into help: **User Manual**, which opens this guide at the chapter for the screen you came from, and **Need guidance?**, which lists symptoms and questions in plain words. See [Getting Help](#).

10.1. Basic and Advanced

The drawer is grouped under headings — **Station, Device, Radio, Network, Display, FT8, WSPR** and **Spectrum** — and the button beside the **Settings** title chooses how much of it you see. It reads **BASIC** or **ADVANCED**; tapping it swaps between them. (It said EXPERT until v1.10.0, which described the reader rather than the contents.)

Advanced holds everything. Basic holds the sections an operating session actually reaches — Activation, QMX volume, RF gain, SWR protection, Antenna Tune, WiFi setup, Display brightness, and the FT8 group's distance and reporting options, plus the four WSPR sections when you are on the WSPR page. That is what Basic is *for*: it is the operating set, not a beginner mode. Nothing is lost in Basic; it is only hidden.

Which sections appear in which view is yours to set (v1.10.0). In the web UI, open **Settings** and click **Tab5 config** next to Save: every section in the Tab5's drawer is listed in drawer order with a **Basic** and an **Advanced** tick. A section can be in both, in one, or in neither — neither being a legitimate answer meaning you never want to see it. It is deliberately edited from the browser rather than from the Tab5, so it stays out of the way of anyone who just wants to operate.

A firmware update that adds a new setting **shows** it rather than hiding it behind a layout you saved before it existed — the device records which sections were known when you saved, so anything newer than that takes the shipped default instead of reading as "unticked".

This layout is stored on the device and is deliberately **not** part of a config backup: it is a preference about the menu, not a station or radio setting.

10.2. Radio

These reach the QMX itself over the CAT link.

QMX volume — the radio's own AF gain, in decibels, the same number the QMX shows on its LCD when you click its volume knob. Read back from the radio when you open the drawer, so it agrees with the rig even if you last changed it there.

QMX RF gain — the per-band RF gain from the radio's Band Configuration, 0–99 dB (the QMX default is 54). Because it is **per band**, the Tab5 reads it from the radio rather than remembering a number that would belong to whichever band you were on last; it shows "reading..." until the radio answers, and **"radio not connected"** if the radio is not there at all. Until v1.8.3 it could stick on "reading..." for a whole session: the value was only ever repainted when you *next* opened the drawer, so a single unanswered query left it stuck (reported by Samuel W7STF). It now fills itself in as soon as the radio replies. It writes when you let go of the slider, not while you drag, because this is stored configuration rather than a session setting. Changing it moves the noise floor, so the flat-spectrum reference is re-learned.

Show decoded CW — the line along the bottom of the panadapter carrying the Morse the radio is decoding, in CW/CW-R. On by default. The QMX does the decoding itself, so switching this off frees no processing — only the screen space; see the Decoded CW section of the [Panadapter](#) guide for what the line shows and how the noise is filtered. The same setting is in the browser under **Radio & display**.

CW profiles — a CW centre frequency together with the filter widths to offer with it, so a setup you use often is one tap rather than two menus on the radio (suggested by Uwe DL8UG: *"setting this on the QMX is always a bit of a chore, and half the time you do not have the right values in your head anyway"*).

There are four slots. Edit them in the **browser's Settings window**, under **CW profiles**: a name, a centre frequency, and a tick for each width you want the bandwidth list to offer. Apply one from the button beside it, or from **CW profiles** in the Tab5's settings drawer, where the four slots appear as four buttons.

- The centre must be **500–950 Hz in steps of 25**, which is what the radio accepts. Anything else is corrected as you leave the box, so what you see is what will be stored.
- Names are cut to nine characters — that is what fits on the Tab5's buttons.
- Leave the centre empty to clear a slot.

Warning - Applying a profile changes your radio's stored configuration

It writes the CW centre and all eight filter rows, then asks the radio to reload — which takes about a second, and briefly interrupts reception. It is a deliberate, once-a-session action rather than something to tap while operating. Every write is read back and retried, and the bandwidth list is re-read from the radio afterwards, so what the Tab5 offers is what the radio really has.

Note that setting the CW centre also moves the radio's CW offset and sidetone with it, which is the QMX's own behaviour and not something the panadapter chooses.

CW transmit offset — transmit a little away from the station you are listening to, so a QRP call is not buried in the pile of everyone zero-beating the DX (suggested by Roy K10ER). The centre of the slider is off, and the sign chooses whether you transmit above or below.

Keep it small: around 100 Hz or less is typical, and the slider stops at ± 300 . The point is to land inside the other station's filter, not outside it — most CW operators run a 500 Hz filter or narrower, 200 Hz is not unusual, and the passband is not equally usable right to its edge: the tone gets muddy and a QRP signal has least energy exactly where the filter is already attenuating (Michael KZ4LY). Roy K10ER uses +60 Hz on his own rig. Earlier versions of this page suggested 400–600 Hz, which is outside many operators' filters altogether.

Note - Your QMX may keep showing two frequencies afterwards

The offset works by putting the radio in split — receive on VFO A, transmit on VFO B. When you switch the offset off, the panadapter returns VFO B to VFO A and drops split, and it confirms both by reading the radio back.

The QMX's own LCD may nevertheless keep showing a second frequency until you change band or power-cycle it. That is a display artifact: nothing repaints the second row of the LCD when the VFO mode returns to A over CAT (confirmed by Stan KC7XE, and known on the QRP Labs list). **You are not transmitting off frequency** — VFO B equals VFO A and split is off.

Do not use the `MU;` command to tidy it up. It does clear the display, but it also silently drops the radio's I/Q mode, and the panadapter's spectrum goes flat while the radio keeps streaming audio as though nothing had happened.

The QMX has no XIT, so this is done with **split**: you receive on VFO A and transmit on VFO B, which the Tab5 holds at your receive frequency plus the offset. Set it once and it follows you — a tap on the panadapter, a spot, a memory recall, a band change, the web page, and the radio's own tuning knob. It applies in **CW and CW-R only**, and leaving CW clears it. If you are running your own split, the Tab5 leaves it alone.

Let me use the QMX menus — hands the radio back. The QMX's own menu, and its Band Configuration terminal application, talk over the same USB serial port the Tab5 polls several times a second, so the two fight over it. Tap this before using the radio's own menus: the Tab5 stops sending anything, the spectrum freezes, and a blue bar across the top says so and gives the radio back when you tap it. Resuming re-checks IQ mode, which a trip through the radio's menu can switch off.

While the radio is released the Tab5 will not transmit — an armed FT8 burst and Antenna Tune are both refused rather than keying a radio you are holding.

Radio menus — the QMX's own menu system on the Tab5's screen, so you do not have to reach the radio at all. Unlike the button above it, this does **not** stop the panadapter: it uses the radio's *second* USB serial port, so CAT keeps running while you are in the menus. You have to switch that port on once, on the radio — System config -> GPS & Ser. ports -> USB serial ports -> 2. For a QMX+ with no control panel this is the only way into its menus. See [Radio Menus](#).

10.3. Operator Info

Callsign — Your amateur radio callsign (required for FT8/FT4 logging).

Grid Square — Your Maidenhead grid square (e.g., JO45; required for FT8/FT4 exchanges).

10.4. WiFi

Tap **WiFi setup** in the settings drawer to open the WiFi window.

WiFi On/Off — the WiFi icon button in the WiFi window (shown with a diagonal red slash when off). Toggling it takes effect immediately — off disconnects and stays off; on reconnects right away. Turning WiFi off is useful for field operation (no WiFi overhead, extended battery life).

SSID — Your WiFi network name. Tap **Scan** to list nearby networks and pick one (as of v1.3.6 this also works when your stored network is out of range — hotels, POTA sites — where it previously always reported "No networks found").

Password — Your WiFi password (pre-filled with your saved password; tap the eye icon to show/hide it). Tap **Save** to store it and connect.

Once connected, the settings show your **IP address** — use this to access the web UI from a browser.

Static IP address / Subnet mask / Gateway / DNS server — set in the web UI's Settings window under **WiFi** (there is no Tab5 equivalent for typing them — four addresses on glass is no kindness). **Leave the address empty for DHCP**, which is what every unit does by default, so nothing changes unless you fill it in. It takes effect the next time the Tab5 connects.

Leave the mask, gateway and DNS blank unless you have a reason not to. They are filled in from the address the Tab5 currently holds, so on an ordinary network you only have to type the address itself — and on anything that is not a plain 255.255.255.0 network, that is also the part most easily got wrong by hand.

An address on the wrong network is refused. The Tab5 compares what you type against the network it is on and will not accept an address that would put it somewhere else, telling you both. If you are deliberately setting a unit up for a different network, confirm when it asks and it will be stored as typed.

Use DHCP — a button in the Tab5's settings drawer, under **WiFi setup**. It appears only when a static address is configured. One tap arms it, a second clears the address and restarts on DHCP. This is the way back if a static address ever leaves the web page unreachable, and it needs nothing but the Tab5 itself. The bottom bar always shows the address the unit actually has.

10.5. Time Sync

SNTP Server — NTP pool (usually `pool.ntp.org`). Change only if you have a local NTP server.

Setting the time by hand — there is no control for this in the drawer, despite what earlier versions of this guide said. The clock is set from the FT8 screen: **Options -> Sync Time**. See [Setting the time by hand](#), which also covers setting the seconds — the part that matters with no WiFi and no GPS.

FT8-Derived Sync — Estimates the UTC offset from decoded FT8 signal timing. **Offline fallback only**: it is automatically ignored while SNTP or GPS is available (those are authoritative), and only nudges the clock when you're off-grid with no better source. See [Time Sync](#).

QMX GPS — Detected **automatically**, no setting to toggle. If your QMX (typically a QMX+) is GPS-disciplined, the Tab5 recognises it at connect by comparing the QMX's own second-tick against SNTP, and then phase-locks to the GPS second boundary (~10 ms) as an offline time source. On a non-GPS QMX nothing happens. The bottom-bar clock shows **UTC(GPS)** when a GPS-disciplined QMX is the active source. A clock the Tab5 has itself pushed into the radio is never accepted as evidence of GPS — see [Time Sync](#).

Unit GPS (PORT.A) — not set here. Choose it under **Device -> Port mode**, since the first question is what is plugged into the connector. When it is on, it beats the QMX's GPS and SNTP while it has a fresh lock, and it is the only offline source that also gives the date. See [Unit GPS Time Source](#).

10.6. Display

Flip 180° — Invert the display for upside-down mounting or cable routing.

QMX volume — The radio's own AF gain, **in decibels: the same number the QMX shows on its own LCD**, not a percentage. Available in both Panadapter and FT8 modes. It reads the radio back each time you open the drawer, so if you turn the volume with the rig's own knob the slider follows instead of disagreeing with it. This exists mainly for QMX+ builds with no control panel, where there is no volume knob at all (Randy N4OPI's request). Nothing is sent to the radio until you move the slider, so switching on can never change your volume unexpectedly.

The slider runs 0–50 dB rather than the QMX's full 0–199 dB protocol range, so the useful part of the travel is not crammed into a couple of centimetres. 50 dB is Randy N4OPI's figure from a real radio with the antenna connected — an earlier "not loud enough" reading turned out to have been taken with the antenna off, where the missing loudness was band noise, not gain. If you turn the radio past 50 dB with its own knob the slider knob sits at the end of its travel, but the number still shows the radio's true dB — it has to agree with the LCD.

Two things worth knowing, both from Randy N4OPI's side-by-side check against a real QMX (the numbers do read identically): the QMX only shows the figure on its own LCD when you give its knob a click, and the Tab5 slider reads the radio when the drawer *opens* — so if you turn the rig's knob while the drawer is on screen, the slider catches up the next time you open it rather than tracking live.

Display sleep — Dropdown (Off / 1 / 2 / 5 / 10 / 30 min). After the chosen idle time the backlight turns off; FT8, the radio link, and the web UI keep running. Tap the screen to wake — the wake tap is swallowed, so it can't tune or press anything. A **two-finger double-tap** blanks the display immediately.

Brightness — Screen brightness (0–100%).

Frequency format — How a frequency is punctuated, everywhere it is shown: the readout in the top bar, the FT8/FT4 preset button and its band lists, the WSPR band picker, the frequency keypad and the scale under the spectrum.

The default, 14.074.000, is what the Tab5 has always shown and what the QMX shows on its own LCD. It is not a national convention — Icom, Yaesu and Kenwood group a frequency the same way, using the periods as visual anchors between MHz, kHz and Hz rather than as a decimal point. Matching the radio sitting next to the Tab5 is why it is the default.

The alternative, 14,074,000, is US written grammar: a comma every three digits (*Don N2VGU, who reads and writes frequencies that way and whose instruments offer the choice*). It changes as soon as you pick it — there is nothing to restart.

Spectrum Mode —

- **Normal** — absolute dBm scale
- **Flat** — relative to per-bin noise floor (signals pop above baseline)

10.7. Port mode (PORT.A)

Advanced -> Device. One connector, two possible owners, so there is one setting with two values:

- **Relay (default)** — the remote power-cycle relay drives GPIO53/54, exactly as it always has. A board that has never seen this setting is on **Relay**, so nothing changes when you update.
- **Unit GPS v1.1** — the M5Stack Unit GPS owns those pins as a UART instead, and disciplines the clock from the satellite: time **and the full date**, with no internet. See [Unit GPS Time Source](#).

Switching is live — the pins are handed straight over, and a toast confirms which side has PORT.A. It is refused while a relay pulse or power cycle is running (finish it first), and refused if the GPS UART cannot be brought up (the mode then stays as it was, rather than changing to something that is not working).

Warning - Never leave the Unit GPS plugged in while Port mode is Relay

Relay mode **drives both pins**. The Unit GPS transmits on one of them. They are mutually exclusive by hardware: either plug the GPS in and select *Unit GPS v1.1*, or unplug it and stay on *Relay*. The warning is shown right under the control, and the bottom-bar GPS indicator is hidden entirely while Relay owns the port.

Tip: switch the mode first, then plug the GPS in. The reverse order works but puts the GPS's transmitter against a driven pin for the moment between the two.

The same control is in the web UI's **Miscellaneous** menu, above the remote relay row — the relay row greys out and says why whenever Unit GPS owns PORT.A. See [Web UI](#).

10.8. Battery Care

Charge Limit — Optionally stop charging once the battery reaches a set percentage (default **80%**), to reduce long-term wear on the pack. Enable it and choose the target in the settings drawer; charging restarts automatically if the level later falls well below the target (5% hysteresis). Leave it off to always charge to 100%.

Accurate charge reading while charging — the displayed battery percentage (and the charge-limit trigger) now compensate for the voltage rise that occurs while charging current is flowing. Previously this made the reading jump around while plugged in, and made the charge limit either stick just short of the target or oscillate; both are fixed.

"(limit)" on the battery reading (v1.9.4) — once the cap trips, the battery text on both the Tab5 and the web UI grows a `(limit)` suffix. Without it, "capped on purpose at 80%" and "not charging for some other reason" looked identical.

10.9. Waterfall Controls

Black Level (dB) — How far above noise floor to show as black (default 9 dB). Lower = more colour detail.

Contrast (dB) — Span of the colour ramp (default 45 dB). Lower = more contrast, higher = more gradation.

FFT Window —

- **Blackman-Harris** (default) — best frequency resolution
- **Hann** — smoother peaks
- **Nuttall** — sharpest edges

Waterfall rate — in **rows per second**, default 10. The steps are 1 to 10, then 20, 30 and 40. Before v1.16.12 this was a 1× to 4× multiplier over a fixed 10 rows/s, which could only go *faster*; slower is what was actually wanted, both to put more history on one screen and to cut the waterfall's share of the drawing work. The spectrum and S-meter update rate is unchanged either way.

The same control is in the browser, and the two lists match.

Spur suppression — withdrawn in v1.8.9. The control is no longer in the drawer.

At some dial frequencies the QMX puts a comb of evenly spaced artifacts into the spectrum, and this setting was meant to remove them. It only ever worked at zoom ×1: above that the display is drawn from a second, finer analysis that the suppression never reached, so turning it on or off made no difference at all — and zooming in is exactly what you do when you are looking at a spur.

It also matters less than the original measurements suggested. Those were taken with the antenna disconnected, where the strongest tooth stood nearly 40 dB above the noise. With a real antenna on the same radio it measures about 23 dB, because band noise rises and buries the weaker teeth.

Nothing is lost by its absence, and the work is kept for a future release.

Wherever something is being removed, the thin line under the frequency labels turns teal. You can always see what is being touched.

Note - The 25 Hz nudge is real

Learning a frequency briefly moves the radio 25 Hz and puts it back. You may hear it on CW. It happens once per frequency, about two seconds after you stop tuning, and not at all on a frequency already learned. This is why the feature is off by default.

10.10. Panadapter & Zoom

Still spectrum (*Radio & display, on by default*) — the spectrum and waterfall hold still and the VFO marker moves across them, so a signal stays where you last saw it while you tune towards it. Switch it off and the display re-centres on the dial at every step with the marker in the middle. Applies from **×2 zoom up**; at ×1 the view is already the whole 48 kHz the radio sends, so there is no room to hold it still. The full behaviour, including when the view re-frames, is in [Panadapter -> Still Spectrum](#).

Tune snap (*Advanced*) — the grid a tap on the spectrum lands on, in SSB and the digital modes: **Off**, 250 Hz, 500 Hz or 1 kHz. The default is 500 Hz, which is what earlier versions always did.

Choose **Off** to tune exactly where you tap (asked for by Samuel W7STF). The grid exists because SSB stations sit on whole kilohertz and the ones that stray are usually at the half, so landing on a round number is normally what you want — but it is a preference, and now it is one you can set. CW keeps its own 10 Hz grid, AM its 1 kHz, and tap-to-RIT overrides all of them, because an offset onto one caller's tone needs resolution rather than tidiness.

Distance in Miles — show distances in miles instead of kilometres, in the FT8 decode list **and on the WSPR page** (off by default). Until v1.12.0 the WSPR list and its Best DX panel always printed kilometres regardless of this setting, and the control was not reachable from the WSPR page at all.

Band-plan region — Sets which region's band plan drives the coloured CW/Digi/Phone strip along the bottom of the screen. **Auto** derives it from your grid square; you can also force Region 1/2/3.

Band Presets — Add or remove custom bands. Standard bands (160–10 m) are always available.

10.11. Bluetooth mouse and keyboard

A Bluetooth mouse is the one pointer that works **while the QMX is plugged in**. A USB mouse cannot: the radio occupies the Tab5's only USB host, and sharing it through a hub does not work on this hardware — both devices end up disabled. A Bluetooth mouse never touches that port, so the radio keeps its connection.

For anyone operating with cold or unsteady hands, that is the point: every menu, button and drawer control becomes a click instead of a precise tap on glass.

Warning - The mouse must be Bluetooth 4.0 or later

Only **Bluetooth Low Energy** mice work. The Tab5 gets its Bluetooth from a co-processor that has no Bluetooth Classic radio in it at all, so an older Classic mouse cannot be made to work by any firmware change.

Most mice sold since about 2014 are Low Energy. Look for **Bluetooth 4.0** or later on the box. A dual-mode mouse works on its Low Energy channel.

How to tell which problem you have. A Classic mouse never appears to the Tab5 at all — the Bluetooth symbol keeps looking and never turns blue, because the Tab5 listens only for mice that announce themselves the Low Energy way. A mouse that *does* connect but moves the pointer oddly is a different matter, and that one is worth reporting.

Setting it up

1. Tick **Bluetooth mouse -> Enable** in the settings drawer.
2. **Restart the Tab5.** Bluetooth can only start once the radio link to the wireless co-processor is up, so the switch takes effect on the next boot — the toast says so at the time.
3. Put the mouse into pairing mode and wait a few seconds. It connects on its own.

You only do this once. The pairing is stored, survives a reboot and a firmware update, and the mouse reconnects by itself from then on.

The Bluetooth symbol in the bottom bar sits just left of the WiFi indicator and has three states:

Symbol	Meaning
Dim grey	Bluetooth is switched off
Pale	On and looking for a device
Blue	A mouse or keyboard is ready to use

What works: moving the pointer, left click, and the scroll wheel — the wheel scrolls whatever is under the pointer, so the decode list, the settings drawer and the manual all scroll.

Note - The pointer disappears when the mouse sleeps

A Bluetooth mouse switches itself off after about half a minute of not being moved, to save its battery. The pointer vanishes with it and comes back the instant you touch the mouse — reconnecting takes under a third of a second. This is the mouse looking after its own battery, not a fault.

A Bluetooth keyboard

A Bluetooth keyboard works the same way and needs no separate setting — the same **Bluetooth -> Enable** switch covers both. Pair it and it types into every text field, exactly as the snap-on keyboard does: **Enter** presses Save in any window, **Esc** presses Cancel, **Tab** moves to the next field, and the arrow keys move the cursor.

A keyboard and a mouse can be connected at the same time, in either order.

The on-screen keyboard steps aside whenever a Bluetooth keyboard is connected. That is most of the reason to have one: the on-screen keyboard covers a large part of the display, and with a real keyboard you get that space back.

Warning - US keyboard layout only for now

A Bluetooth keyboard sends key *positions* rather than characters, and the Tab5 currently reads them through a US layout. Letters, digits, **Enter**, **Tab**, **Esc** and the arrow keys are the same on every layout, so typing a callsign, a grid, a frequency or a password works on any keyboard. Some punctuation on a non-US layout will produce a different character. National layouts are planned.

Note - A sleeping keyboard costs you nothing

Like the mouse, a Bluetooth keyboard switches itself off when idle. Pressing any key wakes it, and reconnecting takes a few seconds — but anything you type while it is waking up is held and delivered once the link is back, so you do not lose the first characters.

10.12. Firmware updates

Warning - The next update after v1.14.4 needs a USB-C cable, once

v1.14.4 is the last release that installs over the air for a while. The one after it claims 2.81 MB of flash that no partition has ever used, which means rewriting the partition table — and an over-the-air update can only ever write the app, never the map of the flash. That is deliberate: it is what stops a failed download taking the layout with it.

So the next firmware arrives as a **flasher download** — the same USB-C data cable and the same `flash.bat` / `flash.command` you used the first time. One time, and everything after it is over the air again.

Your settings and your log are kept. Press **Enter** at the flash-type prompt. Do *not* press **E** — that erases the whole chip, including your QSO log and your LoTW private key, and it is not needed here.

The Tab5 will tell you when the time comes: the update window says so instead of offering a download, and it refuses to fetch an image it cannot install.

Updating is one route, and you are always asked (v1.14.4) — when a newer release appears, the version at the bottom of the screen changes to show it. Tap it, and a window opens with **Download now**. The download runs in the background, and when it finishes the same window offers **Restart now**.

Nothing is fetched and nothing is installed until you press something. The earlier "download updates in the background" option is gone: it had been suppressed by a memory guard for months and never actually ran, so removing it made the behaviour match what it had always been in practice.

△ Applying an update [Keeping It Up To Date](#).

10.13. Live Spots

Draws other stations on the spectrum at the frequency they are operating on. Full details, including what the colours mean, in [Live Spots](#).

Live spots (POTA) — On by default. Fetches Parks On The Air activations about once a minute and draws them over the spectrum. Needs WiFi. Switching it off leaves the spectrum completely clean.

RBN spots (CW skimmers) — **Off** by default, and deliberately so: RBN is a continuous global feed over a persistent connection, unlike POTA's occasional fetch. Adds stations the skimmer network is hearing right now, filtered to the band you are on. **Requires your callsign** to be set (the feed asks for one on connect — it identifies you, it is not a password).

DX cluster spots (phone) — **Off** by default, same reasoning: a second persistent connection. This is the source that carries **SSB**. Skimmers are machines, and no machine recognises a callsign spoken into a microphone, so phone activity is structurally invisible to RBN however long you leave it on. A cluster is people typing, so it carries voice contacts, and park and summit references written into the comment. Mode is worked out from the spotter's comment, or from your band plan when the comment does not say. Relayed skimmer spots are dropped, so the cluster cannot double what RBN is already showing.

Whatever you switch on, **one station is one entry**: the same callsign within 2 kHz is merged, an activation spot outranks a plain sighting, and a dropped duplicate folds back in as corroboration — drawn brighter, meaning a receiver copied them just now rather than someone having typed it an hour ago.

10.14. Spot Map

There is no setting here any more — the full-screen map of stations that have reported *your* signal runs its feeds from boot, always, and opens from the **SelfSpotter** button in the drawer (below **Need guidance?**), not a setting or a switch. Full details in [Spot Map](#), including what running the feeds all the time costs.

Wants **your grid square** (the map draws lines from it) and **your callsign** (it is what the feeds are asked about). QRZ callbook credentials are optional and only place RBN skimmers more precisely.

10.15. FT8 Settings

FT8 On/Off — Globally enable/disable FT8 mode.

Field Day Mode — ARRL Field Day mode (on/off, class, section).

Simulation Mode — Practice QSOs with six phantom stations — no QMX needed at all, radio never keyed (red breathing border on screen). See [FT8 Transmit](#).

Fast pounce (early decode) — On by default. Decodes surface ~ 1.8 s *before* the slot boundary (WSJT-X style), so a fresh CQ can be answered in the very next slot and mid-QSO replies land on the beat. Trade-off: the capture window closes early, so a station transmitting late in the slot can occasionally be missed. ⚠ *Not yet A/B-verified on a live band — if your decodes-per-slot drop with it on, turn it off and please report your numbers.*

Tip - v1.16.4 made this actually deliver

Starting the decode early only helps if the *decision* to transmit is taken early too, and until v1.16.4 only one of the Tab5's two processors was allowed to take it. Which one happened to find the station calling you was chance — so the same situation answered immediately about half the time and a full cycle (30 s) late the rest, which is exactly how it looked from the operator's chair (*Gyula HA3HZ*: "sometimes it works well, other times the transmission is delayed"). Both halves may now decide. Verified on the air over three contacts, every message going out in the immediate slot.

Distance in miles — Show the decode list's distance column in miles instead of kilometres.

Report to PSK Reporter — **On by default.** Uploads the stations you decode to [PSK Reporter](#), the same as WSJT-X, so you appear on the map as a monitoring station and other operators can see where they were heard.

What is sent, over the internet only and **never on the air**: your callsign and grid square, and for each station you decode their callsign, their grid (if their message contained one), the frequency, the signal report and the mode. Reports are batched and sent at most once every five minutes.

It does nothing at all until both your **callsign and grid** are set, and it is disabled outright in **Simulation Mode**, so practice contacts can never reach the public map. Uncheck this box to switch it off entirely.

The first report goes out 5–5½ minutes after switching on, so nothing appears immediately. To check it is working, look for **QMX Panadapter** under "Software in use" at pskreporter.info/cgi-bin/pskstats.pl.

FT8 Filters — Include/exclude stations, set auto-reply priority, enable robot mode, grey-listing (see [FT8 Receive](#) for details).

Keyboard — M5Stack Tab5 snap-on keyboard support (if connected). See [The snap-on keyboard](#) below for everything it can do.

10.16. WSPR

The **WSPR** group appears only while the WSPR page is up, and holds **Allow transmitting**, **Declared power**, **Transmit schedule**, **Band hopping** and **Publish spots to wsprnet**. They are described where they make sense — see [WSPR](#).

10.17. The snap-on keyboard

If the M5Stack Tab5 70-key snap-on keyboard is attached it is detected and needs no configuration. It does considerably more than fill in text fields.

Snap it on any time (v1.9.4) — attaching it after boot works too, found and ready to type within a couple of seconds; the same is true of taking it off and reattaching mid-session. Its two LEDs are deliberately dark once it's found - the keyboard works identically regardless of when it was attached, so there's nothing left for a light to usefully distinguish.

Typing. Any window with text fields takes the keyboard directly — WiFi setup, your callsign and grid, CQ messages, FT8 filters, memory channels. **Tab** moves between fields, **Enter** saves and **Escape** cancels.

Getting around.

Key	Does
Arrows	Scroll the settings drawer and the manual. Press repeatedly and it scrolls further each time
Page Up / Page Down	Move a whole screen
Enter	The confirming button of whatever is open — Save, Transmit, Yes
Escape	Closes whatever is in front of you, including the settings drawer and the memory page

Shortcuts. Hold **Ctrl** and press a letter:

Ctrl+R Radio menus	Ctrl+M User manual	Ctrl+H Need guidance?	Ctrl+L QSO log
Ctrl+K Memory channels	Ctrl+P Panadapter	Ctrl+F FT8	Ctrl+S Settings drawer
Ctrl+D Display off			

Any key wakes the display again afterwards.

Changing them. The web page has a shortcuts editor — **Miscellaneous ▶ Keyboard shortcuts**. There are 25 actions to choose from, including zoom, brightness, releasing the radio to its own front panel, and every setup window. **Alt** is left completely unused so you can put your own bindings there without disturbing anything. See [The web interface](#).

Note - Nothing that transmits can be given a shortcut

Deliberately. A button you deliberately press is one thing; a two-key combination that a slipped finger can produce is another. Calling CQ, transmitting and tuning stay where you can see them.

This keyboard has no Shift and no Fn key — **Sym** and **Aa** are handled inside the keyboard itself, so **Ctrl** and **Alt** are what shortcuts can use.

10.18. Audio & DSP

IQ Balance — Adaptive I/Q phase correction (usually on). Suppresses mirror-image signals.

10.19. Diagnostic Logging

The diagnostic log is **always on** — there is nothing to enable. All firmware log output is captured to a 5 MB memory ring, with a rolling copy persisted to internal flash (survives a reboot or power-off) and, if a microSD card is inserted, mirrored to the card as well (see [microSD Auto-Archive](#) for when the card copy is written — the flash copy is always complete). Download via:

- Web UI: open the **Files** menu in the bottom bar and click **Diagnostic download** ↓ (downloads both the live session log and the flash-persisted copy from before the last reboot)
- microSD card: `/qmx-panadapter/qmx-log.txt`
- USB serial: `tools/capture_serial_log.ps1`

Useful for troubleshooting rare issues.

10.20. microSD Auto-Archive — Station Backup

Insert a microSD card (FAT32 or exFAT, any size — a plain 32 GB FAT32 card is ideal) and it automatically mirrors your whole station to `/qmx-panadapter/` on the card. It's a **grab-and-go backup**: pull the card into a PC (or another Tab5) to back up or move your setup — no computer needed in the field.

File	Contents
<code>qso.adi</code>	ADIF QSO log — after each new entry with WiFi off, otherwise at the next start-up
<code>qso.prev.adi</code>	The QSO log as it was just before it last got smaller — see below
<code>qmx-config.txt</code>	All settings + memory channels, as INI text (restore via Config upload)
<code>lotw_cert.b64</code> , <code>lotw_key.b64</code>	Your LoTW signing certificate + private key, so a restored device can sign for LoTW
<code>qmx-log.txt (+.1)</code>	Diagnostic log, rolling (rotated at 5 MB)
<code>README.txt</code>	A plain-text description of every file, written on each mount

After inserting the SD card your Tab5 needs a restart. The Tab5 can only claim the card during a short window early in boot, so a card pushed in while it is running is not used until you restart.

Benefits of a microSD card

The Tab5 works perfectly well without one. With a card in, you also get:

- **A full diagnostic history instead of the last few minutes.** Without a card, the log that survives a restart is held in a small area of internal flash and is overwritten roughly every 11 minutes of busy operating. On the card it is kept whole — so if something goes wrong overnight, or an hour ago, the evidence is still there when you come to report it.
- **A grab-and-go station backup.** Your QSO log, every setting, your WiFi details and your LoTW certificate and key, mirrored automatically. Move the card to another Tab5 and your station comes with it, with no computer involved.
- **A safety net for the QSO log.** The copy from just before the log last got *smaller* is kept beside it as `qso.prev adi`, so a deletion you only notice two restarts later is still recoverable.
- **Somewhere to put things.** Browse, download, upload and delete everything on the card from any computer at `http://qmx.local/files` — without pulling it out.

A plain 32 GB FAT32 card is ideal. There is no benefit to a fast or expensive one: the Tab5 writes a few kilobytes a minute.

After inserting the SD card your Tab5 needs a restart.

When the mirror runs

The microSD card and the WiFi co-processor share a bus on this hardware and cannot both use it reliably. Rather than fail at an unpredictable moment, the Tab5 picks the behaviour that works:

	What happens
WiFi off (POTA/SOTA)	Continuous mirroring the whole time the card is in
WiFi on	One complete backup within a few seconds of switching on, then file mirroring stops — but the diagnostic log and the CW transcript keep going, every 30 seconds

Either way your QSO log, config, and LoTW certificate and key are backed up. With WiFi on, QSOs made later in that session reach the card at the **next start-up** — so if you have been operating with WiFi up and want them on the card now, restart the Tab5.

What the SD dot means (changed in v1.16.3)

The dot reports whether writes are actually **landing**, not merely whether a card mounted:

Dot	Meaning
Green	A write succeeded in the last 90 seconds
Yellow	A card is mounted, but nothing has been written lately
Grey, struck through	No card in the slot — not an error

Before v1.16.3 the dot went yellow about ten seconds into any WiFi session and stayed yellow for the rest of it, whatever the card was doing — so it read the same on a perfectly healthy unit and on one where every write was failing. It now distinguishes those.

A short spell of yellow is not a fault: on a quiet session there may be nothing to write. Yellow that persists while the Tab5 is clearly busy means writes are failing — see [Troubleshooting](#).

While a browser is watching the spectrum, those 30-second writes wait. The card and the WiFi co-processor share a bus, and writing the card holds the spectrum stream for several seconds — long enough to look like the web page has frozen. The writes go through regardless after three minutes, so a crash still reaches the card; close the browser tab if you want the card fully current sooner.

 **The card holds credentials.** A full backup that can *restore* a station necessarily includes secrets: `qmx-config.txt` stores your WiFi password and QRZ/eQSL logins in clear text, and `lotw_key.b64` is your LoTW **private key**. Keep the card as physically secure as a house key. (The on-card `README.txt` repeats this warning.)

The diagnostic log is always-on regardless of whether an SD card is present. If no card is inserted, the log still persists to internal flash (see [Diagnostic Logging](#) above) and survives a power-off.

Taking the card out, and restarting the Tab5 (new in v1.16.11)

Two buttons in the settings drawer:

- **Eject microSD** finishes whatever is being written, closes the card and tells you when it is safe to pull it out. The confirmation stays on screen until you close it, so you can look at the card slot without missing it. Pulling the card without ejecting risks losing the last thing written to it.
- **Restart the Tab5** reboots cleanly from the screen instead of the power button. The card is released first.

The card is now also released automatically before a firmware update. Before v1.16.11 a reset caught the card mid-transaction, and because the Tab5 cannot power the card down on its own the card stayed confused until the whole unit was powered off - which is why a card could take several attempts to mount after an update, or not come back at all.

Restoring the log from the card

The card copy used to be one-way: the Tab5 wrote `qso.ad1` to it and could never read it back, so a log lost to an erase-and-reinstall needed a computer, a browser, and knowing the file was on the card at all. It now restores from the device itself.

- **On the Tab5:** open the log window (**ADIF Log**) and press **Restore from SD**.
- **In the browser:** **QSO Logs ▲ -> ↳ Restore from SD card**.

Both merge: contacts already in the log are skipped, nothing is duplicated, and nothing already logged is lost — so it is safe to press twice. You are told what happened, including how many were already there and how many could not be read.

`qso.prev.ad1` — **the copy from before**. The card mirrors the *present*, so a QSO deleted before a restart is gone from the card at the next start-up too. Whenever the log about to be written is **smaller** than the one already on the card, the older copy is kept as `qso.prev.ad1` first. Normal logging grows the file and never disturbs it, so it holds the last larger version for as long as it takes you to notice.

To use it, copy `qso.prev.ad1` off the card (**Files ▲ -> SD Files** in the browser, or a card reader) and restore it with **ADIF restore ↑**.

10.21. Activation (POTA / SOTA)

When you are activating a park or a summit, every contact you make has to be logged as belonging to **that reference** — it is what POTA and SOTA read to credit the activation, for you and for the people who worked you.

Open **Activation (POTA/SOTA)** in the settings drawer, pick the scheme, type the reference, and tap **Start activation**. From then on every logged QSO carries it automatically. There is nothing to remember per contact.

The screen shows your **contact count against the threshold** — ten for POTA, four for SOTA — and turns green when you reach it. That number is read from the log itself, so it survives a reboot and can never disagree with what was actually written.

Stopping matters as much as starting. While a session is running the main button is a red **Stop activation**, and the drawer button itself shows the live reference rather than a generic label. The failure that actually happens is driving home with it still switched on, quietly stamping every later contact with a park you have left.

The session persists across a restart on purpose — a battery change in the field should not lose it — but it is deliberately **not** included in a config backup, so restoring an old backup can never re-activate a park you are nowhere near.

Chasing works without any setup: if you work a station the panadapter has seen spotted at a park or summit, that reference is written into your log entry automatically.

Uploading just one activation: the web UI's ADIF download can be limited to a single reference, so you get that park's log rather than your entire file.

10.22. SWR protection

While transmitting, the QMX reports its SWR back over the control link. If the reading reaches the limit you set here the transmitter is **latched off** — nothing will transmit again until you clear it by tapping the red warning on the FT8 screen.

Choose **Off, 2.0:1, 2.5:1, 3.0:1 or 4.0:1**. The default is **3.0:1**.

In FT8 the burst is cut short; the SWR is sampled part-way through and the transmission stops there. **In FT4 the check happens after the burst**, so the one burst completes and every later one is blocked. That is not an oversight: FT4 symbols are 48 ms and a control-link query takes about 50 ms, so asking mid-burst would disturb the transmission it is trying to protect. A reading is only acted on if there is real power behind it — the radio can report a meaningless ratio when the amplifier is not actually loaded. That is high enough not to trip on a merely mediocre match, and low enough to stop a burst going into a disconnected antenna, a wrong-band antenna or a damaged feedline — which is how this usually goes wrong in the field. An FT8 transmission is nearly thirteen seconds of continuous key-down, so there is real time to save.

The latch is deliberately sticky. A bad antenna does not repair itself, and resuming automatically would simply transmit into the same fault on the next slot.

Note - Set it to Off if you use a tuner

With a matched antenna the protection never fires, but if you are deliberately loading something unusual you may prefer no interference at all.

10.23. Who has heard me (last 24 h)

This asks PSK Reporter which receivers have copied **your** callsign recently. It is the reverse of the reports the panadapter *sends*, and the two are separate settings — you can have either without the other.

It answers a question no amount of local processing can: **am I actually getting out?** The valuable case is the mismatch. Stations you can hear that cannot hear you is a transmit-side problem — antenna, power, a bad connector — and from the receiving side alone it looks exactly like a dead band.

This one lives in the browser, not on the Tab5. There is no drawer control for it — the answer is a list of stations with distances and bearings, which wants a screen you are already sitting in front of. In the web UI open **Settings -> Spots & reporting** and tick **Who has heard me (last 24 h)**, then **Miscellaneous -> Who has heard me (24 h)** for the list: receiver, country, distance, bearing and the signal report they gave you, sorted by distance.

It is read-only and asks at most once every five minutes, which is the rate PSK Reporter requests.

Note - An empty list is the normal answer if you have not transmitted

Nobody can report hearing you until you have been on the air. Give it a few minutes after a CQ run.

10.24. ADIF & Logging

ADIF Log — View the QSO log on-device. The viewer shows a proper column table:

Column	Content
Call	Callsign
Grid	Their Maidenhead grid square, when they sent one
Country	DXCC entity (looked up from the callsign prefix)
Mode	FT8 or FT4
Band	Band (20m, 40m, ...)
Date	UTC date
Time	UTC time
Sent	Your signal report (SNR)
Rcvd	Their signal report (SNR)
Ref	The park or summit <i>they</i> were activating, when the contact came from a spot

A sticky header row stays pinned while you scroll. Even-numbered rows are lightly shaded so long logs stay easy to scan.

Search — the field under the title filters the list as you type. It matches **callsign, country, mode, band, date, grid and the park/summit reference**, on any part of a word, and several words must all match: `ha3 20m` finds HA3-prefix contacts on 20 m only. Country is searchable even though the ADIF file does not store it — it comes from the same prefix lookup the Country column shows, so the two can never disagree.

If nothing matches, the list says so in as many words: *"Nothing matches X — so this one has not been worked."* That is the question the search exists to answer. The decode list already greys out a station you have worked, but only while that station happens to be on the air; this asks the same question whenever you like (*Gyula HA3HZ*).

Tapping the field brings up the keyboard, and the window moves up and shortens so the matches stay visible while you type. Clear the field to see the whole log again; the search also clears itself each time you open the window.

Today/All filter — the viewer opens on **Today** (falling back to All when nothing was logged today). The toggle button shows the view you *switch to* by pressing it; the title shows the current view with counts.

POTA activation counter — in the Today view the title reads "Today: N (M total)" and turns **green** once today reaches 10 QSOs — a valid POTA activation.

Delete a single record — **long-press** a QSO row: the row highlights red and list scrolling locks. Drag up/down to move the highlight, then release — a Delete/Cancel bar appears at the bottom. **Delete** removes just that one record (useful for duplicates).

Restore from SD — the middle button reads the QSO log back off the microSD card. See [Restoring the log from the card](#) below; there is nothing to choose, and contacts already logged are skipped, so pressing it twice does nothing.

Delete all — the red-bordered button at the bottom-left erases the **whole** log. Two-tap confirm: the first tap arms it (the label changes to "ALL N?"), a second tap within 5 seconds deletes; wait and it disarms itself. There is no undo — download the ADIF from the web UI first if you want a copy. Handy before a POTA activation: start with an empty log and the ADIF at the end is exactly the file you submit.

Anything this window does — a restore, a delete — reports back in a small panel with an **OK** button rather than a message that fades on its own. The result of something you asked for is worth reading, and dismissing it is how you say you did.

Use the web UI to download the full ADIF file for import into WSJT-X, EQSL, or any other logging software — or view and edit it in the browser (**QSO Logs -> View / edit log**).

Exclude Worked Before — When FT8 filtering, skip stations you've already logged QSOs with (requires you to import your own prior ADIF log first).

10.25. Config Import/Export

Config Download — Export all settings + memory channels + ADIF log as a text file (INI format).

Config Upload — Restore settings from a backup file (settings only; memory channels merge).

Use this to:

- Back up your settings before a factory reset
- Transfer settings to another Tab5
- Recover from accidental changes

10.26. Resets — in the browser, not the drawer

These two live in the browser, not in the drawer — a reset you can trigger by mistake on a touchscreen in the field is a worse idea than one that needs a computer. Both are in the web UI's **Miscellaneous ▲** menu.

Reset settings — Erases the stored settings and memory channels, returning everything to defaults, and reboots. Use if something is stuck in a state you cannot get out of. Take a **Config ↓** backup first and you can restore it in seconds.

Reset WiFi — Erases the WiFi credentials and the stored radio/link state. This is the one for a WiFi setup that will not come up no matter what you enter.

Neither of them touches your QSO log. The ADIF log lives in a separate area of flash that is deliberately left alone, so a reset cannot cost you contacts — and neither can a firmware update, which is why a normal flash keeps your log. The only things that erase the log are the **Delete all** button in the ADIF viewer, the same in the web log viewer, and a **clean/erase flash** from the flasher.

Next: Troubleshoot an issue via [Troubleshooting](#) or explore the [API](#).

The settings drawer, opened by swiping in from the right edge. It is grouped — **Station, Device, Radio, Network, Display, FT8, WSPR, Spectrum** — with a **BASIC / ADVANCED** button that keeps the list short until you need it to be long. Which sections sit in which view is yours to set, from the web UI's **Settings → Tab5 config**. Changes save themselves; there is no OK button to hunt for.

11. WSPR

WSPR (Weak Signal Propagation Reporter, pronounced "whisper") answers one question: *where does my signal actually go?* You transmit a very short, very slow beacon carrying only your callsign, grid and power — and stations all over the world that hear it report the fact. Over a few hours you get a map of what your antenna and your band are really doing, at power levels where nothing else would be heard at all.

It is not a contact mode. Nobody replies, there is no exchange, and nothing goes in your log. That is the point: it measures propagation instead of working people.

Swipe → from the left edge to cycle **Panadapter** -> **FT8/FT4/JS8** -> **WSPR** and back.

11.1. The two-minute rhythm

Everything in WSPR is built on a **two-minute cycle**, aligned to UTC. A transmission starts a second or two after each even minute and lasts about 110 seconds, so one cycle carries exactly one beacon.

That slow rhythm is why the page looks calm compared with the FT8 screen. There is no countdown urging you on and no QSO furniture, because there is nothing to answer. The countdown at the top left simply tells you where you are in the current window.

Your clock has to be right. WSPR's decoder searches only a narrow slice of time either side of the cycle boundary, so a clock that is out by more than a couple of seconds will hear nothing and be heard by nobody. The Tab5 keeps itself right from SNTP over WiFi, from the QMX's own clock, or from its internal RTC — see [Time Sync](#). If you are running with no network and no GPS, check the clock before you trust an empty screen.

11.2. Reading the page

The left pane is a log, not a live list of who is on frequency. Spots stay where they are and new cycles are added — an opening band looks different from a closing one only over time, so the page is arranged to let you see that.

Column	Meaning
S	The letter this station is marked with on the waterfall for that cycle — see Which trace is which below. Blank once the cycle it belongs to has scrolled out of the picture
UTC	The cycle this spot came from
CALL	The station heard
GRID	Their Maidenhead locator, as transmitted
COUNTRY	Country from the callsign prefix, spelled out where it fits and shortened where it does not - never a 3-letter code
BND	The band it was heard on, in metres. Blank for spots recorded before v1.10.5, and worth having the moment band hopping is on
PWR	The power they declared , not a measurement
SNR	Signal-to-noise, in the WSPR convention (a 2500 Hz reference — figures around -25 dB are entirely normal and perfectly decodable)
TONE	Where in the 200 Hz sub-band they were heard
DR	Drift: how far the sender moved during the transmission. A stable, oven- or GPS-referenced transmitter reads +0; a crystal warming through the burst reads +1 or -2. Whole Hz, which is what wsprnet publishes, and a coarser measurement than TONE beside it - it is the difference between two half-window estimates, so read a trend across several spots rather than one
DT	How far into the two-minute cycle that transmission actually started, in seconds. Nominal is +1.0 , because a WSPR transmission begins one second into its even minute — so a value far from that is the other station's clock rather than anything at your end
KM	Great-circle distance from your grid. The heading reads MI if you have chosen miles — see Settings . A leading ~ means the distance came from the station's country rather than its grid

Below the list:

- **DX** — the furthest station of the session, which is usually the number you actually want.
- **WSPRNET** — whether spots are being published, and how many can be. "**N of M publishable**" is the publication gate: a station is only sent to wsprnet once it has been heard **more than once**, so N is how many of the M calls heard so far are eligible. This is also why a site like wspr.rocks can show fewer unique calls than this page reports hearing — it only ever received the publishable ones.
- **Flush** — empties the decode list. It asks first, because the list is also the upload queue: anything not yet sent to wsprnet goes with it, and the publishable count resets.

Tip - With a mouse, point at a trace to see whose it is

Hovering a trace on the waterfall names the station, its tone and its signal report, beside the pointer. It matches within about half a WSPR signal's width, so you have to be on the trace rather than near it. There is no hover on a touchscreen, so this adds to the list rather than replacing it — everything it shows is in the table underneath.

The right pane shows the captured 200 Hz window for the cycle just decoded. WSPR's whole sub-band is narrower than a single FT8 signal, so this is a very close-up view: individual beacons appear as near-horizontal lines, and a sloping line is a drifting transmitter.

On a cycle you transmit, the waterfall does not advance — the receiver is stood down for the whole two minutes, so there is nothing to draw. Rather than leave the previous cycle's picture sitting there looking frozen, the display lays down its cycle-boundary marker and keeps the last received image below it, so you can still see what was there before you transmitted. The status line reads **transmitting** throughout.

The panadapter spectrum is not available while WSPR runs. The receiver takes the IQ stream for the whole cycle, so there is nothing left to draw a live spectrum from. This is expected, not a fault.

Which trace is which

Each time a cycle finishes, the traces the decoder examined are lettered on the waterfall — **A, B, C... from left to right by tone** — and the cycle's UTC time is printed at the left end of the row. The same letter appears in the list's **S** column, so a line of text and a mark on the carpet are the same station, and you can tell at a glance which of five traces produced the report you are reading.

The letters describe the cycle **below** the boundary line they sit under, since that is the cycle that just finished. They scroll down the carpet with it and are gone once it leaves the picture, which is why an older row's **S** column is blank.

- **A ? is a trace the decoder tried and could not read.** That is worth seeing: it is the difference between "nothing was there" and "something was there and was too weak", which is the whole question when you are judging an antenna or a band. It usually means a signal a few dB below the decode threshold, but a birdie or a carrier sitting in the sub-band will also collect one.
 - **Not everything gets a mark.** The candidate finder always returns a full quota of possibilities, most of which are its own noise floor rather than signals, so a ? is only drawn for a candidate well above the middle of that cycle's crop. Expect a handful, not a row of punctuation.
 - **A mark that cannot be placed honestly is left out.** Where several traces are too close together to letter separately, decoded stations are placed first and the rest are dropped rather than nudged aside — a marker pointing at the wrong trace is worse than no marker.
 - The letter is drawn a couple of Hz above the tone in the table. A WSPR transmission is four tones about 4.4 Hz wide and the reported frequency is the lowest of them, so the mark sits on the middle of the trace rather than its left-hand edge.
-

Changing band — tap the button at the top of the left pane and a list drops below it. Touch a line and it lights up; if it is the wrong one, keep your finger down and drag until you are on the one you want, then lift to choose it. Releasing outside the list chooses nothing. The band you are on is named in amber.

Warning - Use *this* button, not the top bar

On the WSPR page the top bar's **Band**, **Mode**, **BW** and **Zoom** are greyed out and do nothing: they belong to the panadapter's idea of the radio, while this page owns the dial. Only **Freq** stays live, so a beacon found off the standard dial frequency can still be chased by typing it in.

On **v1.12.0 only**, the top bar's Band control overlapped this panel and took the touch — picking a band from it wrote an FT8 frequency to the radio while WSPR carried on capturing and labelling its spots with the band it thought it was on. If you used the WSPR page on that release, check which band your radio is actually on.

11.3. Settings

All of WSPR's settings live in the **settings drawer** (swipe ← from the right edge) under **WSPR**, and appear only while the WSPR page is up. The page itself keeps just one control — the **TX** button — because that is the only one you reach while a session is running.

Transmitting is the TX button, and nothing else

There is no separate "allow transmitting" setting. The **TX** button on the page is the only control, so there is nothing that can disagree with it.

It is off every time you open the WSPR page, whatever you did last session. A beacon that resumes on its own because of how you left it a week ago is not a decision you made, so the page always starts as a pure receiver — which is a perfectly good way to use WSPR — and transmitting is something you switch on deliberately each time.

Your callsign and grid must be set, in **Station -> Callsign & Grid square**. Without them there is no transmission at all — the same rule FT8 follows. WSPR sends your callsign to every station that hears you and publishes it to a public database, so it uses the identity you entered and nothing else.

Calibrate Power

Before Declared power can offer anything real, the current band needs calibrating.

Calibrate Power sweeps the QMX's *Max. PA voltage* on a **dummy load** — not the antenna — and records the real RF output at each step with the radio's own PC; readback. The result is saved for that band and used from then on.

(v1.14.4) The sweep **stops at your own Max. PA voltage**, and the window shows that figure before you start — so a 9 V QMX, or one you have deliberately limited, is never driven past the setting you chose. It also **stops early once the measured power stops rising**, which is what happens above your supply voltage: on an 8 V supply every step above ~8 V would otherwise re-measure the same watts for minutes of pointless key-down. Bruce N9JCV found both.

Because the sweep can end early, a shorter results table is normal rather than a failure — the window says which of the two limits ended it.

You reach it two ways: the "**Calibrate this band**" button that appears in place of Declared power (or Output power, on other modes) whenever the current band has no data yet, or "**Recalibrate this band**" in the same place once it does — for redoing a band after a change to your antenna or feedline.

Declared power

This is **a claim, not a measurement** — every station that hears you publishes it worldwide, where other operators use it to reason about propagation. But once the band is calibrated, the dropdown only offers the standard WSPR dBm steps your radio actually reaches, and each one is labelled with the **real measured wattage**, not the textbook figure the step's name implies. Picking "33 dBm" no longer means finding out afterwards that the radio actually did something else.

This is also where you protect the finals now. WSPR transmits for about **110 seconds out of every 120** — nothing else this radio does comes close, and QRP Labs warn about exactly this kind of sustained duty cycle in the QMX manual. There is no separate switch for it any more: picking a low declared level (a few hundred milliwatts is plenty to be heard) keeps the finals cool for the length of a beacon run, the same way choosing any other setting on this dropdown does. Anything above 1 W gets a plain warning label, rather than a guard acting on your behalf underneath you.

During each transmission the Tab5 asks the radio what it actually put out, and shows the answer under the dropdown — "*radio measured 1.6 W last burst = 32 dBm*" — so you can see whether a burst matched what you declared.

Switching transmit off stops a burst that is already on the air. The **TX** button keys the radio down at once rather than waiting for the two-minute cycle to end.

Output power

A separate slider, filed next to Calibrate Power, sets the radio's output for every mode **other** than WSPR — FT8, CW, SSB, and so on. It shares the same per-band calibration but is a genuinely different control: WSPR's Declared power always owns the radio while WSPR is running, so the Output power slider doesn't appear on this page at all. Leaving WSPR hands control back to it immediately.

Running WSPR from a lower supply voltage

A low declared power reduces the heat in the finals. It does not remove it from the radio. The QMX limits PA voltage with a pass transistor, so the difference between your supply and the PA voltage in force is dropped inside the radio as heat instead — measured on a bench QMX, holding the PA at 6 V against a 12 V supply cut the finals' own heat by 76% but total heat by only 18%. That trade is worth making — the PA transistors are the fragile, hard-to-replace part — but it is not the whole answer.

If you intend to beacon on WSPR for hours, feed the QMX from a lower supply. The QMX accepts **6.0 to 12.0 V**, and running it at around 9 V means less voltage to throw away as heat anywhere in the radio. This is the one thing that helps which no firmware setting can do for you.

Transmit schedule (*changed in v1.14.5*)

Two numbers describe one repeating group: **Transmit cycles**, then **Receive cycles**.

Set transmit to 2 and receive to 8, and the beacon transmits for two cycles, listens for eight, and repeats for ever. The period is simply the two added together — ten cycles, twenty minutes — and the Tab5 spells it out under the two controls as you change them:

Transmit 2, then listen 8 — repeating every 20 min. Transmitting 20% of the time.

Transmit	Receive	Pattern, repeating	Period
1	4	Tx Rx Rx Rx Rx	10 min
1	9	Tx Rx ×9	20 min
2	8	Tx Tx Rx ×8	20 min
2	3	Tx Tx Rx Rx Rx	10 min

Setting transmit to **Receive only** never keys the radio, and greys out the receive count — with no transmission there is no group to space out.

Why two numbers and not a duty cycle. This used to be "1 in N" plus a separate "bursts per transmission", and that pair had no agreed meaning. "1 in 5" plainly means one cycle in five, and with a single burst that is exactly what it did — but ask for two bursts and the phrase stops saying anything. Does the group grow into the listening time, or is the listening time kept? Two people can read it two ways, and did. Two counts cannot be read two ways.

Your existing setting is carried over exactly. A Tab5 upgrading from v1.14.4 or earlier keeps the schedule it was already running, cycle for cycle — the old "1 in 5" becomes 1 transmit and 4 receive, which is the same thing said plainly.

Transmitting more means keying the finals more. Two cycles in a row give a distant receiver a second chance at you when the first falls in a fade, which is why the QMX's own beacon offers it — and it doubles your share of key-down time. Pick the declared power to match; see **Declared power** above.

Band hopping

Tap **Choose bands...** and tick the bands you want. **Ticking two or more turns hopping on**; leaving one ticked keeps you on that band. There is no separate on/off switch, because the list of bands already says what you want.

Only the bands your radio can actually reach are offered. A QMX is built with a fixed set of filters, so the list is asked of the radio rather than assumed — the bench QMX offers 60/40/30/20/17/15 while a QMX+ covers 160–6 m.

Hopping changes band **between** cycles, never during one, and the waterfall's noise floor is reset on each hop so a quiet band is not painted against the last one's noise.

Publish spots to wsprnet

Off by default. When on, the stations you hear are uploaded to **wspnnet.org**, where they join the public database. This is how WSPR is useful to anyone other than you: your receiver becomes one of the reporting stations that lets other operators see where *their* signals went.

It needs WiFi and your callsign and grid.

11.4. Transmitting

With a callsign and grid set and a transmit count other than **Receive only**, the **TX** button on the page arms the station. Which cycles actually transmit is decided by the transmit schedule, and the button shows what is happening.

The countdown on the button is the time until a real transmission. The schedule is worked out in advance, so **TX ON next 6:14** means a burst is coming in six minutes and fourteen seconds — not that a cycle boundary is due and might or might not be used.

A few things worth knowing before you leave it running:

- **Your radio is keyed for real**, for about 110 seconds at a time. Make sure it is connected to an antenna or a dummy load, and that the power it is producing matches what you declared.
 - **SWR protection still applies.** If the SWR limit in **Radio -> SWR protection** is exceeded, transmitting stops.
 - **The Tab5 wakes up on the page you left it on, but not transmitting.** It returns to the WSPR page after a power cycle and starts receiving; the **TX** button is off, so it will not resume beaconding on its own. Switch it on again when you are ready.
 - **Split stops it, and says so.** WSPR is transmitted on the dial frequency, and the spot you publish names that frequency. If your radio is in split it keys VFO B while still reporting VFO A, so every spot would name somewhere the signal never was. Before each transmission the Tab5 asks the radio, and if split is on it holds the burst and shows **TX held - radio is in SPLIT, clear VFO B**. It will not clear it for you: that is your setting, and on the QMX split cannot be cleared over the cable anyway — use the radio's own menu or power-cycle it.
 - **Simulation mode blocks every byte.** If you want to watch the mechanics without keying anything, turn on **FT8 Simulation Mode** in the drawer; it interlocks WSPR TX as well.
-

11.5. From the browser

The web UI mirrors whatever page the Tab5 is on. Switch it to WSPR with the **Switch to WSPR** link in the bottom bar, and the browser shows the same page the Tab5 does: a **MODE: WSPR** heading, the band selection, the **TX** button with its countdown, the finals-guard voltage, best DX, stations heard per cycle, the wsprnet publishing status — and the table of spots.

The table is shown only while the Tab5 is on the WSPR page, because that is the only time the receiver is running — on any other page it would be a frozen list that looked live.

Transmitting from the browser uses your stored callsign, grid and declared power. They cannot be overridden per request: what goes on the air is the identity you set on the device.

11.6. If nothing is decoded

WSPR is quiet by nature — an empty screen for one cycle means very little. Before assuming a fault:

- **Check the clock.** The bottom bar shows the time source. A clock more than a couple of seconds out will decode nothing.
- **Check the band and the hour.** WSPR follows propagation; 20 m at midnight will be emptier than 40 m.
- **Check the dial.** Each band has exactly one WSPR sub-band, and the picker only offers those — but if you tuned the radio by hand afterwards, you may not be on it.
- **Give it several cycles.** At two minutes each, four cycles is eight minutes. That is a normal amount of patience for this mode.

See also [Troubleshooting](#).

A propagation beacon rather than a contact mode: a very slow, very weak signal carrying only your callsign, grid and declared power, reported by stations worldwide. Swipe → from the left edge cycles **Panadapter** → **FT8/FT4/JS8** → **WSPR**. Receiving is the default and worth doing on its own; transmitting is opt-in.

Calibrate Power measures what your QMX actually does, on your antenna system, at every setting — instead of guessing from a rule of thumb. From the drawer (**Radio** → **Antenna Tune** → **Calibrate Power**, or "Calibrate this band" the first time you open Declared power / Output power on an uncalibrated band), it sweeps *Max. PA voltage* through 45 points on a **dummy load** and records the real RF output at each with the QMX's own **PC**; readback. Takes a few minutes per band; results are saved per band and used from then on.

Declared power (the WSPR drawer) then only offers the standard dBm steps your calibration actually reaches on the current band — no more picking "37 dBm" and transmitting something else entirely. Each step's wattage is the *real measured* figure, not the textbook one, so what you see is what goes out and what gets published to wsprnet with every spot. A WSPR transmission keys the radio for about **110 seconds out of every 120**, so this is also where you protect the finals now: pick a low declared level for long beacon runs, rather than relying on a fixed halving the firmware used to apply underneath you. Anything above 1 W gets a plain warning instead.

Output power, a separate slider filed with Calibrate Power, does the same job for every *other* mode (FT8, CW, SSB, ...) — it has nothing to do with WSPR's own declared level and doesn't appear on the WSPR page, since Declared power always owns the radio there.

 The full chapter: tab5.lav.dk/guide/wspr

12. Radio menus

The QMX's own menu system, on the Tab5's screen — the same 80×24 terminal you would get from a laptop running PuTTY, without the laptop.

This exists because a QMX+ with no control panel has **no other way in**. If you built a headless radio to save weight and space, this is how you reach Configuration, Band config, System config and everything else.

It is equally useful on a radio that *does* have a panel: two lines of LCD and a rotary encoder is a slow way to move around a deep menu, and the Tab5 shows the whole thing at once.

12.1. First: give the radio a second serial port

The terminal runs on the QMX's **second** USB serial port, and that port is off by default. You only have to do this once — the setting survives a power cycle.

On the radio: **System config -> GPS & Ser. ports -> USB serial ports -> 2**

Note - Why a second port, and not the one already in use

The QMX manual is explicit that leaving a terminal session without choosing *Exit terminal* leaves the radio refusing CAT commands. On the port the panadapter is already using, that would take the whole display down with it.

On its own port it cannot. CAT frequency, mode and the S-meter were measured running normally for the entire length of a terminal session — the panadapter keeps working while you are in the menus.

If the port has not been enabled, the Tab5 tells you so rather than failing quietly — and it puts **the whole menu path on screen**, in both the Tab5 panel and the browser, laid out to be followed while you are looking at the radio. The person who needs that instruction is the one who never read this page, so it belongs where the failure happens rather than in a message that disappears. (*Michael KZ4LY*)

12.2. Opening it

=== "On the Tab5"

```
**Settings drawer -> Radio -> Radio menus**
```

The keys are along the top, all the same size: ****▲ ▼ ◀ ▶****, ****Enter****, ****Back****, ****BS****, the ****keyboard**** toggle, and ****Close****.

****With the snap-on keyboard attached you can skip all of that**** and drive the radio's menus directly: arrows to move, Enter to select, digits to type into a numeric field, Backspace to delete, and ****Esc** to leave the screen******. Typing a value is far quicker than the on-screen keys.

Or open it without touching the screen at all: ****Ctrl+R****.

=== "In the browser"

****Radio ▶ Radio menus****

The on-screen buttons work, and so does your actual keyboard – arrow keys, Enter, Esc, and typing. For entering a value into a menu field, the keyboard is much the faster route.

The radio's menus **cascade**: opening a submenu draws a new box over the top of the one you came from, so you can see the path you took. The highlighted row is where you are.

12.3. Leaving it

Use **Close**.

The Tab5 walks the radio back out through its own *Exit terminal* item — it reads the screen to find it, so it still works however deep in the menus you were. That matters: simply dropping the connection is what leaves a QMX ignoring CAT.

Two things happen automatically so you cannot get stuck:

- If you close the browser tab, the session is closed for you.
- If nothing happens for **two minutes**, the Tab5 hands the radio back by itself. You will see "*session timed out — closed*". Open it again to carry on.

You come back to the frequency and mode you left. A trip through the radio's own menus can move the dial on its own — go into Hardware Tests -> Diagnostics to read the supply voltage, come out, and the radio is on 160 m whatever band you started on (*Randy N4OPI*). On closing, the Tab5 puts the frequency and mode back if they moved, along with re-enabling I/Q mode and re-reading the noise floor.

Note - If you changed band on purpose

That gets put back too — the Tab5 cannot tell a band you chose in Band Configuration from one the menus changed behind your back. Set the band again from the Tab5 afterwards.

Tip - Where you land

A session opens on the **first** menu item, not on *Exit terminal* — even though *Exit terminal* is where the previous session left the highlight. That is deliberate: otherwise your first Enter would drop you straight back out.

12.4. Typing and editing a value

A **block cursor** shows where you are typing — in a field like one of the Messages, that is the difference between editing and guessing. (*Randy N4OPI*)

BS deletes leftward. Land on a value, backspace away the digits you don't want, and type the new ones — the cursor sits on the rightmost digit to begin with. In the browser both your Backspace and Delete keys do this.

Note - There is an on-screen keyboard

Tap the **keyboard button** in the top row and a full QWERTY appears along the bottom. It types straight into whatever field the radio has open — there is no separate text box to fill in first. Tap the keyboard button on the keyboard itself (bottom left) to put it away again.

Useful on a Tab5 without the snap-on keyboard, which otherwise has no way to type a value at all. (*Randy N4OPI, Michael KZ4LY*)

Tip - Band config tables: E and D change a setting, and the arrows do not move you

In the **band config** table the Enable/Disable entries accept either ◀ ▶ or the letters **E** and **D** — type them straight in from the on-screen keyboard. Because those fields use the arrows to change the *value*, the arrows will not move you to the next column while you are sitting on one: step onto a numeric column first, then move across.

That is the radio's own behaviour, not a Tab5 limitation, and it explains something that otherwise reads as the arrows being broken in tables. (*Stan Dye KC7XE.*)

Tip - Longer values are backspace-and-retype, not arrow-adjust

Short values — one or two digits — change with ◀ ▶. Anything longer, and anything inside a table, does not: on those the arrows do nothing at all, and in a table they move between columns, which is the radio's own intended behaviour.

For those, use **BS** and type the value instead. Max. PA voltage, the band config columns, CAT Config -> Timeout, System config -> TCXO frequency and the Virtual U3S values all edit this way. (*Randy N4OPI worked this out from PuTTY and told us — it is how the radio has always behaved, not a Tab5 limitation.*)

4b. CW keyer speed (new in v1.17.0)

Asked for by Ralph Hellmig.

The radio's **CW keyer speed** is now a slider in the drawer, directly above IF calibration, and the same control is on the web page - so you can change it without walking into the radio's own menus.

It sets the speed over CAT and then **reads back what the radio actually took**. The radio is the authority here: it does not store the keyer speed itself, so the read-back is the only honest answer about where the speed ended up.

— **A speed of 0 means a straight key**, not "no speed set" - the keyer is off and the radio keys straight through. That is a real setting, so the slider treats it as one.

12.5. What it does not do

- **It does not transmit.** Nothing here keys the radio.
- **It does not know what you changed.** If you alter something the panadapter displays — a filter, a band setting — the Tab5 finds out the same way it always does, from its next CAT poll.
- **It is the radio's interface, not ours.** What the menus contain, and what each item does, is documented in the QRP Labs QMX operating manual.

The QMX's own menu system, on the Tab5's screen, over the radio's **second** USB serial port — so CAT keeps running and the panadapter does not stop. Switch that port on once, on the radio: **System config** → **GPS & Ser. ports** → **USB serial ports** → **2**. For a QMX+ with no control panel this is the only way into its menus.

 The full chapter: tab5.lav.dk/guide/radio-menus

13. Troubleshooting

On the Tab5 itself: swipe in from the right edge and tap **Need guidance?**. It lists these symptoms in plain words, highlights the ones it can see are happening right now, and opens this chapter at the matching section. See [Getting Help](#).

13.1. Common Issues

Spectrum is flat, no signal

Symptoms: Top bar shows Band: ---, spectrum shows no activity.

Causes:

1. **Charge-only USB cable** — the #1 issue
2. QMX not powered on
3. QMX not responding to CAT (firmware too old)

Fix:

1. Try a **different USB cable** — use one you know works for data (USB stick, phone file transfer, etc.)
2. Power cycle the QMX (off 5 seconds, back on)
3. Power cycle the Tab5
4. Check QMX firmware version is v1.03.002 or newer, up to v1.04.010 (v1.04.011 is not recommended yet — see [Quick Start Step 1](#))

If still flat after 10 seconds, proceed to [Collecting Diagnostics](#).

QMX won't reconnect after a restart (v1.3.6 changes)

Before v1.3.6, a QMX that vanished mid-session — powered off and on, or present across a Tab5 restart — could stay invisible no matter how many times you restarted the radio, and only a Tab5 reboot recovered. That was two separate bugs, and v1.3.6 handles both:

1. **Fixed on the Tab5:** powering the QMX off while it streamed could jam the Tab5's USB port with the dead connection. The Tab5 now cleans up properly and additionally "replugs" the port by itself if a device sits unrecognized — turning the QMX off and back on reconnects within a few seconds, hands off.

2. **Lives in the QMX's own firmware** (reported to QRP Labs; present in v1.03.002 and v1.04.004 alike): after some Tab5 restarts, the QMX answers USB enumeration incorrectly until *it* is restarted. The Tab5 can't fix this one, but it now detects it and shows **"QMX USB is stuck - power-cycle the QMX to reconnect"** on screen. Do exactly that — radio off for a few seconds, back on — and it connects normally.

If you ever see **"USB stuck - power-cycle the QMX (reboot Tab5 if that fails)"** instead, the port ended up in a rarer state: try the QMX power cycle first; a Tab5 reboot is the fallback.

Spectrum signal is shifted/mirrored, or slides across the whole window as you tune

Symptoms: The signal isn't where it should be — it appears shifted, and turning the QMX's own VFO knob slides it across the *entire* 48 kHz window instead of just nudging it. Audio is often silent until you tune the signal back into the visible range.

Cause: The QMX never confirmed IQ mode for this session. Without it, the radio streams plain (non-IQ) audio instead of a properly centred baseband, which produces exactly this symptom.

Fix (v0.19.3+):

1. The panadapter automatically retries the IQ-mode handshake up to 4 times at connect, so this usually resolves itself within a second of the QMX showing up — no action needed.
2. If it still happens, a **red banner appears across the top of the screen** telling you immediately. When you see it:
 - Power-cycle the QMX (forces a fresh handshake on reconnect), **or**
 - Check the QMX's own **System Config -> IQ Mode** setting is enabled
3. On firmware older than v0.19.3, this failure was silent — only visible in the diagnostic log as `QMX IQ mode NOT confirmed`. Updating is the simplest fix.

The radio jumps to 160 m whenever the Tab5 connects (fixed in v1.16.10)

On v1.16.9 and earlier, every CAT link-up moved your radio. To show you a band list, the Tab5 reads it out of the QMX's own **Band config.** menus — and leaving those menus drops the radio on 160 m, in whatever mode the menus left behind. The Tab5 did not put it back. It happened on every connection, to everyone.

What it looks like: you set up on 20 m, the Tab5 connects, and the radio is on 1.837700 MHz in CW. If you run WSPR or a beacon it is worse than an annoyance — you transmit on a band you did not choose.

Update to v1.16.10, which saves the frequency and mode before the scan and puts them back afterwards, and only if the scan actually moved them.

Note - It is easy to blame the wrong thing

This was reported as a dead CAT link, and then blamed on the radio's Virtual U3S beacon — both wrong, and one operator switched off a beacon that was innocent. The giveaway is in the timing: the band menus flick past in well under two seconds, far faster than any beacon schedule.

QMX loses CAT connection after 1–2 minutes

Symptoms: Frequency/mode/BW stop updating, FT8 can't transmit.

Cause: QMX firmware too old or CDC-ACM driver timeout.

Fix:

1. Verify QMX firmware is v1.03.002 or newer, up to v1.04.010 (see Step 1 in [Quick Start](#))
2. Try a shorter/higher-quality USB cable
3. Restart both devices

WiFi won't connect

Symptoms: WiFi modal shows "Connecting..." for 30+ seconds, then fails.

Causes:

1. Wrong SSID or password
2. WiFi network uses 5 GHz (Tab5 prefers 2.4 GHz, but 5 GHz works)
3. WiFi network blocks client-to-client traffic (if you're trying to access the web UI from the same network)
4. Tab5 WiFi module issue (rare)

Fix:

1. Double-check SSID spelling and password (copy-paste if possible)

2. Try your **2.4 GHz WiFi network** instead (if you have dual-band)
3. Forget the network and reconnect: Settings -> WiFi -> tap network name -> Forget -> re-add
4. Restart Tab5
5. If still failing, grab the always-on **diagnostic log** — see [Collecting Diagnostics](#)

The web page won't change my network, or Preferred network is ignored

Symptoms (v1.16.3): you type a different network into **Network name** and save, and it goes back to the old one. Or you set **Preferred network** and the Tab5 keeps joining whichever network it used last.

Two separate faults, both fixed after v1.16.3.

- **Network name was discarded whenever the password field was blank** — even though that field tells you to leave it blank to keep the stored password. So switching to a network the Tab5 already knew did nothing, with no error message, and the page then showed the old name again.
- **Preferred network was only consulted after the Tab5 had failed to connect twice.** It worked when your usual network was down, and did nothing when both were up and the usual one answered first — which is the normal case. It also needed a reboot to take effect.

Fix: update the firmware. Then leave the password blank when you switch to a network the Tab5 already knows, and pick the preferred network from the list of remembered names now shown under both fields. Only a name on that list works.

If you must stay on v1.16.3: choose the network from the Tab5's own settings drawer instead of the web page.

WiFi connects, then stops working after a few minutes

Symptoms: WiFi (web UI, uploads) worked at first, then went dead after some minutes — while FT8 and radio control kept working normally. On older firmware the only fix was a reboot.

This is fixed in v0.20.0. The cause was a low-level lock-up in the link to the WiFi co-processor; the device now recovers from it automatically (dropping one packet, which is simply re-sent) instead of staying wedged. If you're on **v0.20.0 or later** and still see WiFi die permanently, it's a new issue — please capture the diagnostic log (below) and report it. If you're on an **earlier version**, update the firmware.

FT8 decoding is slow or stops

Symptoms: Decode list isn't updating, or only 1–2 decodes per slot.

First: check your firmware version. The long-standing version of this — the first slots of a session decoding well, then collapsing to a fraction and never recovering — was **fixed in v1.1.0**. The cause was audio being lost at the USB wire itself: the transfer pipeline held only 9 ms of queued audio, so any pause longer than that (a decode burst, redrawing the list) let the stream run dry, and roughly 170–350 ms of every slot went missing with no error reported anywhere. The pipeline now holds 320 ms. If you are on an earlier version, update; nothing else on this page will help.

On v1.1.0 or later, the likely causes are:

1. **The QMX stopped sending audio without disconnecting** — a trip through the radio's own menus can do this, because IQ mode is session state the QMX forgets. CAT keeps answering normally, so everything looks connected while the decode list sits empty. The Tab5 re-asserts IQ mode by itself after 30 s of silence; if it does not recover, power-cycle the QMX.
2. **A cable that is not carrying data properly** — intermittent is worse than dead, because the spectrum can still look alive.
3. **Your clock is wrong.** FT8 needs UTC within about a second; see *Time is wrong* below. Candidates stay high while decodes go to zero — that pattern is a timing problem, not a signal one.

What to do:

1. Check the clock in the bottom bar, and what it says it is synced from
2. Try the QMX on a different USB cable, connected directly — not through a hub
3. Turn WiFi off for a few minutes and see whether decodes change
4. Download the diagnostic log after a session (web UI **Files** menu -> **Diagnostic download** ↓) and post it on GitHub — it records the per-slot decode counts and capture timing, which says immediately which of the above it is

FT8 transmit doesn't key the QMX

Symptoms: You tap "Transmit", the modal closes, but nothing happens (no TX light on QMX, no tone on the air).

Causes:

1. QMX firmware doesn't support Kenwood TX; command (v1.03.002+ only)
2. CAT connection is dead (see [QMX loses CAT connection](#) above)

3. Tab5 is in simulation mode (deliberate safety feature)
4. QMX is stuck in a menu (rare)

Fix:

1. Check QMX firmware version (see Quick Start)
2. Try a manual CAT command via web API: `curl "http://<ip>/api/cat" -d '{"cmd": "TX;"}' -H "Content-Type: application/json"`
3. If that fails, you have a CAT issue (see above)
4. Check settings -> FT8 -> Simulation Mode is **off**
5. Restart both devices

Battery drains very fast

Symptoms: Battery goes from 100% to 0% in under 1 hour with normal use.

Causes:

1. Display brightness at 100%
2. WiFi on (drains ~30% more than without WiFi)
3. FT8 decoding (uses more CPU than panadapter alone)
4. Battery is old or defective

Fix:

1. Lower display brightness: Settings -> Display -> Brightness -> 50–70%
2. Turn off WiFi if you don't need the web UI: Settings -> WiFi -> off
3. FT8 decoding uses more power; this is expected
4. If battery still drains in <2 hours with low brightness + no WiFi, the battery may be failing

Time is wrong, FT8 doesn't work

Symptoms: Bottom bar shows wrong time, FT8 decoding says "0" and then stops.

Cause: Time is off by >1 second (FT8 is time-critical).

Fix:

1. Check if WiFi is connected (should auto-sync time via SNTP)
2. Manually set time: Settings -> Time Sync -> Set Manual Time -> enter UTC time
3. If no WiFi and no RTC set, the time will be wrong (see [Time Sync](#))

4. Enable FT8-derived sync: Settings -> Time Sync -> Use FT8-Derived Sync (optional, helps if WiFi isn't available)

For POTA/portable operation without WiFi:

- Set the RTC **before you leave home** (Settings -> Time Sync -> Set Manual Time)
- The RTC holds time for 30–40 hours without power

Web UI stops responding, or the Tab5 restarts, after switching the QMX on during start-up

Symptoms: The web interface is unreachable even though the Tab5 is clearly running and on WiFi, and the unit may be more prone to restarting. Often after powering the Tab5 and the QMX together, or switching the radio on immediately after the Tab5.

Cause: In its first few seconds the Tab5 brings up WiFi, the web server and the decoders, all of which need a small pool of internal memory. A radio appearing over USB in the middle of that competes for the same pool, and the Tab5 can end up short of memory for the rest of the session. The web server is usually the first thing to suffer, because it needs memory to accept each new connection.

Fix: Restart the Tab5, wait until the spectrum is running and WiFi shows a network, and only then switch the QMX on. See [Quick Start](#).

This is a firmware limitation, not a fault in your setup, and it is being worked on.

Web UI won't load

Symptoms: Browser says "Connection refused" or "Can't reach this page".

Causes:

1. Tab5 is not on WiFi
2. You're using the wrong IP address
3. WiFi network has client-isolation enabled
4. Web server crashed (rare)

Fix:

1. Check WiFi is **on** (settings drawer)
2. Check the **IP address** shown in settings (e.g., 192.168.1.50)
3. Use that IP in your browser: `http://192.168.1.50`
4. If still failing, try `http://192.168.1.50:80` explicitly

5. Restart the Tab5

The SD dot stays yellow, or the card crosses itself out (fixed in v1.16.9)

Symptoms: A card is in the slot and the **SD** dot is yellow rather than green, and stays that way while the Tab5 is clearly busy.

What the colours mean. From v1.16.3 the dot reports whether writes are actually reaching the card: **green** = something landed within the last 90 seconds, **yellow** = a card is mounted but nothing has lately, **grey with a stroke** = no card.

Causes:

1. **Nothing to write.** On a very quiet session there may genuinely be nothing due, and yellow is then correct and harmless. The diagnostic log normally writes every 30 seconds, so this is uncommon.
2. **The card driver was starved of memory — fixed in v1.16.9.** This was the common one, and on v1.16.8 and earlier it is what you are almost certainly seeing. **Update to v1.16.9.** If you cannot yet, switching **RX audio** off restores the card, at the cost of the speaker and headphone audio.
3. **A genuinely failing card or slot.** Rarer. The log will show mount-level errors (CRC, invalid response) rather than write failures.

Fix:

1. **Update to v1.16.9**, which fixes cause 2. Reseating, reformatting or replacing the card has never helped anybody and will not help here.
2. If you are staying on an older release, either switch **RX audio** off, or run with WiFi off (the normal POTA/SOTA case), where mirroring is continuous and flawless.
3. To tell cause 2 from cause 3, download the diagnostic log and look for `SDFAIL[slowopen] err=0x5` with a low DMA free= figure (cause 2) versus mount-time errors (cause 3).

Cause 2 is fixed in v1.16.9. It was never your card.

What is actually happening (established v1.16.4, fixed v1.16.9). The card is never the problem in cause 2. The diagnostic log now shows the two lines together, in the same millisecond:

```
E dma_utils: esp_dma_capable_malloc(181): Not enough heap memory
W sd_arch: slow diag mirror failed 3 times running - backing off 60s -> 120s
```

The card is mounted and healthy; the write is **refused before it ever reaches it**, because the card driver cannot obtain a memory buffer of the kind it needs. The Tab5 then backs off 30 s → 60 s → 120 s → 240 s rather than hammering a request that cannot succeed, and the dot goes yellow because that is the truth.

The memory is spoken for by the audio path: v1.16.4's start-up ledger (see below) shows the audio output stage alone taking 46.5 KB of it. **This is why reformatting, reseating or replacing the card has never helped anybody.**

v1.16.9 fixes it. 24 KB of that audio total was a buffer sitting in exactly the memory the card driver competes for, with no need to be there; it now lives in external memory, where 14 MB is spare. Measured on the bench: with the old buffer in place and RX audio on, the card failed 40 seconds after boot with **87 bytes** of that memory left. With it moved, the same unit keeps writing.

Reading the start-up memory ledger (v1.16.4)

Every diagnostic log now opens with a table like this, one line per subsystem:

```
memledger: app_main entry          dma=157499 B (1blk 94208)
memledger: rx_audio_preopen (I2S)  dma= 99323 B (1blk 47104)
memledger: dsp_init                dma= 29923 B (1blk 25600)
memledger: rx_audio_init           dma= 15259 B (1blk 13824)
```

`dma` is the memory left that hardware can transfer directly to and from; `1blk` is the largest single unbroken piece of it. **The second number is usually what matters** — several things need one contiguous block, so they can fail while the total still looks adequate.

You do not need to act on it. It is there so that when something declines to start, the reason is already in the file you send.

The Tab5 restarts on its own while you are listening

Symptoms: The Tab5 reboots without warning, often while audio is playing and sometimes several times in a row. Nothing on screen explains it.

Most likely cause: the 5 V supply is dipping, not a firmware crash. The processor has its own brownout detector; when the rail falls below its threshold it stops the chip immediately. Nothing crashed — it lost power for a moment.

From v1.16.4 the Tab5 tells you. If the previous restart was a brownout, a message says so for twelve seconds at start-up, and the diagnostic log records `reset_reason=brownout`. Garbled sections in the log are a corroborating sign: those are writes cut off mid-write by the power loss.

What to check, in this order:

1. **The USB-C supply.** It wants a genuine 5 V 3 A source. A laptop port or a small phone charger is the usual culprit.
2. **The cable.** A thin or long one drops more than people expect at 2–3 A.
3. **That the battery is actually charging** — the Tab5 leans on it for peaks.

Loud audio is the heaviest moment, so brownouts often strike while you are listening or adjusting levels. That is a symptom of a marginal supply, not a reason to keep the volume down: a healthy supply runs the Tab5 at full volume without complaint.

Raising **AGC Ceiling** to 1500 in v1.16.3 did not cause this, but it does let you reach a louder output than the old 800 limit allowed — which on a marginal supply can be what tips it over (*Samuel W7STF*).

Bluetooth stays grey although the box is ticked

Symptoms: Bluetooth is enabled in the settings drawer, but the symbol in the bottom bar is grey rather than yellow, and no mouse or keyboard is ever found.

Cause: there was not enough memory to start it. Bluetooth needs a contiguous 24 KB of internal memory at start-up. If it is not there, the Tab5 **declines to start Bluetooth** rather than crash, and your setting is left untouched — which is why the box still reads ticked.

The diagnostic log says so plainly:

```
btmouse: internal heap still 21391 B after 60 s (need 24576)
- NOT starting BLE this boot
```

What to do: restart the Tab5 **before** switching on RX audio, and let it settle. Audio is the largest consumer of that memory, so a start-up with audio already enabled is the case most likely to squeeze Bluetooth out.

Known and measured. The margin is genuinely thin, and reducing the audio path's memory footprint is being worked on.

Settings disappear after restart

Symptoms: You set your callsign/grid/WiFi password, but after power cycle they're gone.

Causes:

1. **Not normal** — settings should persist to NVS (non-volatile storage)
2. Recent firmware update may have reset NVS
3. NVS is corrupted (very rare)

Fix:

1. Re-enter your settings
2. If they disappear again, download the diagnostic log (web UI **Files** menu -> **Diagnostic download** ↓) and report on GitHub
3. As a last resort: export your config via the web UI (**Files** menu -> **Config download** ↓), then do a full factory reset, then re-import

A Bluetooth mouse never connects

Symptoms: Bluetooth is enabled, you have restarted the Tab5 and put the mouse into pairing mode, and nothing happens. The Bluetooth symbol in the bottom bar keeps looking and never turns blue.

Most likely cause: the mouse is Bluetooth Classic, not Bluetooth Low Energy. Only Low Energy mice work. The Tab5's Bluetooth comes from a co-processor with no Bluetooth Classic radio in it, so a Classic mouse cannot be made to work by any firmware change, and it never appears to the Tab5 at all — the Tab5 listens only for mice that announce themselves the Low Energy way.

Check the box or the maker's specification for **Bluetooth 4.0 or later**. Most mice sold since about 2014 qualify. A dual-mode mouse works on its Low Energy channel.

If the mouse *does* connect — the symbol turns blue — but the pointer moves oddly or jumps to the edges of the screen, that is a different problem and worth reporting with a diagnostic log, since the Tab5 records what the mouse tells it about its own layout.

Flashing keeps failing, but the COM port is still listed

Symptoms: the flasher runs, the Tab5's COM port is visible in Windows Device Manager, and yet esptool fails again and again — often after the Tab5 has been running for a long time.

Fix: reboot the Tab5 and flash again. Do this before changing cables or reinstalling anything.

Why it happens: unlike most dev boards, the Tab5 has no separate USB-to-serial chip. The serial port you flash over is produced by the **ESP32-P4 itself**, so it only exists while the firmware is running. A busy or unhappy firmware can leave the port enumerated — Windows still lists it — while it no longer responds to the flasher's request to enter download mode. Restarting the Tab5 restarts that serial endpoint with it.

Reported by Samuel W7STF after a seven-hour session; a reboot fixed it immediately. If a reboot does *not* fix it, the usual causes are a charge-only USB-C cable or a serial monitor still holding the port.

Clearing a stuck configuration (web-based reset, new in v0.21.0)

Symptoms: the panadapter behaves as if a setting is wedged — e.g. WiFi won't come up no matter what, or a stored value seems stuck — and re-entering settings doesn't help.

You can now reset from the web page, with no computer or flashing tool needed. In the web UI, open the **Miscellaneous** menu in the bottom bar and pick the scope:

- **Reset settings** — clears the app's stored settings (callsign, grid, filters, preferences) back to defaults. Your memory channels and logs are separate.
- **Reset WiFi** — clears just the Wi-Fi / network state, for when the connection is stuck.

Each choice asks for confirmation first, then the device reboots and clears the selected storage on the way back up. Export your config first (**Files** menu -> **Config download** ↓) if you want to restore it afterward.

13.2. Collecting Diagnostics

If you're stuck, capture a **diagnostic log**:

From the Web UI (Wireless)

The diagnostic log is **always on** — nothing to enable.

1. Reproduce the issue (let it sit for 30 seconds)
2. In the web UI bottom bar, open the **Files** menu and click **Diagnostic download** ↓ — it downloads both the live session log and the copy persisted from before the last reboot (useful if the device crashed or was power-cycled)
3. Alternatively, if a microSD card is inserted, pull `/qmx-panadapter/qmx-log.txt` from the card. With WiFi on it is written every 30 seconds, and those writes wait while a browser is watching the spectrum (never longer than three minutes) — so the card copy can lag by a few minutes. The web download above is always the complete one
4. Post the `.txt` file on [GitHub Issues](#) or the [QRPLabs Groups.io thread](#)

From Serial Console (Offline)

If WiFi isn't working:

1. Plug Tab5 into your computer with a **USB-C data cable**
2. Run: `tools/capture_serial_log.ps1` (Windows) or equivalent
3. Let it capture for 30 seconds while you reproduce the issue
4. Post the log file on [GitHub Issues](#) or the [QRPLabs Groups.io thread](#)

The log includes your firmware version, QMX firmware, callsign, grid, hardware revision, and all serial output from the system.

13.3. Still Stuck?

1. **Check the Quick Start** — most issues are covered there
2. **Read Settings** — verify your configuration
3. **Download the diagnostic log** (always on) — it often reveals the root cause
4. **Post on GitHub Issues or the QRPLabs Groups.io thread** — include:
 - Your symptoms (what you saw, what you expected)
 - Your hardware (Tab5 model, QMX/QMX+, antenna)
 - Your firmware versions (read from the About screen)
 - Your diagnostic log (if applicable)

The maintainer (OZ1LAV) and other users are very responsive to well-documented issues.

Next: Explore [Build from Source](#) if you want to modify the firmware.

Symptoms, their causes and what to do about them — the QMX not appearing, no decodes, a clock that is wrong, WiFi that will not hold, a card that stops being written.

On the Tab5 itself: swipe in from the right edge and tap **Need guidance?**. It lists these symptoms in plain words, highlights the ones it can already see happening, and opens the manual at the matching section.

14. Reference

Gestures

Gesture	Where	Effect
Tap	Spectrum / waterfall	Tune to tapped frequency (snapped)
Touch + drag (hold ~250 ms first)	Spectrum / waterfall	Cyan cursor snaps grid-to-grid; tunes on release
Fast one-finger horizontal swipe	Spectrum / waterfall, any zoom	Pan/"stroll" the view; retunes to the new centre on release
Double-tap	Spectrum / waterfall	Reset zoom and pan to $\times 1.0$ / centred
Pinch (two fingers)	Spectrum / waterfall	Zoom $\times 1.0$ – $\times 24.0$
Two-finger drag	Spectrum / waterfall (zoomed)	Pan the zoomed window
Swipe → from left edge	Left edge strip	Cycle Panadapter → FT8/FT4/JS8 → WSPR
Swipe ← from right edge	Right edge strip	Open settings drawer
Tap right grip handle	Right edge	Open settings drawer (alternative)
Swipe →	Open drawer, or spectrum while drawer open	Close settings drawer
Swipe ↑ from bottom edge	Bottom edge strip	Open memory channel picker
Tap or swipe ↓	Top-bar item (Band/Mode/BW/Freq/Zoom)	Open that item's selector


Gesture	Where	Effect
Touch and hold ~250 ms	FT8 decode list row	Dim preview at ~80 ms; full selection at 250 ms (scroll locks, drag moves highlight, lift to confirm)
Quick swipe	FT8 decode list	Scroll the list normally

Per-unit IF calibration

The QMX's +12 kHz IF injection varies slightly between units. If signals appear consistently shifted left or right of where the QMX is actually tuned, open the settings drawer → **IF calibration** slider (± 100 Hz, persisted to NVS). Default 0. Reported by Ken KF0AYY, whose unit needed about -55 Hz to centre correctly.

Hardware

- **M5Stack Tab5** — ESP32-P4 v1.3 (ECO2), ST7121 or ST7123 5" 720×1280 MIPI-DSI touch display, 32 MB PSRAM, ESP32-C6 co-processor for WiFi
- **QRP Labs QMX or QMX+** — firmware 1.03.002 up to 1.04.010 (1.04 unlocks AM mode + Antenna Tune; 1.04.011 is not recommended yet)
- **USB-A → USB-C data cable** between Tab5 USB-A host port and QMX (full data, not charge-only)
- **USB-C power supply** for the Tab5 (5 V / 2 A or better, or internal battery)

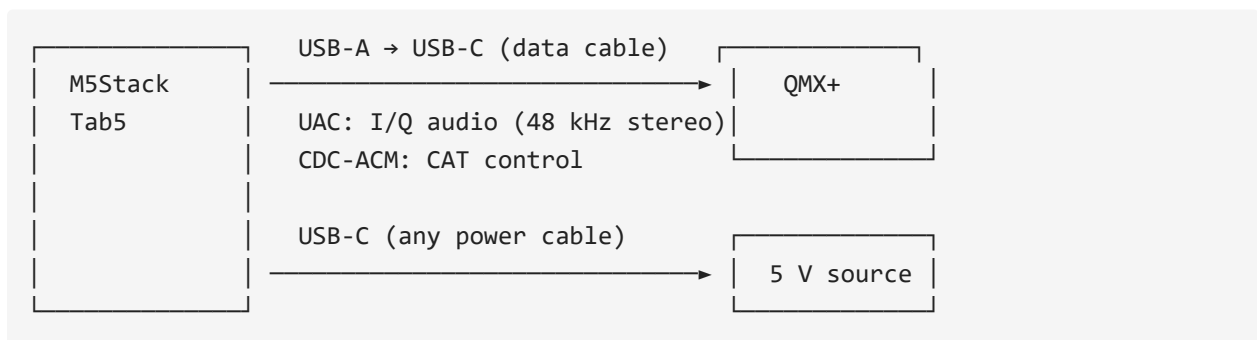

What works without the QMX connected

Works without QMX	Needs QMX connected
UI, settings drawer, gestures	Spectrum + waterfall (no I/Q = flat line)
WiFi, web UI, screenshots	Top bar Band / Mode / BW
Callsign / grid / WiFi credentials	Tap-to-tune, mode popup (CAT writes)
Brightness, colour map, dB range	S-meter, FT8 decode/TX, QMX firmware readout

If the spectrum is flat and the top bar shows ---, that is almost always the radio not being seen over USB — which loops back to the cable (or the QMX being off / in flash mode).

Spectrum signal shifted / mirrored, tunable across the whole 48 kHz window

This means the QMX never confirmed IQ mode for the session — without it the radio streams plain (non-IQ) audio instead of a centred baseband, so the signal appears at the wrong place and slides across the full 48 kHz window as you tune. As of v0.19.3 the Tab5 retries the IQ-mode handshake automatically at connect (up to 4 attempts) and this resolves itself almost every time; if it still fails after all retries, a red banner appears across the top of the screen telling you so immediately, instead of leaving you to figure it out from a shifted waterfall. If you see the banner, power-cycle the QMX (forces a fresh handshake on reconnect) or check the QMX's own **System Config** → **IQ Mode** setting.

Reporting hardware issues

Near the top of the boot log you will see:

```
I (xxxx) bsp_info: === TAB5 BSP INFO ===
I (xxxx) bsp_info: chip:      ESP32-P4 rev v1.3
I (xxxx) bsp_info: psram:    30 MB
I (xxxx) bsp_info: panel:    ST7123 (inferred from touch)
I (xxxx) bsp_info: touch:    ST7123 @ 0x55
I (xxxx) bsp_info: heap:     230.5 kB internal free, 28.80 MB PSRAM free
I (xxxx) bsp_info: idf:      v5.4.4
I (xxxx) bsp_info: firmware: v0.21.0
I (xxxx) bsp_info: =====
```

When opening a hardware issue, paste this block — the `panel` and `touch` lines are the first thing needed to identify which Tab5 hardware revision you have.

Note on `reset_reason`: a deliberate reset-button force-off returns `panic/exception`, not `external-pin/power-on`. A genuine firmware crash always prints a Guru Meditation register + backtrace dump immediately *before* the reboot. No backtrace = abrupt power-off, not a crash.

Appendix — Technical Reference

The sections below are the remaining, more technical parts of the same project README (build instructions, internal design notes, roadmap) — included here so the links above resolve, rather than dead-ending. Skip ahead if you only want operating instructions.

Appendix A — Build from source

Requires **ESP-IDF v5.4.4** — pinned; do not upgrade. ESP32-P4 v1.3 silicon requires `CONFIG_ESP32P4_REV_MIN_0=y` and CPU capped at 360 MHz, both baked into `sdkconfig`.

```
# Activate the IDF environment, then:
idf.py build flash monitor
```

Or with the `qmx` PowerShell helper — add to your `$PROFILE` and adjust the COM port:

```
function qmx {
    param([string]$cmd = "fm")
    if (-not $env:IDF_PATH) { & C:\esp\v5.4.4\esp-idf\export.ps1 }
    switch ($cmd) {
        "b" { idf.py build }
        "f" { idf.py flash }
        "m" { python -m esp_idf_monitor -p COM3 build\qmx_panadapter.elf }
        "fm" { idf.py flash; python -m esp_idf_monitor -p COM3
            build\qmx_panadapter.elf }
        "bfm" { idf.py build flash; python -m esp_idf_monitor -p COM3
            build\qmx_panadapter.elf }
    }
}
```

Exit monitor: ctrl+T then ctrl+X.

Appendix B — Under the hood

I/Q balance correction

The QMX presents I/Q audio with a small but measurable amplitude imbalance and quadrature error between channels. Without correction, every signal produces a mirror image across the centre frequency (~30 dB weaker), cluttering the waterfall on a busy band.

A blind adaptive Gram-Schmidt orthogonaliser runs sample-by-sample in the audio pipeline before the FFT. It maintains running estimates of:

- **DC offset** on each channel ($\tau = 1$ s)
- **Power** in I and Q ($\tau = 200$ ms)
- **Cross-product** I·Q ($\tau = 1$ s) — non-zero cross-product means the channels are not orthogonal

Correction per sample:

```
i_out = i
q_out = (q - K_phi · i) × K_amp
```

No calibration step needed; the estimator converges on ambient band noise within a few seconds of any signal. A two-speed startup runs all alphas at 8× for the first 2 s of real signal after each reset (effective convergence ~125 ms), then drops to steady-state. Toggle in the settings drawer; re-enabling resets the estimator so it reconverges from a clean state.

Quirks and trade-offs

PI4IO expander must be initialised before display bring-up. The Tab5's PI4IO I/O expander holds `LCD_RST` and `TP_RST` low at chip power-on. Without explicit init, on a true cold boot the panel never comes out of reset and the DSI FIFO hangs. Soft resets mask this because the expander retains state across ESP32 resets. `display_init` calls `bsp_i2c_init()` + `bsp_io_expander_pi4ioe_init()` first, then waits 120 ms.

Patched components in components/. espressif__usb_host_uac/ has

`create_background_task = true` — required for UAC and CDC-ACM to coexist on the same USB host. `espressif__esp_lcd_touch_st7123/` makes `FW_VERSION_REG` the only mandatory register read (ST7121 NACKs the others and also adds a `max_touches > 10` bounds clamp). Do not replace either with the registry version without re-applying the patches.

LVGL software rotation (~50% FPS cost). The panel is natively portrait; landscape is achieved via `lv_display_set_rotation(LV_DISPLAY_ROTATION_90)`. Every flush goes through `rotate90_rgb565`. ~13 fps landscape vs ~22 fps portrait — acceptable for a panadapter. PPA hardware rotation conflicts with the USB host stack over DW-GDMA channels and silently kills UAC + CDC-ACM; do not set `CONFIG_LVGL_PORT_ENABLE_PPA=y`. A full native-landscape rewrite would recover the lost FPS but isn't planned — accepted as a permanent trade-off.

IDLE watchdog disabled. The LVGL rotation pipeline keeps CPU0 busy past the default watchdog window. `CONFIG_ESP_TASK_WDT_CHECK_IDLE_TASK_CPU0/CPU1` are off; the app-task watchdog (30 s) is still active.

Cross-thread CAT writes must go through the poll task. Writing CAT commands directly from the LVGL thread races the FA/MD/FW poll on the same CDC pipe — commands interleave and the QMX returns `?`; . Pattern: stash the request in a `volatile` and let `poll_task` drain it on its next cycle. See `s_pending_ssb_bw / cat_request_ssb_bandwidth()` in `cat.c`.

SSB filter bandwidth needs three coordinated writes. `MMSSB|Filter RX=<hz>;` commits the value (persists, shows in QMX menu); `MMSSB|Bandwidth=<hz>;` applies it live; FW; polling must be suspended while the width is pinned because reading the filter makes the QMX revert it. Dead ends: `FW<nnnn>;` CAT set returns `?`; re-asserting the same mode digit does not reload the filter; `Bandwidth` write alone reverts on the next poll.

HTTPS needs mbedtls allocating from PSRAM, not internal RAM. The QRZ/eQSL upload features (v0.16.2) are this firmware's first-ever outbound HTTPS connections — SNTP, the only prior network client, is UDP. With the default `CONFIG_MBEDTLS_MEM_ALLOC_MODE=MBEDTLS_INTERNAL_MEM_ALLOC`, the TLS handshake's 16 KB+ buffers competed for the ~200 KB internal DRAM already under pressure from USB host/audio/FFT/LVGL and every connection failed with `ESP_ERR_HTTP_CONNECT`. Fixed by switching to `MBEDTLS_EXTERNAL_MEM_ALLOC` in `sdkconfig`, which moves those buffers into the 28 MB of free PSRAM instead.

Project layout

main/	
main.c	app_main, task launch, orchestration
display/display.c	BSP bring-up (PI4IO + LCD + touch)
ui/ui.c	LVGL widgets, touch handler, canvases
ui/ft8_screen_view.c	FT8 decode list, touch-drag row selection
ui/ft8_tx_modal.c	TX confirmation modal
cat/cat.c	USB CDC-ACM + Kenwood CAT
audio/audio.c	USB UAC + ring buffer producer
dsp/dsp.c	FFT, spectrum mutex, DC blocker
dsp/iq_balance.c	Gram-Schmidt I/Q correction
ft8_tx.c	FT8 TX engine (build/arm/run/abort)
ft8_test.c	FT8 slot loop (RX decode / TX burst)
ft8_qso.c	Auto QSO state machine
ft8_sim.c	FT8 simulation mode: phantom-station practice QSOs
ft8_status.c	Mutex-protected FT8 status string
adif/adif_log.c	ADIF QSO logging
adif/qrz_upload.c	QRZ Logbook API upload (one record per request)
adif/eqsl_upload.c	eQSL.cc upload (batched, multiple records per request)
rtc/rtc.c	RX8130CE supercap RTC driver
time_sync/time_sync.c	Time sync orchestrator
render/render.c	30 Hz render task, EMA smoothing
render/render_waterfall.c	Waterfall scroll (double-height canvas)
screenshot/screenshot.c	RGB565 framebuffer capture for /ss.bmp
storage/settings.c	NVS-backed settings with debounced flush
wifi/wifi.c	C6 co-processor WiFi + SNTP
net/webserver.c	HTTP server + WebSocket
util/fps.c	FPS counter
util/diag_log.c	Diagnostic log ring buffer (vprintf hook)

Appendix C — Roadmap

The full per-version changelog — every release from v0.1.0 onward — lives in [docs/version-history.md](#). This section tracks only what's planned next.

Next up

v1.17.1 is here. Next on the bench:

- **A full two-way JS8 QSO, unattended.** Receiving and sending free text are both proven on air; the automatic exchange that turns them into a QSO is not written yet. Compound callsigns go with it.

- **Web-UI audio streaming.** Listen to the receiver in any browser on your LAN — demodulated on the Tab5, no PC. Already working in development; held back for quality tuning and an overnight streaming soak. Server mode (screen off, device just serves) rides along.
- **CW page.** Canned-message CW TX memories first; decoded-CW display after (the QMX decodes internally — mirroring it over CAT looks cheap).

Longer term

- **CW decoder.** Goertzel-based, text scrolling under the spectrum. The QMX already does this internally — question is whether to mirror its output via CAT or run a parallel decoder on the Tab5.
 - **Extended waterfall history.** PSRAM has room for several minutes of scrollback; two-finger drag to scrub through history.
 - **QDX / QDX-M support.** Asked for repeatedly. The QDX is I/Q over USB like the QMX, so receive is close; transmit needs a different route, because the QDX has no equivalent of the CAT tone command the Tab5 uses to key FT8. See `docs/qdx-vs-qmx-comparison.md`.
 - **RTTY mode.** See `docs/tty-feasibility.md`. JS8 shipped in v1.17.0.
 - **AM audio.** The demodulator handles CW, USB and LSB; AM is silent, so an AM station means putting the radio in USB (*Samuel W7STF*). The signal path already produces what AM needs, so this is a small job - the work is in the levels, not the demodulation.
 - **DSP polish.** Noise reduction, auto-notch.
-

Appendix D — Related projects

- **Video demo** by Bruce N9JCV — a hands-on walkthrough of the software, filmed on his phone
 - **DX-FT8** by Barb (WB2CBA) — open-hardware FT8 tablet transceiver; an inspiring reference for a similar use-case
 - **grp_companion** by Zhenxing Han (N6HAN) — Tab5 companion for QMX with audio + CAT; source of the polling audio task pattern and battery readout approach
 - **ft8_lib** by Karlis Goba — FT8 encoder/decoder vendored as `components/ft8_lib`
-

Glossary

Common terms and acronyms used in this guide:

Term	Meaning
ADIF	Amateur Data Interchange Format — the standard log-file format for QSO records (exported by the panadapter, uploaded to QRZ/eQSL)
AM	Amplitude Modulation — a voice mode. Receive only on the QMX+, and only on firmware 1_04 and later
ARRL	American Radio Relay League — the US national amateur radio society, which runs Logbook of The World
CAT	Computer-Aided Transceiver — radio control protocol (Kenwood-style commands via serial/USB)
CDC-ACM	Communications Device Class / Abstract Control Model — USB standard for serial ports
CQ	General call to any station (not directed at anyone specific)
CW	Continuous Wave — Morse code mode
dBm	Decibel-milliwatts — absolute signal power (0 dBm = 1 mW); used on the spectrum scale and S-meter
Directed message	A JS8 message aimed at one station, shown with the sender's callsign
DSP	Digital Signal Processing — mathematical signal analysis and filtering
DT	In the decode list, how far a station's transmission sits from the slot boundary, in seconds. It measures THEIR clock against yours, so it stays blank until at least two separate stations have been heard
DX	A distant station, or distance worked. BEST DX on the WSPR page is the furthest station that heard you, or that you heard, this session
DXCC	DX Century Club — the ARRL award programme, and by extension its list of ~340 "entities" (countries plus separately-counted islands and territories)

Term	Meaning
eQSL	Electronic QSL — online service for confirming and exchanging QSO records
FFT	Fast Fourier Transform — algorithm that converts time-domain audio into a frequency spectrum
Free text	A plain typed message rather than a fixed exchange. JS8 carries it; FT8 and FT4 fit only 13 characters
FT8 / FT4	Digital modes for weak-signal HF contacts, trading a short fixed exchange in 15-second (FT8) or 7.5-second (FT4) slots. Both decode and transmit on the device.
GFSK	Gaussian Frequency-Shift Keying — the modulation FT8, FT4 and JS8 all use
GNSS / GPS	A satellite navigation receiver, which gives the Tab5 UTC and the date with no internet - an M5Stack Unit GPS on PORT.A, a Module GPS on the 30-pin bus, or a GPS-equipped QMX+ answering over CAT
GPIO	General-Purpose Input/Output — microcontroller pins for digital signals
Heartbeat	The periodic HB <call> <grid> a JS8 station sends to say it is listening
I2C / SPI	Serial communication protocols for connecting peripherals (sensors, displays, etc.)
IF	Intermediate Frequency — the QMX presents the VFO signal at a +12 kHz offset in baseband
IQ	In-phase / Quadrature — stereo representation of RF signals (real + imaginary parts)
JS8	A keyboard mode built on FT8's modulation that carries free text, so stations hold short conversations. Decoded and transmitted on the device, as a sub-mode of the FT8/FT4 page
LDPC	Low-Density Parity-Check — the error-correcting code that recovers a damaged FT8, FT4 or JS8 message
LoTW	Logbook of The World — ARRL's online QSO-confirmation service

Term	Meaning
LSB / USB (mode)	Lower / Upper Sideband — the two SSB voice modes (note: "USB" also means Universal Serial Bus, below)
LVGL	Light and Versatile Graphics Library — open-source embedded UI toolkit used for the display
Maidenhead / grid	The locator system amateurs use for position, e.g. J065. Four characters is a ~100 km square, six is finer. FT8 and WSPR both carry one
NMEA	The sentence format a GNSS receiver speaks - what the Tab5 reads for time, date and position
NVS	Non-Volatile Storage — persistent memory on the ESP32 (survives power cycles)
PA	Power Amplifier — the radio's final transmit stage. Max. PA voltage sets how hard it is driven, and so how much power comes out; see WSPR and Calibrate Power
OTA	Over-The-Air update - the Tab5 fetching and installing new firmware over WiFi, with no cable
Pileup	Everyone calling you at once. The Tab5 collects them in a list so you can work them in turn
POTA	Parks on the Air — portable operating activity from designated parks
PSK Reporter	A worldwide database of who heard whom. The panadapter can send it your decodes, and reads it back to show who has heard you
PSRAM	Pseudo-SRAM — extra RAM on the Tab5 (used for large buffers like waterfall history)
QMX / QMX+	QRP Labs HF transceiver — the radio this panadapter controls and receives audio from
QRP	Low-power operating, conventionally 5 W or less. QRP Labs, who make the QMX, are named for it
QRZ	QRZ.com Logbook — online logbook and callsign service for uploading QSOs

Term	Meaning
QSO	Radio contact / conversation between two stations
RBN	Reverse Beacon Network — automated receivers ("skimmers") that continuously report the CW and digital signals they hear. One of SelfSpotter's three sources
RIT	Receiver Incremental Tuning — shifts what you <i>hear</i> without moving what you would <i>transmit</i> on. The QMX has RIT but no XIT
RTC	Real-Time Clock — battery-backed timer on the Tab5 (keeps time during power-off)
Slot	The fixed window a digital mode transmits in - 15 s for FT8 and JS8, 7.5 s for FT4. Every station starts together, which is why the clock must be right
SNR	Signal-to-Noise Ratio — signal strength relative to the noise floor; the FT8/FT4 signal report
SNTP	Simple Network Time Protocol — synchronizes the system clock via WiFi/internet
SOTA	Summits on the Air — portable operating activity from mountain summits
SSB	Single Sideband — the voice-mode family (USB / LSB)
SSID	The name of a WiFi network
STFT	Short-Time Fourier Transform — sliding-window FFT used to build the waterfall
SWR	Standing Wave Ratio — antenna impedance matching metric (1.0 = perfect)
TX / RX	Transmit / Receive — keying the radio and listening
UAC	USB Audio Class — standard for streaming audio over USB
USB	Universal Serial Bus — physical connector and protocol (carries both audio and CAT commands). In a radio context, "USB" can also mean Upper Sideband — see SSB.
UTC	Coordinated Universal Time — timezone-independent time standard for FT8 slot alignment

Term	Meaning
VFO	Variable Frequency Oscillator — the radio's tuning dial / frequency setting
WSJT-X	The desktop program most FT8 and WSPR operators use. The panadapter does the same job without a PC, and its decodes and reports are meant to be comparable
WSPR	Weak Signal Propagation Reporter, said "whisper" — a beacon mode carrying only callsign, grid and power. Nobody replies; stations worldwide report hearing you, so you learn where your signal actually goes. See WSPR

Contributing

This is a solo project — all coding is done by the author (OZ1LAV) at his own pace, and **pull requests are not being accepted right now**. Bug reports, feature requests, and field reports are very welcome, though, via [GitHub Issues](#) or the [QRPLabs Groups.io thread](#). See [CONTRIBUTING.md](#) for details.

Appendix E — License

GNU General Public License v3 (see LICENSE). Copyright © 2026 Steffen Lav (OZ1LAV).

Relicensed from MIT on 2026-10-09. The reason was JS8: its coding tables exist only inside JS8Call, which is GPL-3, and a permissive licence put them out of reach. Nothing about using or flashing this firmware changes — the obligation falls on anyone DISTRIBUTING a modified build, who must publish their source. Everything this project depends on is one-way compatible: ESP-IDF and the Espressif components are Apache-2.0, ft8_lib and LVGL are MIT, and no proprietary binary is linked (the ESP32-P4 has no radio — WiFi lives on a separate chip over esp_hosted).