


Instructions to turn on AGX fan - Base Station


Step 1: Press the Start key on your keyboard and open “Files.”




Step 2: Click the “Other Locations” button.

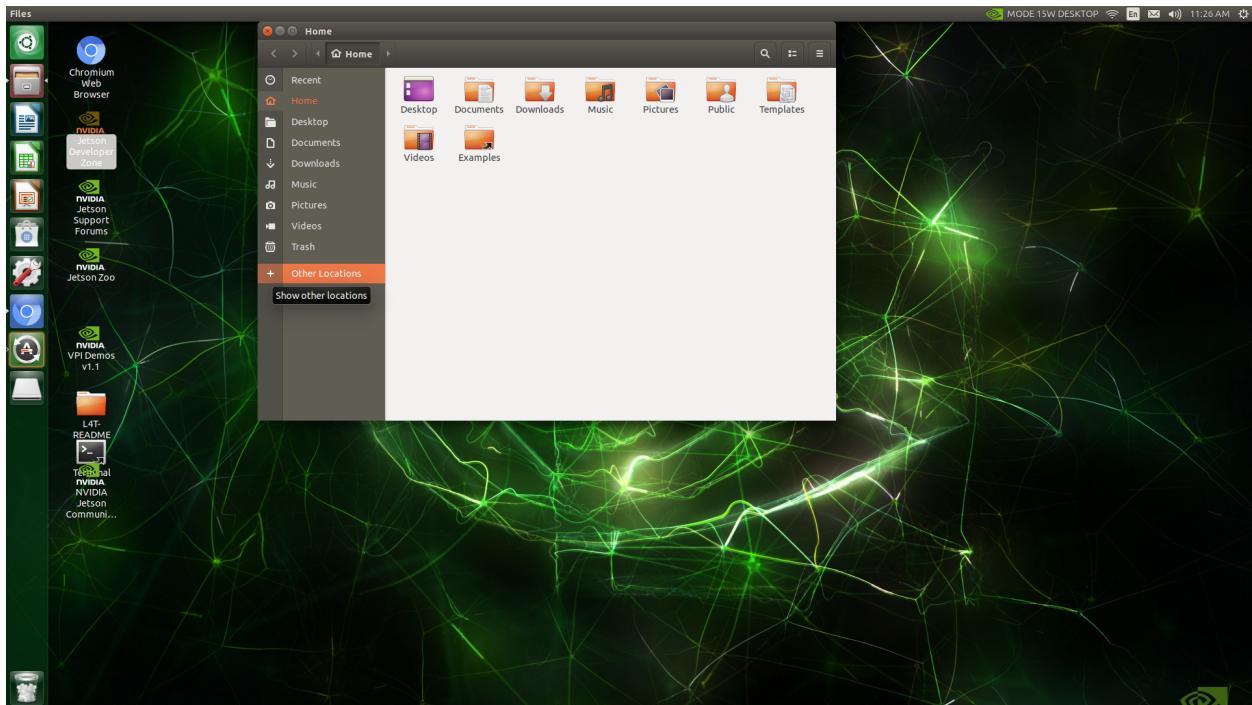


Step 3: Click on “Computer.”

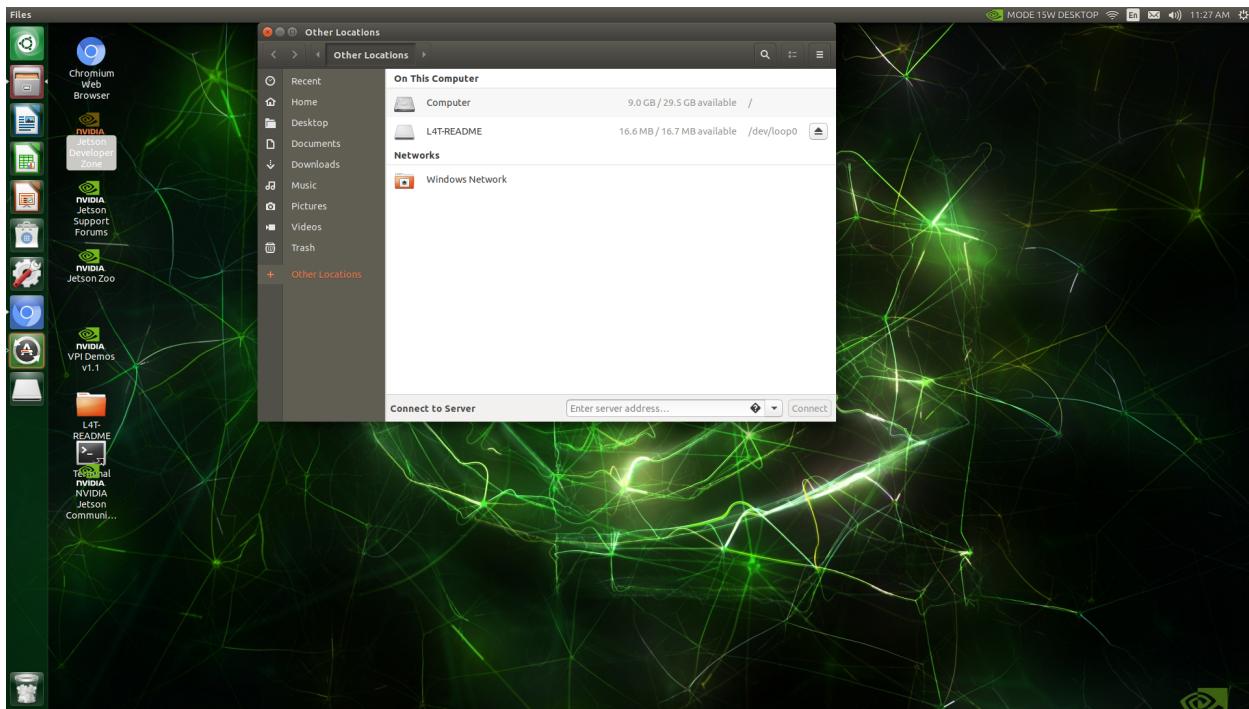

Step 4: Open the root folder to go into root mode.

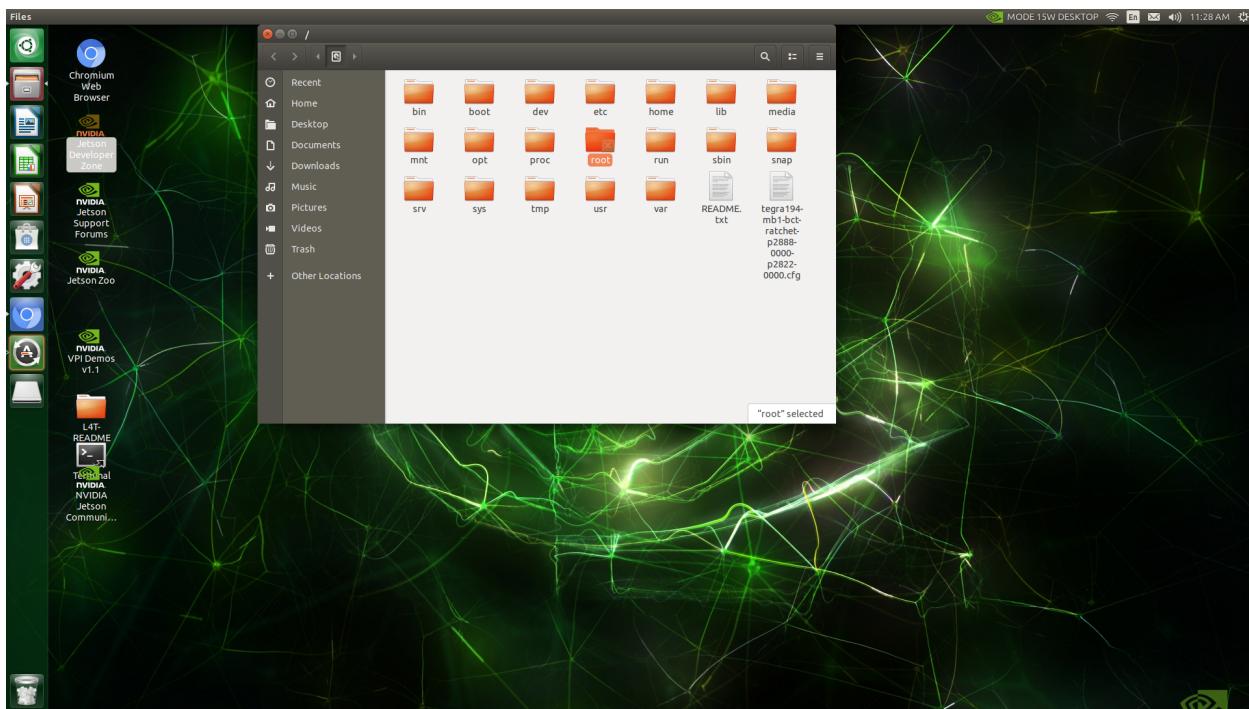


Step 5: Type in and enter the password when prompted.

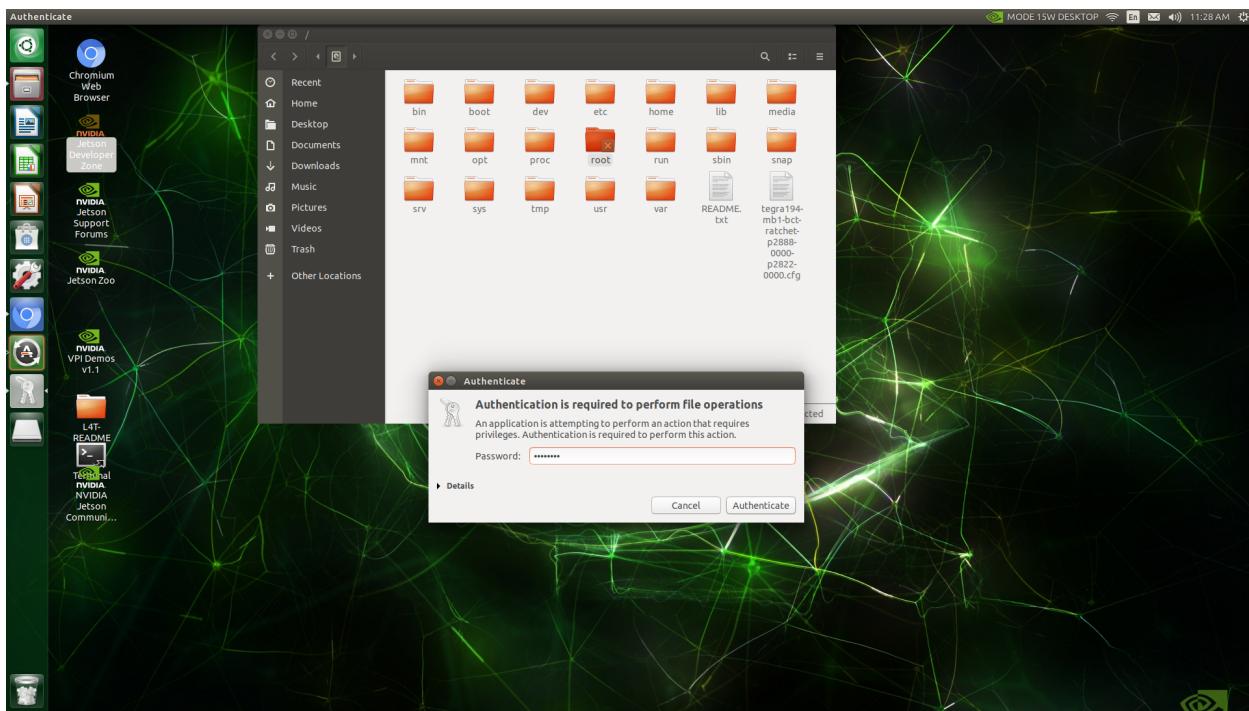


Step 6: Click on the forward slash button “/” at the top next to the root button.


Note: If you are prompted to enter the password again, please do so.

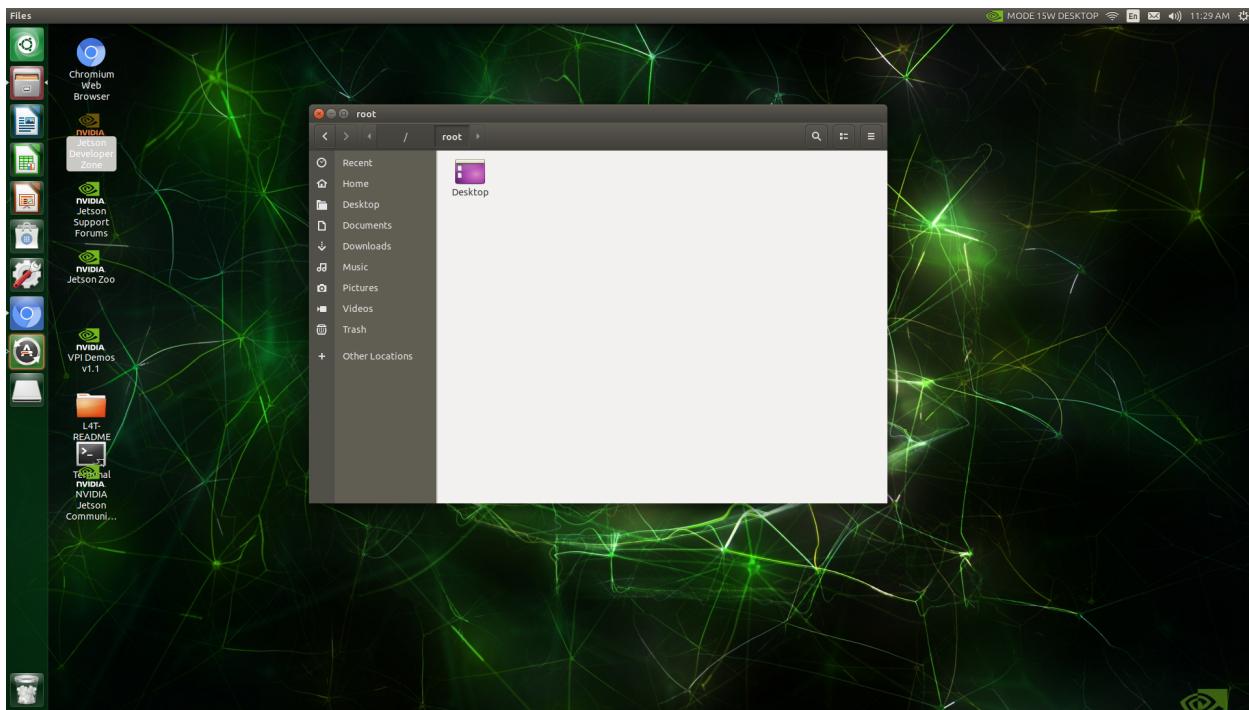


Step 7: Open the “sys” folder.

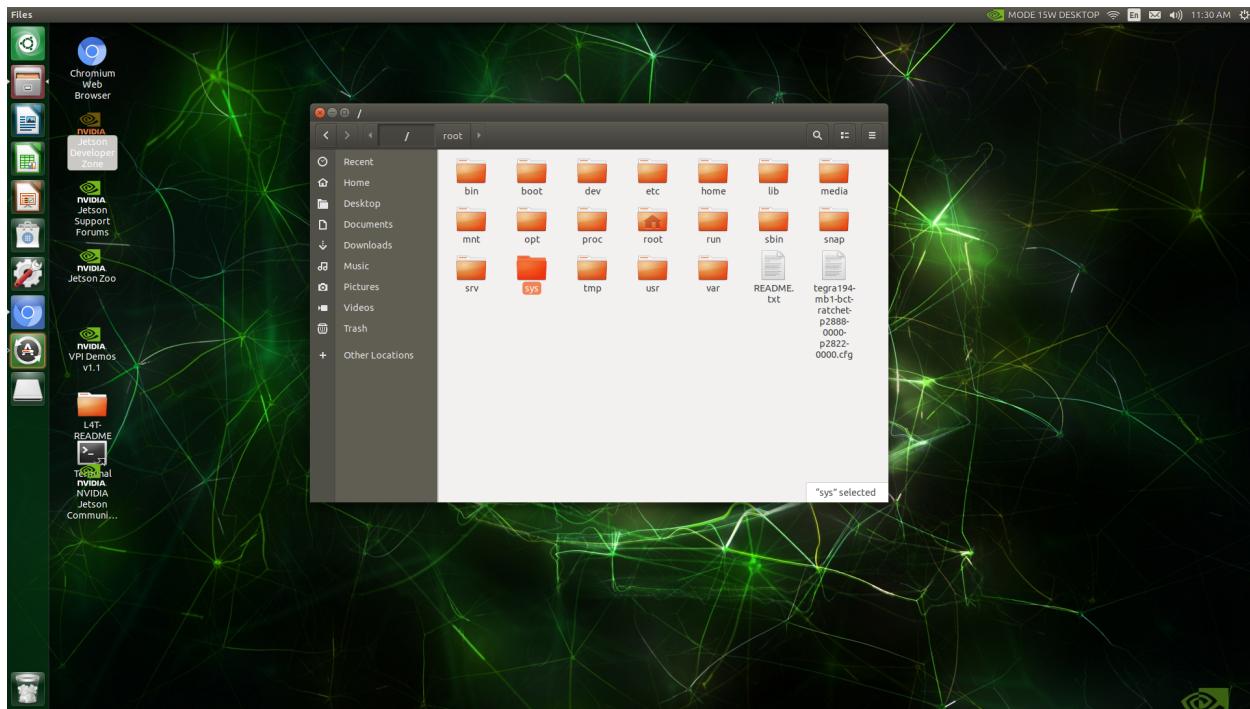


Step 8: Open the “devices” folder.

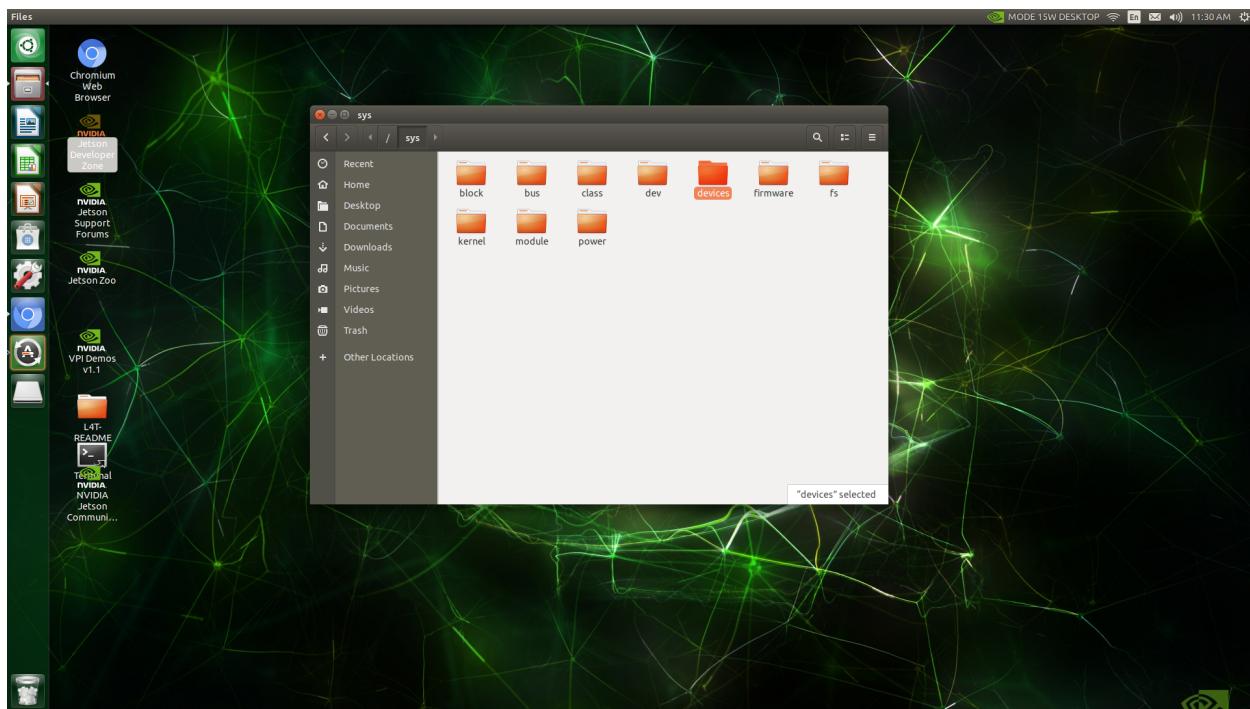


Step 9: Locate and open the “pwm-fan” folder.

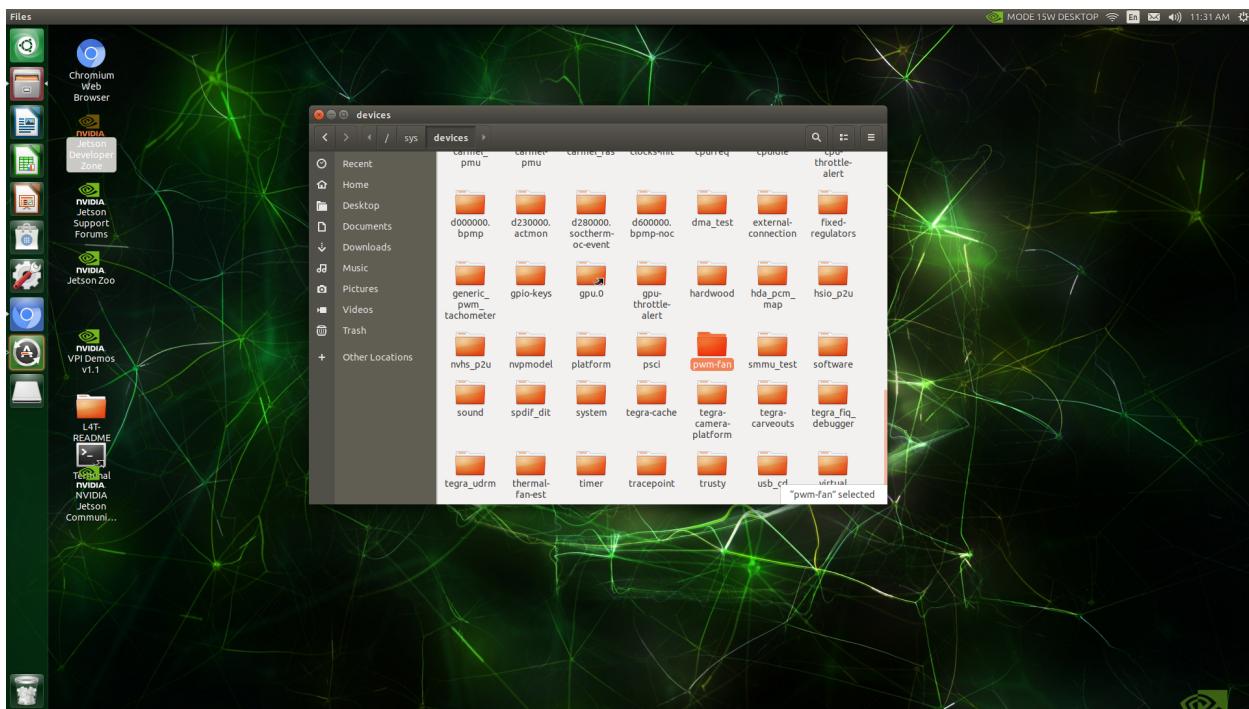

Step 10: Open the “target_pwm” file.

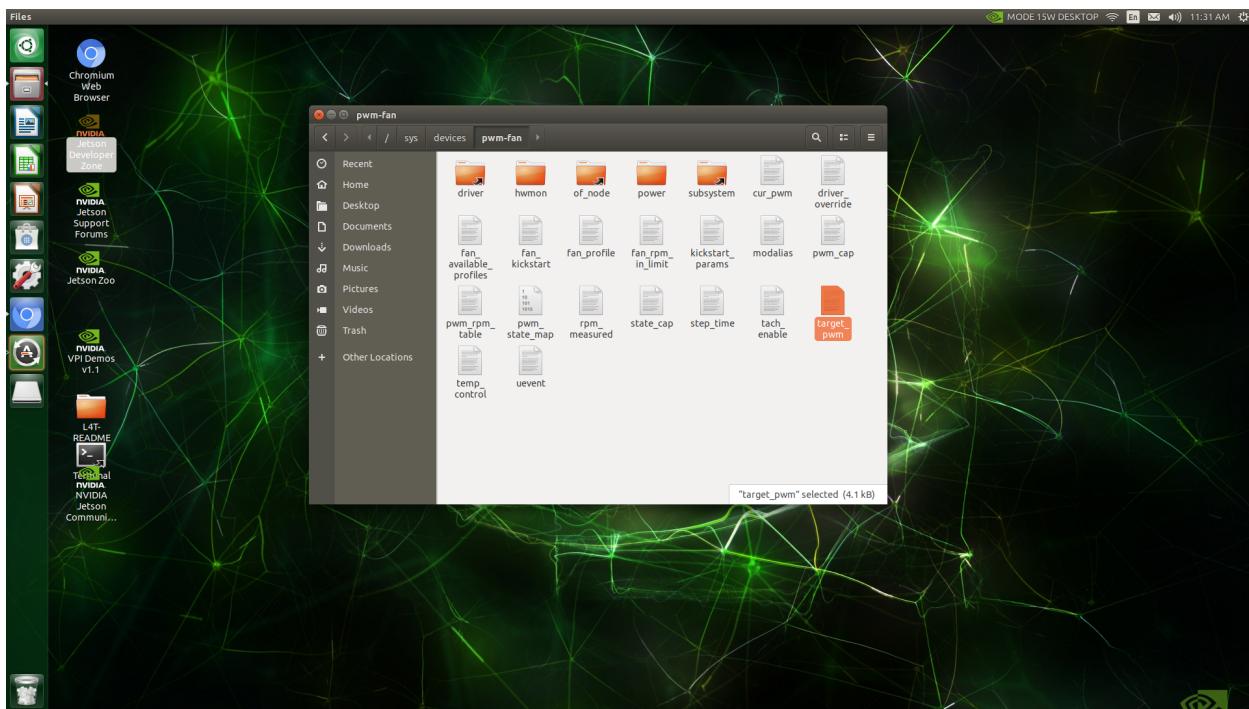


Step 11: Enter the password when prompted.

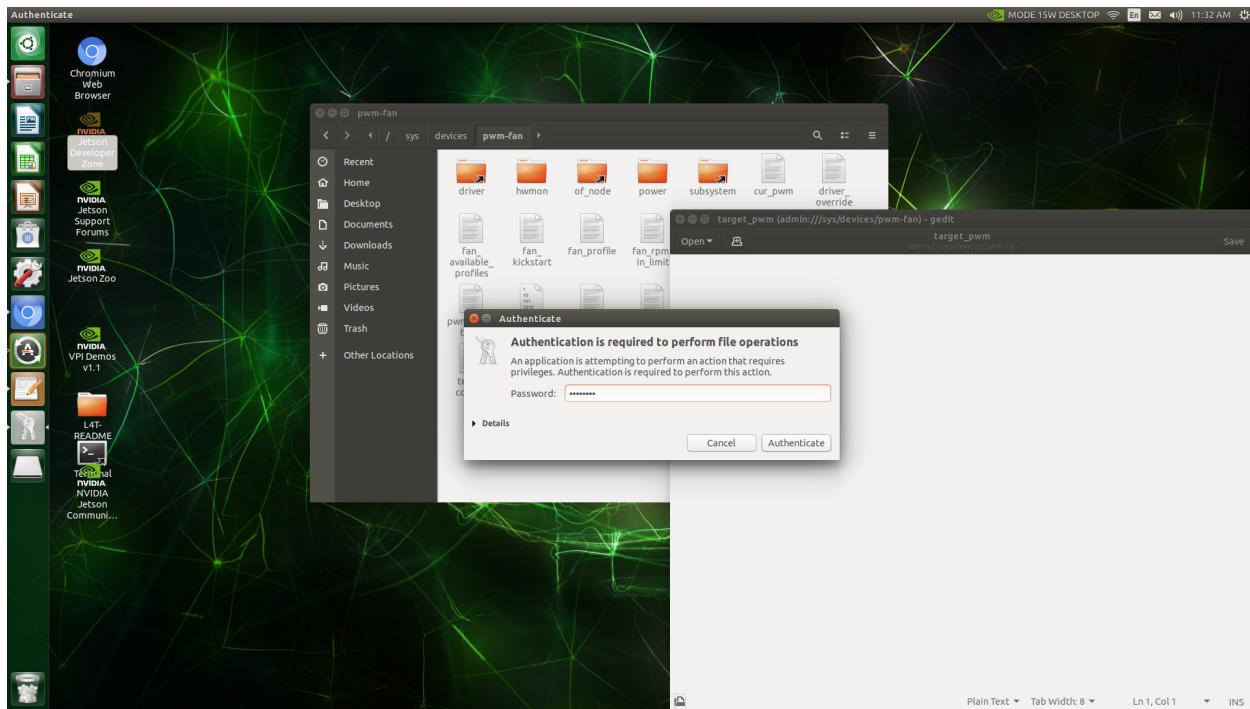


Step 12: Type in the desired fan speed in the file. (0 = off, 255 = max speed).

Note: We would recommend avoiding max fan speed as it may burn the AGX fan out prematurely. We noticed at speed "100" it cools the AGX down pretty quickly at little to no risk of the fan burning out.

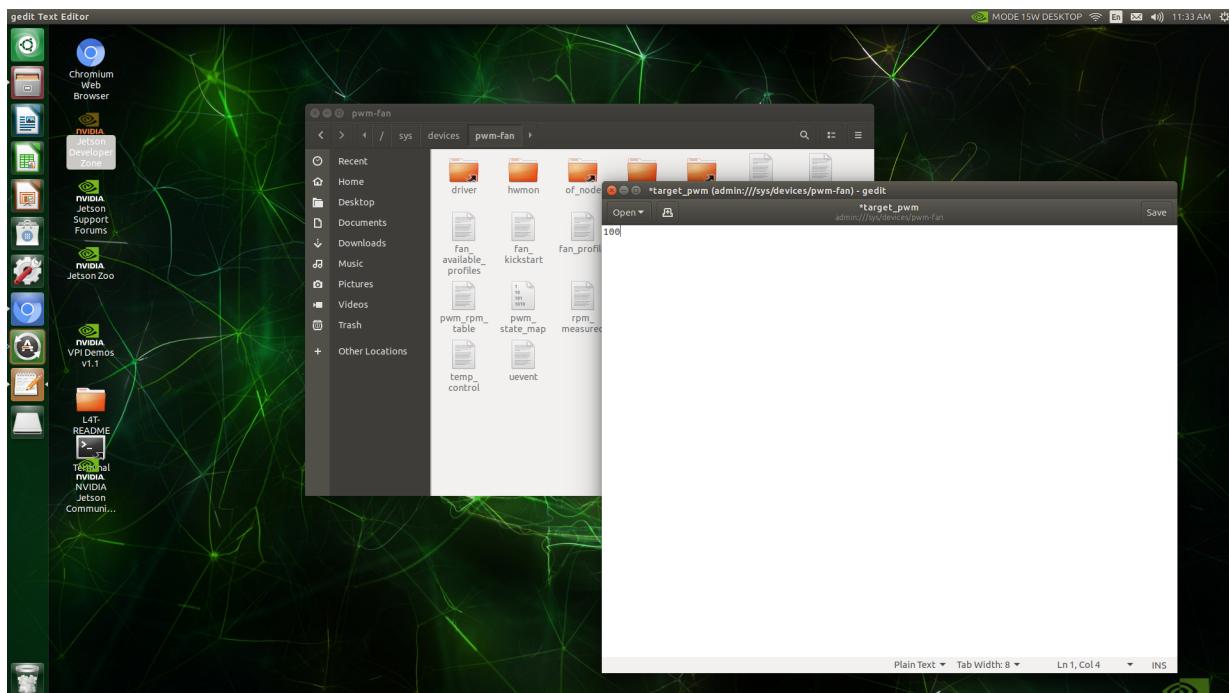


Step 13: Click save at the top right corner to save the file and apply the setting to the AGX.


Note: The fan speed setting resets to 0 after rebooting the AGX.

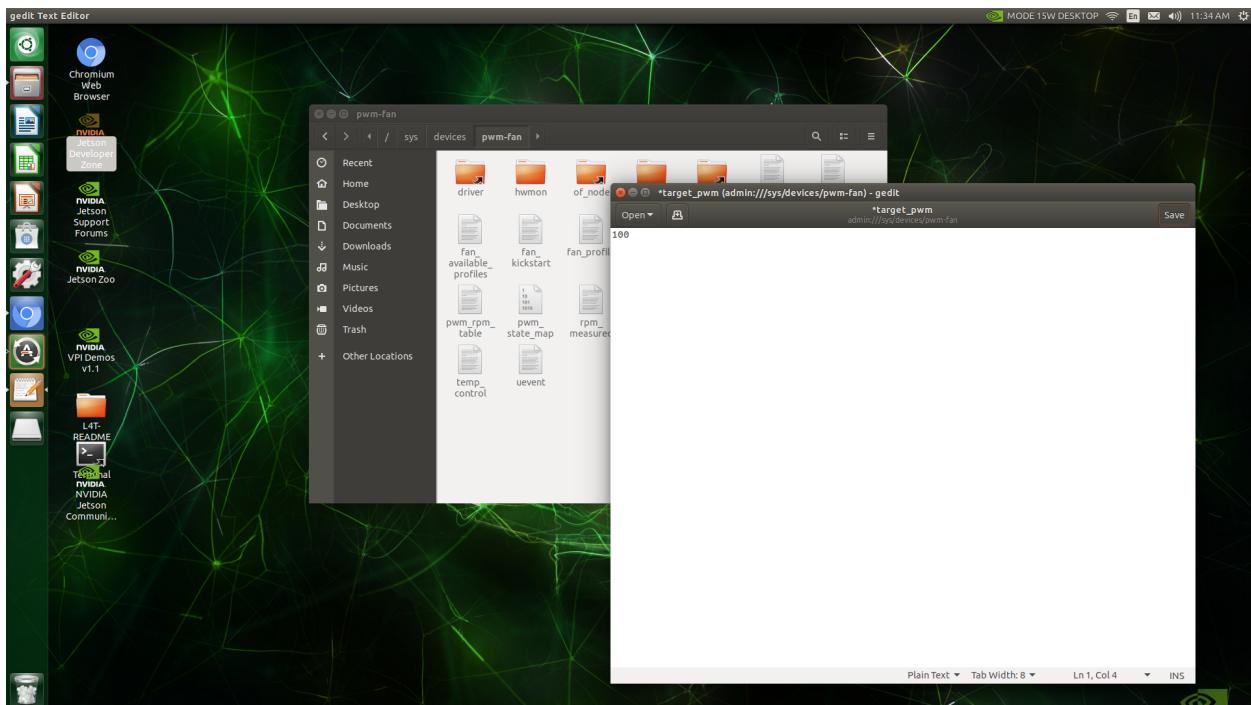

Step 14: Close the file.

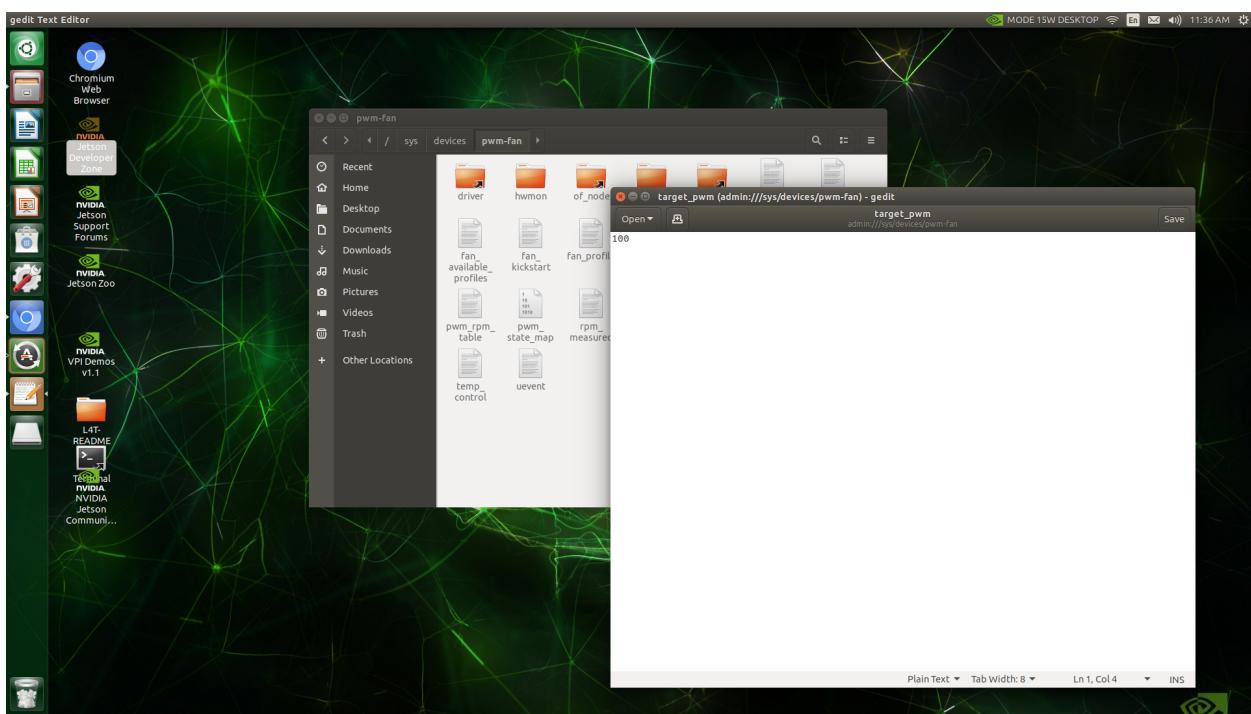

Step 15: Click the “Other Locations” button to exit root mode.

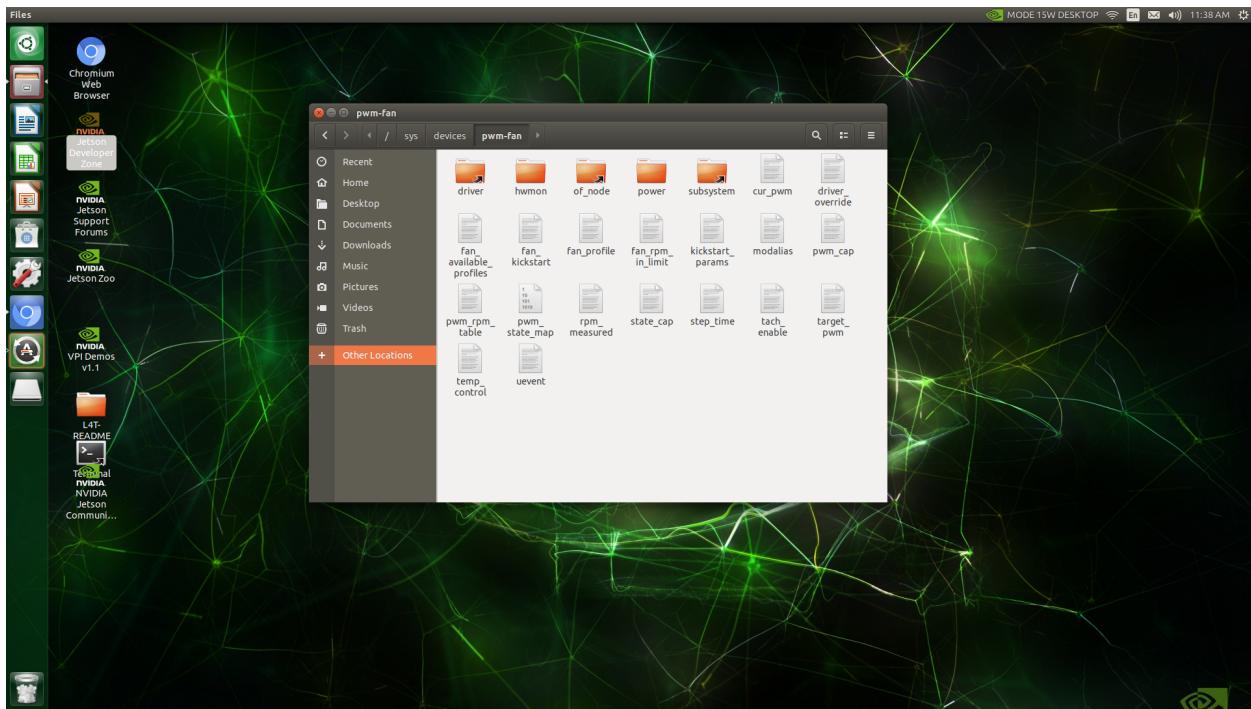

Step 16: Close files.

