


Parrot MINIKIT Neo 2 HD

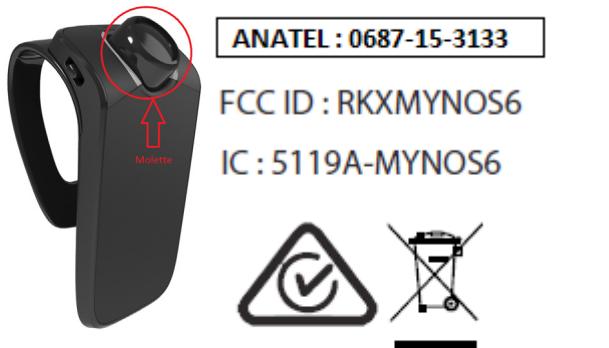

ANATEL : 0687-15-3133

FCC ID : RKXMYNOS6

IC : 5119A-MYNOS6

Quick Start Guide

Guide d'utilisation rapide

Guía de utilización rápida

Schnellstart-Anleitung

Guida di riferimento rapido

Beknopte gebruikshandleiding

لليلي التشغيل السريع



QUICK START GUIDE

BEFORE YOU BEGIN

About this guide

In order to limit our paper consumption, and as part of our environmentally friendly and responsible approach, Parrot prefers to put documents online rather than print them out. This simplified guide to the Parrot MINIKIT Neo 2 HD is therefore limited to providing you with the main instructions that will make it easy for you to use the device. More information can be found in the Parrot MINIKIT Neo 2 HD complete user guide on the Support & Download section of our website www.parrot.com.

Warning

If your Parrot MINIKIT Neo 2 HD gets out of reach while driving, stay in a safe location before plugging in the charge into your vehicle's power outlet and connect the USB / micro-USB cable to the charger and to the kit (diagram 1). You can also use the USA / micro-USB cable to connect the Parrot MINIKIT Neo 2 HD to your computer.

Software update

Download the latest update for free (and check the update procedure) on our website www.parrot.com, in the Support

section. These updates will enable you to receive new features and improve the product's compatibility.

Downloading the application

Connect to the App Store™ or Google Play™ and download the MINIKIT Neo 2 app free of charge.

GETTING STARTED

Charging the Parrot MINIKIT Neo 2 HD

The Parrot MINIKIT Neo 2 HD must be fully charged before using it for the first time. Insert the charge into your vehicle's power outlet and connect the USB / micro-USB cable to the charger and to the kit (diagram 1). You can also use the USA / micro-USB cable to connect the Parrot MINIKIT Neo 2 HD to your computer.

Note : During charging, the battery indicator light turns red. When the light goes out, the charge is complete.

When the battery level is low, a voice prompt is played.

Note : Slide the On / Off button forward to check the Parrot MINIKIT Neo 2 HD battery level.

Installing the Parrot MINIKIT Neo 2 HD

Use the Parrot MINIKIT Neo 2 HD clip to secure your vehicle's sun visor (diagram 2). While being in this position, the Parrot MINIKIT Neo 2 HD microphone is located above the jog wheel. Make sure it is pointed towards your vehicle.

Note : During charging, the battery indicator light turns red. When the light goes out, the charge is complete.

When the battery level is low, a voice prompt is played.

Note : Slide the On / Off button forward to check the Parrot MINIKIT Neo 2 HD battery level.

Pairing a phone by Bluetooth

Before using the Parrot MINIKIT Neo 2 HD with your phone, you first have to pair both devices. The pairing process is only required once.

1. From your Bluetooth® phone, search for Bluetooth® peripherals.

Turning the Parrot MINIKIT Neo 2 HD on / off

Slide the On / Off button backward to turn the Parrot MINIKIT Neo 2 HD on / off.

Sleep mode

If there is no phone connected to the Parrot MINIKIT Neo 2 HD for 5 minutes, the Parrot MINIKIT Neo 2 HD automatically switches to sleep mode. To exit sleep mode, press any button or connect your phone to the Parrot MINIKIT Neo 2 HD. If you leave the Parrot MINIKIT Neo 2 HD in your vehicle without turning it off, the Parrot MINIKIT Neo 2 HD will switch to deep sleep mode. Thanks to its vibration detector, the Parrot MINIKIT Neo 2 HD will automatically exit deep sleep mode when you get back into your vehicle.

Navigating through the menus

Press the jog wheel to access the main menu.

Browse through the menus by turning the jog wheel and confirm by pressing the green button or the jog wheel.

To exit the menu, press the red button or wait for a few seconds.

Synchronising the phonebook

With most of the Bluetooth phones, the phonebook is automatically synchronized in the kit memory. Only the contacts stored in the phone memory are synchronized. If you

2. Select "Parrot MINIKIT Neo 2 HD"

3. Enter the "0000" pin code if asked and validate.

> The Parrot MINIKIT Neo 2 HD says "Pairing successful" when both devices are paired.

> Depending on the model of your phone, the connection will then be automatic as soon as your phone is close enough to the Parrot MINIKIT Neo 2 HD.

Connection

Once your phone is paired to the Parrot MINIKIT Neo 2 HD, the connection between both devices will be automatically established each time the Parrot MINIKIT Neo 2 HD is turned on. If you leave the Parrot MINIKIT Neo 2 HD in deep sleep mode, thanks to its vibration detector, the Parrot MINIKIT Neo 2 HD will automatically exit deep sleep mode when you get back into your vehicle.

TELEPHONE FUNCTION

Note : To activate / deactivate the magic words, select Magic words and press the jog wheel.

Receiving a call

An incoming call is indicated by a ringtone. The name of the caller is announced if his number is recorded in the phonebook of the phone connected to the Parrot MINIKIT Neo 2 HD.

Use the jogwheel during a call to adjust the communication volume. The volume setting is saved for subsequent calls.

During a call, if you want to continue the conversation on your phone (private conversation), press the green button.

The Parrot MINIKIT Neo 2 HD allows you to send DTMF while on call. To do so, press the jog wheel. Then use the jog wheel to select the DTMF and press the jog wheel to confirm.

Making a call

To make a call via voice recognition :

1. Press the green button or say "Minikit" if the magic

words for outgoing calls are activated.

> The Parrot MINIKIT Neo 2 HD asks you the name of the contact you want to call.

2. Say the name of the contact and the type of number ("Work", "Cellphone", ...) if there are several numbers associated to your contact.

> The call is automatically launched if the voice tag is correctly recorded.

> If it is not the case, a confirmation message is asked.

> If it is not the case, a confirmation message is asked.

> You can also say "Cancel" to cancel the call.

TROUBLESHOOTING

Warranty

Without prejudice of legal warranty, Parrot products are warranted during 1 year from the date of purchase for defects in materials and workmanship, provided that no damage has been caused by misuse or abuse.

If you want to answer the call, press the green button or say "Accept" if the magic words for incoming calls are activated.

If you want to refuse this call, press the red button or say "Reject" if the magic words for incoming calls are activated.

Using the HD voice function

In case of malfunction, you can reboot the Parrot MINIKIT Neo 2 HD. To do so, press the red button while sliding the On / off

button forward (as if you were checking the battery level).

The kit does not seem to work with my phone

Make sure your phone is compatible with the Parrot MINIKIT Neo 2 HD. To do so, refer to the compatibility list of the Parrot MINIKIT Neo 2 HD available on our website www.parrot.com, in the Support section.

Navigation instructions

If your phone supports the GPS feature and if it can send the navigation instructions via Bluetooth (A2DP profile), the navigation instructions will be played by the Parrot MINIKIT Neo 2 HD.

Note : Navigation instructions are not played by the Parrot MINIKIT Neo 2 HD during a call.

To modify the navigation instructions volume, use the jog wheel while an instruction is given.

GENERAL INFORMATION

Note : If you are using the Parrot MINIKIT Neo 2 HD with an iPhone supporting the Siri function, say the magic word "Hello Siri" to lauch phone voice recognition and the corresponding application.

Recycling this product

The symbol on this product and on its literature

shows that at the end of its life, it is not to be disposed of with other household wastes.

Please separate this from other types of waste and recycle it responsibly to promote the sustainable reuse of material resources. Householders users should contact either the retailer where they purchased this product, or their local government for advice on the correct way to dispose of waste.

Business users should contact their supplier and the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

contacts are stored in your SIM card memory, transfer them

to your phone memory.

Note : Depending on the model of your phone, you may have to confirm the phonebook synchronisation on your phone.

All your contacts after automatic synchronization process are directly provided with a voice tag in the Parrot MINIKIT Neo 2 HD. Consequently, you don't have to record your own voice tag on each contact to make a call via the voice recognition process.

Connection

Once your phone is paired to the Parrot MINIKIT Neo 2 HD, the connection between both devices will be automatically established each time the Parrot MINIKIT Neo 2 HD is turned on.

If you leave the Parrot MINIKIT Neo 2 HD in deep sleep mode, thanks to its vibration detector, the Parrot MINIKIT Neo 2 HD will automatically exit deep sleep mode when you get back into your vehicle.

TELEPHONE FUNCTION

Note : To activate / deactivate the magic words, select Magic words and press the jog wheel.

Receiving a call

An incoming call is indicated by a ringtone. The name of the caller is announced if his number is recorded in the phonebook of the phone connected to the Parrot MINIKIT Neo 2 HD.

Use the jogwheel during a call to adjust the communication volume. The volume setting is saved for subsequent calls.

During a call, if you want to continue the conversation on your phone (private conversation), press the green button.

Making a call

To make a call via voice recognition :

1. Press the green button or say "Minikit" if the magic

words for outgoing calls are activated.

> The Parrot MINIKIT Neo 2 HD asks you the name of the contact you want to call.

2. Say the name of the contact and the type of number ("Work", "Cellphone", ...) if there are several numbers associated to your contact.

> The call is automatically launched if the voice tag is correctly recorded.

> If it is not the case, a confirmation message is asked.

> If it is not the case, a confirmation message is asked.

> You can also say "Cancel" to cancel the call.

TROUBLESHOOTING

Warranty

Without prejudice of legal warranty, Parrot products are warranted during 1 year from the date of purchase for defects in materials and workmanship, provided that no damage has been caused by misuse or abuse.

If you want to answer the call, press the green button or say "Accept" if the magic words for incoming calls are activated.

If you want to refuse this call, press the red button or say "Reject" if the magic words for incoming calls are activated.

Using the HD voice function

In case of malfunction, you can reboot the Parrot MINIKIT Neo 2 HD. To do so, press the red button while sliding the On / off

button forward (as if you were checking the battery level).

The kit does not seem to work with my phone

Make sure your phone is compatible with the Parrot MINIKIT Neo 2 HD available on our website www.parrot.com, in the Support section.

Navigation instructions

If your phone supports the GPS feature and if it can send the navigation instructions via Bluetooth (A2DP profile), the navigation instructions will be played by the Parrot MINIKIT Neo 2 HD.

Note : Navigation instructions are not played by the Parrot MINIKIT Neo 2 HD during a call.

To modify the navigation instructions volume, use the jog wheel while an instruction is given.

words for outgoing calls are activated.

> The Parrot MINIKIT Neo 2 HD asks you the name of the contact you want to call.

2. Say the name of the contact and the type of number ("Work", "Cellphone", ...) if there are several numbers associated to your contact.

> The call is automatically launched if the voice tag is correctly recorded.

> If it is not the case, a confirmation message is asked.

> If it is not the case, a confirmation message is asked.

> You can also say "Cancel" to cancel the call.

TROUBLESHOOTING

Warranty

Without prejudice of legal warranty, Parrot products are warranted during 1 year from the date of purchase for defects in materials and workmanship, provided that no damage has been caused by misuse or abuse.

If you want to answer the call, press the green button or say "Accept" if the magic words for incoming calls are activated.

If you want to refuse this call, press the red button or say "Reject" if the magic words for incoming calls are activated.

Using the HD voice function

In case of malfunction, you can reboot the Parrot MINIKIT Neo 2 HD. To do

