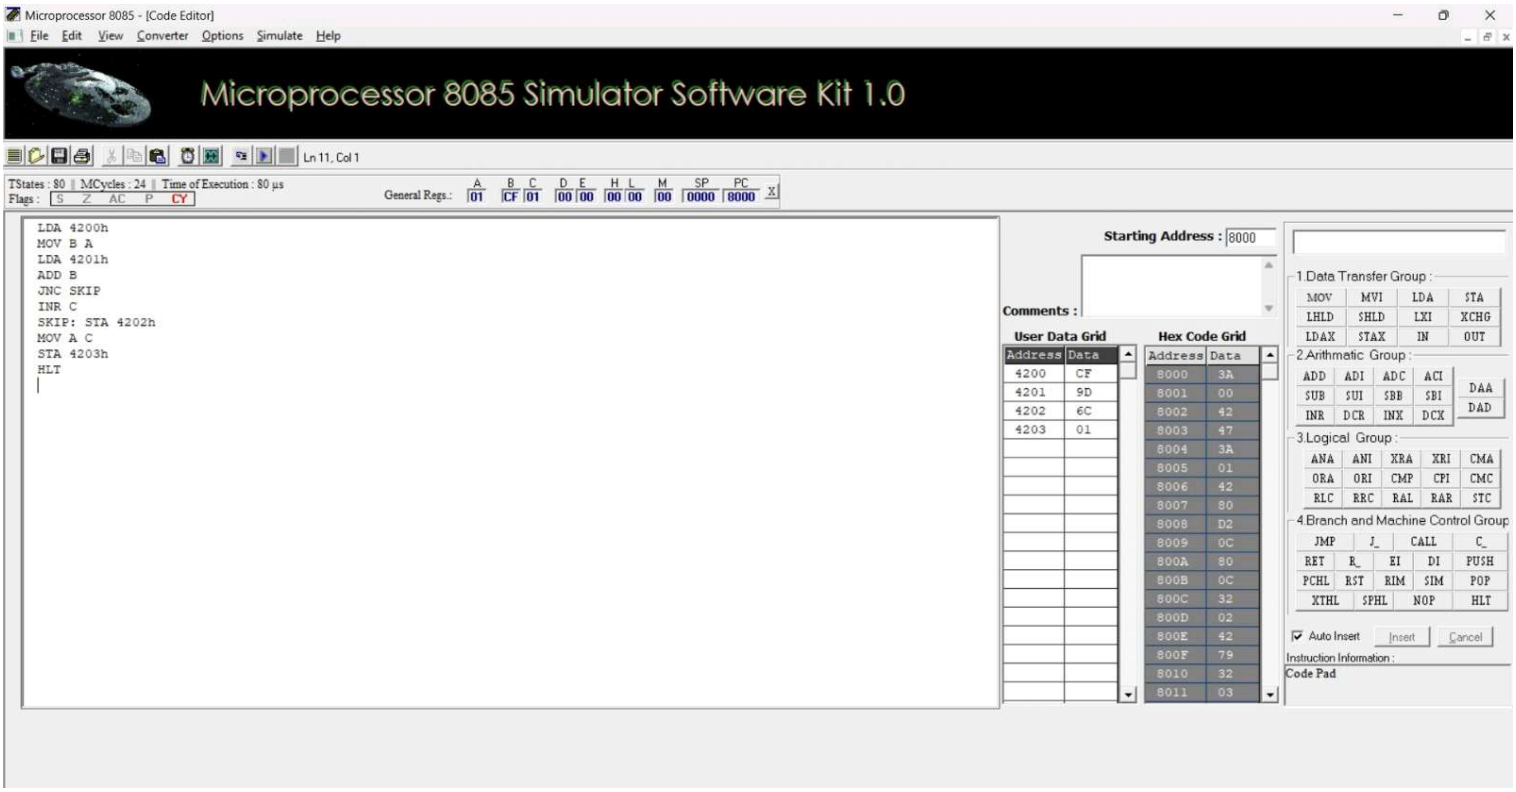
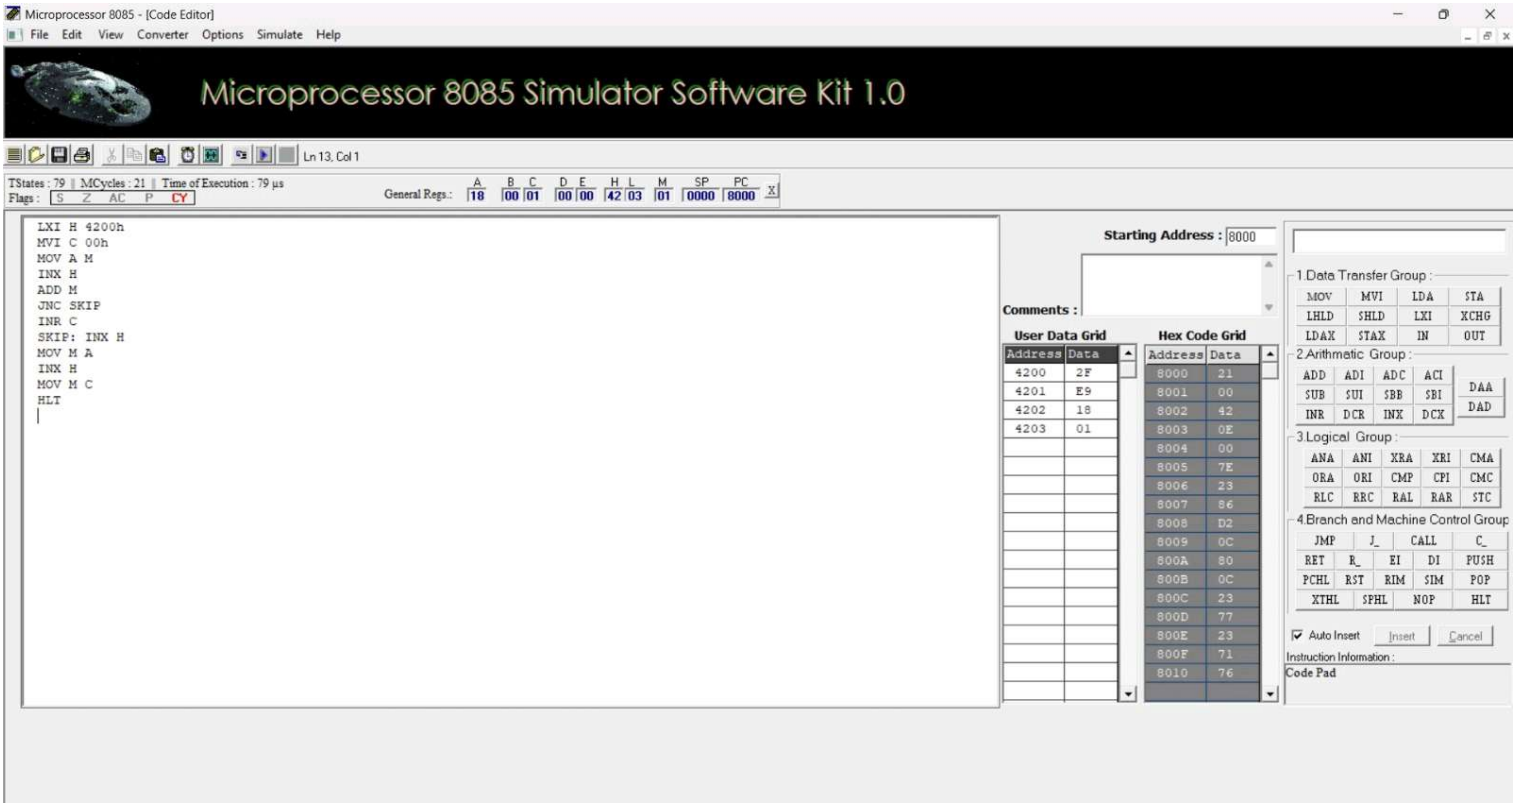
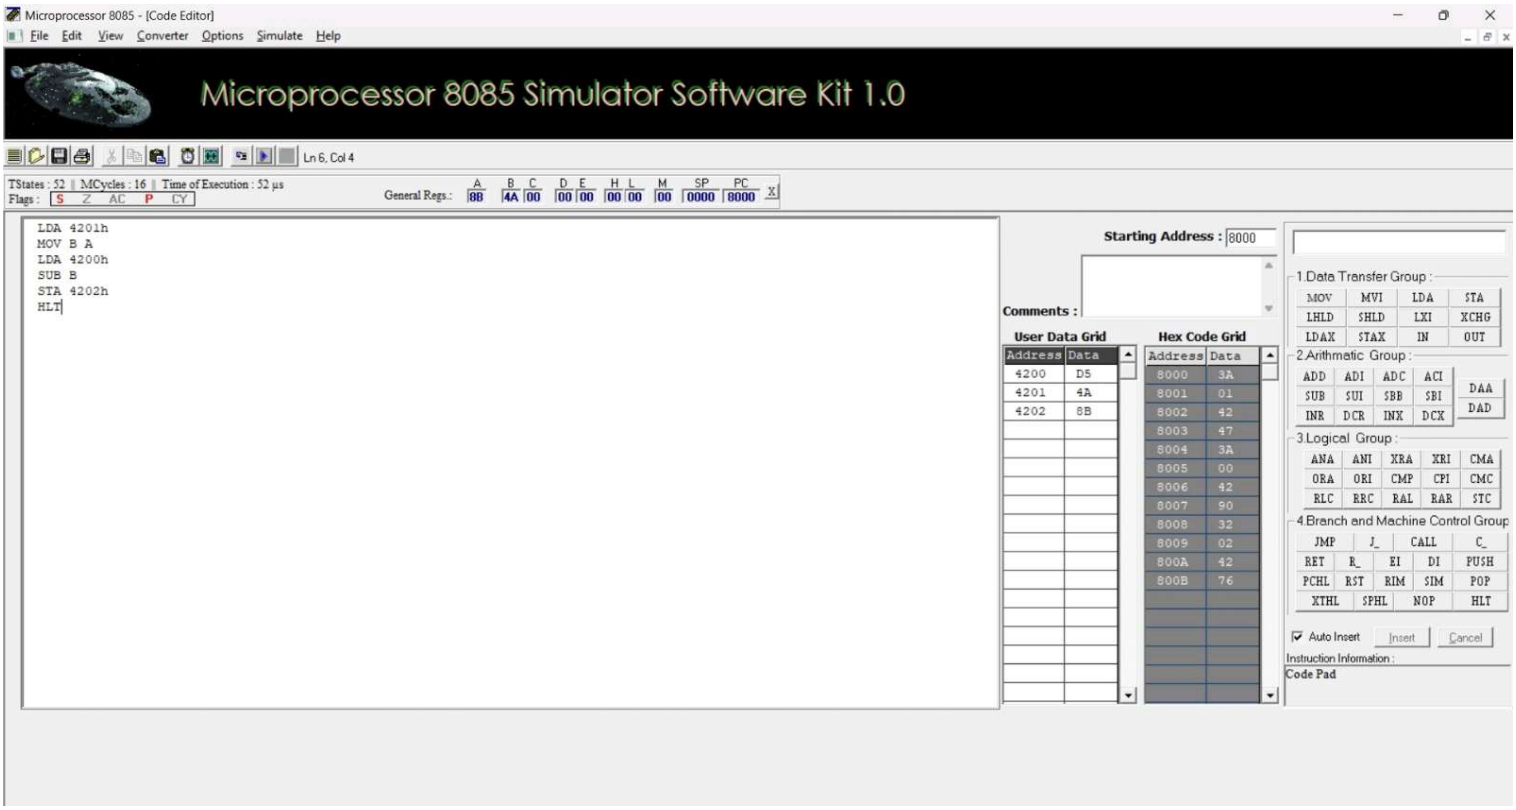
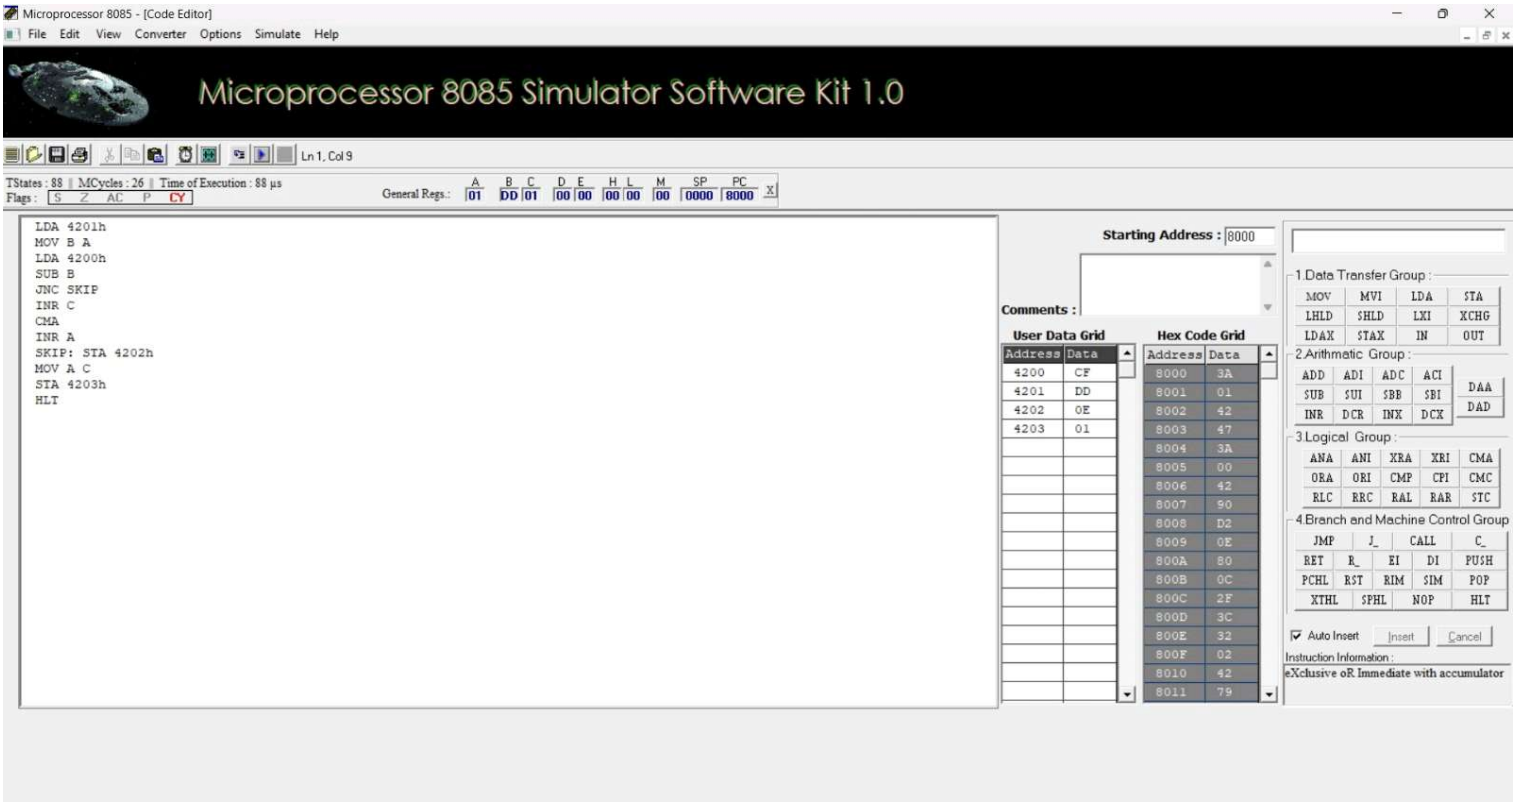
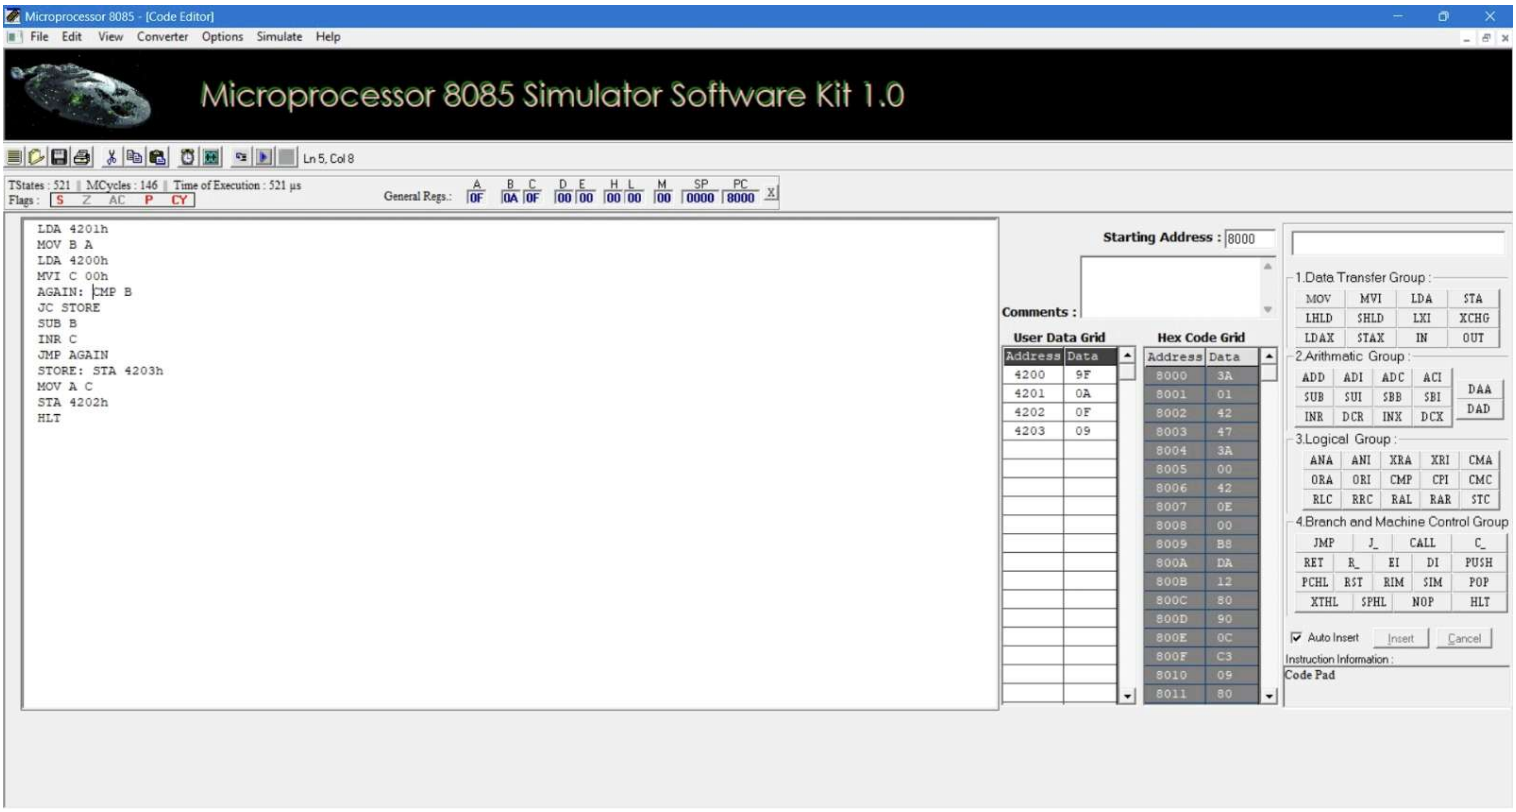
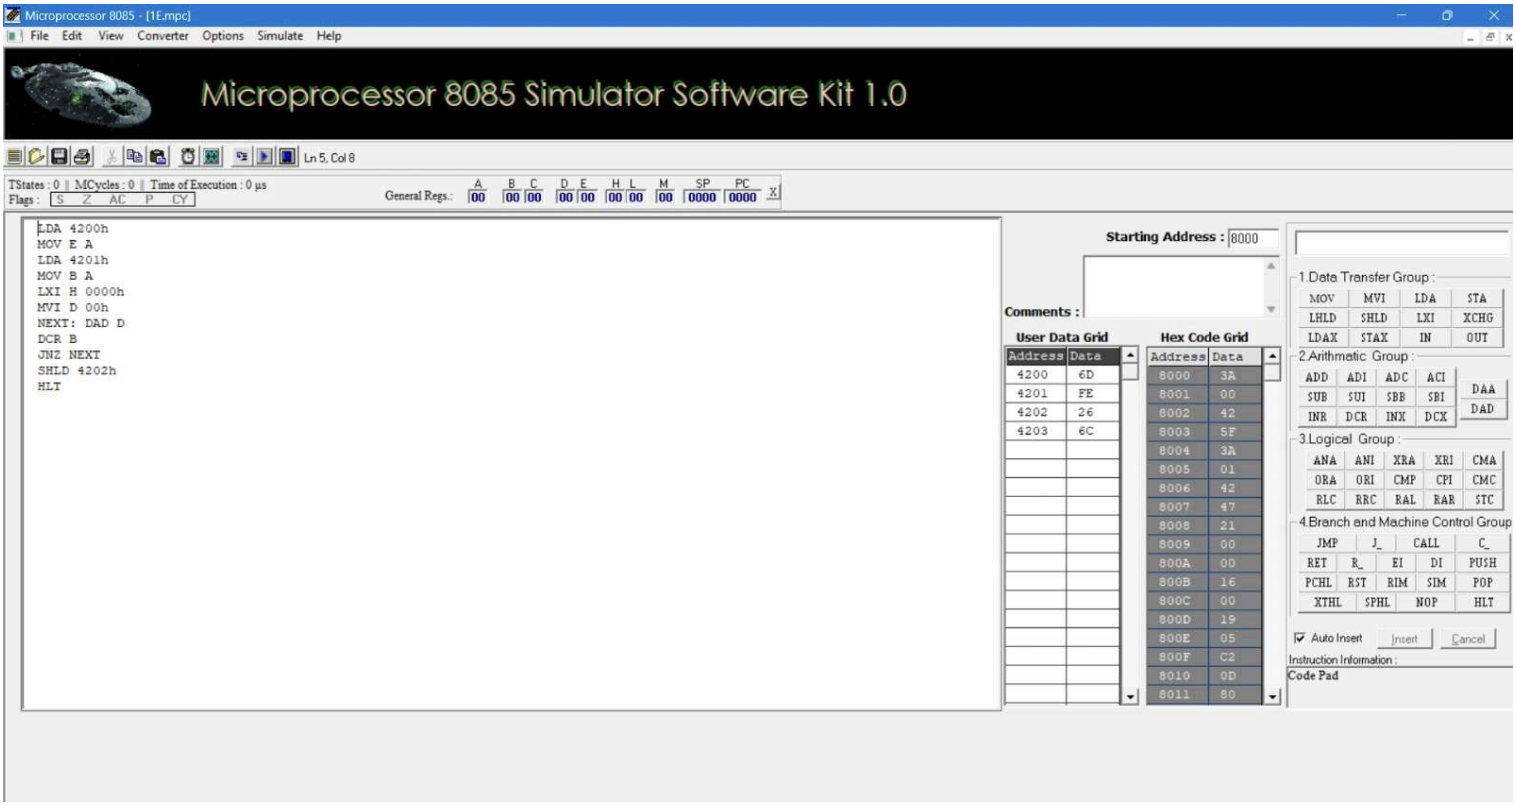

Microprocessor 8085 - [Code Editor]
File Edit View Converter Options Simulate Help
Microprocessor 8085 Simulator Software Kit 1.0
Ln 11, Col 1
TStates : 80 | MCycles : 24 | Time of Execution : 80 µs
Flags : S Z AC P CY
General Regs.: A 01 B C CF 01 D E 00 00 H L 00 00 M 00 SP 0000 PC 8000
LDA 4200h
MOV B A
LDA 4201h
ADD B
JNC SKIP
INR C
SKIP: STA 4202h
MOV A C
STA 4203h
HLT
Starting Address : 8000
Comments :
User Data Grid
Address Data
4200 CF
4201 9D
4202 6C
4203 01
Hex Code Grid
Address Data
8000 3A
8001 00
8002 42
8003 47
8004 3A
8005 01
8006 42
8007 80
8008 D2
8009 0C
800A 80
800B 0C
800C 32
800D 02
800E 42
800F 79
8010 32
8011 03
1.Data Transfer Group :
MOV MVI LDA STA
LHLD SHLD LXI XCHG
LDAX STAX IN OUT
2.Arithmetic Group :
ADD ADI ADC ACI
SUB SUI SBB SBI
INR DCR INX DCX
DAA
DAD
3.Logical Group :
ANA ANI XRA XRI CMA
ORA ORI CMP CPI CMC
RLC RRC RAL RAR STC
4.Branch and Machine Control Group
JMP J_ CALL C_
RET R_ EI DI PUSH
PCHL RST RIM SIM POP
XTHL SPHL NOP HLT
Auto Insert
Insert
Cancel
Instruction Information :
Code Pad


Microprocessor 8085 - [Code Editor]
File Edit View Converter Options Simulate Help
Microprocessor 8085 Simulator Software Kit 1.0
Ln 13, Col 1
TStates : 79 | MCycles : 21 | Time of Execution : 79 µs
Flags : S Z AC P CY
General Regs.: A 18 B C 00 01 D E 00 00 H L 42 03 M 01 SP 0000 PC 8000
LXI H 4200h
MVI C 00h
MOV A M
INX H
ADD M
JNC SKIP
INR C
SKIP: INX H
MOV M A
INX H
MOV M C
HLT
Starting Address : 8000
Comments :
User Data Grid
Address Data
4200 2F
4201 E9
4202 18
4203 01
Hex Code Grid
Address Data
8000 21
8001 00
8002 42
8003 0E
8004 00
8005 7E
8006 23
8007 86
8008 D2
8009 0C
800A 80
800B 0C
800C 23
800D 77
800E 23
800F 71
8010 76
1.Data Transfer Group :
MOV MVI LDA STA
LHLD SHLD LXI XCHG
LDAX STAX IN OUT
2.Arithmetic Group :
ADD ADI ADC ACI
SUB SUI SBB SBI
INR DCR INX DCX
DAA
DAD
3.Logical Group :
ANA ANI XRA XRI CMA
ORA ORI CMP CPI CMC
RLC RRC RAL RAR STC
4.Branch and Machine Control Group
JMP J_ CALL C_
RET R_ EI DI PUSH
PCHL RST RIM SIM POP
XTHL SPHL NOP HLT
Auto Insert
Insert
Cancel
Instruction Information :
Code Pad


Microprocessor 8085 - [Code Editor]
File Edit View Converter Options Simulate Help
Microprocessor 8085 Simulator Software Kit 1.0
Ln 6, Col 4
TStates : 52 | MCycles : 16 | Time of Execution : 52 µs
Flags : S Z AC P CY
General Regs.: A 8B B 4A C 00 D 00 E 00 H 00 L 00 M 00 SP 0000 PC 8000
LDA 4201h
MOV B A
LDA 4200h
SUB B
STA 4202h
HLT
Starting Address : 8000
Comments :
User Data Grid
Address Data
4200 D5
4201 4A
4202 8B
Hex Code Grid
Address Data
8000 3A
8001 01
8002 42
8003 47
8004 3A
8005 00
8006 42
8007 90
8008 32
8009 02
800A 42
800B 76
1.Data Transfer Group :
MOV MVI LDA STA
LHLD SHLD LXI XCHG
LDAX STAX IN OUT
2.Arithmetic Group :
ADD ADI ADC ACI
SUB SUI SBB SBI
INR DCR INX DCX
DAA
DAD
3.Logical Group :
ANA ANI XRA XRI CMA
ORA ORI CMP CPI CMC
RLC RRC RAL RAR STC
4.Branch and Machine Control Group
JMP J_ CALL C_
RET R_ EI DI PUSH
PCHL RST RIM SIM POP
XTHL SPHL NOP HLT
Auto Insert
Insert
Cancel
Instruction Information :
Code Pad


Microprocessor 8085 - [Code Editor]
File Edit View Converter Options Simulate Help
Microprocessor 8085 Simulator Software Kit 1.0
Ln 1, Col 9
TStates : 88 | MCycles : 26 | Time of Execution : 88 µs
Flags : S Z AC P CY
General Regs.: A 01 B DD C 01 D 00 E 00 H 00 L 00 M 00 SP 0000 PC 8000
LDA 4201h
MOV B A
LDA 4200h
SUB B
JNC SKIP
INR C
CMA
INR A
SKIP: STA 4202h
MOV A C
STA 4203h
HLT
Starting Address : 8000
Comments :
User Data Grid
Address Data
4200 CF
4201 DD
4202 0E
4203 01
Hex Code Grid
Address Data
8000 3A
8001 01
8002 42
8003 47
8004 3A
8005 00
8006 42
8007 90
8008 D2
8009 0E
800A 80
800B 0C
800C 2F
800D 3C
800E 32
800F 02
8010 42
8011 79
1.Data Transfer Group :
MOV MVI LDA STA
LHLD SHLD LXI XCHG
LDAX STAX IN OUT
2.Arithmatic Group :
ADD ADI ADC ACI
SUB SUI SBB SBI
INR DCR INX DCX
DAA
DAD
3.Logical Group :
ANA ANI XRA XRI CMA
ORA ORI CMP CPI CMC
RLC RRC RAL RAR STC
4.Branch and Machine Control Group
JMP J_ CALL C_
RET R_ EI DI PUSH
PCHL RST RIM SIM POP
XTHL SPHL NOP HLT
Auto Insert
Insert
Cancel
Instruction Information :
eXclusive oR Immediate with accumulator


Microprocessor 8085 - [Code Editor]
File Edit View Converter Options Simulate Help
Microprocessor 8085 Simulator Software Kit 1.0
Ln 5, Col 8
TStates : 521 | MCycles : 146 | Time of Execution : 521 µs
Flags : S Z AC P CY
General Regs.: A 0F B 0A C 0F D 00 E 00 H 00 L 00 M 00 SP 0000 PC 8000
LDA 4201h
MOV B A
LDA 4200h
MVI C 00h
AGAIN: CMP B
JC STORE
SUB B
INR C
JMP AGAIN
STORE: STA 4203h
MOV A C
STA 4202h
HLT
Starting Address : 8000
Comments :
User Data Grid
Address Data
4200 9F
4201 0A
4202 0F
4203 09
Hex Code Grid
Address Data
8000 3A
8001 01
8002 42
8003 47
8004 3A
8005 00
8006 42
8007 0E
8008 00
8009 B8
800A DA
800B 12
800C 80
800D 90
800E 0C
800F C3
8010 09
8011 80
1.Data Transfer Group :
MOV MVI LDA STA
LHLD SHLD LXI XCHG
LDAX STAX IN OUT
2.Arithmetic Group :
ADD ADI ADC ACI
SUB SUI SBB SBI
INR DCR INX DCX
DAA
DAD
3.Logical Group :
ANA ANI XRA XRI CMA
ORA ORI CMP CPI CMC
RLC RRC RAL RAR STC
4.Branch and Machine Control Group
JMP J_ CALL C_
RET R_ EI DI PUSH
PCHL RST RIM SIM POP
XTHL SPHL NOP HLT
Auto Insert
Insert
Cancel
Instruction Information :
Code Pad


Microprocessor 8085 - [1E.mpc]
File Edit View Converter Options Simulate Help
Microprocessor 8085 Simulator Software Kit 1.0
Ln 5, Col 8
TStates : 0 | MCycles : 0 | Time of Execution : 0 µs
Flags : S Z AC P CY
General Regs.: A B C D E H L M SP PC X
00 00 00 00 00 00 00 00 00 0000 0000
LDA 4200h
MOV E A
LDA 4201h
MOV B A
LXI H 0000h
MVI D 00h
NEXT: DAD D
DCR B
JNZ NEXT
SHLD 4202h
HLT
Starting Address : 8000
Comments :
User Data Grid
Address Data
4200 6D
4201 FE
4202 26
4203 6C
Hex Code Grid
Address Data
8000 3A
8001 00
8002 42
8003 5F
8004 3A
8005 01
8006 42
8007 47
8008 21
8009 00
800A 00
800B 16
800C 00
800D 19
800E 05
800F C2
8010 0D
8011 80
1.Data Transfer Group :
MOV MVI LDA STA
LHLD SHLD LXI XCHG
LDAX STAX IN OUT
2.Arithmatic Group :
ADD ADI ADC ACI
SUB SUI SBB SBI
INR DCR INX DCX
DAA
DAD
3.Logical Group :
ANA ANI XRA XRI CMA
ORA ORI CMP CPI CMC
RLC RRC RAL RAR STC
4.Branch and Machine Control Group
JMP J_ CALL C_
RET R_ EI DI PUSH
PCHL RST RIM SIM POP
XTHL SPHL NOP HLT
Auto Insert
Insert
Cancel
Instruction Information :
Code Pad