RAIN GAUGE





Open the Cylinder using Allen key

Step 2




Remove the rubber from the seesaw

Step 3




Gently Check the movement of seesaw

Step 4

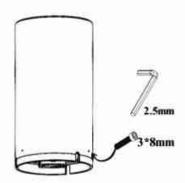

Close the cylinder properly

Step 5

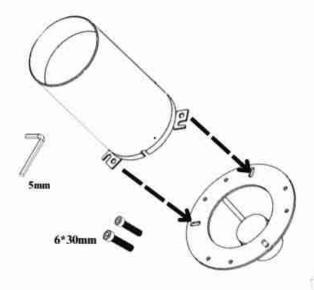

Fit the Rain Gauge in the stand with Allen



key and Spanner

