
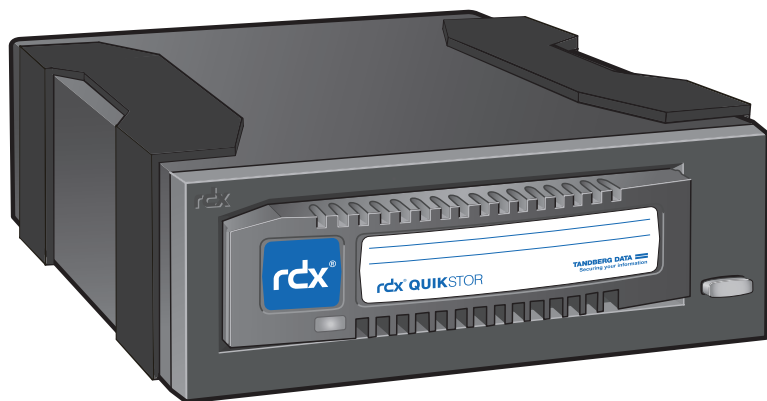


RDx® QuikStor™
External USB

QUICK START

WHAT'S IN THE BOX?

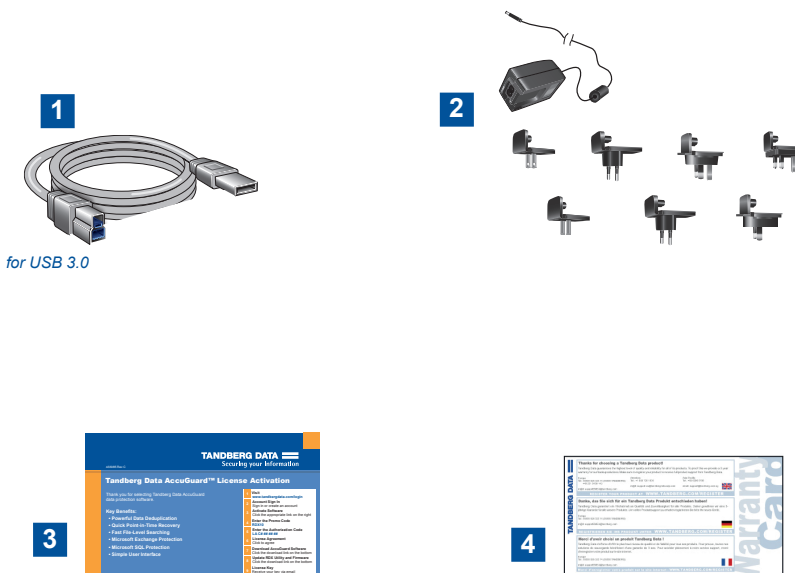

Power Ratings

The following power ratings represent typical-use performance.

USB 3.0	DC Input Voltage and Rated Input Current	12VDC/0.5A
---------	--	------------

For More Information


Visit the Support section of the Tandberg Data web site (www.tandbergdata.com) for more information, including product warranty and registration, knowledge base articles, user documentation, and technical support.

1 Install RDX Utility

Note: The RDX Utility installs only on Windows.


- Go to www.Tandbergdata.com.
- Chose „Support“ from the main menu.
- Click on „Drivers and Downloads“ at the right hand side of the page.
- Click the „Go“-Button near RDX QuikStor.
- Choose „RDX_Utility.zip“.
- Click on „Download RDX Utility“.
- Register and download the RDX Utility.
- Unpack the zip-file, start „setup.exe“ and follow the installation instructions.
- Download and install the latest Firmware

2 Connect Data and Power Cables

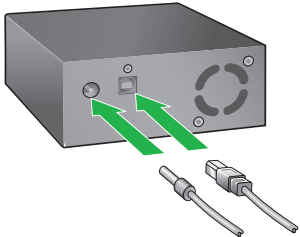

- Connect the USB cable to the RDX drive and to the host computer.
- Attach the power socket that is appropriate for your region to the power supply.
- Connect the power cable to the drive, and plug it into a power outlet.

3 Load RDX Cartridge

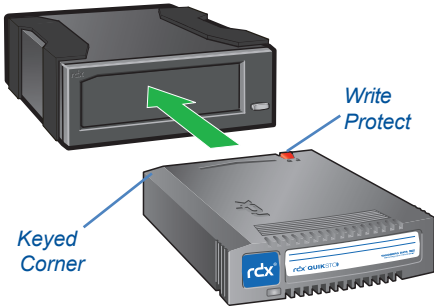


4 Install AccuGuard Server for RDX

Tandberg Data AccuGuard backup and recovery software is only included with select RDX products. If your product includes an AccuGuard licence activation card, follow the instructions on the card to download and install the software.

Note: AccuGuard installs only on Windows operating systems.

- Follow the steps on your AccuGuard License Activation card to download the software.
- Run the AccuGuard Server for RDX.exe file.
- At the final screen of the setup wizard, be sure the checkbox “Run AccuGuard Server for RDX now” is selected. Click [Finish]
- Click “Add a License Key.” Enter the license key that you received via email in the above download process.
- Click [Yes]to activate the software license, then click [OK]. The AccuGuard Home screen opens.


5 Create a Data Protection Plan

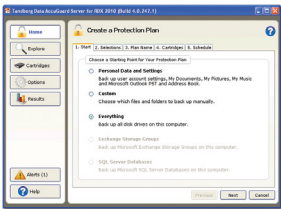

- From the Home screen, select “Add a Protection Plan” in the upper-right area of the screen.
- The Create a Protection Plan interface opens.
- Complete the tasks in order, beginning with the Start tab and ending with the Schedule tab.

Refer to the *AccuGuard Server RDX User Guide* (available at www.tandbergdata.com) for detailed information about Protection Plan tab tasks.

RDX QuikStor Features

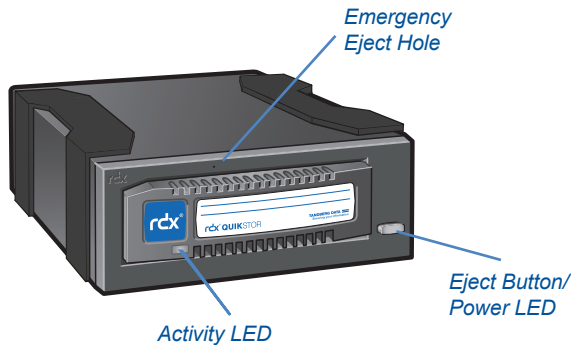

Eject Button/Power LED

The following table describes the Power LED's function:

LED Status	Meaning	Description
Off	No Power	Unit does not have power.
On Green	Ready	Power is On and the unit is working properly.
Blinking Green	Ejecting	Unit is rejecting the cartridge.
On Amber	Fault	Unit has detected a fault condition. For more information, run a diagnostic application.
Blinking Amber	Prevent	Host computer is accessing the media and the user has pressed the Eject Button. The unit will eject the cartridge after the Host access completes.

Activity LED

The following table describes the Activity LED's function:

LED Status	Meaning	Description
On Green	Ready	Cartridge is ready.
Blinking Green	Activity	Reading, writing, seeking.
On Amber	Fault	Unit has detected a cartridge fault condition. For more information, run a diagnostic application.