Understanding Run Cycles and Small Stops

This note applies to v2.0 and later.


PROBLEM

I want to understand Run Cycles and Small Stops.

SOLUTION

Each cycle input received by the XL Display will fall into one of three categories; Run Cycle, Small Stop, or Partial Cycle. The boundaries are defined by the Small Stop and Down Threshold settings.

- The Small Stop setting can be found on the Settings > Parts and Run States > Run States page. The default setting is 500% of the Ideal Cycle Time. There is no right or wrong setting for the Small Stop threshold, this setting can be adjusted to the best setting to help you differentiate between Run Cycles and Small Stops.
- The Down Threshold is defined for each Part on the Settings > Parts and Run States > Parts page. The default setting is 3 minutes.

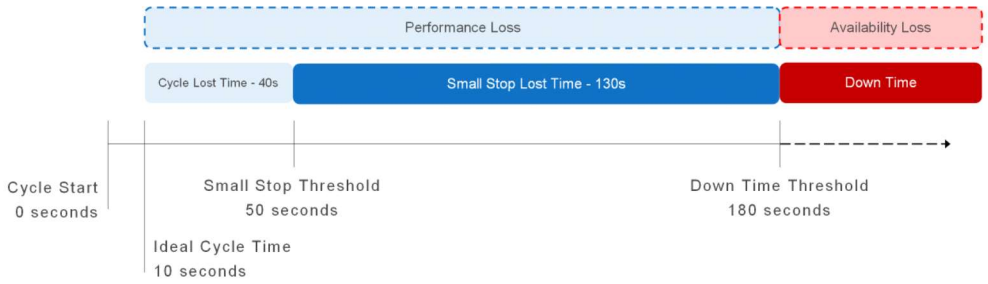

- Any cycle with a duration up to the Small Stop time is considered a Run Cycle.
- Any cycle with a duration between the Small Stop time and the Down Threshold is considered a Small Stop Cycle.
- Once the Down Time Threshold is reached, the cycle is considered a Partial Cycle. The cycle will end and the display will switch to Down mode and start timing up from 0:00:00. The operator can now assign a Down reason for the Down event.

NOTE

Any cycle with a duration greater than the Ideal Cycle Time setting for your Part is considered a Performance Loss. Once a cycle exceeds the Down Threshold, the loss transitions to an Availability loss.

NEED FURTHER ASSISTANCE?

We hope this tech note has fully resolved your questions. If not, or if you would simply like further assistance, we are happy to help. Call us at +1.630.875.3600 and press "2" for technical support or email us at support@vorne.com.