


XDJ-AZ

List of MIDI messages

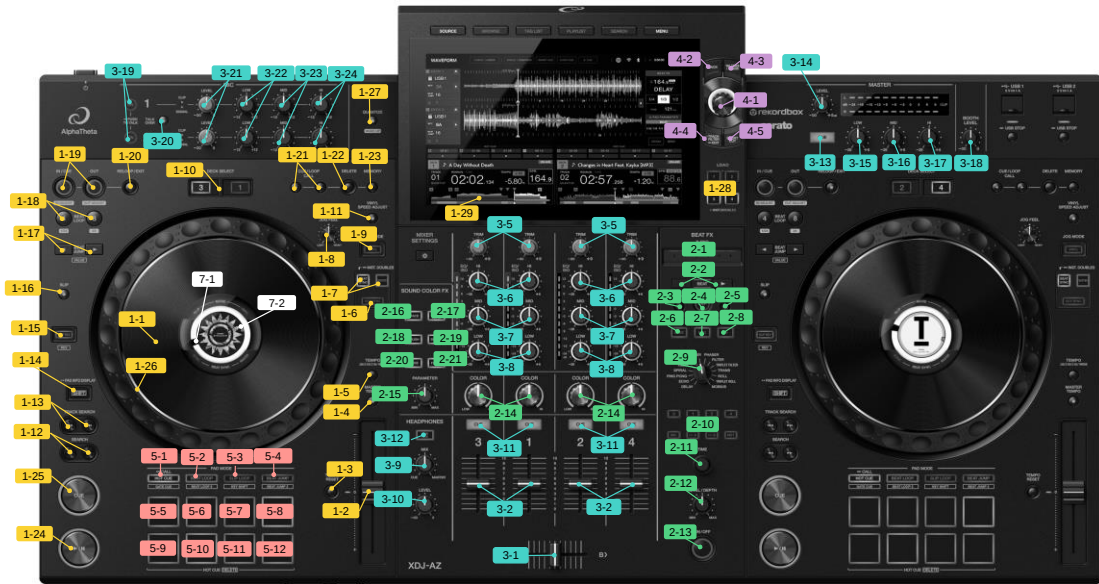

[MIDI channel assignment]

MIDI channel is defined as shown below.

Channel Category		MIDI channel	Channel No. (hex)
Browser		1	m=0
DECK 1		1	m=0
DECK 2		2	m=1
DECK 3		3	m=2
DECK 4		4	m=3
EFFECT & MIXER		5	m=4
PERFORMANCE PADS	DECK1	5-5-5-8	m=5
		5-9-5-12	m=9
	DECK2	5-5-5-8	m=6
		5-9-5-12	m=10
	DECK3	5-5-5-8	m=7
		5-9-5-12	m=11
	DECK4	5-5-5-8	m=8
		5-9-5-12	m=12
OTHERS & JOG DISPLAY		14	m=D

As a reference for MIDI assign, MIDI messages sent from buttons and knobs of this unit are listed in decimal numbers.

0xP : Note

0xP : Control Change (CC)

NOTE is a term used for MIDI to express that a key of a keyboard or a piano is pressed or your finger is released from it.
CC is an abbreviation of "Control Change". Control Change is a kind of MIDI message used to communicate many kinds of control information such as sound quality and volume level.

Group	Fig	User Interface				MIDI assignment reference	MIDI-IN (XDJ-AZ → PC/Mac)				MIDI-OUT (PC/Mac → XDJ-AZ)			Detail of Data2		
		UI name	Operation	Condition (mode)	+SHIFT/Long Press		MIDI Channel (dec)	NOTE / CC	Status (hex)	Data1 (dec)	Data2 (hex)	Status (hex)	Data1 (hex)		Data2 (hex)	
1. DECK	* Functions are the same for both left and right decks.															
	1[L/R]	Jog dial (Platter)	Rotate			1/2/3/4	CC	Bn	34	22	nh				Count value difference from previous operation When turned clockwise: Increases from 65(0x41) When turned counterclockwise: Decreases from 63(0x3F)	
				+SHIFT	1/2/3/4	CC	Bn	43	20	nh				OFF=0(0x00), ON=127(0x7F)		
		Jog Dial (Wheel side)	Rotate			1/2/3/4	NOTE	9n	32	20	nh				OFF=0(0x00), ON=127(0x7F)	
				+SHIFT	1/2/3/4	NOTE	9n	72	48	nh				OFF=0(0x00), ON=127(0x7F)		
	2[L/R]	TEMPO	Slide			1/2/3/4	CC	Bn	33	21	nh			Count value difference from previous operation When turned clockwise: Increases from 65(0x41) When turned counterclockwise: Decreases from 63(0x3F)		
						1/2/3/4	CC	Bn	0	0	MSB			0~16383 "-" side : 0 "+" side : 16383		
						1/2/3/4	CC	Bn	32	20	LSB					
	3[L/R]	TEMPO RESET	Press			1/2/3/4	NOTE	9n	19	13	nh	< same as MIDI IN			OFF=0(0x00), ON=127(0x7F)	
	4[L/R]	MASTER TEMPO	Press			1/2/3/4	NOTE	9n	17	11	nh	< same as MIDI IN			OFF=0(0x00), ON=127(0x7F)	
	5[L/R]	TEMPO RANGE	Press			1/2/3/4	NOTE	9n	16	10	nh	< same as MIDI IN			OFF=0(0x00), ON=127(0x7F)	
	6[L/R]	KEY SYNC	Press			1/2/3/4	NOTE	9n	20	14	nh	< same as MIDI IN			OFF=0(0x00), ON=127(0x7F)	
	7[L/R]	SYNC	Press			1/2/3/4	NOTE	9n	31	1F	nh	< same as MIDI IN			OFF=0(0x00), ON=127(0x7F)	
		MASTER	Press			Long press	1/2/3/4	NOTE	9n	71	47	nh			OFF=0(0x00), ON=127(0x7F)	
	8[L/R]	JOG ADJUST	Rotate			1/2/3/4	NOTE	9n	30	1E	nh	< same as MIDI IN			OFF=0(0x00), ON=127(0x7F)	
	9[L/R]	JOG MODE	Press									< same as MIDI IN			(Hardware Control)	
	10[L/R]	DECK SELECT	Press			1/2/3/4	NOTE	9n	18	12	nh	< same as MIDI IN			OFF=0(0x00), ON=127(0x7F)	
	11-13[L/R]	VINYL SPEED ADJUST (Hard Button)	Press			1/2/3/4	NOTE	9n	21	15	nh	< same as MIDI IN			OFF=0(0x00), ON=127(0x7F) Turning on/off the button LED is controlled by XDJ-AZ	
						1/2/3/4	NOTE	9n	42	2A	nh				OFF=0(0x00), ON=127(0x7F)	
	11-20[L/R]	VINYL SPEED ADJUST Vo (SHORT CUT/UTILITY)	Press			1/2/3/4	CC	Bn	30	1E	nh				When VINYL SPEED ADJUST is ON, Vo position data is sent every time the Vo position changes. (whether you change the settings in SHORT CUT or UTILITY) While OFF, no transmission is made even if the Vo position changes. (5 Stages : 0(0x00), 18(0x12), 63(0x3F), 109(0x6D), 127(0x7F))	
	12[L/R]	SEARCH FWD	Press			1/2/3/4	NOTE	9n	2	2	nh				OFF=0(0x00), ON=127(0x7F)	
		SEARCH REV	Press			1/2/3/4	NOTE	9n	3	3	nh				OFF=0(0x00), ON=127(0x7F)	
	13[L/R]	TRACK SEARCH FWD	Press			1/2/3/4	NOTE	9n	4	4	nh				OFF=0(0x00), ON=127(0x7F)	
		TRACK SEARCH REV	Press			1/2/3/4	NOTE	9n	5	5	nh				OFF=0(0x00), ON=127(0x7F)	
	14[L/R]	SHIFT	Press			1/2/3/4	NOTE	9n	63	3F	nh				OFF=0(0x00), ON=127(0x7F)	
						1/2/3/4	NOTE	9n	33	21	nh	< same as MIDI IN			OFF=0(0x00), ON=127(0x7F)	
	15[L/R]	SLIP REVERSE	Press			+SHIFT	1/2/3/4	NOTE	9n	82	52	nh	< same as MIDI IN			OFF=0(0x00), ON=127(0x7F)
	16[L/R]	SLIP	Press			1/2/3/4	NOTE	9n	44	2C	nh	< same as MIDI IN				OFF=0(0x00), ON=127(0x7F)
						1/2/3/4	NOTE	9n	22	16	nh				OFF=0(0x00), ON=127(0x7F)	
	17[L/R]	BEAT JUMP FWD	Press			+SHIFT	1/2/3/4	NOTE	9n	23	17	nh				OFF=0(0x00), ON=127(0x7F)
						1/2/3/4	NOTE	9n	24	18	nh				OFF=0(0x00), ON=127(0x7F)	
		BEAT JUMP REV	Press			+SHIFT	1/2/3/4	NOTE	9n	25	19	nh				OFF=0(0x00), ON=127(0x7F)
		4 BEAT	Press			1/2/3/4	NOTE	9n	67	43	nh				OFF=0(0x00), ON=127(0x7F)	
	18[L/R]	8 BEAT	Press			1/2/3/4	NOTE	9n	68	44	nh				OFF=0(0x00), ON=127(0x7F)	
		LOOP IN	Press			1/2/3/4	NOTE	9n	6	6	nh	< same as MIDI IN			OFF=0(0x00), ON=127(0x7F)	
	19[L/R]	LOOP OUT	Press			Long press	1/2/3/4	NOTE	9n	69	45	nh	< same as MIDI IN			OFF=0(0x00), ON=127(0x7F)
						1/2/3/4	NOTE	9n	7	7	nh	< same as MIDI IN			OFF=0(0x00), ON=127(0x7F)	
	20[L/R]	RELOOP/INT	Press			1/2/3/4	NOTE	9n	8	8	nh	< same as MIDI IN			OFF=0(0x00), ON=127(0x7F)	
	21[L/R]	CUE/LOOP CALL NEXT	Press			1/2/3/4	NOTE	9n	11	8	nh				OFF=0(0x00), ON=127(0x7F)	
		CUE/LOOP CALL PREV	Press			1/2/3/4	NOTE	9n	12	C	nh				OFF=0(0x00), ON=127(0x7F)	
	22[L/R]	CUE/LOOP DELETE	Press			1/2/3/4	NOTE	9n	13	D	nh				OFF=0(0x00), ON=127(0x7F)	
	23[L/R]	CUE/LOOP MEMORY	Press			1/2/3/4	NOTE	9n	10	A	nh				OFF=0(0x00), ON=127(0x7F)	
	24[L/R]	PLAY/PAUSE	Press			1/2/3/4	NOTE	9n	0	0	nh	< same as MIDI IN			OFF=0(0x00), ON=127(0x7F)	
	25[L/R]	CUE	Press			1/2/3/4	NOTE	9n	1	1	nh	< same as MIDI IN			OFF=0(0x00), ON=127(0x7F)	
	26[L/R]	JOG RING	—												(Hardware Control)	
	27[L/R]	DECK QUANTIZE	Press			1/2/3/4	NOTE	9n	26	1A	nh	< same as MIDI IN			OFF=0(0x00), ON=127(0x7F)	
	28[L/R]	LOAD	Press			1/2/3/4	NOTE	9n	81	51	nh	< same as MIDI IN			OFF=0(0x00), ON=127(0x7F)	
	29[L/R]	NEEDLE POSITION (Overall waveform : 2DECK/4DECK/Simple DECK Display)	Press			1/2/3/4	CC	Bn	28	1C	nh				OFF=0(0x00)~127	
					1/2/3/4	NOTE	9n	54	36	nh				OFF=0(0x00), ON=127(0x7F)		

Group	Fig.	User Interface				MIDI assignment reference		MIDI-IN (XDJ-AZ → PC)				MIDI-OUT (PC → XDJ-AZ)			Detail of Data2	
		UI name	Operation	Condition (mode)	+SHIFT/ Long Press	MIDI Channel (dec)	NOTE / CC	Status (hex)	Data1		Data 2 (hex)	Status (hex)	Data 1			
									(dec)	(hex)			(hex)	(hex)		(hex)
2. EFFECT	1	X-PAD	Slide	Slider Mode		5	CC	B4	116	74	nh				Left End : 0(x00)~Right End : 127(x7F)	
	2	BEAT LEFT	Press			5	CC	B4	114	72	nh				EFFECT ON/OFF	
		BEAT RIGHT	Press			5	CC	B4	76	4C	nh				OFF=0(x00), On=127(x7F)	
	3	AUO/TAP	Press			5	CC	B4	69	45	nh				OFF=0(x00), On=127(x7F)	
	4	TAP	Press			5	CC	B4	78	4E	nh				OFF=0(x00), On=127(x7F)	
	5	FX QUANTIZE	Press			5	NOTE	94	118	76	nh				OFF=0(x00), On=127(x7F)	
	6	FREQUENCY HI	Press			5	CC	B4	102	66	nh				OFF=0(x00), On=127(x7F)	
	7	FREQUENCY MID	Press			5	CC	B4	103	67	nh				OFF=0(x00), On=127(x7F)	
	8	FREQUENCY LOW	Press			5	CC	B4	104	68	nh				OFF=0(x00), On=127(x7F)	
	9	EFFECT SELECT DELAY	Rotate			5	CC	B4	42	2A	nh				OFF=0(x00), On=127(x7F)	
		EFFECT SELECT ECHO	Rotate			5	CC	B4	55	37	nh				OFF=0(x00), On=127(x7F)	
		EFFECT SELECT PING PONG	Rotate			5	CC	B4	51	33	nh				OFF=0(x00), On=127(x7F)	
		EFFECT SELECT SPIRAL	Rotate			5	CC	B4	43	2B	nh				OFF=0(x00), On=127(x7F)	
		EFFECT SELECT HELX	Rotate			5	CC	B4	62	3E	nh				OFF=0(x00), On=127(x7F)	
		EFFECT SELECT REVERB	Rotate			5	CC	B4	54	36	nh				OFF=0(x00), On=127(x7F)	
		EFFECT SELECT FLANGER	Rotate			5	CC	B4	50	32	nh				OFF=0(x00), On=127(x7F)	
		EFFECT SELECT PHASER	Rotate			5	CC	B4	57	39	nh				OFF=0(x00), On=127(x7F)	
		EFFECT SELECT FILTER	Rotate			5	CC	B4	59	3B	nh				OFF=0(x00), On=127(x7F)	
		EFFECT SELECT TRIPRET FILTER	Rotate			5	CC	B4	61	3D	nh				OFF=0(x00), On=127(x7F)	
		EFFECT SELECT TRANS	Rotate			5	CC	B4	53	35	nh				OFF=0(x00), On=127(x7F)	
		EFFECT SELECT ROLL	Rotate			5	CC	B4	46	2E	nh				OFF=0(x00), On=127(x7F)	
		EFFECT SELECT TRIPRET ROLL	Rotate			5	CC	B4	63	3F	nh				OFF=0(x00), On=127(x7F)	
		EFFECT SELECT MOBIUS	Rotate			5	CC	B4	58	3A	nh				OFF=0(x00), On=127(x7F)	
	10	CH SELECT CH3 *	Press			5	CC	B4	34	22	nh				OFF=0(x00), On=127(x7F)	
		CH SELECT CH1 *	Press			5	CC	B4	35	23	nh				OFF=0(x00), On=127(x7F)	
		CH SELECT CH2 *	Press			5	CC	B4	36	24	nh				OFF=0(x00), On=127(x7F)	
		CH SELECT CH4	Press			5	CC	B4	37	25	nh				OFF=0(x00), On=127(x7F)	
		CH SELECT MIC	Press			5	CC	B4	28	1C	nh				OFF=0(x00), On=127(x7F)	
		CH SELECT C.F.A	Press			5	CC	B4	39	27	nh				OFF=0(x00), On=127(x7F)	
		CH SELECT C.F.B	Press			5	CC	B4	40	28	nh				OFF=0(x00), On=127(x7F)	
		CH SELECT MASTER	Press			5	CC	B4	41	29	nh				OFF=0(x00), On=127(x7F)	
		11	TIME	Rotate			5	CC	B4	45	2D	nh				96(x62)~127(x7F), 104(1)~30(x1E) Transfer count value difference from previous operation (11~430). If it is ≥30 or more, it is set to ≥30.
		12	LEVEL DEPTH	Rotate			5	CC	B4	91	5B	nh				0(x00)~127(x7F) Left Side : (min)=0(x00), Right Side : (max) =127(x7F)
	13	BEAT EFFECT ON/OFF	Press			5	CC	B4	114	72	nh				OFF=0(x00), On=127(x7F)	
	14	COLOR	Deck 1	Rotate		5	CC	B4	5	5	nh				0(x00)~127(x7F) Left Side : (LOW)=0(x00), Right Side : (HI)=127(x7F)	
			Deck 2	Rotate		5	CC	B4	10	A	nh				0(x00)~127(x7F) Left Side : (LOW)=0(x00), Right Side : (HI)=127(x7F)	
			Deck 3	Rotate		5	CC	B4	22	16	nh				0(x00)~127(x7F) Left Side : (LOW)=0(x00), Right Side : (HI)=127(x7F)	
			Deck 4	Rotate		5	CC	B4	83	53	nh				0(x00)~127(x7F) Left Side : (LOW)=0(x00), Right Side : (HI)=127(x7F)	
	15	PARAMETER	Rotate			5	CC	B4	108	6C	nh				0(x00)~127(x7F) Left Side : (min)=0(x00), Right Side : (max) =127(x7F)	
	16	SPACE	Press			5	CC	B4	105	69	nh				OFF=0(x00), On=127(x7F)	
	17	DUB ECHO	Press			5	CC	B4	107	6B	nh				OFF=0(x00), On=127(x7F)	
	18	CRUSH	Press			5	CC	B4	86	56	nh				OFF=0(x00), On=127(x7F)	
	19	SWEET	Press			5	CC	B4	106	6A	nh				OFF=0(x00), On=127(x7F)	
	20	NOISE	Press			5	CC	B4	85	55	nh				OFF=0(x00), On=127(x7F)	
	21	FILTER	Press			5	CC	B4	87	57	nh				OFF=0(x00), On=127(x7F)	
	3. MIXER	1	CROSSFADER	Slide			5	CC	B4	11	B	nh				0(x00)~127(x7F) Left Side=0(x00), Right Side=127(x7F)
2		CH FADER	Deck 1	Slide		5	CC	B4	17	11	nh				0(x00)~127(x7F) Upper Side=0(x00), Lower Side=127(x7F)	
			Deck 2	Slide		5	CC	B4	18	12	nh				0(x00)~127(x7F) Upper Side=0(x00), Lower Side=127(x7F)	
			Deck 3	Slide		5	CC	B4	19	13	nh				0(x00)~127(x7F) Upper Side=0(x00), Lower Side=127(x7F)	
			Deck 4	Slide		5	CC	B4	20	14	nh				0(x00)~127(x7F) Upper Side=0(x00), Lower Side=127(x7F)	
3		CROSSFADER ASSIGN CH 1 (Mixer Settings/UTILITY *)	A	Press		5	CC	B4	65	41	40					
			B													
			CROSSFADER ASSIGN CH 2 (Mixer Settings/UTILITY *)	THRU	Press		5	CC	B4	66	42	40				
			B													
		CROSSFADER ASSIGN CH 3 (Mixer Settings/UTILITY *)	A	Press		5	CC	B4	67	43	40					
			THRU													
			B													
			CROSSFADER ASSIGN CH 4 (Mixer Settings/UTILITY *)	THRU	Press		5	CC	B4	68	44	40				
4		INPUT SELECT SWITCH (CH3) (Mixer Settings/UTILITY *)	DECK/PC	Press		5	NOTE	94	61	3D	nh					
			LINE			59	3B	nh								
			PHONO			60	3C	nh								
			Bluetooth			62	3E	nh								
		INPUT SELECT SWITCH (CH4) (Mixer Settings/UTILITY *)	DECK/PC	Press		5	NOTE	94	65	41	nh					
			LINE			63	3F	nh								
			PHONO			64	40	nh								
			Bluetooth			66	42	nh								
5		TRM	Deck 1	Rotate		5	CC	B4	1	1	nh				0(x00)~127(x7F) Left Side (=∞) = 0(x00), Right Side(4) = 127(x7F)	
			Deck 2	Rotate		5	CC	B4	6	6	nh				0(x00)~127(x7F) Left Side (=∞) = 0(x00), Right Side(4) = 127(x7F)	
			Deck 3	Rotate		5	CC	B4	12	C	nh				0(x00)~127(x7F) Left Side (=∞) = 0(x00), Right Side(4) = 127(x7F)	
			Deck 4	Rotate		5	CC	B4	80	50	nh				0(x00)~127(x7F) Left Side (=∞) = 0(x00), Right Side(4) = 127(x7F)	
6		EQ HIGH	Deck 1	Rotate		5	CC	B4	2	2	nh				0(x00)~127(x7F) Left Side (26) = 0(x00), Right Side(4) = 127(x7F)	
			Deck 2	Rotate		5	CC	B4	7	7	nh				0(x00)~127(x7F) Left Side (26) = 0(x00), Right Side(4) = 127(x7F)	
			Deck 3	Rotate		5	CC	B4	14	E	nh				0(x00)~127(x7F) Left Side (26) = 0(x00), Right Side(4) = 127(x7F)	
			Deck 4	Rotate		5	CC	B4	81	51	nh				0(x00)~127(x7F) Left Side (26) = 0(x00), Right Side(4) = 127(x7F)	
7		EQ MID	Deck 1	Rotate		5	CC	B4	3	3	nh				0(x00)~127(x7F) Left Side (26) = 0(x00), Right Side(4) = 127(x7F)	
			Deck 2	Rotate		5	CC	B4	8	8	nh				0(x00)~127(x7F) Left Side (26) = 0(x00), Right Side(4) = 127(x7F)	
			Deck 3	Rotate		5	CC	B4	15	F	nh				0(x00)~127(x7F) Left Side (26) = 0(x00), Right Side(4) = 127(x7F)	
			Deck 4	Rotate		5	CC	B4	92	5C	nh				0(x00)~127(x7F) Left Side (26) = 0(x00), Right Side(4) = 127(x7F)	
8		EQ LOW	Deck 1	Rotate		5	CC	B4	4	4	nh				0(x00)~127(x7F) Left Side (26) = 0(x00), Right Side(4) = 127(x7F)	
			Deck 2	Rotate		5	CC	B4	9	9	nh				0(x00)~127(x7F) Left Side (26) = 0(x00), Right Side(4) = 127(x7F)	
			Deck 3	Rotate		5	CC	B4	21	15	nh				0(x00)~127(x7F) Left Side (26) = 0(x00), Right Side(4) = 127(x7F)	
			Deck 4	Rotate		5	CC	B4	82	52	nh				0(x00)~127(x7F) Left Side (26) = 0(x00), Right Side(4) = 127(x7F)	
9		HEADPHONES MIXING	Rotate			5	CC	B4	27	1B	nh				0(x00)~127(x7F) Left Side (CUE) = 0(x00), Right Side(MASTER) = 127(x7F)	
10		HEADPHONES LEVEL	Rotate			5	CC	B4	26	1A	nh				0(x00)~127(x7F) Left Side (=∞) = 0(x00), Right Side(4) = 127(x7F)	
11		CH CUE (headphone)	Deck 1	Press		5	CC	B4	70	46	nh				OFF=0(x00), On=127(x7F)	
			Deck 2	Press		5	CC	B4	71	47	nh				OFF=0(x00), On=127(x7F)	
			Deck 3	Press		5	CC	B4	72	48	nh				OFF=0(x00), On=127(x7F)	
			Deck 4	Press		5	CC	B4	73	49	nh				OFF=0(x00), On=127(x7F)	
12		LINK CUE (headphone)	Press			5	CC	B4	84	54	nh				OFF=0(x00), On=127(x7F)	
13		MASTER CUE (headphone)	Press			5	CC	B4	74	4A	nh				OFF=0(x00), On=127(x7F)	
14		MASTER LEVEL	Rotate			5	CC	B4	24	18	nh				0(x00)~127(x7F) Left Side (=∞) = 0(x00), Right Side(4) = 127(x7F)	
15		MASTER EQ LOW	Rotate			5	CC	B4	49	31	nh				0(x00)~127(x7F) Left Side (26) = 0(x00), Right Side(4) = 127(x7F)	
16		MASTER EQ MID	Rotate			5	CC	B4	48	30	nh				0(x00)~127(x7F) Left Side (26) = 0(x00), Right Side(4) = 127(x7F)	
17		MASTER EQ HI	Rotate			5	CC	B4	47	2F	nh				0(x00)~127(x7F) Left Side (26) = 0(x00), Right Side(4) = 127(x7F)	
18		BOOTH MONITOR LEVEL	Rotate			5	CC	B4	25	19	nh				0(x00)~127(x7F) Left Side (=∞) = 0(x00), Right Side(4) = 127(x7F)	
19		MIC 1 SWITCH	Press			5	CC	B4	75	4F	nh				OFF=0(x00), On=127(x7F)	
		MIC 2 SWITCH	Press			5	CC	B4	79	4F	nh				OFF=0(x00), On=127(x7F)	
20		TALKOVER	Press			5	CC	B4	89	59	nh				OFF=0(x00), On=127(x7F)	
21		MIC 1 LEVEL	Rotate												(Hardware Control)	
	MIC 2 LEVEL	Rotate												(Hardware Control)		
22	MIC 1 EQ LOW	Rotate			5	CC	B4	31	1F	nh				0(x00)~127(x7F) Left Side (12) = 0(x00), Right Side(12) = 127(x7F)		
	MIC 2 EQ LOW	Rotate			5	CC	B4	93	61	nh				0(x00)~127(x7F) Left Side (12) = 0(x00), Right Side(12) = 127(x7F)		
23	MIC 1 EQ MID	Rotate			5	CC	B4	98	62	nh				0(x00)~127(x7F) Left Side (12) = 0(x00), Right Side(12) = 127(x7F)		
	MIC 2 EQ MID	Rotate			5	CC	B4	99	63	nh				0(x00)~127(x7F) Left Side (12) = 0(x00), Right Side(12) = 127(x7F)		
24	MIC 1 EQ HI	Rotate			5	CC	B4	30	1E	nh				0(x00)~127(x7F) Left Side (12) = 0(x00), Right Side(12) = 127(x7F)		
	MIC 2 EQ HI	Rotate			5	CC	B4	96	60	nh				0(x00)~127(x7F) Left Side (12) = 0(x00), Right Side(12) = 127(x7F)		

Group	Fig.	User Interface				MIDI assignment reference		MIDI-IN (XDJ-AZ → PC)				MIDI-OUT (PC → XDJ-AZ)				Detail of Data2		
		UI name	Operation	Condition (mode)	+SHIFT/Long Press	MIDI Channel (chc)	NOTE / CC	Status (note)	Data1		Data 2 (note)	Status (note)	Data 1		Data 2 (note)			
									(hex)	(hex)			(hex)	(hex)			(hex)	(hex)
4. BROWSER	1	ROTARY SELECTOR	Rotate		+SHIFT	1	CC	80	96	60	nh					Count value difference from previous operation Turn clockwise: 1-30 (0x01-0x1E) Turn counter-clockwise: 127-98 (0x7F-0x62)		
			Press		+SHIFT	1	NOTE	90	51	33	nh					OFF=0x0400, ON=127(0x7F) OFF=0x0400, ON=127(0x7F) OFF=0x0400, ON=127(0x7F) OFF=0x0400, ON=127(0x7F)		
	2	BACK	Press		+SHIFT	1	NOTE	90	95	5F	nh					OFF=0x0400, ON=127(0x7F) OFF=0x0400, ON=127(0x7F)		
					+SHIFT	1	NOTE	90	48	30	nh					OFF=0x0400, ON=127(0x7F)		
	3	TAG TRACK/REMOVE	Press		+SHIFT	1	NOTE	90	98	62	nh					OFF=0x0400, ON=127(0x7F) OFF=0x0400, ON=127(0x7F)		
5. PERFORMANCE PADS	4	TRACK FILTER	Press		+SHIFT	1	NOTE	90	49	31	nh					OFF=0x0400, ON=127(0x7F) OFF=0x0400, ON=127(0x7F)		
					+SHIFT	1	NOTE	90	93	5D	nh						OFF=0x0400, ON=127(0x7F) (Hardware Control)	
	5	SHORT CUT	Press			1/2/3/4	NOTE	9n	34	22	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)	
					+SHIFT	1/2/3/4	NOTE	9n	38	26	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
	6[L,R]	GATE CUE	Press			1/2/3/4	NOTE	9n	35	23	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)	
					+SHIFT	1/2/3/4	NOTE	9n	39	27	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
	7[L,R]	BEAT LOOP BEAT LOOP2	Press			1/2/3/4	NOTE	9n	36	24	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)	
					+SHIFT	1/2/3/4	NOTE	9n	40	28	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
	8[L,R]	SLIP LOOP KEY SHFT	Press			1/2/3/4	NOTE	9n	37	25	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)	
					+SHIFT	1/2/3/4	NOTE	9n	41	29	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
	9[L,R]	BEAT JUMP BEAT JUMP2	Press			1/2/3/4	NOTE	9n	38	26	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)	
					+SHIFT	1/2/3/4	NOTE	9n	42	30	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
	6[L,R]	Performance Pad2	Press	HOT CUE mode		6/7/8/9	NOTE	9n	0	0	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)	
						+SHIFT	6/7/8/9	NOTE	9n	1	1	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number
						6/7/8/9	NOTE	9n	2	2	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)	
						+SHIFT	6/7/8/9	NOTE	9n	3	3	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number
					PAD FX BANK1	Page1	6/7/8/9	NOTE	9n	4	4	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)
					Page2	6/7/8/9	NOTE	9n	5	5	nh		< same as MIDI IN					[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number
					PAD FX BANK2	Page1	6/7/8/9	NOTE	9n	6	6	nh		< same as MIDI IN				*Note: When connected to Rekordbox. The currently selected BANK and Page are detected and the corresponding MIDI is sent When connected to a DJ app other than Rekordbox (including when connected to a PC and not connected to a DJ app): Outputs MIDI for PAD FX BANK1/2/3/4/5/6/7/8/9
					Page2	6/7/8/9	NOTE	9n	7	7	nh		< same as MIDI IN					
						+SHIFT	6/7/8/9	NOTE	9n	8	8	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)
						6/7/8/9	NOTE	9n	9	9	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
	6[L,R]	Performance Pad2	Press	BEAT LOOP mode		6/7/8/9	NOTE	9n	10	A	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)	
						+SHIFT	6/7/8/9	NOTE	9n	11	B	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number
						6/7/8/9	NOTE	9n	12	C	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)	
					+SHIFT	6/7/8/9	NOTE	9n	13	D	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
					6/7/8/9	NOTE	9n	14	E	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)		
					+SHIFT	6/7/8/9	NOTE	9n	15	F	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
					6/7/8/9	NOTE	9n	16	10	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)		
					+SHIFT	6/7/8/9	NOTE	9n	17	11	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
					6/7/8/9	NOTE	9n	18	12	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)		
					+SHIFT	6/7/8/9	NOTE	9n	19	13	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
6[L,R]	Performance Pad2	Press	HOT CUE mode		6/7/8/9	NOTE	9n	20	14	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)		
					+SHIFT	6/7/8/9	NOTE	9n	21	15	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
					6/7/8/9	NOTE	9n	22	16	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)		
					+SHIFT	6/7/8/9	NOTE	9n	23	17	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
				PAD FX BANK1	Page1	6/7/8/9	NOTE	9n	24	18	nh		< same as MIDI IN				*Note: When connected to Rekordbox. The currently selected BANK and Page are detected and the corresponding MIDI is sent When connected to a DJ app other than Rekordbox (including when connected to a PC and not connected to a DJ app): Outputs MIDI for PAD FX BANK1/2/3/4/5/6/7/8/9	
				Page2	6/7/8/9	NOTE	9n	25	19	nh		< same as MIDI IN						
				PAD FX BANK2	Page1	6/7/8/9	NOTE	9n	26	1A	nh		< same as MIDI IN					
				Page2	6/7/8/9	NOTE	9n	27	1B	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)		
					6/7/8/9	NOTE	9n	28	1C	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number		
					+SHIFT	6/7/8/9	NOTE	9n	29	1D	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)	
6[L,R]	Performance Pad2	Press	BEAT LOOP mode		6/7/8/9	NOTE	9n	30	1E	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)		
					+SHIFT	6/7/8/9	NOTE	9n	31	1F	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
					6/7/8/9	NOTE	9n	32	20	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)		
					+SHIFT	6/7/8/9	NOTE	9n	33	21	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
					6/7/8/9	NOTE	9n	34	22	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)		
					+SHIFT	6/7/8/9	NOTE	9n	35	23	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
					6/7/8/9	NOTE	9n	36	24	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)		
					+SHIFT	6/7/8/9	NOTE	9n	37	25	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
					6/7/8/9	NOTE	9n	38	26	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)		
					+SHIFT	6/7/8/9	NOTE	9n	39	27	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
6[L,R]	Performance Pad2	Press	BEAT LOOP mode		6/7/8/9	NOTE	9n	40	28	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)		
					+SHIFT	6/7/8/9	NOTE	9n	41	29	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
				PAD FX BANK1	Page1	6/7/8/9	NOTE	9n	42	2A	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)	
				Page2	6/7/8/9	NOTE	9n	43	2B	nh		< same as MIDI IN					[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
				PAD FX BANK2	Page1	6/7/8/9	NOTE	9n	44	2C	nh		< same as MIDI IN				*Note: When connected to Rekordbox. The currently selected BANK and Page are detected and the corresponding MIDI is sent When connected to a DJ app other than Rekordbox (including when connected to a PC and not connected to a DJ app): Outputs MIDI for PAD FX BANK1/2/3/4/5/6/7/8/9	
				Page2	6/7/8/9	NOTE	9n	45	2D	nh		< same as MIDI IN						
					+SHIFT	6/7/8/9	NOTE	9n	46	2E	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)	
					6/7/8/9	NOTE	9n	47	2F	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number		
					+SHIFT	6/7/8/9	NOTE	9n	48	30	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
					6/7/8/9	NOTE	9n	49	31	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)		
6[L,R]	Performance Pad3	Press	BEAT LOOP mode		+SHIFT	6/7/8/9	NOTE	9n	50	32	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)	
					6/7/8/9	NOTE	9n	51	33	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)		
					+SHIFT	6/7/8/9	NOTE	9n	52	34	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
					6/7/8/9	NOTE	9n	53	35	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)		
					+SHIFT	6/7/8/9	NOTE	9n	54	36	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
					6/7/8/9	NOTE	9n	55	37	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)		
					+SHIFT	6/7/8/9	NOTE	9n	56	38	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
					6/7/8/9	NOTE	9n	57	39	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)		
					+SHIFT	6/7/8/9	NOTE	9n	58	3A	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
					6/7/8/9	NOTE	9n	59	3B	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)		
6[L,R]	Performance Pad4	Press	BEAT LOOP mode		+SHIFT	6/7/8/9	NOTE	9n	60	3C	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
					6/7/8/9	NOTE	9n	61	3D	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)		
				PAD FX BANK1	Page1	6/7/8/9	NOTE	9n	62	3E	nh		< same as MIDI IN				*Note: When connected to Rekordbox. The currently selected BANK and Page are detected and the corresponding MIDI is sent When connected to a DJ app other than Rekordbox (including when connected to a PC and not connected to a DJ app): Outputs MIDI for PAD FX BANK1/2/3/4/5/6/7/8/9	
				Page2	6/7/8/9	NOTE	9n	63	3F	nh		< same as MIDI IN						
				PAD FX BANK2	Page1	6/7/8/9	NOTE	9n	64	40	nh		< same as MIDI IN					
				Page2	6/7/8/9	NOTE	9n	65	41	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)		
					6/7/8/9	NOTE	9n	66	42	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number		
					+SHIFT	6/7/8/9	NOTE	9n	67	43	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	
					6/7/8/9	NOTE	9n	68	44	nh		< same as MIDI IN				OFF=0x0400, ON=127(0x7F)		
					+SHIFT	6/7/8/9	NOTE	9n	69	45	nh		< same as MIDI IN				[MIDI OUT] 0x0400 : OFF(Dark Lighting).1(0x01)-127(0x7F) : LED lights up in the color specified by the color number	

