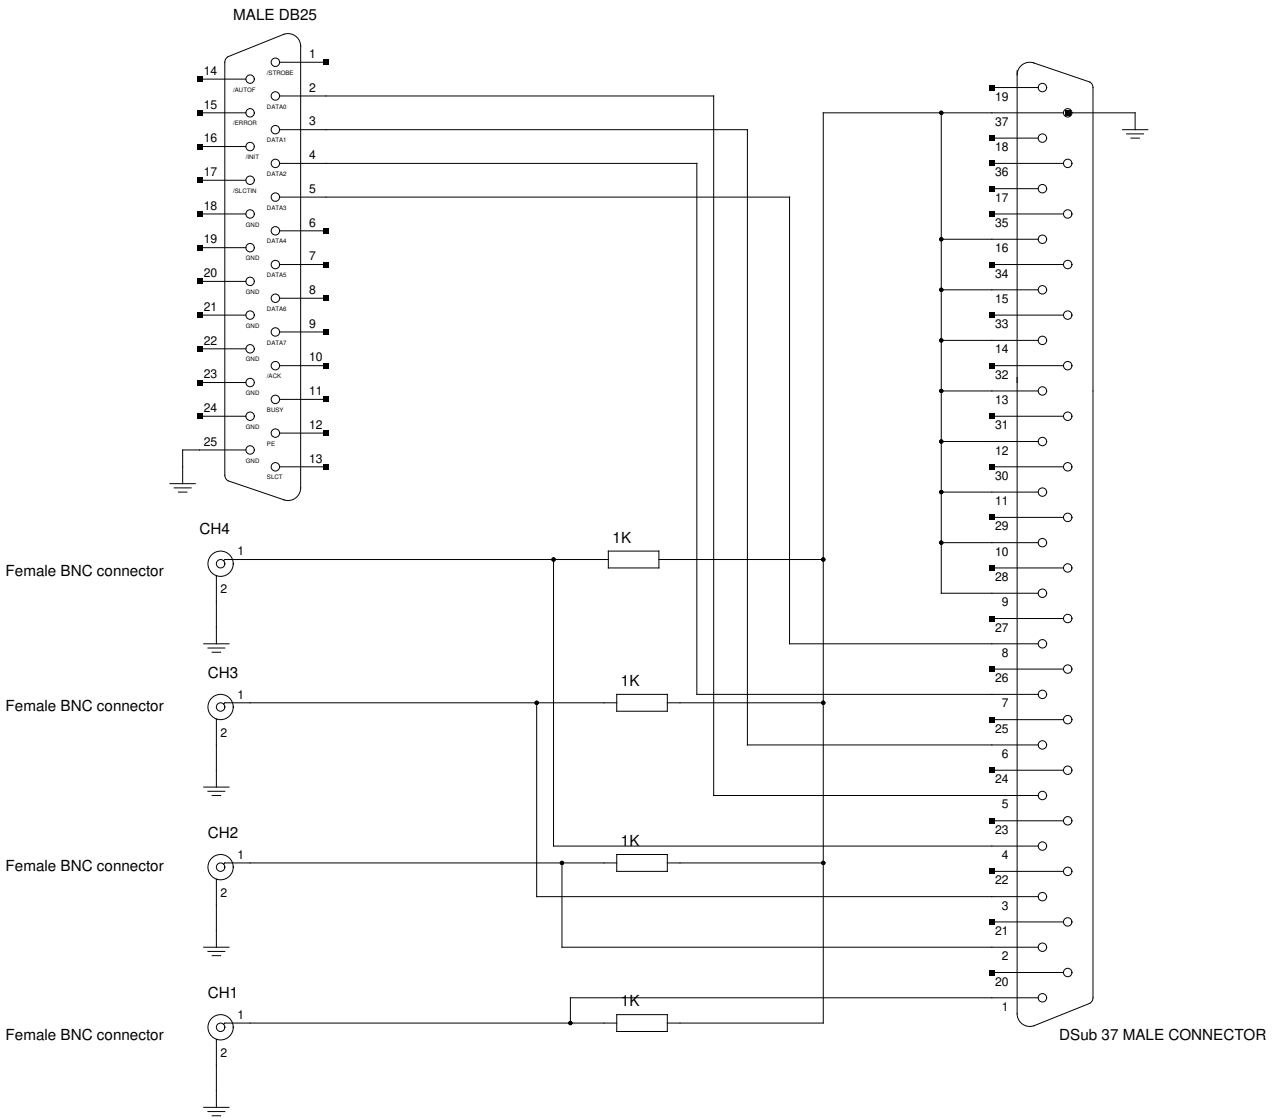
MALE DB25
/STROBE
/AUTOF
DATA0
/ERROR
DATA1
/INIT
DATA2
/SLCTIN
DATA3
GND
DATA4
DATA5
DATA6
DATA7
/ACK
BUSY
PE
SLCT
CH4
CH3
CH2
CH1
Female BNC connector
1K
DSub 37 MALE CONNECTOR

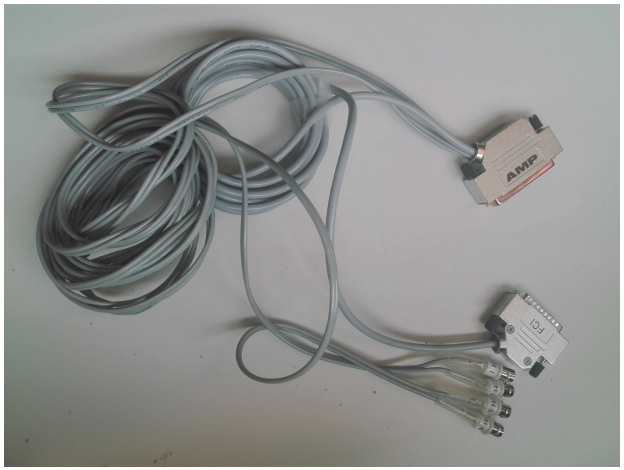
AMP