
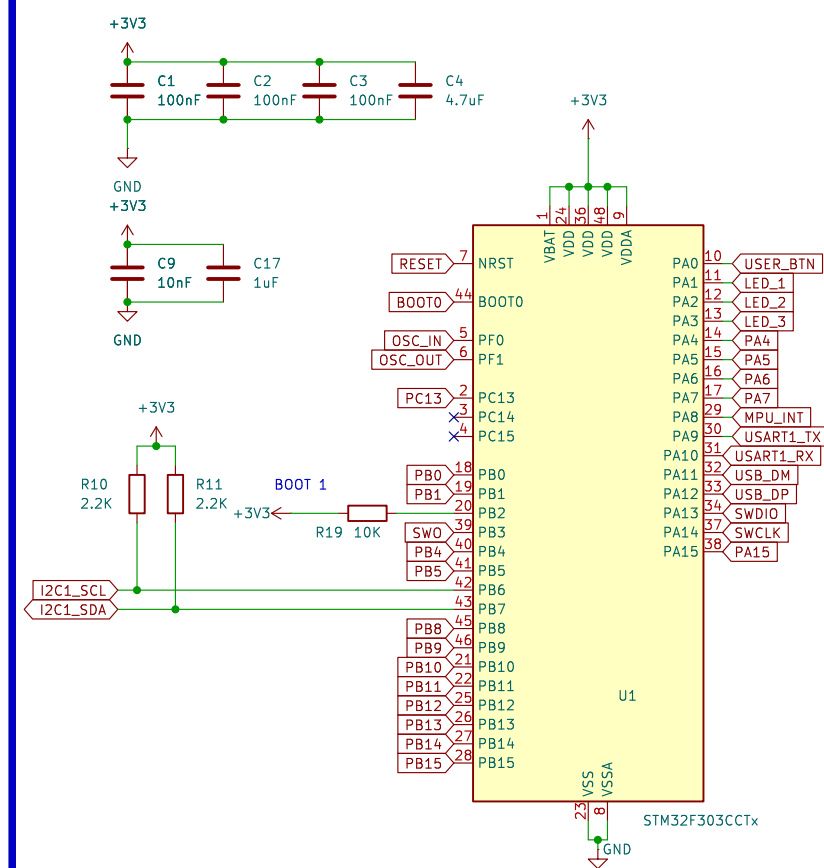
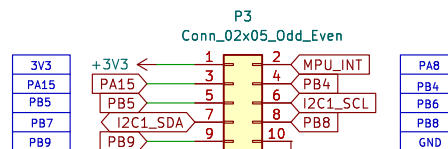


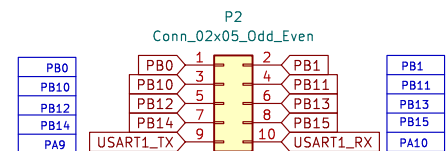

File: LCD.kicad_sch

File: LCD.kicad_sch

The diagram illustrates the wiring for the P1 connector. The connector has 10 pins numbered 1 through 10. Pin 1 is connected to +3V3. Pins 2 through 9 are connected to LEDs labeled LED_1 through LED_9 respectively. Pin 10 is connected to GND. On the right side, there are two sets of connections: PC13 to pin 2, PC12 to pin 3, PA2 to pin 4, PA4 to pin 6, PA6 to pin 8, and GND to pin 10.

[illegible]

BOOT MODES

BOOT 0
 DEFAULT – LOW – MAIN FLASH MEMORY
 PRESSED – HIGH – SYSTEM MEMORY


The diagram shows a 3-LED power button circuit. It consists of three parallel branches, each containing a resistor (R1, R2, R15) and an LED (D1, D2, D3) in series. The LEDs are labeled RED, BLUE, and GREEN. The resistors are labeled 330. The LEDs are labeled D1, D2, and D3. The circuit is powered by +3V3 and connected to GND. The LEDs are labeled LED_1, LED_2, and LED_3. The circuit is labeled POWER ON/OFF LED.

H1 MountingHole


H2 MountingHole

H3 MountingHole

H4 MountingHole

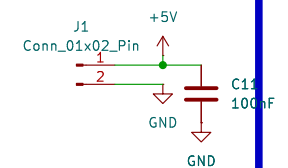


HEADERPINS

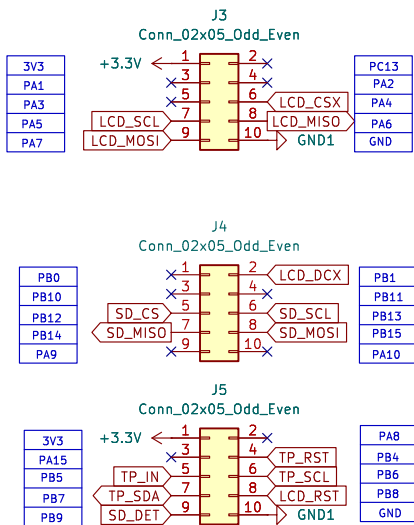


TOUCH PANEL (CST816S)

LCD (GC9A01)

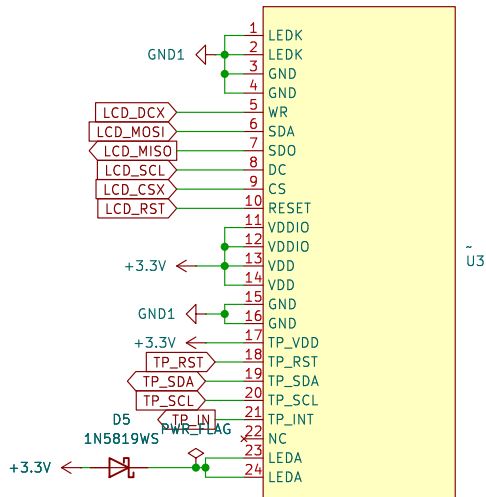

u-SD CARD

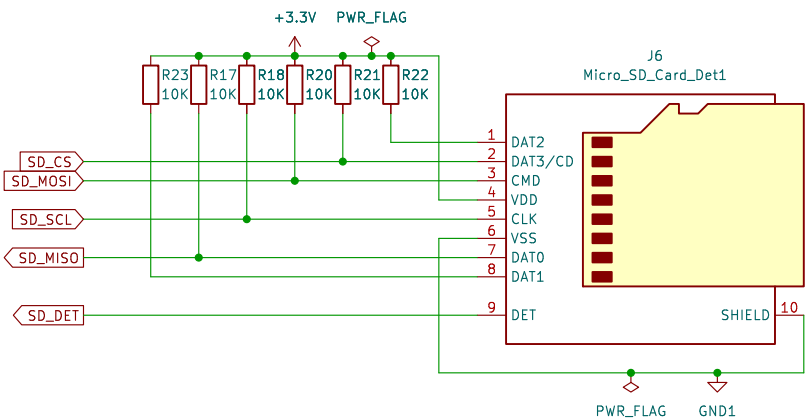

Sheet: /LCD/
File: LCD.kicad_sch

Title:

Size: A4

Date:

KiCad E.D.A. 9.0.7

Rev:

Id: 2/3

