



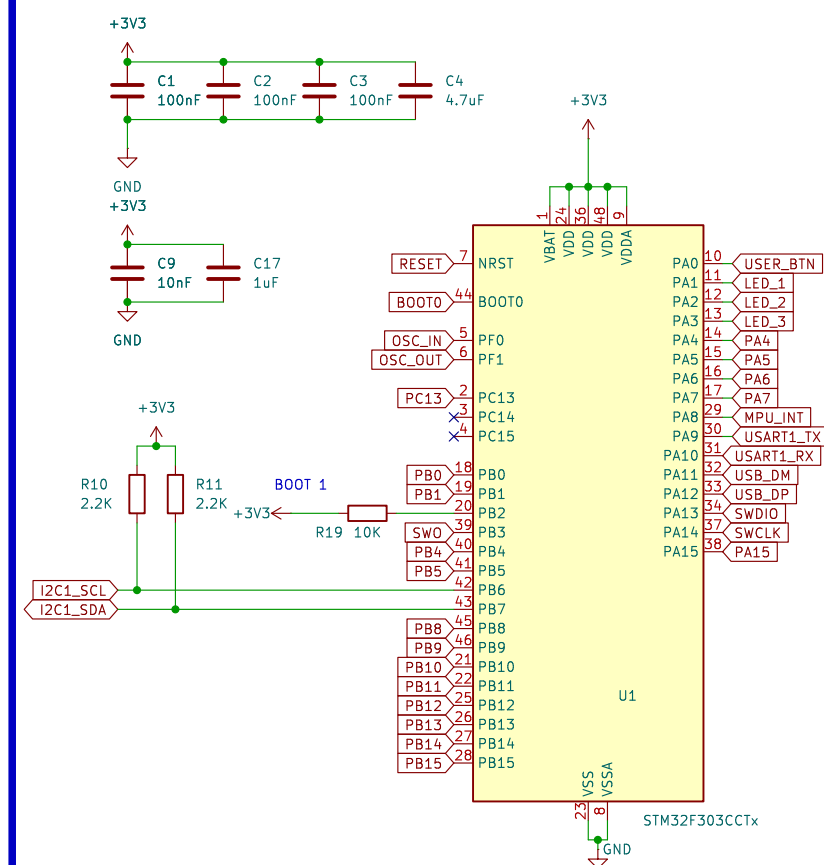


File: LCD.kicad_sch

File: LCD.kicad_sch

P1
Conn_02x05_Odd_Even

Pin	Signal
1	+3V3
2	PC13
3	LED_3
4	LED_2
5	LED_3
6	PA4
7	PA5
8	PA6
9	PA7
10	GND

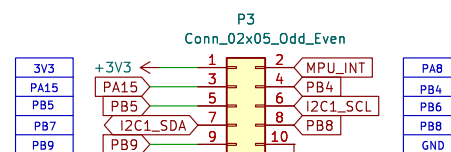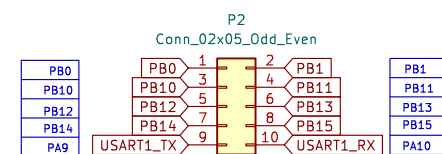

BOOT MODES

BOOT 0
 DEFAULT - LOW - MAIN FLASH MEMORY
 PRESSED - HIGH - SYSTEM MEMORY


[illegible]

H1 MountingHole

H2 MountingHole

H3 MountingHole

H4 MountingHole

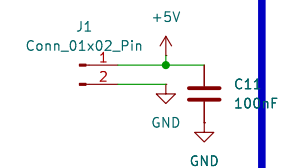


Title:

Rev:


Size: A3	
KiCad E.D.A. 9.0.7	

HEADERPINS

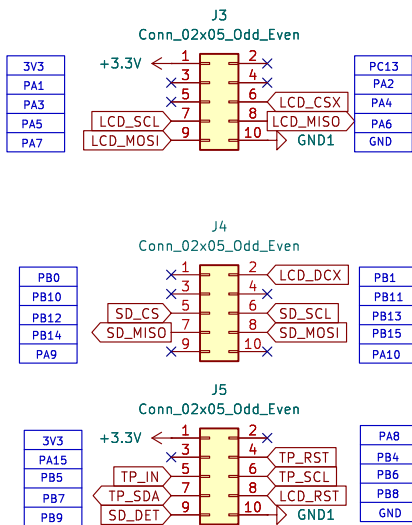


TOUCH PANEL (CST816S)

LCD (GC9A01)

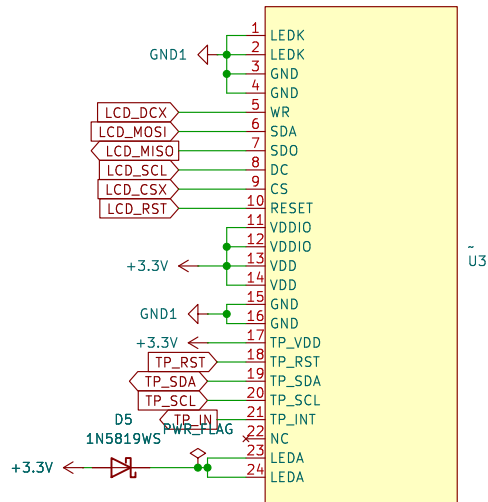

u-SD CARD

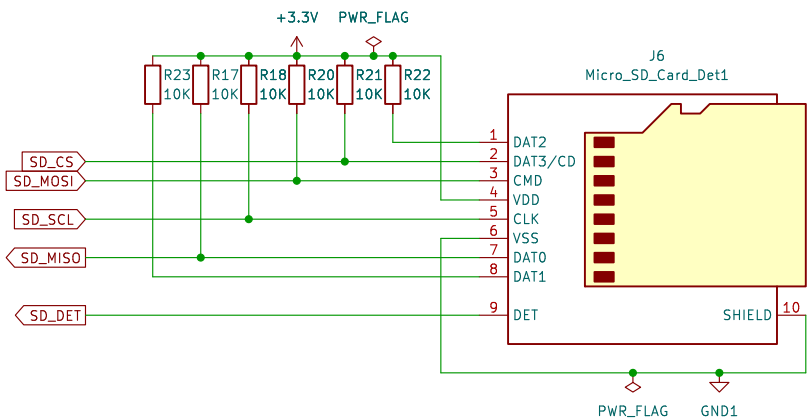

Sheet: /LCD/
File: LCD.kicad_sch

Title:

Size: A4
KiCad E.D.A. 9.0.7

Date:

Rev:

Id: 2/3

