

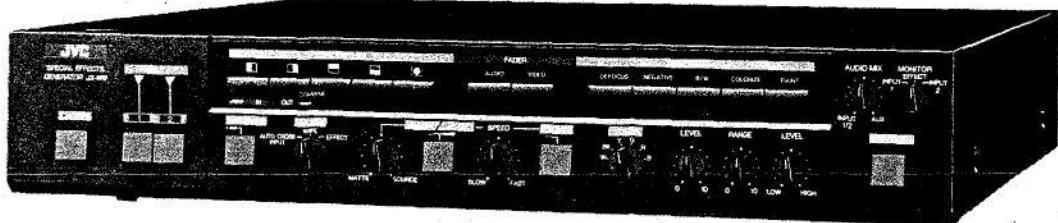
JVC

SERVICE MANUAL

SCHCAFFER REPORTS GENERAL FORUM

MODEL JX-W9 (E), (EB), (EK)

PAL



Contents

Safety Precautions	3	11. Switch Function and Operation Mode Table	26
1. Features	4	12. ICs and Adjusting Points Locations	28
2. Specifications	4	13. Wiring Diagram	29
3. Names of Parts and Their Functions	5	14. Exploded View	Separate Insertion
4. Main Parts Locations	7	15. Electric Parts List	30
5. Disassembly	8	16. Mechanical Parts List	35
6. Troubleshooting	10	17. Packing Materials and Parts Numbers	36
7. Adjustment Procedures	19	18. Accessories List	37
8. Block Diagram	23	19. Schematic Diagram	Separate Insertion
9. Wipe Gate Logic Diagram	24	20. Printed Circuit Boards	Separate Insertion
10. Switching Truth Table	25		

Safety Precautions

1. The design of this product contains special hardware and many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Service should be performed by qualified personnel only.
2. Alterations of the design or circuitry of the product should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacturer of responsibility for personal injury or property damage resulting therefrom.
3. Many electrical and mechanical parts in the product have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the parts list of the service manual. Electrical components having such features are identified by shading on the schematics and by (Δ) on the parts list in the service manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement part shown in the parts list in the service manual may create shock, fire, or other hazards.
4. The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard.

When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after re-assembling.

5. Leakage current check

(Electrical shock hazard testing)

After re-assembling the product, always perform an isolation check on the exposed metal parts of the product (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.

Do not use a line isolation transformer during this check.

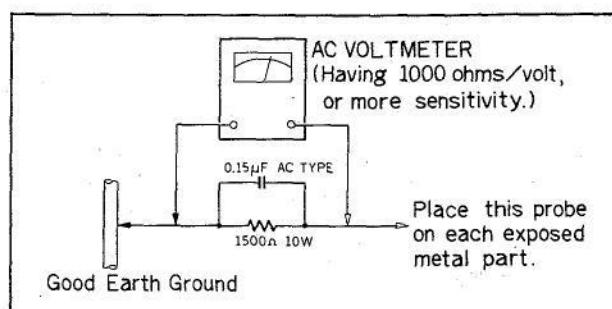
- Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal part of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5 mA AC (r.m.s.).

● Alternate check method

Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having 1,000 ohms per volt or more sensitivity in the following manner. Connect a $1500\ \Omega$ 10W resistor paralleled by a $0.15\ \mu F$ AC-type capacitor between an exposed metal part and a known good earth ground.

Measure the AC voltage across the resistor with the AC voltmeter.

Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Any voltage measured must not exceed 0.75 V AC (r.m.s.). This corresponds to 0.5 mA AC (r.m.s.).



1. Features

- Source input picture can be wiped in and out using one of 16 wipe patterns with 6 different matte background colors.
- Video and audio can be faded in or out simultaneously or independently; fade-to-black and fade-to-white are both possible.
- Wiping and fading can be performed manually or automatically; each operation variable between 1 and 6 seconds.
- Wiping and fading can be used together or separately.
- Special image effects (colorization, painting, black and white, negative and defocus) can be used to enhance the picture.
- After processing, the picture can be wiped with the source input (non-processed picture).
- Two input sources can be changed over automatically using the wiping or fading function (AUTO CROSS INPUT).
- Two pairs of input terminals are provided, with source monitor output terminals for direct monitoring.
- Monitor selector switch is provided to monitor the source picture and the processed picture on a single monitor TV.
- Auxiliary audio input terminals and Audio Mix knob allow mixing with external sound sources.
- Wipe Reverse switch for replacing the input source picture with the matte background color or processed picture.
- Bypass switch is provided for comparing the processed picture with the original image.

2. Specifications

Video section

Signal format	: PAL
Input terminals	: BNC, 2 lines (INPUT 1/2)
Input impedance	: 75 ohms, unbalanced
Output terminals	: BNC, 2 lines (REC OUT, EFFECT MONITOR)
Output impedance	: 75 ohms, unbalanced
Input monitor terminals	: BNC (INPUT 1/2)
Output impedance	: 75 ohms, unbalanced
Reference input level	: 1 Vp-p
Max. allowable input	: 1.5 Vp-p
Reference output level	: 1 Vp-p (1 Vp-p input, 75-ohm loaded)
Signal-to-noise ratio	: 48 dB or more
Crosstalk	: 48 dB or more (4.43 MHz)
Wipe duration	: Approx. 1 to 6 seconds

Audio section

Input terminals	: RCA pin jacks, 2 lines (INPUT 1/2, stereo)
Input impedance	: 47 kohms
AUX input terminals	: RCA pin jacks, 1 line (stereo)
Input impedance	: 10 kohms
Output terminals	: RCA pin jacks, 2 lines (REC OUT, EFFECT MONITOR, stereo)
Output impedance	: 1 kohm


Input monitor terminals: RCA pin jacks, 2 lines (INPUT, 1/2, stereo)

Output impedance	: 1 kohm
Reference input level	: -10 dBV (316 mV; 1 kHz)
Reference output level	: -10 dBV ±2 dB (316 mV ±2 dB: at reference level input)
Max. allowable input	: +6 dBV (2 V; 1 kHz, 1% distortion)
Frequency response	: 20 – 20,000 Hz (-1 ±2 dB/1 kHz, 0 dB)
Signal-to-noise ratio	: 80 dB
Crosstalk	: 70 dB (1 kHz)
Distortion rate	: 0.1% or less (-10 dBV, 1 kHz)
General	
Power supply	: AC 220 V~, 50 Hz (E), (EB)
	: AC 240 V~, 50 Hz (EK)
Power consumption	: 19 watts (Power on) } (E), (EB) 2 watts (Power off) } 20 watts (Power on) } (EK) 2 watts (Power off) }
Dimensions	: 435(W) x 82(H) x 367(D) mm (including knobs, jacks and feet) (17-3/16" x 3-1/4" x 14-1/2")
Weight	: 5.1 kg (11.1 lbs)

Design and specifications subject to change without notice.

3. Names of Parts and Their Functions

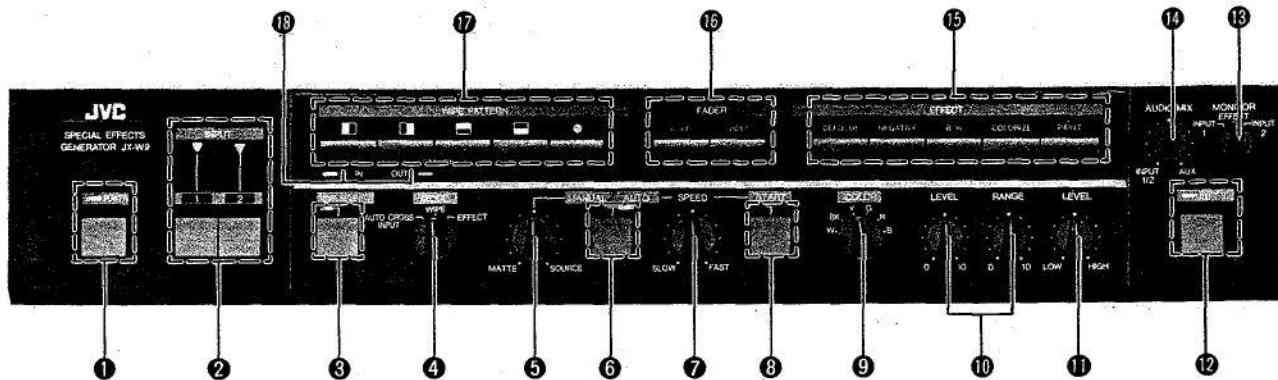Front Panel



① POWER switch and indicator

Press to turn the power on; the indicator lights. Pressing it again turns the power off.

② INPUT select switches and indicators

Press to select the input source, VCR-1 or VCR-2; the selected Input indicator lights.

③ WIPE REVERSE switch and indicator

When wiping, press to replace the input source picture with the background picture*; when this switch is pressed to on, its indicator lights.

④ MODE select knob

Select the desired operation, (AUTO CROSS INPUT, WIPE or EFFECT), with this knob.

⑤ MANUAL control knob

Used to perform wiping or fading manually. Turning counterclockwise increases the background color, and turning clockwise increases the input source picture.

⑥ MANUAL/AUTO select switch and indicators

Press this switch to select either automatic or manual wiping/fading. The selected mode indicator lights.

⑦ SPEED control knob

Adjust the automatic wiping/fading speed with this knob. Turning it clockwise increases the speed, and turning counterclockwise decreases it. (The wiping/fading speed can be varied between 1 and 6 seconds.)

⑧ START switch and indicator

Press to start wiping or fading automatically. The indicator blinks when the switch is pressed, and goes off when the operation is finished.

⑨ COLOR select knob

Select the background color with this when wiping (6 colors — white, black, yellow, green, red or blue), coloring (4 colors — yellow, green, red or blue), and fading (black or white).

⑩ COLORIZE control knobs

LEVEL: Adjusts the color intensity (brightness) of the section to be colorized.

RANGE: Adjusts the range of colorizing section.

⑪ PAINT LEVEL control knob

Adjusts the color brightness of any area being painted.

⑫ BYPASS switch and indicator

Press to deactivate all effects (including wipe or fade) so that the input source signal is sent directly to the output terminal; the indicator lights.

⑬ MONITOR select knob

Select the signal to be output to the monitor TV for checking or monitoring one of the input source pictures, or the processed picture. (N.B.: Monitor TV must be connected to the EFFECT MONITOR output terminals.)

⑭ AUDIO MIX knob

Balances the sound from the input source with the sound from external audio source equipment connected to the AUX input terminals on the rear panel.

⑮ EFFECT select switches

To select the desired effect from DEFOCUS, NEGATIVE, B/W, COLORIZE and PAINT.

⑯ FADER select switches

To select the fading source with the AUDIO only switch, the VIDEO only switch, or both.

⑰ WIPE PATTERN select switches

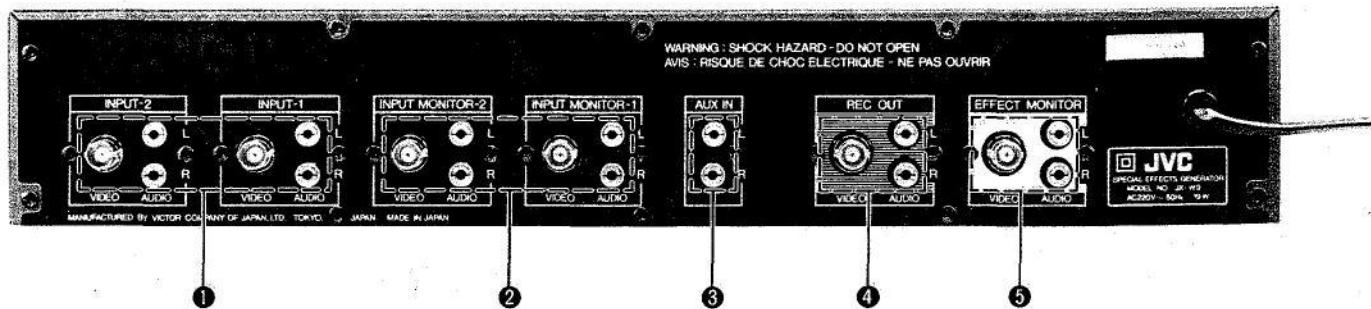
Select from among 5 different wiping patterns with these switches. Except for the circle, the other 4 patterns can be used in any combination.

⑱ Source status indicator (IN/OUT)

The IN indicator lights when the input source picture is in the "in" position on the screen. The OUT indicator lights when the input source picture is in the "out" position and the background picture* is in the "in" position.

*This shows the picture without a source input picture, that is, the matte background color, fade-out picture, or processed picture.

Rear Panel

**① INPUT terminals (VCR-1/VCR-2)**

Connect the playback VCRs, etc. to these terminals. The upper terminals correspond to the INPUT-1 button on the front panel, and the lower terminals to the INPUT-2 button.

② INPUT MONITOR output terminals (VCR-1/VCR-2)

These terminals are used to monitor the input source from the INPUT terminals directly. The upper terminals are for INPUT-1 source, and the lower terminals for INPUT-2 source.

③ AUX IN terminals

Connect external audio equipment to these terminals, for mixing or replacing the audio signal of the input sources with the outboard audio source.

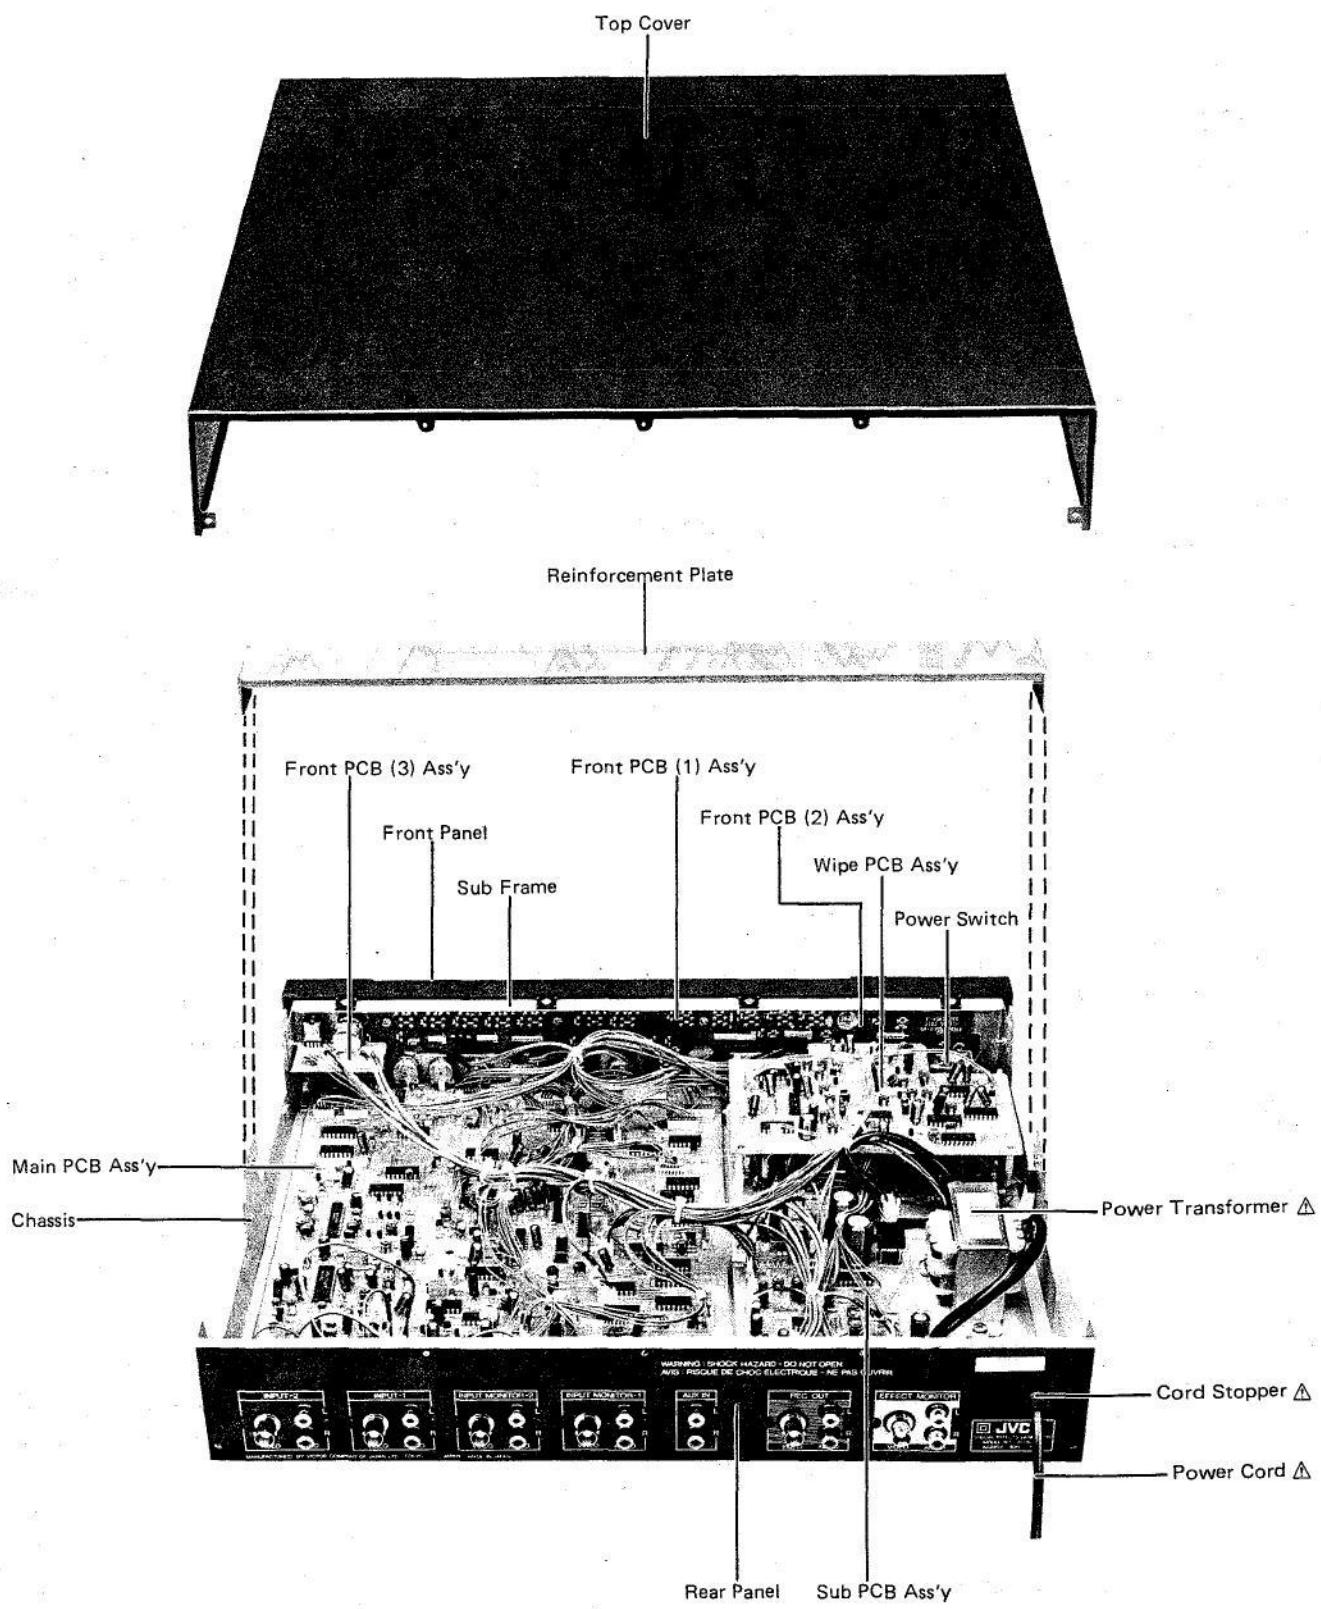
④ REC OUT terminals

Connect the recording VCR to these terminals.

⑤ EFFECT MONITOR output terminals


Connect the monitor TV to these terminals. When the MONITOR OUT selector is set to EFFECT, the effected picture can be monitored, and when the INPUT 1 or 2 is selected, the input source picture can be monitored directly.

4. Main Parts Locations



△ : Safety Parts

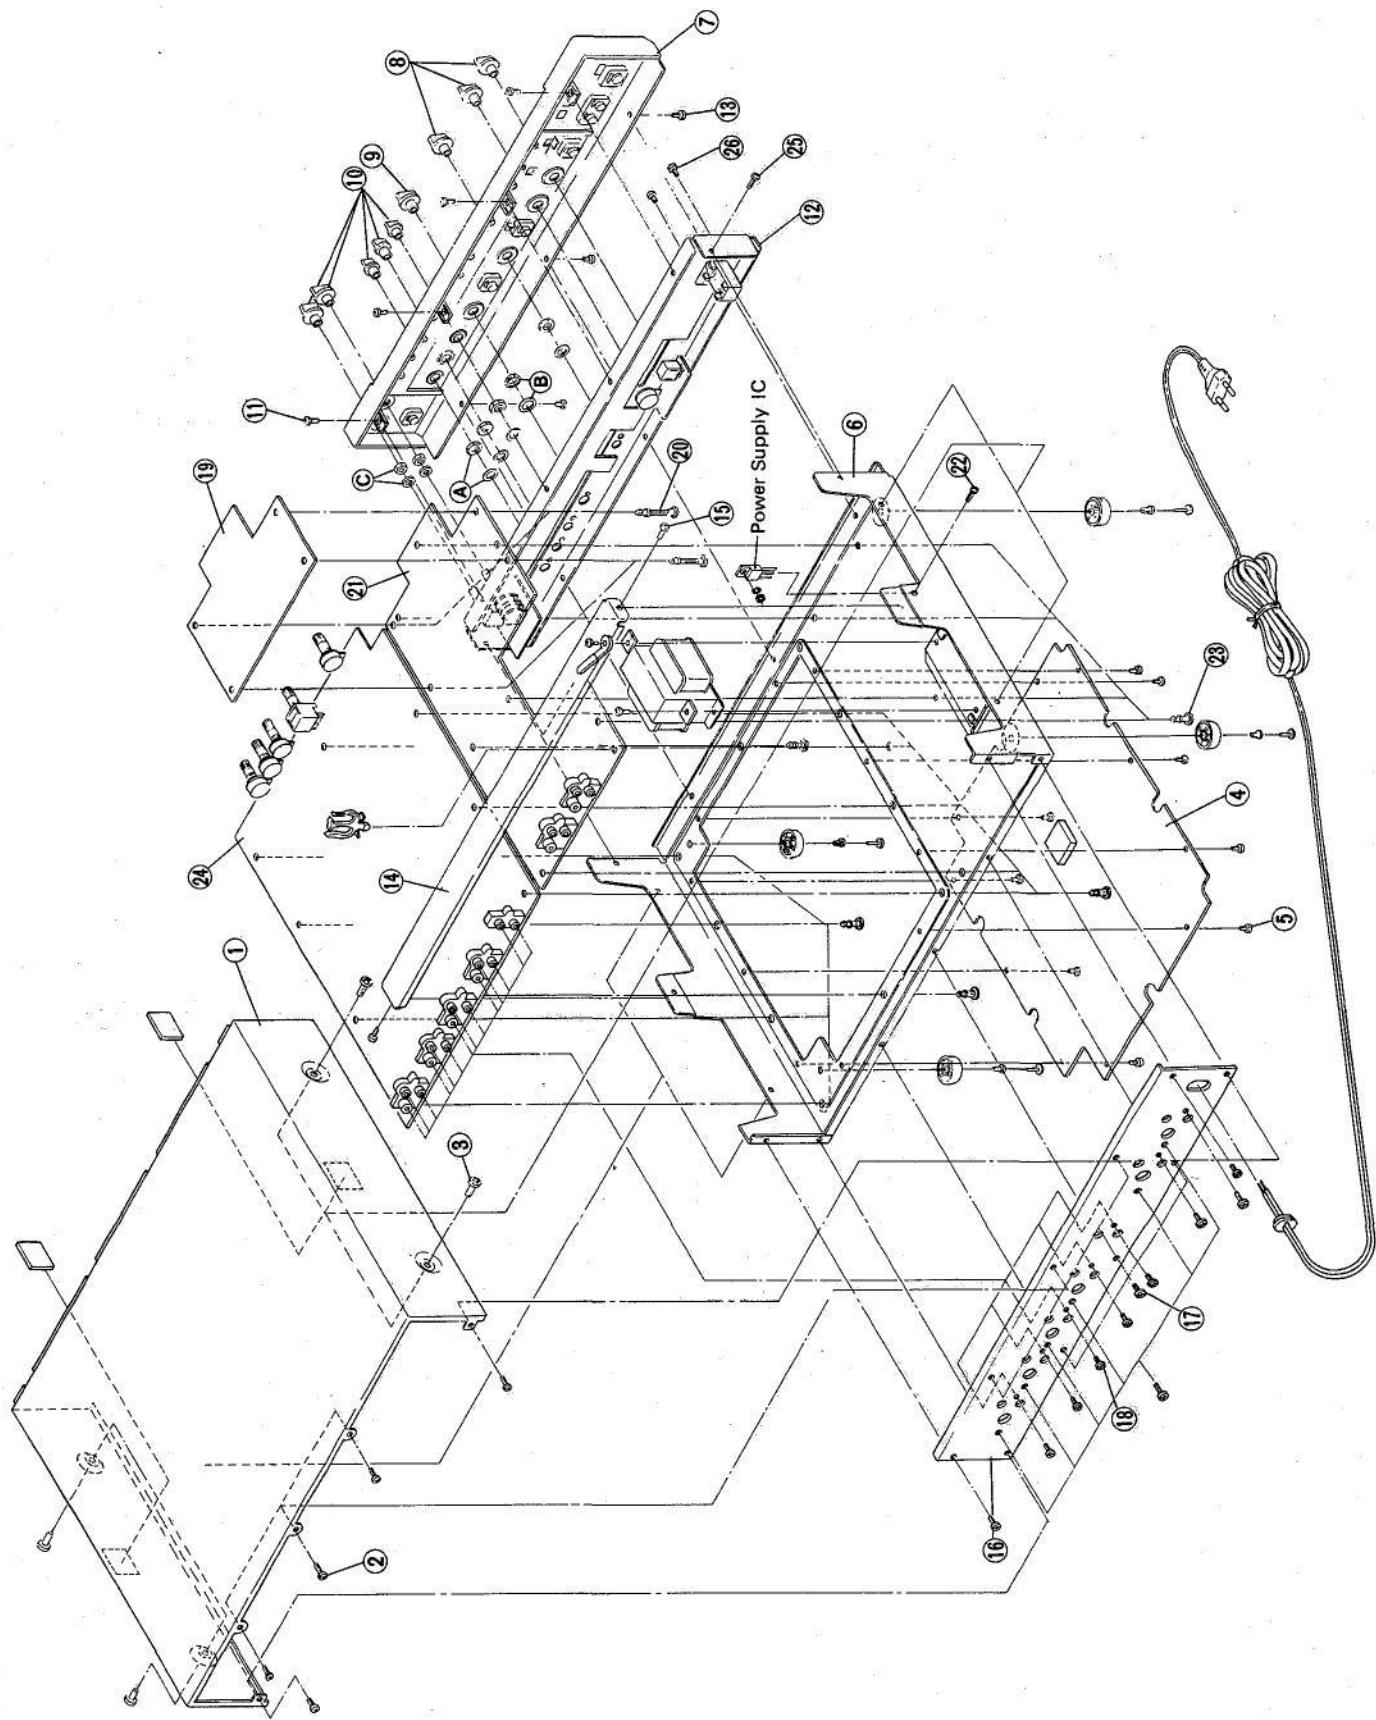5. Disassembly



Note:

For connector locations, refer to page 30.

Removing the Top Cover ①

1. Remove five screws ② on the rear panel retaining the top cover, and four screws ③ on the side.
2. Remove the top cover by pulling it backward.

Removing the Bottom Cover ④

1. Remove ten screws ⑤ attaching the bottom cover to chassis ⑥, to remove the bottom cover.

Removing the Front Panel Ass'y ⑦

1. Remove the top cover according to the above procedure.
2. Pull out the three knobs A ⑧, knob C ⑨ and five knobs B ⑩ toward you.
3. Remove four screws ⑪ attaching the upper section of the front panel to the sub frame ⑫.
4. Remove three screws ⑬ attaching the lower section of the front panel to the sub frame.
5. Pull out the front panel forward to remove it.

Removing the Reinforcement Plate ⑭

1. Remove the top cover according the above procedure.
2. Remove two screws ⑮ on both ends of the reinforcement plate and pull it upward.

Removing the Rear Panel ⑯

1. After removing the top cover ①, remove five screws ⑯ retaining the rear panel and chassis.
2. Remove thirteen screws ⑰ retaining the pin jacks and BNC jacks on the rear panel.
3. Pull out the rear panel toward you.

Removing the Wipe PCB Ass'y ⑲

1. Remove the top cover ①, reinforcement plate ⑭ and rear panel ⑯ according the above procedures.
2. Hold the upper ends of four holders B ⑳ at the corners of the Wipe PCB with pliers to unlock it, and lift it up to remove it.

Removing the Sub PCB Ass'y ㉑

1. Remove the Wipe PCB ass'y ⑲ according to the above procedure.
2. Remove the screw ㉒ and then remove the power supply IC.
3. Remove the connectors CN40 and 45.
4. Remove the two screws ㉓ and remove the power switch.
5. Remove the wire from the wire clamer.
6. Hold the upper ends of the eight holders A ㉔ with pliers to unlock it, and lift it up to remove it.

Removing the Sub Frame Ass'y ㉕ and Main PCB Ass'y ㉖

1. Remove the top cover ①, front panel ass'y ⑦, rear panel ⑯, reinforcement plate ⑭, sub PCB ass'y ㉑, and Wipe PCB ass'y ⑲ according to the above procedures.
2. Remove the washers and nuts ㉗ of the AUDIO MIX knob and MONITOR select knob, and remove the front PCB (3) ass'y from the sub frame.
3. Remove two screws ㉘ retaining the both sides of the sub frame and chassis ⑥.
4. Hold the upper ends of the ten holders retaining the main PCB with pliers to unlock it, then lift up the PCB and remove the sub frame ass'y ㉕ and main PCB ass'y ㉖ from chassis without separating them.
5. Remove washers and nuts ㉙ ㉚ for five knobs and two switches from the sub frame, and remove the sub frame ass'y from the main PCB ass'y.

6. Troubleshooting

Notes: 1. Input signal:

Video: Full-field color bar (white 100 %), 1.0 Vp-p

Audio: 1 kHz, -10 dBV sine wave

2. NO: When normal voltage and waveforms are not present






YES: Normal voltages, etc.

3. Refer to the "ICs and Adjusting Points Locations" on page 29.




4. Before starting repairs, check each adjustment related to the timing pulse in "Adjustment Procedure" (on page 19.)





5. For adjustment, refer to the "Adjustment Procedures".





Symptom	Check point	Normal voltage and waveforms	Adjusting point and defect
1. No picture nor sound.	① Secondary side of power transformer	AC 15.0 V	<p>NO: • Power cord or power transformer is shorted. • Power switch or power transformer connector, etc. is defective.</p> <p>YES: • Check ②.</p>
	② C232	DC 12.0 V (11.5 – 12.5 V) Power supply of main circuit	<p>NO: • IC17 or D20 is defective. • Lead wire or connector, etc. of IC17 is defective.</p> <p>YES: • Check ③.</p>
	③ Power line of each section	DC 11.5 – 12.5 V	
2. No output is present at any output terminals.	④ Hot sides of R1, R8 (75 ohms)	White 100 % 1.0 V	<p>NO: • Video input terminals are defective. Check the voltage and waveforms in the vicinity of Q1 or Q2.</p>
3. No output is present at video jacks of MONITOR and REC OUT terminals. Or their levels are abnormal. (With BYPASS on and off)	⑤ Check IN/OUT of IC27. IN → OUT Gate pin 1 pin 2 pin 13 pin 4 pin 3 pin 5	Same waveform as above. Input-1 ON: pin 13 goes H Input-2 ON: pin 5 goes H IC27 IC70 pin 13 → pin 12 pin 5 → pin 13 (Connected to CN25)	<p>NO: • IC27 is defective. • Connector CN25-1, CN25-2 and lead wires are defective. (Refer to "Switching Truth Table".)</p> <p>YES: • Check ⑥.</p>
	⑥ IC16 pin 1 (AN608)	2.0 V Adjust VR35.	<p>NO: • Check IC11 input pins (pins 11, 10), output pins (pins 1, 2) and gate pins (pins 12, 13). • Check each voltage and waveform at Q65, IC16, Q66 and Q67. • Check IC12 input pin (pin 10), output pin (pin 11) and gate pin (pin 12).</p>
4. No output is present at video jacks on MONITOR and REC OUT terminals. Or their levels are abnormal. (Only when BYPASS off)	⑦ Emitter of Q55	0.82 V	<p>NO: • Check Q13. • Connector CN17-1 or lead wire is defective. • Check the voltage waveform of Q55.</p> <p>YES: • Check ⑧.</p>
	⑧ Emitter of Q62	0.98 V Adjust VR33	<p>NO: • Check each voltage and waveform of Q62, IC15. • Check IC9 in/out pins 1, 2 and gate pin 13.</p> <p>YES: • Check ⑨.</p>
	⑨ Base of Q65	Same waveform as ⑧ when BYPASS is set to OFF. IC11 pins 1, 2 → same as ⑧. pin 13 → H IC11 IC34 pin 13 → pin 1 (Connected to CN29)	<p>NO: • IC11, IC10 is defective. • Connector CN29-2 is defective, or check peripheral components, etc.</p> <p>YES: • Check Q65, C138 and its peripheral components, etc.</p>

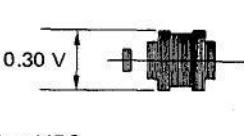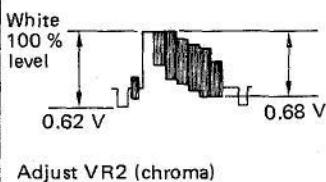

Symptom	Check point	Normal voltage and waveforms	Adjusting point and defect																											
	(10) IC9 IN OUT Gate pin 2 pin 1 pin 13 pin 10 pin 11 pin 12	• When Wipe Manual knob is set to SOURCE, gate pin 13 is H. • When Wipe Manual knob is set to MATTE, gate pin 12 is H.	NO: • Check the "Wipe Gate Logic Diagram". YES: • IC9 is defective.																											
5. When wipe operation is set to Source side (IN), chroma output is not present, or level is abnormal.	(11) IC30 pin 5		NO: • Check of BPF1. • Check voltages of Q5. YES: • Check (12).																											
	(12) IC30 pin 3	 Adjust VR3	NO: • C98 is misadjusted. • IC30 pin 26 HD PULSE is defective. • IC28 is defective. YES: • Check (13).																											
	(13) Emitter of Q13	 Adjust VR2 (chroma)	NO: • Check the vicinity of Q83, Q11, Q13. YES: • Check connector CN17-1, lead wire, Q55, Q56. • Check clamp circuit consisting of IC9 in/out pins 3, 4 and gate pin 5.																											
6. When wipe operation is set to Source (IN) side, luminance level is abnormal.	(14) Emitter of Q8		NO: • Check of DL-1 • Check voltage and waveforms in the vicinity of Q6, Q7, Q8. YES: • Check (15).																											
	(15) Emitter of Q13	Same as (13).	NO: • Check voltage and waveform of Q13. YES: • Check connector CN17 and lead wires. Check Q55, Q56.																											
7. Background (matte) color is not present, or level is abnormal. Mode: Wipe Color: Y ~ B Wipe Operation Knob: Matte * For abnormal hue refer to item 11 qnd 12.	(16) IC28 Pin 5, 20		NO: • Check IC30 Pin 19, 22. YES: • Check (17).																											
	(17) IC31 Pin 8 (G) Pin 4 (R) Pin 2 (B)	 Outputs at each pin of S19 (Color SW) <table border="1"><tr><th></th><th>Pin 8</th><th>Pin 4</th><th>Pin 2</th></tr><tr><td>W</td><td>O</td><td>O</td><td>O</td></tr><tr><td>BK</td><td>-</td><td>-</td><td>-</td></tr><tr><td>YL</td><td>O</td><td>O</td><td>-</td></tr><tr><td>G</td><td>O</td><td>-</td><td>-</td></tr><tr><td>R</td><td>-</td><td>O</td><td>-</td></tr><tr><td>B</td><td>-</td><td>-</td><td>O</td></tr></table> *The above waveform is present at the points marked O.		Pin 8	Pin 4	Pin 2	W	O	O	O	BK	-	-	-	YL	O	O	-	G	O	-	-	R	-	O	-	B	-	-	O
	Pin 8	Pin 4	Pin 2																											
W	O	O	O																											
BK	-	-	-																											
YL	O	O	-																											
G	O	-	-																											
R	-	O	-																											
B	-	-	O																											






Symptom	Check point	Normal voltage and waveforms	Adjusting point and defect																					
	(18) IC28 Pin 1 (B-Y) Pin 24 (R-Y)	<p>Polarity (+)</p> <p>Polarity (-)</p> <p>Outputs at each pin of S19 (Color SW) (Voltage "a")</p> <table border="1"> <thead> <tr> <th></th> <th>Pin 1</th> <th>Pin 24</th> </tr> </thead> <tbody> <tr> <td>W</td> <td>○</td> <td>○</td> </tr> <tr> <td>BK</td> <td>○</td> <td>○</td> </tr> <tr> <td>YL</td> <td>(-) 360 mV</td> <td>(+) 110 mV</td> </tr> <tr> <td>G</td> <td>(-) 250 mV</td> <td>(-) 470 mV</td> </tr> <tr> <td>R</td> <td>(-) 130 mV</td> <td>(+) 600 mV</td> </tr> <tr> <td>B</td> <td>(+) 390 mV</td> <td>(-) 100 mV</td> </tr> </tbody> </table>		Pin 1	Pin 24	W	○	○	BK	○	○	YL	(-) 360 mV	(+) 110 mV	G	(-) 250 mV	(-) 470 mV	R	(-) 130 mV	(+) 600 mV	B	(+) 390 mV	(-) 100 mV	<p>NO: • Check Q80 ~ Q82. • Check Voltage and waveforms in the vicinity of Q15 ~ Q21. • V10 is incorrectly adjusted.</p> <p>YES: • Check (18).</p>
	Pin 1	Pin 24																						
W	○	○																						
BK	○	○																						
YL	(-) 360 mV	(+) 110 mV																						
G	(-) 250 mV	(-) 470 mV																						
R	(-) 130 mV	(+) 600 mV																						
B	(+) 390 mV	(-) 100 mV																						
	(19) C39 (IC41 Pin 1)	<p>Levels at each pin of S19 (Color SW). (Voltage "a")</p> <table border="1"> <thead> <tr> <th></th> <th>a (mV)</th> <th>a (mV)</th> </tr> </thead> <tbody> <tr> <td>W</td> <td>8.5</td> <td>G</td> <td>460</td> </tr> <tr> <td>BK</td> <td>7</td> <td>R</td> <td>480</td> </tr> <tr> <td>YL</td> <td>370</td> <td>B</td> <td>370</td> </tr> </tbody> </table>		a (mV)	a (mV)	W	8.5	G	460	BK	7	R	480	YL	370	B	370	<p>NO: • Check voltages and waveforms at each pin of IC28. • Carrier balance (VR6, VR8) is incorrectly adjusted. • Check voltages and waveforms in the vicinity of Q25. Check item 10~13 in "Adjustment Procedures".</p> <p>YES: • Check (19).</p>						
	a (mV)	a (mV)																						
W	8.5	G	460																					
BK	7	R	480																					
YL	370	B	370																					
	(20) Emitter of Q35	<p>Color: Blue</p>	<p>NO: • Check IC41 pin 13 and gate no. 37 according to "Switching truth table". • Check Q22, Q35 and Q34. • Check IC53 pin 12 and gate no. 40 according to "Switching truth table".</p>																					
8. Chroma level of Effect side is abnormal. (Source side is normal.) Mode: Effect Color: Y ~ B Effect mode: Colorize Wipe operation: Matte	(21) Emitter of Q14		<p>NO: • Check voltage and waveform of Q19, Q81. • Re-check VR3 in (12).</p> <p>YES: • Check (21).</p>																					
	(22) Emitter of Q35		<p>NO: • Check voltage and waveform of Q22, Q35. • Check voltage and waveform of IC41 in/out pins 9 and 8. Check gate no. 36, with the "Switching Truth Table".</p> <p>YES: • Check the clamp circuit with IC42 gate pin 5, input/output pins 3, 4. • Check voltages and waveforms of Q60, Q61. • Check connector CN12-1 and lead wires.</p>																					
9. Luminance level of Effect side is abnormal. (Source signal is normal.) Mode: Effect Color: Y ~ B Wipe operation: Matte	(23) In COLORIZE Emitter of Q35		<p>NO: • With the "Switching Truth Table", check gate 39. • Check the vicinity of Q34.</p> <p>YES: • Check (23).</p>																					
	(24) In DEFOCUS Emitter of Q31		<p>NO: • Check voltages and waveforms in the vicinity of Q18, Q31.</p> <p>YES: • Check (24).</p>																					


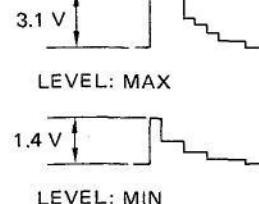
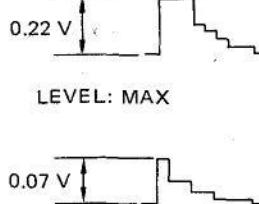
Symptom	Check point	Normal voltage and waveforms	Adjusting point and defect
	(25) Emitter of Q35	 <p>0.31 V * Set the Color to W or BK.</p>	<p>NO: • Check the voltages and waveforms of Q34, IC53 input/output pins 2, 1. • With the "Switching Truth Table", check gate 41 (pin 13).</p> <p>YES: • Check ⑩.</p>
	(26) In PAINT Emitter of Q32	 <p>White 100 % level 0.90 V</p>	<p>NO: • Check voltages and waveforms of all sections of Q26 ~ 29. • Check clamp circuit with IC48 input/output pins 4, 3, and gate pin 5.</p> <p>YES: • Check ⑫.</p>
	(27) Emitter of Q35	 <p>3.1 V LEVEL: MAX 1.4 V LEVEL: MIN</p>	<p>NO: • Readjust VR23. Set IC39 pin 13 to 3.5 V. Incorrectly adjusted → Check ⑬. Check the output of Q32, IC39 pins 6, 5, and 4.</p> <p>YES: • Check ⑭.</p>
	(28) IC39 pin 13 pin 11	<p>Pin 13: DC 3.5 V Pin 11: DC 5.1 V (low) ~ 4.1 V (high)</p>	<p>NO: • Check input/output voltages of 3-pin regulator IC18. • Check voltages and waveforms of all sections of IC36, Q30. LEVEL control knob VR22 is defective.</p>
	(29) TP6	 <p>0.22 V LEVEL: MAX 0.07 V LEVEL: MIN Adjust VR24. * Set the COLOR to W or BK.</p>	<p>NO: • Check voltages and waveforms of all sections of Q33 ~ 35. • Check voltages and waveforms of IC53 in/out pins 9, 8. With the "Switching Truth Table", check gate No. 42 (pin 6).</p> <p>YES: • Check ⑯.</p>
10. Negative/ positive opera- tion is incorrect. Mode: Effect Color: Y ~ B Wipe Operation: Matte (Source signal is normal.)	(30) When NEGATIVE is OFF, Emitter of Q60 COLORIZE ON for Effect.	 <p>White 100 % level 0.31 V Adjust VR16 ~ 19</p>	<p>NO: • Check all voltages and waveforms of IC72, Q36, Q37. • Check the clamp circuit consisting of IC42 in/out pins 3, 4 and gate pin 5. • Check the voltage at IC42 in/out pins 10 and 11. • According to the "Switching Truth Table", check gate No. 45 (pin 12).</p> <p>YES: • Check ⑰.</p>
	(31) Emitter of Q62	 <p>0.99 V OV Set-up voltage Adjust set-up voltage with VR30.</p>	<p>NO: • Check clamp circuit consisting of IC9 in/out pins 8, 9 and gate pin 6. • Check all voltages and waveforms of Q59, 61. Check voltages and waveforms of IC9 in/out pins 10 and 11, and check gate no. 47 (pin 12) according to "Switching Truth Table".</p>

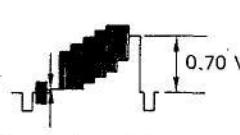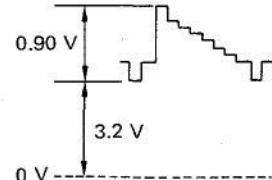Symptom	Check point	Normal voltage and waveforms	Adjusting point and defect
11. Level, phase of background color is incorrectly adjusted.	(32) When NEGATIVE ON, Emitter of Q60	 <p>Set-up voltage OV Adjust VR16 ~ 19.</p>	<p>NO: • Check all voltages and waveforms of IC72, Q36 and 37. • Check clamp circuit consisting of IC42 in/out pins 3, 4 and gate pin 5. • Check voltages of IC42 in/out pins 1, 2, and check gate No. 44 (pin 13) according to "Switching Truth Table". YES: • Check (33).</p>
	(33) Emitter of Q62	 <p>1.13 V 0.99 V</p>	<p>NO: • Same as (31).</p>
12. Colorization operation is abnormal.	(34) Video terminal of REC OUT	<p>YL: 167° G: 241° R: 104° B: 347° Measure with vectorscope.</p>	<p>NO: • Re-adjust the following according to item in "Adjustment Procedures" (on 10~13 page 21): VR5 — Phase of background color VR6, 8 — Carrier balance VR7 — Set-up VR9 — R-Y level VR11 — Level of background color • Check item 7.</p>
13. Painting operation is abnormal Mode: Effect Effect: Paint	(35) IC37 pin 10 pin 4 (μPC 319 C)	 <p>0.90 V 3.2 V 0 V</p>	<p>NO: • Check voltages and waveforms of Q26 ~ 29. • Check clamp circuit consisting of IC42 in/out pins 3, 4 and gate pin 5. YES: • Check that the IC37 pins 9, 5 are varied with the LEVEL and RANGE knobs. (Variable 3.4 V ~ 5.0 V) • Check (36).</p>
	(36) IC37 pin 7 pin 12 (μPC319 C)	 <p>12 V 0.4 V 0 V</p> <p>Variable by controlling LEVEL and RANGE VRs</p>	<p>NO: • Check voltages and waveforms in the vicinity of IC37. YES: • Check gate No. 36 according to "Switching Truth Table".</p>
14. B/W operation is abnormal Mode: Effect Effect: B/W	(37) IC39 pin 7 (MB40576)	 <p>3.6 V 17.73447 MHz</p>	<p>NO: • Check voltages and waveforms in the vicinity of IC38. • IC38, crystal oscillator X-2 is defective. YES: • Check (38).</p>
	(38) IC39 pins 3, 4, 5	 <p>3.7 V 0.2 V 0 V</p> <p>Variable by controlling the LEVEL VR.</p>	<p>NO: • Check voltages and waveforms in the vicinity of IC39. Check (26) and (28). YES: • Check (27).</p>
15. DEFOCUS operation is abnormal Mode: Effect Effect: Defocus	(39) IC41 pin 5	<p>ON: 11.5 V OFF: 0.4 V</p>	<p>NO: • According to the "Switching Truth Table", Check No. 38 gate. YES: • Check IC41 in/out pins 3 and 4.</p>
	(40) IC53 pin 13	<p>ON: 11.5 V OFF: 0.4 V</p>	<p>NO: • According to "Switching Truth Table", check gate No. 41. YES: • Check (24).</p>

Symptom	Check point	Normal voltage and waveforms	Adjusting point and defect
16. Video fade-out is abnormal Fade: Video Mode: Wipe	(41) IC59 pin 7 (μ PC358 C)	DC 1.3 V ~ 10.7 V • "Manual" knob operation • "Auto" in and out operation (IC57 pin 1 is 2.0 V ~ 10.6 V)	NO: • Check IC55 in/out pins 8 and 9 (for Manual), pins 10, 11 (for Auto). • Check voltage of each pin of IC59. • Check connector CN8-5, 6, 7 and (manual knob) lead wires. YES: • Check (42).
	(42) REC OUT Video terminal	Black fade 10 mV or less White fade 10 mV or less 0.86 V Adjust VR34 so that the signal level is minimum.	NO: • Check voltages and waveforms in the vicinity of IC15. • Check output voltage of IC57 pin 1. • Check connector CN29-1 and lead wires. • Adjust black fade level with VR31. • Adjust white fade level with VR32.
17. In Wipe operations, some patterns malfunction Mode: Wipe Manual/Auto: Manual * Final check should be done with monitor TV using Crosshatch pattern, etc. Refer to "Adjustment Procedure". * Final check should be done with monitor TV using Crosshatch pattern, etc. Refer to "Adjustment Procedure".	(43) [■] or [□] pattern is not possible Emitter of Q47	Approx. 6.7 V  Adjust linearity with VR59	NO: • Check horizontal sync signal from connector CN18-3 to Q46 base. YES: • Check (44).
	(44) Emitter of Q51	[■] ON: 1.9 V [□] ON: 1.9 V Adjust level with VR60. Adjust balance between both waves with VR62.	NO: • Check IC5 in/out pins 10, 11 pins 1, 2 and pins 3, 4. • According to the "Switching Truth Table", check gate No. 55 (pin 12), No. 57 (pin 13) and No. 58 (pin 5). • Check voltages and waveforms of Q50.
	(45) [■] or [□] pattern is not possible Emitter of Q40	Approx. 5.5 V  Adjust linearity with VR51.	NO: • Check the vertical sync signal from connector CN18-2 to Q39 base. YES: • Check (46).
	(46) Emitter of Q84	[■] ON: 1.7 V [□] ON: 1.7 V Adjust level with VR50. Adjust balance between both waves with VR55.	NO: • Check IC3 in/out pins 9, 8 and IC4 in/out pins 8, 9, 11 and 10. • According to "Switching Truth Table", check gate No. 50 (pin 6), No. 53 (pin 6) and No. 54 (pin 12). • Check voltages and waveforms of Q44.
	(47) [■]+[□] pattern is not possible IC2 pin 10 (TC4538BP)	12.0 V  Adjust VR63 so that the duty ratio becomes 50 %.	NO: • Check the horizontal sync signal from connector CN18-3 to IC2 pin 12. Check the vicinity of IC2. YES: • Check (48).
	(48) Emitter of Q52	Approx. 3.1 V  Adjust the linearity with VR64	NO: • Check the voltages and waveforms in the vicinity of Q52. YES: • Check (49).
	(49) Emitter of Q51	Approx. 2.0 V  Adjust VR65 so that the duty ratio becomes 5 %.	NO: • Check IC5 in/out pins 8, 9 and 1, 2. • According to "Switching Truth Table", check gate No. 57 (pin 13). • Check voltages and waveforms of Q50, Q51.

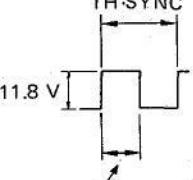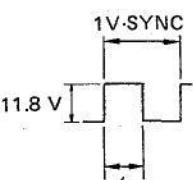Symptom	Check point	Normal voltage and waveforms	Adjusting point and defect
	(50)  pattern is not possible IC2 pin 6	12.0 V V SYNC Adjust VR56 so that the duty ratio becomes 50 %.	NO: • Check the vertical sync signal from connector CN18-2 to IC2 pin 5. • Check the vicinity of IC2. YES: • Check (51).
	(51) Emitter of Q45	Approx. 3.5 V  Adjust linearity with VR57.	NO: • Check voltages and waveforms in the vicinity of Q45. YES: • Check (52).
	(52) Emitter of Q84	2.3 V  Adjust level with VR58.	NO: • Check IC3 in/out pins 1, 2 and IC4 in/out pins 8, 9. According to "Switching Truth Table", check gate No. 51 (pin 13), No. 53 (pin 6). • Check voltages and waveforms of Q44, Q84.
	(53)  pattern is not possible Emitter of Q49	Approx. 4.4 V  H SYNC Adjust linearity with VR61.	NO: • Check (54). • Check voltages and waveforms in the vicinity of Q48, Q49. YES: • Check (54).
	(54) Emitter of Q42	Approx. 1.6 V  Adjust linearity with VR52.	NO: • Check (55). • Check voltages and waveforms in the vicinity of Q41, Q42. YES: • Check (55).
	(55) Emitter of Q84	1.8 V 0.8 V  Adjust balance with VR53. Adjust level with VR54.	NO: • Check IC3 in/out pins 11, 10, and IC4 pins 8, 9. • According to "Switching Truth Table", check gate No. 52 (pin 12), No. 53 (pin 6). • Check voltages and waveforms of Q43, Q44, Q84.
18. All wipe patterns are abnormal Mode: Wipe Manual/Auto: Manual	(56) Select  pattern IC8 pin 12 (μ PC319 C)	1H-SYNC  Variable with Manual knob	NO: • Check the wipe control voltage of connector CN22 pin 2. * DC 2.0 V → 10.9 V • NO: Check (57). • Check voltages and waveforms in the vicinity of IC8. YES: • Check (57).
	(57) IC6 pin 4 (TC4001BP)	Same waveform as above.	NO: • Check voltage from connector CN42-1 or CN19-3 to IC6 pin 5. * L (0.7 V) is O.K. NO: Check H gate according to "Switching Truth Table". YES: • Check "Wipe Gate Logic Diagram".
	(58) Select  pattern IC8 pin 7 (μ PC319 C)	1V-SYNC  Variable with Manual knob	NO: • Check voltage from connector CN42-2 or CN19-2 to IC6 pin 9. * DC 1.2 V → 10.8 V • NO: Check (59). • Check voltages and waveforms in the vicinity of IC8. YES: • Check (59).

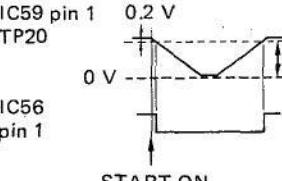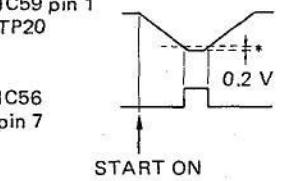Symptom	Check point	Normal voltage and waveforms	Adjusting point and defect
	(59) IC6 pin 10 (TC4001BP)	Same waveform as above.	NO: • Check voltage from connector CN42-2 or CN19-2 to IC6 pin 9. * L (0.7 V) is O.K. NO: Check V gate according to "Switching Truth Table". YES: • Check "Wipe Gate Logic Diagram".
19. Auto Cross Input malfunction. • Auto wipe does not function. Mode: Auto Cross Input Wipe pattern: Select any one	(60) IC70 pin 2 Press START. (TC4013BP)	H level goes low	NO: • Check whether IC69 pins 5, 6, 4 are H or not. • Check whether IC70 pin 3 goes H by switching ON. YES: • Check (61).
	(61) IC59 pin 1 Press START. (μPC358 C)	DC 10.9 V is changed to DC 1.3 V, then DC 10.9 V resumes.	NO: • Check that Q100 base and collector are 11.5 V. • Check that IC58 pin 2 goes high from low. YES: • Check (62).
	(62) IC56 pin 1 Press START. (μPC358 C)	IC59 pin 1 0.2 V TP20 0 V IC56 pin 1  * Adjust VR44 so that the voltage of TP21 is 0.2 V lower than the max. voltage of TP20.	NO: • Check voltages of IC56 pins 1, 2, 3. YES: • Check (63).
	(63) IC56 pin 7 START ON	IC59 pin 1 TP20 0.2 V IC56 pin 7  * Adjust VR43 so that the voltage of TP22 is 0.2 V higher than the max. voltage of TP20.	NO: • Check IC56 pins 5, 6 and 7. YES: • Check (64).
	(64) IC57 pin 1 START ON (TA5458P)	DC 10.9 V is lowered to DC 1.3 V, then DC 10.9 V resumes.	NO: • Check voltage changes of IC55 in/out pins 10, 11. Check that gate pin 12 is H. • Check voltage changes of IC59 pins 5, 6, and 7, and voltage change of IC57 pin 3. • Check that Q112 base is H.
• In the Auto Cross Input mode, inputs 1/2 are not changed.	(65) IC68 pin 3	IC56 pin 7  IC66 pin 10 	NO: • Check voltages and waveforms of IC64 pins 4, 5, and 6, and in the vicinity of IC66. • Check IC68 pins 1, 2, 3 and IC67 pins 11, 12, 13. YES: • Check (66).
	(66) IC70 pin 13	IC68 pin 3  IC70 pin 11  IC70 pin 13 	NO: • Check that IC69 pin 13 is H. (Auto Cross Input: ON) Check voltages in the vicinity of IC70. YES: • Check connector CN25-1, 2 and lead wires. • Check that IC27 gate pins 13, 5 are inverted to H/L respectively.

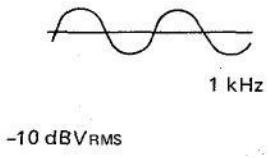
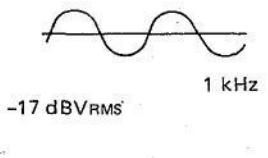
Symptom		Check point	Normal voltage and waveforms	Adjusting point and defect
20. Auto Wipe operation is abnormal Mode: Wipe Manual/Auto: Auto	(67)	* Check items on ⑥0 to ⑥3. * Check that IC69 pins 9, 12 are low, and output pins 10, 11 are always low.		
21. Speed control is abnormal	(68)	Impedance between IC58 pin 2 and VR42 center pin.	Approx. 500 kohms to 0 kohm (Power OFF)	NO: • VR42 is defective. • Check the peripheral pattern.
22. Switch operation is abnormal	(69)		* Check each switch according to "Switching True Table" and check voltages of each part (connector pin) related with the points which are incorrect. * Check by "Switch function and operation mode table".	
23. No audio output at any output terminal.	(70)	Emitter of Q70, 1070, Q71, 1071, Q72, 1072. (Channel to which signal is input)	Input: -10.0 dBVRMS  -9.8 dBVRMS	NO: • Input 1: Check connector CN35 • Input 2: Check connector CN35 • AUX IN: Check connector CN3 • Check voltages and waveforms of all transistor.
24. No audio output at EFFECT MON. and REC OUT terminals (audio out terminals) (With BYPASS both ON and OFF)	(71)	IC25 pin 1 (Rch) IC24 pin 7 (Lch)	 -10 dBVRMS	NO: • Check voltages and waveforms in the vicinity of IC25, 24. YES: • Check connectors CN32 and 30.
25. No audio output at audio terminals of Effect Monitor and Rec Out terminals (When Bypass is OFF)	(72)	IC26 pin 5 (R)	 -17 dBVRMS	NO: • Check voltages and waveforms in the vicinity of IC26. • Check connector CN9-2, and balance VR. • Check that IC26 pin 1 (fade control pin) is approx. 1.0 V. YES: • Check voltages and waveforms of IC21 in/out pins 8, 9 (Rch) and IC23 in/out pins 11, 10 (Lch). • Check gate No. 12 (pin 6), No. 10 (pin 12) according to "Switching Truth Table".
26. Audio fader operation is abnormal Fade: Audio Manual/Auto: Manual	(73)	IC26 pin 5 (R)	Max: -17 dBVRMS Min: -80 dBVRMS or below	NO: • Check that IC26 pin 1 is 1.0 V when output is maximum, and is 4.8 V when output is minimum. • YES: Check voltage in the vicinity of IC26. • NO: Check connector CN21-1. → Check (74).
	(74)	IC57 pin 7	DC 2.0 V (max) to 9.9 V (min) Variable with manual VR	NO: • Check voltages of IC57 pins 5, 6 and 7. (Voltage at IC57 pin 5 is approx. 5.5 V when Fader ON, and 0.7 V when Fader off.)

7. Adjustment Procedures

1. Adjustments related with the timing pulse

Input: Full-field color bar signal (white: 100 %), 1.0 Vp-p

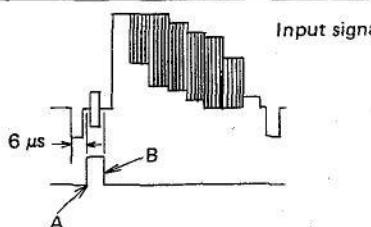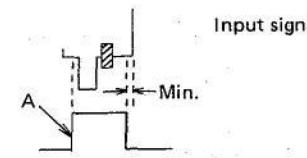Measurement: 10 Mohms probe, using dual-trace oscilloscope. Voltage measurement using digital tester having impedance of 1 Mohms or more.

Test point	Adjustment point	Name	Condition	Check point
1 IC49 pin 6	VR26 VR28	BURST WIDTH		 <p>A: Set VR26 so that it comes in the middle between the burst and sync signals. B: Set VR28 so that it comes in the middle between the burst and video signals.</p>
2 IC46 pin 10	VR29	H.BL		 <p>Set A so that in the middle of the front porch.</p>
3 IC45 pin 7	VR27	V.BL		 <p>Set A so that it comes before the video signal.</p>
4 IC56 pin 2 IC59 pin 1	VR44	TIM.U	Bypass: OFF Mode: EFFECT Wipe: Circle Manual/Auto: AUTO IN/OUT: IN	<p>Set the potential of IC56 pin 2 0.2 V lower than that of IC59 pin 1.</p> <p>Ex: IC59 pin 1 ... 10.8 V IC56 pin 2 ... 10.6 V</p>
5 IC56 pin 5	VR43	TIM.L	IN/OUT: OUT	<p>Set the potential of IC pin 2 0.2 V higher than that of IC59 pin 1.</p> <p>Ex: IC59 pin 1 ... 1.2 V IC56 pin 5 ... 1.4 V</p>
6 IC40 pin 15	VR-2	H.F freerun	Set so no signal is input.	Set to 15.620 ± 25 Hz
7 IC280 pin 5, C113	C98	CHROMA freerunning	Set so no signal is input.	Set to 4.432607 ± 25 Hz. Set to 4.43273 ± 25 Hz.



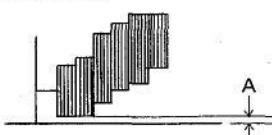
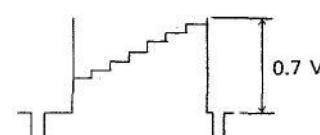
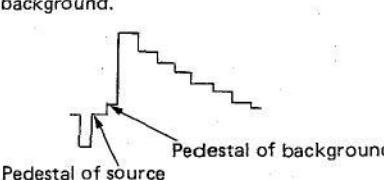

2. Video signal level, wipe pattern adjustments



Input: Full-field color bar signal (white: 100 %), 1.0 Vp-p







Output: 75-ohm terminal resister (Video terminal of Effect monitor/Rec Out terminals)

Others: 10 mohms probe


Switch Operation: Bypass: OFF, Manual: ON, Manual control: Source when no designation

Test point		Adjustment point	Name	Condition	Check point
1	Output pin	VR 35	Y level	Bypass ON	Set output level to 1 Vp-p. (Input: 1 Vp-p)
2	Output pin	VR 33	Y level	Bypass OFF	Set output level to 1 Vp-p. (Input: 1 Vp-p)
3	Output pin	VR 34	Fader	Chroma level: Set appropriately Manual/Auto: AUTO Fader: ON	
		VR 32	White	Color: White	 Standard: 10 mV or less (Chroma signal)
		VR 31	Black	Color: Black	
		VR 41	Black	Manual/Auto: MANUAL	Set to MIN 
4	Emitter of Q60	VR 19	POSI		Turn clockwise to MAX.
		VR 18	NEGA		Turn counter-clockwise from MAX position and adjust so that SYNC becomes flat.
		VR 16	Offset	Adjust so that A becomes equal.	
		VR 17	Level	Adjust so that B-W level becomes 0.70 V.	
5	Output pin	VR 30	Offset	Wipe pattern: Circle Effect: COLORIZE Color: Blue Range: MIN Manual: MIN	Match pedestal sections of source and background. 
6	Output pin	VR 17	Y level (Colorize, B/W)		Set Y level of background. 


Test point		Adjustment point	Name	Condition	Check point
7	Output pin	VR 15	Y level (Defocus)	Effect: DEFOCUS, COLORIZE	
8	Emitter of Q30	VR 23	Paint		
9	Output pin	VR 24	Y level	Level: Fully clockwise Paint	Set to 1 Vp-p 
10	Output pin	VR 10	Y level (Back-ground)	Mode: WIPE Color: White	0.56 V 
11	C9 (Hot side)	VR-6 VR-8	Carrier balance Carrier balance	Color: Black	Set to MIN. Balanced point is different for black and white.
12	IC28 pin 14	VR-7		Color: Blue	Set to MAX.
13	Output pin Output pin Output pin	VR-5 VR-9 VR-11	Phase R-Y level Level		
14	Output pin	VR-3	C level (Source)	Mode: EFFECT Wipe pattern: (Upper) Color: Blue Effect: COLORIZE Level: MIN	Set to markings on vectorscope.
15	Output pin	VR 13 VR 14	C level (Effect) Phase (Effect)		
16	Emitter of Q47 Emitter of Q40 Screen Screen Screen Emitter of Q51 Emitter of Q51 Emitter of Q84	VR 59 VR 51 VR 61 VR 52 VR 54 VR 53 VR 67 VR 66 VR 65 VR 64 VR 57	H ST LIN V ST LIN H. PAL V. PAL PAL.LEV PAL.BAL H.CENTER V.CENTER HTA.LEV HTA.LIN VTAL IN	Mode: WIPE Wipe pattern: Circle Fully counter-clockwise Fully counter-clockwise Fully clockwise Set the center of the circle to the center of the screen so that the circle is accurately circular. (H direction) Set the center of the circle to around the center of the screen. (V direction) Wipe pattern: H . . . 2 directions V . . . 2 directions • Set to Vp-p. • Make it linear. 2.5V	Make it linear.  Make it linear.  Make it linear. Fully counter-clockwise Fully counter-clockwise Fully clockwise Set the center of the circle to the center of the screen so that the circle is accurately circular. (H direction) Set the center of the circle to around the center of the screen. (V direction) Wipe pattern: H . . . 2 directions V . . . 2 directions • Set to Vp-p. • Make it linear. 2.5V

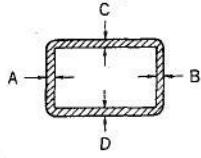Test point	Adjustment point	Name	Condition	Check point
Screen	VR 56 VR 63 VR 64 VR 57	VTA HALF HTA HALF HTALN V TAIN		Set to the around center of the screen.   (Adjust so that A and C comes to the first line from the edge.)
Screen	VR 60	HST LEV		
	VR 62	H BAL		Set A to the first line manually, and adjust VR 60 so that B comes to the middle between 2nd and 3rd lines. 
	VR 50	VST.LEV		Set A to the first line manually, and adjust VR 62 so that B comes to the middle between 2nd and 3rd lines. Standard: 2.5 ± 0.5 
	VR 55	V.BAL		Set A to the first line manually, and adjust VR 50 so that B comes to the middle between 2nd and 3rd lines. Standard: 1.5 ± 0.5 
				Set A to the first line manually, and adjust VR 55 so that B comes to the middle between 1st and 2nd lines. Standard: 1.5 ± 0.5

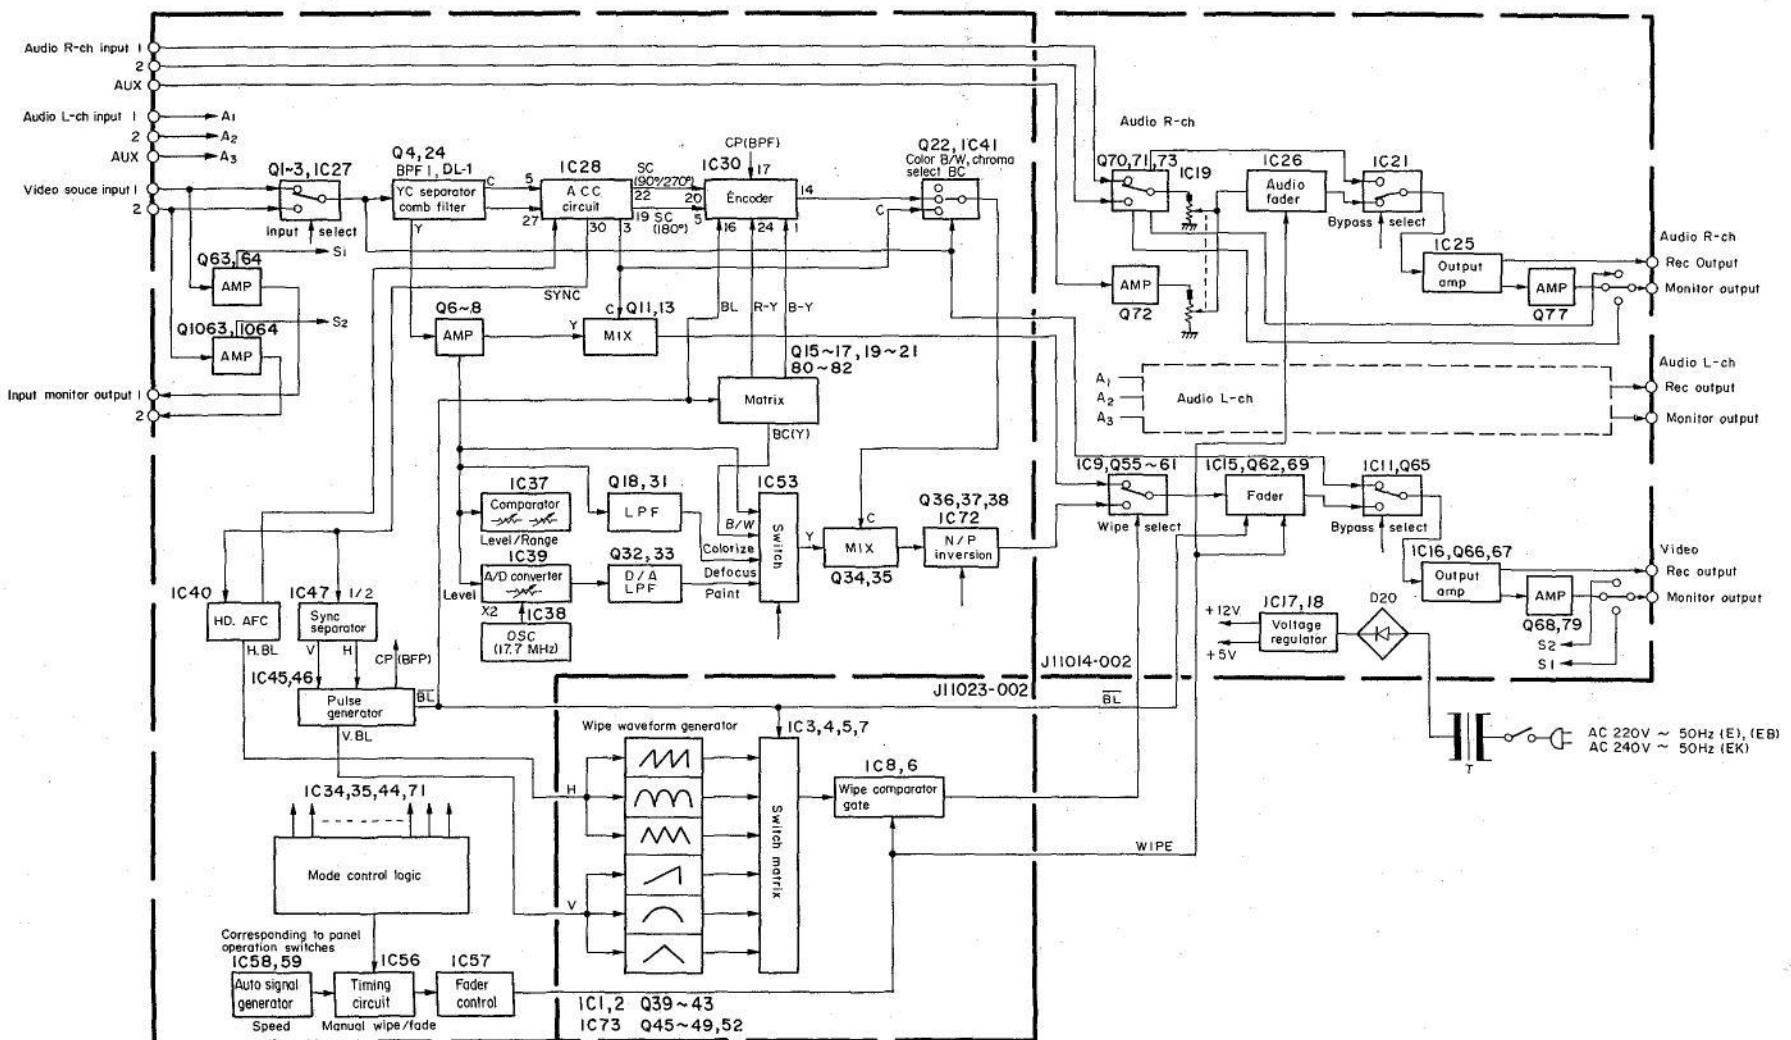8. Block Diagram



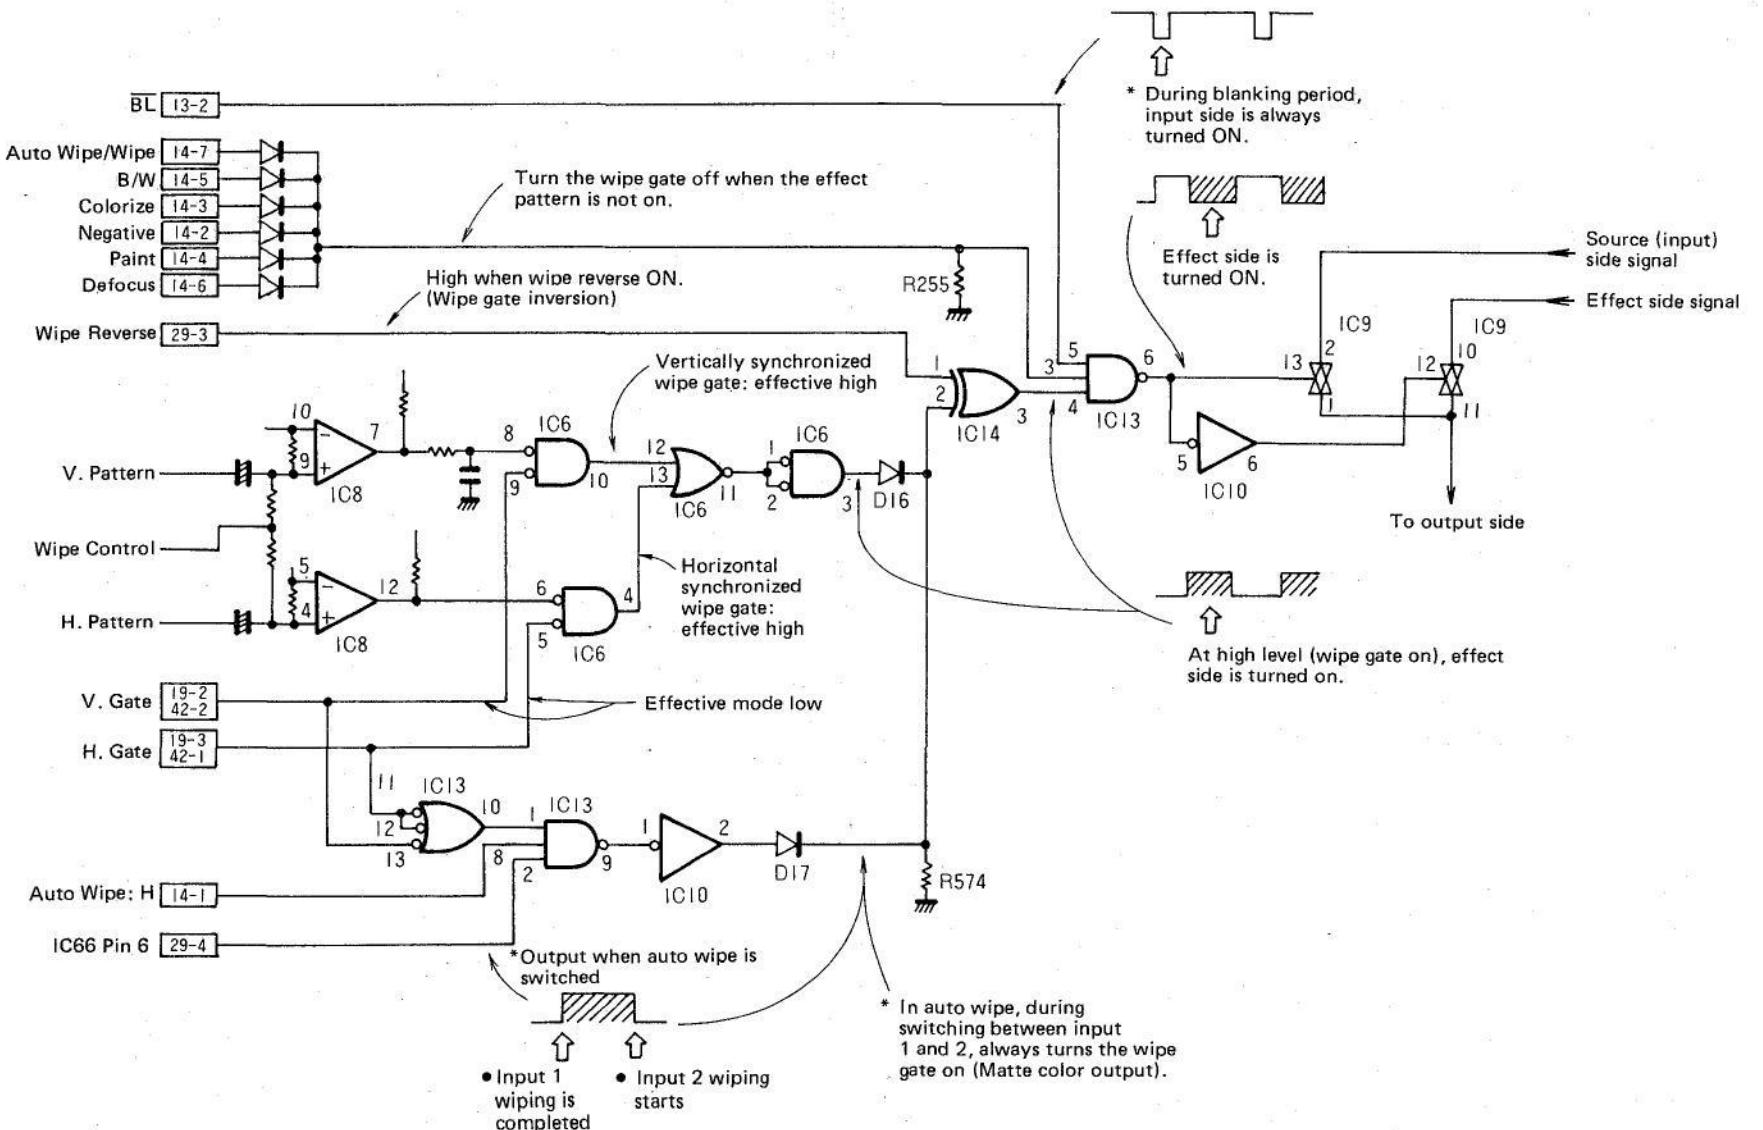9. Wipe Gate Logic Diagram



10. Switching Truth Table

1. Input/Output Switching

Gate No.		Input side		Output side				
		Source		Rec Out		Monitor Out		
		1	2			Input 1	Effect Out	Input 2
Video		1	2	7	8	14	13	15
Audio	L	3	4	9	10	18	16	20
	R	5	6	11	12	19	17	21
Bypass	ON	—	—	H	L	—	—	—
	OFF	—	—	L	H	—	—	—
Input Select	1	H	L	—	—	—	—	—
	2	L	H	—	—	—	—	—
Monitor Select	Input 1	—	—	—	—	H	L	L
	Effect Out	—	—	—	—	L	H	L
	Input 2	—	—	—	—	L	L	H

Notes:

1. Dashes ("—") in each column show that the gate is not related to the function.
2. In the "ON condition table of each gate "below, "X" in mode columns shows the gate that the operation is turned OFF in that mode.

2. ON Condition Table of Each Gate


Gate		Mode			Condition to turn ON		
		Auto Cross Input	Wipe	Effect			
Wipe	Manual	30	x	○	○	Goes high when Manual is ON	
	Auto	31	○	○	○	Goes high when Auto is ON	
Background (matte) Color	Yellow	33,34	—	—	—	Goes high when YL is ON	
	Green	33	—	—	—	Goes high when GR is ON	
	Red	34	—	—	—	Goes high when RD is ON	
	Blue	35	—	—	—	Goes high when BL is ON	
	White	33,34, 35	—	—	—	Goes high when WT is ON	
Color Select	Chroma	36	—	—	—	Goes high when No. 38 is low	* No. 36 and No. 37 voltages are reverse (H/L) to each other.
	Background (Matte) color	37	—	—	—	" " * In Colorize mode, No. 37 gate goes high when the comparator IC37's output is high.	
	B/W	38	—	—	—	Goes high when White or Black is selected for Color, or when B/W is selected for Effect. At this time, No. 36 and No. 37 gates go low.	
Effect Select	B/W	39	x	x	○	Goes high when COLORIZE is ON	
	Background (Matte) color	40	○	○	x	Goes high always in the modes on the left	
	Defocus	41	—	—	—	Goes high when DEFOCUS is ON	
	Paint	42	—	—	—	Goes high when PAINT is ON	
Wipe Negative	Negative	44	—	—	—	Goes high when NEGATIVE is ON	
	Positive	45	—	—	—	Goes high when NEGATIVE is OFF	
Wipe Select	Source (Input)	46	—	—	—	Refer to the "wipe gate logic diagram".	
	Effect	47	—	—	—		
Fader	Black	48	—	—	—	Goes high when Black is selected for Color	
	White	49	—	—	—	Goes high when Color other than white is selected	
Wipe Pattern	V.ST	50	—	—	—	Goes high when wipe pattern <input checked="" type="checkbox"/> or <input checked="" type="checkbox"/> is ON.	
	V.TA	51	—	—	—	Goes low when No. 51 or No. 52 is high.	
	PAL	52	—	—	—	Goes high when <input checked="" type="checkbox"/> is ON. Goes low when No. 50 or No. 51 is high.	
	V POL	53	—	—	—	Goes high when No. 54 is low.	
	V POL	54	—	—	—	Goes high when <input checked="" type="checkbox"/> is ON and <input checked="" type="checkbox"/> is OFF.	
	H. ST	55	—	—	—	Goes high when <input checked="" type="checkbox"/> or <input checked="" type="checkbox"/> is ON. Goes low when No. 56 is high.	
	H.TA	56	—	—	—	Goes high when <input checked="" type="checkbox"/> and <input checked="" type="checkbox"/> are ON simultaneously.	
	H POL	57	—	—	—	Goes high when No. 58 is low, and goes low when No. 58 is high.	
	H POL	58	—	—	—	Goes high when <input checked="" type="checkbox"/> is ON and <input checked="" type="checkbox"/> is OFF.	

11. Switch Function and Operation Mode Table


Operating Condition	Mode switch, etc.	ON Operation	OFF Operation	Remarks
(1) Power ON (Initialize) • Input select 1, 2 • Manual/Auto • " • IN/OUT • " • Wipe pattern • Effect pattern • Bypass • Start • Wipe Reverse • Audio/Video Fader	{ • Auto Cross Input • Wipe Effect { • Auto Cross Input • Wipe Effect	— Auto Manual IN — — — ON — — — — — —	1 — — — Both IN/OUT OFF All OFF All OFF OFF OFF Both OFF	
(2) Mode Select • Set to Auto Cross Input " " • Set to WIPE " " • Set to EFFECT	— — — — — — —	Auto IN — Auto IN — Manual	Set Manual OFF Set OUT OFF Set Wipe Reverse to OFF Set Manual to OFF Set OUT to OFF Set Effect pattern to OFF Set AUTO to OFF	Does not function in Manual Wipe Reverse does not function IN/OUT indicators go off. Pattern is not cancelled.
(3) Input select • Press 1 • Press 2	— —	1 2	Set 2 to OFF Set 1 to OFF	When 1 is ON, it is not changed. When 2 is ON, it is not changed.
(4) Manual/Auto select • Press • " • "	{ Auto Cross Input Wipe Effect	(Auto) Reversed Reversed		When Auto is ON, it is not changed. When Manual is ON, IN/OUT indicators are OFF.
(5) Wipe Pattern select (After any pattern is selected) • Press □~■ • Press ■	(Mode change) —	Continued Reversed "	Set □ to OFF. Set □~■ to OFF.	It is not cancelled by switching.
(6) Effect pattern select • Press B/W • Press Colorize • Press other patterns • Every function	Effect " " Auto Cross Input with Wipe	Reversed " " —	Set Color OFF Set B/W to OFF All OFF	Does not function.

Operating Condition	Mode switch, etc.	ON Operation	OFF Operation	Remarks
(7) Start switch • Press • " • " • Press (Start ON only)	— Auto Cross Input Wipe/Effect —	Start indicator lights OUT → IN IN/OUT reversed —	—	Only Auto ON functions. During initialization, IN lights. Not changed.
(8) Wipe Reverse • Press • "	Auto Cross Input Wipe/Effect	— Reversed	—	Does not function. (OFF)
(9) Bypass • Press	—	Reversed	—	
(10) Audio/Video fader • Press	—	Reversed	—	

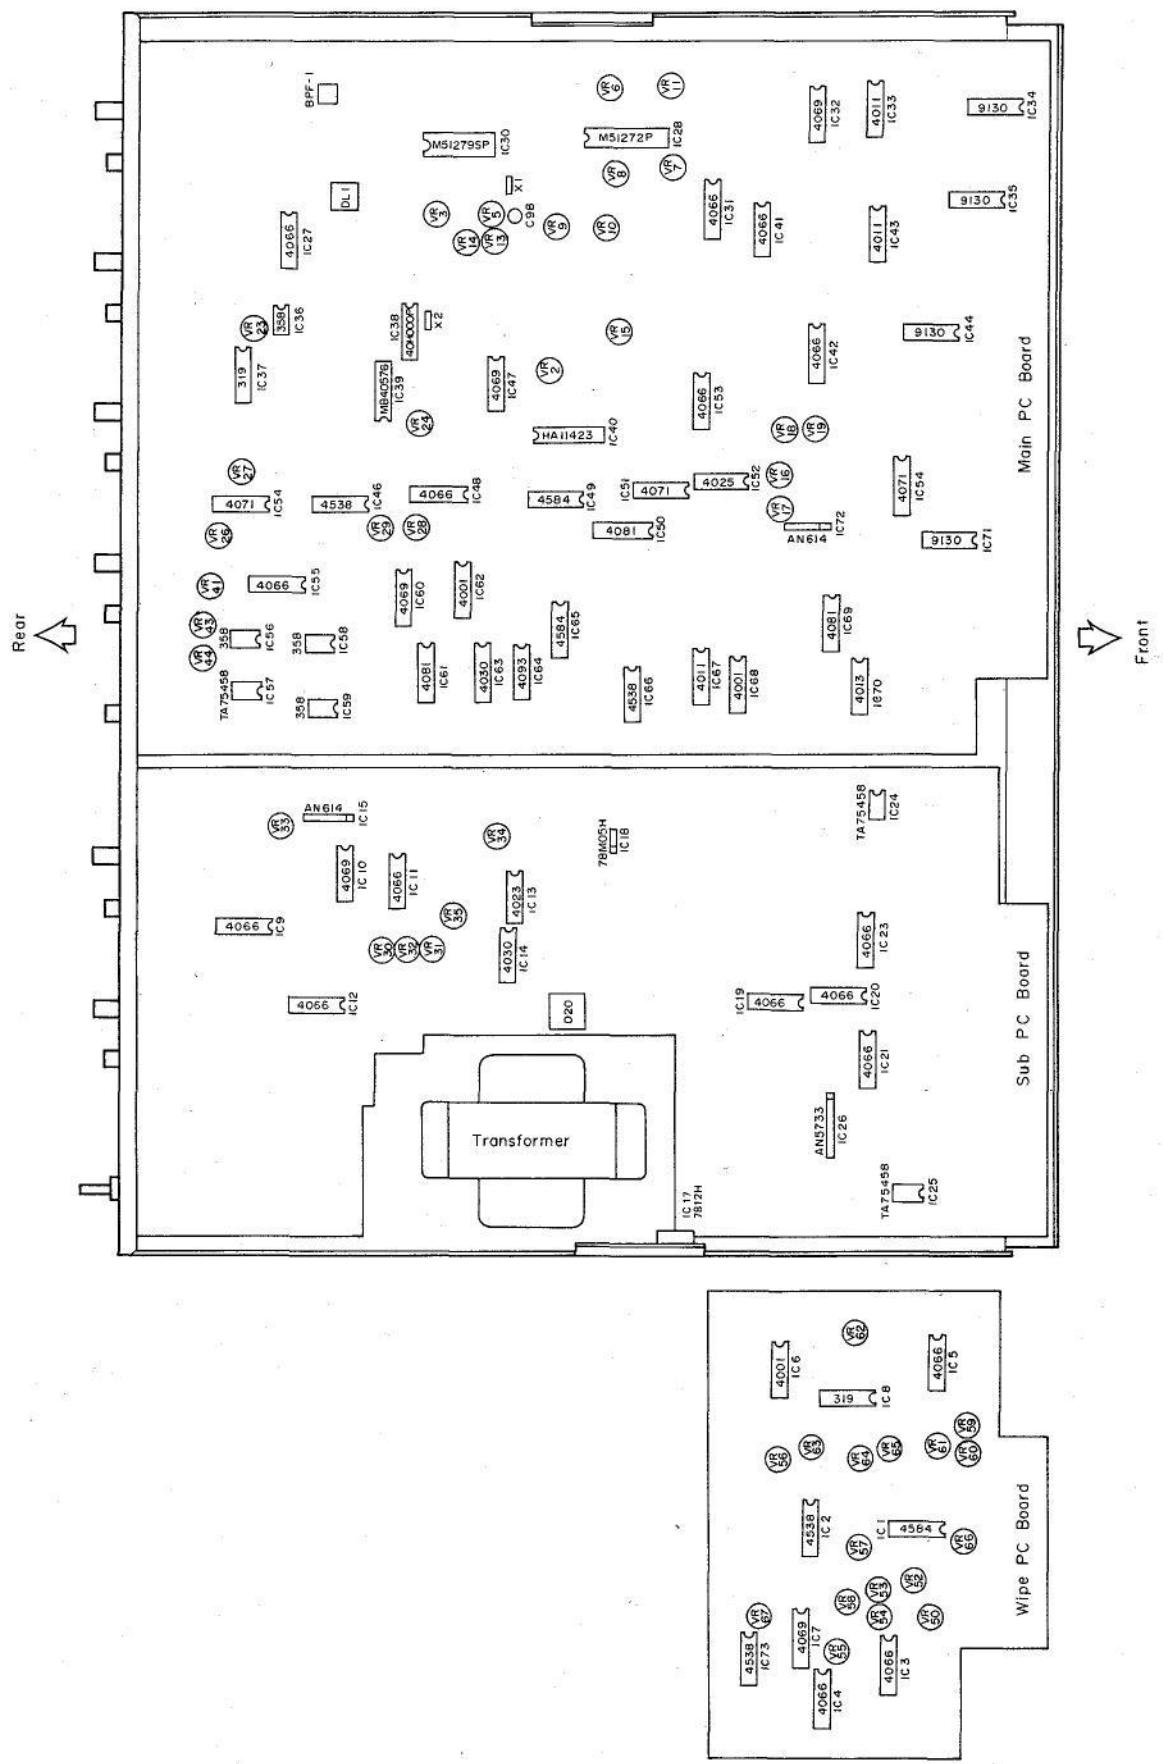12. ICs and Adjusting Points Locations



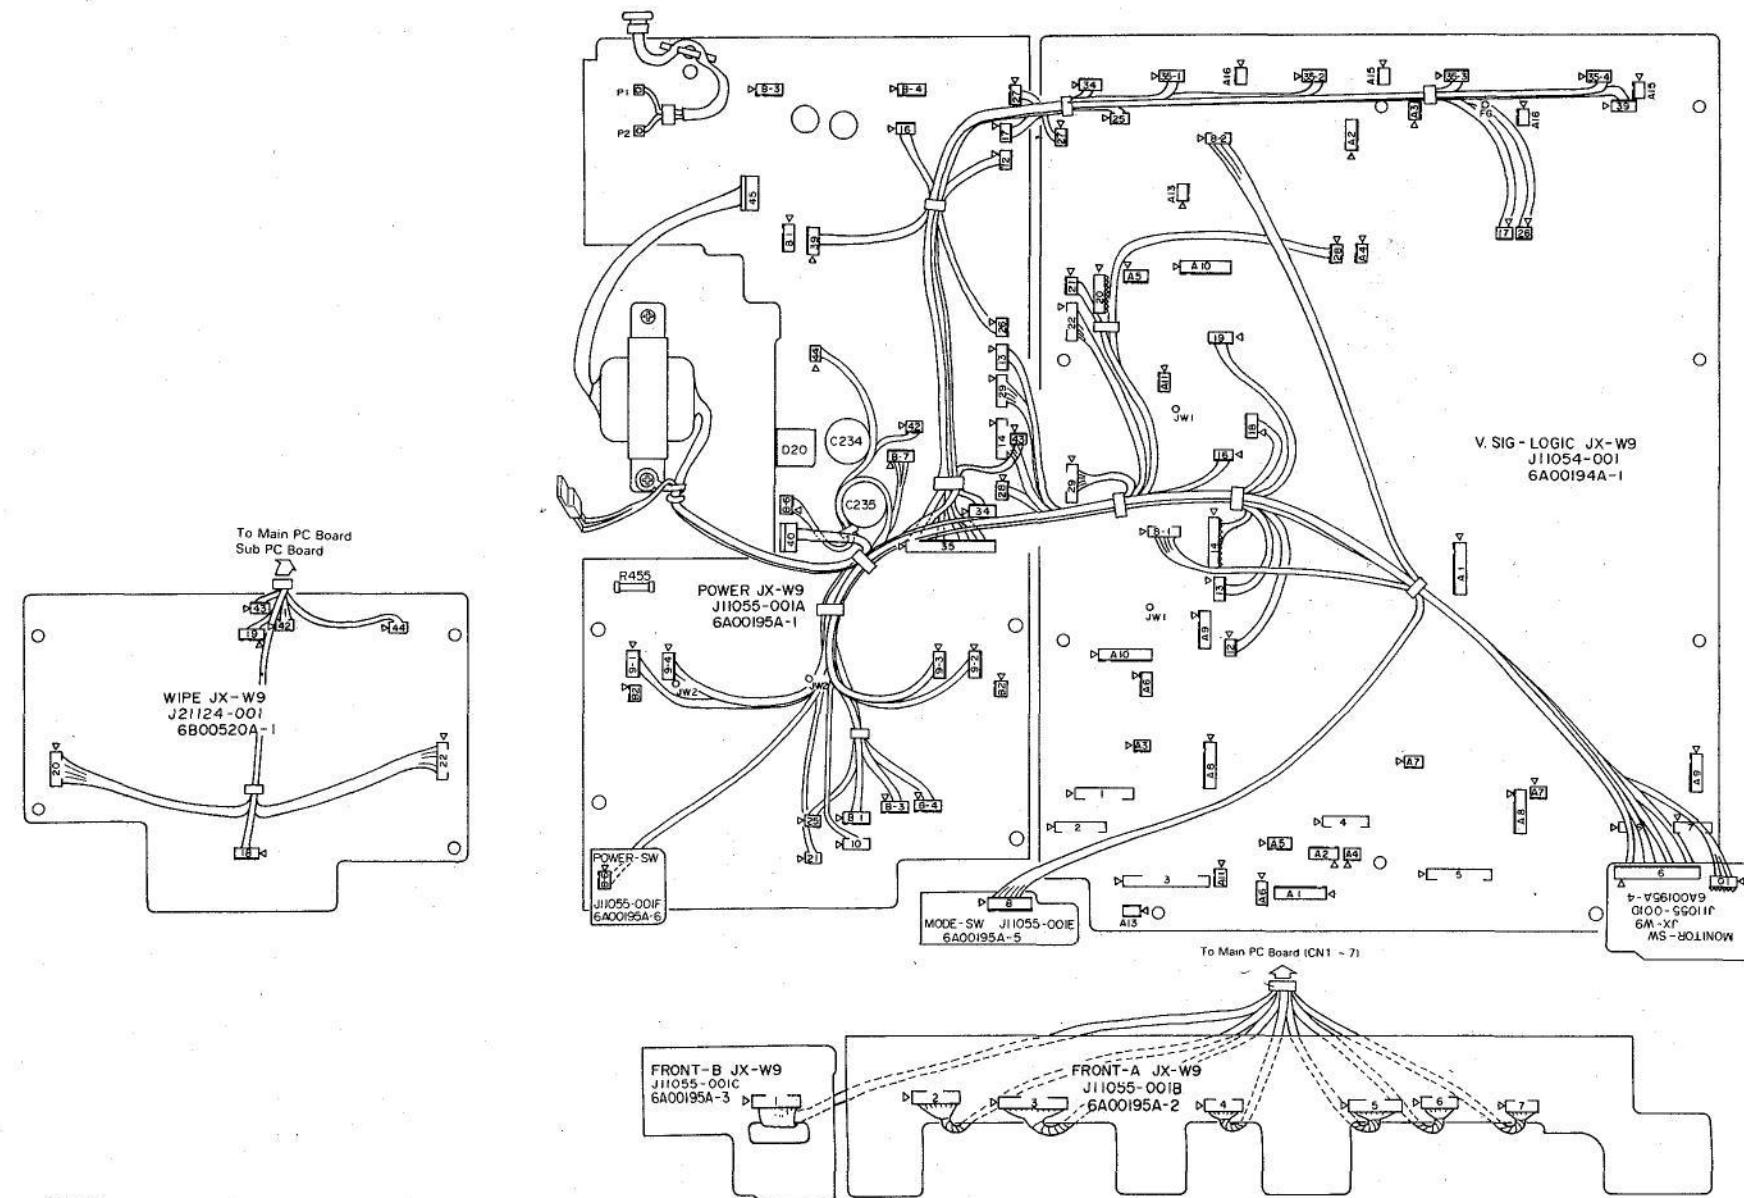13. Wiring Diagram




Notes:

- Numbers in the diagram show the connector numbers.
- Parts having mark A or B are not connectors, so they cannot be removed.


15. Electric Parts List

Safety Mark	Item No.	Symbol Number	Part Number	Part Name	Q'ty	Remarks
		ICs IC26	AN5733	IC	1	Matsushita
		IC16 IC15, 72	AN608 AN614	IC	1 2	Matsushita Matsushita
		IC40 IC28 IC30 IC39 IC24, 25, 57	HA11423 M51272P M51279SP MB40576 TA75458P	IC	1 1 1 1 3	Hitachi Mitsubishi Mitsubishi Fujitsu Toshiba
		IC6, 62, 68 IC33, 43, 67 IC70 IC13 IC52	TC4001BP TC4011BP TC4013BP TC4023BP TC4025BP	IC	3 3 1 1 1	Toshiba Toshiba Toshiba (or NEC μPD4013BC) Toshiba (or NEC μPD4023BC) Toshiba
		IC14, 63 IC7, 10, 22, 32, 47, 60 IC50, 61, 69 IC64	TC4030BP TC4069UBP TC4081BP TC4093BP	IC	2 6 3 1	Toshiba Toshiba Toshiba Toshiba
		IC38 IC2, 45, 46, 66, 73 IC1, 49, 65 IC34, 35, 44, 71 IC8, 37	TC40H000P TC4538BP TC4584BP TC9130P μPC319C	IC	1 5 3 4 2	Toshiba Toshiba Toshiba Toshiba NEC
△ △	1	IC36, 56, 58, 59 IC17 IC18 IC3~5, 9, 11, 12, 19~21, 23, 27, 31, 41, 42, 48, 53, 55, IC51, 54	μPC358C μPC7812H μPC78M05H μPD4066BC μPD4071BC	IC	4 1 1 17 2	NEC NEC NEC NEC NEC
		Transistors Q5, 7, 19, 27, 30, 32, 33, 40, 43, 47, 57, 64, 75, 79, 1064, 1075	2SA1115EF	Transistor	16	Mitsubishi
		Q1~4, 6, 8~18, 20~22, 24~26, 28, 29, 31, 34~ 39, 41, 44~46, 48~52, 55, 56, 58~63, 65~74, 76~78, 80~84, 1063, 1070~1074, 1076~1078	2SC2603EF	Transistor	76	Mitsubishi
		Q100, 102, 109, 112 Q101, 103~108, 110	DTA124ES DTC124ES	Digital Transistor Digital Transistor	4 8	Rohm Rohm
△		Diodes D20 D1~3, 6, 10~17, 150~152 154~168, 171~185, 203, 204	3B4B41LC1 1SS119-04TJ	Diodes Diodes	1 47	Toshiba Hitachi
		D201, 202 D100, 103, 105~115, 117, 119~128 D101, 116, 118, 129, 190	RD9.1ES B1 SLR-54MG SLR-54VR	Zener Diodes LED LED	2 24 5	NEC Rohm Rohm
		VRs VR22 VR20, 21, 40 VR37 VR42	J42757-001 J42756-001 J42758-001 J42760-001	VR VR VR VR	1 3 1 1	500Ω 5kΩ 10kΩ 500kΩ
		VR55, 62 VR14, 41, 52 VR10, 16, 17, 23, 33, 34, 64 VR2, 8, 9, 13, 24, 30~32, 35, 50, 51, 54, 57~61, 65	J43409-501 J43409-102 J43409-202 J43409-502	Fixed Resistor Fixed Resistor Fixed Resistor Fixed Resistor	2 3 7 18	500Ω 1kΩ 2kΩ 5kΩ
		VR6, 7, 11, 28, 29, 53, 63 VR15, 18, 19, 43, 44, 66 VR3, 5, 26, 27, 67 VR56	J43409-103 J43409-203 J43409-503 J43409-104	Fixed Resistor Fixed Resistor Fixed Resistor Fixed Resistor	7 6 5 1	10kΩ 20kΩ 50kΩ 100kΩ
△	2	Switches S22 S1~18 S19 S20, 21	J42935-001 J42766-001 J42767-001 J42768-001	Push Switch Tact Switch Rotary Switch Rotary Switch	1 18 1 2	

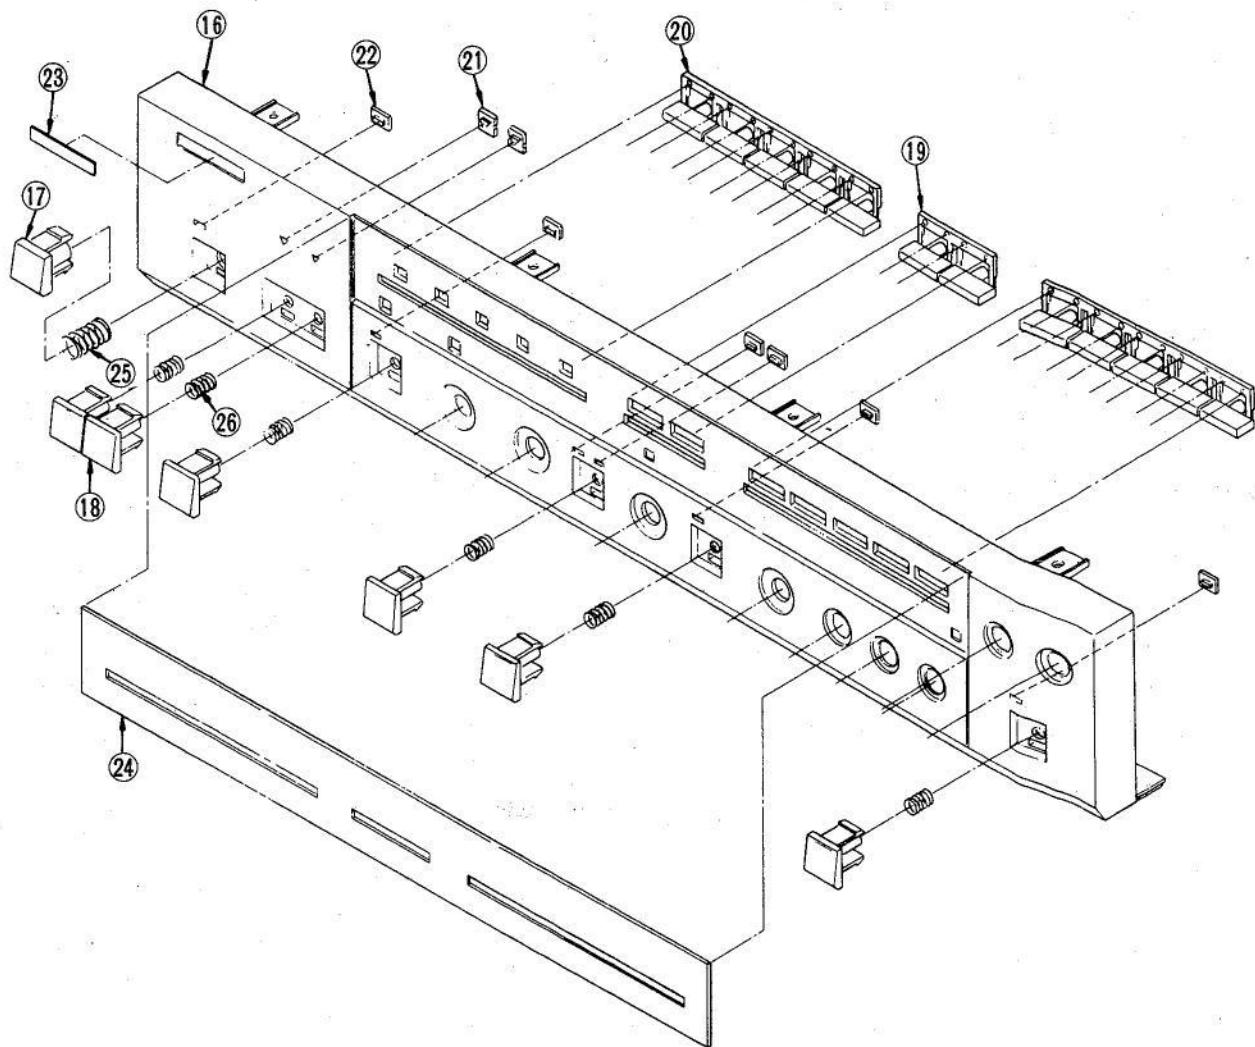Front Panel Ass'y Exploded View

(No. 70053)

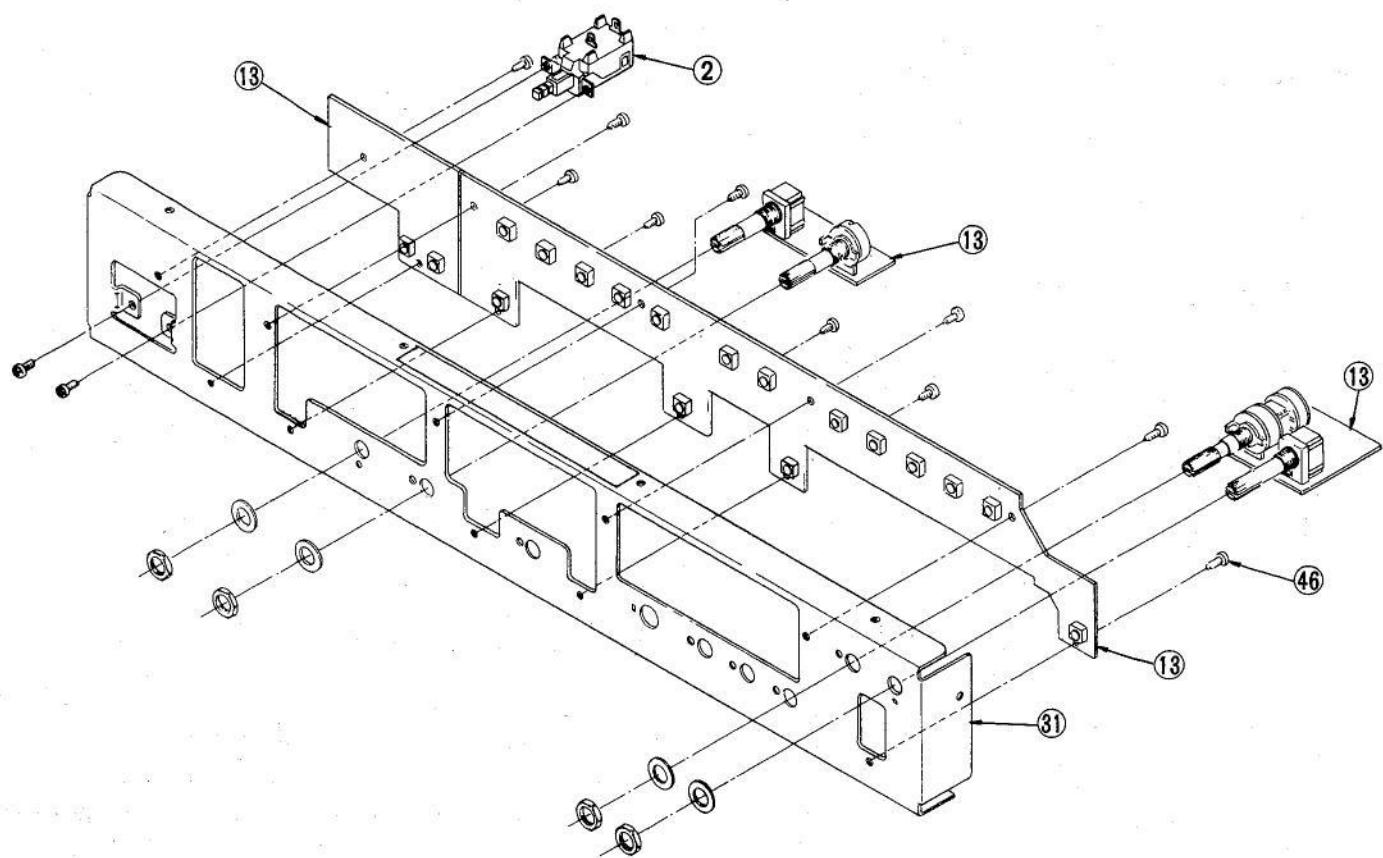Sub Frame Ass'y Exploded View



Safety Mark	Item No.	Symbol Number	Part Number	Part Name	Q'ty	Remarks
▲ ▲	3 3	Transformers PT1 PT1 DL-1 BPF1	J43394-001 J43399-001 J43410-001 J43411-001	Power Transformer Power Transformer Delay Line BPF	1 1 1 1	for (E), (EB) models for (EK) models With Trap
		Coils L3, 4, 9 L11~13 L1, 2, 6, 8, 10, 30~32	J42574-330 J42574-470 J42574-101	Inductor Inductor Inductor	3 3 8	33μH 47μH 100μH
		Capacitors C240, 245, 246 C108, 117, 182, 200~205, 207~210, 214, 216~218, 222~224, 226, 227, 241	QET41CM-475 QET41CM-106	Electrolytic Capacitor Electrolytic Capacitor	3 51	4.7μF/16V 10μF/16V
		~243, 261, 262, 264, 265, 314, 650, 1200~1205, 1207~1210, 1214, 1216~ 1218, 1222~1224, 1226, 1227, 1314				
		C150 C138, 220, 1220 C1~6, 8, 12, 26, 29, 30, 45, 46, 55, 62, 66~68, 71, 72, 76, 78, 81, 82, 85, 86, 88,	QEN41CM-106 QET41CM-226 QET41CM-476	Electrolytic Capacitor Electrolytic Capacitor Electrolytic Capacitor	1 3 54	10μF/16V (Non-polarity) 22μF/16V 47μF/16V
		104, 121, 124, 125, 128, 130, 132, 133, 144, 206, 215, 225, 230, 231, 247, 253, 266, 305~310, 1144, 1206, 1215, 1225				
		C40, 61, 63, 73, 77, 80, 101, 116, 129, 131, 137, 139, 213, 221, 255, 267, 302, 311, 1221 C219, 318, 1219	QET41CM-107 QET41CM-227	Electrolytic Capacitor Electrolytic Capacitor	19 3	100μF/16V 220μF/16V
		C140, 256 C141, 143, 145, 232, 1145 C234, 235 C254, 263 C13	QET41CM-477 QET41CM-108 QET41VM-228 QET41VM-475 QET41HM-474	Electrolytic Capacitor Electrolytic Capacitor Electrolytic Capacitor Electrolytic Capacitor Electrolytic Capacitor	2 5 2 2 1	470μF/16V 100μF/16V 220μF/25V 4.7μF/35V (Non-polarity) 0.47μF/50V
		C14, 22, 27, 74, 83, 84, 107, 153, 183, 211, 312 C19, 21, 79, 184, 185 C89, 91 C90	QET41HM-105 QCT26CH-100 QCT26CH-200 QCT26CH-220	Electrolytic Capacitor Ceramic Capacitor Ceramic Capacitor Ceramic Capacitor	11 5 2 1	1μF/50V CH10pF CH20pF CH22pF
		C123, 70, 126 C372 C65, 93, 96, 111, 271, 273, 275 C95	QCT26CH-270 QCT26CH-560 QCT26CH-101 QCT26CH-151	Ceramic Capacitor Ceramic Capacitor Ceramic Capacitor Ceramic Capacitor	3 1 7 1	CH27pF CH56pF CH100pF CH150pF
		C301, 303 C20 C38 C37 C9	QCT26CH-221 QCT26CH-821 QCS21HJ-080 QCS21HJ-180 QCS21HJ-270	Ceramic Capacitor Ceramic Capacitor Ceramic Capacitor Ceramic Capacitor Ceramic Capacitor	2 1 1 1 1	CH220pF CH820pF 8pF 18pF 27pF
		C360 C109 C56 C320 C32, 134, 152, 154, 156~	QCS21HJ-330 QCS21HJ-680 QCY41HJ-331 QCY41HJ-471 QCY41HJ-102	Ceramic Capacitor Ceramic Capacitor Ceramic Capacitor Ceramic Capacitor Ceramic Capacitor	1 1 1 1 29	33pF 68pF 330pF 470pF 0.001μF
		175, 179~181, 187, 188 C272 C7, 11, 25, 31, 35, 36, 39, 41, 44, 48, 49, 54, 57~59, 87, 113, 176, 317, 361, 356, 370, 371	QCY41HJ-472 QCF41HJ-103	Ceramic Capacitor Ceramic Capacitor	1 23	0.0047μF 0.01μF
		C151, 189~191, 319 C33, 51, 64, 69, 75, 122, 127, 177, 178 C274 C60 C269, 270	QCF41HJ-473 QCC21EM-104 QFV81HJ-223 QFV81HJ-273 QFV81HJ-333	Ceramic Capacitor Ceramic Capacitor SMF Capacitor SMF Capacitor SMF Capacitor	5 9 1 1 2	0.047μF 0.1μF 0.022μF 0.027μF 0.033μF

Safety Mark	Item No.	Symbol Number	Part Number	Part Name	Q'ty	Remarks
		C16, 17, 34, 43, 50 C24, 233, 244 C268, 363 C92, 105 C112	QFV81HJ-473 QFV81HJ-104 QFM71HJ-222 QFM71HJ-332 QFM71HJ-562	SMF Capacitor SMF Capacitor Mylar Capacitor Mylar Capacitor Mylar Capacitor	5 3 2 2 1	0.047μF 0.1μF 0.0022μF 0.0033μF 0.0056μF
		C110 C94 C106, 257, 258 C259, 260 C366	QFM71HJ-682 QFM71HJ-103 QFM71HJ-153 QFM71HJ-183 QFM71HJ-473	Mylar Capacitor Mylar Capacitor Mylar Capacitor Mylar Capacitor Mylar Capacitor	1 1 3 2 1	0.0068μF 0.01μF 0.015μF 0.018μF 0.047μF
		C97 C236 C98	QFP32AJ-332 QFP32AJ-103 QAT3001-300	PP Capacitor PP Capacitor Trimmer Capacitor	1 1 1	0.0033 μF/100 V 0.01 μF/100 V 30 pF
		Resistors R455 R529, 543, 612, 614, 615, 1543 R246, 252, 1246	QRG022J-330 QRD125J-241 QRD14CJ-100	Metal Resistor Carbon Resistor Carbon Resistor	1 6 3	33Ω 2W 240Ω 1/2W 10Ω 1/4W
		R175 R155, 157, 600 R42, 250, 254, 1250 R1, 8, 237 R4, 11, 43, 61, 66, 72, 82,	QRD14CJ-150 QRD14CJ-560 QRD14CJ-680 QRD14CJ-750 QRD14CJ-101	Carbon Resistor Carbon Resistor Carbon Resistor Carbon Resistor Carbon Resistor	1 3 4 3 21	15Ω 1/4W 56Ω 1/4W 68Ω 1/4W 75Ω 1/4W 100Ω 1/4W
		95, 159, 170, 172, 178, 183, 232, 248, 658, 681, 1248, 1376 R239, 249, 1249 R432	ORD14CJ-121 ORD14CJ-151	Carbon Resistor Carbon Resistor	3 1	120Ω 1/4W 150Ω 1/4W
		R234, 235, 608~611, 616 R243, 453 R97, 99, 108, 109, 173, 259, 601, 602, 605, 606, 664~667, 671, 677, 678,	QRD14CJ-181 QRD14CJ-221 QRD14CJ-271	Carbon Resistor Carbon Resistor Carbon Resistor	7 2 18	180Ω 1/4W 220Ω 1/4W 270Ω 1/4W
		688 R14, 94, 136, 137, 138, 139, 167, 216, 217, 231, 245, 428, 603, 604, 1245 R176, 434	QRD14CJ-331 QRD14CJ-391	Carbon Resistor Carbon Resistor	15 2	330Ω 1/4W 390Ω 1/4W
		R13, 17, 160, 470, 405, 546, 556, 1546, 1556 R55 R28, 47, 542, 550, 676, 683, 684, 1542, 1550	QRD14CJ-471 QRD14CJ-511 QRD14CJ-561	Carbon Resistor Carbon Resistor Carbon Resistor	9 1 9	470Ω 1/4W 510Ω 1/4W 560Ω 1/4W
		R162, 305, 312, 318, 319, 333, 335, 336, 344~346, 365 R38, 205, 313~317, 570	QRD14CJ-681 QRD14CJ-821	Carbon Resistor Carbon Resistor	12 8	680Ω 1/4W 820Ω 1/4W
		R19, 20, 24, 32, 44, 56, 58, 64, 67, 85, 86, 87, 89, 90, 104, 106, 110, 119, 140, 141, 142, 147, 148, 158, 161, 163, 236, 277,	QRD14CJ-102	Carbon Resistor	56	1kΩ 1/4W
		376, 416, 444, 502, 508, 512, 521, 530, 544, 553, 554, 575, 576, 656, 657, 682, 690, 693, 1502,				
		1508, 1512, 1521, 1530, 1544, 1553, 1554, 1575, 1576 R29, 59, 63, 211, 321, 415, 443	QRD14CJ-122	Carbon Resistor	7	1.2kΩ 1/4W
		R21, 34, 565, 654, 685 R18, 25, 126, 258, 320, 334, 347, 454, 710 R35, 80, 165, 407, 423, 424, 435, 660, 679	QRD14CJ-152 QRD14CJ-182 QRD14CJ-222	Carbon Resistor Carbon Resistor Carbon Resistor	5 9 9	1.5kΩ 1/4W 1.8kΩ 1/4W 2.2kΩ 1/4W
		R57, 60, 78, 79, 83, 105, 107, 400, 406, 408, 409, 430, 437 R93, 212, 452, 661, 662 R655	QRD14CJ-272 QRD14CJ-332 QRD14CJ-362	Carbon Resistor Carbon Resistor	13 5 1	2.7kΩ 1/4W 4.4kΩ 1/4W 3.6kΩ 1/4W

Safety Mark	Item No.	Symbol No.	Part Number	Part Name	Q'ty	Remarks
		R7, 62, 81, 120, 143, 145, 149, 152, 153, 154, 166, 169, 171, 174, 179, 188, 208, 209, 213, 214, 220, 225, 233, 457, 566, 617	QRD14CJ-392	Carbon Resistor	26	3.9kΩ 1/4W
		R5, 12, 54, 68, 71, 75, 103, 130, 135, 210, 267, 369, 414, 420, 425, 436, 438, 442, 447, 450, 461, 515, 516, 532, 533, 549, 567,	QRD14CJ-472	Carbon Resistor	36	4.7kΩ 1/4W
		573, 687, 694, 1515, 1516, 1532, 1533, 1549, 1573 R15, 46, 523, 524, 680, 1523, 1524	QRD14CJ-562	Carbon Resistor	7	5.6kΩ 1/4W
		R240, 372~374, 404, 427, 433 R45, 92, 146, 219 R17, 37, 48~50, 102, 181, 185, 218, 223, 257, 278, 283	QRD14CJ-682 QRD14CJ-882 QRD14CJ-103	Carbon Resistor Carbon Resistor Carbon Resistor	7 4 50	6.8kΩ 1/4W 8.2kΩ 1/4W 10kΩ 1/4W
		285, 302, 304, 306, 326, 359, 362 ~364, 366, 370, 402, 417, 431, 451, 456, 504, 509, 514, 526, 539, 541, 555, 569, 613, 663,				
		669, 1504, 1509, 1514, 1526, 1539, 1541, 1555 R241, 410, 439, 510, 1510 R98, 101, 180, 184, 187, 189, 190, 247, 422, 448,	QRD14CJ-123 QRD14CJ-153	Carbon Resistor Carbon Resistor	5 17	12kΩ 1/4W 15kΩ 1/4W
		525, 540, 558, 1247, 1525, 1540, 1558 R224, 270 R16, 38, 40, 51~53, 100, 144, 164, 168, 207, 215, 545, 1545	QRD14CJ-183 QRD14CJ-223	Carbon Resistor Carbon Resistor	2 14	18kΩ 1/4W 22kΩ 1/4W
		R22, 39, 429, 462 R151, 244, 269, 280, 284, 371, 411~413, 418, 419, 421, 440, 441, 445, 446,	QRD14CJ-273 QRD14CJ-333	Carbon Resistor Carbon Resistor	4 24	27kΩ 1/4W 33kΩ 1/4W
		449, 459, 460, 527, 528, 571, 1244, 1571 R36 R69, 70, 74, 131, 132, 133, 134, 177, 226, 227, 228,	QRD14CJ-393 QRD14CJ-473	Carbon Resistor Carbon Resistor	1 42	39kΩ 1/4W 47kΩ 1/4W
		229, 230, 238, 251, 253, 268, 279, 342, 343, 517~ 519, 534~536, 551, 552, 563, 564, 568, 1251, 1517~1519, 1534~1536,				
		1551, 1552, 1563, 1564 R26 R23, 33, 65 R360, 520, 1520 R150, 182, 186, 191, 192,	QRD14CJ-563 QRD14CJ-683 QRD14CJ-823 QRD14CJ-104	Carbon Resistor Carbon Resistor Carbon Resistor Carbon Resistor	1 3 3 75	56kΩ 1/4W 68kΩ 1/4W 82kΩ 1/4W 100kΩ 1/4W
		221, 255, 271~276, 281, 282, 286, 291~294, 300, 303, 307~311, 321~325, 327~332, 337~341, 348~358, 361, 367,				
		368, 381, 382, 458, 537, 538, 559~562, 572, 574, 651~653, 1537, 1538, 1562, 1572 R2, 3, 9, 10, 500, 501, 505,	QRD14CJ-124	Carbon Resistor	14	120kΩ 1/4W
		506, 511, 1500, 1501, 1505, 1506, 1511 R547, 1547 R503, 507, 513, 522, 548, 1503, 1507, 1513, 1522,	QRD14CJ-154 QRD14CJ-334	Carbon Resistor Carbon Resistor	2 10	150kΩ 1/4W 330kΩ 1/4W
		1548 R464 R6, 41 R206, 256	QRD14CJ-394 QRD14CJ-474 QRD14CJ-105	Carbon Resistor Carbon Resistor Carbon Resistor	1 2 2	390kΩ 1/4W 470kΩ 1/4W 1MΩ 1/4W

Safety Mark	Item No.	Symbol Number	Part Number	Part Name	Q'ty	Remarks
		Cable Assemblies				
		CN1	J43418-001	Cable Ass'y	1	8-8pin
		CN2	J43419-001	Cable Ass'y	1	8pin
		CN3	J43420-001	Cable Ass'y	1	12-12pin
		CN4	J43421-001	Cable Ass'y	1	6-6pin
		CN5	J43422-001	Cable Ass'y	1	9-9pin
		CN6	J43423-001	Cable Ass'y	1	6-6pin
		CN7	J43424-001	Cable Ass'y	1	5-5pin
		CN8	J43425-001	Cable Ass'y	1	7-4/3pin
		CN9	J43426-001	Cable Ass'y	1	12-3x4pin
		CN10	J43427-001	Cable Ass'y	1	4-4pin
		CN12	J43428-001	Cable Ass'y	1	2-2pin
		CN13	J43429-001	Cable Ass'y	1	3-3pin
		CN14	J43430-001	Cable Ass'y	1	7-7pin
		CN16	J43431-001	Cable Ass'y	1	2-2pin
		CN17	J43432-001	Cable Ass'y	1	2-2pin
		CN18	J43433-001	Cable Ass'y	1	3-3pin
		CN19	J43434-001	Cable Ass'y	1	3-3pin
		CN20	J43435-001	Cable Ass'y	1	5-5pin
		CN21	J43436-001	Cable Ass'y	1	2-2pin
		CN22	J43437-001	Cable Ass'y	1	5-5pin
		CN25	J43438-001	Cable Ass'y	1	2-2pin
		CN26	J43439-001	Cable Ass'y	1	2-2pin
		CN27	J43440-001	Cable Ass'y	1	2-2pin
		CN28	J43441-001	Cable Ass'y	1	2-2pin
		CN29	J43442-001	Cable Ass'y	1	5-5pin
		CN34	J43443-001	Cable Ass'y	1	3-3pin
		CN35	J43444-001	Cable Ass'y	1	12-3x4pin
		CN39	J43445-001	Cable Ass'y	1	3-3pin
		CN42	J43446-001	Cable Ass'y	1	2-2pin
		CN43	J43447-001	Cable Ass'y	1	2-2pin
		CN44	J43448-001	Cable Ass'y	1	2-2pin
		NOTE: Parts with A or B are not connectors. Then cannot be removed.				
		A1	J43449-001	Cable Ass'y	1	7-7pin
		A2	J43450-001	Cable Ass'y	1	4-4pin
		A3	J43451-001	Cable Ass'y	1	2-2pin
		A4	J43452-001	Cable Ass'y	1	2-2pin
		A5	J43453-001	Cable Ass'y	1	3-3pin
		A6	J43454-001	Cable Ass'y	1	3-3pin
		A7	J43455-001	Cable Ass'y	1	2-2pin
		A8	J43456-001	Cable Ass'y	1	6-6pin
		A9	J43457-001	Cable Ass'y	1	5-5pin
		A10	J43458-001	Cable Ass'y	1	7-7pin
		A11	J43459-001	Cable Ass'y	1	2-2pin
		A13	J43460-001	Cable Ass'y	1	2-2pin
		A15	J43461-001	Cable Ass'y	1	2-2pin
		A16	J43462-001	Cable Ass'y	1	2-2pin
		B1	J43463-001	Cable Ass'y	1	4-4pin
		B2	J43464-001	Cable Ass'y	1	2-2pin
		B3	J43465-001	Cable Ass'y	1	3-3pin
		B4	J43466-001	Cable Ass'y	1	3-3pin
		B6	J43467-001	Cable Ass'y	1	2-2pin
		B7	J43468-001	Cable Ass'y	1	3-1x3pin
▲	4	Others X1, 2	J43413-001	Crystal	2	17.734475MHz
▲	4		QMP3900-200H	Power Cord	1	for (E), (EB) models
▲	5		QMP9017-008BS	Power Cord	1	for (EK) models
▲	5		QHS3876-162	Cord Stopper	1	for (E), (EB) models
▲	6		QHS3876-162BS	Cord Stopper	1	for (EK) models
▲	7	P1, 2	J43398-001	Terminal Post	2	Power Cord Connect Pin
▲	8	PJ1~4, 6, 7	J42996-001	BNC/2-Pin Jack	6	
▲	9	PJ5	J43417-001	2-Pin Jack	1	
▲	10	CN40	J43396-001	Terminal Socket	1	
▲	11	CN45	J43397-001	Terminal Socket	1	For connection to the cord on the primary side of the power transformer
12		Printed Circuit Boards		Main PCB Ass'y	1	
13			J11058-001	Main PCB	1	
14			J11054-001	Sub PCB Ass'y	1	-001A ~ -001F
			J11059-001	Sub PCB	1	
			J11055-001	Wipe PCB Ass'y	1	
			J21131-001	Wipe PCB	1	
			J21124-001		1	

- PC board ass'y will not be supplied.
- ▲ shows safety parts. Be sure to use the specified part.

16. Mechanical Parts List

Safety Mark	Item No.	Part No.	Part Name	Q'ty	Remarks
	15 16 17 18 19	J11031-003 J11032-003 J42829-002 J42830-002 J42831-002	Front Panel Ass'y Front Panel Key Top A Key Top B Key Top C	1 1 1 6 1	
	20 21 22 23 24	J42832-002 J42833-001 J42834-001 J42938-001 J42836-002	Key Top D Lens A Lens B Name Plate Escutcheon	2 2 6 1 1	
	25 26 27 28 29	J42837-003 J42838-002 J42839-001 J42840-001 J42859-001	Coil Spring A Coil Spring B Knob A Knob B Knob C	1 6 3 5 1	For COLOR switch, marks are attached on the rear
	30 31 32 32 33	J42841-001 J42842-001 J43402-001 J43402-002 J42952-003	Sub Frame Ass'y Sub Frame Rear Panel Rear Panel Top Cover Ass'y	1 1 1 1 1	Nonwoven fabric (100 x 10) included for (E), (EB) models for (EK) models Four neoprene rubber sheets included
	34 35 36 37 38	J42845-002 J42846-001 J42847-001 J43103-001 J42848-001	Chassis Bottom Cover Reinforcement Plate Foot Holder A	1 1 1 4 10	Shrinking vinyl tube included For Main PC Board
	39 40 41 42 43	J43471-001 J43403-001 J42864-001 J43404-001 J43405-001	Holder B Holder C Pad Wire Holder Wire Clamper	4 8 1 1 1	For Wipe PC Board For Sub PC Board
△	44 45 46 47 48	J43305-001 SDSC3006 SDSG3006 SDSG3008M SDST4006	Barrier Sheet Screw Tapping Screw Tapping Screw Tapping Screw	1 3 28 26 2	⊕ Binding, $\phi 3 \times 6$ ⊕ Binding, B-tight, $\phi 3 \times 6$ ⊕ Binding, B-tight, $\phi 3 \times 8$ (Black) ⊕ Binding, S-tight, $\phi 4 \times 6$
	49 50 51	SDST4003M WLS3000Z NNS3000Z	Tapping Screw Washer Nut	4 1 1	⊕ Binding, S-tight, $\phi 4 \times 8$ (Black) M3

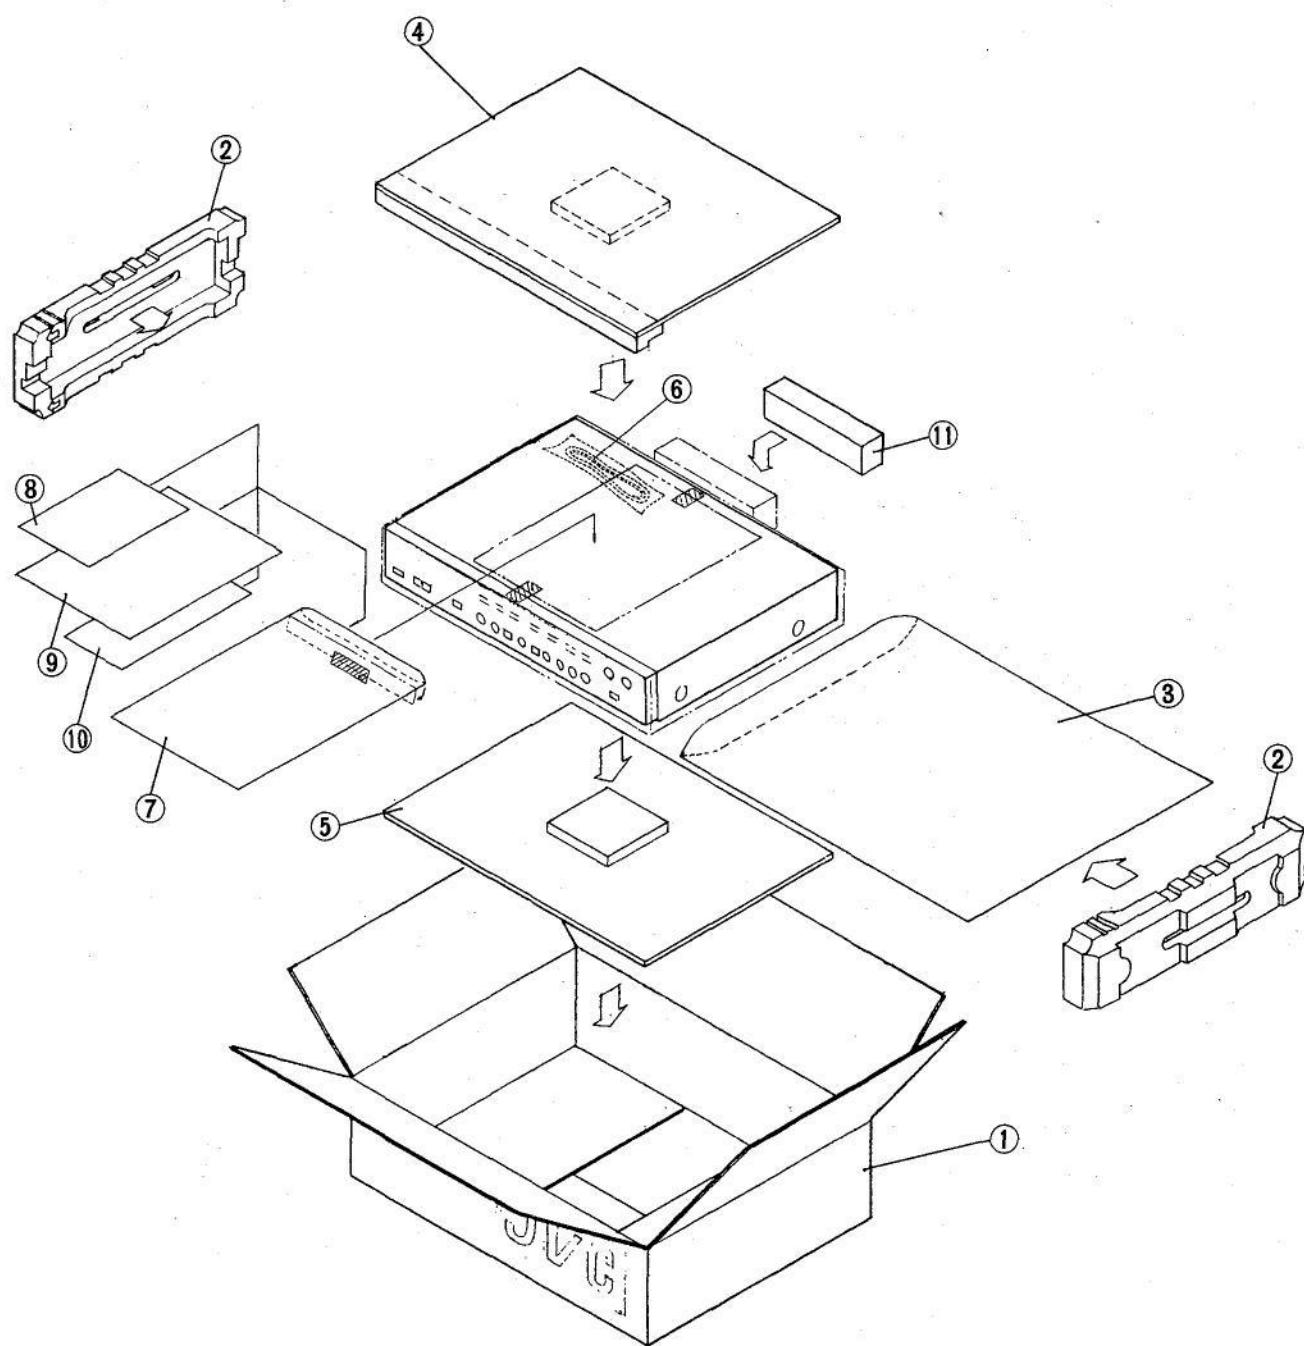
The Marks for Designated Areas

(EK) . . . U.K.

(EB) . . . Norway, Sweden, Finnland, Denmark, Switzerland

(E) . . . Europe (other countries)

17. Packing Materials and Parts Numbers



Item No.	Part No.	Part Name	Q'ty	Remarks
1	PK-JXW9E	Packing Case	1	J11060-001 for (E) models
1	PK-JXW9EB	Packing Case	1	J11060-002 for (EB) models
1	PK-JXW9EK	Packing Case	1	J11060-003 for (EK) models
2	J21071-001	Packing Pad (1)	2	
3	J42852-001	Envelope (1)	1	for Main Unit, (E), (EB) models
3	J43400-001	Envelope (1)	1	for Main Unit, (EK) models
4	J42860-001	Packing Pad (2)	1	for Top
5	J42861-001	Packing Pad (3)	1	for Bottom
6	QPGA010-02504	Envelope (2)	1	for Power Cord
11	J43401-001	Packing Pad (4)	1	for Rear


18. Accessories List

Item No.	Part No.	Part Name	Q'ty	Remarks
7	QPGA025-03505	Envelope	1	for Accessories, (E), (EB) models
7	E300196-010B	Envelope	1	for Accessories, (EK) models
8	BT20060	Warranty Card	1	(EK) models only
9	J5500-026A	Instruction Book	1	
10	BT20066	EEC Agency	1	



The marks for Designated Areas

- (EK) U.K.
- (EB) Norway, Sweden, Finnland, Denmark, Switzerland
- (E) Europe (other countries)

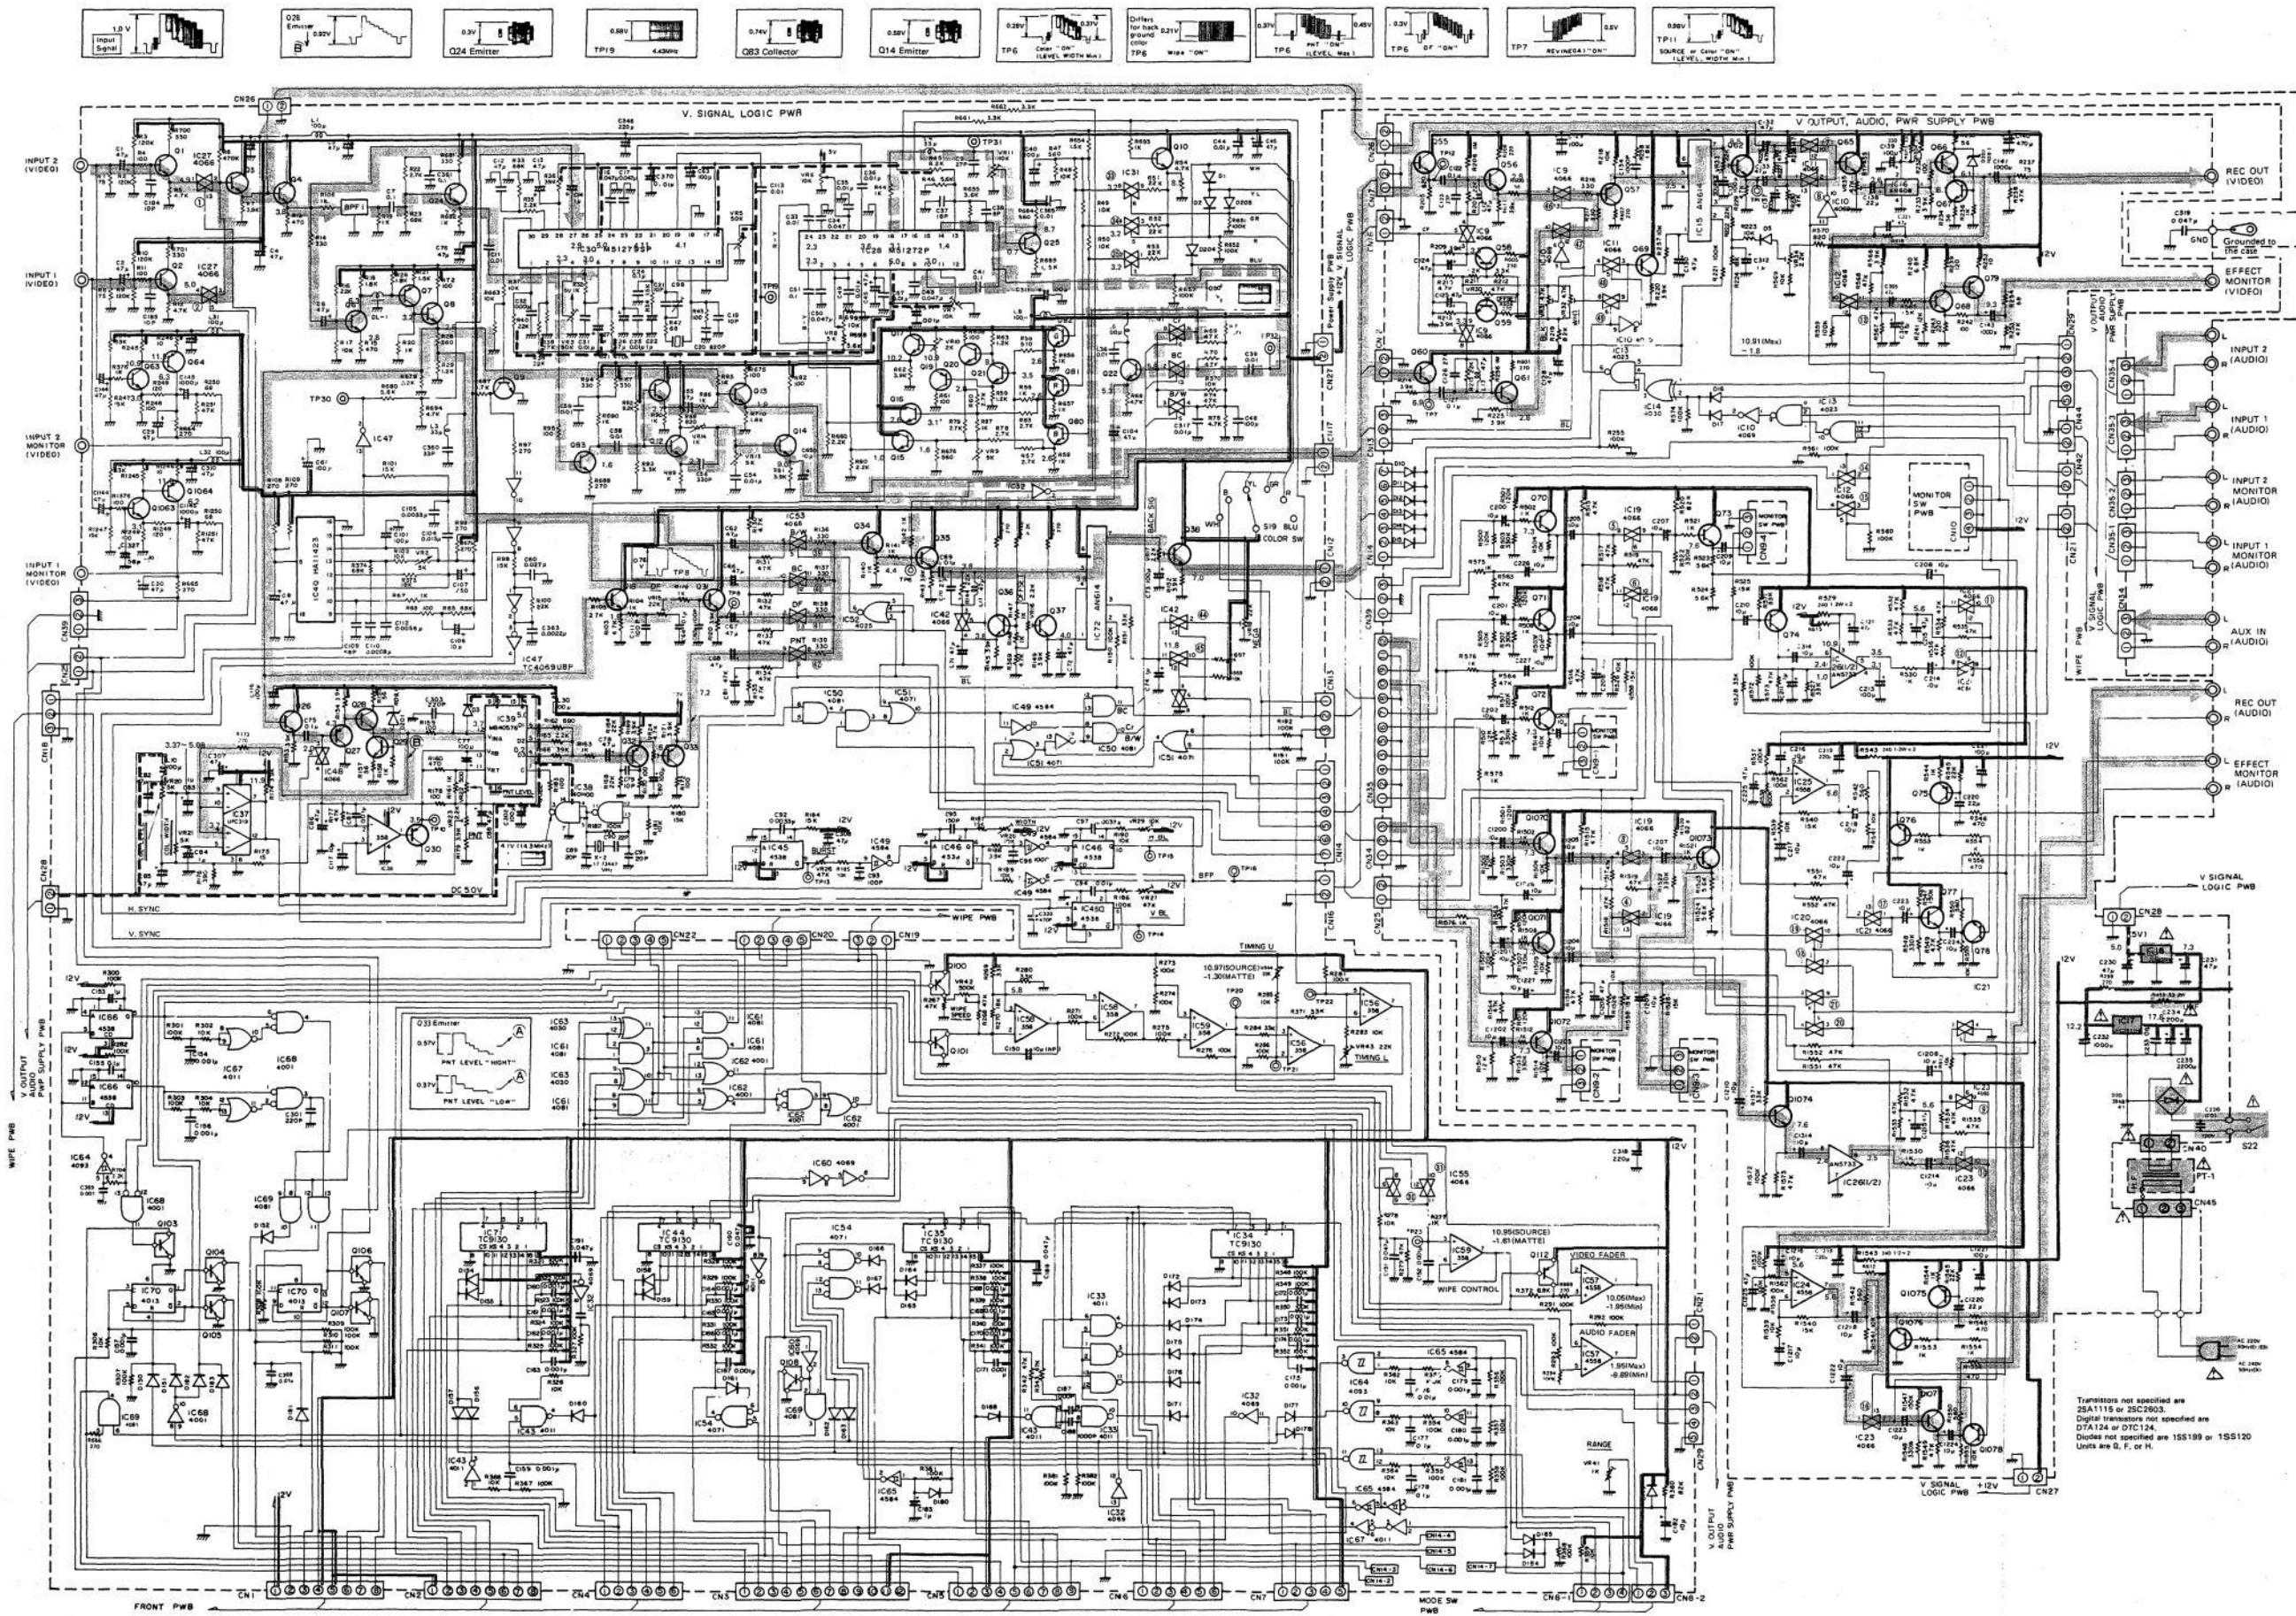
19. Schematic Diagram




(No. 70053)

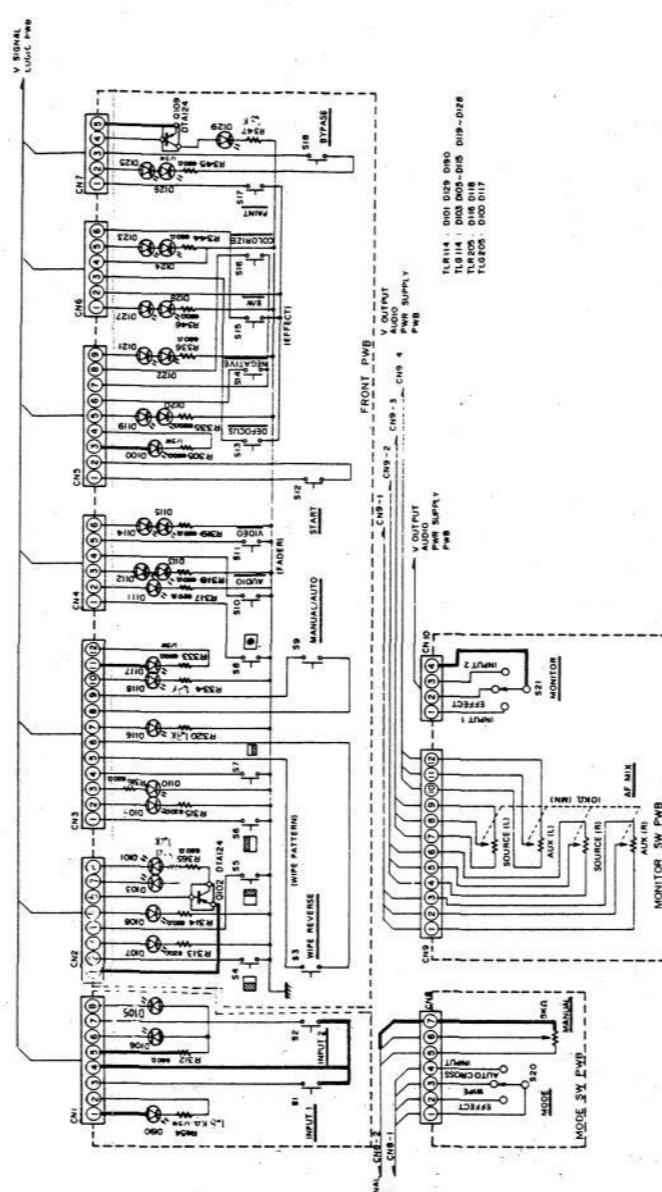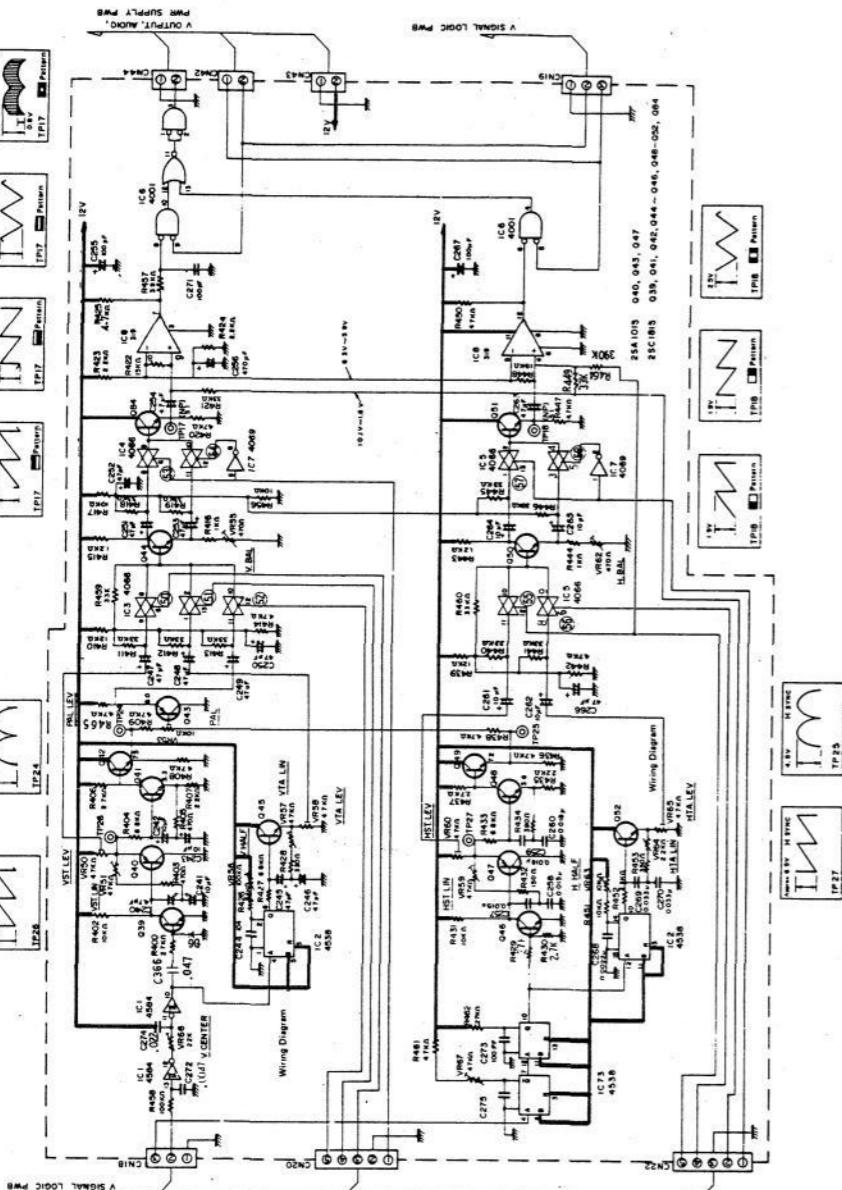

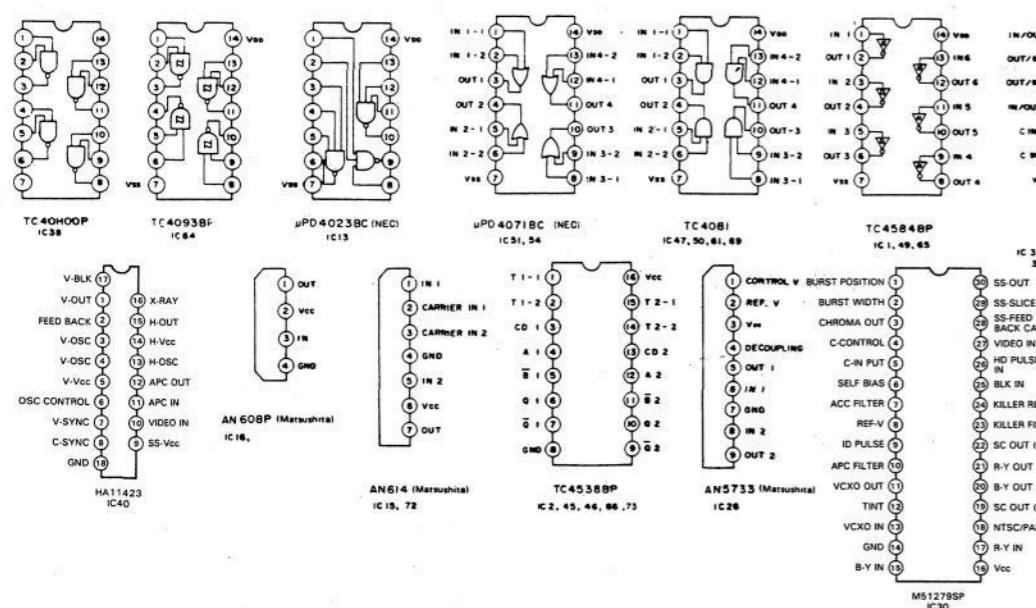- Notes:**
- The solid line indicates the B (12 V) power supply.
 - The dashed line indicates the B (5 V) power supply.
 - The shaded line indicates the signal path.
 - When replacing parts in the shaded areas (marked Δ), be sure to use only the designated parts to ensure safety.
 - This is a standard circuit diagram. Design and contents are subject to change without notice.




(No. 70053) (No. 70053)

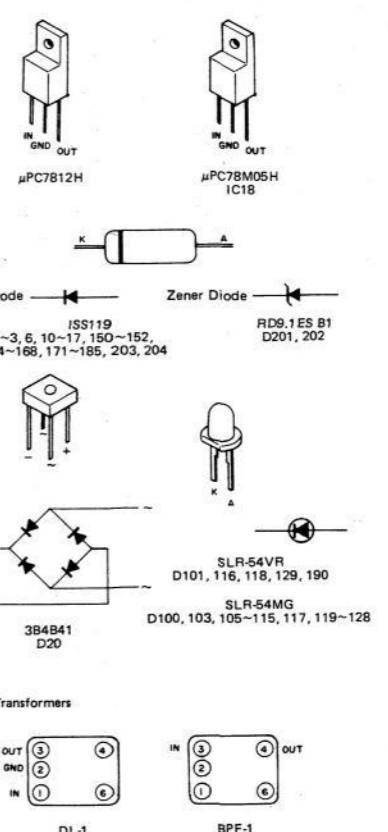


20. Printed Circuit Boards (Reduced to approx. 80 % real size.)

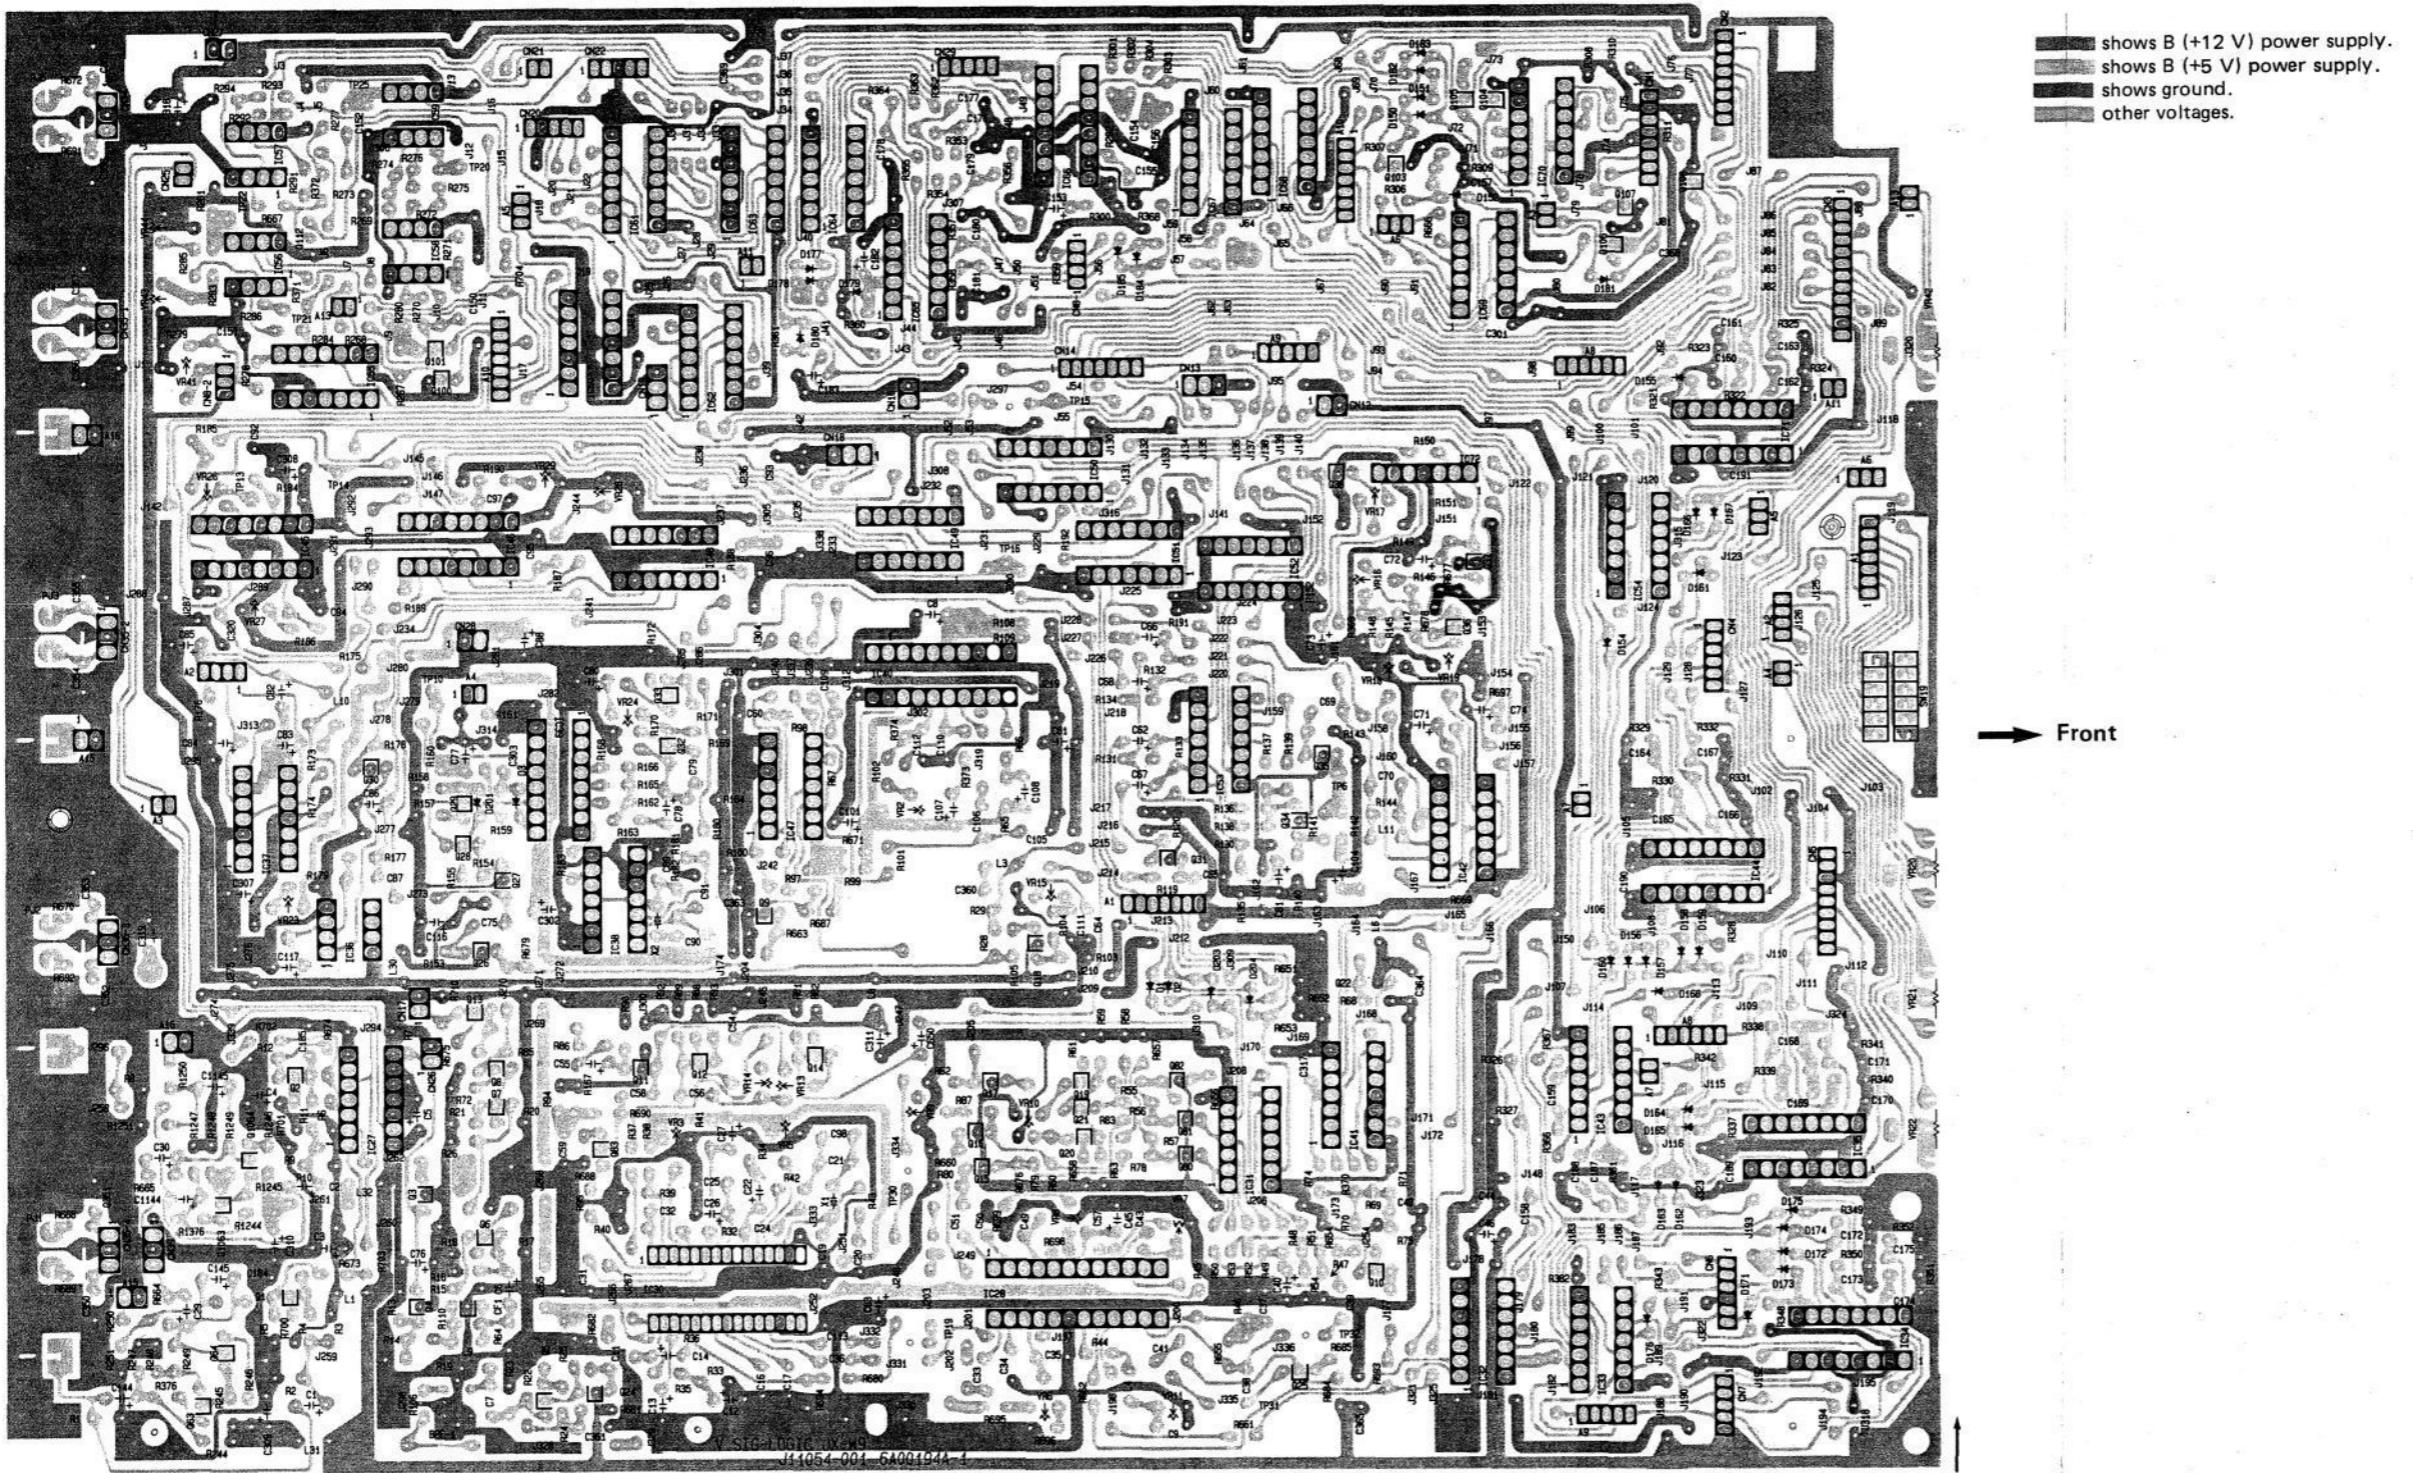
- Main P.C. Board




- Wipe P.C. Board

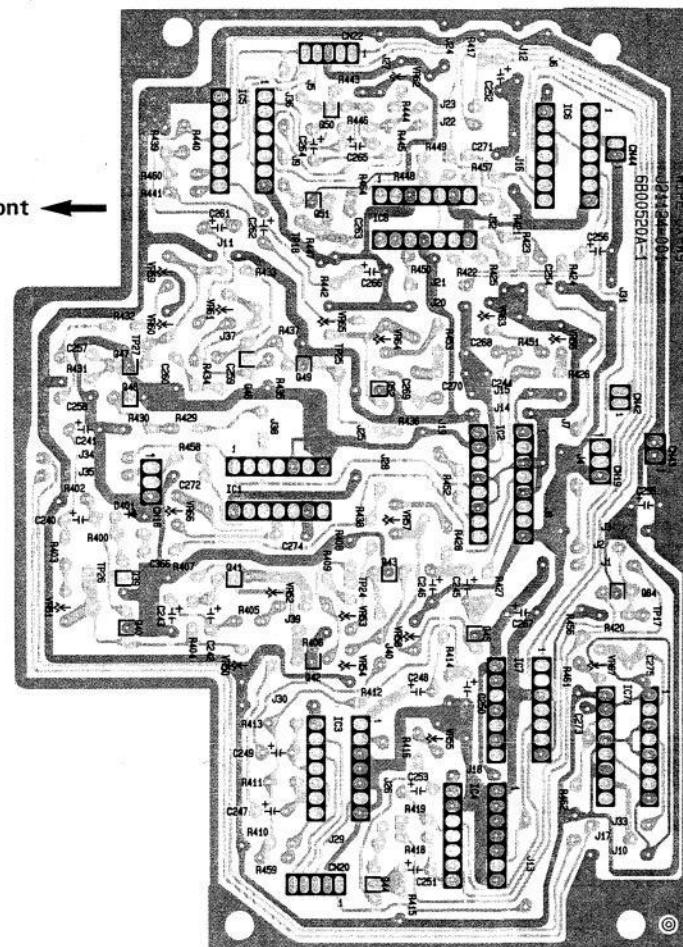


- Sub P.C. Board

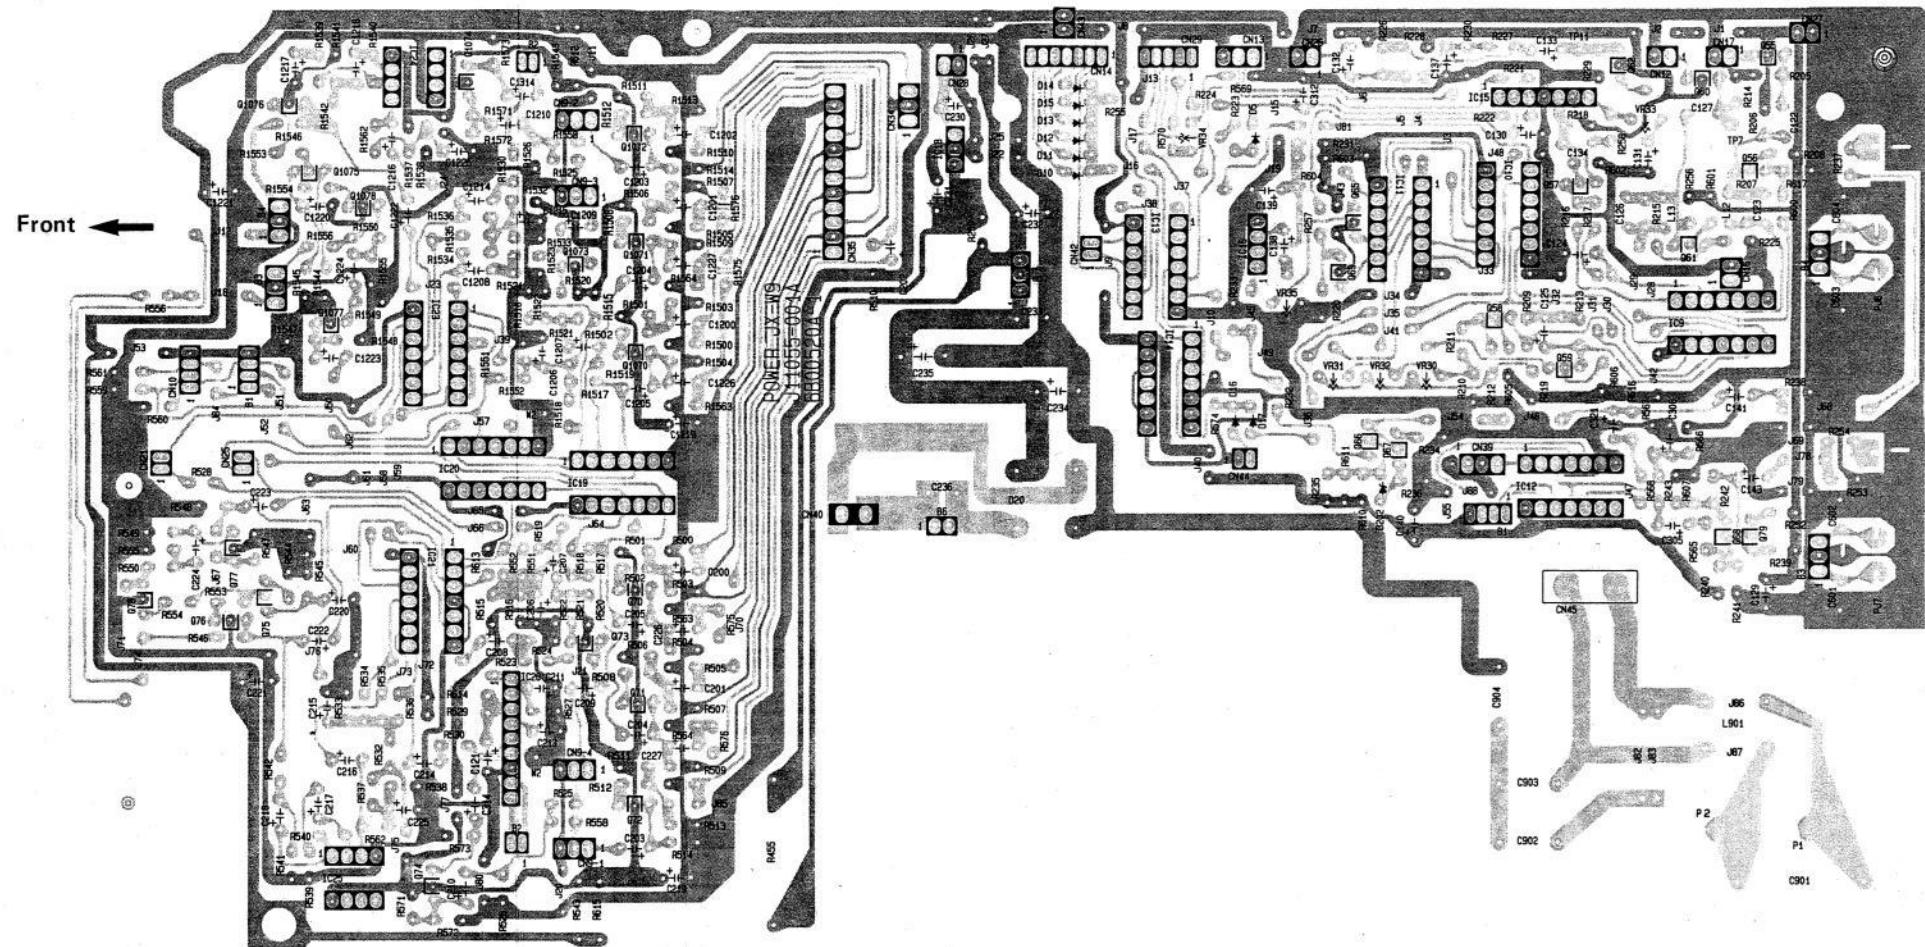

- Monitor SW P.C. Board

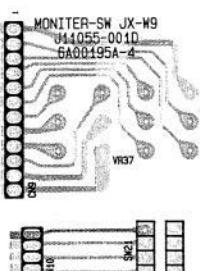


- Mode SW P.C. Board

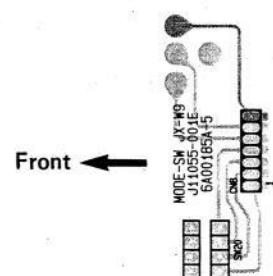

- Power SW P.C. Board



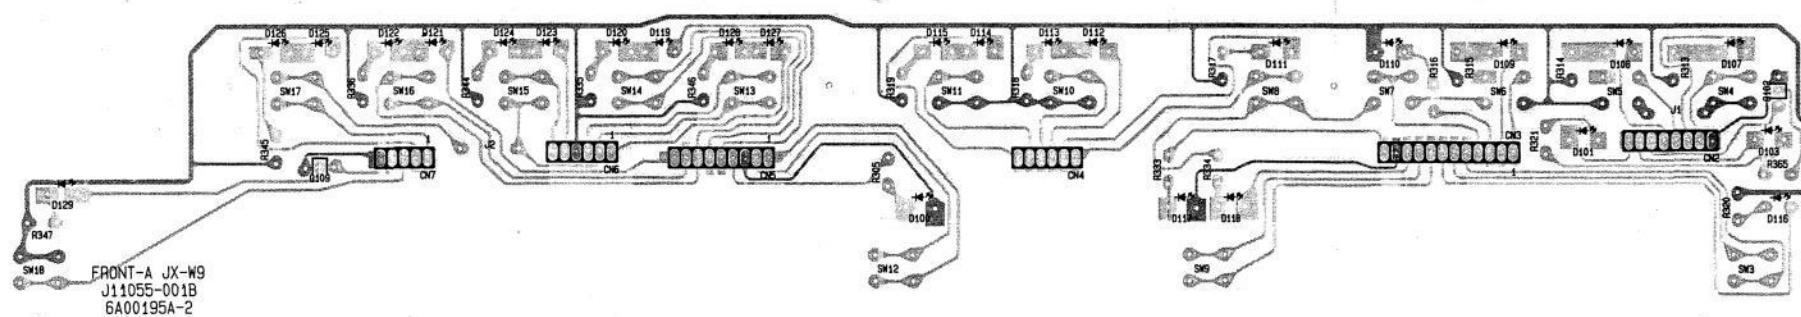- Front P.C. Board (A)



• Front P.C. Board (B)

