OTL WiFi Link

Hướng dẫn sử dụng · User guide

Kết nối máy rang O Tesla với Artisan qua wifi
Connect your O Tesla roaster to Artisan over Wi-Fi

Phiên bản / Version 1.4

Phần 1 — Tiếng Việt

Part 2 — English


CÔNG TY TNHH CÔNG NGHIỆP O TESLA · O Tesla Industry Co., Ltd
Điện thoại / Phone · WhatsApp: 0936 198 938 · +84 936 198 938
Email: otlpro.com@gmail.com · Website: otlpro.com

Phần 1 — Tiếng Việt

1 OTL WiFi Link dùng để làm gì

Máy rang O Tesla có một module wifi gửi nhiệt độ cho Artisan. Module nhận địa chỉ IP từ wifi của quán; sau khi mất điện hoặc đổi router, IP có thể đổi và Artisan mất kết nối. OTL WiFi Link làm thay bạn:

- **tự tìm** module trên wifi và cho biết IP hiện tại;
- **tự kiểm** máy rang có trả lời không, và **tự sửa** khi tốc độ truyền của module lệch với máy rang;
- **hướng dẫn cài Artisan** từng bước, tự điền sẵn kết nối wifi vào tệp cài đặt Artisan;
- giữ IP cố định, đặt mật khẩu wifi cho module, đổi wifi module bắt;
- **hỗ trợ từ xa**: gửi thông tin chẩn đoán cho O Tesla, hoặc để kỹ thuật viên O Tesla chỉnh sâu.

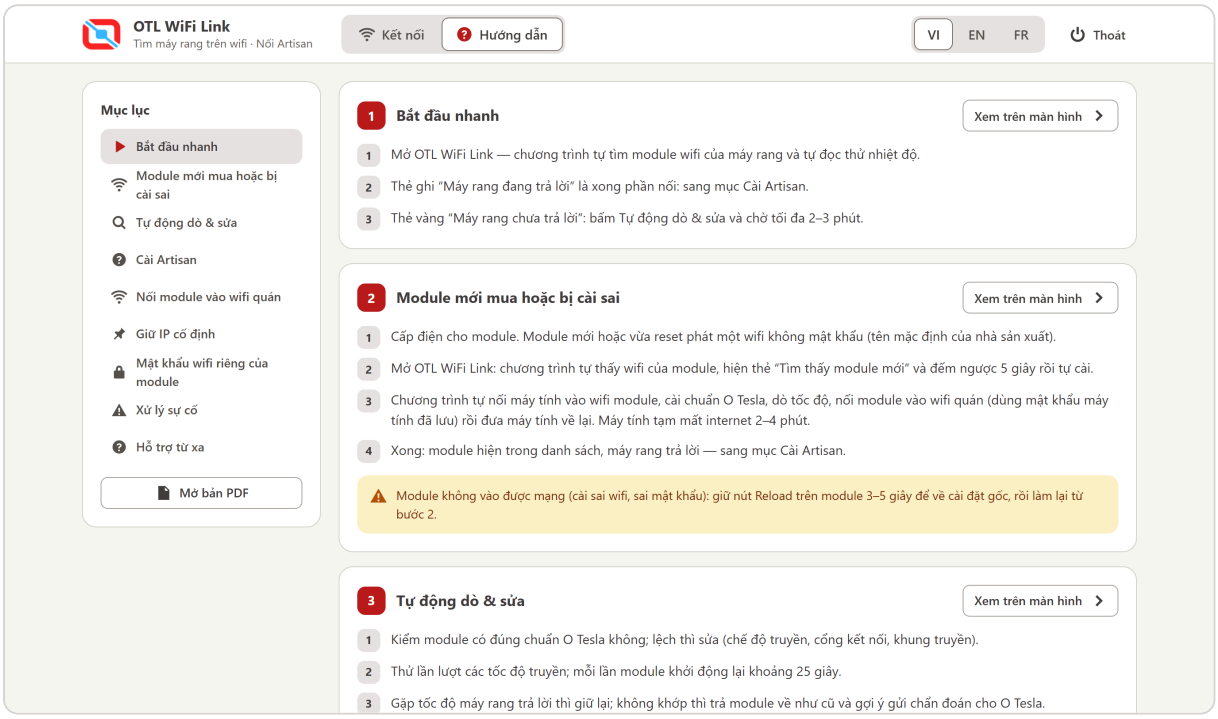

Tab **Hướng dẫn** ngay trong chương trình: bấm "Xem trên màn hình" để tới đúng chỗ cần làm.

2 Chuẩn bị

- Máy rang đã bật nguồn.
- Máy tính bắt **cùng wifi** với máy rang: wifi của quán, hoặc wifi riêng của module tên **"OTL Roaster"**.
- Máy tính chạy Windows 10 / 11 hoặc macOS 11 trở lên.
- Bộ cài O Tesla gửi: tệp nén `OTL-WiFi-Link-v1.4.zip`, và tệp cài đặt Artisan của máy bạn (đuôi `.aset`).

Trong bộ cài	Dùng cho
`Windows/OTL WiFi Link.exe`	Máy tính Windows
`macOS/`	Máy Mac — tệp `OTL WiFi Link.command` và thư mục `app`, giữ nguyên cạnh nhau
`Huong-dan_User-guide.pdf`	Tài liệu này
`Guide-utilisateur.pdf`	Tài liệu này bằng tiếng Pháp

3 Mở chương trình trên Windows

1. Bấm chuột phải tệp `OTL-WiFi-Link-v1.4.zip` → **Extract All** (Giải nén tất cả) → **Extract**.
2. Mở thư mục **Windows**, bấm đúp **OTL WiFi Link.exe**.
3. Windows hiện *"Windows protected your PC"*: bấm **More info** → **Run anyway**. Chương trình chưa có chữ ký số của Microsoft nên Windows hỏi ở lần đầu.
4. Tường lửa Windows hỏi quyền mạng: đánh dấu cả **Private** và **Public** → **Allow access**. Không cho phép thì chương trình không tìm được module.
5. Trang OTL WiFi Link tự mở trong trình duyệt (Chrome nếu máy có).


Mẹo: bấm chuột phải **OTL WiFi Link.exe** → **Send to** → **Desktop (create shortcut)** để lần sau mở nhanh từ màn hình chính.

4 Mở chương trình trên macOS

1. Bấm đúp tệp zip để giải nén, mở thư mục **macOS**. Giữ tệp **OTL WiFi Link.command** và thư mục **app** cạnh nhau.
2. Lần đầu: bấm chuột phải (hoặc giữ **Control** rồi bấm) tệp **OTL WiFi Link.command** → **Open** → **Open**. Các lần sau chỉ cần bấm đúp.
   macOS 15 trở lên không có nút **Open**: bấm **Done**, vào **System Settings** → **Privacy & Security**, kéo xuống dưới, bấm **Open Anyway**, nhập mật khẩu máy.
3. macOS báo cần cài *"command line developer tools"* (Python 3): bấm **Install**, chờ cài xong rồi làm lại bước 2.
4. macOS hỏi *"accept incoming network connections?"* cho **python3**: bấm **Allow**.
5. macOS 15 hỏi **Terminal** có được *"find devices on your local network"*: bấm **Allow**. Lỡ bấm **Don't Allow** thì chương trình không thấy module: vào **System Settings** → **Privacy & Security** → **Local Network**, bật **Terminal**, rồi mở lại chương trình.
6. Trang mở trong Chrome (không có Chrome thì Safari). Cửa sổ Terminal đi kèm phải để mở trong lúc dùng; đóng Terminal là chương trình tắt.

Bấm đúp không chạy? Mở Terminal, gõ `cd ` (có dấu cách), kéo thư mục **app** vào cửa sổ Terminal, bấm Enter, rồi gõ `python3 otl_wifi_link.py` và bấm Enter.


5 Tìm máy rang

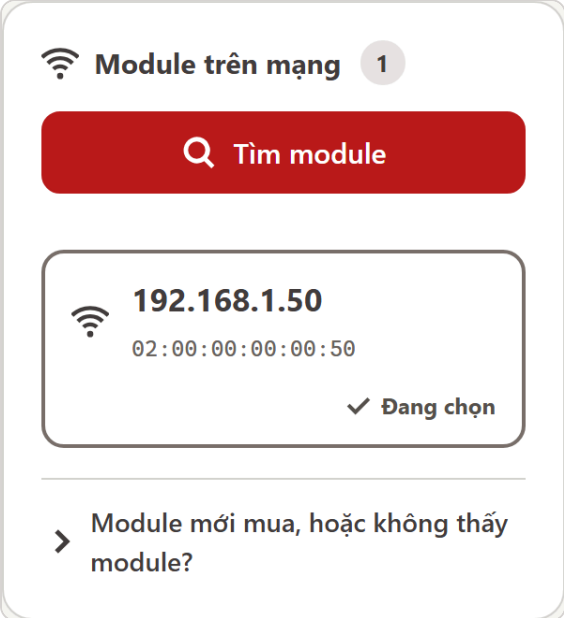

Khung bên trái: danh sách module tìm thấy.

Chương trình tự tìm ngay khi mở. Mỗi module tìm thấy hiện một ô gồm IP (chữ to) và mã phần cứng; chỉ có một module thì chương trình tự chọn. Bấm vào ô để chọn module khác, bấm **Tìm module** để tìm lại. Không thấy module nào: xem **mục 11**.


6 Tự động kiểm & sửa

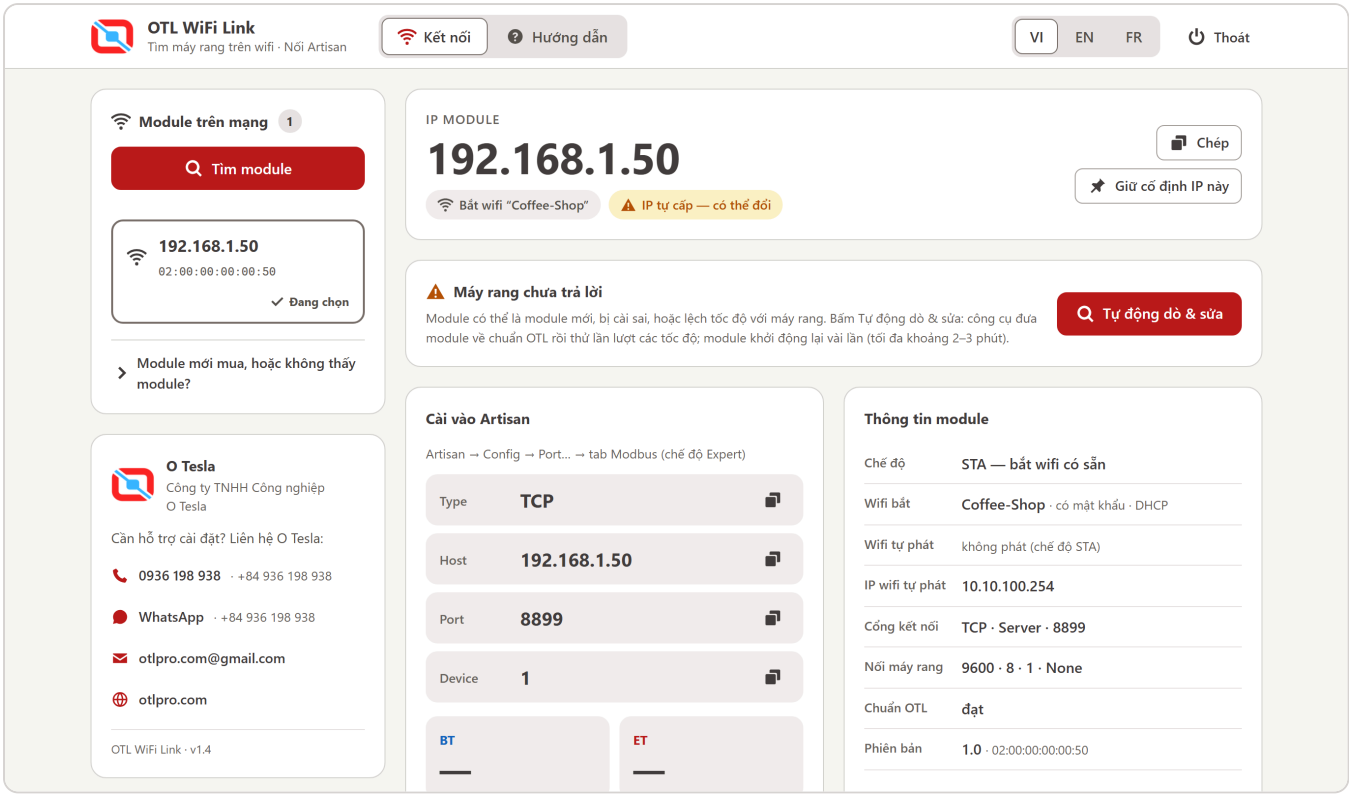

Máy rang chưa trả lời: thẻ vàng giải thích và có nút Tự động dò & sửa.

Chọn xong module, chương trình **tự đọc thử nhiệt độ** của máy rang:


- Máy rang trả lời: thẻ ghi *"Máy rang đang trả lời — Artisan dùng được ngay"*. Sang mục 7.
- Máy rang chưa trả lời: bấm **Tự động dò & sửa**. Chương trình đưa module về chuẩn O Tesla, rồi thử lần lượt các tốc độ truyền; module khởi động lại vài lần (tối đa khoảng 2–3 phút). Gặp tốc độ đúng thì giữ lại; không khớp tốc độ nào thì module được trả về như cũ.
- **Module mới mua hoặc vừa reset:** chỉ cần cấp điện cho module rồi mở OTL WiFi Link. Chương trình tự thấy wifi của module, hiện thẻ **"Tìm thấy module mới"**, đếm ngược 5 giây rồi tự làm hết: nối máy tính vào wifi module, cài chuẩn O Tesla, dò tốc độ, nối module vào wifi của quán (dùng mật khẩu máy tính đã lưu) và đưa máy tính về lại — khoảng 1,5–4 phút, trong lúc đó máy tính tạm mất internet. Máy tính không đọc được mật khẩu wifi quán thì chương trình hỏi.

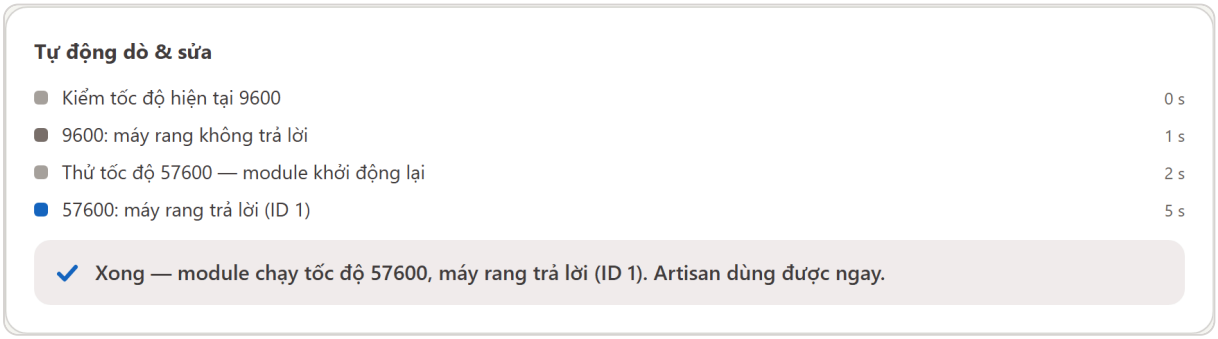

Tự dò xong: từng bước đã làm và kết quả.

Trong lúc dò: để trang mở và để máy rang bật. Dò không ra: bấm **Chép thông tin chẩn đoán** và gửi O Tesla (mục 12).

7 Cài Artisan

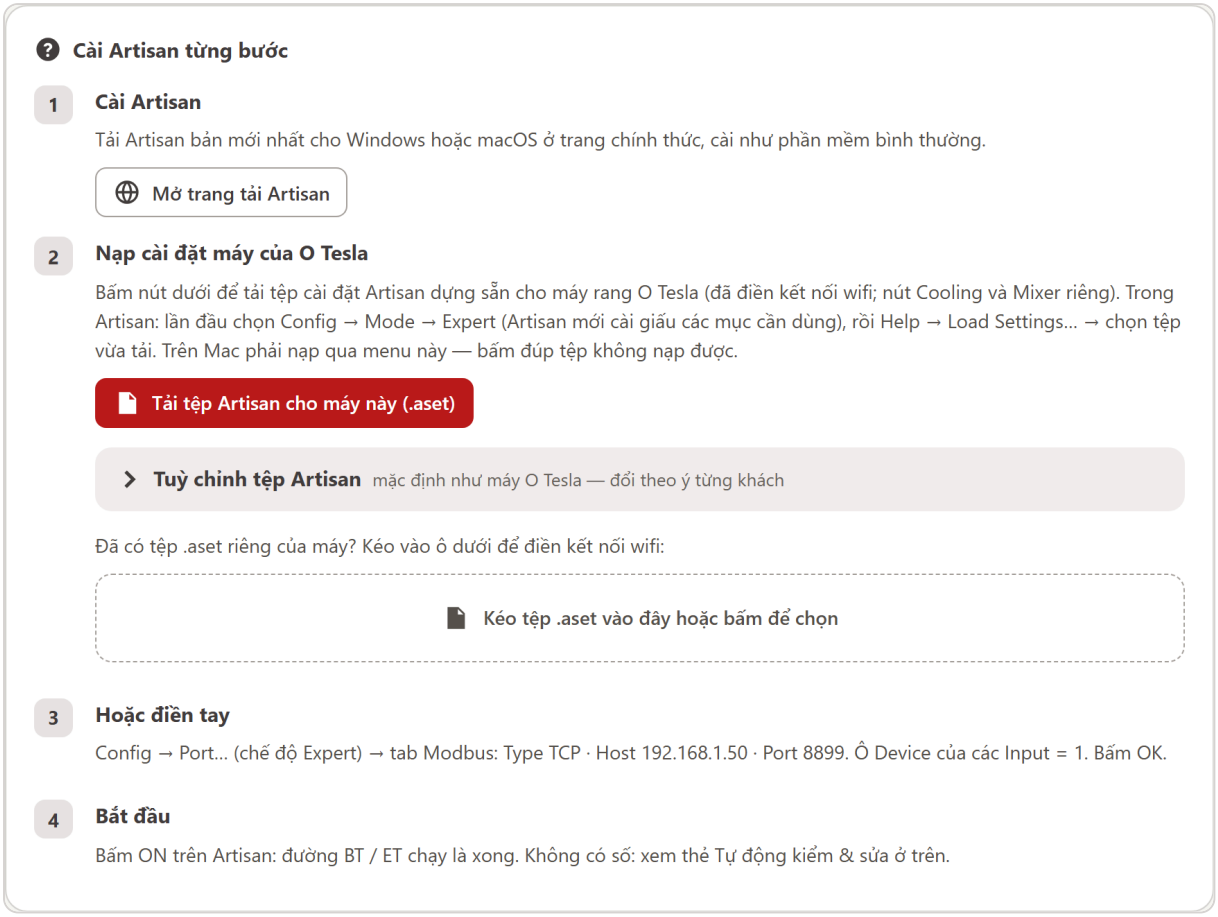

Thẻ “Cài Artisan từng bước” trong OTL WiFi Link.


1. **Cài Artisan:** bấm **Mở trang tải Artisan**, tải bản cho Windows hoặc macOS, cài như phần mềm bình thường.
2. **Nạp cài đặt máy:** bấm **Tải tệp Artisan cho máy này (.aset)** — tệp dựng sẵn cho máy rang O Tesla, đã điền kết nối wifi, nút Cooling và Mixer riêng. Trong Artisan: lần đầu chọn **Config** → **Mode** → **Expert** (Artisan mới cài ở chế độ Standard, chưa có mục nạp tệp), rồi **Help** → **Load Settings…** → chọn tệp vừa tải. Trên Mac phải nạp qua menu này — bấm đúp tệp `.aset` không nạp được. Đã có tệp `.aset` riêng của máy thì kéo vào ô bên dưới nút để điền kết nối wifi.
3. **Tuỳ chỉnh tệp (không bắt buộc):** mở **Tuỳ chỉnh tệp Artisan** ngay dưới nút tải để chọn: gộp Cooling và Mixer vào 1 nút, ẩn nút ±5 Vacuum, nhãn nút tiếng Việt hoặc tiếng Pháp, °C / °F, trục thời gian, nhiệt độ tối đa trục, thang RoR, hiện đường ET, tự nhận CHARGE / DROP, tự lưu mẻ, mã đầu số mẻ, đơn vị khối lượng. Lựa chọn được nhớ cho lần sau.
4. **Hoặc điền tay:** trong Artisan (chế độ Expert), **Config** → **Port…** → tab **Modbus**, điền các ô trong khung **Cài vào Artisan**, bấm **OK**.
5. **Bắt đầu:** bấm **ON** trên Artisan; đường BT / ET chạy là xong.

Type	**TCP**
Host	**192.168.1.50** (IP của bạn)
Port	**8899**
Device	**1** (ô Device của các Input)

Các ô điền trong tab Modbus của Artisan.

Không mở hai Artisan cùng lúc trên hai máy tính để đọc cùng một máy rang.

8 Đọc thử nhiệt độ

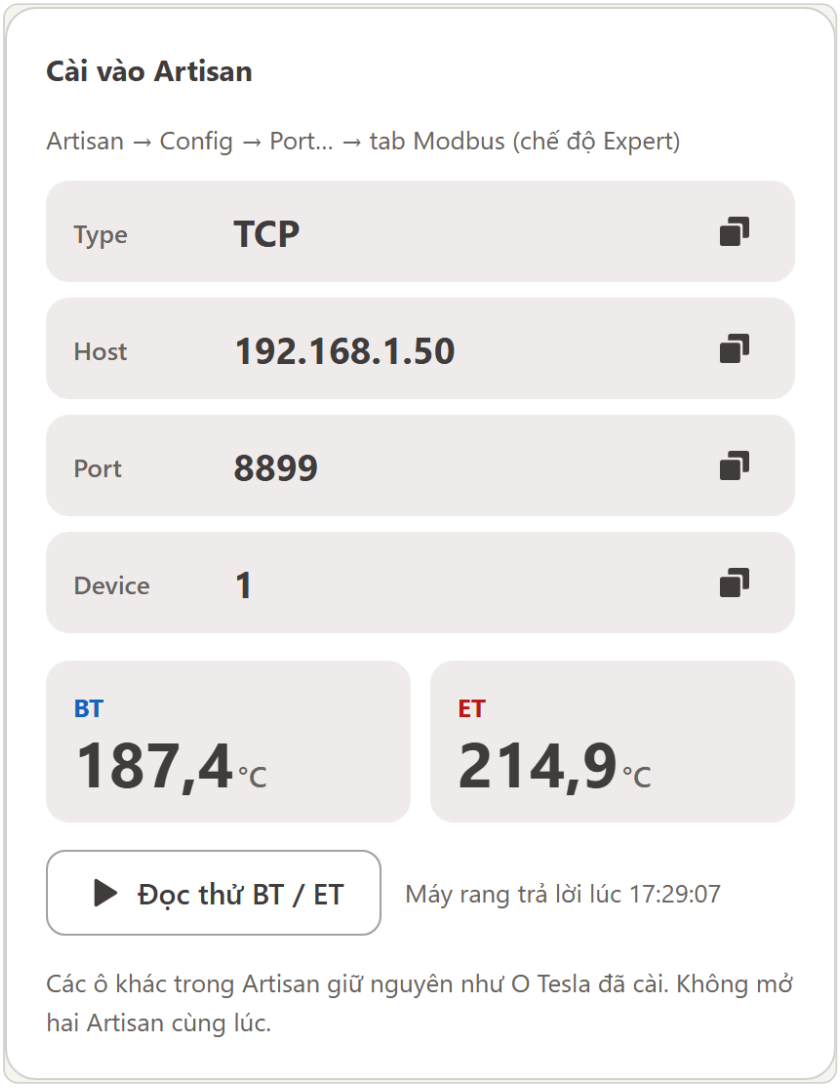


Khung Cài vào Artisan: các ô cần điền và nhiệt độ đọc thử.

Bấm **Đọc thử BT / ET** bất kỳ lúc nào để kiểm lại. Hiện số nhiệt độ cùng dòng *"Máy rang trả lời lúc ..."* là đường nối đã thông. Nút này chỉ đọc, không thay đổi gì trên máy rang.

9 Giữ IP cố định (khuyên dùng)

Nhãn vàng **"IP tự cấp — có thể đổi"** nghĩa là router đang cấp IP cho module. Mất điện hoặc đổi router có thể ra IP khác.

1. Bấm **Giữ cố định IP này** ở góc phải khung IP.
2. Phần **Cài đặt module** mở ra, đã chọn **Cố định** và điền sẵn IP hiện tại.
3. Xem khung **Sẽ ghi**: liệt kê đúng những gì sắp thay đổi.
4. Bấm và **giữ** nút đỏ **Giữ 1 giây để ghi & khởi động lại** tới khi thanh chạy hết nút. Giữ để tránh bấm nhầm.
5. Module khởi động lại trong khoảng 12 giây; chương trình tự tìm lại và báo IP.

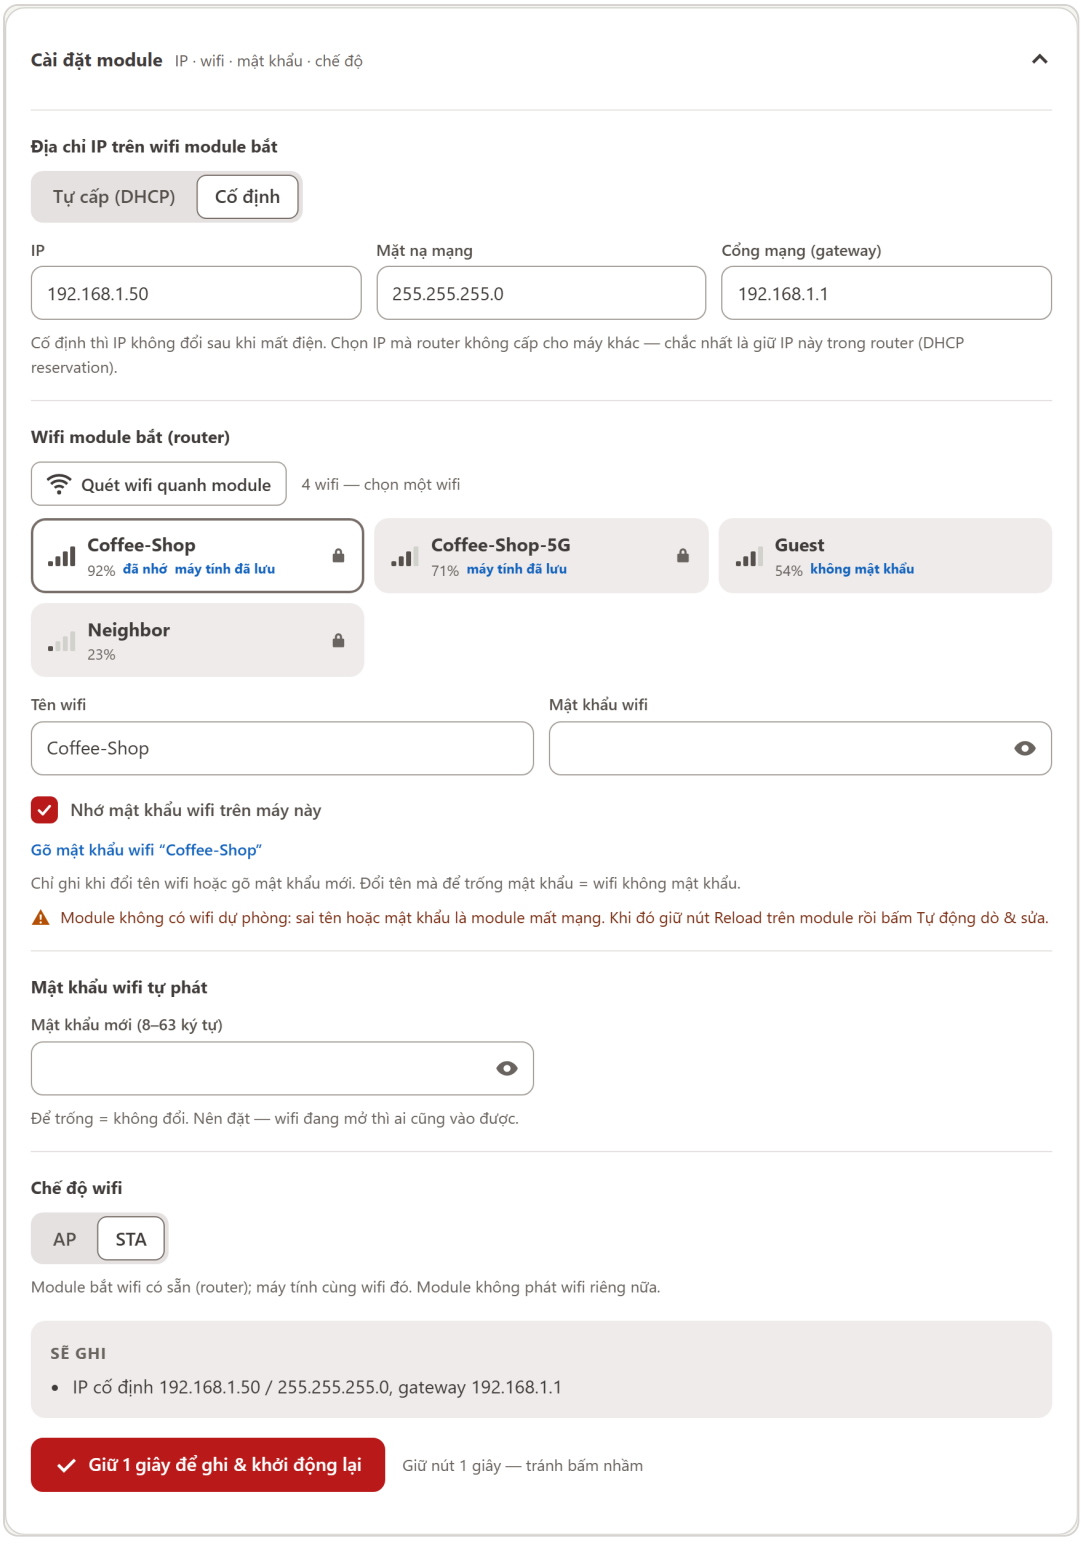

Phần Cài đặt module: IP, wifi module bắt, mật khẩu wifi riêng, chế độ wifi, khung "Sẽ ghi" và nút giữ 1 giây.

Router của quán có chức năng giữ IP (*DHCP reservation*) thì nhờ người quản lý mạng giữ IP này cho module là chắc nhất.

10 Nối wifi quán và mật khẩu wifi riêng



Quét wifi quanh module: chọn wifi, mật khẩu đã nhớ hoặc máy tính đã lưu tự điền.

- **Nối wifi quán:** mở **Cài đặt module**, bấm **Quét wifi quanh module**, chọn wifi của quán. Wifi có nhãn *đã nhớ* hoặc *máy tính đã lưu* tự điền mật khẩu; không thì gõ mật khẩu. Để ô **Nhớ mật khẩu wifi trên máy này** để lần sau tự điền (mật khẩu được mã hoá theo tài khoản máy tính). Giữ nút ghi 1 giây; module khởi động lại và bắt wifi quán. Cho máy tính bắt cùng wifi rồi bấm **Tìm module**.
- **Mật khẩu wifi riêng:** wifi "OTL Roaster" của module ban đầu không có mật khẩu. Gõ mật khẩu 8–63 ký tự vào ô **Mật khẩu wifi tự phát**, rồi giữ nút ghi 1 giây. Ghi lại mật khẩu ở nơi an toàn.
- **Chế độ wifi: AP** — module tự phát wifi "OTL Roaster", máy tính bắt wifi này, không cần router. **STA** — module bắt wifi của quán (chương trình tự chuyển khi bạn chọn wifi quán).

Lưu ý: module không có wifi dự phòng — gõ sai tên hoặc mật khẩu wifi thì module không vào được mạng. Khi đó giữ nút **Reload** trên module 3–5 giây, rồi làm theo mục 6 (module mới).

11 Xử lý sự cố

Hiện tượng	Cách xử lý
Không thấy module nào	Máy tính và máy rang phải cùng một wifi; máy rang đã bật. Thử bắt wifi "OTL Roaster" rồi bấm **Tìm module**. Trên Windows: cho phép OTL WiFi Link qua tường lửa (mục 3). Trên Mac: bật **Terminal** trong **Local Network** (mục 4).
Artisan không có mục Load Settings… hoặc Port…	Artisan đang ở chế độ Standard: chọn **Config** → **Mode** → **Expert**.
Module mới, hoặc không vào được mạng	Giữ nút **Reload** trên module 3–5 giây để về cài đặt gốc, rồi mở OTL WiFi Link: chương trình tự cài lại từ đầu (mục 6).
"Máy rang chưa trả lời"	Kiểm máy rang đã bật nguồn, rồi bấm **Tự động dò & sửa** (mục 6). Dò không ra thì gửi thông tin chẩn đoán cho O Tesla.
Nhãn "Tìm qua quét TCP"	Wifi này chặn gói cài đặt nên chỉ đọc được IP. Artisan vẫn dùng bình thường. Muốn đổi cài đặt hoặc tự sửa: bắt wifi "OTL Roaster" rồi tìm lại.
Artisan báo lỗi kết nối	Mở OTL WiFi Link, so IP với ô Host trong Artisan. Type phải là **TCP**, Port là **8899**. Nhanh nhất: kéo lại tệp `.aset` vào mục 7.
Trang báo "OTL WiFi Link đã tắt"	Chương trình tự tắt khi trang bị đóng lâu. Mở lại chương trình.
Windows hoặc phần mềm diệt virus chặn tệp	Tệp do O Tesla cung cấp. Chọn **More info** → **Run anyway**, hoặc liên hệ O Tesla để được hướng dẫn.

12 Hỗ trợ từ xa



Thẻ Hỗ trợ từ xa ở cột trái.

- **Thông tin chẩn đoán:** bấm **Chép thông tin chẩn đoán** rồi dán vào Zalo / WhatsApp gửi O Tesla, hoặc **Lưu thành tệp** rồi gửi tệp. Thông tin không chứa mật khẩu wifi.
- **Điều khiển từ xa:** cài UltraViewer hoặc TeamViewer, gửi ID và mật khẩu của phần mềm đó cho O Tesla; kỹ thuật viên điều khiển máy tính của bạn và cài giúp.
- **Chế độ kỹ thuật viên:** chỉ dùng khi O Tesla yêu cầu. Bấm **Chế độ kỹ thuật viên**, gửi **mã thử** hiện trên màn hình cho O Tesla, nhận lại **mã mở**, dán vào ô rồi bấm **Mở khoá**. Mã thử dùng được trong 30 phút.

13 Liên hệ O Tesla

CÔNG TY TNHH CÔNG NGHIỆP O TESLA

Điện thoại: 0936 198 938

WhatsApp: +84 936 198 938

Email: otlpro.com@gmail.com


Website: otlpro.com

Part 2 — English

1 What OTL WiFi Link does

Your O Tesla roaster has a Wi-Fi module that sends temperatures to Artisan. The module gets its IP address from your router; after a power cut or router change the IP may change and Artisan loses the connection. OTL WiFi Link does the work for you:

- **finds** the module on your Wi-Fi and shows its current IP;
- **checks** that the roaster answers, and **fixes** the module when its link speed does not match the roaster;
- **guides you through Artisan setup** and fills the Wi-Fi connection into your Artisan settings file;
- pins the IP, sets a password for the module's own Wi-Fi, and switches the router the module joins;
- **remote support**: send diagnostics to O Tesla, or let an O Tesla technician fine-tune it.

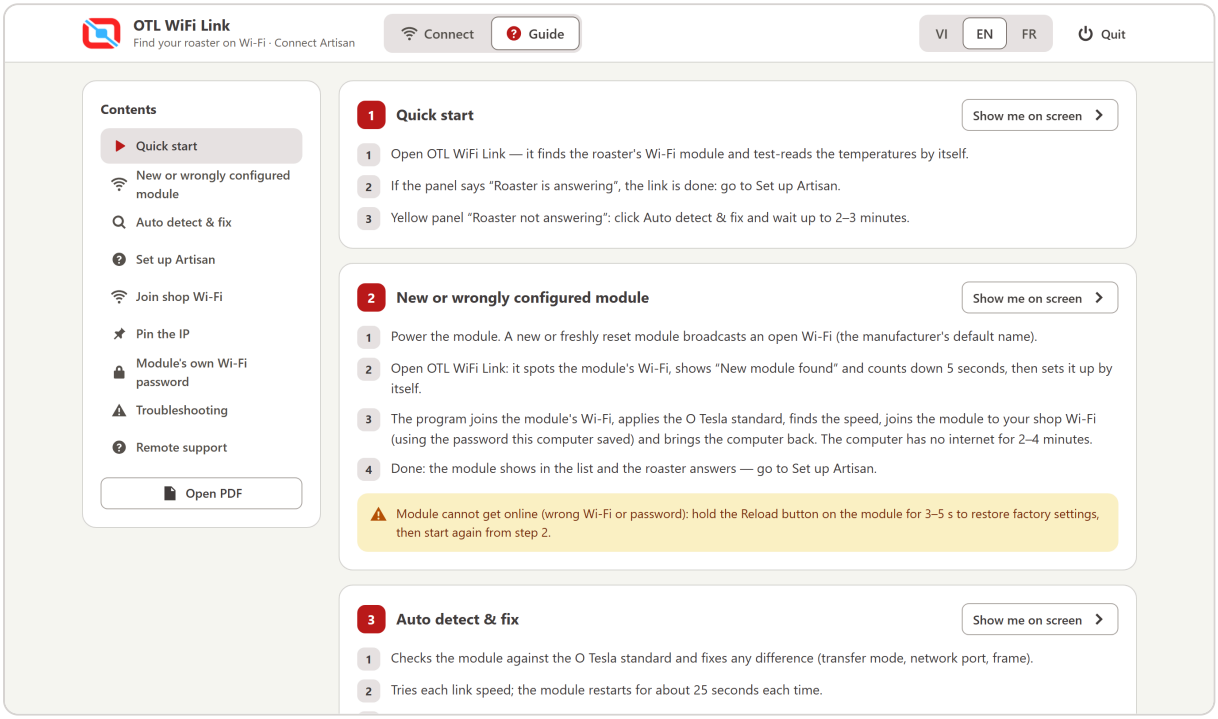

The built-in **Guide** tab: click "Show me on screen" to jump to the right place.

2 Before you start

- The roaster is powered on.
- The computer is on the **same Wi-Fi** as the roaster: your shop Wi-Fi, or the module's own Wi-Fi named **"OTL Roaster"**.
- Windows 10 / 11 or macOS 11 or later.
- From O Tesla: `OTL-WiFi-Link-v1.4.zip` and your machine's Artisan settings file (`.aset`).

In the package	For
`Windows/OTL WiFi Link.exe`	Windows computers
`macOS/`	Mac computers — `OTL WiFi Link.command` and the `app` folder, keep them side by side
`Huong-dan_User-guide.pdf`	This guide
`Guide-utilisateur.pdf`	This guide in French

3 Start on Windows

1. Right-click `OTL-WiFi-Link-v1.4.zip` → **Extract All** → **Extract**.
2. Open the **Windows** folder and double-click **OTL WiFi Link.exe**.
3. If Windows shows *"Windows protected your PC"*: click **More info** → **Run anyway**. The program is not signed by Microsoft, so Windows asks the first time.
4. If Windows Firewall asks for network access: tick both **Private** and **Public** → **Allow access**. Without it the program cannot find the module.
5. OTL WiFi Link opens in your browser (Chrome if installed).


Tip: right-click **OTL WiFi Link.exe** → **Send to** → **Desktop (create shortcut)** to open it quickly next time.

4 Start on macOS

1. Double-click the zip file to extract it and open the **macOS** folder. Keep **OTL WiFi Link.command** and the **app** folder side by side.
2. First time: right-click (or **Control**-click) **OTL WiFi Link.command** → **Open** → **Open**. After that, a double-click is enough.
   On macOS 15 or later there is no **Open** button: click **Done**, go to **System Settings** → **Privacy & Security**, scroll down, click **Open Anyway** and enter your Mac password.
3. If macOS asks to install the *"command line developer tools"* (Python 3): click **Install**, wait until it finishes, then repeat step 2.
4. If macOS asks whether **python3** may *"accept incoming network connections"*: click **Allow**.
5. macOS 15 asks whether **Terminal** may *"find devices on your local network"*: click **Allow**. Clicked **Don't Allow**? The program cannot see the module: open **System Settings** → **Privacy & Security** → **Local Network**, turn on **Terminal**, then start the program again.
6. The page opens in Chrome (or Safari). Keep the Terminal window open while you use it; closing Terminal stops the program.

Double-click does nothing? Open Terminal, type `cd ` (with a space), drag the **app** folder into the Terminal window, press Enter, then type `python3 otl_wifi_link.py` and press Enter.


5 Find your roaster

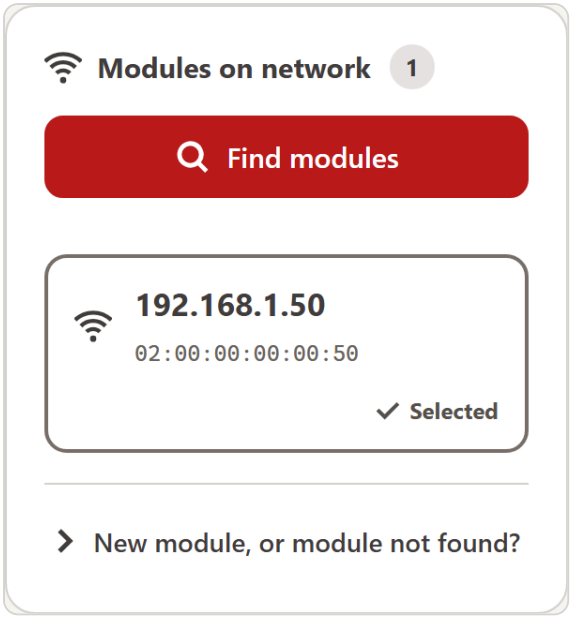

Left panel: the modules found on your network.

The program searches as soon as it opens. Each module found shows its IP (large) and hardware code; with only one module it is selected automatically. Click a tile to select another module, or **Find modules** to search again. No module found: see **section 11**.


6 Auto check & fix

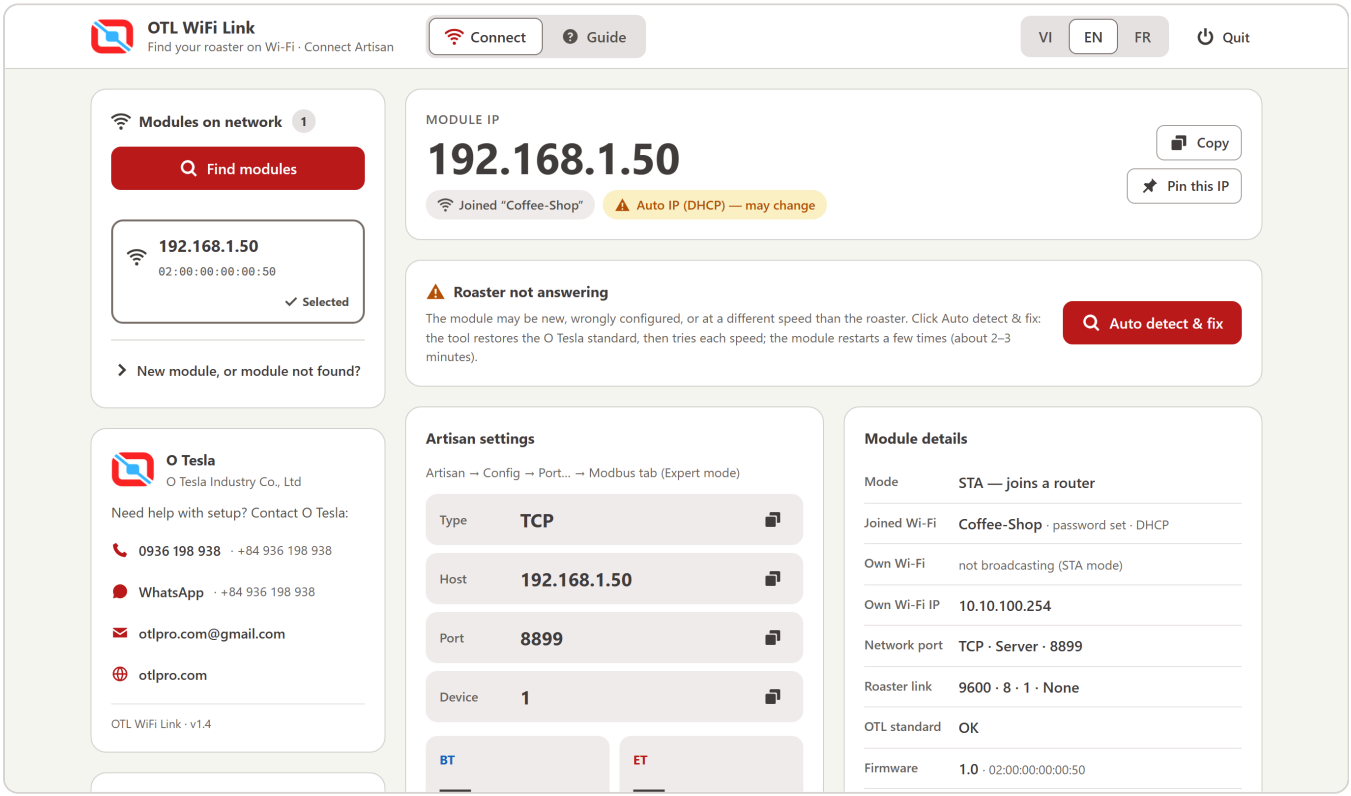

Roaster not answering: the yellow panel explains it and offers Auto detect & fix.

Once a module is selected, the program **test-reads the roaster temperatures** by itself:


- Roaster answers: the panel says *"Roaster is answering — Artisan is ready to use"*. Go to section 7.
- Roaster not answering: click **Auto detect & fix**. The program applies the O Tesla standard, then tries each link speed; the module restarts a few times (about 2–3 minutes). The right speed is kept; if none matches, the module is put back as it was.
- **New or freshly reset module:** just power the module and open OTL WiFi Link. It spots the module's Wi-Fi, shows **"New module found"**, counts down 5 seconds and does everything: joins the module's Wi-Fi, applies the O Tesla standard, finds the speed, joins the module to your shop Wi-Fi (using the password this computer saved) and brings the computer back — about 1.5–4 minutes, during which the computer has no internet. If the computer cannot read the shop Wi-Fi password, the program asks for it.

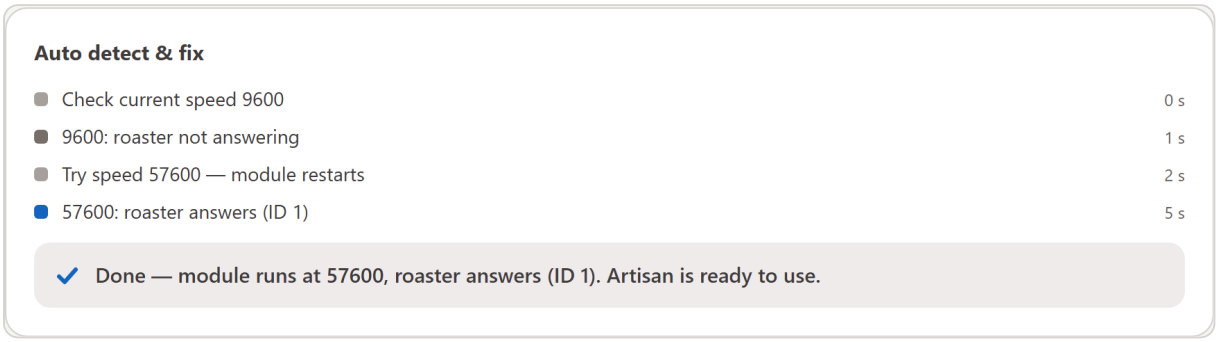

Auto-detect finished: each step taken and the result.

While detecting: keep the page open and the roaster on. If nothing is found, click **Copy diagnostics** and send them to O Tesla (section 12).

7 Set up Artisan

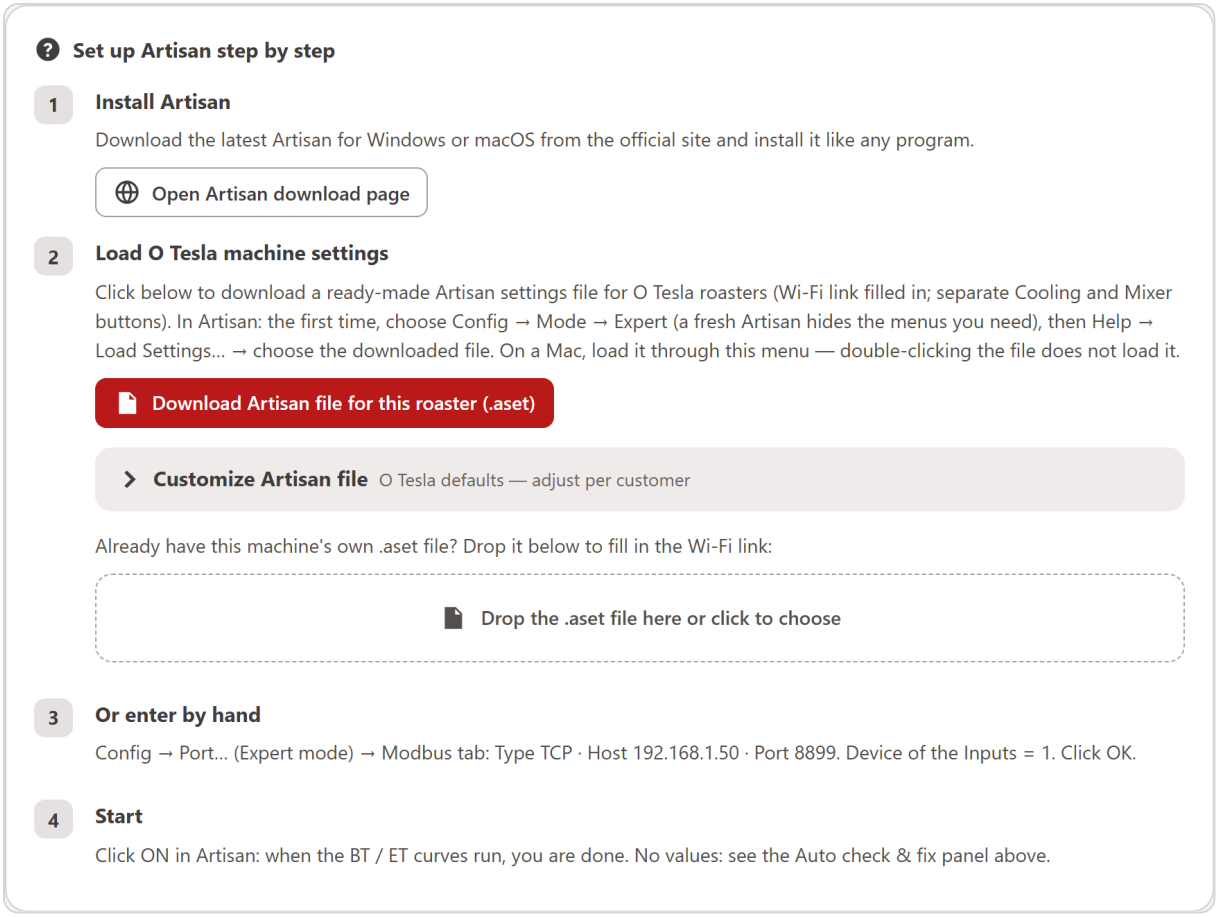

The “Set up Artisan step by step” panel in OTL WiFi Link.


1. **Install Artisan:** click **Open Artisan download page**, download the Windows or macOS version and install it like any program.
2. **Load the machine settings:** click **Download Artisan file for this roaster (.aset)** — a ready-made file for O Tesla roasters with the Wi-Fi link filled in and separate Cooling and Mixer buttons. In Artisan: the first time, choose **Config** → **Mode** → **Expert** (a fresh Artisan starts in Standard mode, without the load item), then **Help** → **Load Settings…** → choose the downloaded file. On a Mac you must use this menu — double-clicking the `.aset` file does not load it. Already have this machine's own `.aset` file? Drop it on the box below the button to fill in the Wi-Fi link.
3. **Customize the file (optional):** open **Customize Artisan file** under the download button to choose: one combined Cooling + Mixer button, hide the ±5 Vacuum buttons, Vietnamese or French button labels, °C / °F, time axis, max temperature on axis, RoR scale, ET curve, auto-detect CHARGE / DROP, auto-save roasts, batch number prefix, weight unit. Your choices are remembered.
4. **Or enter by hand:** in Artisan (Expert mode), **Config** → **Port…** → **Modbus** tab, fill in the values from the **Artisan settings** panel, click **OK**.
5. **Start:** click **ON** in Artisan; when the BT / ET curves run, you are done.

Type	**TCP**
Host	**192.168.1.50** (your IP)
Port	**8899**
Device	**1** (Device of the Inputs)

The fields on Artisan's Modbus tab.

Do not run two Artisans on two computers reading the same roaster at the same time.

8 Test-read temperatures

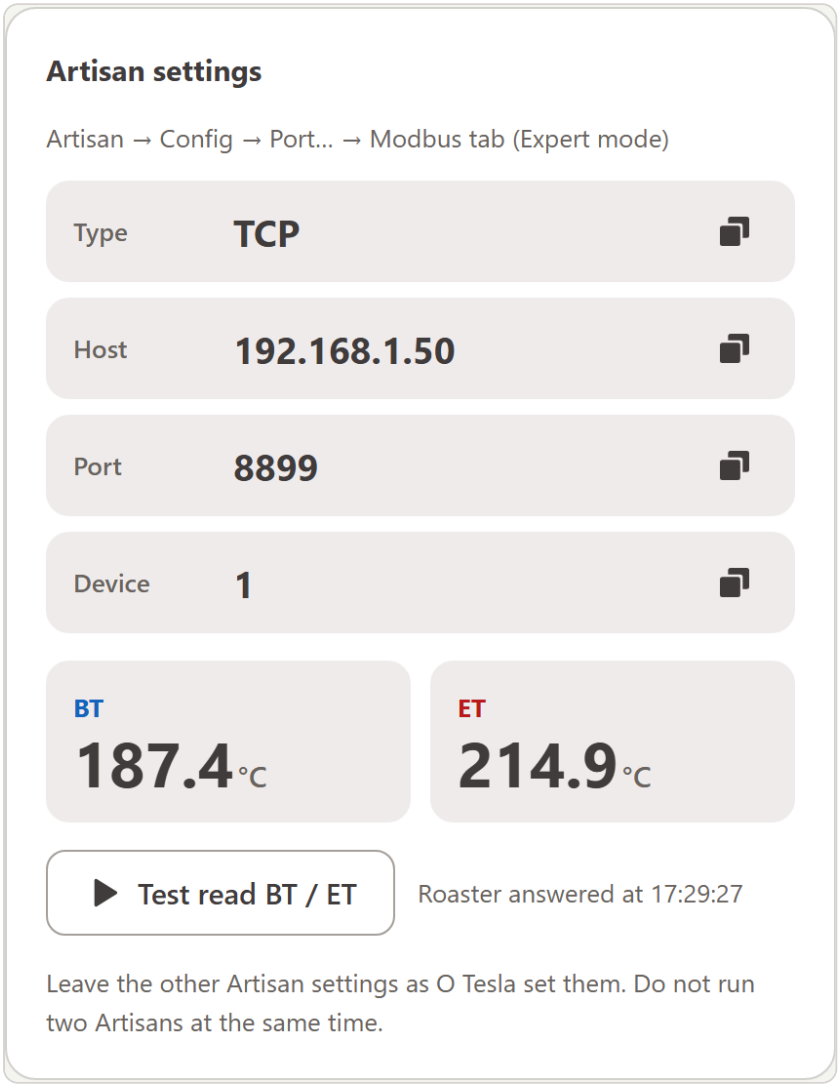


Artisan settings panel: the values to enter and the test temperatures.

Click **Test read BT / ET** any time to check again. Temperatures plus the line *"Roaster answered at ..."* mean the link works. This button only reads; it changes nothing on the roaster.

9 Pin the IP (recommended)

The yellow label **“Auto IP (DHCP) — may change”** means the router assigns the module's IP. After a power cut or router change the IP may differ.


1. Click **Pin this IP** at the right of the IP panel.
2. **Module settings** opens with **Fixed** selected and the current IP filled in.
3. Check the **Will write** box: it lists exactly what will change.
4. Press and **hold** the red **Hold 1 s to write & restart** button until the bar fills it. Holding prevents mis-taps.
5. The module restarts in about 12 seconds; the program searches again and shows the IP.

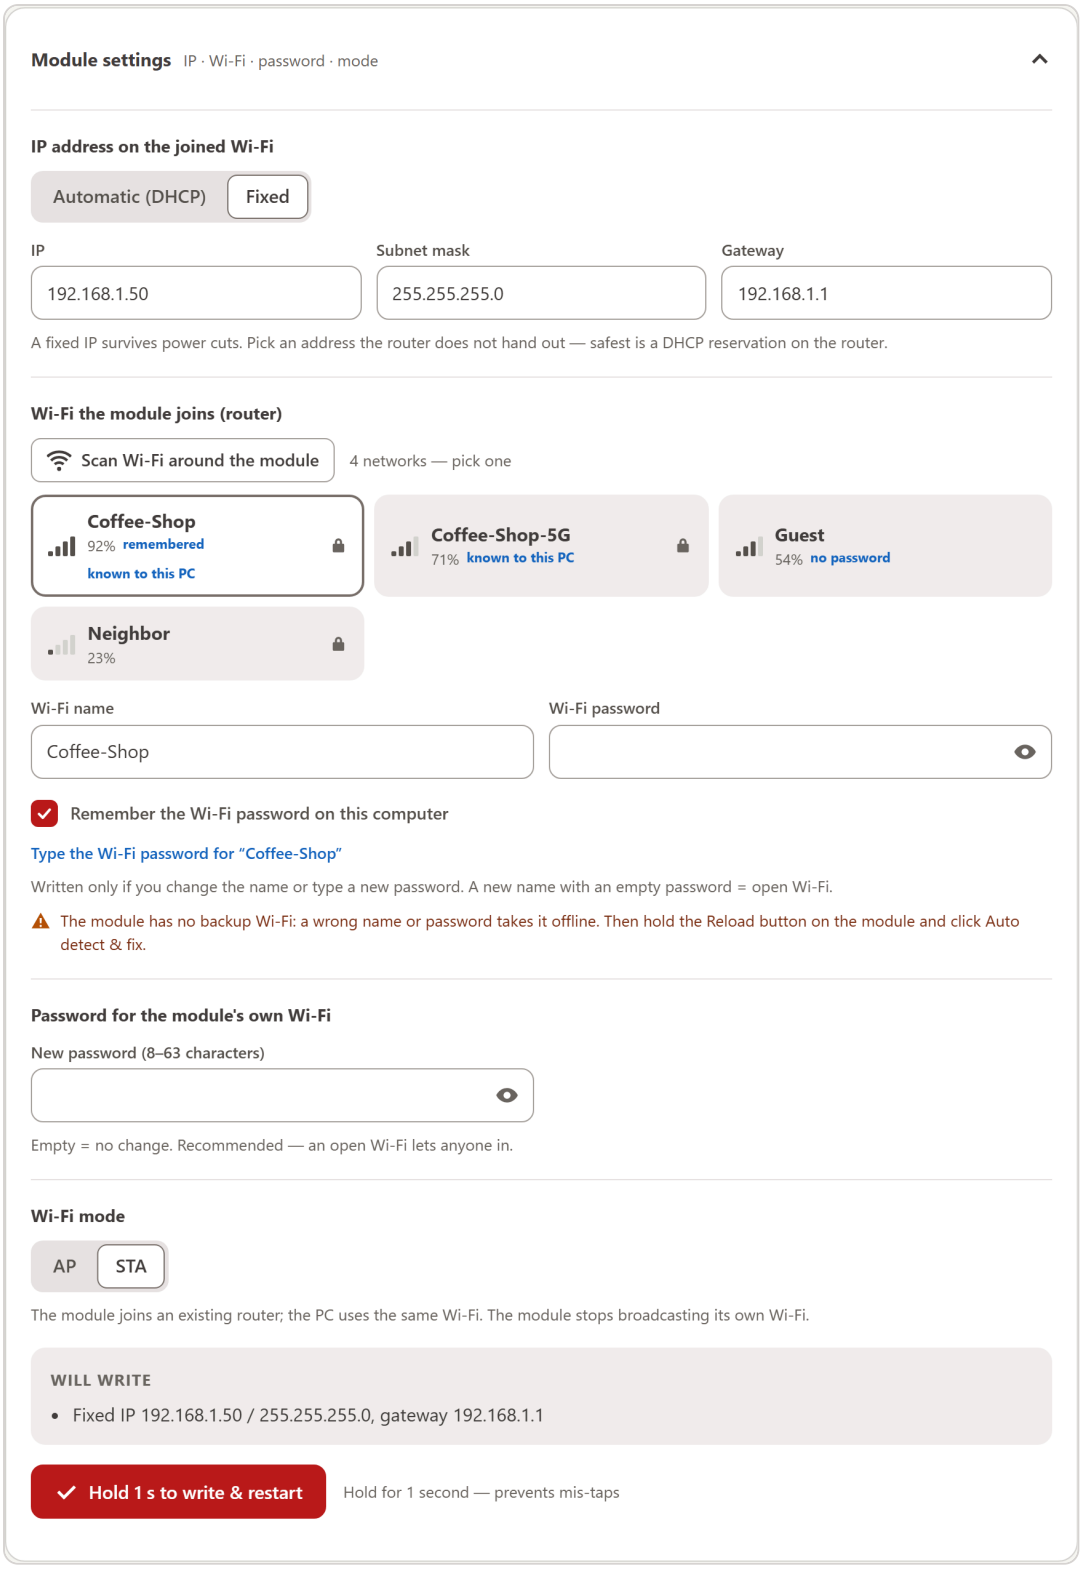

Module settings: IP, the Wi-Fi the module joins, own Wi-Fi password, Wi-Fi mode, "Will write" box and the 1-second hold button.

If your router supports *DHCP reservation*, ask your network administrator to reserve this IP for the module — the most reliable option.

10 Join shop Wi-Fi and own Wi-Fi password

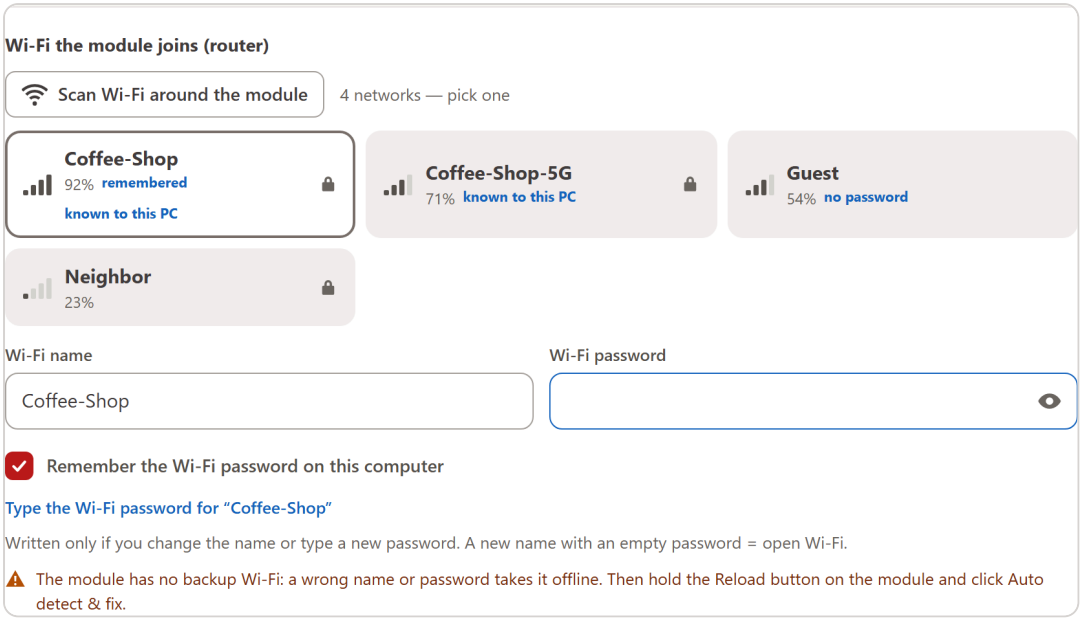

Scan Wi-Fi around the module: pick a network; remembered or PC-known passwords fill in by themselves.


- **Join shop Wi-Fi:** open **Module settings**, click **Scan Wi-Fi around the module** and pick your shop Wi-Fi. Networks tagged *remembered* or *known to this PC* fill in the password; otherwise type it. Keep **Remember the Wi-Fi password on this computer** ticked to fill it in next time (stored encrypted for your computer account). Hold the write button for 1 second; the module restarts and joins the shop Wi-Fi. Join the same Wi-Fi on the computer and click **Find modules**.
- **Own Wi-Fi password:** the module's "OTL Roaster" Wi-Fi has no password at first. Type a password of 8–63 characters in **Password for module's own Wi-Fi**, then hold the write button for 1 second. Keep the password somewhere safe.
- **Wi-Fi mode: AP** — the module broadcasts "OTL Roaster", the computer joins it, no router needed. **STA** — the module joins your shop Wi-Fi (switched automatically when you pick a shop Wi-Fi).

Note: the module has no backup Wi-Fi — a wrong Wi-Fi name or password keeps it off the network. Then hold the module's **Reload** button for 3–5 seconds and follow section 6 (new module).

11 Troubleshooting

Symptom	What to do
No module found	The computer and roaster must be on the same Wi-Fi, and the roaster powered on. Try joining "OTL Roaster" and click **Find modules**. On Windows: allow OTL WiFi Link through the firewall (section 3). On a Mac: turn on **Terminal** under **Local Network** (section 4).
Artisan has no Load Settings… or Port… item	Artisan is in Standard mode: choose **Config** → **Mode** → **Expert**.
New module, or it cannot get online	Hold the module's **Reload** button for 3–5 seconds to restore factory settings, then open OTL WiFi Link: it sets everything up again (section 6).
"Roaster not answering"	Check that the roaster is on, then click **Auto detect & fix** (section 6). If nothing is found, send diagnostics to O Tesla.
"Found by TCP sweep" label	This Wi-Fi blocks setup packets, so only the IP is available. Artisan works normally. To change settings or auto-fix, join "OTL Roaster" and search again.
Artisan shows a connection error	Open OTL WiFi Link and compare the IP with Artisan's Host. Type must be **TCP**, Port **8899**. Quickest: drop the `.aset` file again in section 7.
"OTL WiFi Link has stopped"	The program stops by itself when its page has been closed for a while. Start it again.
Windows or antivirus blocks the file	The file comes from O Tesla. Choose **More info** → **Run anyway**, or contact O Tesla for help.

12 Remote support

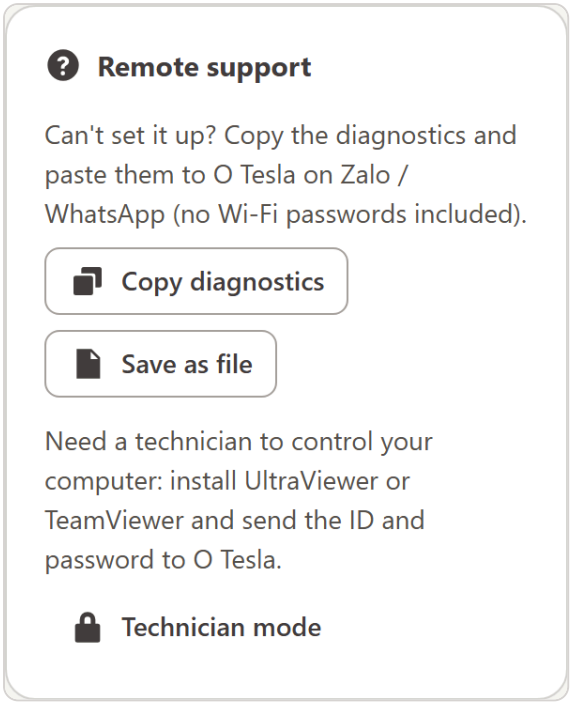

The Remote support panel in the left column.

- **Diagnostics:** click **Copy diagnostics** and paste them to O Tesla on Zalo / WhatsApp, or **Save as file** and send the file. No Wi-Fi passwords are included.
- **Remote control:** install UltraViewer or TeamViewer and send its ID and password to O Tesla; a technician will operate your computer and set things up.
- **Technician mode:** only when O Tesla asks. Click **Technician mode**, send the **challenge** shown on screen to O Tesla, receive the **unlock code**, paste it and click **Unlock**. A challenge is valid for 30 minutes.

13 Contact O Tesla

O Tesla Industry Co., Ltd

Phone: +84 936 198 938

WhatsApp: +84 936 198 938

Email: otlpro.com@gmail.com

Website: otlpro.com