



MOKO SMART



Passive infrared



Hall sensor

User Guide

MOKO PIR PRESENCE

Version 1.3

Revision History

Version	Date	Notes	Contributor(s)
V1.0	April 17, 2022	Initial version	Daniel
V1.1	May 31, 2023	1. Revise the door status indication description in chapter 2.3.2.2 .	Daniel
V1.2	Dec 24, 2024	1. Revise the description of hardware reset – “long press button won’t restore the password” in chapter 5.4 – How to restore factory settings .	Daniel
V1.3	June 9, 2025	1. Revise the descriptions of “Delay response level (delay time)” in “ chapter 2.3.2.1 passive infrared sensor ”.	Daniel

About document

This User Guide was designed to help users to know the overview of **MOKO PIR PRESENCE** product and set up **MOKO PIR PRESENCE** through **MOKO standard Android “MK PIR” APP**. Through this document, users will be initial to know the hardware specifications, installation guidance, application scenarios of PIR device and APP user guidance, which including connection, parameters configuration of Beacon advertisement, DFU update and etc.

This guide will not cover the sales administration and the ordering process. Some technical guides will be needed if further explanation is required.

- Applicable version description:

Android APP Version: “MK PIR” V1.0.0 or above

Firmware Version: PIR_V1.0.3 or above

- Each figure (diagram, screenshot, or other image) and table are provided with a number and description:

Figure 1: Typical application scenario of PIR PRESENCE

Table 1: Packing list of PIR PRESENCE

The numbers and descriptions of the figure and table can be found in the “List of Figures” and “List of Tables”.

Table of Contents

1. Overview.....	6
2. Getting to know PIR PRESENCE	7
2.1 What's in the box.....	7
2.2 Appearance.....	7
2.2.1 Dimensions.....	7
2.2.2 Function identifications.....	7
2.3 Specifications.....	8
2.3.1 General specifications.....	8
2.3.2 Sensor Specifications.....	8
2.3.3 Battery consumption.....	9
2.3.4 LED descriptions.....	9
3. How the PIR PRESENCE works?.....	10
3.1 PIR Motion detection	10
3.2 Door open/close status detection	11
3.3 Bluetooth advertisement	11
4. Application scenarios	13
5. Basic instructions	14
5.1 How to install PIR PRESENCE ?.....	14
5.2 How to power ON/OFF PIR PRESENCE ?	14
5.3 How to replace battery ?	15
5.4 How to restore factory settings ?.....	15
6. MOKO PIR APP user guidance	16
6.1 Discover your PIR device	16
6.1.1 Scanning your PIR device	16
6.1.2 Filtering your PIR device.....	16
6.2 Connect with your PIR device.....	17
6.3 Getting your PIR device to broadcast	17
6.3.1 Setting up advertisement content.....	18
6.3.2 Setting up advertising parameters.....	19
6.4 Access to PIR and Hall sensor	19
6.5 Modify connection password.....	20
6.6 Switch your PIR device to unconnectable	20

6.7	Disable button power off function	21
6.8	Remote turn off your PIR device	21
6.9	Remote reset your PIR device	21
6.10	Check your device information	21
6.11	Upgrade your device's firmware.....	22
6.12	Obtain log file from Android APP.....	22

List of Figures

Figure 1:	Typical application scenario of PIR PRESENCE.....	6
Figure 2:	Dimensions of PIR PRESENCE	7
Figure 3:	Detection range of PIR sensor	9
Figure 4:	Workflow of motion detection in PIR PRESENCE	10
Figure 5:	How to check door's status in the advertisement?.....	11
Figure 6:	Example content of Beacon advertisement.....	12
Figure 7:	How to install PIR PRESENCE?	14
Figure 8:	How to power on/off PIR PRESENCE?.....	14
Figure 9:	How to replace battery in PIR PRESENCE?.....	15
Figure 10:	How to reset your PIR PRESENCE?.....	15
Figure 11:	QR Code for downloading Android "MK PIR" APP.....	16
Figure 12:	Default scanning preview of PIR PRESENCE	16
Figure 13:	Configurations of scanning filter settings.....	17
Figure 14:	Configuration interface overview of main screen in "MK PIR" APP	18
Figure 15:	How to configure advertising content?	18
Figure 16:	How to configure advertising parameters?.....	19
Figure 17:	Configurations of PIR and Hall sensor	20
Figure 18:	Switch your PIR device to unconnectable status	20
Figure 19:	Disable "button power off" function	21
Figure 20:	Remote power off your PIR device.....	21
Figure 21:	Firmware upgrade workflow of "MK PIR" APP (Android).....	22
Figure 22:	Obtain log file from "MK PIR" APP	22

List of Tables

Table 1:	<i>Packing list of PIR PRESENCE</i>	<i>7</i>
Table 2:	<i>General specifications of PIR PRESENCE</i>	<i>8</i>
Table 3:	<i>Specifications of PIR sensor</i>	<i>9</i>
Table 4:	<i>Specifications of Hall sensor</i>	<i>9</i>
Table 5:	<i>Battery consumption of PIR PRESENCE.....</i>	<i>9</i>
Table 6:	<i>LED response status in various situations.....</i>	<i>9</i>
Table 7:	<i>Content structure of Customized-PIR advertising packet</i>	<i>12</i>
Table 8:	<i>Content structure of Customized-Device info response packet.....</i>	<i>12</i>

1. Overview

The MOKO PIR Sensor, which called “**PIR PRESENCE**” is a battery-powered BLE4.2 product with passive infrared (PIR) sensor that provides real-time occupancy, presence detection as well as space utilization data for Enterprise IoT applications. The “**PIR PRESENCE**” is designed for workplace and conference room monitoring and captures even the small movements of people working at desks.

Integrated with passive infrared sensor, **PIR PRESENCE** can be utilized in smart lighting control, facility management and occupancy detection in various places such as offices, hospitals ,warehouse or intrusion alarm at home. Thanks to the outstanding low consumption of Bluetooth LE and large capacity of battery, **PIR PRESENCE** can be working continuously up to 5 years without replace battery.



Figure 1: Typical application scenario of PIR PRESENCE

2. Getting to know PIR PRESENCE

2.1 What's in the box

You will find the following items per PIR PRESENCE unit in the packing box:

Item	Quantity	Remark
PIR PRESENCE	1	Main product
Bracket	1	Wall-mounted holder
Screw suit	1	2*Screw + 2*expansion rubber plug
3M Sticker	1	3M Sticker

Table 1: Packing list of PIR PRESENCE

Remark: Packing method can be customized vary from different orders.

2.2 Appearance

2.2.1 Dimensions

Here we have described the dimensions of *PIR PRESENCE* as below:


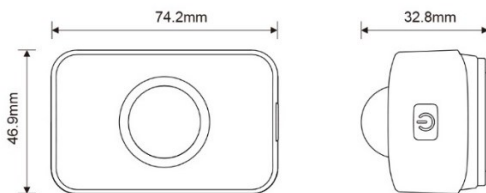


Figure 2: Dimensions of PIR PRESENCE

2.2.2 Function identifications

The *PIR PRESENCE* product's function identifications are shown in the figure below:

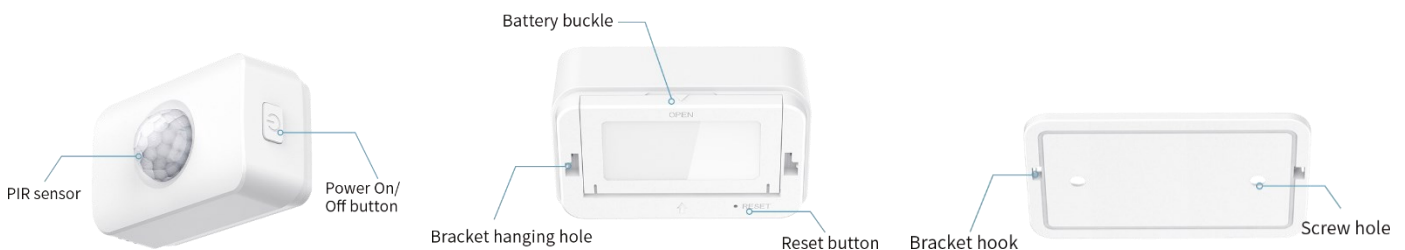

- **Power On/Off button** – Push the button to turn on or turn off the product.
- **PIR sensor** – Motion detection part which include PIR sensor and Fresnel lens.
- **Reset button** – Insert a needle-like object into the hole and long press the button to reset the product.

- **Battery buckle** – Open battery room and replace battery through this buckle.
- **Bracket hook/Bracket hanging hole** – Attach the PIR product to the bracket through the hanging hole and hook.
- **Screw hole** – Fixed product to the walls with screws through these screw holes.

2.3 Specifications

2.3.1 General specifications

General specifications	
Main chip	Nordic nRF52 series
Wireless connectivity	Bluetooth 4.2(Hardware compatible with Bluetooth 5.1)
Dimensions	74.2mm * 32.8mm * 46.9mm
Weight	83g
Material	PC+ABS
Advertising range	Up to 140 meters (in the open area and no obstacles)
IP rating	IP40
Color	White
Installation	Screw, Sticker
Button	Power On/Off button Reset button (hole)
LED	Red LED
Built-in sensor	Passive infrared sensor Hall sensor
Operating temperature	-20°C / + 60°C
Storage temperature	-20°C / + 60°C (without battery) 10°C / + 25°C (with battery)
Storage humidity	0% ~ 95% (non-condensing)
Antenna type	PCB on-board antenna
Power supply	Replaceable 2*AA battery (in parallel) 5200mAh capacity
Certification	CE, FCC and RoHS, REACH compliant

Table 2: General specifications of PIR PRESENCE

2.3.2 Sensor Specifications

2.3.2.1 Passive infrared sensor (PIR)

PIR sensor specifications		
Type	Item	Specifications
General parameters	Viewing angle	Horizontal: 120° Vertical: 60°
	Motion detection distance	12m in maximum
	Fresnel lens diameter	24mm
	Recommended installation height	2.4m – 3.0m
Configurable parameters	Sensitivity level	Low – 5m

PIR sensor specifications		
		Middle – 8m High – 12m
	Delay response level (delay time)	Low – 2s Middle – 10s High – 30s

Table 3: Specifications of PIR sensor

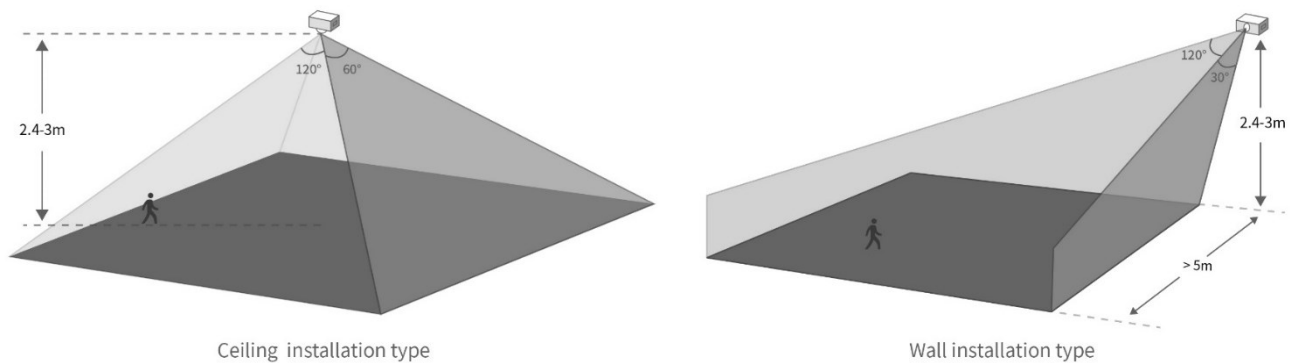


Figure 3: Detection range of PIR sensor

2.3.2.2 Hall sensor

Hall sensor specifications	
Detection distance	20mm
Recommended installation gap	< 10mm
Status indication	Magnet away (Door open): 1 Magnet approaching (Door closed): 0

Table 4: Specifications of Hall sensor

2.3.3 Battery consumption

Battery consumption		
Adv interval	Tx Power	Consumption
1000ms	-12dBm	38.31uA

Table 5: Battery consumption of PIR PRESENCE

Remark: PIR status and hall sensor status will not affect the battery consumptions in a way.

2.3.4 LED descriptions

LED response status	
Power ON	Blinking for 2 seconds
Power OFF	Solid for 2 seconds
Hardware/Software reset	Blinking for 2 seconds and then device reboot
Low battery	Blinking 2 times every 10 seconds
Device connect	Blinking for 2 seconds
DFU upgrade	Blinking during DFU and blinking for 2 seconds to reboot

Table 6: LED response status in various situations

3. How the *PIR PRESENCE* works?

The *PIR PRESENCE* is based on passive infrared (PIR) as well as hall sensor, to detects changes in heat sources within its range (i.e., humans in motion) and hall sensor status respect to magnet (i.e., door closed/open). The typical logical is to detects the human movements as well as the hall sensor status, and then upload the behavior to the gateway node through BLE advertisement. So we will describe PIR motion detection, door open/close status detection and BLE advertisement separately.

3.1 PIR Motion detection

When the PIR sensor detected human movements, then it will output high level and device will report “1” in the BLE advertisement to the gateway for processing and delivery to cloud services.

Below we have described the workflow of motion detection in *PIR PRESENCE*.

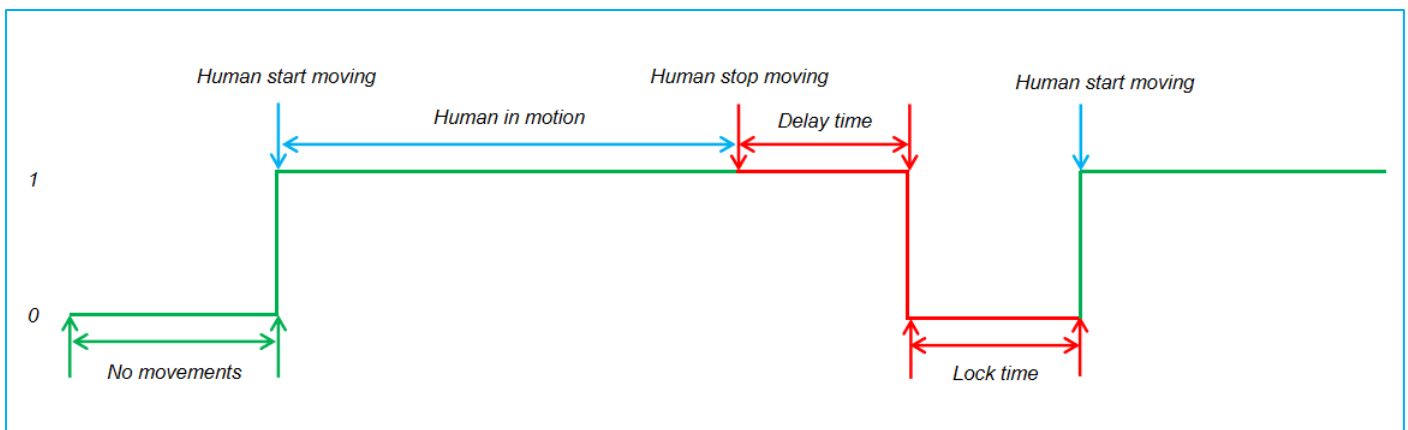


Figure 4: Workflow of motion detection in *PIR PRESENCE*

In above workflow, there have two important parameters related to working principle of PIR sensor that need to be paid more attention.

- **Delay time*** – The time duration during which the output remains high after detecting human movements. In other words, it can be configured and determines how long the PIR will keep high level after not detecting human movements. The minimum delay time that we can set currently is 2 seconds (delay – low level), and we have provided three levels of delay time for you to pre-set and adapt to different scenarios.

You can refer to [“chapter 6.4 – Access to PIR and Hall sensor”](#) >> “Delay” to configure this value.

- **Lock time** – The time duration during which the PIR trigger is inhibited. In other words, the PIR will keep low level during this period even though human movements are detected. This duration is fixed 2 seconds and cannot be changed in current hardware design.

***Remark:** Delay time is highly related to hardware design. In current hardware design, delay time is also fixed and only have three levels available for you to pre-set. So if you want to get more delay response level or modify it, you can contact with us to do hardware modifications.

3.2 Door open/close status detection

In *PIR PRESENCE*, we have also integrated with hall sensor (need to be applied together with magnet accessory) to monitor the door's open/close status.

You can refer to [“chapter 4.1 – How to install PIR PRESENCE”](#) to install the *PIR PRESENCE* as well as magnet accessory. When magnet is approaching to hall sensor and distance is less than 20mm, hall sensor will output high level and device will report “1” in the BLE advertisement to the gateway for processing and delivery to cloud services.



Figure 5: How to check door's status in the advertisement?

3.3 Bluetooth advertisement

In last chapter, we have mentioned that the PIR PRESENCE is uploading the sensor status or other basic information through BLE advertisement, and those basic information can also be configured through MOKO “MK PIR” APP. Before introducing the APP user manual, we will guide you to full understand the PIR advertisement format and content parsing rules.

Regarding of PIR series firmware, there have only one customized advertisement format, which is a combination of *ADV_IND* (Advertising packet) and *SCAN_RSP* (Scan response packet). In the next we will describe the detailed information of these two packets.

- **ADV_IND (advertising packet)** ---- Mainly to express status of PIR and hall sensor, battery voltage, Major, Minor and etc.
- **SCAN_RSP (scan response packet)** ---- Mainly to express Tx power and device name.

Below picture showed the example content of Beacon advertisement:

Raw data:

```
0x0201041AFF0A6202150900F15427E
0304F16031E0D3A190E0A0000000B
0020AF410094D6B69426561636F6E5
F3030303030
```

Details:

	LEN.	TYPE	VALUE
ADV_IND Packet	2	0x01	0x04
	26	0xFF	0x0A6202150900F15427E0304F16031E0D3A190E0A0000000B0
SCAN_RSP Packet	2	0x0A	0xF4
	16	0x09	0x4D6B69426561636F6E5F3030303030

LEN. - length of EIR packet (Type + Data) in bytes.
TYPE - the data type as in [Generic Access Profile.pdf](#)

OK

Figure 6: Example content of Beacon advertisement

Advertising Format - ADV_IND packet				
Example	Parameters		Descriptions	Length
0x02	ADV Length		ADV length of "Flags" content	1 byte
0x01	ADV Type		ADV type: Flags	1 byte
0x04	Beacon Type		BR/EDR not supported	1 byte
0x1A	ADV Length		ADV length of "Manufacturer data" content	1 byte
0xFF	ADV Type		ADV type: Manufacturer data	1 byte
0x0A 62	Company ID		Value = 0x0A 62(MOKO TECHNOLOGY Ltd)	2 bytes
0x02	iBeacon Type		Value = 0x02 (Proximity beacon, fixed value)	1 byte
0x15	iBeacon Length		Value = 0x15 (21 bytes)	1 byte
0x09	Device status	RFU	Occupy 2 bits (bit 6 - bit 7), Reserved for future use	1 byte(2 bits)
		PIR delay response status	Occupy 2 bits (bit 4- bit5). 10: High delay ; 01: Medium delay ; 00: Low delay	1 byte(2 bits)
		Door Open/Close status	Occupy 1 bit (bit 3). 0: Close (Door magnetic approaching); 1: Open (Door magnetic away)	1 byte(1 bits)
		PIR sensor sensitivity	Occupy 2 bits (bit 1- bit2). 10: High sensitivity ; 01: Medium sensitivity ; 00: Low sensitivity	1 byte(2 bits)
		PIR sensor detection status	Occupy 1 bit (bit 0). 0: No effective motion detected ; 1: Effective motion detected	1 byte(1 bit)
0x00	RFU		1 byte reserved for future use , default 0x00	1 byte
0xF1 54 27 E0 30 4F	MAC address		6 bytes MAC address, read from chipset	6 bytes
0x16 03 1E 0D 3A 19	Timestamp		Timestamp format : YY/MM/DD/HH:MM:SS (Content parse: 21/03/30/13:58:25)	6 bytes
0x0E 2A	Battery voltage		Unit: mV. (HEX to DEC) (Content parse: 3626mV)	2 bytes
0x00 00	Major		Can be customized as dividing device group	2 bytes
0x00 00	Minor		Can be customized as device ID	2 bytes
0xB0	RSSI@1m		Calibrated RSSI at 1m, Range: -100dBm ~ 0dBm (Content parse: -80dBm)	1 byte

Table 7: Content structure of Customized-PIR advertising packet

Advertising Format - SCAN_RSP packet				
Example	Parameters		Descriptions	Length
0x02	ADV Length		ADV length of "Tx Power" content	1 byte
0x0A	ADV Type		ADV type: Tx Power	1 byte
0xF4	Tx Power		1 byte signed integer, unit: dBm. (Content parse: -12dBm)	1 byte
0x10	ADV Length		ADV length of "Complete Local Name" content	1 byte
0x09	ADV Type		ADV type: Complete Local Name	1 byte
0x4D 6B 69 42 65 61 63 6F 6E 5F 30 30 30 30 30	Complete Local name	Device name	1-10 bytes characters, comply with US-ASCII standard. (Content parse: MkdBeacon_)	1-10 bytes
		Serial ID	1-5 bytes decimal numeral, Configuration range: 0 - 99999 (Content parse: 00000)	1-5 bytes

Table 8: Content structure of Customized-Device info response packet

4. Application scenarios



Smart lighting

Combine with smart lighting IOT devices and deployed in offices, conference room or warehouse, PIR PRESENCE mounted to a ceiling or fixture will control the lighting between shelves -- so that lighting in unoccupied areas will turn off or turn to a lower level.



Intrusion alarm

Notify the owner of first signs of home intrusion by detecting the human movements, with its high sensitivity passive infrared sensor. As well to acted as a doorkeeper to monitor door/window's states through its hall sensor.



Occupancy detection

By detecting the presence of people in real time, PIR PRESENCE allow organizations to understand which spaces get the most use, or know which desks or meeting rooms are available at any one time, thus making space usage more efficiently.



On-site Presence monitoring

Deploy PIR PRESENCE underside of a table to monitor on-site situations and calculate working efficiency. When worker leaves, no movement and then PIR PRESENCE reports value 0, and reports value 1 when worker is on-site.

5. Basic instructions

5.1 How to install *PIR PRESENCE* ?



Figure 7: How to install *PIR PRESENCE*?

5.2 How to power ON/OFF *PIR PRESENCE* ?

Regarding of *PIR PRESENCE*, you can power on/off it through the side button with below operations:

- **Power ON:** Long press button for more than 3 seconds, and red LED will keep blinking for 2 seconds.
- **Power OFF:** Long press button for more than 3 seconds, and red LED will keep solid for 2 seconds.



Figure 8: How to power on/off *PIR PRESENCE*?

5.3 How to replace battery ?

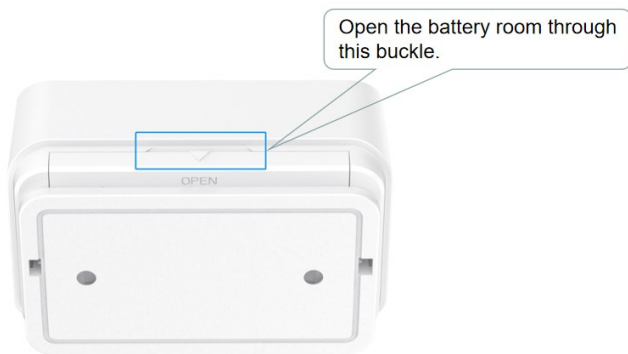


Figure 9: How to replace battery in PIR PRESENCE?

5.4 How to restore factory settings ?

There have two ways to restore factory settings.

➤ **Reset button (Hardware reset):** Insert needle-like object into the reset hole to reset.

➤ **“MK PIR” APP Or Power Button (Software reset):**

Option 1 - Connect PIR PRESENCE with “MK PIR” APP and then execute “Remote reset” operations to finish the software reset.

Option 2 – In power off status, long press button for more than 10s (during this period, LED will blink to indicate the device ON, please ignore and keep long press) and then release when you see the LED solid lightening, to finish the software reset.

Remark: Software reset will not reset connection password.



Figure 10: How to reset your PIR PRESENCE?

6. MOKO PIR APP user guidance

This user guidance for “MK PIR” APP is based on version 1.0.3 or above (only android application available now), and the contents of this user guidance are subject to change without prior notice for further improvement. For latest APP, please scan below QR code or search “MK PIR” and download from Google play store.

Figure 11: QR Code for downloading Android “MK PIR” APP

6.1 Discover your PIR device

The smartphone with “MK PIR” APP installed can be as a *Bluetooth Center* to scan and discover the advertisement packets of Bluetooth Low Energy (BLE) Beacons, and it will provide multiple strategies to filter the Bluetooth packets and that can help you to capture the required BLE peripherals directly and quickly.

6.1.1 Scanning your PIR device

When entering into the “**SCANNING PREVIEW**” interface, the *SCANNER* will start scanning and list all surrounding advertising Bluetooth LE peripherals which integrated with MOKO PIR series firmware, and you can stop scanning manually by pressing scanning button “↺”.


In this *SCANNER* interface, you will see device advertisement preview to recognize your Beacon device. To distinguish specific type of Beacons separately, only PIR device can be shown in the APP preview interface and others will be filtered automatically. Below picture shows the default scanning preview of *MOKO PIR PRESENCE* device.



Figure 12: Default scanning preview of PIR PRESENCE

6.1.2 Filtering your PIR device

To find your PIR device quickly, we have provided multiple strategies to filter among mass Beacon devices, users may narrow your device list by BLE name, MAC address and RSSI value through “**Edit Filter**” option.

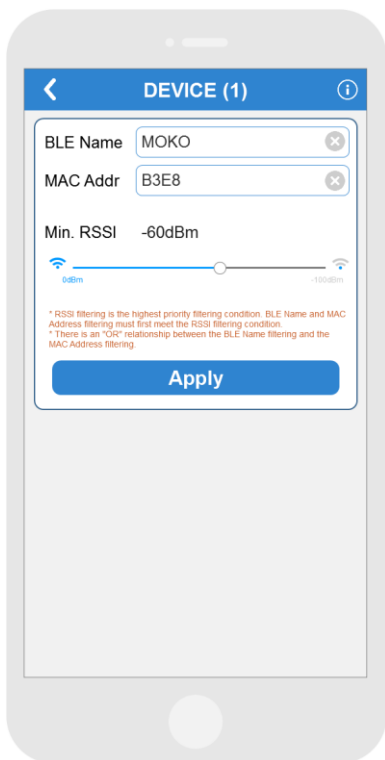

BLE Name	Allow to input 1-10 characters. Example: Only PIR devices whose BLE name contain "MOKO" will be displayed in SCANNER interface. NOTE: Space effective, and case-insensitive as well.
Mac Addr	Allow to input 1-6 bytes (HEX). Example: Only PIR devices whose Mac address contain "B3:E8" will be displayed in SCANNER interface. NOTE: There is no need to input colon between MAC address in search filter column, and case-insensitive as well.
Min.RSSI	Only the advertisement packets with RSSI not less than the Min.RSSI value will be displayed in SCANNER interface , and configuration range is -100dBm to 0dBm. Example: When setting the Min.RSSI value to -70, the ADV packets with RSSI of -70dBm or greater than -70dBm will be list in SCANNER interface.

Figure 13: Configurations of scanning filter settings

NOTE:

- ① RSSI is the highest priority filtering condition. It means that filtered device must meet the RSSI filtering condition.
- ② There is an "OR" relationship between BLE Name and Mac Addr. It means that filtered device just need meet one of the filtering conditions.

6.2 Connect with your PIR device

For PIR devices, if the status is connectable, then it will shows "**CONNECT**" button in the "**SCANNING PREVIEW**" interface. You can follow below steps to connect with your Beacon device:

Step 1: Press "**CONNECT**" button, red LED will blink 2seconds rapidly.

Step 2: Input connection password and then press "**OK**" button, red LED will blink 2seconds rapidly again.



Notice – Default password in MOKO standard firmware is "Moko4321".

6.3 Getting your PIR device to broadcast

Once device connected and the main screen of the "MK PIR" APP appears, including **ADVERTISEMENT interface**, **SETTING interface** and **DEVICE interface**.

Remark: If there are no write/read operations within 2 minutes after device connected, then it will be disconnected automatically to save power consumption.

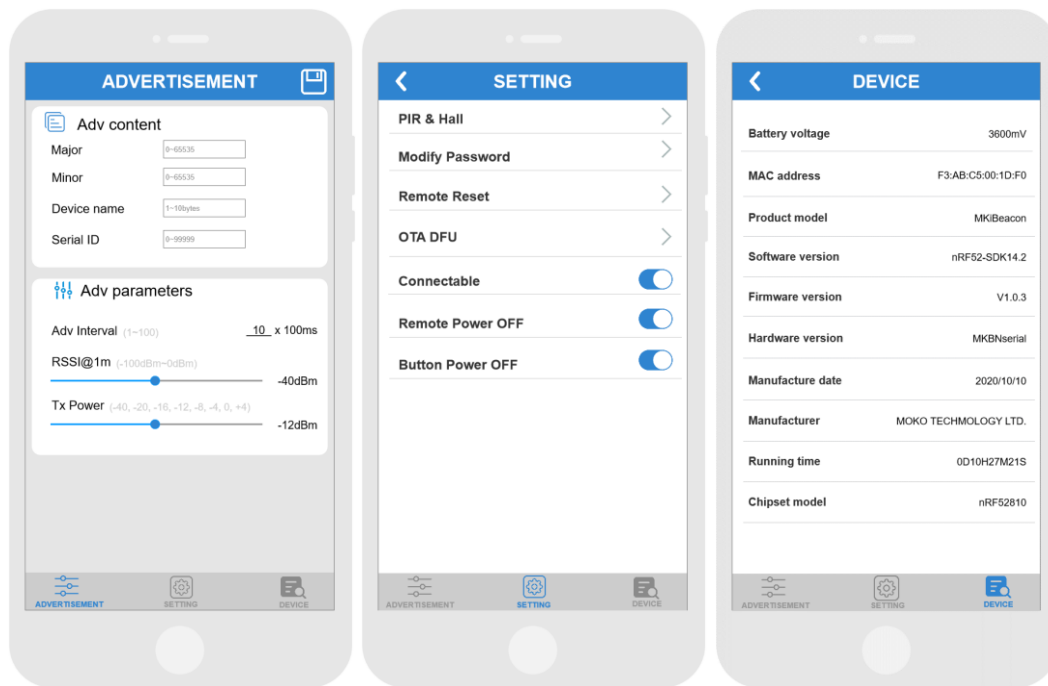


Figure 14: Configuration interface overview of main screen in “MK PIR” APP

6.3.1 Setting up advertisement content

After you connected with device, then you can go to “**ADVERTISEMENT** >>> **Adv content**” part to configure the corresponding advertisement content. Details are as below.

Adv content

Major

0~65535

Minor

0~65535

Device name

1~10bytes

Serial ID

0~99999

Figure 15: How to configure advertising content?

- **Major** ---- You can defined the type value as you want in practical scenario, such as dividing region, group or etc. Configuration range: 0-65535
- **Minor** ---- You can defined the type value as you want in practical scenario, such as specific room, device or etc. Configuration range: 0-65535
- **Device name** ---- ASCII characters within 10 bytes.
- **Serial ID** ---- Serial ID from 0 to 99999.

Remark: Complete local name is a combination of “Device name” and “Serial ID”. For instance, if you have set “PIR” as device name, and “00001” as serial ID, then it will shows “PIR00001” in the preview interface. Or if you checked with “nRF Connect” APP, the complete local name will shows “PIR00001”.

6.3.2 Setting up advertising parameters

After you connected with device, you can also go to “**ADVERTISEMENT >>> Adv parameters**” part to configure the corresponding advertisement parameters. Details are as below.

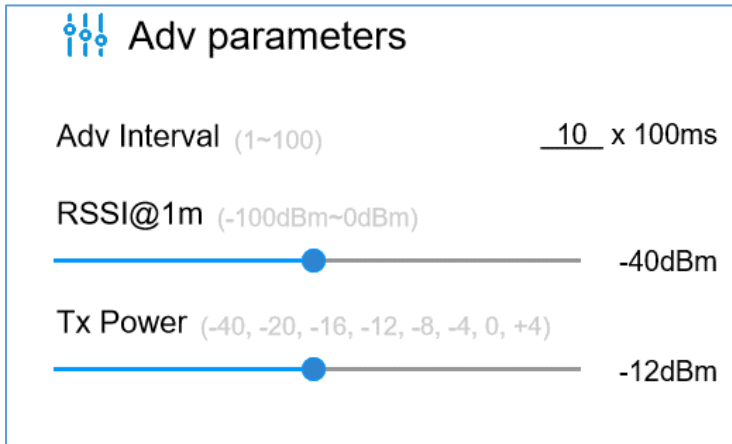


Figure 16: How to configure advertising parameters?

- **Adv Interval** ---- The time between advertising packets. Configuration range: 100ms – 10000ms.
- **RSSI@1m** ---- Value that declares to receiving devices what the power should be at 1m distance from the Beacon. Configuration range: -100dBm – 0dBm.
- **Tx Power** ---- Output power in number of dBm. Configuration level: -40/-20/-16/-12/-8/-4/0/+4 dBm.

6.4 Access to PIR and Hall sensor

Regarding of PIR PRESENCE product, currently we have adopted **Passive infrared (PIR) sensor** and **Hall sensor** for “presence detection” and “door/window intrusion alarm” functions.

You can go to “**SETTING >>> PIR & Hall**” interface for further configurations. For the detailed parameters, please refer to below descriptions.

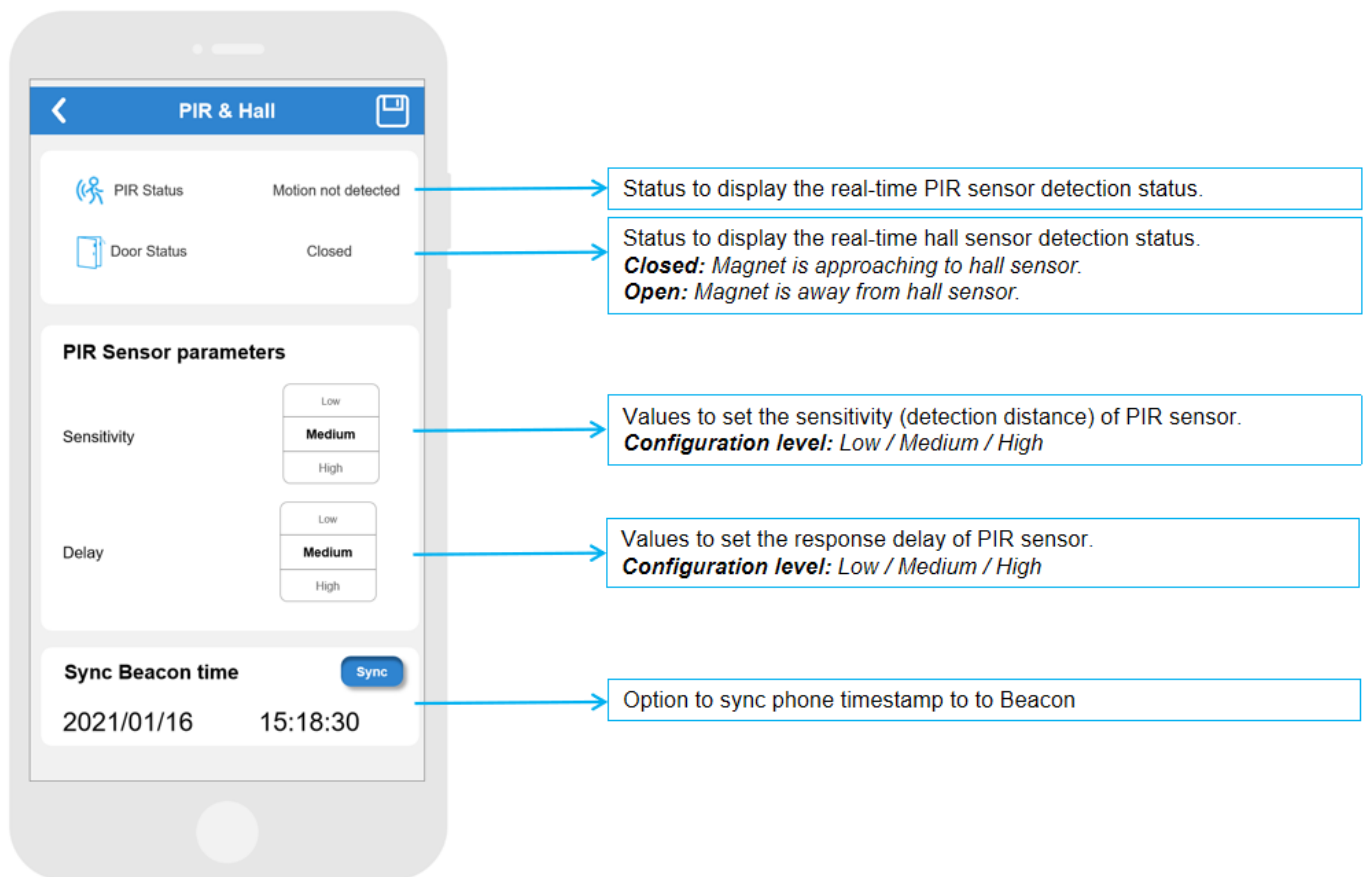


Figure 17: Configurations of PIR and Hall sensor

6.5 Modify connection password

In *PIR PRESENCE* firmware, “Moko4321” was set as default connection password. You can try to modify your Beacon’s connection password by just tapping “**SETTING >>> modify password**” option, and then input the password as you want.

Remark: Connection password must be 8 characters in length.

6.6 Switch your PIR device to unconnectable

In some cases, you will need to disable the Beacon connectable property, to avoid high power consumption caused by deliberate connections. So you can disable the connectable status in “**SETTING >>> Connectable**” option. After disabled, device will not be connected by master BLE device any more unless reset the Beacon.



Figure 18: Switch your PIR device to unconnectable status

6.7 Disable button power off function

Normally the button is used for power on/off purpose, however in some specific cases, there will need to disable the button function in order to avoid deliberate operations, so logically there also should have the corresponding switch to enable/disable it. You can go to **"SETTING >>> Button Power OFF"** to disable the button power off functions.

- **Button power off** ----- You will not be able to turn off the device through mechanical button once disabled.



Figure 19: Disable "button power off" function

6.8 Remote turn off your PIR device

In some cases that mechanical button function should be disabled to avoid intentional shut down situations, then we will need to remote shut down function for backup.

Under this circumstance, you can remote turn off your Beacon by just tapping **"DEVICE >>> Remote Power OFF"** option, then it will give prompt to you to confirm the shut down operations.



Figure 20: Remote power off your PIR device



Notice – Please make sure that device have mechanical button, or other ways to turn on before you do remote shut down operations.

6.9 Remote reset your PIR device

In some cases that mechanical button function should be disabled or without mechanical button, to avoid intentional reset situations, then we will need remote reset function for backup. You can remote reset your Beacon by just tapping **"DEVICE >>> Remote reset"** option, then it will give prompt to you to confirm the reset operations.

Remark: Remote reset operations will not change the password to factory reset status. If you want to totally reset the Beacon with password restore as well, then you may need to do hardware reset operations.

6.10 Check your device information

In some cases, you will need to know the firmware version of Beacon, or product model and etc. You can access to **"Device"** interface to check and confirm those essential information, which including battery voltage, running time since power on, MAC address and etc.

6.11 Upgrade your device's firmware

The Beacon can realize OTA firmware update through DFU operations. In the next we will describe the detailed steps based on android "MK PIR" APP.

Step 1: Copy the upgrade package to a folder in the root directory of the smartphone.

Step 2: **Connect** with device and go to "**SETTING**" interface, press "**OTA DFU**" option and then file manager route of smartphone will be prompted.

Step 3: Choose the required upgrade firmware package and the upgrade process will start automatically. Wait for the upgrade to complete, APP will disconnect with Beacon after upgrade completed successfully.

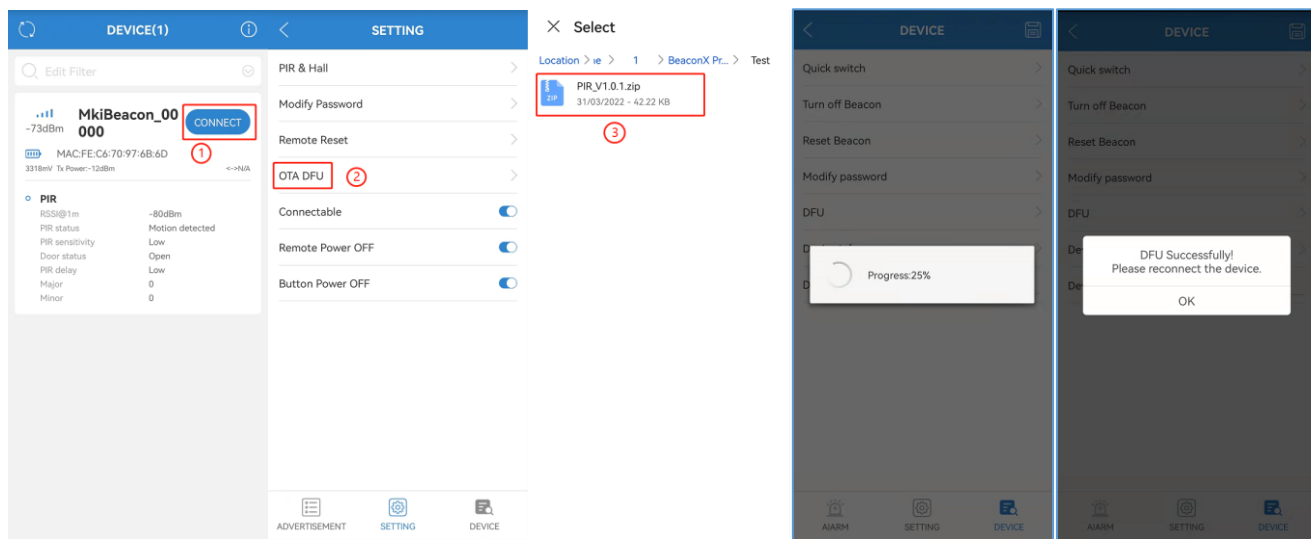


Figure 21: Firmware upgrade workflow of "MK PIR" APP (Android)

6.12 Obtain log file from Android APP

Sometimes when testing with our APP, there may occurred some issues that cannot be reproduced in MOKO side, then we will need you to help obtain the log file from android APP and then provide for us to further analysis.

Currently only Android APP support log record, and the **LOG** option is in "**About**" interface, you can export the log file and then send to us by following below steps if rare issue happened.

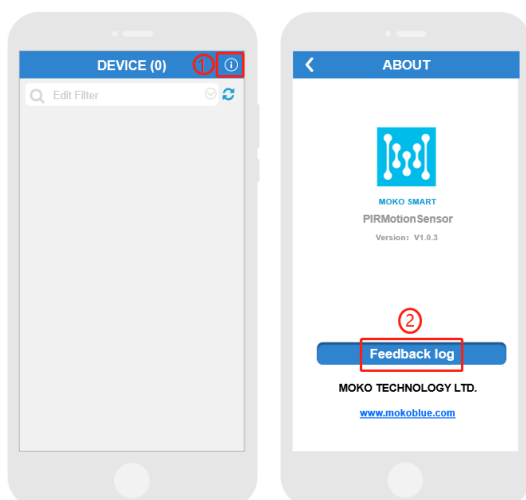


Figure 22: Obtain log file from "MK PIR" APP

© Copyright 2022 MOKO TECHNOLOGY. All Rights Reserved. Any information furnished by MOKO TECHNOLOGY LTD. is believed to be accurate and reliable. All specifications are subject to change without notice. Responsibility for the use and application of MOKO TECHNOLOGY LTD. materials or products rests with the end user since MOKO TECHNOLOGY LTD. cannot be aware of all potential uses. MOKO TECHNOLOGY LTD. makes no warranties as to non-infringement nor as to the fitness, merchantability, or sustainability of any MOKO TECHNOLOGY LTD. materials or products for any specific or general uses. MOKO TECHNOLOGY LTD. or any of its affiliates shall not be liable for incidental or consequential damages of any kind. All MOKO TECHNOLOGY LTD. products are sold pursuant to the MOKO TECHNOLOGY LTD. Terms and Conditions of Sale in effect from time to time, a copy of which will be furnished upon request. Other marks may be the property of third parties. Nothing herein provides a license under any MOKO TECHNOLOGY LTD. or any third-party intellectual property right.

Contact

MOKO TECHNOLOGY LTD. An original manufacturer for IoT smart devices

Address: 4F, Building 2, Guanghui Technology Park, MinQing Rd, Longhua, Shenzhen, Guangdong, China

E-mail: Support_BLE@mokotechnology.com

Website: www.mokosmart.com

www.mokoblue.com