

A380X OANS default airport

The airport map of the ND (OANS) shows the right airport by itself: the current airport on ground, the origin, destination or alternate in flight, as the A380 FCOM describes the moving airport map

Aircraft	A380X
Where to find it	ND in ARC or ROSE-NAV at the ZOOM range (the OANS), or PLAN; the ARPT SEL panel of the OANS
PR branch	pr/25-a380x-oans-default-airport (independent)
Status	Tested in the sim on 2026-09-27 (user-confirmed).
Pictures	Captain ND in the local browser harness, running the build installed in the sim, with a small test airport (XTST, no buildings) standing in for the Navigraph airport map.

1. What it is for

2. The rules

3. What it looks like
4. What to expect

5. Limitations and why

1. What it is for

The OANS draws the airport around the aircraft on the ND. The FCOM (DSC-34-10-70-20, MOVING AIRPORT MAP) says no manual selection is needed: the OANS shows a **default airport**. FBW loaded the nearest airport on ground, but in flight only the destination (within 50 NM, at any height), and a manual selection stopped the automatic choice for 10 minutes. Now the FCOM rules apply.

2. The rules

ND mode	Default airport
ARC, ROSE-NAV (on ground)	The airport where the aircraft is.
ARC, ROSE-NAV (in flight)	The origin, destination or alternate of the FMS while the aircraft is inside its virtual cylinder: 20 NM radius, 5000 ft above the airport. The OANS keeps it while the aircraft stays in the cylinder.
PLAN (in flight)	The origin if it is closer than 50 NM, otherwise the destination; the destination when origin and destination are less than 300 NM apart.
Manual (ARPT SEL)	Only in PLAN: another airport can be displayed. It stays until the ND leaves PLAN, or the aircraft lands or takes off. In ARC / ROSE-NAV the OANS says SET PLAN MODE.

Only one airport is displayed on both NDs; the PLAN rule applies when the other ND is not in ARC or ROSE-NAV, so the two sides never fight.

3. What it looks like



Figure 1. In flight, 12 NM from the destination XTST at 3000 ft: the destination loads by itself (name top right; the arrow points to the airport, still outside the zoom range).



Figure 2. 30 NM away at 9000 ft: outside the cylinder, no airport is loaded.

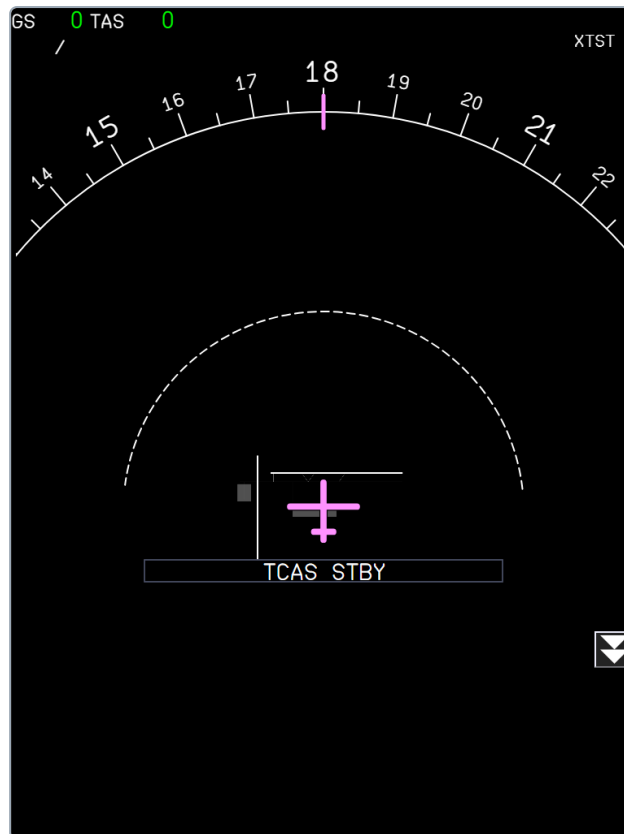


Figure 3. On ground at XTST: the current airport, with the aircraft at its gate.

4. What to expect

Situation	What you should see
On ground	The airport where you are, whatever the flight plan.
Climbing out of the origin	The origin until you leave its 20 NM / 5000 ft cylinder, then nothing (or the alternate / destination when inside theirs).
Approach to the destination	The destination from 20 NM and 5000 ft above it.
Diversion to the alternate	The alternate from 20 NM and 5000 ft above it.
ARPT SEL in PLAN	Your airport until you leave PLAN, land or take off.
No present position	No automatic airport.

5. Limitations and why

Limitation	Why	What to do
Needs the Navigraph airport database.	The OANS map is the Navigraph AMDB.	Link Navigraph in the flyPad.
One displayed airport for both NDs.	The real OANS has one per side; FBW shares one map.	-
The destination arrow (5 NM range, map out of range) is FBW's.	Not part of this change.	-