

A380X MFD FMS pages to the FCOM

Every FMS page of the MFD laid out on its A380 FCOM figure, the FCOM entry formats, and the pages and functions FBW did not have

Aircraft	A380X
Where to find it	MFD (both sides), FMS pages: ACTIVE , POSITION , SEC INDEX , DATA menus; SURV pages (see also the PR 5 manual)
PR branch	pr/10-a380x-mfd-fcom-pages (base of PRs 11-17, 20, 22)
Status	Built in September 2026 and used in the sim since; individual pages were fixed after the in-sim checks (button widths, SEC page return, printer checkboxes).
Pictures	Captain MFD in the local browser harness, running the build installed in the sim. The harness has no navigation database and no flight plan, so most values are dashes or amber boxes: the pictures show the layout and the functions of each page.

1. What changed, in short

2. ACTIVE menu

3. POSITION menu

4. SEC INDEX
5. DATA menu

6. What to expect

7. Limitations and why

1. What changed, in short

- **Layout:** each page is placed on its figure of the A380 FCOM (DSC-22-FMS-20-30, the 2011 KAL FCOM): field positions, 40 px entry fields, 22.5 px labels, 38 px tab bar, the title bar. Where FBW followed a newer FMS standard than this FCOM, the FCOM figure was followed.
- **Entry formats:** every field accepts the FCOM entry formats (DSC-22-FMS-20-100) and answers with the FCOM messages (FORMAT ERROR, ENTRY OUT OF RANGE, NOT IN DATABASE...).
- **New pages:** ALTERNATE, CLOSEST AIRPORTS, OFFSET, EQUI-TIME POINT, LL XING / TIME MKR, WIND, the POSITION pages, DATA / WAYPOINT, NAVAID, ROUTE, PRINTER, company requests (wind, flight plan, report, takeoff data), TRANSFER TO MAILBOX, REJECTED ATC INFO.
- **New functions:** FUEL PLANNING with CONFIRM BLOCK, LRC and MAX TURB speeds, VERT REV RTA, FMS P/N, pilot-stored elements, automatic airway connection, printing.

The menus at the top of the FMS pages give access to everything: **ACTIVE** (the active flight plan and its pages), **POSITION**, **SEC INDEX** (the secondary flight plans) and **DATA**.

2. ACTIVE menu

INIT

The screenshot shows the 'INIT' menu in a flight simulator. At the top, there's a dropdown menu for 'FMS 1' and a series of tabs: 'ACTIVE', 'POSITION', 'SEC INDEX', and 'DATA'. Below these is a header 'ACTIVE/INIT'. The main area contains several input fields and buttons. 'FLT NBR' is a 10-digit amber box (0000000000). 'ACFT STATUS' is a button. 'CPNY F-PLN REQUEST' is a button. 'FROM' and 'TO' are 4-digit amber boxes (0000), followed by 'ALTN' (4 dashes). 'CPNY RTE' is a 10-digit amber box (0000000000), followed by 'RTE SEL' button. 'ALTN RTE' is a 10-digit box (-----), followed by 'ALTN RTE SEL' button. Below a horizontal line, 'CRZ FL' is a box with 'FL' in blue and 4 dashes (FL----), 'CRZ TEMP' is a box with 3 dashes and '°C' (--- °C), 'CI' is a 3-digit box (---), and 'TROPO' is a box with '36090 FT' in blue. 'TRIP WIND' is a 5-digit box (-----), 'WIND' is a button, and 'CPNY WIND REQUEST' is a button. Below another horizontal line, there are buttons for 'IRS', 'DEPARTURE', 'NAVAIDS', 'FUEL&LOAD', 'T.O. PERF', 'RTE SUMMARY', and 'CPNY T.O. REQUEST'. At the bottom left is a 'MSG LIST' button.

Figure 1. INIT: every button is live. CPNY F-PLN REQUEST (flight plan from the airline, i.e. SimBrief), RTE SEL / ALTN RTE SEL (route selection from the stored and company routes), CPNY WIND REQUEST, CPNY T.O. REQUEST, WIND, and the shortcuts IRS, DEPARTURE, NAVAIDS, FUEL&LOAD, T.O. PERF and RTE SUMMARY.

- Amber boxes are mandatory entries; blue dashes are optional ones.
- **CPNY RTE:** type a stored or company route of the city pair: it is inserted; otherwise NOT IN DATABASE.
- **RTE SUMMARY** stores the active route as a pilot-stored route (DATA / ROUTE).

FUEL&LOAD and FUEL PLANNING

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/FUEL&LOAD

GW

.

T

CG

.

%

FOB

.

T

ZFW

000.0

T

ZFWCG

00.0

%

BLOCK

000.0

T

FUEL
PLANNING *

TAXI

1.5

T

PAX NBR

000

TRIP

.

T

:

CI

RTE RSV

.

T

5.0

%

JTSN GW

.

T

ALTN

0.0

T

:

TOW

.

T

FINAL

6.0

T

00:30

LW

.

T

UTC

EF0B

MIN FUEL AT DEST

DEST

NONE

:

.

T

6.0

T

ALTN

NONE

:

.

T

EXTRA

.

T

:

RETURN

MSG
LIST

Figure 2. FUEL&LOAD. FUEL PLANNING (next to BLOCK) is available when the flight plan and the weights allow the predictions.

FUEL PLANNING computes the minimum block fuel from the FMS predictions (trip, reserves, alternate, final, taxi) and offers **CONFIRM BLOCK**, which inserts it (FCOM P 179). The EXTRA line shows what is left above the minimum.

PERF

FMS 1

ACTIVEPOSITIONSEC INDEXDATA

ACTIVE/PERF

CRZFL 000

OPT FL ---

REC MAX FL ---

T.OCLB

CRZ

DES

APPR

GA

RWY ---

T.O SHIFT --- M

V1 000 KT

F --- KT

TOGA

FLEX

DERATED

VR 000 KT

S --- KT

V2 000 KT

O --- KT

FLAPS

THS FOR 00.0 %

PACKS ON

ANTI-ICE OFF

THR RED --- FT

ACCEL --- FT

NOISE

TRANS --- FT

EO ACCEL --- FT

CPNY T.O REQUEST

RETURN

POS MONITOR

MSG LIST

Figure 3. PERF T.O with the company takeoff data button (see the PR 11 manual).

FMS 1

ACTIVEPOSITIONSEC INDEXDATA

ACTIVE/PERF

CRZFL 000

OPT FL ---

REC MAX FL ---

T.OCLB

CRZ

DES

APPR

GA

CI ---

MODE	MACH	SPD	AT STEP TO FL
PRESEL	.--	--- KT	
MANAGED	.85	--- KT	---:-- --- NM
LRC	---	--- KT	
MAX TURB	---	--- KT	

DEST ---:-- ---. T

CMS

STEP ALTs

RETURN

POS MONITOR

MSG LIST

Figure 4. PERF CRZ: MANAGED, PRESEL, and the LRC and MAX TURB speeds.

- **LRC** (long range cruise): the Mach giving 99 % of the maximum specific range (FCOM PER-IFT).
- **MAX TURB**: the recommended speed for flying in turbulence.

F-PLN and its revisions

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/F-PLN

FROM

UTC

SPD

ALT

TRK

DIST

FPA

P.POS

--:--

DISCONTINUITY

END OF F-PLN

NO ALTN F-PLN

--:--

DEST

F-PLN INFO

DIR TO

MSG LIST

Figure 5. F-PLN without a flight plan: P.POS, DISCONTINUITY, END OF F-PLN, NO ALTN F-PLN.

Click a waypoint name to open the lateral revision menu, a speed/altitude to open the vertical revision. The new pages below open from these menus or from F-PLN INFO.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/F-PLN/ALTERNATE

DATA FROM

TO ALTN

CO RTE

DIR TRK

DIST

EXTRA

SELECTED

DATABASE

NO ALTN

OTHER ALTN

RETURN

MSG LIST

Figure 6. ALTERNATE: the selected alternate, the database alternates with their company route, track, distance and EXTRA fuel, and two OTHER ALTN fields.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/F-PLN/CLOSEST AIRPORTS

DATA FROM P.POS

TO ARPTs

DIST

BRG

UTC

EFOB

EFF WIND

CLOSEST ARPTs

OTHER ARPT

RETURN

MSG LIST

Figure 7. CLOSEST AIRPORTS: the 4 closest airports from P.POS with distance, bearing, UTC, EFOB and effective wind, and up to three OTHER ARPTs.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/F-PLN/OFFSET

START WPT

END WPT

INTERCEPT ANGLE

P.POS

30°

OFFSET DIST

-- NM


☐ LEFT
☐ RIGHT

RETURN

CANCEL OFFSET*

MSG LIST

Figure 8. OFFSET: start and end waypoints, distance LEFT / RIGHT, intercept angle (30° by default), CANCEL OFFSET.

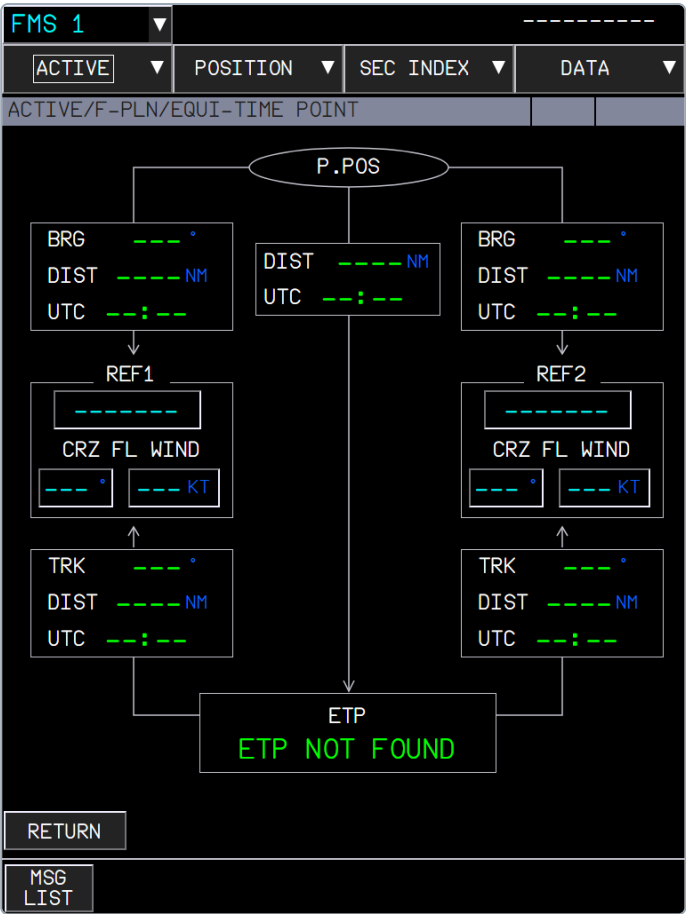

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/F-PLN/LL XING-TIME MKR

LAT/LONG XING

START WPT

▼

☒ LAT

☐ LONG

INCREMENT

1

NUMBER

INSERT AS WPT*

TIME MKR

UTC

REMAINING TIME

AURAL ALERT

☐

RETURN

MSG LIST

Figure 10. LL XING / TIME MKR: a waypoint at every LAT or LONG crossing (start, increment, number, INSERT AS WPT); a time marker with remaining time and an aural alert.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/F-PLN/VERT REV

RTA

SPD

CMS

ALT

STEP ALTs

RTA AT

▼

DIST

NM

ETT

ETA

RTA

☐ AT

☐ AT OR BEFORE

☐ AT OR AFTER

RTA SPD

KT

RETURN

MSG LIST

Figure 11. VERT REV, RTA tab: time at a waypoint (AT, AT OR BEFORE, AT OR AFTER), ETA and the speed to meet it; the time error thresholds of the FCOM apply.

FMS 1		-----	
ACTIVE	POSITION	SEC INDEX	DATA
ACTIVE/F-PLN/AIRWAYS			
AIRWAYS FROM			
		▲	▼
RETURN			
MSG LIST			

Figure 12. AIRWAYS: up to 31 segments; typing the next airway after a waypoint connects the two airways automatically at their intersection.

WIND and the company requests

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/WIND

HISTORY

CLB

CRZ

DES

CLB WIND

----- FT

--- °

--- KT

----- FT

--- °

--- KT

----- FT

--- °

--- KT

----- FT

--- °

--- KT

----- FT

--- °

--- KT

CPNY WIND REQUEST

MSG LIST

Figure 13. WIND: HISTORY (winds recorded in the last flight), CLB, CRZ (per waypoint, 4 levels and the SAT), DES; CPNY WIND REQUEST at the bottom.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

COMPANY WIND DATA REQUEST

FREE TEXT

SEND WIND REQUEST *

RETURN

MSG LIST

Figure 14. COMPANY WIND DATA REQUEST: free text and SEND WIND REQUEST.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

COMPANY F-PLN REQUEST

FLT NBR

CPNY RTE

FREE TEXT

SEND F-PLN REQUEST *

RETURN

MSG LIST

Figure 15. COMPANY F-PLN REQUEST: flight number, company route, free text.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

COMPANY F-PLN REPORT

FREE TEXT

SEND REPORT TO CPNY *

RETURN

MSG LIST

Figure 16. COMPANY F-PLN REPORT: free text, SEND REPORT TO CPNY.

NOTE

The company functions use SimBrief (flight plan) and the flyPad (takeoff data). A request without a company able to answer ends after a timeout with the FCOM message.

3. POSITION menu

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

POSITION/MONITOR

ACCURACY LOWEPU --.---RNP ---.-

FMS1 00°00.0N/000°00.0E

RADIO --°--.-/---°--.-

MIXIRS --°--.-/---°--.-

GPIRS --°--.-/---°--.-

FMS2 00°00.0N/000°00.0E

DEVIATION FROM FMS1

IRS1 --°--.-/---°--.-

IRS2 --°--.-/---°--.-

IRS3 --°--.-/---°--.-

GPS1 00°00.0N/000°00.0E

GPS2 00°00.0N/000°00.0E

BRG / DIST TO --- / ---.-

POSITION UPDATE

FREEZE POSITION *

RETURN

NAVAIDS

GPS

IRS

MSG LIST

Figure 17. MONITOR: FMS1/2, RADIO, MIXIRS, GPIRS, IRS and GPS positions, accuracy, EPU and RNP, FREEZE POSITION, BRG / DIST TO.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

POSITION/IRS

IRS ALIGNING ON GPS POS: 00°00.0N/000°00.0E

ALIGN ON OTHER REF

IRS 1 OFF

IRS 2 OFF

IRS 3 OFF

IRS1

IRS2

IRS3

FREEZE ALL IRS *

POSITION 00°00.0N/000°00.0E

T.TRK 0.0°T

GND SPD 0.0KT

T.WIND 0.0° / 0.0KT

T.HDG 0.0°T

MAG HDG 0.0°

MAG VAR 0.0°E

GPIRS POSITION 00°00.0N/000°00.0E

ACCURACY ---.-FT

RETURN

MSG LIST

Figure 18. IRS: alignment, the three IRS with their data, FREEZE ALL IRS.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

POSITION/NAVAIDS

TUNED FOR DISPLAY

SELECTED FOR FMS NAV

VOR 1

VOR 2

IDENT

----.-

FREQ

---- °

CRS

CLASS

ADF 1

IDENT

----.-

FREQ

☐ BFO

LS

IDENT

FREQ/CHAN

----.-

CRS

---- °

SLOPE

---- °

CLASS

DESELECT GLIDE *

RETURN

MSG LIST

Figure 19. NAVAIDS: tuned for display (VOR, ADF, LS) and selected for FMS NAV, DESELECT GLIDE.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

POSITION/GPS

GPS 1

GPS 2

00°00.0N/000°00.0E

00°00.0N/000°00.0E

NAV

MODE

NAV

9

NBR OF SAT

10

40FT

ACCURACY

43FT

0.0 °T

TRK

0.0 °T

00:00:00

UTC

00:00:00

0FT

ALT

0FT

0KT

GND SPD

0KT

RETURN

MSG LIST

Figure 20. GPS: both receivers: position, mode, satellites, accuracy, track, UTC, altitude, ground speed.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

POSITION/TIME

UTC

00:00:00

DATE

FLT TIME

BLK TIME

OUT

OFF

ON

IN

PERM DATA SETUP

UTC ONLY

MSG LIST

Figure 21. TIME: UTC, date, flight and block time, OUT / OFF / ON / IN, and PERM DATA SETUP (what the permanent data shows).

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

POSITION/REPORT

UTC

ALT

LAST SEQD WPT

TO WPT

NEXT WPT

LAST SEQD WPT

SAT

°C

T.WIND

°

/

KT

FOB

.

T

NEXT CRZ PROFILE CHANGE

NONE

DEST

NONE

FREE TEXT

SEND REPORT TO CPNY*

MSG LIST

Figure 22. REPORT: last, to and next waypoints with time and altitude, the last sequenced waypoint data, the next cruise profile change, destination.

NOTE

The TIME page is not in the 2011 FCOM; it follows a later FMS standard at the user's request.

4. SEC INDEX



Figure 23. SEC INDEX: SEC 1 / 2 / 3, IMPORT, CPNY F-PLN REQUEST into a SEC, the pages of the SEC, DELETE, XFER TO MAILBOX and PRINT.



Figure 24. TRANSFER TO MAILBOX: sends the SEC flight plan to the ATC mailbox with a free text.

REJECTED ATC INFO (FCOM P 321-323) lists the elements of an ATC flight plan inserted in SEC 3 that the FMS rejected, 4 per page. MSFS cannot send an ATC flight plan, so the list stays empty.

5. DATA menu

FMS 1

ACTIVEPOSITIONSEC INDEXDATA

DATA/STATUS

ACFT STATUS

FMS P/N

A380-800

ENGINETRENT 972

IDLE +0.0

PERF +0.0

MODIFY

NAV DATABASE

ACTIVE

SWAP *

SECOND

PILOT STORED ELEMENTS

WAYPOINTS 00

ROUTES 00

NAVAIDS 00

RUNWAYS 00

DELETE ALL *

MSG LIST

Figure 25. STATUS: aircraft and engine, IDLE / PERF factors (FMS P/N tab), navigation database SWAP, and the count of the pilot-stored elements with DELETE ALL.

FMS 1

ACTIVEPOSITIONSEC INDEXDATA

DATA/PRINTER

ACTIVE DATA

CPNY DATA

AUTO PRINT ON RECEPTION

F-PLN INITPRINT*

T.O DATAPRINT*

WIND DATAPRINT*

F-PLN INIT

T.O DATA

WIND DATA

ACTIVE F-PLN REPORT

AUTO PRINT

PRE-FLIGHTPRINT*

IN-FLIGHTPRINT*

POST-FLIGHTPRINT*

PRE-FLIGHT

IN-FLIGHT

POST-FLIGHT

SEC F-PLN REPORT

SEC 1PRINT*

SEC 2PRINT*

SEC 3PRINT*

SEC 1

SEC 2

SEC 3

MSG LIST

Figure 26. PRINTER: print the F-PLN INIT, T.O and wind data, the active and SEC flight plan reports, and the AUTO PRINT options.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

DATA/WAYPOINT

DATABASE WPTs

PILOT STORED WPTs

WPT IDENT

0000000

MSG

LIST

Figure 27. WAYPOINT: database waypoints by ident; pilot-stored waypoints (lat/long, place/bearing/distance, place-bearing/place-bearing), NEW WPT.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

DATA/NAVAID

DATABASE NAVAIDS

PILOT STORED NAVAIDS

NAVAID IDENT

0000

MSG

LIST

Figure 28. NAVAID: database nav aids (class, position, frequency, ILS course and slope...); pilot-stored nav aids, NEW NAVAID.

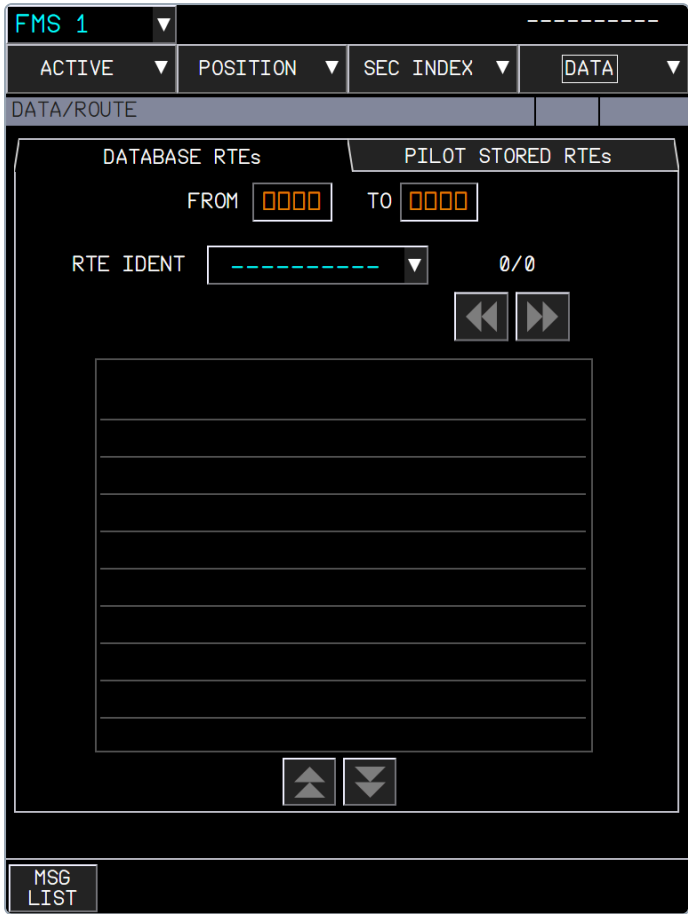


Figure 29. ROUTE: database (company) routes of a city pair, pilot-stored routes with their summary, NEW RTE, DELETE.

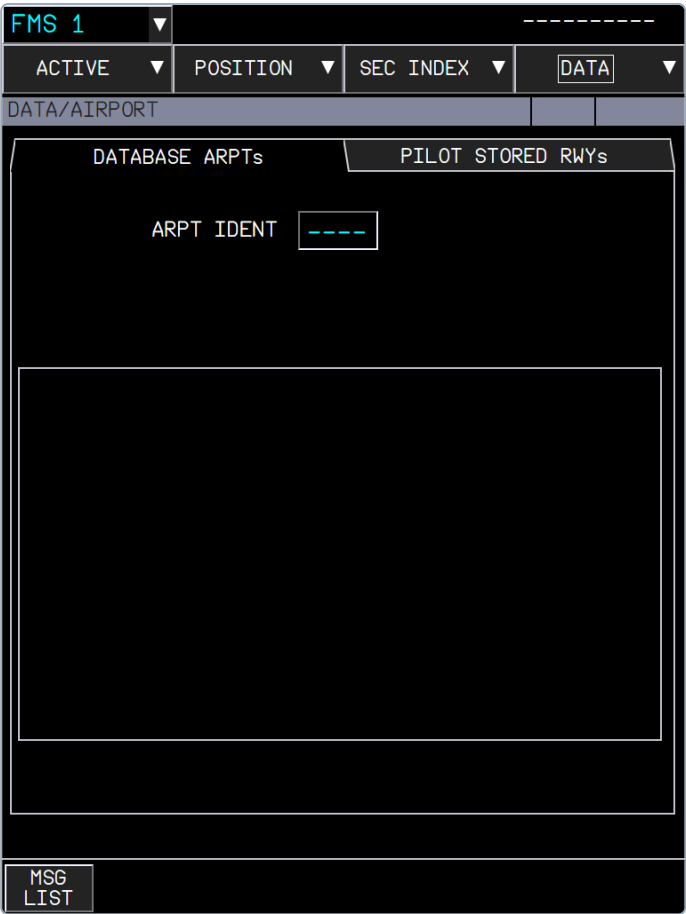


Figure 30. AIRPORT: database airports, and the PILOT STORED RWYs tab.

The printouts appear in the flyPad printouts list.

6. What to expect

Situation	What you should see
An entry in a wrong format	FORMAT ERROR in the message area; the field keeps its value.
A value out of the FCOM range	ENTRY OUT OF RANGE.
A waypoint or navaid not found	NOT IN DATABASE (or the NEW WPT / NEW NAVAID page when the FCOM says so).
A company request with no company answer	The FCOM timeout message after a few minutes.
A page not available in the flight phase	Its button is greyed.

7. Limitations and why

Limitation	Why	What to do
The layout follows the 2011 A380 FCOM.	It is the reference available; later FMS standards differ in places.	Report a difference with its FCOM page.
Some values are FBW model stand-ins.	For example GPS satellites and accuracy, like on the A32NX MCDU GPS page; MSFS does not simulate them.	-

Company functions answer only through SimBrief and the flyPad.	There is no airline datalink in MSFS.	-
Pilot-stored nav aids cannot be tuned.	The radio tuning uses the MSFS nav aids only.	-