

Weather radar mode on the ND

The selected weather radar mode (WX, WX+T, TURB, MAP) is shown in green on the ND, on both aircraft

Aircraft	A32NX and A380X
Where to find it	ND, ARC and ROSE NAV pages, right side, above the TERR box
PR branch	pr/03-nd-wxr-mode-label (stacked on PR 4)
Status	Tested in the sim (September 2026).
Pictures	Captain NDs in the local browser harness, running the builds installed in the sim (the radar picture itself is drawn by the native gauge, not by the harness).

1. What it is for

Nothing on the ND told the crew which radar mode was selected. The mode now appears in green on the right of the ARC and ROSE NAV pages while the radar is on, as on the real ND.

Label	A32NX (MODE knob)	A380X (SURV CONTROLS)
WX	WX	WX (TURB off)
WX+T	WX+T	WX with TURB on
TURB	TURB	-- (no TURB-only mode on the A380)
MAP	MAP	MODE MAP
(none)	WX SYS OFF	WXR off, no WX overlay, or the WXR & TAWS system failed



Figure 1. A32NX ARC: WX+T above the TERR box.

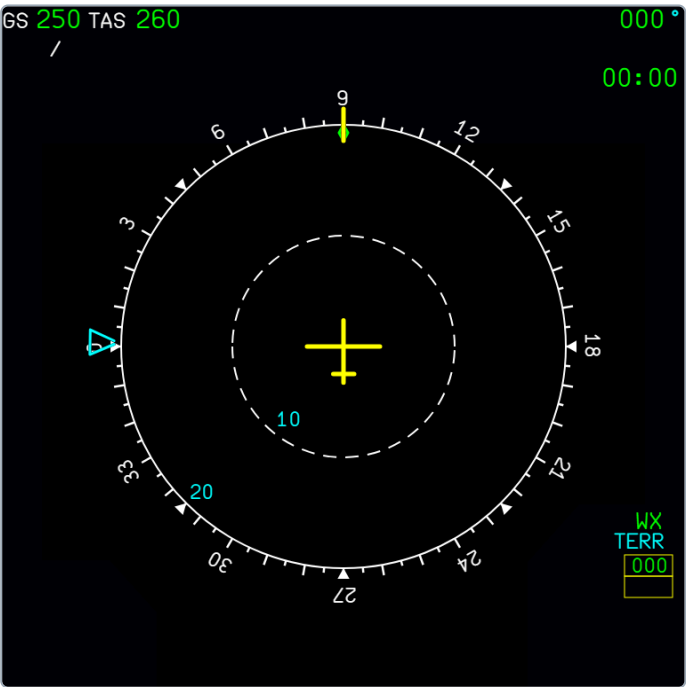


Figure 2. A32NX ROSE NAV: WX.

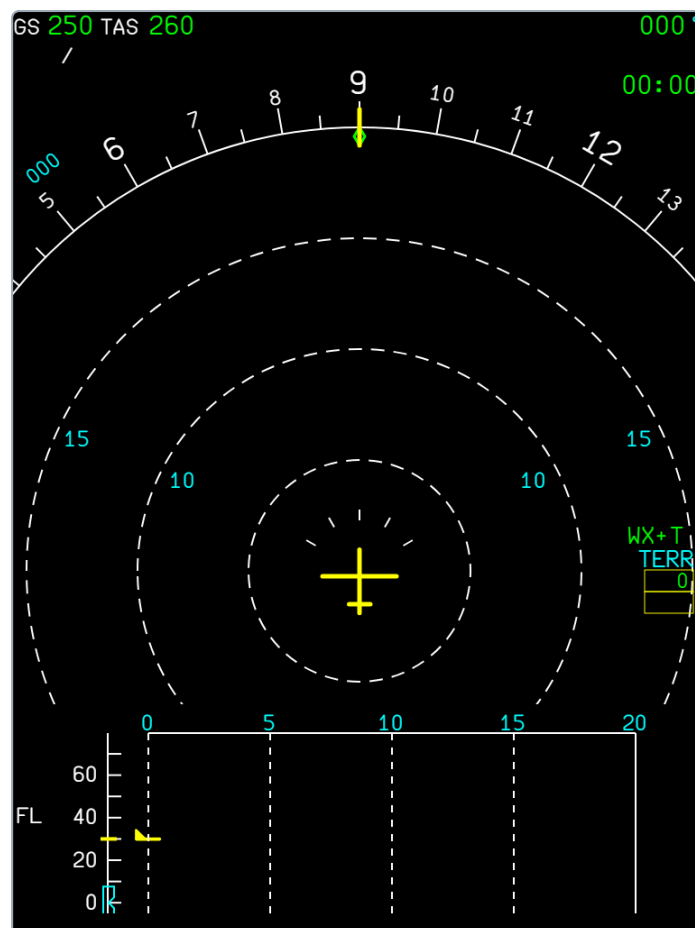


Figure 3. A380X ARC: WX+T.

- Shown only on ARC and ROSE NAV pages, and not while the terrain replaces the weather (TERR ON ND).
- Shown on the ground too, where the radar itself does not transmit (nothing is drawn).
- The native radar gauge decides and publishes the label (`A32NX\_WXR\_ND\_{L,R}\_MODE`), so the ND follows exactly what the gauge draws.

2. Limitations and why

Limitation	Why	What to do
No label in PLAN, ROSE ILS, ROSE VOR.	The radar is not shown on those pages.	-