

A380X SURV controls and pedestal SURV panel

The weather radar block of the MFD SURV CONTROLS page, the STATUS & SWITCHING page and the pedestal SURV panel now work and drive the same systems

Aircraft	A380X
Where to find it	MFD system menu SURV (or the KCCU SURV key): CONTROLS and STATUS & SWITCHING; the SURV panel on the pedestal
PR branch	pr/05-a380x-surv-pane1 (base of PR 6)
Status	Tested in the sim (September 2026).
Pictures	Captain MFD and ND in the local browser harness, running the build installed in the sim; figure 3 is an in-sim screenshot.

1. What it is for

2. SURV CONTROLS

3. STATUS & SWITCHING
4. The pedestal SURV panel

5. Messages on the vertical display

6. Limitations and why

1. What it is for

The A380 has no separate radar, TCAS or TAWS control panels: they are on the MFD SURV pages and the pedestal SURV panel (FCOM DSC-34-20-60-50). In FBW the weather radar block of the page was a stub (every button greyed), STATUS & SWITCHING did not reflect failures, and no button of the pedestal panel worked. Now they do, and the page and the panel stay in step.

2. SURV CONTROLS



Figure 1. SURV CONTROLS: XPDR (code, IDENT, AUTO / ON / STBY, ALT RPTG), TCAS (TA/RA, TA ONLY, STBY; NORM, ABV, BLW), WXR, TAWS, and DEFAULT SETTINGS.

WXR button	Effect
WXR AUTO / OFF	Weather radar on or off (the ND radar picture).
PRED W/S AUTO / OFF	Predictive windshear (written for the systems; MSFS has no predictive windshear).
TURB AUTO / OFF	Turbulence detection (magenta on the ND, see the radar manuals).
GAIN AUTO / MAN	Radar gain (written; MSFS has no gain).
MODE WX / MAP	Weather or ground mapping.
WX ON VD AUTO / OFF	Weather on the vertical display.
ELEVN / TILT	AUTO, or a manual elevation or tilt.

The WXR buttons are inhibited only when the selected WXR system has really failed.

3. STATUS & SWITCHING

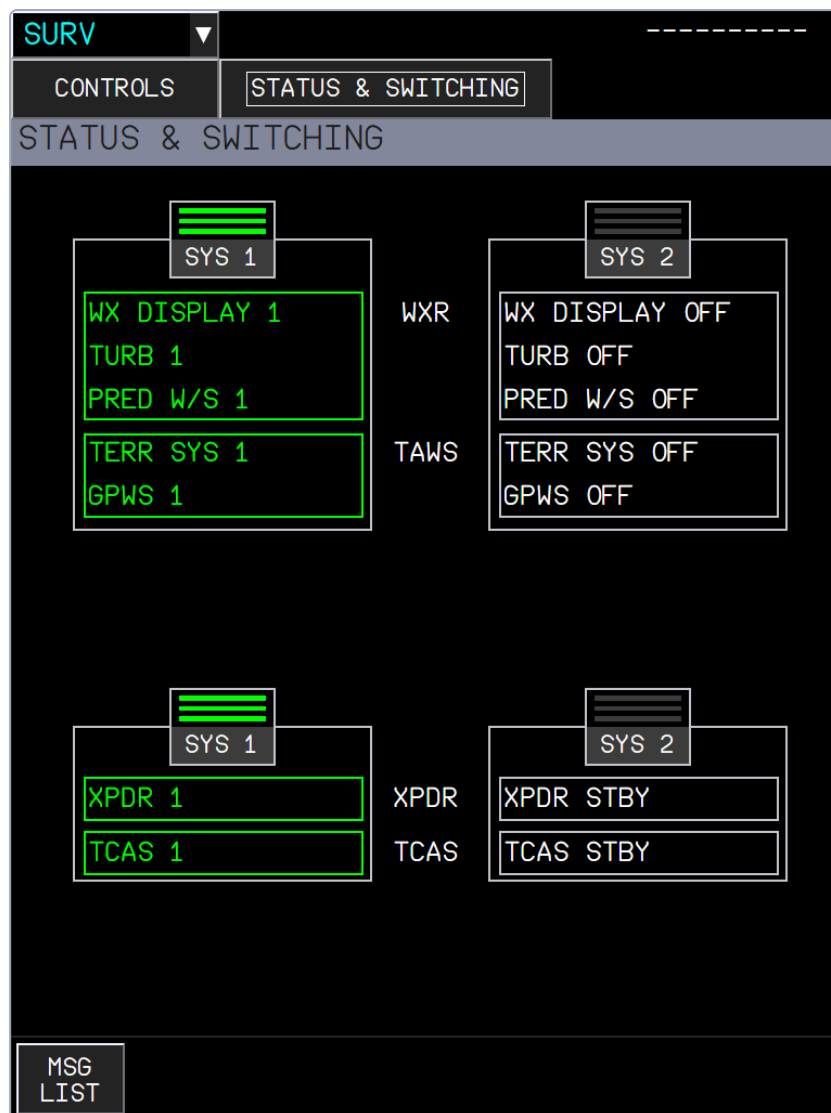


Figure 2. STATUS & SWITCHING: SYS 1 / SYS 2 of the WXR and TAWS (top) and of the XPDR and TCAS (bottom); the selected system is lit, each item shows its real state.

- WXR DISPLAY, TURB, PRED W/S, TERR SYS, GPWS items show the real failure of each system.
- XPDR / TCAS SYS 1 / SYS 2 select the transponder system (the one the TCAS uses) and light from it.



Figure 3. The SURV CONTROLS page in the sim (in-sim screenshot).

In-sim screenshot taken during development: not representative of the final in-game UI, reference for the explanation only.

4. The pedestal SURV panel

The panel buttons never worked: their light template runs the button code only when the panel is powered, and the pedestal never told it so. They are powered from DC 1 now and linked to the MFD pages:

Panel button	Does	Same as
WXR TAWS SYS 1 / SYS 2	Selects the WXR / TAWS system	STATUS & SWITCHING, top
XPDR TCAS SYS 1 / SYS 2	Selects the transponder system	STATUS & SWITCHING, bottom
G/S MODE	Glide slope mode of the GPWS on / off	SURV CONTROLS, TAWS
TCAS ABV / BLW / TA ONLY	TCAS display and mode	SURV CONTROLS, TCAS

Each button lights from the same value the page uses, so pressing one on the pedestal changes the page, and the reverse.

5. Messages on the vertical display

The VD message was always "NO TERR AND WX DATA AVAILABLE" when TERR SYS was off. Now:

Situation	VD message
TERR SYS OFF only	NO TERR DATA AVAILABLE
WXR failed or OFF, or WX ON VD OFF	NO WX DATA AVAILABLE

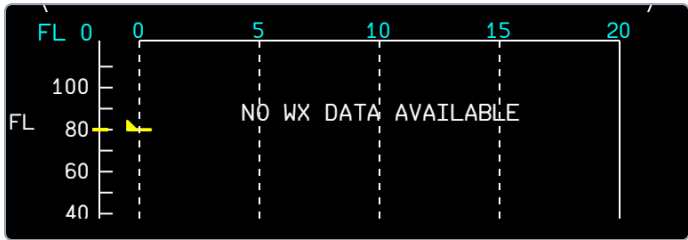


Figure 4. WXR off: NO WX DATA AVAILABLE.

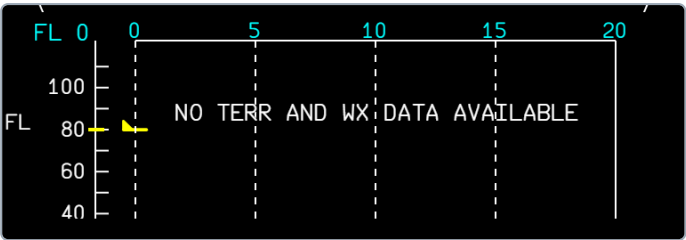


Figure 5. TERR SYS off and WXR off: NO TERR AND WX DATA AVAILABLE.

6. Limitations and why

Limitation	Why	What to do
PRED W/S and GAIN MAN do nothing visible.	The MSFS radar has no predictive windshear and no gain; the values are written for when it does.	-
One MSFS radar for both systems.	SYS 1 / SYS 2 select the failure state and the lights; the picture comes from the same sim radar.	-