

A32NX RAAS runway awareness callouts

The Honeywell Runway Awareness and Advisory System option of the EGPWS: spoken advisories and cautions about runways, from the sim's own airport data

Aircraft	A32NX
Where to find it	flyPad Settings > Aircraft Options / Pin Programs > RAAS : Off, Feet or Meters
PR branch	pr/18-a32nx-raas (independent)
Status	Tested in the sim (September 2026): the voice and the callouts were heard in flight and on the ground.
Pictures	The flyPad setting from the local browser harness; RAAS is audio only, so the callouts are shown on diagrams drawn from the code (Honeywell product description 060-4564-001, section 4).

1. What it is for
2. Turning it on
3. On the ground
4. Approach and landing
5. Limitations and why

1. What it is for

RAAS is an option of the A320's Honeywell EGPWS (A320 FCOM GEN aircraft configuration, used as a line-up aid in PRO-NOR-SOP-11 TAKEOFF RUNWAY CONFIRM). It tells the crew which runway they are approaching or are on, warns of a taxiway takeoff or landing, and calls the distance remaining. It needs no airport map: the runways come from the sim's airport database.

2. Turning it on

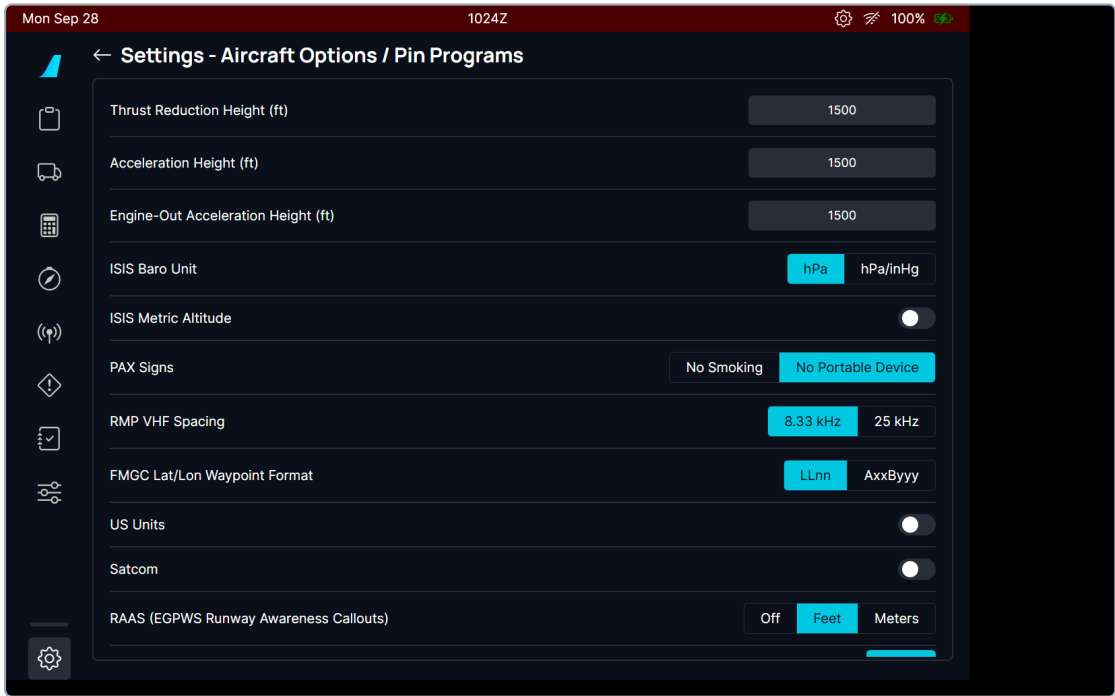


Figure 1. flyPad Settings > Aircraft Options / Pin Programs.



Figure 2. RAAS: Off, Feet (default) or Meters. The unit is the one of the distance callouts.

- The callouts run while the EGPWC is powered (AC BUS 1) and the **GPWS SYS** pushbutton is not OFF.

- The EGPWS aural alerts (e.g. "TOO LOW TERRAIN", "GLIDE SLOPE") have priority: RAAS waits for them.
- The voice is played word by word.

3. On the ground

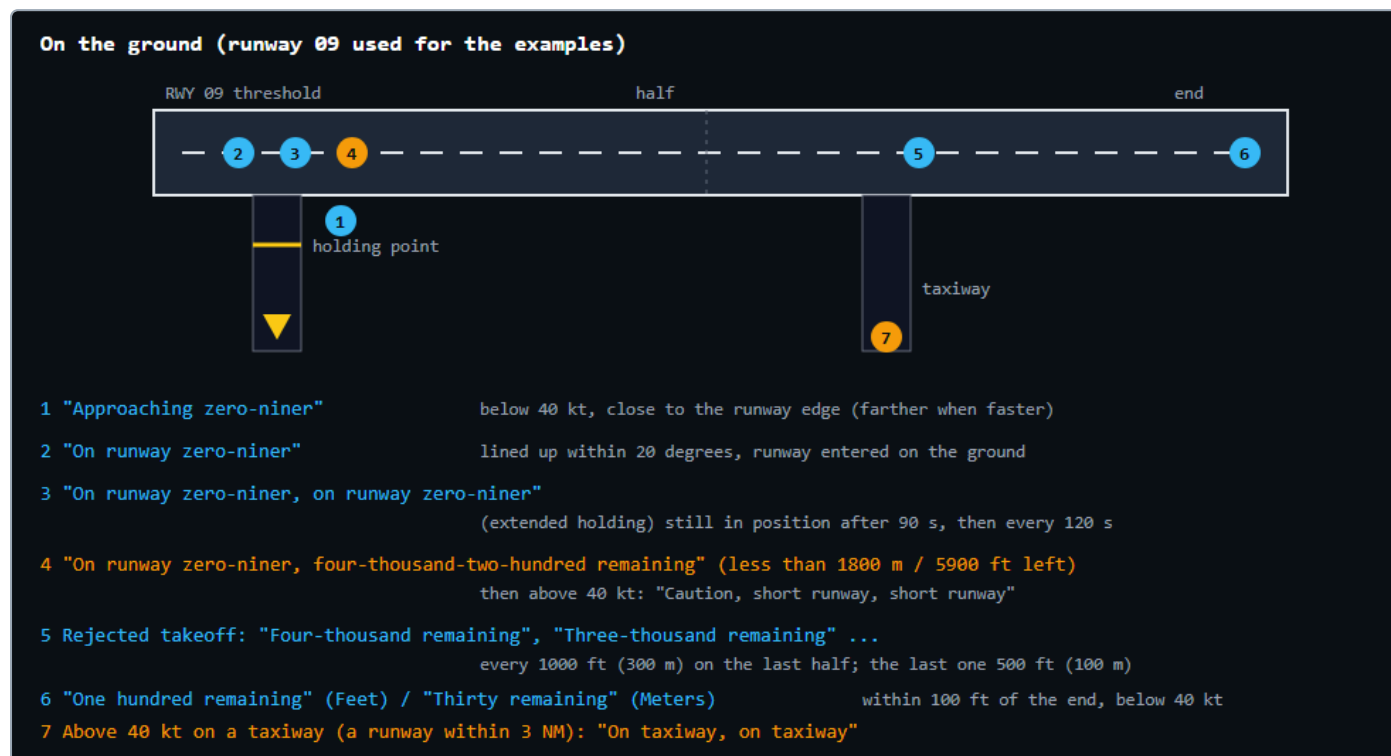


Figure 3. The ground callouts, in blue the advisories, in amber the cautions.

Diagram drawn for this manual: not representative of the in-game UI, reference for the explanation only.

Situation	What you should see
Taxiing towards a runway (below 40 kt)	"Approaching" and the runway end nearest to where you will enter; "Approaching runways" when two at once.
Lining up	"On runway" and the runway, once, when the runway was entered on the ground.
Lining up with less than 1800 m (5900 ft) ahead	The length remaining is added; at the start of the roll (above 40 kt), "Caution, short runway".
Holding on the runway for 90 s	"On runway ..." twice, then every 120 s while you stay.
Starting a takeoff roll on a taxiway (above 40 kt)	"On taxiway, on taxiway".
Rejected takeoff (ground speed down 7 kt from its maximum)	The distance remaining on the last half of the runway.
Slow near the end (within 100 ft, below 40 kt)	"One hundred remaining" (Feet) or "Thirty remaining" (Meters).

4. Approach and landing

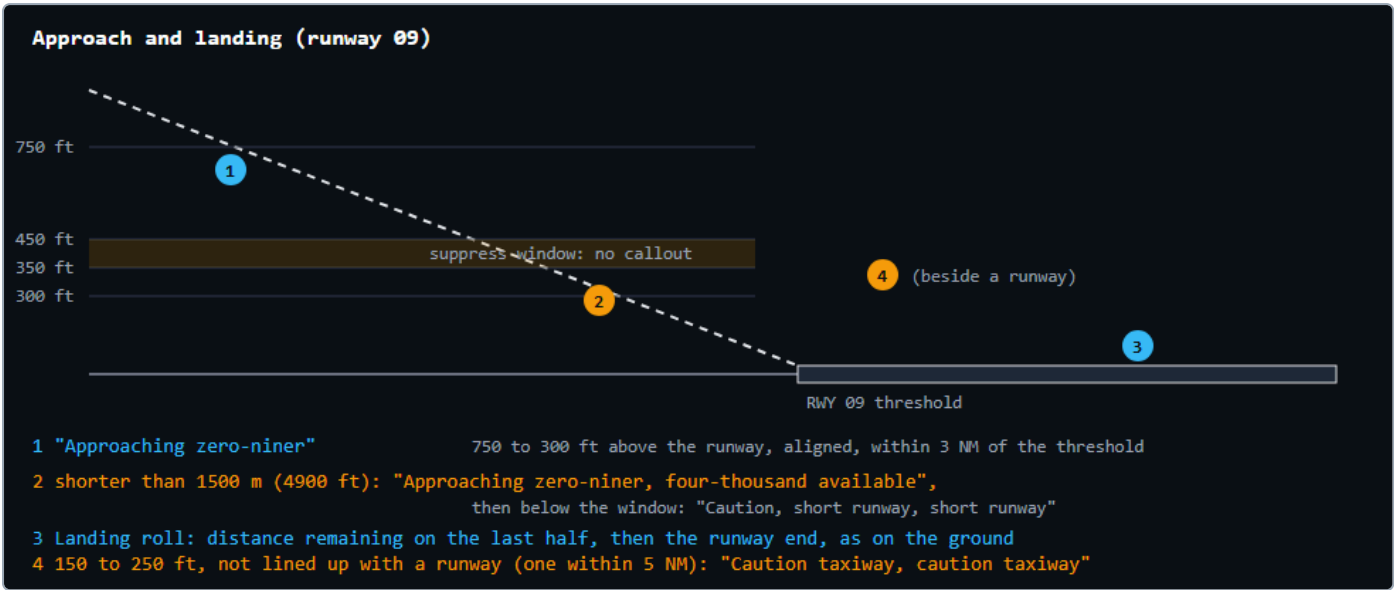


Figure 4. The approach callouts and the suppress window.

Diagram drawn for this manual: not representative of the in-game UI, reference for the explanation only.

Situation	What you should see
Between 750 and 300 ft, lined up, within 3 NM	"Approaching" and the runway, once. Not between 450 and 350 ft (the Airbus suppress window, where the crew is busy with the auto callouts).
The runway is shorter than 1500 m (4900 ft)	The available length is added; below the window: "Caution, short runway".
150 to 250 ft, not lined up with any runway	"Caution taxiway, caution taxiway".
Landing roll	The distance remaining on the last half: every 1000 ft (Feet) or 300 m (Meters), the last one at 500 ft / 100 m; then the runway end.

5. Limitations and why

Limitation	Why	What to do
Only runways known to the sim.	The runways come from the MSFS airport database, not from an airport map: no taxiway geometry, so "on taxiway" is judged as "not aligned with a runway".	-
One synthetic voice.	The clips are generated with the Piper text-to-speech engine (voice trained on the public-domain LJ Speech dataset); the licence of the voice model is to be confirmed before the PR is opened.	-
No RAAS on the A380X.	The A380X uses the OANS runway alerts instead (see the PR 19 manual).	-