

A380X RWY AHEAD without an airport map

The OANS RWY AHEAD advisory now works without the Navigraph airport map, from the runways of the sim's own airport database

Aircraft	A380X
Where to find it	PFD and ND, automatic while taxiing
PR branch	pr/19-a380x-oans-rwy-ahead-without-map (stacked on PR 18: it uses the runway module of the RAAS PR)
Status	Built with 4 unit tests; used in the sim during development (September 2026).
Pictures	Captain ND in the local browser harness, running the build installed in the sim; the advisory is triggered by the harness (the harness has no sim airport database).

1. What it is for
2. The rule
3. What it looks like
4. What to expect
5. Limitations and why

1. What it is for

While taxiing, the A380 OANS warns the crew before the aircraft enters a runway: **RWY AHEAD** with the runway name, on the PFD and the ND. In FBW this advisory came from the Navigraph airport map (AMDB): without a Navigraph subscription, or at an airport without a map, it never came. Now, while no airport map is loaded, the OANS uses the runways of the sim's own airport database with the same rule.

2. The rule

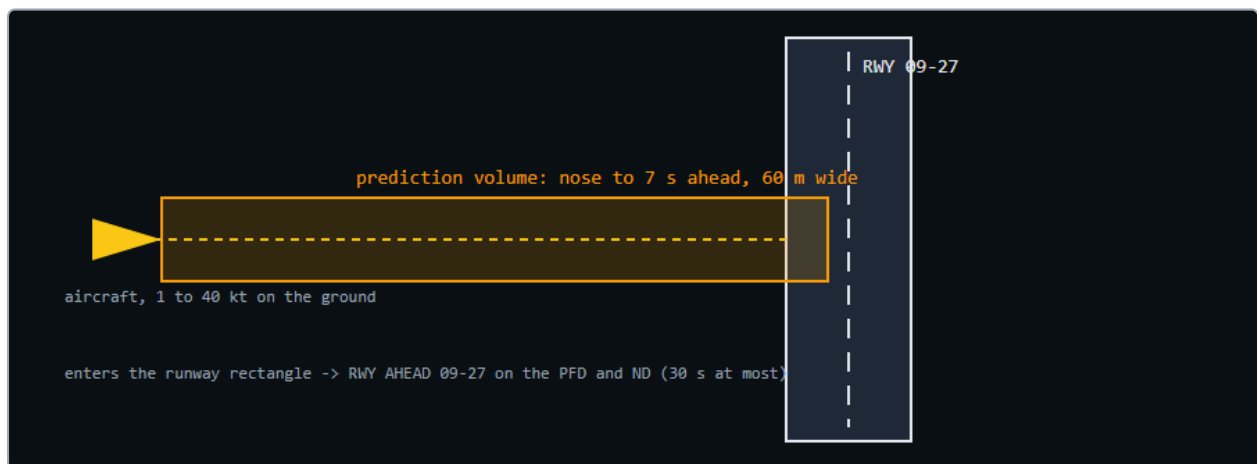


Figure 1. The prediction volume: from the nose to 7 seconds ahead at the current ground speed, 60 m wide. When it reaches a runway, RWY AHEAD appears for that runway.

Diagram drawn for this manual: not representative of the in-game UI, reference for the explanation only.

- On the ground, from 1 to 40 kt.
- The advisory stays at most 30 s, and goes when the aircraft is on the runway.
- With an airport map loaded, nothing changes: the map is used as before.

3. What it looks like

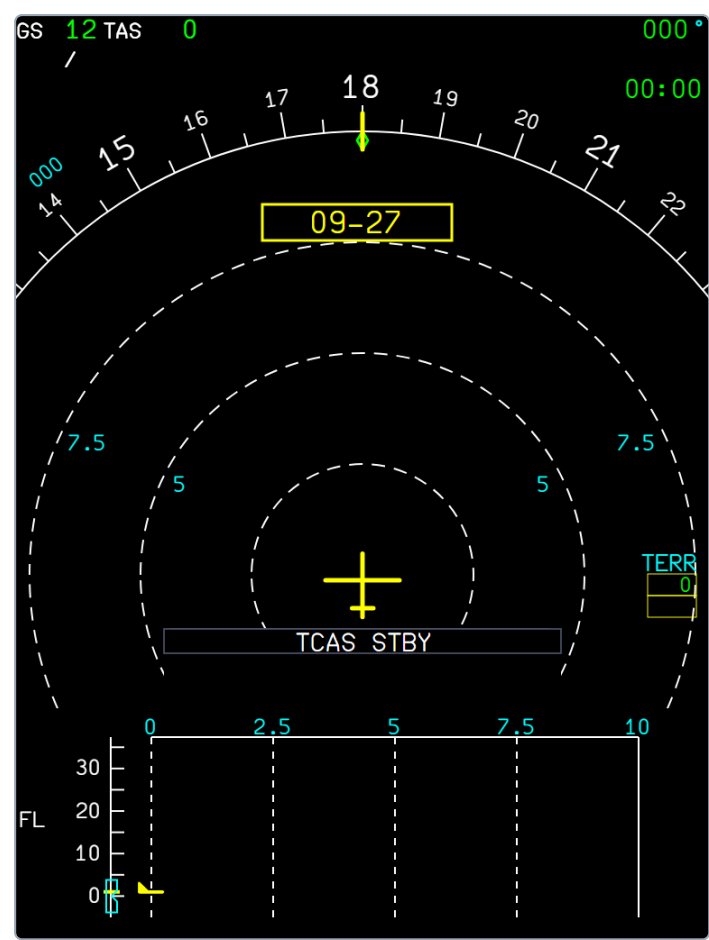


Figure 2. The ND advisory: the runway name in a yellow box at the top (here 09-27, when the aircraft taxis south towards runway 09/27). The PFD shows RWY AHEAD too.

4. What to expect

Situation	What you should see
Taxiing towards a runway, no Navigraph map	RWY AHEAD with the runway name, up to 30 s.
Taxiing towards a runway, with the Navigraph map	RWY AHEAD from the map (as before).
Stopped, or above 40 kt	No advisory.
On the runway	The advisory goes.

5. Limitations and why

Limitation	Why	What to do
Runway rectangles only.	The sim database gives each runway as a rectangle (threshold, length, width); displaced thresholds and runway shapes of the airport map are not known.	-
Waits for PR 18.	It shares the runway module of the RAAS PR.	-